

HawkEye BSCAN Display
for
HSRL Operations

Mike Dixon

**Earth Observing Laboratory
National Center for Atmospheric Research
Boulder, Colorado**

2017/11/21

1 Introduction

The HawkEye Qt-based application is the principle BSCAN-type display for HSRL during operations.

The display operates principally in real-time mode, in which the data is progressively painted to the screen as time progresses.

There is also an archive mode which allows the user to look back at previously stored data.

2 Main window

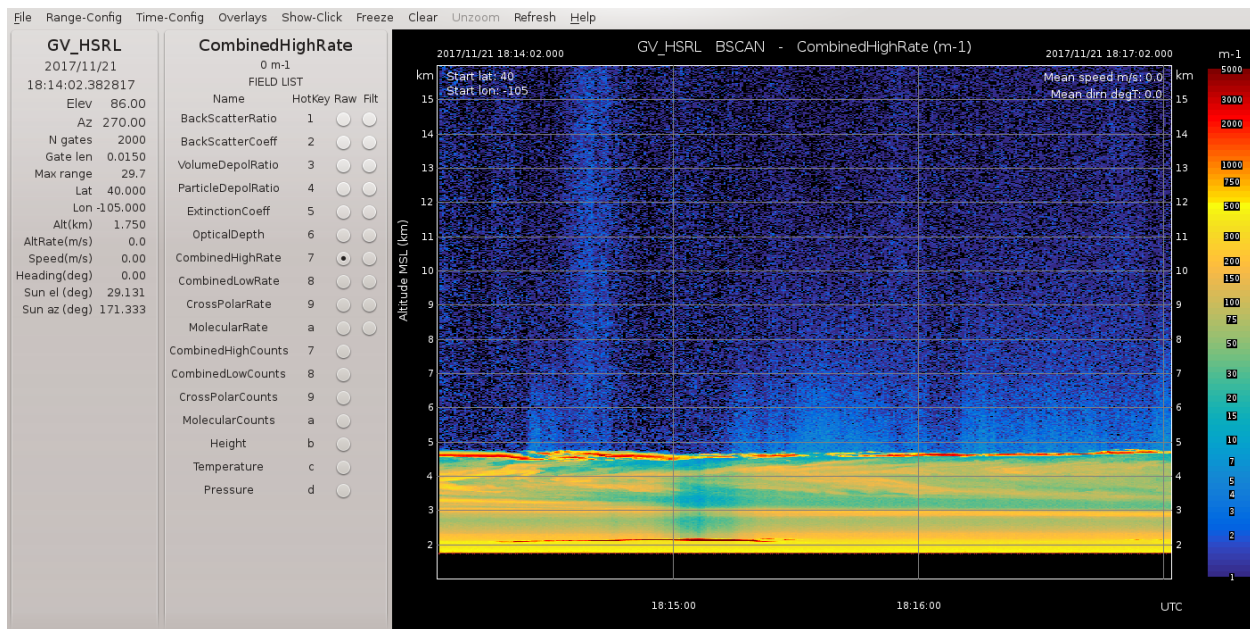


Figure 1. HawkEye main window

Figure 1 shows the main HawkEye window. It comprises the following:

- A menu bar at the top of the frame.
- A time and location panel at the left.
- The field menu between the time/location panel and the main plot window.
- The main plot window to the right.

3 Main menu bar




Figure 2. Main menu in top bar

Table 1 below describes the functions in the main menu bar:

Label	Description
File	(a) Save Image: save the current image to the location listed in the parameter file. (b) Exit: terminate the application.
Range-Config	Launch the range configuration panel (see section 6).
Time-Config	Launch the time configuration panel (see section 7).
Overlays	Allows you to select/deselect each overlay, as follows: <ul style="list-style-type: none"> • Range grid: regular grid in the range dimension. • Time grid: regular grid in the time dimension. • Instrument ht line: the line showing the height of the instrument at each time. • Starting lat/lon legend: the legend at the top left of the plot window, showing the starting location in latitude/longitude. • Mean speed/track legend: the legend at the top right of the plot window, showing the mean aircraft speed and direction for the time of the plot. • Distance scale: if selected a secondary distance scale will appear below the plot along with the time.
Show Click	Launch the panel which shows the data at the click point (see section 8).
Freeze/Unfreeze	Freeze or Unfreeze the display. After you click Freeze , the menu label will change to Unfreeze .
Clear	Clear the main plot window.
Unzoom	Return to the full unzoomed state.
Refresh	Re-request the data, and replot.
Help	Provide help.

Table1: Main menu bar entries

4 The time and location panel, and Field List menu

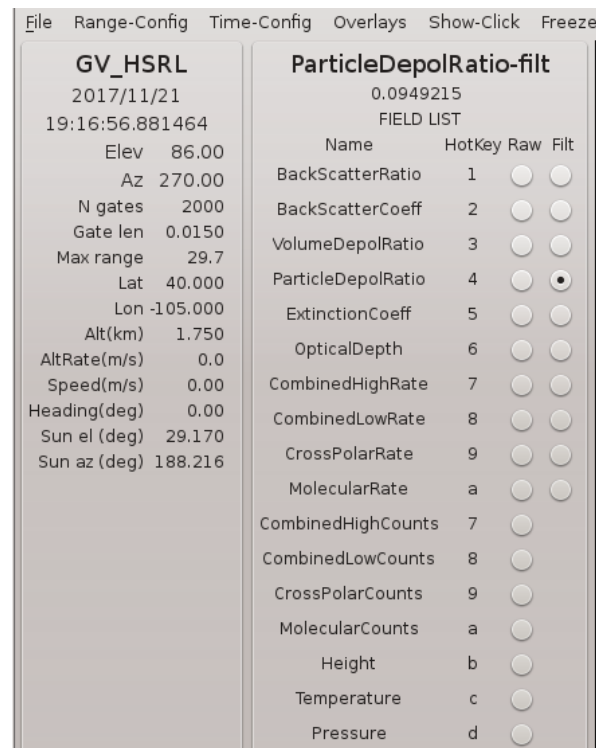


Figure 3. Information panel and FIELD LIST Menu

4.1 Time and location panel

The left-most panel displays the time, location and pointing details, as well information on the aircraft motion and sun location.

This is a passive panel – there are no input options.

4.2 Field selection panel

The **FIELD LIST** menu allows you to select the field to be displayed.

The **Raw** fields show unfiltered data.

The **Filt** fields show the same fields, but with some filtering applied to reduce the presence of noise.

After you have picked a field, you can navigate around the field menu using the arrow keys.

You can also use the **HotKey** list to select a field using the indicated key stroke.

If you click on a data pixel in the main window, the data value at the click point will appear just below the field name and above the FIELD LIST label.

5 Main plot window

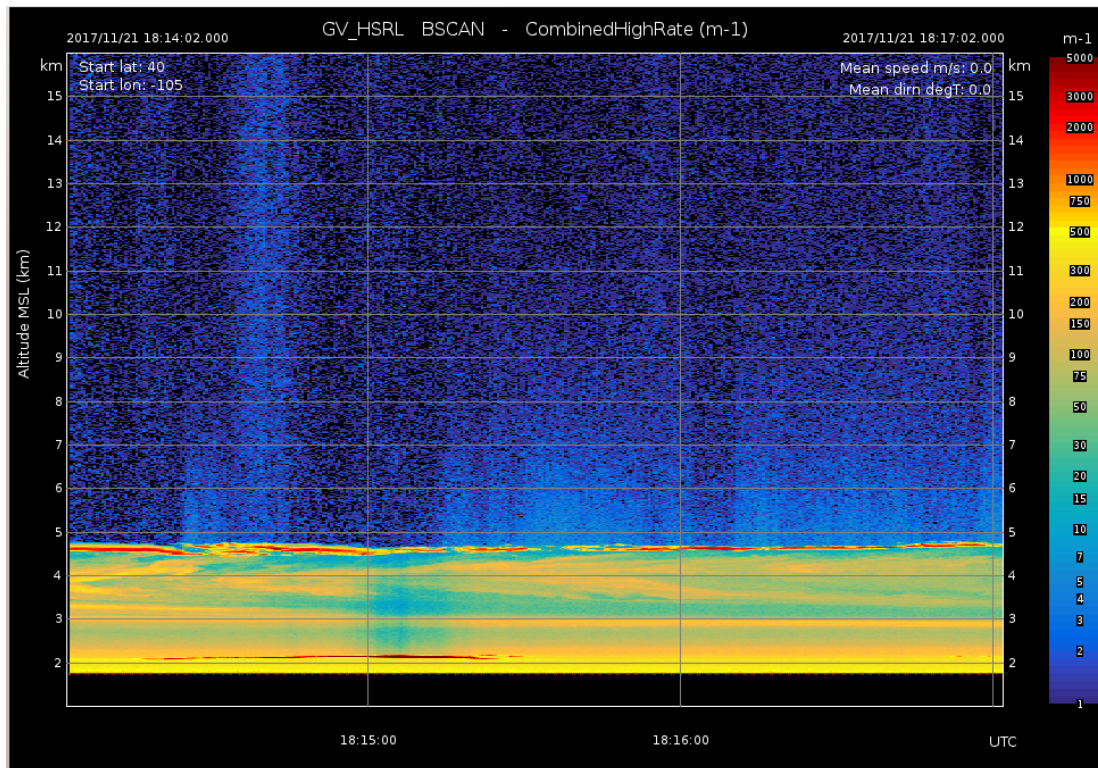


Figure 4. Main plot window

The main plot window shows the current data field.

The horizontal axis shows time (and optionally distance). The vertical axis shows height MSL, or range from the instrument.

The color scale appears at the right.


The location, speed and direction information appears in legends at the top left and top right.

In real-time mode the plotted data scrolls across the window and shifts back along the time axis when the plot is full.

The following actions apply to the plot window:

- **zooming**: you zoom by dragging a rectangle with the left mouse button. You can repeat the zoom action on a zoomed window.
- **Unzoom**: use the button in the main menu at the top.
- **viewing data values**: click on any data point. The value will appear above the Field List menu, in the field menu panel. Also, if you select the Show-Click option in the menu panel, the values of all of the fields will appear in the Click Point Data panel (see section 8 below).
- **moving in time**: in archive mode, click in the data area and then use the left and right arrow keys to navigate back and forward in time.

6 Range configuration panel

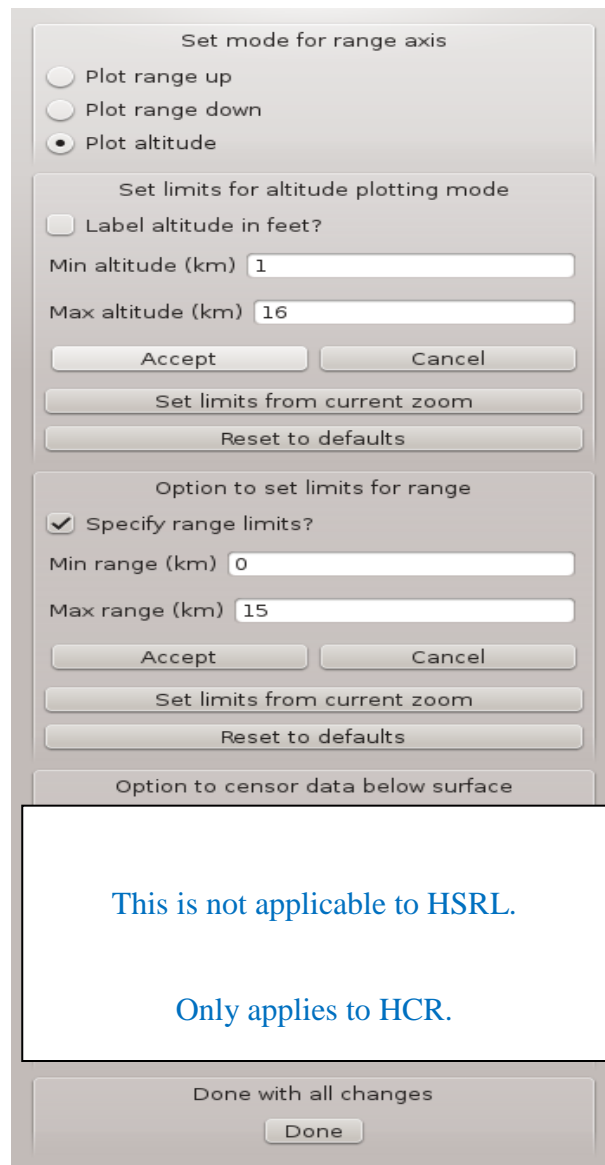

The Range configuration panel is a dialog box with a light gray background. It contains several sections with labels and controls:

- Set mode for range axis:** Three radio buttons: "Plot range up", "Plot range down", and "Plot altitude". "Plot altitude" is selected.
- Set limits for altitude plotting mode:** A checkbox "Label altitude in feet?" is unchecked. Below are two text input fields: "Min altitude (km)" with value "1" and "Max altitude (km)" with value "16". Below these are three buttons: "Accept", "Cancel", and "Set limits from current zoom". A "Reset to defaults" button is at the bottom of this section.
- Option to set limits for range:** A checkbox "Specify range limits?" is checked. Below are two text input fields: "Min range (km)" with value "0" and "Max range (km)" with value "15". Below these are three buttons: "Accept", "Cancel", and "Set limits from current zoom". A "Reset to defaults" button is at the bottom of this section.
- Option to censor data below surface:** A label with no visible controls.
- Message box:** A white box with a black border containing the text "This is not applicable to HSRL." and "Only applies to HCR." in blue.
- Done with all changes:** A "Done" button at the bottom.

Figure 5. Range configuration panel

The Range configuration panel will pop up if you click the **Range-Config** menu button in the top bar.

6.1 Range modes

- **Plot range up:** plot range away from the instrument, with range increasing upwards
- **Plot range down:** plot range away from instrument, with range increasing downwards
- **Plot altitude:** plot altitude of data, with altitude increasing upwards

6.2 Set limits for altitude plotting mode

- set **Min altitude** and **Max altitude** to be displayed, then hit **Accept**.
- to set the min and max from the currently displayed window, hit **Set limits from current zoom**.
- you can also **Reset to the defaults** – the original settings.
- you can check **Label altitude in feet** to use feet instead of km for the labels.

6.3 Set limits for range plotting mode

- set **Min range** and **Max range** to be displayed, then hit **Accept**.
- to set the min and max from the currently displayed window, hit **Set limits from current zoom**.
- you can also **Reset to the defaults** – the original settings.


6.4 Censor the data below the surface (not applicable to HSRL)

- you can censor the data below the surface, in altitude mode.
- this option applies to HCR, not HSRL.
- the range to the surface is determined by examining the data in a specified field.

7 Time configuration panel

The time configuration panel pops up when you hit the **Time-Config** button in the top menu.

7.1 Realtime mode

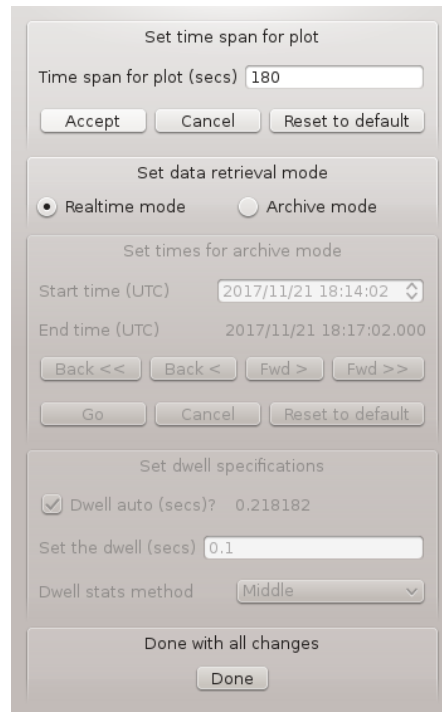

The screenshot shows a multi-section configuration window. The top section, 'Set time span for plot', has a text input for 'Time span for plot (secs)' with the value '180' and buttons for 'Accept', 'Cancel', and 'Reset to default'. The middle section, 'Set data retrieval mode', features two radio buttons: 'Realtime mode' (which is selected) and 'Archive mode'. Below this is a sub-section 'Set times for archive mode' with 'Start time (UTC)' set to '2017/11/21 18:14:02' and 'End time (UTC)' set to '2017/11/21 18:17:02.000'. It includes navigation buttons ('Back <<', 'Back <', 'Fwd >', 'Fwd >>') and 'Go', 'Cancel', and 'Reset to default' buttons. The bottom section, 'Set dwell specifications', has a checked checkbox for 'Dwell auto (secs)?' with a value of '0.218182', a text input for 'Set the dwell (secs)' with the value '0.1', and a dropdown menu for 'Dwell stats method' currently set to 'Middle'. At the very bottom is a 'Done with all changes' button labeled 'Done'.

Figure 6. Time configuration menu in realtime mode

In **Realtime mode**, the data scrolls across the main window as time passes. You can select the width of the plot, in seconds, using **Time span for plot**.

7.2 Archive mode

Figure 7. Time configuration menu in archive mode

To change to archive mode, select **Archive mode** in the **Set data retrieval mode** section of the panel.

Then set the desired start time, in UTC, and then hit **Go**.

To change the **Start time**, hover over any of the digits and use the mouse wheel to increase or decrease the value. You can also select the text for each item (year, month etc.) by dragging or double-clicking, and then type in the desired value.

The **End time** will follow the **Start time**, lagged by the **Time span for plot**.

Remember to click **Go** to activate the new time.

The **Back<** and **Fwd>** buttons move the time back and forward by a single plot width. You can click these any number of times to navigate to the desired time. Then hit **Go**.

The **Back<<** and **Fwd>>** buttons move back and forward by 5 times the **Time span for plot**.

Once in **Archive mode**, if you click in the main window, you can then use the left and right arrow keys to move back or forward by one plot width in time.

The **Set dwell specifications** menu allows you to specify the dwell width – i.e. the time period associated with each ray. The **Dwell auto** function computes this from the width of the plot in

seconds, and the number of pixels across the plot. You can override this manually by unclicking the **Dwell auto** check box.

The **Dwell stats method** allows you to choose the method for combining multiple dwells into a single dwell as appropriate. The options are **Mean**, **Median**, **Maximum**, **Minimum** and **Middle**. The quickest response will be Middle, which simply selects the center dwell in the target dwell time period.

8 Show click option

If you select **Show-Click** in the top menu bar, the **CLICK POINT DATA** panel will appear.

CLICK POINT DATA		
Date	2017/11/21	
Time	19:12:04.381	
Elevation	86.00 (deg)	
Azimuth	270.00 (deg)	
Gate num	39	
Range	0.30 (km)	
Altitude	2.05 (km)	
FIELD VALUES		
Name	Raw	Filt
BackScatterRatic	1.33253	1.33253
BackScatterCoef	4.31574e-09	4.31574e-09
VolumeDepolRat	0.024235	0.024235
ParticleDepolRati	0.0949215	0.0949215
ExtinctionCoeff	0.00309346	0.00309346
OpticalDepth	1.04263	1.04263
CombinedHighRa	274.96	274.96
CombinedLowRa	6.95498	6.95498
CrossPolarRate	213.35	213.35
MolecularRate	6446.56	6446.56
CombinedHighCo	390.50	
CombinedLowCo	7	
CrossPolarCount	11.00	
MolecularCounts	283.50	
Height	2038.05	
Temperature	274.90	
Pressure	791.21	

Figure 8. Click Point Data Panel

When you click on a data point in the main plot window, this panel displays the values for all of the fields for that location.