

NetX Duo™

Dynamic Host Configuration Protocol over IPv6 (DHCPv6 Server)

User Guide

Renesas Synergy™ Platform

All information contained in these materials, including products and product specifications, represents information on the product at the time of publication and is subject to change by Renesas Electronics Corp. without notice. Please review the latest information published by Renesas Electronics Corp. through various means, including the Renesas Electronics Corp. website (<http://www.renesas.com>).

Notice

1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation or any other use of the circuits, software, and information in the design of your product or system. Renesas Electronics disclaims any and all liability for any losses and damages incurred by you or third parties arising from the use of these circuits, software, or information.
2. Renesas Electronics hereby expressly disclaims any warranties against and liability for infringement or any other claims involving patents, copyrights, or other intellectual property rights of third parties, by or arising from the use of Renesas Electronics products or technical information described in this document, including but not limited to, the product data, drawings, charts, programs, algorithms, and application examples.
3. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
4. You shall not alter, modify, copy, or reverse engineer any Renesas Electronics product, whether in whole or in part. Renesas Electronics disclaims any and all liability for any losses or damages incurred by you or third parties arising from such alteration, modification, copying or reverse engineering.
5. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The intended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below.

"Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; industrial robots; etc.

"High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control (traffic lights); large-scale communication equipment; key financial terminal systems; safety control equipment; etc.

Unless expressly designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not intended or authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems; surgical implantations; etc.), or may cause serious property damage (space system; undersea repeaters; nuclear power control systems; aircraft control systems; key plant systems; military equipment; etc.). Renesas Electronics disclaims any and all liability for any damages or losses incurred by you or any third parties arising from the use of any Renesas Electronics product that is inconsistent with any Renesas Electronics data sheet, user's manual or other Renesas Electronics document.
6. When using Renesas Electronics products, refer to the latest product information (data sheets, user's manuals, application notes, "General Notes for Handling and Using Semiconductor Devices" in the reliability handbook, etc.), and ensure that usage conditions are within the ranges specified by Renesas Electronics with respect to maximum ratings, operating power supply voltage range, heat dissipation characteristics, installation, etc. Renesas Electronics disclaims any and all liability for any malfunctions, failure or accident arising out of the use of Renesas Electronics products outside of such specified ranges.
7. Although Renesas Electronics endeavors to improve the quality and reliability of Renesas Electronics products, semiconductor products have specific characteristics, such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Unless designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not subject to radiation resistance design. You are responsible for implementing safety measures to guard against the possibility of bodily injury, injury or damage caused by fire, and/or danger to the public in the event of a failure or malfunction of Renesas Electronics products, such as safety design for hardware and software, including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult and impractical, you are responsible for evaluating the safety of the final products or systems manufactured by you.
8. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. You are responsible for carefully and sufficiently investigating applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive, and using Renesas Electronics products in compliance with all these applicable laws and regulations. Renesas Electronics disclaims any and all liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
9. Renesas Electronics products and technologies shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You shall comply with any applicable export control laws and regulations promulgated and administered by the governments of any countries asserting jurisdiction over the parties or transactions.
10. It is the responsibility of the buyer or distributor of Renesas Electronics products, or any other party who distributes, disposes of, or otherwise sells or transfers the product to a third party, to notify such third party in advance of the contents and conditions set forth in this document.
11. This document shall not be reprinted, reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products.

(Note 1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its directly or indirectly controlled subsidiaries.

(Note 2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

Renesas Synergy Specific Information

If you are using NetX Duo DHCPv6 Server for the Renesas Synergy platform, please use the following information.

Installation

Page 14: If you are using Renesas Synergy SSP and the e2 studio ISDE, the DHCPv6 Server will already be installed. You can ignore the Installation and Use of the DHCPv6 Server section.

Product Distribution

Page 14: The distribution of DHCPv6 Server included with the Renesas Synergy SSP installation does not include the file **demo_netxduo_dhcpv6.c**. Please ignore references to this file.



Dynamic Host Configuration Protocol over IPv6 (DHCPv6 Server)

User Guide

Express Logic, Inc.

858.613.6640
Toll Free 888.THREADX
FAX 858.521.4259

www.expresslogic.com

©2002-2018 by Express Logic, Inc.

All rights reserved. This document and the associated NetX Duo software are the sole property of Express Logic, Inc. Each contains proprietary information of Express Logic, Inc. Reproduction or duplication by any means of any portion of this document without the prior written consent of Express Logic, Inc. is expressly forbidden.

Express Logic, Inc. reserves the right to make changes to the specifications described herein at any time and without notice in order to improve design or reliability of NetX. The information in this document has been carefully checked for accuracy; however, Express Logic, Inc. makes no warranty pertaining to the correctness of this document.

Trademarks

NetX, Piconet, and UDP Fast Path are trademarks of Express Logic, Inc. ThreadX is a registered trademark of Express Logic, Inc.

All other product and company names are trademarks or registered trademarks of their respective holders.

Warranty Limitations

Express Logic, Inc. makes no warranty of any kind that the NetX Duo products will meet the USER's requirements, or will operate in the manner specified by the USER, or that the operation of the NetX Duo products will operate uninterrupted or error free, or that any defects that may exist in the NetX Duo products will be corrected after the warranty period. Express Logic, Inc. makes no warranties of any kind, either expressed or implied, including but not limited to the implied warranties of merchantability and fitness for a particular purpose, with respect to the NetX Duo products. No oral or written information or advice given by Express Logic, Inc., its dealers, distributors, agents, or employees shall create any other warranty or in any way increase the scope of this warranty, and licensee may not rely on any such information or advice.

Part Number: 000-1050

Revision 5.11

Contents

Chapter 1 Introduction to the NetX Duo DHCPv6Server	4
DHCPv6 Communication	4
DHCPv6 Message Validation	6
NetX Duo DHCPv6 Server Requirements and Constraints.....	8
NetX Duo DHCPv6 Server Callback Functions	12
Supported DHCPv6 RFCs	13
Chapter 2 Installation and Use of the NetX Duo DHCPv6 Server	14
Product Distribution.....	14
NetX Duo DHCPv6 Server Installation.....	14
Using NetX Duo DHCPv6 Server	14
Small Example System	15
Chapter 3 NetX Duo DHCPv6 Server Configuration Options	24
Chapter 4 NetX Duo DHCPv6 Server Services.....	29
nx_dhcpv6_create_dns_address.....	30
nx_dhcpv6_create_ip_address_range	31
nx_dhcpv6_reserve_ip_address_range	32
nx_dhcpv6_server_create	33
nx_dhcpv6_server_delete	34
nx_dhcpv6_server_resume	35
nx_dhcpv6_server_suspend	36
nx_dhcpv6_server_start	37
nx_dhcpv6_retrieve_ip_address_lease	39
nx_dhcpv6_add_ip_address_lease.....	41
nx_dhcpv6_add_client_record.....	43
nx_dhcpv6_retrieve_client_record	45
nx_dhcpv6_server_interface_set.....	47
nx_dhcpv6_set_server_duid	49
Appendix A – DHCPv6 Option Codes	51
Appendix B - DHCPv6 Server Status Codes.....	52
Appendix C - DHCPv6 Unique Identifiers (DUIDs).....	52
Appendix D Advanced DHCPv6 Server Example	53

Chapter 1

Introduction to the NetX Duo DHCPv6Server

In IPv6 networks, DHCPv6 is required for Clients to obtain IPv6 addresses. It does not replace DHCP which is limited to IPv4 in that it does not offer IPv4 addresses. DHCPv6 has similar features to DHCP as well as many enhancements. A Client who does not or cannot use IPv6 stateless address auto-configuration can use DHCPv6 to be assigned a unique global IPv6 address from a DHCPv6 Server.

NetX Duo was developed by Expresslogic to support IPv6 network based applications and network protocols such as DHCPv6. This document will explain in detail how the NetX Duo DHCPv6 Server assigns IPv6 addresses to DHCPv6 Clients.

DHCPv6 Communication

DHCPv6 Message structure

Message content is basically a message header followed by one or more (usually more) option blocks. Below is the basic structure where each block represents one byte:

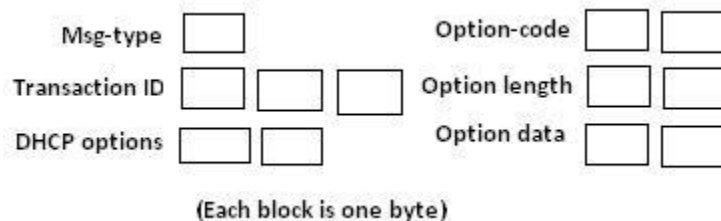


Figure 1. DHCPv6 message and option block structure

The 1-byte Msg-Type field indicates the type of DHCPv6 message. The 3-byte Transaction-ID field is set by the Client. It can be any sequence of characters but must be unique for each Client message to the Server (conserved across duplicate messages sent by the Client). The Server uses that Transaction-ID for each response to the Client to enable the Client to match up Server messages in the event of packets that are delayed or dropped on the network. Following the Transaction-ID field, are one or more DHCPv6 options used to indicate what the Client is requesting.

The DHCPv6 option structure is composed of an option code, an option length field, which does not include the length or code fields, and finally the option data itself which is one or more 2 byte option code fields for the data the Client is requesting.

Some option blocks have nested options. For example, an *Identity Association for Non Temporary Address (IANA)* option contains one or more *Identity Association (IA)* options to request IPv6 addresses. The *IANA* option returned in the Server Reply message contains the same *IA* option(s) with the IPv6 address and lease times granted by the Server, as well as a *Status* option indicating if there is an error with the Client address request.

A list of all option blocks and their description is provided in **Appendix A**.

DHCPv6 Message Types

Although DHCPv6 greatly enhances the functionality of DHCP, it uses the same number of messages as DHCP and supports the same vendor options as DHCP. The list of DHCPv6 messages are as follows:

SOLICIT	(1)	(sent by Client)
ADVERTISE	(2)	(sent by Server)
REQUEST	(3)	(sent by Client)
REPLY	(7)	(sent by Server)
CONFIRM	(4)	(sent by Client)
RENEW	(5)	(sent by Client)
REBIND	(6)	(sent by Client)
RELEASE	(8)	(sent by Client)
DECLINE	(9)	(sent by Client)
INFORM_REQUEST	(11)	(sent by Client)
RECONFIGURE*	(10)	(sent by Server)

*RECONFIGURE is not supported by the NetX Duo DHCPv6 Server.

The basic DHCPv6 request sequence, with the equivalent DHCPv4 message type in parenthesis, is as follows:

Client **Solicit** (*Discovery*) → Server **Advertisement** (*Offer*) → Client **Request** (*Request*) → Server **Reply** (*DHCPAck*)

Client **Renew**(same) → Server **Reply** (*DHCPAck*)

DHCPv6 Message Validation

Transaction ID: The Client must generate a transaction ID for each message it sends to the Server. The DHCPv6 Server will reject any message from the Client not matching this transaction ID. The Server in turn must use the same transaction ID in its responses back to the Client.

DHCPv6 unique Identifiers (DUIDs)

All Server messages must also include a DHCPv6 unique Identifier (DUID) in each message or the DHCPv6 Client should not accept the message. A Link Layer (LL) DUID is a control block containing client MAC address, hardware type, and DUID type. A Link Layer Time (LLT) DUID additionally contains a time field which decreases the chances the DUID will not be unique on the host network. For that reason RFC 3315 recommends LLT DUIDs over LL DUIDs. If the host application does not create its own unique time value, NetX Duo DHCPv6 will provide a default one. The third type of DUID is the Enterprise (Vendor assigned) DUID which contains a registered Enterprise ID (as in registered with IANA) and private data that is variable in type and length e.g. based on memory size, operating system type or other hardware configuration. See the list of Configuration Options elsewhere in this document for setting up the Server vendor assigned and private ID values.

The Client must also include its DUID in its messages to the Server except for `INFORM_REQUEST`, or the Server will reject them.

DHCPv6 Client Server Sessions

DHCPv6 Clients and Servers exchange messages over UDP. The Client uses port 546 to send and receive DHCPv6 messages and the Server uses port 547. The Client initially uses its link-local address for transmitting and receiving DHCPv6 messages. It sends all messages to DHCPv6 servers using a reserved, link-scoped multicast address known as the *All_DHCP_Relay_Agents_and_Servers* multicast address (`FF02::01:02`).

For IPv6 address assignment requests, the DHCPv6 Server listens for *Solicit* messages sent to the *All_DHCP_Relay_Agents_and_Servers* address. In the *Solicit* request, the Client can request the assignment of specific IPv6 address or let the Server choose one. It can also request other network configuration information from the Server.

If the DHCPv6 Server extracts a valid *Solicit* message and can assign an IPv6 address to the Client, it responds with an *Advertise* message containing the IPv6 address it will grant to the Client, the IPv6 address lease time and any additional information requested by the Client. If the Client accepts the Server offer it responds with a *Request* message letting the Server know it will accept the IPv6

address. The Server confirms the Client is bound to the IPv6 address with a *Reply* message.

If the Client DHCPv6 message is invalid, the Server will discard the message silently. If the Server is unable to grant the request it will send a *Reply* message with an indication of the problem in the status field of the IP address IANA option. If duplicate Client requests are received the Server resends its previous DHCPv6 response, assuming the Client simply did not receive the packet.

It is up to the Client to verify that its assigned IPv6 address from the Server is not assigned to another host on the system by using various IPv6 protocols such as Duplicate Address Detection. If the address is not unique, the Client will send the Server a *Decline* message. The Server updates its IP lease table with this information, recording that the address is already assigned. Meanwhile the Client must restart the DHCPv6 request process with another *Solicit* message.

In addition to an IPv6 address, a Client will likely also need to know the DNS server and possibly other network information such as the network domain name. DHCPv6 provides the means to request this information using either the use of Option Requests in the *Solicit* and *Request* messages, or separately in *Information Request* messages. DHCPv6 options are explained later in this chapter.

IPv6 Lease Duration

When the Server grants an IPv6 address to a Client, it also assigns the lease duration (lifetime) in the IANA option for when it recommends the Client to start renewing (T1) or rebinding (T2) its IPv6 address using *Renew* and *Rebind* messages. The difference between the two is the Client directs the *Renew* message to the Server by including the Server DUID in the *Renew* request. However, it does not specify any server, and hence does not include a Server DUID, in the *Rebind* message to the *All_DHCP_Relay_Agents_and_Servers* address. The IA option which contains the actual IPv6 address the Server grants the Client also contains the preferred and valid lifetimes when the leased IPv6 address becomes deprecated or obsolete (invalid), respectively.

The NetX Duo DHCPv6 Server maintains a session timeout for each Client to track the time between Client messages. This is necessary in the event of a Client host losing connectivity or the network doing down. When the session timeout expires, it is assumed the Client is either no longer interested or able to make DHCPv6 requests of the Server. The Server deletes the Client record and returns any tentatively assigned IPv6 address back to the available pool. The session timeout wait is a user configurable option.

If the Client wishes to release its IPv6 address, or discovers that the IPv6 address assigned to it by the DHCPv6 Server is already in use, it send a *Release* or *Decline* message respectively. In the case of a *Release* message, the Server returns that IPv6 address status back to the available pool. In the case of the

Decline message, it updates its IP lease table to indicate this IPv6 address is not available (owned by another entity elsewhere on the network).

IPv6 Lease and Client Record Data

When the DHCPv6 Server starts accepting Client requests it maintains a list of active Clients who are requesting or have been assigned IPv6 addresses. The Server checks for IP lease expiration by means of a lease timer that periodically updates the Client lease duration. When the duration exceeds the valid lifetime, the Server clears the Client record and returns its IPv6 address back to the available pool. It is up to the Client to start the renewal/rebinding process before this happens!

The NetX Duo DHCPv6 Server client record table contains information to identify Clients, and 'state' information for validating DHCPv6 Client requests and assigning or re-assigning IPv6 addresses. Such information includes:

- The Client DHCPv6 Unique Identifier (DUID) which uniquely defines each Client host on a network. The Client must always use this same DUID for all its DHCPv6 messages.
- The Client Identity Association for Non Temporary Addresses (IANA) and Identity Association IPv6 address (IA) cumulatively which define the Client IPv6 address assignment parameters.
- Client option requests (DNS server, domain name, etc).
- The Client IPv6 source address (if set) and destination address (if not multicast) of its most recent DHCPv6 request.
- The Client's most recent message type and DHCPv6 'state'.

NetX Duo DHCPv6 Server Requirements and Constraints

The NetX Duo DHCPv6 Server API requires ThreadX 5.1 or later, and NetX Duo 5.5 or later.

Requirements

IP Thread Task Setup

The NetX Duo DHCPv6 Server requires a creation of an IP instance for sending and receiving messages to DHCPv6 on its network link. This is done using the *nx_ip_create* service. The NetX Duo DHCPv6 Server itself must be created. This is done using the *nx_dhcpv6_server_create* service.

DHCPv6 utilizes NetX Duo, ICMPv6 and UDP. Therefore IPv6 must first be enabled prior to using DHCPv6 Server by calling the following NetX Duo services:

- *nx_udp_enable*
- *nxd_ipv6_enable*
- *nxd_icmp_enable*

Further, before the DHCPv6 Server can be started, it has a number of set up tasks to perform:

- Create and validate its link local and IPv6 global addresses. Address validation is performed automatically by NetX Duo using Duplicate Address Detection if it is enabled. See the *NetX Duo User Manual* for details on link local and global IP address validation.
- Set the network interface index for its DHCPv6 interface.
- Create an IP address range for assignable IPv6 addresses. Or, if data exists from a previous Server DHCPv6 session, IPv6 lease table and client records from that session must be uploaded from non volatile memory to the DHCPv6 Server. The small example system elsewhere in this document will demonstrate the DHCPv6 Server services for accomplishing this requirement.
- Set the Server DUID. If the Server has created its DUID in a previous session it must use the same data to create the same DUID for messages to its Clients. The small example system elsewhere in this document will demonstrate how this requirement is accomplished.

At this point the DHCPv6 Server is ready to run. Internally the NetX Duo DHCPv6 Server will create a UDP socket bound to port 547, and starts listening for Client requests.

Packet Pool Requirements

NetX Duo DHCPv6 Server requires a packet pool for sending DHCPv6 messages. The size of the packet pool in terms of packet payload and number of packets available is user configurable, and depends on the anticipated volume of DHCPv6 messages and other transmissions the host application will be sending.

A typical DHCPv6 message is about 200-300 bytes depending on the number of additional options requested by the Client, and information available from the Server.

Setting the DHCPv6 Server interface

The DHCPv6 Server defaults to the primary network interface as the interface it will accept Client requests on. However, the host application must still set the global address index which it used to create the Server global address. The DHCPv6 interface index and global address index are set using the *nx_dhcpv6_server_interface_set* service. This is also demonstrated in the “small example” in this document.

Saving DHCPv6 DUID across Server Reboots

The DHCPv6 protocol requires the Server to use the same DUID across multiple reboots. Any data used to create the DUID must therefore be stored and retrieved from nonvolatile memory for this requirement. For hosts that use the Link Layer Plus Time DUID which requires access to a real time clock. The NetX Duo DHCPv6 host application should include real time data access for generating a time value for the initial Server DUID creation, and store that data for reuse on subsequent Server sessions. The *nx_dhcpv6_set_server_duid* then takes DUID data as its arguments, as well as configuration options depending on DUID type, to produce (or reproduce) its own DUID.

Assignable IPv6 Address List Creation

After creation of the DHCPv6 Server, the Server host application must create a range of assignable IPv6 global addresses if there is no previously stored IP address list data. This is done using the *nx_dhcpv6_create_ip_address_ranges* service which takes as input a starting and ending IPv6 address.

Saving DHCPv6 Assignable Address and Client data

The DHCPv6 protocol requires that the DHCPv6 Server save its Client and IPv6 address data in nonvolatile storage in the event of rebooting the server. The NetX Duo DHCPv6 Server has several API for uploading and downloading Client and IPv6 address data to and from the DHCPv6 Server, respectively:

```
nx_dhcpv6_add_client_record
nx_dhcpv6_add_ip_address_lease
nx_dhcpv6_retrieve_client_record
nx_dhcpv6_retrieve_ip_address_lease
```

Uploading data to the Server must be done before restarting the Server. Downloading the data should be done only after the DHCPv6 Server is stopped

(or suspended). The services for doing so are described in detail later in this document. However, the NetX Duo DHCPv6 provides does not define an access to nonvolatile storage. This must be handled by the host application. The small example demonstrates how the host application does this.

Server DHCP Unique Identifier (DUID)

The Server DUID uniquely defines the DHCPv6 Server host on the network. If a Server has not previously created its DUID, it can use the `nx_dhcpv6_server_set_duid` to create one. As per RFC 3315, the DHCPv6 Server must save this DUID to nonvolatile memory to be able to retrieve it after Server reboots. The DHCPv6 Server supports the Link Layer, Link Layer Time and Enterprise (Vendor assigned) DUID types. Note that the Client must send in the Vendor type DUID directly. The option for Vendor type DUIDs (17) is not directly supported by the NetX Duo DHCPv6 Server.

The DHCPv6 Server host application has default values for IPv6 address assignment including lease timeout. See Configurable Options later in this document for how to set these options. :

The *IANA* control block contains the T1 and T2 fields. The *IA* block in the *IANA* control block contains the preferred and valid lifetime fields. The host application has configurable options defined elsewhere in this document for setting these options. They are assigned to all Client IPv6 address requests.

These DHCPv6 IP lease parameters are defined below.

T1 – time in seconds when the Client must start renewing its IPv6 address from the Server that assigned it.

T2 – time in seconds when the Client must start rebinding the IPv6 address, if renewal failed, with any Server on its link.

Preferred lifetime – time in seconds when the Client address becomes deprecated if the Client has not renewed or rebound it. The Client can still use this address.

Valid lifetime – time in seconds when the Client IP address is expired and MUST not use this address in its network transmissions.

The RFC recommends T1 and T2 times that are 0.5 and 0.8, respectively, of the preferred lifetime in the Client *IANA* option. If the Server has no preference, it should set these times to zero. If a Server reply contains T1 and T2 times set to zero, it is letting the Client set its own T1 and T2 times.

Constraints

NetX Duo DHCPv6 Server does not support the following DHCPv6 options:

- Rapid Commit option which optimizes the DHCPv6 address request process to just the Solicit and Reply message exchange
- Reconfigure option which allows the Server can initiate changes to the Client's IP address status.
- Unicast option; all Client messages must be sent to the *All_DHCP_Relay_Agents_and_Servers* multicast address rather than to the DHCPv6 Server directly.
- Identity Association for the Temporary Addresses (IA_TA) option which is a temporary IP address granted to a Client.
- Multiple IA (IPv6 addresses) options per Client Request
- Relay host between DHCPv6 Client and Server e.g. Client and Server must be on the same network.
- IPSec and Authentication are not supported in DHCPv6 messaging. However, the IP instance may be IPSec enabled depending on the version of NetX Duo in use.
- The NetX Duo DHCPv6 Server directly supports only the DNS server option request. This may change in future releases.
- The Prefix Delegation option is not supported.
- Authentication of DHCPv6 messages although IPSec can be enabled in the underlying NetX Duo environment. Neither does the NetX Duo DHCPv6 Server support relay connections to the Clients. It is assumed all Client requests originate from hosts on the Server network.

NetX Duo DHCPv6 Server Callback Functions

nx_dhcpv6_IP_address_declined_handler

When the DHCPv6 Client sends a Decline message, the NetX Duo DHCPv6 Server marks the address as not available in its IPv6 address tables. To have the ability to customize the Server handling of this message, the *nx_dhcpv6_IP_address_declined_handler* is provided. However, this callback is not currently implemented.

nx_dhcpv6_server_option_request_handler

When the DHCPv6 Client message contains option request data, the NetX Duo DHCPv6 Server forwards each option request option code to this user callback, if defined. This gives the NetX Duo Server the capability to let the user defined callback fill in the data. However this functionality is not currently implemented.

Supported DHCPv6 RFCs

NetX Duo DHCPv6 is compliant with RFC3315, RFC3646, and related RFCs.

Chapter 2

Installation and Use of the NetX Duo DHCPv6 Server

This chapter contains a description of various issues related to installation, setup, and usage of the NetX Duo DHCPv6 Server.

Product Distribution

The NetX Duo DHCPv6 Server is shipped on a single CD-ROM compatible disk. The package includes two source files and a PDF file that contains this document, as follows:

<code>nxd_dhcpv6_server.h</code>	NetX DuoDHCPv6Server header file
<code>nxd_dhcpv6_server.c</code>	NetX DuoDHCPv6Server source file
<code>demo_netxduo_dhcpv6.c</code>	NetX Duo DHCPv6 Server demo file
<code>nxd_dhcpv6_server.pdf</code>	NetX Duo DHCPv6Server User Guide

NetX Duo DHCPv6 Server Installation

In order to use the NetX Duo DHCPv6Server API, the entire distribution mentioned previously should be copied to the same directory where NetX Duo is installed. For example, if NetX Duo is installed in the directory “*threadx\arm7\green*” then the *nxd_dhcpv6_server.h* and *nx_dhcpv6_server.c* files should be copied into this directory.

Using NetX Duo DHCPv6 Server

Using the NetX Duo DHCPv6Server API is easy. Basically, the application code must include *nx_dhcpv6-server.h* after it includes *tx_api.h* and *nx_api.h*, in order to use ThreadX and NetX Duo, respectively. The application must also include *nxd_dhcpv6_server.c* in the build process. This file must be compiled in the same manner as other application files and its object form must be linked along with the files of the application. This is all that is required to use NetX Duo DHCPv6 Server.

Note that since DHCPv6 is based on the IPv6 protocol, IPv6 must be enabled on the IP instance using *nxd_ipv6_enable*. NetX Duo UDP and ICMPv6 services are also utilized. UDP is enabled by calling *nx_udp_enable* and ICMPv6 is enabled by calling *nxd_icmp_enable* prior to starting the NetX Duo DHCPv6 Server thread task.

Small Example System

An example of how easy it is to use the NetX Duo DHCPv6 Server is described in the small example below using a DHCPv6 Client and Server running over a virtual “RAM” driver. This demo assumes a single homed host using the NetX Duo environment.

tx_application_define creates packet pool for sending DHCPv6 message, a thread and an IP instance for both the Client and Server, and enables UDP (DHCP runs over UDP), IPv6, ICMP and ICMPv6 for both Client and Server IP tasks in lines 116-157.

The DHCPv6 Server is created in line 456. It does not define the optional address decline or option request handlers. In the Server thread entry function, the Server IP is set up with a link local address services in lines 435-453.

Before starting the DHCPv6 Server, the host application creates a Server DUID in line 498 and sets the local network DNS server on line 483. It then creates a table of assignable IP addresses in lines 521. See the **Advanced Example System** in Appendix D for how to store and retrieve Server tables from memory.

Then the DHCPv6 Server is ready to start on line 530.

For details on creating and running the NetX Duo DHCPv6 Client see the *nxd_dhcpv6_client.pdf* file distributed on with the DHCPv6 Server.

```

1 /* This is a small demo of the NetX Duo DHCPv6 Client and Server for the high-performance
2    NetX Duo stack. */
3
4 #include    <stdio.h>
5 #include    "tx_api.h"
6 #include    "nx_api.h"
7 #include    "nxd_dhcpv6_client.h"
8 #include    "nxd_dhcpv6_server.h"
9
10 #ifdef FEATURE_NX_IPV6
11
12 #define      DEMO_STACK_SIZE                2048
13 #define      NX_DHCPV6_THREAD_STACK_SIZE    2048
14
15 /* Define the ThreadX and NetX object control blocks... */
16
17 NX_PACKET_POOL      pool_0;
18 TX_THREAD           thread_client;
19 NX_IP                client_ip;
20 TX_THREAD           thread_server;
21 NX_IP                server_ip;
22
23 /* Define the Client and Server instances. */
24
25 NX_DHCPV6            dhcp_client;
26 NX_DHCPV6_SERVER     dhcp_server;
27
28 /* Define the error counter used in the demo application... */
29 ULONG               error_counter;
30 CHAR                 *pointer;
31
32 NXD_ADDRESS          server_address;

```

```

33 NXD_ADDRESS      dns_ipv6_address;
34 NXD_ADDRESS      start_ipv6_address;
35 NXD_ADDRESS      end_ipv6_address;
36
37
38 /* Define thread prototypes. */
39
40 void    thread_client_entry(ULONG thread_input);
41 void    thread_server_entry(ULONG thread_input);
42
43 /***** Substitute your ethernet driver entry function here *****/
44 VOID    _nx_ram_network_driver(NX_IP_DRIVER *driver_req_ptr);
45
46
47 /* Define some DHCPv6 parameters. */
48
49 #define DHCPV6_IANA_ID            0xC0DEDBAD
50 #define DHCPV6_T1                NX_DHCPV6_INFINITE_LEASE
51 #define DHCPV6_T2                NX_DHCPV6_INFINITE_LEASE
52 #define NX_DHCPV6_REFERRED_LIFETIME NX_DHCPV6_INFINITE_LEASE
53 #define NX_DHCPV6_VALID_LIFETIME  NX_DHCPV6_INFINITE_LEASE
54
55
56 /* Define main entry point. */
57
58 int main()
59 {
60
61     /* Enter the ThreadX kernel. */
62     tx_kernel_enter();
63 }
64
65
66 /* Define what the initial system looks like. */
67
68 void    tx_application_define(void *first_unused_memory)
69 {
70
71     UINT    status;
72
73     /* Setup the working pointer. */
74     pointer = (CHAR *) first_unused_memory;
75
76     /* Initialize the NetX system. */
77     nx_system_initialize();
78
79     /* Create a packet pool. */
80     status = nx_packet_pool_create(&pool_0, "NetX Main Packet Pool", 1024, pointer,
NX_DHCPV6_PACKET_POOL_SIZE);
81     pointer = pointer + NX_DHCPV6_PACKET_POOL_SIZE;
82
83     /* Check for pool creation error. */
84     if (status)
85         error_counter++;
86
87     /* Create a Client IP instance. */
88     status = nx_ip_create(&client_ip, "Client IP", IP_ADDRESS(0, 0, 0, 0),
89                          0xFFFFFFFFUL, &pool_0, _nx_ram_network_driver,
90                          pointer, 2048, 1);
91
92     pointer = pointer + 2048;
93
94     /* Check for IP create errors. */
95     if (status)
96     {
97         error_counter++;
98         return;
99     }
100
101     /* Create a Server IP instance. */
102     status = nx_ip_create(&server_ip, "Server IP", IP_ADDRESS(1, 2, 3, 4),
103                          0xFFFFFFFFUL, &pool_0, _nx_ram_network_driver,

```

```

104             pointer, 2048, 1);
105
106     pointer = pointer + 2048;
107
108     /* Check for IP create errors. */
109     if (status)
110     {
111         error_counter++;
112         return;
113     }
114
115     /* Enable UDP traffic for sending DHCPv6 messages. */
116     status = nx_udp_enable(&client_ip);
117     status += nx_udp_enable(&server_ip);
118
119     /* Check for UDP enable errors. */
120     if (status)
121     {
122         error_counter++;
123         return;
124     }
125
126     /* Enable ICMP. */
127     status = nx_icmp_enable(&client_ip);
128     status += nx_icmp_enable(&server_ip);
129
130     /* Check for ICMP enable errors. */
131     if (status)
132     {
133         error_counter++;
134         return;
135     }
136
137     /* Enable the IPv6 services. */
138     status = nxd_ipv6_enable(&client_ip);
139     status += nxd_ipv6_enable(&server_ip);
140
141     /* Check for IPv6 enable errors. */
142     if (status)
143     {
144         error_counter++;
145         return;
146     }
147
148     /* Enable the ICMPv6 services. */
149     status = nxd_icmp_enable(&client_ip);
150     status += nxd_icmp_enable(&server_ip);
151
152     /* Check for ICMP enable errors. */
153     if (status)
154     {
155         error_counter++;
156         return;
157     }
158
159     /* Create the Client thread. */
160     status = tx_thread_create(&thread_client, "Client thread", thread_client_entry, 0,
161                             pointer, DEMO_STACK_SIZE,
162                             8, 8, TX_NO_TIME_SLICE, TX_AUTO_START);
163     /* Check for IP create errors. */
164     if (status)
165     {
166         error_counter++;
167         return;
168     }
169
170     pointer = pointer + DEMO_STACK_SIZE;
171
172     /* Create the Server thread. */
173     status = tx_thread_create(&thread_server, "Server thread", thread_server_entry, 0,
174                             pointer, DEMO_STACK_SIZE,
175                             4, 4, TX_NO_TIME_SLICE, TX_AUTO_START);

```

```

176  /* Check for IP create errors. */
177  if (status)
178  {
179      error_counter++;
180      return;
181  }
182
183  pointer = pointer + DEMO_STACK_SIZE;
184
185  /* Yield control to DHCPv6 threads and ThreadX. */
186  return;
187 }
188
189 /* Define the Client host application thread. */
190
191 void    thread_client_entry(ULONG thread_input)
192 {
193
194     UINT        status;
195
196     #ifdef GET_ONE_SPECIFIC_ADDRESS
197     NXD_ADDRESS ia_ipv6_address;
198     #endif
199
200     NXD_ADDRESS ipv6_address;
201     NXD_ADDRESS dns_address;
202     ULONG       T1, T2, preferred_lifetime, valid_lifetime;
203     UINT        address_count;
204     UINT        address_index;
205     UINT        dns_index;
206     NX_PACKET   *my_packet;
207
208
209     /* Establish the link local address for the host. The RAM driver creates
210        a virtual MAC address of 0x11223344556. */
211     status = nx_ipv6_address_set(&client_ip, 0, NX_NULL, 10, NULL);
212
213     /* Let NetX Duo and the network driver get initialized. Also give the server time to get set up.
214        */
215     tx_thread_sleep(300);
216
217     /* Create the DHCPv6 Client. */
218     status = nx_dhcpv6_client_create(&dhcp_client, &client_ip, "DHCPv6 Client", &pool_0, pointer,
219                                     NX_DHCPV6_THREAD_STACK_SIZE,
220                                     NX_NULL, NX_NULL);
221
222     /* Check for errors. */
223     if (status)
224     {
225         error_counter++;
226         return;
227     }
228
229     /* Update the stack pointer because we need it again. */
230     pointer = pointer + NX_DHCPV6_THREAD_STACK_SIZE;
231
232     /* Create a Link Layer Plus Time DUID for the DHCPv6 Client. Set time ID field
233        to NULL; the DHCPv6 Client API will supply one. */
234     status = nx_dhcpv6_create_client_duid(&dhcp_client, NX_DHCPV6_DUID_TYPE_LINK_TIME,
235                                           NX_DHCPV6_HW_TYPE_IEEE_802, 0);
236
237     if (status != NX_SUCCESS)
238     {
239         error_counter++;
240         return;
241     }
242
243     /* Create the DHCPv6 client's Identity Association (IA-NA) now.
244
245        Note that if this host had already been assigned in IPv6 lease, it
246        would have to use the assigned T1 and T2 values in loading the DHCPv6

```

```

246     client with an IANA block.
247     */
248     status = nx_dhcpv6_create_client_iana(&dhcp_client, DHCPV6_IANA_ID, DHCPV6_T1, DHCPV6_T2);
249
250     if (status != NX_SUCCESS)
251     {
252         error_counter++;
253         return;
254     }
255
256     /* Starting up the NetX DHCPv6 Client. */
257     status = nx_dhcpv6_start(&dhcp_client);
258
259     /* Check for errors. */
260     if (status != NX_SUCCESS)
261     {
262
263         return;
264     }
265
266     /* Let DHCPv6 Server start. */
267     tx_thread_sleep(500);
268
269 #ifdef GET_ONE_SPECIFIC_ADDRESS
270     /* Create an IA address option.
271
272     The client includes IA options for any IAs to which it wants the server to assign addresses.
273     */
274
275     memset(&ia_ipv6_address, 0x0, sizeof(NXD_ADDRESS));
276     ia_ipv6_address.nxd_ip_version = NX_IP_VERSION_V6 ;
277     ia_ipv6_address.nxd_ip_address.v6[0] = 0x20010db8;
278     ia_ipv6_address.nxd_ip_address.v6[1] = 0x00000f10;
279     ia_ipv6_address.nxd_ip_address.v6[2] = 0x0;
280     ia_ipv6_address.nxd_ip_address.v6[3] = 0x00000115;
281
282     status = nx_dhcpv6_create_client_ia(&dhcp_client, &ia_ipv6_address, NX_DHCPV6_REFERRED_LIFETIME,
283                                         NX_DHCPV6_VALID_LIFETIME);
284
285     if (status != NX_SUCCESS)
286     {
287         error_counter++;
288         return;
289     }
290 }
291 #endif
292
293 /* If the host also want to get the option message, set the list of desired options to enabled. */
294 nx_dhcpv6_request_option_timezone(&dhcp_client, NX_TRUE);
295 nx_dhcpv6_request_option_dns_server(&dhcp_client, NX_TRUE);
296 nx_dhcpv6_request_option_time_server(&dhcp_client, NX_TRUE);
297 nx_dhcpv6_request_option_domain_name(&dhcp_client, NX_TRUE);
298
299 /* Now, the host send the solicit message to get the IPv6 address and other options from the
DHCPv6 server. */
300 status = nx_dhcpv6_request_solicit(&dhcp_client);
301
302 /* Check status. */
303 if (status != NX_SUCCESS)
304 {
305
306     error_counter++;
307     return;
308 }
309
310 /* Waiting for get the IPv6 address and do the duplicate address detection. */
311 /*
312     Note, if the host detect another host with the same address, the DHCPv6 Client can
    automatically
313     decline the address. At time T1 for an IPv6 address, the DHCPv6 Client can automatically
    renew the address.

```

```

315         At time T2 for an IPv6 address, the DHCPv6 Client can automatically rebind the address.
316         At time valid lifetime for an IPv6 address, the DHCPv6 Client can automatically delete the
IPv6 address.
317     */
318     tx_thread_sleep(500);
319
320
321     /* Get the T1 and T2 value of IANA option. */
322     status = nx_dhcpv6_get_iana_lease_time(&dhcp_client, &T1, &T2);
323
324     /* Check status. */
325     if (status != NX_SUCCESS)
326     {
327         error_counter++;
328     }
329
330     /* Get the valid IPv6 address count which the DHCPv6 server assigned . */
331     status = nx_dhcpv6_get_valid_ip_address_count(&dhcp_client, &address_count);
332
333     /* Check status. */
334     if (status != NX_SUCCESS)
335     {
336         error_counter++;
337     }
338
339     /* Get the IPv6 address, preferred lifetime and valid lifetime according to the address index. */
340     address_index = 0;
341     status = nx_dhcpv6_get_valid_ip_address_lease_time(&dhcp_client, address_index, &ipv6_address,
&preferred_lifetime, &valid_lifetime);
342
343     /* Check status. */
344     if (status != NX_SUCCESS)
345     {
346         error_counter++;
347     }
348
349     /* Get the IPv6 address.
350        Note, This API only applies to one IA. */
351     status = nx_dhcpv6_get_IP_address(&dhcp_client, &ipv6_address);
352
353     /* Check status. */
354     if (status != NX_SUCCESS)
355     {
356         error_counter++;
357     }
358
359     /* Get IP address lease time.
360        Note, This API only applies to one IA. */
361     status = nx_dhcpv6_get_lease_time_data(&dhcp_client, &T1, &T2, &preferred_lifetime,
&valid_lifetime);
362
363     /* Check status. */
364     if (status != NX_SUCCESS)
365     {
366         error_counter++;
367     }
368
369     /* Get the DNS Server address lease time. */
370     dns_index = 0;
371     status = nx_dhcpv6_get_DNS_server_address(&dhcp_client, dns_index, &dns_address);
372
373     /* Check status. */
374     if (status != NX_SUCCESS)
375     {
376         error_counter++;
377     }
378
379     /******
380     /* Ping the DHCPv6 Server, Test the IPv6 address. */
381     /******
382
383     /* Ping an unknown IP address. This will timeout after 100 ticks. */

```

```

384     status = nxd_icmp_ping(&client_ip, &server_address, "ABCDEFGHIJKLMNOPQRSTUVWXYZ", 28, &my_packet,
385 100);
386
387     /* Determine if the timeout error occurred. */
388     if ((status != NX_SUCCESS) || (my_packet == NX_NULL))
389     {
390         error_counter++;
391     }
392
393     /* If we want to release the address, we can send release message to
394     the server we are releasing the assigned address. */
395     status = nx_dhcpv6_request_release(&dhcp_client);
396
397     /* Check status. */
398     if (status != NX_SUCCESS)
399     {
400         error_counter++;
401         return;
402     }
403
404     /* Stopping the Client task. */
405     status = nx_dhcpv6_stop(&dhcp_client);
406
407     /* Check status. */
408     if (status != NX_SUCCESS)
409     {
410         error_counter++;
411         return;
412     }
413
414     /* Now delete the DHCPv6 client and release ThreadX and NetX resources back to
415     the system. */
416     nx_dhcpv6_client_delete(&dhcp_client);
417
418     return;
419 }
420
421 }
422
423 /* Define the test server thread. */
424 void thread_server_entry(ULONG thread_input)
425 {
426
427     UINT status;
428     ULONG duid_time;
429     UINT addresses_added;
430
431
432     /* Wait till the IP task thread has had a chance to set the device MAC address. */
433     tx_thread_sleep(100);
434
435     memset(&server_address, 0x0, sizeof(NXD_ADDRESS));
436
437     server_address.nxd_ip_version = NX_IP_VERSION_V6 ;
438     server_address.nxd_ip_address.v6[0] = 0x20010db8;
439     server_address.nxd_ip_address.v6[1] = 0xf101;
440     server_address.nxd_ip_address.v6[2] = 0x00000000;
441     server_address.nxd_ip_address.v6[3] = 0x00000101;
442
443     /* Set the link local and global addresses. */
444     status = nxd_ipv6_address_set(&server_ip, 0, NX_NULL, 10, NULL);
445     status += nxd_ipv6_address_set(&server_ip, 0, &server_address, 64, NULL);
446
447     /* Check for errors. */
448     if (status != NX_SUCCESS)
449     {
450         error_counter++;
451         return;
452     }
453 }
454

```



```

455     /* Create the DHCPv6 Server. */
456     status = nx_dhcpv6_server_create(&dhcp_server, &server_ip, "DHCPv6 Server", &pool_0, pointer,
NX_DHCPV6_SERVER_THREAD_STACK_SIZE, NX_NULL, NX_NULL);
457
458     /* Check for errors. */
459     if (status != NX_SUCCESS)
460     {
461         error_counter++;
462     }
463
464     /* Update the stack pointer in case we need it again. */
465     pointer = pointer + NX_DHCPV6_SERVER_THREAD_STACK_SIZE;
466
467     /* Note this example assumes a single global IP address on the primary interface. If otherwise
468        the host should call the service to set the network interface and global IP address index.
469
470        UINT nx_dhcpv6_server_interface_set(NX_DHCPV6_SERVER *dhcpv6_server_ptr, UINT interface_index,
UINT address_index)
471        */
472
473     /* Validate the link local and global addresses. */
474     tx_thread_sleep(500);
475
476     /* Set up the DNS IPv6 server address. */
477     dns_ipv6_address.nxd_ip_version = NX_IP_VERSION_V6 ;
478     dns_ipv6_address.nxd_ip_address.v6[0] = 0x20010db8;
479     dns_ipv6_address.nxd_ip_address.v6[1] = 0x0000f101;
480     dns_ipv6_address.nxd_ip_address.v6[2] = 0x00000000;
481     dns_ipv6_address.nxd_ip_address.v6[3] = 0x00000107;
482
483     status = nx_dhcpv6_create_dns_address(&dhcp_server, &dns_ipv6_address);
484
485     /* Check for errors. */
486     if (status != NX_SUCCESS)
487     {
488
489         error_counter++;
490         return;
491     }
492
493     /* Note: For DUID types that do not require time, the 'duid_time' input can be left at zero.
494        The DUID_TYPE and HW_TYPE are configurable options that are user defined in nx_dhcpv6_server.h.
495        */
496
497     /* Set the DUID time as the start of the millenium. */
498     duid_time = SECONDS_SINCE_JAN_1_2000_MOD_32;
499     status = nx_dhcpv6_set_server_duid(&dhcp_server,
NX_DHCPV6_SERVER_DUID_TYPE, NX_DHCPV6_SERVER_HW_TYPE,
dhcp_server.nx_dhcpv6_ip_ptr -> nx_ip_arp_physical_address_msw,
dhcp_server.nx_dhcpv6_ip_ptr -> nx_ip_arp_physical_address_lsw,
duid_time);
500
501     if (status != NX_SUCCESS)
502     {
503         error_counter++ ;
504         return;
505     }
506
507     start_ipv6_address.nxd_ip_version = NX_IP_VERSION_V6 ;
508     start_ipv6_address.nxd_ip_address.v6[0] = 0x20010db8;
509     start_ipv6_address.nxd_ip_address.v6[1] = 0x00000f101;
510     start_ipv6_address.nxd_ip_address.v6[2] = 0x0;
511     start_ipv6_address.nxd_ip_address.v6[3] = 0x00000110;
512
513     end_ipv6_address.nxd_ip_version = NX_IP_VERSION_V6 ;
514     end_ipv6_address.nxd_ip_address.v6[0] = 0x20010db8;
515     end_ipv6_address.nxd_ip_address.v6[1] = 0x00000f101;
516     end_ipv6_address.nxd_ip_address.v6[2] = 0x00000000;
517     end_ipv6_address.nxd_ip_address.v6[3] = 0x00000120;
518
519     status = nx_dhcpv6_create_ip_address_range(&dhcp_server, &start_ipv6_address, &end_ipv6_address,
&addresses_added);
520
521
522

```

```
523     if (status != NX_SUCCESS)
524     {
525         error_counter++ ;
526         return;
527     }
528
529     /* Start the NetX DHCPv6 server! */
530     status = nx_dhcpv6_server_start(&dhcp_server);
531
532     /* Check for errors. */
533     if (status != NX_SUCCESS)
534     {
535         error_counter++;
536     }
537
538     return;
539 }
540 #endif /* FEATURE_NX_IPV6 */
```

Figure 6. Example of the NetX Duo DHCPv6 Server

Chapter 3 NetX Duo DHCPv6 Server Configuration Options

There are several configuration options for building a NetX Duo DHCPv6 Server application. The following list describes each in detail:

Define	Meaning
NX_DISABLE_ERROR_CHECKING	This option removes DHCPv6 error checking. It typically enabled when the application is debugged.
NX_DHCPV6_SERVER_THREAD_STACK_SIZE	This defines the size of the DHCPv6 thread stack. By default, the size is 4096 bytes which is more than enough for most NetX Duo applications.
NX_DHCPV6_SERVER_THREAD_PRIORITY	This defines the DHCPv6Server thread priority. This should be lower than the DHCPv6 Server's IP thread task priority. The default value is 2.
NX_DHCPV6_IP_LEASE_TIMER_INTERVAL	Timer interval in seconds when the lease timer entry function is called by the ThreadX scheduler. The entry function sets a flag for the DHCPv6 Server to increment all Clients' accrued time on their lease by the timer interval. By default, this value is 60.
NX_DHCPV6_SESSION_TIMER_INTERVAL	Timer interval in seconds when the session timer entry function is called by the ThreadX scheduler. The entry function sets a flag for the DHCPv6 Server to increment all active Client session time accrued by the timer interval. By default, this value is 3.

The following defines apply to the status option message type and the user configurable message. The status option indicates the outcome of a Client request:

NX_DHCPV6_STATUS_MESSAGE_SUCCESS

"IA OPTION GRANTED"

NX_DHCPV6_STATUS_MESSAGE_NO_ADDRS_AVAILABLE

"IA OPTION NOT GRANTED-NO ADDRESSES AVAILABLE"

NX_DHCPV6_STATUS_MESSAGE_NO_BINDING

"IA OPTION NOT GRANTED-INVALID CLIENT REQUEST"

NX_DHCPV6_STATUS_MESSAGE_NOT_ON_LINK

"IA OPTION NOT GRANTED-CLIENT NOT ON LINK"

NX_DHCPV6_STATUS_MESSAGE_USE_MULTICAST

"IA OPTION NOT GRANTED-CLIENT MUST USE MULTICAST"

NX_DHCPV6_STATUS_MESSAGE_NO_ADDRS_AVAILABLE

IA OPTION NOT GRANTED-NO ADDRESSES AVAILABLE

NX_DHCPV6_SERVER_DUID_VENDOR_ASSIGNED_ID

Create a Server DUID with a vendor assigned ID. Note the DUID type must be set

NX_DHCPV6_DUID_TYPE_VENDOR_ASSIGNED.

NX_DHCPV6_SERVER_DUID_VENDOR_ASSIGNED_LENGTH

Sets the upper limit on the Vendor assigned ID. The default value is 48.

NX_DHCPV6_SERVER_DUID_VENDOR_PRIVATE_ID

Sets the enterprise type of the DUID to private vendor type.

NX_DHCPV6_PACKET_WAIT_OPTION

This defines the wait option for the Server *nx_udp_socket_receive* call. This is perfunctory since the socket has a receive notify callback from NetX Duo, so the packet is already enqueued when the DHCPv6 server calls the receive function. The default value is 1 second (1 * NX_IP_PERIODIC_RATE).

NX_DHCPV6_SERVER_DUID_TYPE	This defines the Server DUID type which the Server includes in all messages to Clients. The default value is link layer plus time (NX_DHCPV6_SERVER_DUID_TYPE_LINK_TIME).
NX_DHCPV6_SERVER_HW_TYPE	This defines the hardware type in the DUID link layer and link layer plus time options. The default value is NX_DHCPV6_SERVER_HARDWARE_TYPE_ETHERNET.
NX_DHCPV6_PREFERENCE_VALUE	This defines the preference option value between 0 and 255, where the higher the value the higher the preference, in the DHCPv6 option of the same name. This tells the Client what preference to place on this Server's offer where multiple DHCPv6 Servers are available to assign IP addresses. A value of 255 instructs the Client to choose this server. A value of zero indicates the Client is free to choose. The default value is zero.
NX_DHCPV6_MAX_OPTION_REQUEST_OPTIONS	This defines the maximum number of option requests in a Client request that can be saved to a Client record. The default value is 6.
NX_DHCPV6_DEFAULT_T1_TIME	The time in seconds assigned by the Server on a Client address lease for when the Client should begin renewing its IP address. The default value is 2000 seconds.
NX_DHCPV6_DEFAULT_T2_TIME	The time in seconds assigned by the Server on a Client address lease for when the Client should begin rebinding its IP address assuming its attempt to renew failed. The default value is 3000 seconds.

NX_DHCPV6_DEFAULT_PREFERRED_TIME

This defines the time in seconds assigned by the Server for when an assigned Client IP address lease is deprecated. The default value is

$2 * NX_DHCPV6_DEFAULT_T1_TIME$.

NX_DHCPV6_DEFAULT_VALID_TIME

This defines the time expiration in seconds assigned by the Server on an assigned Client IP address lease. After this time expires, the Client IP address is invalid. The default value is 2

$* NX_DHCPV6_DEFAULT_PREFERRED_TIME$.

NX_DHCPV6_STATUS_MESSAGE_MAX

Defines the maximum size of the Server message in status option message field. The default value is 100 bytes.

NX_DHCPV6_MAX_LEASES

Defines the size of the Server's IP lease table (e.g. the max number of IPv6 address available to lease that can be stored). By default, this value is 100.

NX_DHCPV6_MAX_CLIENTS

Defines the size of the Server's Client record table (e.g. max number of Clients that can be stored). This value should be less than or equal to the value `NX_DHCPV6_MAX_LEASES`. By default, this value is 120.

NX_DHCPV6_PACKET_TIME_OUT

Defines the wait option in timer ticks for the DHCPv6 Server wait on packet allocations. The default value is $3 * NX_DHCPV6_SERVER_TICKS_PER_SECOND$.

NX_DHCPV6_PACKET_RECEIVE_WAIT

Defines the wait option in packet allocate calls on the Server packet pool. The default value is $(3 * NX_DHCPV6_SERVER_TICKS_PER_SECOND)$.

NX_DHCPV6_SERVER_TICKS_PER_SECOND) ,
or 3 seconds.

NX_DHCPV6_PACKET_SIZE

This defines the packet payload of the Server packet pool packets. The default value is 500 bytes.

NX_DHCPV6_PACKET_POOL_SIZE

Defines the Server packet pool size for packets the Server will allocate to send DHCPv6 messages out. The default value is (10 * NX_DHCPV6_PACKET_SIZE).

NX_DHCPV6_TYPE_OF_SERVICE

This defines the type of service for UDP packet transmission. By default, this value is NX_IP_NORMAL.

NX_DHCPV6_FRAGMENT_OPTION

This defines the Server socket fragmentation option. The default value is NX_DON'T_FRAGMENT

NX_DHCPV6_TIME_TO_LIVE

Specifies the number of routers DHCPv6 packets from the Server may 'hop' pass before packets are discarded. The default value is set to 0x80.

NX_DHCPV6_QUEUE_DEPTH

Specifies the number of packets to keep in the Server UDP socket receive queue before NetX Duo discards packets.

Chapter 4 NetX Duo DHCPv6 Server Services

This chapter contains a description of all NetX Duo DHCPv6Server services (listed below).

In the “Return Values” section in the following API descriptions, values in **BOLD** are not affected by the **NX_DISABLE_ERROR_CHECKING** define that is used to disable API error checking, while non-bold values are completely disabled.

```

nx_dhcpv6_server_create
    Create a DHCPv6serverinstance
nx_dhcpv6_server_delete
    Delete a DHCPv6serverinstance
nx_dhcpv6_server_start
    Start the DHCPv6 server task
nx_dhcpv6_server_suspend
    Suspend the DHCPv6 server task
nx_dhcpv6_server_resume
    Resume DHCPv6 client processing
nx_dhcpv6_server_suspend
    Suspend DHCPv6 client processing
nx_dhcpv6_create_dns_address
    Set the DNS server for option requests
nx_dhcpv6_create_ip_address_range
    Create the range of IP addresses to lease
nx_dhcpv6_reserve_ip_address_range
    Reserve range of IP addresses in server list
nx_dhcpv6_set_server_duid
    Set the Server DUID for DHCPv6 packets
nx_dhcpv6_add_ip_address_lease
    Add a lease record to the DHCPv6 server table
Nx_dhcpv6_retrieve_ip_address_lease
    Retrieve an IP lease record from the Server table
nx_dhcpv6_add_client_record
    Add a DHCPv6 Client record to the Server table
nx_dhcpv6_retrieve_client_record
    Retrieve a client record from the Server table
nx_dhcpv6_server_interface_set
    Set the interface index for Server DHCPv6 services

```


nx_dhcpv6_create_dns_address

Set the network DNS server

Prototype

```
UINT nx_dhcpv6_create_dns_address(
    NX_DHCPV6_SERVER *dhcpv6_server_ptr,
    NXD_ADDRESS *dns_ipv6_address);
```

Description

This service loads the DHCPv6 Server with the DNS server address for the Server DHCPv6 network interface.

Input Parameters

dhcpv6_server_ptr Pointer to DHCPv6 Server
dns_ipv6_address Pointer to the DNS server

Return Values

NX_SUCCESS	(0x00)	DNS Serversaved to DHCPv6 Server instance
NX_DHCPV6_INVALID_INTERFACE_IP_ADDRESS	(0xE95)	An invalid address is supplied
NX_PTR_ERROR	(0x16)	Invalid pointer input

Allowed From

Application Code

Example

```
/* Set the network DNS server with the input address for the Server DHCPv6interface. */
status = nx_dhcpv6_create__dns_address(&dhcp_server_0, &dns_ipv6_address);
/* If this service returns NX_SUCCESS the DNS server data was accepted. */
```

nx_dhcpv6_create_ip_address_range

Create the Server IP address list

Prototype

```
UINT nx_dhcpv6_create_ip_address_range(
    NX_DHCPV6_SERVER *dhcpv6_server_ptr,
    NXD_ADDRESS *start_ipv6_address, NXD_ADDRESS *end_ipv6_address,
    UINT *addresses_added)
```

Description

This service creates the IP address list specified by the start and end addresses of the Server's assignable address range. The start and end addresses must match the Server interface address prefix (must be on the same link as the Server DHCPv6 interface). The number of addresses actually added is returned.

Input Parameters

dhcpv6_server_ptr	Pointer to DHCPv6 Server
start_ipv6_address	Start of addresses to add
end_ipv6_address	End of addresses to add
*addresses_added	Output of addresses added

Return Values

NX_SUCCESS	(0x00)	IP address list successfully created
NX_DHCPV6_INVALID_INTERFACE_IP_ADDRESS	(0xE95)	An invalid address is supplied
NX_PTR_ERROR	(0x16)	Invalid pointer input

Allowed From

Application Code

Example

```
/* Create the Server IP address list for the server DHCPv6 interface. */
status = nx_dhcpv6_create_ip_address_range(&dhcp_server_0,
    &start_ipv6_address, &end_ipv6_address, &addresses_reserved);
/* If status is NX_SUCCESS one or more addresses were successfully added. */
```

nx_dhcpv6_reserve_ip_address_range

Reserve specified range of IP addresses

Prototype

```
UINT nx_dhcpv6_reserve_ip_address_range(
    NX_DHCPV6_SERVER *dhcpv6_server_ptr,
    NXD_ADDRESS *start_ipv6_address, NXD_ADDRESS *end_ipv6_address,
    UINT *addresses_reserved)
```

Description

This service reserves the IP address range specified by the start and end addresses. These addresses must be within in the previously created server IP address range. These addresses will not be assigned to any Clients by the DHCPv6 Server. The start and end addresses must match the Server interface address prefix (must be on the same link as the Server DHCPv6 network interface). The number of addresses actually reserved is returned.

Input Parameters

dhcpv6_server_ptr	Pointer to DHCPv6 Server
start_ipv6_address	Start of addresses to reserve
end_ipv6_address	End of addresses to reserve
*addresses_reserved	Number of addresses reserved

Return Values

NX_SUCCESS	(0x00)	RELEASE message successfully created and processed
NX_DHCPV6_INVALID_INTERFACE_IP_ADDRESS	(0xE95)	An invalid address is supplied
NX_DHCPV6_INVALID_IP_ADDRESS	(0xED1)	Starting address not found in Server address list.
NX_PTR_ERROR	(0x16)	Invalid pointer input

Allowed From

Application Code

Example

```
/* Reserve a range of ip addresses in the Server address table for the server DHCPv6
network interface. */
status = nx_dhcpv6_reserve_ip_address_range(&dhcp_server_0,
    &start_ipv6_address, &end_ipv6_address, &addresses_reserved);

/* If status is NX_SUCCESS one or more addresses were successfully reserved. */
```

nx_dhcpv6_server_create

Create the DHCPv6 Server instance

Prototype

```
UINT nx_dhcpv6_server_create(NX_DHCPV6_SERVER *dhcpv6_server_ptr,
                             NX_IP *ip_ptr, CHAR *name_ptr,
                             NX_PACKET_POOL *packet_pool_ptr,
                             VOID *stack_ptr, ULONG stack_size,
                             VOID (*dhcpv6_address_declined_handler)(struct
                             NX_DHCPV6_SERVER_STRUCT *dhcpv6_server_ptr,
                             NX_DHCPV6_CLIENT *dhcpv6_client_ptr,
                             UINT message),
                             VOID (*dhcpv6_option_request_handler)(
                             struct NX_DHCPV6_SERVER_STRUCT *dhcpv6_server_ptr,
                             UINT option_request, UCHAR *buffer_ptr, UINT *index));
```

Description

This service creates the DHCPv6 Server task with the specified input. The callback handlers are optional input. The stack pointer, IP instance and packet pool input are required. The IP instance and packet pool must already be created.

Input Parameters

dhcpv6_server_ptr	Pointer to DHCPv6 Server
ip_ptr	Pointer to the IP instance
name_ptr	Pointer to Server name
packet_pool_ptr	Pointer to Server packet pool
stack_ptr	Pointer to Server stack memory
stack_size	Size of Server stack memory
dhcpv6_address_declined_handler	Pointer to Client Decline or Release message handler
dhcpv6_option_request_handler	Pointer to options request option handler

Return Values

NX_SUCCESS	(0x00)	Server successfully resumed
NX_PTR_ERROR	(0x16)	Invalid pointer input
NX_DHCPV6_PARAM_ERROR		Invalid non pointer input

Allowed From

Application Code

Example

```
/* Create the DHCPv6 Server. */
status = nx_dhcpv6_server_create(&dhcp_server_0, &ip_0, "DHCPv6 Server",
                                &pool_0, stack_pointer, 2048,
                                dhcpv6_decline_handler,
                                dhcpv6_get_time_handler);

/* If status is NX_SUCCESS the Server successfully created. */
```

nx_dhcpv6_server_delete

Delete the DHCPv6 Server

Prototype

```
UINT _nx_dhcpv6_server_delete(NX_DHCPV6_SERVER *dhcpv6_server_ptr)
```

Description

This service deletes the DHCPv6 Server task and any request that the Server was processing.

Input Parameters

dhcpv6_server_ptr	Pointer to DHCPv6 Server
--------------------------	--------------------------

Return Values

NX_SUCCESS	(0x00)	Server successfully deleted
NX_PTR_ERROR	(0x16)	Invalid pointer input

Allowed From

Threads

Example

```
/* Delete the DHCPv6 Serve. */
status = nx_dhcpv6_server_delete(&dhcp_server_0);
/* If status is NX_SUCCESS the Server successfully deleted. */
```

nx_dhcpv6_server_resume

Resume DHCPv6 Server task

Prototype

```
UINT _nx_dhcpv6_server_resume(NX_DHCPV6_SERVER *dhcpv6_server_ptr)
```

Description

This service resumes the DHCPv6 Server task and any request that the Server was processing.

Input Parameters

dhcpv6_server_ptr	Pointer to DHCPv6 Server
--------------------------	--------------------------

Return Values

NX_SUCCESS	(0x00)	Server successfully resumed
NX_DHCPV6_ALREADY_STARTED	(0xE91)	Server is running already
status(variable)	ThreadX and NetX Duo error status	
NX_PTR_ERROR	(0x16)	Invalid pointer input

Allowed From

Threads

Example

```
/* Resume the DHCPv6 Server task. */
status = nx_dhcpv6_server_resume(&dhcp_server_0);

/* If status is NX_SUCCESS the Server successfully resumed. */
```

nx_dhcpv6_server_suspend

Suspend DHCPv6 Server task

Prototype

```
UINT _nx_dhcpv6_server_suspend(NX_DHCPV6_SERVER *dhcpv6_server_ptr)
```

Description

This service suspends the DHCPv6 Server task and any request that the Server was processing.

Input Parameters

dhcpv6_server_ptr	Pointer to DHCPv6 Server
--------------------------	--------------------------

Return Values

NX_SUCCESS	(0x00)	Server successfully resumed
NX_DHCPV6_NOT_STARTED	(0xE92)	Server is not started
Status	(variable)	ThreadX and NetX Duo error status
NX_PTR_ERROR	(0x16)	Invalid pointer input

Allowed From

Threads

Example

```
/* Suspend the DHCPv6 Server task. */
status = nx_dhcpv6_server_suspend(&dhcp_server_0);

/* If status is NX_SUCCESS the Server successfully suspended. */
```

nx_dhcpv6_server_start

Start the DHCPv6 Server task

Prototype

```
UINT _nx_dhcpv6_server_start(NX_DHCPV6_SERVER *dhcpv6_server_ptr)
```

Description

This service starts the DHCPv6 Server task and readies the Server to process application requests for receiving DHCPv6 Client messages. It verifies the Server instance has sufficient information (Server DUID), creates and binds the UDP socket for sending and receiving DHCPv6 messages, and activates timers for keeping track of session time and IP lease expiration.

Note: Before the DHCPv6 Server can run, the host application is responsible for creating the IP address range from which the Server can assign IP addresses. It is also responsible for setting the Server DUID and DHCPv6 interface (see *nx_dhcpv6_server_duid_set* and *nx_dhcpv6_server_interface_set* respectively).

Input Parameters

dhcpv6_server_ptr Pointer to DHCPv6 Server

Return Values

NX_SUCCESS	(0x00)	Server successfully started
NX_DHCPV6_ALREADY_STARTED	(0xE91)	Server is running already
NX_DHCPV6_NO_ASSIGNABLE_ADDRESSES	(0xEA7)	Server has no assignable addresses to lease
NX_DHCPV6_INVALID_GLOBAL_INDEX	(0xE97)	Global address index not set
NX_DHCPV6_NO_SERVER_DUID	(0xE92)	No Server DUID created
status(variable)		ThreadX and NetX Duo error status
NX_PTR_ERROR	(0x16)	Invalid pointer input

Allowed From

Threads

Example

```
/* Start the DHCPv6 Server task. */
status = nx_dhcpv6_server_start(&dhcp_server_0);

/* If status is NX_SUCCESS the Server successfully started. */
```


nx_dhcpv6_retrieve_ip_address_lease

Get an IP address lease from the Server table

Prototype

```
UINT _nx_dhcpv6_retrieve_ip_address_lease(
    NX_DHCPV6_SERVER *dhcpv6_server_ptr, UINT table_index,
    NXD_ADDRESS *lease_IP_address, ULONG *T1, ULONG *T2,
    ULONG *valid_lifetime, ULONG *preferred_lifetime)
```

Description

This service retrieves an IP address lease record from the Server table at the specified table index location. This can be done before or after retrieving Client record data.

The capability of storing and retrieving data between the DHCPv6 Server and non volatile memory is a requirement of the DHCPv6 protocol. It makes no difference in what order IP lease data and Client record data is saved to nonvolatile memory.

Note: it is not recommended to copy data to or from Server tables without stopping or suspending the DHCPv6 Server first.

Input Parameters

dhcpv6_server_ptr	Pointer to DHCPv6 Server
table_index	Table index to store lease at
lease_IP_address	Pointer to IP address leased to theClient
T1	Client requested renew time
T2	Client requested rebind time
valid_lifetime	Client lease becomes deprecated
preferred_lifetime	Client lease becomes invalid

Return Values

NX_SUCCESS	(0x00)	Server successfully started
NX_DHCPV6_PARAMETER_ERROR	(0xE93)	Invalid IP lease data input
NX_PTR_ERROR	(0x16)	Invalid pointer input

Allowed From

Application code

Example

```

/* Retrieve the DHCPv6 Server lease data. */
For (I = 0; I < NX_DHCPV6_MAX_LEASES; i++)
{
    /* Get the next lease record. */
    status = nx_dhcpv6_server_startdhcpv6_server_ptr, i, &next_ipv6_address, &T1,
            &T2, &preferred_lifetime, &valid_lifetime);

    /* The host application then saves this record to memory.
}

/* If status is NX_SUCCESS the Server data is successfully downloaded. */

```

nx_dhcpv6_add_ip_address_lease

Add an IP address lease to the Server table

Prototype

```
UINT nx_dhcpv6_add_ip_address_lease(
    NX_DHCPV6_SERVER *dhcpv6_server_ptr, UINT table_index, NXD_ADDRESS
    *lease_IP_address, ULONG T1, ULONG T2,
    ULONG valid_lifetime, ULONG preferred_lifetime)
```

Description

This service loads IP lease data from a previous DHCPv6 Server session from non volatile memory to the Server lease table. This is not necessary if the Server is running for the first time and has no previous lease data. If this is the case the host application must create an IP address range for assigning IP addresses, using the *nx_dhcpv6_create_ip_address_ranges* service. The data is sufficient to reconstruct a DHCPv6 lease record. The table index need not be specified. If set to 0xFFFFFFFF (infinity) the DHCPv6 Server will find the next available slot to copy the data to.

Note: uploading IP lease data **MUST** be done before uploading Client records; both **MUST** be done before (re)starting the DHCPv6 Server.

The capability of storing and retrieving data between the DHCPv6 Server and non volatile memory is a requirement of the DHCPv6 protocol.

Input Parameters

dhcpv6_server_ptr	Pointer to DHCPv6 Server
table_index	Table index to store lease at
lease_IP_address	Pointer to IP address leased to theClient
T1	Client requested renew time
T2	Client requested rebind time
valid_lifetime	Client lease becomes deprecated
preferred_lifetime	Client lease becomes invalid

Return Values

NX_SUCCESS	(0x00)	Server successfully started
NX_DHCPV6_TABLE_FULL	(0xEC4)	No room for more lease data
NX_DHCPV6_INVALID_INTERFACE_IP_ADDRESS	(0xE95)	Lease data does not appear to be on link with Server DHCPv6 interface
NX_DHCPV6_PARAM_ERROR	(0xE93)	Invalid IP lease data input

NX_PTR_ERROR	(0x16)	Invalid pointer input
--------------	--------	-----------------------

Allowed From

Application code

Example

```
/* Copy the IP lease data to the Server address table. Note that the table index is
   defaulted to 0xFFFFFFFF meaning the DHCPv6 Server will find an empty slot for each
   lease. */
For(I = 0; I < NX_DHCPV6_MAX_LEASES; i++)
{
    status = nx_dhcpv6_add_ip_address_lease(dhcpv6_server_ptr, 0xFFFFFFFF,
        &next_ipv6_address, &T1, &T2, &preferred_lifetime, &valid_lifetime);

    /* Get the next lease address from memory... */
}

/* If status is NX_SUCCESS the lease data was successfully uploaded. It is ok
   to add the Client records to the Server table now. */
```

nx_dhcpv6_add_client_record

Add a Client record to the Server table

Prototype

```
UINT _nx_dhcpv6_add_client_record(NX_DHCPV6_SERVER *dhcpv6_server_ptr,
    UINT table_index, ULONG message_xid,
    NXD_ADDRESS *client_address, UINT client_state,
    ULONG IP_lease_time_accrued, ULONG valid_lifetime, UINT
    duid_type, UINTduid_hardware,
    ULONG physical_address_msw,
    ULONG physical_address_lsw, ULONG duid_time,
    ULONG duid_vendor_number, UCHAR *duid_vendor_private, UINT
    duid_private_length)
```

Description

This service copies Client data from non volatile memory to the Server table one record at a time. This is only necessary if the Server is being rebooted and has Client data from a previous session to restore from memory. If a Server has no previous data, the DHCPv6 Server will initialize the Client table to be able for adding Client records.

It is not necessary to specify the table index. If set to 0xFFFFFFFF (infinity) the DHCPv6 Server will locate the next available slot. The DHCPv6 Server can reconstruct a Client record from this data.

Note #1: the host application **MUST** upload the IP lease data **BEFORE** the Client record data. This is so that internally the DHCPv6 Server can cross link the tables so that each Client record is joined with its corresponding IP lease record in their respective tables. See *nx_dhcpv6_add_ip_address_lease* for details on uploading IP lease data from memory.

Note #2: depending on DUID type, not all data must be supplied. For example if a Client has a vendor assigned DUID type, it can send in zero for DUID Link Layer parameters (MAC address, hardware type, DUID time).

The capability of storing and retrieving data between the DHCPv6 Server and non volatile memory is a requirement of the DHCPv6 protocol.

Input Parameters

dhcpv6_server_ptr	Pointer to DHCPv6 Server
--------------------------	--------------------------

Return Values

NX_SUCCESS	(0x00)	Server successfully started
NX_INVALID_PARAMETERS	(0x4D)	Invalid non pointer input
NX_DHCPV6_TABLE_FULL		

(0xEC4) No empty slots left for adding another Client record

NX_DHCPV6_ADDRESS_NOT_FOUND

(0xEA8) Client assigned address not found in Server lease table.

NX_PTR_ERROR (0x16) Invalid pointer input

Allowed From

Application code

Example

```
/*Add the IP lease data and Client records back to the server before starting
theServer. */

/* Copy the 'lease data' to the server table FIRST. */
for (i = 0; i < NX_DHCPV6_MAX_LEASES; i++)
{

    /* Add the next lease record. Let the server find the next
    available slot. */
    status = nx_dhcpv6_add_ip_address_lease(dhcpv6_server_ptr,
        0xFFFFFFFF, &next_ipv6_address, NX_DHCPV6_DEFAULT_T1_TIME,
        NX_DHCPV6_DEFAULT_T2_TIME, NX_DHCPV6_DEFAULT_PREFERRED_TIME,
        NX_DHCPV6_DEFAULT_VALID_TIME);

    if (status != NX_SUCCESS)
        return status;

    /* Get the next IP lease record from memory. */
    ...
}

/* Copy the client records to the Server table NEXT.
for (i = 0; i < NX_DHCPV6_MAX_LEASES; i++)
{

    /* Add the next client record. Let the server find the next
    available slot. */
    status = nx_dhcpv6_add_client_record(dhcpv6_server_ptr, 0xFFFFFFFF,
        message_xid, &client_ipv6_address, NX_DHCPV6_STATE_BOUND,
        IP_lifetime_time_accrued, valid_lifetime, duid_type, duid_hardware,
        physical_address_msw, physical_address_lsw,
        duid_time, 0, NX_NULL, 0);

    if (status != NX_SUCCESS)
        return status;

    /* Get the next Client record from memory. */
    ...
}

/* If status is NX_SUCCESS the Server data was successfully restored and it is ok to
start the DHCPv6 server now. */
```

nx_dhcpv6_retrieve_client_record

Retrieve a Client record from the Server table

Prototype

```
UINT _nx_dhcpv6_retrieve_client_record(
    NX_DHCPV6_SERVER *dhcpv6_server_ptr,
    UINT table_index, ULONG *message_xid,
    NXD_ADDRESS *client_address, UINT *client_state,
    ULONG IP_lease_time_accrued,
    ULONG *valid_lifetime, UINT *duid_type,
    UINT *duid_hardware, ULONG *physical_address_msw,
    ULONG *physical_address_lsw, ULONG *duid_time,
    ULONG *duid_vendor_number,
    UCHAR *duid_vendor_private,
    UINT *duid_private_length)
```

Description

This service copies the essential data from the Server's Client record table for storage to non-volatile memory. The Server can reconstruct an adequate Client record from such data in the reverse process (uploading data to the Server table). Regardless of the DUID type, none of the pointers can be NULL pointers; data is initialized to zero for all parameters. For example, if the Client DUID type is Link Layer Plus Time, the vendor number is returned as zero and the private ID is an empty string.

The capability of storing and retrieving data between the DHCPv6 Server and non volatile memory is a requirement of the DHCPv6 protocol. It makes no difference in what order IP lease data and Client record data is saved to nonvolatile memory.

Note: it is not recommended to copy data to or from Server tables without stopping or suspending the DHCPv6 Server first.

Input Parameters

dhcpv6_server_ptr	Pointer to DHCPv6 Server
table_index	Index into Server's client table
message_xid	Client Server Transaction ID
client_address	IPv6 address leased to Client
client_state	Client DHCPv6 state (e.g. bound)
IP_lease_time_accrued	Time expired on lease already
dhcpv6_server_ptr	Pointer to DHCPv6 Server
dhcpv6_server_ptr	Pointer to DHCPv6 Server

Return Values

NX_SUCCESS	(0x00)	Server successfully started
NX_DHCPV6_INVALID_DUID	(0xECC)	Invalid or inconsistent DUID data

NX_PTR_ERROR	(0x16)	Invalid pointer input
NX_INVALID_PARAMETERS	(0x4D)	Invalid non pointer input

Allowed From

Application code

Example

```

/* Retrieve the Client records from the DHCPV6 Server table. */
For (i = 0; i < NX_MAX_DHCPV6_CLIENTS; i++)
{
    status = nx_dhcpv6_retrieve_client_recorddhcpr6_server_ptr, i, &message_xid,
            &client_ipv6_address, &client_state, &IP_lifetime_time_accrued,
            valid_lifetime, &duid_type, &duid_hardware, &physical_address_msw,
            &physical_address_lsw, &duid_time, &duid_vendor_number, &private_id[0],
            &length);

    /* The host application can save this data to memory now.
}

/* If status is NX_SUCCESS the Server successfully started. */

```

nx_dhcpv6_server_interface_set

Set the interface index for Server DHCPv6 interface

Prototype

```
UINT nx_dhcpv6_server_interface_set(
    NX_DHCPV6_SERVER *dhcpv6_server_ptr,
    UINT iface_index, UINT ga_address_index)
```

Description

This service sets the network interface on which the DHCPv6 Server handles DHCPv6 Client requests. Not that for versions of NetX Duo that do not support multihome, the interface value is defaulted to zero. The global address index is necessary to obtain the Server global address on its DHCPv6 interface. This is used by the DHCPv6 logic to ensure that lease addresses and other DHCPv6 data is on link with the DHCPv6 Server.

This must be called before the DHCPv6 server is started, even for applications on single homed devices or without multihome support.

Input Parameters

dhcpv6_server_ptr	Pointer to DHCPv6 Server
iface_index	Server DHCPv6 Server interface
ga_address_index	Index of Server global address in the Server IP instance address table

Return Values

NX_SUCCESS	(0x00)	Server successfully started
NX_INVALID_INTERFACE	(0x4C)	Interface does not exist
NX_NO_INTERFACE_ADDRESS	(0x50)	Global index exceeds the IP instance maximum IPv6 addresses (NX_MAX_IPV6_ADDRESSES)
NX_PTR_ERROR	(0x16)	Invalid pointer input

Allowed From

Application code

Example

```
/* Set the Server DHCPv6 interface to the primary interface. The global IP address is at
   the index 1 in the IP address table. */
status = nx_dhcpv6_server_interface_set(&dhcp_server_0, 0, 1);

/* If status is NX_SUCCESS the Server interface is successfully set. */
```


nx_dhcpv6_set_server_ duid

Set the Server DUID for DHCPv6 packets

Prototype

```
UINT _nx_dhcpv6_set_server_ duid(NX_DHCPV6_SERVER *dhcpv6_server_ptr,
                                UINT duid_type, UINT hardware_type,
                                ULONG mac_address_msw, ULONG mac_address_lsw,
                                ULONG time)
```

Description

This service sets the Server DUID and must be called before the host application starts the Server. For link layer and link layer time DUID types, the host application must supply the hardware type and MAC address data. For link layer time DUIDs, the time pointer must point to a valid time. The number of seconds since Jan 1, 2000 is a typical seed value. If the Server DUID type is the enterprise, vendor assigned type, the DUID will be created from the user configurable options NX_DHCPV6_SERVER_DUID_VENDOR_PRIVATE_ID and NX_DHCPV6_SERVER_DUID_VENDOR_ASSIGNED_ID, and the time and MAC address values can be set to NULL.

Note: It is the host application's responsibility to save the Server DUID parameters to nonvolatile memory such that it uses the same DUID in messages to Clients between reboots. This is a requirement of the DHCPv6 protocol (RFC 3315).

Input Parameters

dhcpv6_server_ptr	Pointer to DHCPv6 Server
duid_type	DHCPv6 Server DUID type
hardware_type	Hardware type (e.g. Ethernet)
mac_address_msw	Pointer to DHCPv6 Server
mac_address_lsw	Pointer to DHCPv6 Server
time	Time value for DUID

Return Values

NX_SUCCESS	(0x00)	Server successfully suspended
NX_DHCPV6_INVALID_SERVER_DUID	(0XE98)	Unknown or unsupported DUID type
NX_INVALID_PARAMETERS	(0x4D)	Invalid non pointer input
NX_PTR_ERROR	(0x16)	Invalid pointer input

Allowed From

Application code

Example

```
/* Set the DHCPv6 ServerDUID as Link layer plus time, over Ethernet hardware. */
duid_time = SECONDS_SINCE_JAN_1_2000_MOD_32 + rand();
status = nx_dhcpv6_set_server_duid(&dhcp_server_0, 1, 0x6,
                                   physical_address_msw, physical_address_lsw, duid_time);
/* If status is NX_SUCCESS the ServerDUID is successfully set. */
```

Appendix A – DHCPv6 Option Codes

<u>Option</u>	<u>Code</u>	<u>Description</u>
Client Identifier DUID	1	Uniquely identifies a Client host on the network
Server Identifier (DUID)	2	Uniquely identifies the DHCPv6Server host on the network
Identity Association for Non Temporary Addresses (IANA)	3	Parameters for a non temporary IP address assignment
Identity Association for Temporary Addresses (IATA)	4	Parameters for a temporary IP address assignment
IA Address	5	Actual IPv6 address and IPv6 address lifetimes to be assigned to the Client
Option Request	6	A list of information requests to obtain network information such as DNS server and other network configuration parameters.
Preference	7	Included in server Advertise message to client to influence the Client's choice of servers. The Client must choose a server with higher the preference value over other servers. 255 is the maximum value, while zero indicates the client can choose any server replying back to them
Elapsed Time	8	Contains the time (in 0.01 seconds) when the Client initiates the DHCPv6 exchange with the server. Used by secondary server(s) to determine if the primary server responds in time to the Client request.
Relay Message	9	Contains the original message in Relay message
Authentication	11	Contains information to authenticate the identity and content of DHCPv6 messages
Server Unicast	12	Server sends this option to let the Client know that the server will accept unicast messages directly from the Client instead of multicast.

IATA, Relay Message, Authentication and Server Unicast options are not supported in this release of NetX Duo DHCPv6 Server. The current DHCPv6 protocol option code 10 is left undefined in RFC 3315.

Appendix B - DHCPv6 Server Status Codes

Name -----	Code -----	Description -----
Success	0	Success
Unspecified Failure	1	Failure, reason unspecified; this status code is set by the Server to indicate a general failure in granting the Client request not matching the other codes
NoAddress Available	2	Server has no addresses available to assign to the Client
NoBinding	3	Client IA address (binding) is not available e.g. the requested IP address is not available for the Server to lease or assigned to another Client.
NotOnLink	4	The prefix for the address indicates the IP address is not an on link address
UseMulticast	5	Sent by a Server in response to receiving a Client message using the Server's unicast address instead of the <i>All_DHCP_Relay_Agents_and_Servers</i> multicast address

Appendix C - DHCPv6 Unique Identifiers (DUIDs)

<u>DUID Type</u>	<u>Code</u>	<u>Description</u>
DUID-LLT	1	Link layer plus time; identifier based on link layer address and time
DUID-EN	2	Enterprise; Assigned by Vendor Based on Enterprise Number
DUID-LL	3	Link layer; Based on Link-layer Address only

Appendix D Advanced DHCPv6 Server Example

This is an advanced DHCPv6 Server which demonstrates saving and retrieving the Server's IP address lease table and Client record tables from non volatile memory, as required by the RFC 3315.

In this example, the include file *nxd_dhcpv6_server.h* is brought in at line 7. Next, the NetX Duo DHCPv6 Server application thread is created at line 81 in the example code below. Note that the DHCPv6 control block "*dhcp_server_0*" was defined as a global variable at line 19 previously.

Before creating the NetX Duo DHCPv6 Server instance, the demo creates packet pool for sending DHCPv6 messages in line 84, creates an IP thread interface in line 102, and enables UDP in NetX Duo in line 116.

The successful creation of NetX Duo DHCPv6 Server in line 136 includes the the two optional callbacks function described in Chapter 1. It enables IPv6 and ICMPv6 necessary for NetX Duo to process IPv6 and DHCPv6 operations in line 162-163. Before the DHCPv6 Server thread is ready to run, the DHCPv6 server must validate its IPv6 address(167-180), and define its DHCPv6 interface in lines 208-209. The *nx_dhcpv6_set_server_duid* service is called to create the Server if no Server DUID has been previously created in line 266. The Server sets up an IP address range for creating a list of assignable addresses. If data is saved from a previous session, it retrieves Client records and IPv6 lease data from memory in lines 283-318. It also creates its Server DUID, or if one was previously created, retrieves the DUID data from user specified storage. This is necessary to reproduce a consistent Server DUID across reboots. Optionally the host application defines a DNS server for Clients requesting DNS server configuration.

Next, the host starts the DHCPv6Server in line 329. This creates the DHCPv6 Server UPD socket and activates NetX Duo DHCPv6 Server timers. Then the Server waits to receive Client requests. While it can service many Clients it can only process a single Client request at a time.

The remainder of the example contains host implementations for saving and retrieving Server tables of its assignable IPv6 address pool and Client records to and from non volatile memory respectively. It also contains an option handler for options requested by DHCPv6 Clients that are not supported directly by the NetX Duo DHCPv6 Server (only the DNS server option is currently supported). Lastly there is a code for demonstrating how to save and retrieve 'non volatile time' by which the Server keeps track of assigned IP lease expiration.

```

1  /* This is a small demo of the NetX Duo DHCPv6 Server for the high-performance
2     NetX Duo TCP/IP stack. */
3
4  #include <stdio.h>
5  #include "tx_api.h"
6  #include "nx_api.h"

```



```

7  #include "nxd_dhcpv6_server.h"
8
9
10 #define DEMO_STACK_SIZE 2048
11
12
13
14 /* Define the ThreadX and NetX Duo object control blocks... */
15
16 TX_THREAD thread_0;
17 NX_PACKET_POOL pool_0;
18 NX_IP ip_0;
19 NX_DHCPV6_SERVER dhcp_server_0;
20
21
22 /* Define the counters used in the demo application... */
23
24 ULONG thread_0_counter;
25 ULONG state_changes;
26 ULONG error_counter;
27
28 #define SERVER_PRIMARY_ADDRESS IP_ADDRESS(192,2,2,66)
29
30 /* Define thread prototypes. */
31
32 void thread_0_entry(ULONG thread_input);
33
34 /****** Substitute your ethernet driver entry function here *****/
35 void nx_etherDriver_mcf5485(struct NX_IP_DRIVER_STRUCT *driver_req);
36
37
38 /* Define some DHCPv6 parameters. */
39
40 #define DHCPV6_IANA_ID 0xC0DEDBAD
41 #define DHCPV6_T1 NX_DHCPV6_INFINITE_LEASE
42 #define DHCPV6_T2 NX_DHCPV6_INFINITE_LEASE
43
44
45 /* Declare NetX Duo DHCPv6 Server callbacks. */
46
47 VOID dhcpv6_decline_handler(struct NX_DHCPV6_SERVER_STRUCT *dhcpv6_server_ptr,
48                             NX_DHCPV6_CLIENT *dhcpv6_client_ptr, UINT message_type);
49 VOID dhcpv6_option_request_handler(NX_DHCPV6_SERVER *dhcpv6_server_ptr, UINT option_request,
50                                     UCHAR *buffer_ptr, UINT *index);
51
52 /* Declare helper functions for the DHCPv6 Server host application. */
53 VOID dhcpv6_get_time_handler(ULONG *realtime);
54 VOID dhcpv6_create_ip_address_range(NX_DHCPV6_SERVER *dhcpv6_server_ptr, UINT
55                                     *addresses_added);
56 VOID dhcpv6_restore_ip_lease_table(NX_DHCPV6_SERVER *dhcpv6_server_ptr);
57 VOID dhcpv6_restore_client_records(NX_DHCPV6_SERVER *dhcpv6_server_ptr);
58 VOID dhcpv6_retrieve_ip_address_lease(NX_DHCPV6_SERVER *dhcpv6_server_ptr);
59 VOID dhcpv6_retrieve_client_records(NX_DHCPV6_SERVER *dhcpv6_server_ptr);
60
61 /* Define main entry point. */
62
63 intmain()
64 {
65     /* Enter the ThreadX kernel. */
66     tx_kernel_enter();
67 }
68
69 /* Define what the initial system looks like. */
70
71 void tx_application_define(void *first_unused_memory)
72 {
73     CHAR *pointer;
74     UINT status;
75
76     /* Setup the working pointer. */
77     pointer = (CHAR *) first_unused_memory;
78
79     /* Create the main thread. */
80     tx_thread_create(&thread_0, "thread 0", thread_0_entry, 0,
81                     pointer, DEMO_STACK_SIZE,
82                     1, 1, TX_NO_TIME_SLICE, TX_AUTO_START);
83
84     pointer = pointer + DEMO_STACK_SIZE;
85
86     /* Initialize the NetX Duo system. */
87

```

```

88     nx_system_initialize();
89
90     /* Create a packet pool. */
91     status = nx_packet_pool_create(&pool_0, "NetX Main Packet Pool", NX_DHCPV6_PACKET_SIZE,
                                   pointer, NX_DHCPV6_PACKET_POOL_SIZE);
92     pointer = pointer + NX_DHCPV6_PACKET_POOL_SIZE;
93
94     /* Check for pool creation error. */
95     if (status != NX_SUCCESS)
96     {
97         error_counter++;
98         return;
99     }
100
101     /* Create an IP instance. */
102     status = nx_ip_create(&ip_0, "NetX IP Instance 0", SERVER_PRIMARY_ADDRESS,
103                          0xFFFFFFFFUL, &pool_0, nx_etherDriver_mcf5485,
104                          pointer, 2048, 1);
105
106     pointer = pointer + 2048;
107
108     /* Check for IP create errors. */
109     if (status != NX_SUCCESS)
110     {
111         error_counter++;
112         return;
113     }
114
115     /* Enable UDP traffic for sending DHCPv6 messages. */
116     status = nx_udp_enable(&ip_0);
117
118     /* Check for UDP enable errors. */
119     if (status != NX_SUCCESS)
120     {
121         error_counter++;
122         return;
123     }
124
125     /* Enable ICMP. */
126     status = nx_icmp_enable(&ip_0);
127
128     /* Check for ICMP enable errors. */
129     if (status != NX_SUCCESS)
130     {
131         error_counter++;
132         return;
133     }
134
135     /* Create the DHCPv6 Server. */
136     status = nx_dhcpv6_server_create(&dhcp_server_0, &ip_0, "DHCPv6 Server", &pool_0,
                                     pointer, 2048, dhcpv6_decline_handler,
                                     dhcpv6_option_request_handler);
137
138     /* Check for errors. */
139     if (status != NX_SUCCESS)
140     {
141         error_counter++;
142     }
143
144     /* Yield control to DHCPv6 threads and ThreadX. */
145     return;
146 }
147
148 /* Define the Server host application thread. */
149
150 void thread_0_entry(ULONG thread_input)
151 {
152     UINT status;
153     NXD_ADDRESS ipv6_address_primary, dns_ipv6_address;
154     ULONG duid_time;
155     UINT interface_index, ga_address_index;
156     UINT addresses_added;
157
158     /* Make the DHCPv6 Server IPv6 and ICMPv6 enabled. */
159     nxd_ipv6_enable(&ip_0);
160     nxd_icmp_enable(&ip_0);
161
162     memset(&ipv6_address_primary, 0x0, sizeof(NXD_ADDRESS));
163
164     ipv6_address_primary.nxd_ip_version = NX_IP_VERSION_V6 ;
165     ipv6_address_primary.nxd_ip_address.v6[0] = 0x20010db8;

```

```

169     ipv6_address_primary.nxd_ip_address.v6[1] = 0xf101;
170     ipv6_address_primary.nxd_ip_address.v6[2] = 0x00000000;
171     ipv6_address_primary.nxd_ip_address.v6[3] = 0x00000101;
172
173
174
175
176     /* wait till the IP task thread has had a chance to set the device MAC address. */177
178
179     tx_thread_sleep(10);
180
181
182
183
184
185     /* Set the primary interface link local address (address index 0). This
186        will use the host MAC address to build the link local address. */
187
188     nxd_ipv6_linklocal_address_set(&ip_0, NULL);
189
190
191     /* Set the single homed host global IP address. */
192
193     nxd_ipv6_global_address_set(&ip_0, &ipv6_address_primary, 64);
194
195
196     tx_thread_sleep(500);
197
198
199
200
201
202
203
204     /* Set the server interface for DHCP communications. */
205     iface_index = 0;
206     ga_address_index = 1;
207
208     /* Set the DHCPV6 server interface to the primary interface and global address index. */
209     status = nx_dhcpv6_server_interface_set(&dhcp_server_0, iface_index, ga_address_index);
210
211     /* wait for DHCP to assign the IP address. */
212     do
213     {
214
215         /* Check for address resolution. */
216         status = nx_ip_status_check(&ip_0, NX_IP_ADDRESS_RESOLVED, (ULONG *)
                                     &status, 100000);
217
218         /* Check status. */
219         if (status)
220         {
221
222             tx_thread_sleep(20);
223
224         }
225     } while (status != NX_SUCCESS);
226
227     dns_ipv6_address.nxd_ip_version = NX_IP_VERSION_V6 ;
228     dns_ipv6_address.nxd_ip_address.v6[0] = 0x20010db8;
229     dns_ipv6_address.nxd_ip_address.v6[1] = 0x0000f101;
230     dns_ipv6_address.nxd_ip_address.v6[2] = 0x00000000;
231     dns_ipv6_address.nxd_ip_address.v6[3] = 0x00000107;
232
233     status = nx_dhcpv6_create_dns_address(&dhcp_server_0, &dns_ipv6_address);
234
235     /* check for errors. */
236     if (status != NX_SUCCESS)
237     {
238
239         error_counter++;
240         return;
241     }
242
243     /* Set the server DUID before starting the DHCPV6 server. You will also need to set the
244        Server DUID if you are restoring Client data from non volatile memory.
245
246        This demo will create a server DUID of the link layer time DUID type.
247
248        Note #1: The RFC 3315 Sect 9.2 recommends link layer time DUID type over link layer
249        DUID type to minimize the chances of 'collisions' or identical DUIDs between hosts,
250        particularly clients.
251
252        Note #2: If the client or server host is rebooting, RFC 3315 Sect 9.2 requires the
253        host retrieve its previously created DUID data rather than create one from new data.
254
255        For a Link layer time DUID, retrieve a time value. If the DHCPV6 server has not
256        created a server DUID previously, this function should provide a new value; otherwise
257        this function must retrieve the time data used in the previously created server
258        DUID. For link layer and enterprise type DUIDs, the 'duid_time' data is not

```

```

259     necessary. */
260     dhcpv6_get_time_handler(&duid_time);
261
262     /* For DUID types that do not require time, the 'duid_time' input can be left at zero.
263     The DUID_TYPE and HW_TYPE are configurable options that are user defined in
264     nxd_dhcpv6_server.h. */
265
266     status = nx_dhcpv6_set_server_duid(&dhcp_server_0,
267                                       NX_DHCPV6_SERVER_DUID_TYPE, NX_DHCPV6_SERVER_HW_TYPE,
268                                       dhcp_server_0.nx_dhcpv6_ip_ptr ->
269                                       nx_ip_arp_physical_address_msw,
270                                       dhcp_server_0.nx_dhcpv6_ip_ptr ->
271                                       nx_ip_arp_physical_address_lsw,
272                                       duid_time);
273
274     if (status != NX_SUCCESS)
275     {
276         error_counter++;
277         return;
278     }
279
280     /* The next step is to set up the server IP lease and Client record tables. If no
281     previous data exists, the host application only needs to create an IP address range
282     of assignable IP addresses, and set the size of the tables, NX_DHCPV6_MAX_CLIENTS
283     and NX_DHCPV6_MAX_LEASES in nxd_dhcpv6_server.h. */
284
285     #ifndef RESTORE_SERVER_DATA
286
287     /* Create the ip address table on the primary server network interface. */
288     status = dhcpv6_create_ip_address_range(&dhcp_server_0, &addresses_added);
289
290     if (status != NX_SUCCESS)
291     {
292         error_counter++;
293         return;
294     }
295
296     #else
297
298     /* RFC 3315 requires that DHCPv6 servers be able to store and retrieve lease data to and
299     from non-volatile memory so that DHCPv6 server may remain uninterrupted across server
300     reboots. */
301     status = dhcpv6_restore_ip_lease_table(&dhcp_server_0);
302
303     if (status != NX_SUCCESS)
304     {
305         error_counter++;
306         return;
307     }
308
309     status = dhcpv6_restore_client_records(&dhcp_server_0);
310
311     if (status != NX_SUCCESS)
312     {
313         error_counter++;
314         return;
315     }
316
317     #endif /* RESTORE_SERVER_DATA */
318
319     /*Check for error. */
320     if (status != NX_SUCCESS)
321     {
322         error_counter++;
323         return;
324     }
325
326     /* Start the NetX Duo DHCPv6 server! */
327     status = nx_dhcpv6_server_start(&dhcp_server_0);
328
329     /* Check for errors. */
330     if (status != NX_SUCCESS)
331     {
332         error_counter++;
333         return;
334     }
335
336     return;
337

```

```

338 }
339
340 /* Simulate a handler with access to a real time clock and non volatile memory storage. This
    service is required for a link layer time DUID to create a time value as part of
341 the DUID. A default value is provided below. The time value serves
342 no actual function, but increases the chances of a unique host DUID.
343
344 It is the host's responsibility to save the 'time' data created for the server DUID to
    memory. The DHCPv6 server should always use a previously created its server DUID as per
345 RFC 3315 Sect. 9.2. */
346 VOID dhcpv6_get_time_handler(ULONG *realtime)
347 {
348
349
350     /* Check if the DHCPv6 server has previously created a DUID. If so
351        return this time value to the host application. */
352     /****** insert your application logic here *****/
353
354     /* Otherwise create time data. One can use a random number incremented
355        to the number of seconds since JAN 1, 2000 to
356        create a unique time value. */
357     *realtime = SECONDS_SINCE_JAN_1_2000_MOD_32;
358
359     return;
360 }
361
362 /* Create an IP address lease table based on from a range of available addresses. */
363 UINT dhcpv6_create_ip_address_range(NX_DHCPV6_SERVER *dhcpv6_server_ptr,
364                                     *UINT *addresses_added)
365 {
366
367     UINT status;
368     NXD_ADDRESS start_ipv6_address;
369     NXD_ADDRESS end_ipv6_address;
370
371     start_ipv6_address.nxd_ip_version = NX_IP_VERSION_V6 ;
372     start_ipv6_address.nxd_ip_address.v6[0] = 0x20010db8;
373     start_ipv6_address.nxd_ip_address.v6[1] = 0x00000f101;
374     start_ipv6_address.nxd_ip_address.v6[2] = 0x0;
375     start_ipv6_address.nxd_ip_address.v6[3] = 0x00000110;
376
377     end_ipv6_address.nxd_ip_version = NX_IP_VERSION_V6 ;
378     end_ipv6_address.nxd_ip_address.v6[0] = 0x20010db8;
379     end_ipv6_address.nxd_ip_address.v6[1] = 0x00000f101;
380     end_ipv6_address.nxd_ip_address.v6[2] = 0x00000000;
381     end_ipv6_address.nxd_ip_address.v6[3] = 0x00000120;
382
383     status = nx_dhcpv6_create_ip_address_range(dhcpv6_server_ptr, &start_ipv6_address,
384                                               &end_ipv6_address, addresses_added);
385
386     return status;
387 }
388
389 /* Demonstrate how to use NetX Duo DHCPv6 Server API to upload data from memory
390    to the DHCPv6 server's IP lease tables. */
391 VOID dhcpv6_restore_ip_lease_table(NX_DHCPV6_SERVER *dhcpv6_server_ptr)
392 {
393
394     NXD_ADDRESS      next_ipv6_address;
395     UINTi;
396     UINT             status;
397
398
399     /* Set the starting IP address. */
400     next_ipv6_address.nxd_ip_version = 6;
401     next_ipv6_address.nxd_ip_address.v6[0] = 0x20010db8;
402     next_ipv6_address.nxd_ip_address.v6[1] = 0x00000f101;
403     next_ipv6_address.nxd_ip_address.v6[2] = 0x0;
404     next_ipv6_address.nxd_ip_address.v6[3] = 0x00000110;
405
406
407     /* Copy the 'lease data' to the server table. */
408     for (i = 0; i < NX_DHCPV6_MAX_LEASES; i++)
409     {
410
411         /* These are assigned address leases. */
412
413         status = nx_dhcpv6_add_ip_address_lease(dhcpv6_server_ptr, i, &next_ipv6_address,
414                                                 NX_DHCPV6_DEFAULT_T1_TIME, NX_DHCPV6_DEFAULT_T2_TIME,
415                                                 X_DHCPV6_DEFAULT_PREFERRED_TIME, NX_DHCPV6_DEFAULT_VALID_TIME);
416

```

```

417         if (status != NX_SUCCESS)
418             return status;
419
420         /* Simulate the next IP address in the table. */
421         next_ipv6_address.nxd_ip_address.v6[3]++;
422     }
423     return NX_SUCCESS;
424 }
425
426 /* Demonstrate how to use NetX Duo DHCPv6 Server API to download data to local memory and
427 eventually nonvolatile memory from the DHCPv6 server's IP lease tables. This might be
428 called after the a certain duration of operation and after stopping Server task (e.g.
before rebooting or for making a backup).*/
429
430 UINT dhcpv6_retrieve_ip_address_lease(NX_DHCPV6_SERVER *dhcpv6_server_ptr)
431 {
432     NXD_ADDRESS      next_ipv6_address;
433     ULONG            T1, T2, valid_lifetime, preferred_lifetime;
434     UINTi;
435     UINT            status;
436
437
438
439
440     for (i = 0; i < NX_DHCPV6_MAX_LEASES; i++)
441     {
442         T1 = 0;
443         T2 = 0;
444         valid_lifetime = 0;
445         preferred_lifetime = 0;
446         memset(&next_ipv6_address, 0, sizeof(NXD_ADDRESS));
447
448         /* Get the next lease from the table. */
449         status = nx_dhcpv6_retrieve_ip_address_lease(dhcpv6_server_ptr, i,
450             &next_ipv6_address, &T1, &T2, &preferred_lifetime, &valid_lifetime);
451
452         if (status != NX_SUCCESS)
453             return status;
454
455         /* At this point the host application would store this record to NV memory. */
456     }
457     return NX_SUCCESS;
458 }
459
460 /* Demonstrate how to use NetX Duo DHCPv6 Server API to upload data from memory
461 to the DHCPv6 server's client record tables. */
462
463 UINT dhcpv6_restore_client_records(NX_DHCPV6_SERVER *dhcpv6_server_ptr)
464 {
465     UINTi;
466     UINT            status;
467
468     /* Create data to simulate client records stored in memory. */
469     NXD_ADDRESS      client_ipv6_address;
470     UINTduid_type = 1;
471     UINTduid_hardware = NX_DHCPV6_HW_TYPE_IEEE_802;
472     ULONGmessage_xid = 0xabcd;
473     UINTduid_time = 0x1234567;
474     ULONGphysical_address_msw = 0x01;
475     ULONGphysical_address_lsw = 0x02030405;
476     ULONGIP_lifetime_time_accrued = 200000; /* lease time accrued (ticks) */
477     ULONGvalid_lifetime = 300000; /* expiration on the lease (ticks) */
478     ULONGenterprise_number = 0xaaaa;
479     UCHARprivate_id[8];
480     UINT            length;
481
482     /* Set the Client IP address. */
483     client_ipv6_address.nxd_ip_version = 6;
484     client_ipv6_address.nxd_ip_address.v6[0] = 0x20010db8;
485     client_ipv6_address.nxd_ip_address.v6[1] = 0x00000f101;
486     client_ipv6_address.nxd_ip_address.v6[2] = 0x0;
487     client_ipv6_address.nxd_ip_address.v6[3] = 0x00000110;
488
489     /* Copy the 'lease data' to the server table. */
490     for (i = 0; i < 10; i++)
491     {
492         /* Simulate a Client record with a vendor assigned DUID. */

```

```

498     if (i == 0)
499     {
500         duid_type = NX_DHCPV6_SERVER_DUID_TYPE_VENDOR_ASSIGNED;
501         memcpy(&private_id[0], "Corp_XYZ", sizeof("Corp_XYZ"));
502         length = sizeof("Corp_XYZ") + 4;
503         status = nx_dhcpv6_add_client_record(dhcpv6_server_ptr, i, message_xid,
504             &client_ipv6_address, NX_DHCPV6_STATE_BOUND, IP_lifetime_time_accrued,
505             valid_lifetime, duid_type, duid_hardware, physical_address_msw,
506             physical_address_lsw, duid_time, enterprise_number,
507             &private_id[0], length);
508     }
509     /* Simulate client record with a link layer DUID. */
510     else
511     {
512         status = nx_dhcpv6_add_client_record(dhcpv6_server_ptr, i, message_xid,
513             &client_ipv6_address, NX_DHCPV6_STATE_BOUND, IP_lifetime_time_accrued,
514             valid_lifetime, duid_type, duid_hardware, physical_address_msw,
515             physical_address_lsw, duid_time, 0, NX_NULL, 0);
516     }
517     /* Check for error. */
518     if (status != NX_SUCCESS)
519     {
520         /* Check if the Client address is found in the IP lease table. */
521         if (status == NX_DHCPV6_ADDRESS_NOT_FOUND)
522         {
523             /* It is not. Client state should be set to unbound/init.*/
524         }
525         else
526         {
527             /* Either the table is full or the index exceeds the bounds of the table. */
528             return status;
529         }
530     }
531     /* Simulate the Client IP address in the table. Leave all other client 'data' the
532     same for the next record we'll 'restore'. */
533     client_ipv6_address.nxd_ip_address.v6[3]++;
534     physical_address_lsw++;
535     message_xid++;
536 }
537
538 return NX_SUCCESS;
539 }
540
541 /* Demonstrate how to use NetX Duo DHCPV6 Server API to download data to local memory and
542 eventually nonvolatile memory from the DHCPV6 server's client record tables. */
543
544 UINT dhcpv6_retrieve_client_records(NX_DHCPV6_SERVER *dhcpv6_server_ptr)
545 {
546     UINTi;
547     UINT status;
548     NXD_ADDRESS client_ipv6_address;
549     UINTduid_type;
550     UINTduid_hardware;
551     ULONGmessage_xid;
552     ULONGduid_time;
553     ULONGphysical_address_msw;
554     ULONGphysical_address_lsw;
555     ULONGIP_lifetime_time_accrued; /* lease time accrued (ticks) */
556     ULONGvalid_lifetime; /* expiration on the lease (ticks) */
557     ULONGduid_vendor_number;
558     UCHARprivate_id[8];
559     UINT length;
560     UINTclient_state;
561
562     for (i = 0; i < 100; i++)
563     {
564         memset(&client_ipv6_address, 0, sizeof(NXD_ADDRESS));
565
566         status = nx_dhcpv6_retrieve_client_record(dhcpv6_server_ptr, i, &message_xid,
567             &client_ipv6_address, &client_state, &IP_lifetime_time_accrued,
568             &valid_lifetime, &duid_type, &duid_hardware, &physical_address_msw,
569             &physical_address_lsw, &duid_time, &duid_vendor_number, &private_id[0], &length);
570
571         if (status != NX_SUCCESS)
572         {

```

```

577         /* The host application should handle error status returns depending on
578         the specific error code. See the user guide for error returns for
579         this service. */
580     }
581 }
582 }
583
584     return NX_SUCCESS;
585 }
586
587 /* This is an optional callback for NetX DHCPV6 server to notify the host application
588 that it has received either a DECLINE or RELEASE address from a Client. */
589
590 VOID dhcpv6_decline_handler(NX_DHCPV6_SERVER *dhcpv6_server_ptr, NX_DHCPV6_CLIENT
591 *dhcpv6_client_ptr, UINT message_type)
592 {
593     switch (message_type)
594     {
595         case NX_DHCPV6_MESSAGE_TYPE_DECLINE:
596
597             /* Host application handles a declined address. The Server will
598             mark the address as assigned elsewhere. Any other processing
599             is left to the host application. */
600
601             break;
602
603         case NX_DHCPV6_MESSAGE_TYPE_RELEASE:
604
605             /* Host application handles a released address. The Server will
606             mark the released IP address as available for lease to other
607             clients. Any other processing is left to the host application. */
608
609             break;
610
611         default:
612
613             /* Unhandled message type */
614             error_counter++;
615             break;
616     }
617
618     return;
619 }
620
621 /* This is an optional DHCPV6 server callback to handle client option request options. */
622 VOID dhcpv6_option_request_handler(NX_DHCPV6_SERVER *dhcpv6_server_ptr, UINT
623 option_request, UCHAR *buffer_ptr, UINT *index)
624 {
625     UCHARoption_length = 10;
626     UCHARoption_code = 24;
627     ULONGmessage_word;
628
629     if (option_request == 24)
630     {
631         message_word = option_code<< 16;
632         message_word |= option_length;
633
634         /* Adjust for endianness. */
635         NX_CHANGE_ULONG_ENDIAN(message_word);
636
637         /* Copy the option request option header to the packet. */
638         memcpy(buffer_ptr + *index, &message_word, sizeof(ULONG));
639         *index += sizeof(ULONG);
640
641         /* Copy the code for domain search list. */
642         *(buffer_ptr + *index) = 0x04;
643         (*index)++;
644
645         /* Adjusting for endianness is an exercise left for the reader. */
646         memcpy(buffer_ptr + *index, "abc.com", sizeof("abc.com"));
647         (*index) += sizeof("abc.com");
648     }
649     /* else unknown option; just return; no need to adjust buffer pointers. */
650
651     return;
652 }
653
654 }
655
656 }
657

```

Figure 6. Advanced NetX Duo DHCPv6 Server Application

NetX Duo Dynamic Host Configuration Protocol over IPv6
(DHCPv6 Server) User Guide

Publication Date: Rev.5.11 Nov 7, 2018

Published by: Renesas Electronics Corporation



SALES OFFICES

Renesas Electronics Corporation

<http://www.renesas.com>

Refer to "<http://www.renesas.com/>" for the latest and detailed information.

Renesas Electronics Corporation

TOYOSU FORESIA, 3-2-24 Toyosu, Koto-ku, Tokyo 135-0061, Japan

Renesas Electronics America Inc.

1001 Murphy Ranch Road, Milpitas, CA 95035, U.S.A.

Tel: +1-408-432-8888, Fax: +1-408-434-5351

Renesas Electronics Canada Limited

9251 Yonge Street, Suite 8309 Richmond Hill, Ontario Canada L4C 9T3

Tel: +1-905-237-2004

Renesas Electronics Europe Limited

Dukes Meadow, Millboard Road, Bourne End, Buckinghamshire, SL8 5FH, U.K

Tel: +44-1628-651-700

Renesas Electronics Europe GmbH

Arcadiastrasse 10, 40472 Düsseldorf, Germany

Tel: +49-211-6503-0, Fax: +49-211-6503-1327

Renesas Electronics (China) Co., Ltd.

Room 1709 Quantum Plaza, No.27 ZhichunLu, Haidian District, Beijing, 100191 P. R. China

Tel: +86-10-8235-1155, Fax: +86-10-8235-7679

Renesas Electronics (Shanghai) Co., Ltd.

Unit 301, Tower A, Central Towers, 555 Langao Road, Putuo District, Shanghai, 200333 P. R. China

Tel: +86-21-2226-0888, Fax: +86-21-2226-0999

Renesas Electronics Hong Kong Limited

Unit 1601-1611, 16/F., Tower 2, Grand Century Place, 193 Prince Edward Road West, Mongkok, Kowloon, Hong Kong

Tel: +852-2265-6688, Fax: +852 2886-9022

Renesas Electronics Taiwan Co., Ltd.

13F, No. 363, Fu Shing North Road, Taipei 10543, Taiwan

Tel: +886-2-8175-9600, Fax: +886 2-8175-9670

Renesas Electronics Singapore Pte. Ltd.

80 Bendemeer Road, Unit #06-02 Hyflux Innovation Centre, Singapore 339949

Tel: +65-6213-0200, Fax: +65-6213-0300

Renesas Electronics Malaysia Sdn.Bhd.

Unit 1207, Block B, Menara Amcorp, Amcorp Trade Centre, No. 18, Jln Persiaran Barat, 46050 Petaling Jaya, Selangor Darul Ehsan, Malaysia

Tel: +60-3-7955-9390, Fax: +60-3-7955-9510

Renesas Electronics India Pvt. Ltd.

No.777C, 100 Feet Road, HAL 2nd Stage, Indiranagar, Bangalore 560 038, India

Tel: +91-80-67208700, Fax: +91-80-67208777

Renesas Electronics Korea Co., Ltd.

17F, KAMCO Yangjae Tower, 262, Gangnam-daero, Gangnam-gu, Seoul, 06265 Korea

Tel: +82-2-558-3737, Fax: +82-2-558-5338

NetX Duo Dynamic Host Configuration Protocol over IPv6 (DHCPv6 Server) User Guide



Renesas Electronics Corporation

R11UM0056EU0511