

AD 2 AERODROMES

RJAA AD 2.1 AERODROME LOCATION INDICATOR AND NAME

RJAA - NARITA INTL

RJAA AD 2.2 AERODROME GEOGRAPHICAL AND ADMINISTRATIVE DATA

1	ARP coordinates and site at AD	354555N 1402308E 178° / 0.5km from NARITA control tower 123° / 1.9km from RWY 16R THR 349° / 2.5km from RWY 34L THR 171° / 4.5km from RWY 16L THR 194° / 2.4km from RWY 34R THR
2	Direction and distance from (city)	57.5km (31nm) E (BRG. 80° GEO.) from Tokyo Station (JR) 7.0km (3.8nm) ESE (BRG. 100° GEO.) from Narita Station (JR)
3	Elevation/ Reference temperature	135ft / 30°C (2003-2007)
4	Geoid undulation at AD ELEV PSN	116ft
5	MAG VAR/ Annual change	7°W (2008) / 0.3' W
6	AD Administration, address, telephone, telefax, telex, AFS, e-mail and/or Web-site addresses	Narita International Airport Corporation (NAA) Narita INTL Airport Corporation:P.O.BOX 80 Narita INTL Airport, Narita-shi , Chiba Pref Japan 282-8601 AFS: RJAAYDYX Tel: 0476-34-5635 Fax: 0476-30-1577
7	Types of traffic permitted (IFR/VFR)	IFR/VFR
8	Remarks	Narita Airport Office (Civil Aviation Bureau) Airport Administration Building , Narita INTL Airport , Narita-shi , Chiba Pref Japan 282-8601 Tel: 0476-32-6410 , 0476-32-6411 (OPS)

RJAA AD 2.3 OPERATIONAL HOURS

1	AD Administration	H24. (See RJAA AD 2.20)
2	Customs and immigration	2100-1500
3	Health and sanitation	2100-1500
4	AIS Briefing Office	H24
5	ATS Reporting Office(ARO)	Nil
6	MET Briefing Office	H24
7	ATS	H24
8	Fuelling	H24
9	Handling	H24
10	Security	H24
11	De-icing	H24
12	Remarks	Nil

RJAA AD 2.4 HANDLING SERVICES AND FACILITIES

1	Cargo-handling facilities	All the modern institutions that deal with the weight thing to a Boeing 747 type freighter.
2	Fuel/ oil types	Fuel grades: Jet A-1. Oil grades: All turbine grades.
3	Fuelling facilities/ capacity	Hydrant refuelling and fuel truck refuelling.
4	De-icing facilities	By arrangement with handling agent.
5	Hangar space for visiting aircraft	By arrangement with operating airlines.
6	Repair facilities for visiting aircraft	By arrangement with operating airlines.
7	Remarks	Nil

RJAA AD 2.5 PASSENGER FACILITIES

1	Hotels	Hotels around the airport.
2	Restaurants	At Airport
3	Transportation	Railways, buses and taxis.
4	Medical facilities	First aid treatment, ambulance; hospitals in Narita city 10km .
5	Bank and Post Office	At Airport
6	Tourist Office	At Airport
7	Remarks	Nil

RJAA AD 2.6 RESCUE AND FIRE FIGHTING SERVICES

1	AD category for fire fighting	CAT 10
2	Rescue equipment	Chemical fire fighting truck x 6 Water-supply truck x 3, Emergency medical equipments conveyance truck, Small sized emergency medical equipments conveyance truck, Destructive wrecking truck Form tank Ambulance x 2 Mobile command post
3	Capability for removal of disabled aircraft	B747-400 or B777-300ER JAL STATION CONTROLLER (0476-34-3401)
4	Remarks	Nil

RJAA AD 2.7 SEASONAL AVAILABILITY-CLEARING

1	Types of clearing equipment	Snow Removal Equipment : snow plough x 14, snow sweeper x 7 , snow blower x 4
2	Clearance priorities	Seasonal availability: All seasons. In general, the following priorities will be established for the clearing of the movement areas: RWY 16R/34L,TWY associated with RWY 16R/34L, Apron. In the case of deposits (snow, slush and ice) on the movement areas, a report will be issued as a NOTAM (domestic distribution only) at least once a day.
3	Remarks	Nil

RJAA AD 2.8 APRONS, TAXIWAYS AND CHECK LOCATIONS DATA

1	Apron surface and strength	Surface : Concrete Strength : PCN 140/R/C/X/T except PCN 65/R/B/X/T NR174, 175, 181, 182, 183, 610A, 610B, 610C, 610D, 611, 612, 613, 614
2	Taxiway width, surface and strength	Width: 30m except 25m on TWY C between B and P2-GWY, TWY K between S4 and E7, TWY C between S1 and S3, TWY T4 between S and S4-GWY, TWY T between S7-GWY and T10, TWY S7, TWY B6, A3, A4, A5, A6, A7 and A8, TWY E8, U8-GWY 23m on TWY K between B8 and E2, TWY P1 between C and P1-GWY Surface: Asphalt except Concrete on TWY A between A1 and W3-GWY, A9 and A10 Concrete on TWY B between B1 and N-HOLD Strength : PCN 140/F/C/X/T except PCN 140/R/C/X/T on TWY A between A1 and W3-GWY, A9 and A10 PCN 129/F/C/X/T on TWY B between N-HOLD and K, TWY K between B and E5 PCN 129/R/C/X/T on TWY B between B1 and N-HOLD PCN 74/F/C/X/T on TWY P1 between C and P1-GWY
3	ACL and elevation	Location : Any portion on the apron areas available Elevation : Terminal apron-40m Maintenance apron-41m
4	VOR checkpoints	Not available

5	INS checkpoints	Spot NR	
		11 354600.51N 1402304.94E	81 354634.76N 1402332.94E
		12 354601.98N 1402304.50E	82 354633.96N 1402329.30E
		14 354602.87N 1402303.03E	83 354636.86N 1402331.43E
		15 354602.58N 1402301.34E	84 354635.62N 1402328.20E
		16 354601.31N 1402300.44E	85 354638.96N 1402329.91E
		17 354559.91N 1402300.98E	86 354638.58N 1402326.06E
		18 354558.99N 1402302.42E	87 354640.33N 1402328.81E
			88 354639.73N 1402327.38E
		21 354553.88N 1402258.58E	91 354632.67N 1402334.46E
		22 354554.25N 1402256.42E	92 354628.37N 1402333.34E
		23 354553.18N 1402255.14E	93 354630.57N 1402335.97E
		24 354551.94N 1402255.13E	94 354626.78N 1402334.59E
		25 354550.50N 1402256.92E	95 354628.47N 1402337.49E
		26 354547.90N 1402258.80E	96 354623.75N 1402336.68E
		27 354545.30N 1402300.67E	97 354626.38N 1402339.00E
			98 354624.20N 1402338.60E
		31 354543.18N 1402302.14E	99 354625.22N 1402339.69E
		32 354545.21N 1402305.37E	
		33 354541.08N 1402303.65E	100A 354645.43N 1402321.52E
		34 354542.15N 1402306.79E	100B 354644.64N 1402319.14E
		35 354538.99N 1402305.17E	100C 354643.68N 1402317.77E
		36 354540.06N 1402308.31E	100E 354646.68N 1402318.03E
		37 354536.37N 1402307.18E	100F 354647.37N 1402319.23E
		38 354537.86N 1402309.62E	101 354645.73N 1402321.30E
		41 354534.12N 1402308.77E	102 354645.35N 1402320.33E
		42 354531.99N 1402310.21E	103 354644.15N 1402317.85E
		43 354530.67N 1402311.50E	104 354645.26N 1402317.05E
		44 354531.57N 1402313.00E	105 354646.81N 1402319.28E
		45 354533.14N 1402313.60E	
		46 354535.20N 1402315.12E	150 354647.95N 1402307.52E
		47 354536.69N 1402313.06E	151 354645.22N 1402308.15E
			152 354644.59N 1402309.28E
		51 354545.48N 1402315.31E	153 354643.30N 1402310.04E
		52 354543.69N 1402316.61E	154 354642.08N 1402310.92E
		53 354542.83N 1402318.28E	155 354640.94N 1402311.92E
		54 354543.67N 1402319.83E	
		54R 354543.33N 1402319.81E	161 354649.37N 1402310.14E
		54L 354541.97N 1402319.82E	162 354650.43N 1402311.38E
		55 354545.26N 1402320.42E	163 354651.50N 1402312.61E
		56 354547.48N 1402321.65E	164 354652.57N 1402313.85E
		57A 354550.23N 1402323.17E	
		57B 354552.40N 1402324.81E	174 354653.66N 1402311.85E
		58A 354555.32N 1402326.27E	175 354654.69N 1402313.04E
		58B 354557.54N 1402327.50E	
			181 354659.34N 1402309.60E
		61 354622.57N 1402323.82E	182 354658.32N 1402308.41E
		61R 354623.13N 1402324.18E	183 354656.62N 1402307.25E
		62 354620.48N 1402325.34E	
		62R 354621.07N 1402325.62E	191 354532.06N 1402324.78E
		63 354618.38N 1402326.85E	191L 354532.99N 1402324.35E
		63R 354618.85N 1402327.13E	191R 354531.70N 1402323.63E
		64 354616.28N 1402328.37E	192 354529.48N 1402323.35E
		64R 354616.70N 1402328.65E	192L 354530.42N 1402322.92E
		65 354614.19N 1402329.88E	192R 354529.13N 1402322.21E
		66 354612.33N 1402330.90E	
		66R 354612.54N 1402331.19E	201 354611.92N 1402301.14E
		67 354609.61N 1402332.49E	202 354610.54N 1402258.20E
		67L 354608.97N 1402333.31E	203 354609.00N 1402255.05E
		67R 354610.33N 1402331.70E	204 354607.79N 1402252.55E
		68 354606.86N 1402332.48E	205 354605.92N 1402250.30E
		68L 354605.96N 1402332.79E	206 354607.75N 1402249.74E
		68R 354607.08N 1402332.63E	207 354610.13N 1402248.02E
			208 354612.39N 1402246.38E
		71 354629.98N 1402318.47E	209 354614.87N 1402244.60E
		71R 354630.41N 1402318.74E	210 354617.53N 1402242.68E
		72 354632.08N 1402316.95E	211 354620.61N 1402240.45E
		72R 354632.55N 1402317.25E	212 354623.01N 1402238.72E
		73 354634.18N 1402315.44E	
		73R 354634.76N 1402315.68E	
		74 354636.28N 1402313.92E	
		74R 354636.87N 1402314.20E	
		75 354638.37N 1402312.41E	
		76 354642.28N 1402310.33E	
		77 354645.24N 1402308.20E	

5	INS checkpoints	221 354603.21N 1402242.92E	448L 354621.57N 1402405.98E
		222 354605.04N 1402241.28E	448R 354620.35N 1402406.87E
		223 354607.23N 1402239.83E	449 354618.88N 1402408.96E
		224 354609.40N 1402238.26E	449L 354619.47N 1402408.48E
		225 354611.57N 1402236.69E	449R 354618.25N 1402409.36E
		226 354614.07N 1402234.89E	450 354616.43N 1402410.72E
			450L 354616.68N 1402409.52E
			450R 354615.46N 1402410.40E
		231 354620.39N 1402231.23E	
		231A 354619.92N 1402231.56E	501 354517.97N 1402344.99E
		231B 354621.61N 1402230.34E	502 354520.07N 1402343.47E
		231C 354623.29N 1402229.12E	503 354522.16N 1402341.96E
		232 354622.90N 1402229.41E	504 354524.26N 1402340.44E
			505 354526.50N 1402338.83E
		401 354620.70N 1402346.98E	505L 354526.47N 1402337.57E
		402 354617.95N 1402345.45E	505R 354525.35N 1402338.38E
		402L 354619.19N 1402346.16E	
		402R 354618.33N 1402344.85E	508 354522.26N 1402329.96E
		403 354615.19N 1402343.93E	509 354521.21N 1402329.37E
		403L 354616.53N 1402344.65E	510 354518.99N 1402328.15E
		403R 354615.58N 1402343.33E	511 354511.91N 1402324.22E
			512 354511.22N 1402325.08E
		410 354604.27N 1402330.96E	
		410L 354603.35N 1402331.32E	600A 354515.68N 1402335.97E
		410R 354604.99N 1402331.35E	600B 354513.70N 1402335.68E
		411 354601.65N 1402329.51E	600C 354513.58N 1402334.11E
		411L 354600.73N 1402329.87E	600D 354513.17N 1402335.09E
		411R 354602.44N 1402329.71E	600E 354513.01N 1402333.72E
		412 354559.64N 1402328.93E	600F 354512.26N 1402332.52E
			600G 354510.84N 1402335.96E
		421 354543.01N 1402334.72E	
		421L 354543.94N 1402334.71E	600J 354510.34N 1402334.68E
		421R 354543.10N 1402334.01E	600K 354509.81N 1402334.43E
		422 354545.50N 1402336.06E	600L 354509.07N 1402334.97E
		422L 354546.41N 1402336.09E	600M 354511.49N 1402340.47E
		422R 354545.58N 1402335.40E	600N 354512.78N 1402339.61E
		423 354548.13N 1402337.52E	600P 354514.09N 1402338.67E
		423L 354549.05N 1402337.55E	600Q 354514.30N 1402337.23E
		423R 354548.21N 1402336.85E	600R 354515.19N 1402336.50E
		424 354550.65N 1402338.91E	600S 354516.56N 1402336.42E
		424L 354551.56N 1402338.94E	600T 354517.56N 1402335.69E
		424R 354550.72N 1402338.25E	600U 354516.97N 1402335.87E
		425 354553.13N 1402340.29E	601 354516.50N 1402334.97E
		425L 354554.04N 1402340.32E	602 354510.78N 1402338.42E
		425R 354553.21N 1402339.62E	603 354510.28N 1402335.33E
		426 354555.62N 1402341.66E	604 354514.40N 1402335.57E
		426L 354556.53N 1402341.70E	605 354514.57N 1402337.38E
		426R 354555.69N 1402341.00E	610A 354512.45N 1402350.73E
		427 354558.31N 1402343.21E	610B 354511.55N 1402351.70E
		427L 354559.25N 1402342.76E	610C 354510.56N 1402352.43E
		427R 354557.64N 1402342.91E	610D 354509.59N 1402353.14E
		428 354600.90N 1402344.64E	611 354513.11N 1402349.10E
		428L 354601.84N 1402344.19E	612 354512.35N 1402350.69E
		428R 354600.23N 1402344.35E	613 354511.25N 1402351.81E
		429 354603.16N 1402344.82E	614 354510.03N 1402352.68E
		430 354604.46N 1402345.54E	
		431 354605.60N 1402346.66E	701 354506.04N 1402329.49E
			702 354503.83N 1402329.27E
		444 354631.54N 1402359.83E	703 354501.63N 1402330.86E
		444L 354631.79N 1402358.62E	704 354459.44N 1402332.44E
		444R 354630.56N 1402359.50E	705 354457.24N 1402334.03E
		445 354629.10N 1402401.59E	706 354455.05N 1402335.61E
		445L 354629.74N 1402401.21E	707 354452.85N 1402337.20E
		445R 354628.51N 1402402.09E	708 354447.18N 1402341.29E
		446 354626.22N 1402403.68E	709 354444.88N 1402342.96E
		446L 354626.46N 1402402.47E	710 354442.57N 1402344.63E
		446R 354625.24N 1402403.35E	
		447 354623.77N 1402405.42E	
		447L 354624.23N 1402404.65E	
		447R 354623.14N 1402405.82E	
		448 354621.33N 1402407.19E	



5	INS checkpoints	801 354500.69N 1402328.75E 802 354458.41N 1402330.40E 803 354456.12N 1402332.05E 804 354454.00N 1402333.59E 805 354451.87N 1402335.12E 806 354446.19N 1402339.22E 807 354443.88N 1402340.89E 808 354441.58N 1402342.56E 902 354436.71N 1402351.15E 903 354435.35N 1402348.32E 904 354434.00N 1402345.49E 905 354433.63N 1402340.92E	
6	Remarks	Nil	

RJAA AD 2.9 SURFACE MOVEMENT GUIDANCE AND CONTROL SYSTEM AND MARKINGS




1	Use of aircraft stand ID signs, TWY guide lines and Visual docking/ parking guidance system of aircraft stands	ACFT stand ID signs : NR11,12,14-18, 21-27, 31-38, 41-47, 51-56, 57A, 57B, 58A, 58B, 61-68, 71-77, 81-88, 91-99, 151-155, 161-164, 174, 175, 201-212, 231, 232 ACFT stand taxilane : See AD2.24 Aerodrome Ground Movement Chart Visual docking guidance system : See attachment
2	RWY and TWY markings and LGT	RWY 16R/34L, 16L/34R: (Marking) RWY designation, RWY CL, RWY THR, Aiming point, TDZ, RWY middle point, RWY side stripe (LGT) RCLL , REDL, RTHL , RENL , RTZL , WBAR TWY: (Marking) TWY CL, RWY HLDG PSN, Mandatory instruction, TWY side stripe, Intermediate HLDG PSN(See attached chart), SFC painted location sign (See attached chart), SFC painted direction sign (See attached chart) (LGT) TWY edge LGT, TWY CL LGT, Taxiing guidance signs, Stop bar LGT (A1 - A10, B1 - B9) , RWY guard LGT (A1 - A10, B1 - B9), Intermediate HLDG PSN LGT (See attached chart)
3	Stop bars	Stop Bar Light Operations: 1) Stop bar lights are installed at each runway-holding position associated with RWY 16R/34L and 16L/34R. 2) Stop bar lights will be operated when the visibility or the lowest RVR of RWY 16R/34L and 16L/34R is at or less than 600m(1968ft) 3) Stop bar lights on TWY A1, A2, B8 and B9 are controlled individually by ATC. 4) Stop bar lights on TWY A3 - A10, B1 - B7 are not controlled individually by ATC. 5) During the period stop bar lights are operated, TWY A3 - A10, B1 - B7 are not available for the departing aircraft.
4	Remarks	Apron: (Marking) ACFT stand, Taxilane CL, Taxilane side stripe and Stand ID (LGT) Apron stop bar LGT Other: (Marking) Overrun area

Intermediate Holding Position Lights and Markings

1. The intermediate holding position lights and Markings identify the position where aircraft is to hold to prevent collision with other aircraft on the taxiway. The intermediate holding position lights operate simultaneously with the taxiway center line lights. The intermediate holding position lights consist of 5 or 7 yellow lights and the markings consist of a single broken line as illustrated in the figure below:
2. Operational procedure
The aircraft shall hold in front of these lights and markings only when instructed by ATC.

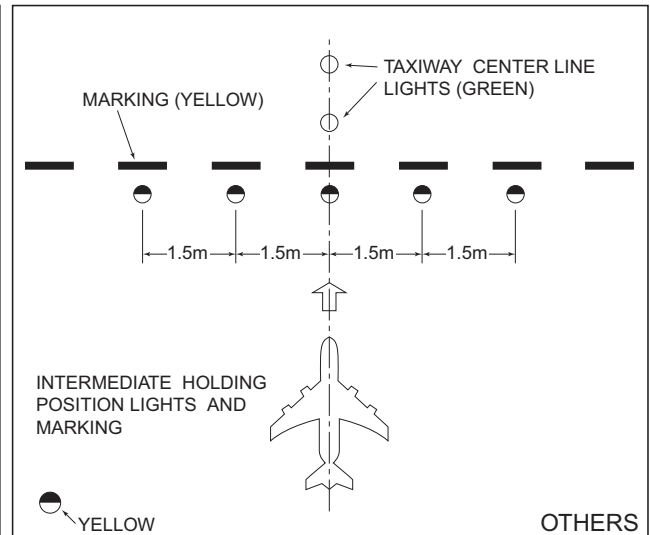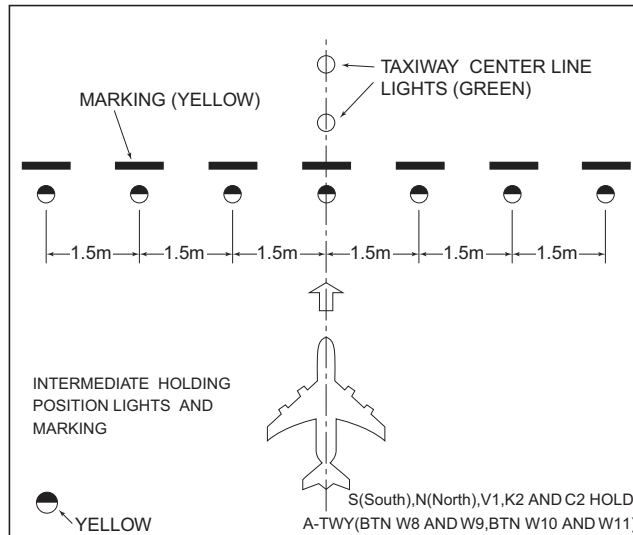

Intermediate holding position lights and markings

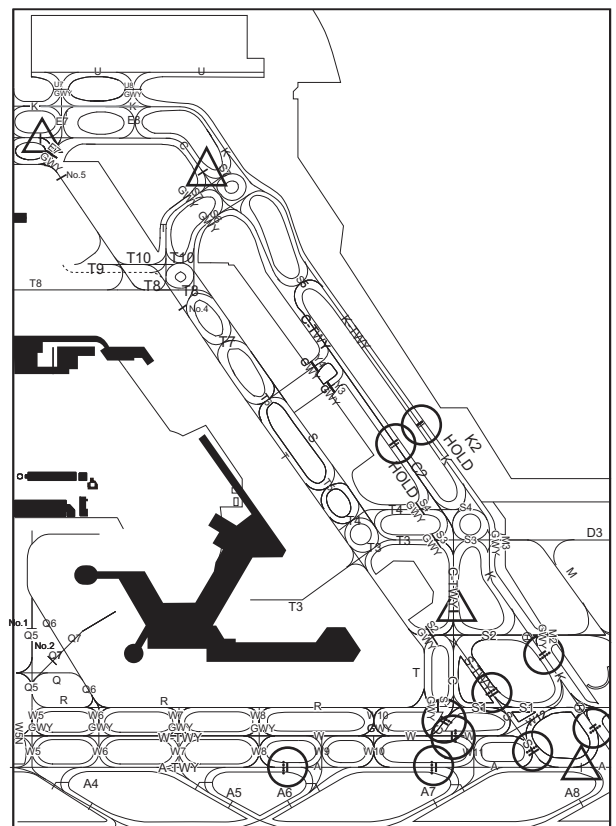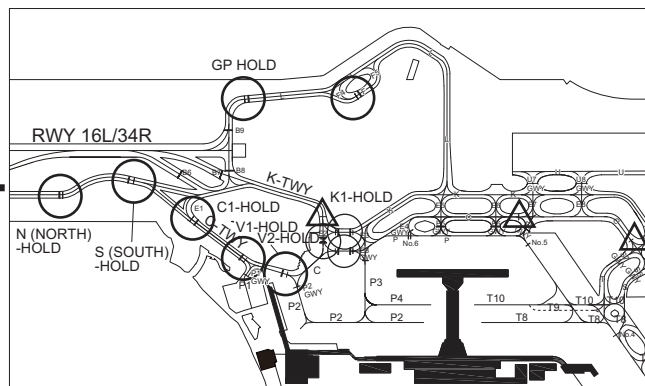


Surface Painted Direction Sign and Surface Painted Location Sign

1. Type of Surface Painted Markings
 - (1) Surface Painted Direction Sign
This type of marking at a taxiway intersection indicates the designation and direction of the taxiway leading out of an intersection. Black inscriptions with an arrow with a yellow background.
 - (2) Surface Painted Location Sign
This type of marking indicates the designation of the taxiway on which the aircraft is located. Yellow inscriptions with a black background and a yellow frame.
2. On the Taxiways at multi-crossing junctions and the standard taxiing routes, surface painted taxiway location and direction markings are provided as shown below.



APRON STOP BAR

1. Apron stop bars are provided on the aprons. (Refer to the taxiing charts for their locations). Each apron stop bar consists of five lights, illuminated in red towards the direction of the aircraft movement and when turned on by ramp controllers. Apron stop bars designated No.1 and 2 are used for arriving aircraft and No.4, No.5 and 6 are used for both arriving and departing aircraft.
2. Aircraft is required to hold at apron stop bars until the red lights are turned off and "CLEARED TO TAXI" is given by radio.
3. As shown below, the red lights are visible when an aircraft following the yellow apron taxilane center line/green center line light approaches the apron stop bar.

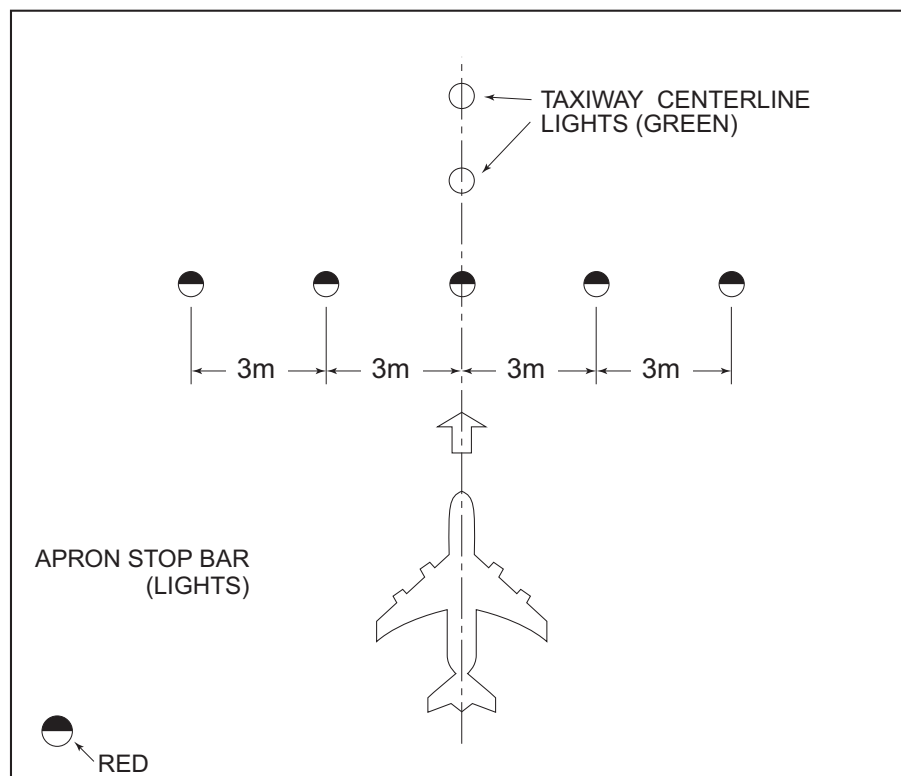

VISUAL DOCKING GUIDANCE SYSTEM

1. General

- (1) Aircraft parking stands NR11, NR12, NR14-17, NR21-27, NR31-38, NR41-47, NR51-56, 57A, 57B, 58A, 58B, NR61-68, NR71-75, NR81-88 AND NR91-99 are equipped with a visual docking guidance system.
The pilots of an arriving aircraft assigned to park at one of these parking stands can use this system to be guided and stop the aircraft at the correct parking position.
- (2) This system is operational only in the automatic mode and in an event of a system failure, the aircraft shall be manually guided by a marshaller to the stopping position.
- (3) The visual docking guidance system consists of a display screen for pilots and a laser scanner. The system detects and analyses the aircraft type of an approaching aircraft, tracks it through the laser scanner, and displays these results on the display screen.
- (4) The display screen indicates the following information:
 - a) type of the approaching aircraft,
 - b) deviation from the lead-in center line, and
 - c) distance to the stopping position.
 The above information is provided equally to the pilots on both left seat and right seat.

2. Aircraft Type Indication

- (1) An operator on ground shall input the aircraft type into the system before the aircraft approaches the parking stand. Upon accepting the input, the system carries out internal calibration, starts the laser scanner simultaneously, and indicates the aircraft type according to the input. The system then will begin to indicate yellow lead-in arrows scrolling upwards prompting the aircraft to proceed (Fig.1, Fig.3)

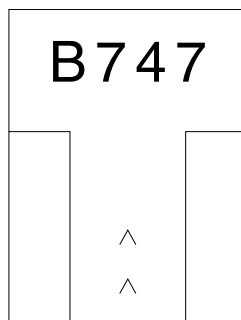


Fig. 1

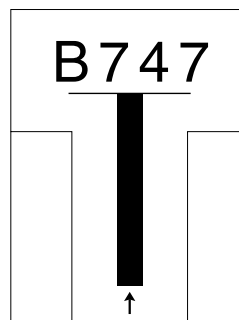


Fig. 2

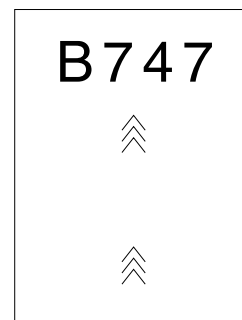


Fig. 3

NOTE: Fig.3 is aircraft parking stands NR58A and NR58B only.

- (2) When the laser scanner detects the approaching aircraft, the display screen will indicate the aircraft type, a "T" bar, and a lead-in upward arrow in yellow (Fig.2).
- (3) At least until the approaching aircraft arrives at a point 12 meters before the stopping position, the system will identify the aircraft type and will compare with the previously input aircraft type. If these data match, the system will continue its operation. If they do not match, the display screen will repeatedly indicate "STOP", "ID" and "FAIL" in sequence and will indicate 2 illuminated red squares simultaneously (Fig.4 to Fig.6), while for 58A, 58B will continue displaying "STOP", "ID FAIL" (Fig.7).

NOTE : At this moment, the pilots must stop the aircraft immediately.

When the operator re-input the correct aircraft type into the system and the system finds it correct, it resumes normal operations indicating the correct aircraft type on its display screen.

Fig. 4 → Fig. 5 → Fig. 6

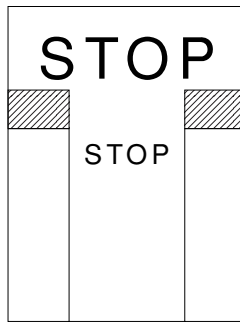


Fig. 4

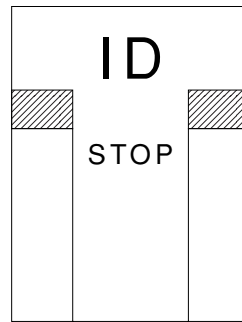


Fig. 5

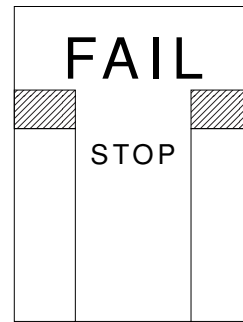


Fig. 6

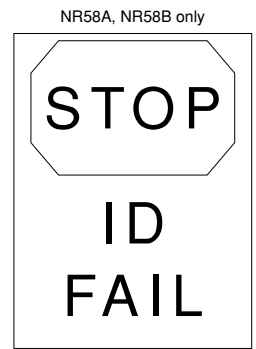


Fig. 7

3. Taxiing and Lateral Center line Guidance

- (1) While taxiing the aircraft using the system, the pilots should maneuver the aircraft at a low speed to the stopping position. In an event when "SLOW DOWN" is indicated on the display screen, the pilots should further decelerate the taxiing speed to avoid overshooting.(Fig.8)

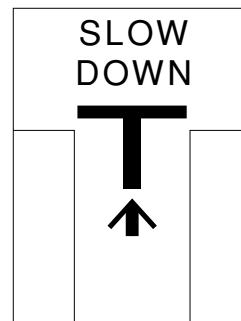


Fig. 8

- (2) Deviation of an upward yellow arrow from the center line of "T" indicates the deviation of the approaching aircraft relative to the center line of the parking stand either to right or left. Further, an additional flashing red arrow on the either side indicates the required direction for the aircraft to turn(Fig.9, Fig.10), while for 58A, 58B indicate numerical value of remaining distance(Fig.11, Fig.12).

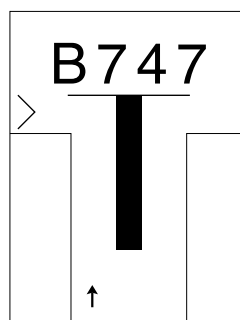


Fig. 9

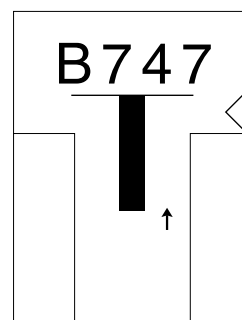


Fig. 10

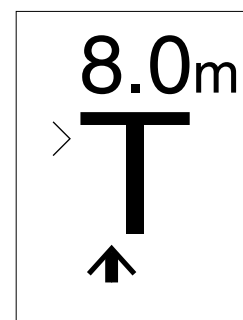


Fig. 11

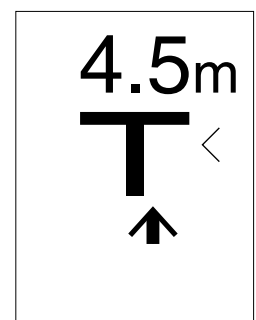


Fig. 12

NOTE: Fig.11 and Fig.12 are aircraft parking stands NR58A and NR58B only.

4. Stop Guidance

- (1) When the approaching aircraft is within 16 meters from the stopping position, the shaft of the illuminated "T" will start to reduce in its length from the bottom to indicate the approaching rate of the aircraft, indicating the remaining distance to the stopping position successively.(Fig.13, Fig.14)
As the aircraft approaches the stopping position, the shaft of the illuminated "T" retract one row for every 0.5 m.

At aircraft parking stands NR58A and NR58B, when the approaching aircraft is within 30 meters from the stopping position, display of digital countdown will start.

As the aircraft approaches the stopping position, digital countdown is for every 1.0 meters (from 30 to 5 meters to the stop position) or for every 0.5 meters (from 5 to 2 meters to the stop position) or for every 0.1 meters (from 2 to 0 meters to the stop position).

When the approaching aircraft is within 20 meter from the stopping position, the shaft of the illuminated "T" will start to reduce in its length from the bottom to indicate the approaching rate of the aircraft, indicating the remaining distance to the stopping position successively. (Fig.15, Fig.16)

As the aircraft approaches the stopping position, the shaft of the illuminated "T" retract one row for every 0.2 m.

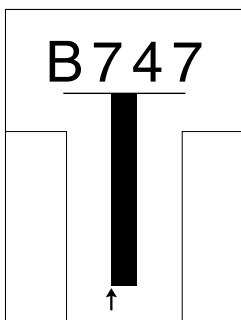


Fig. 13

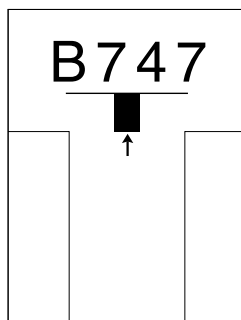


Fig. 14

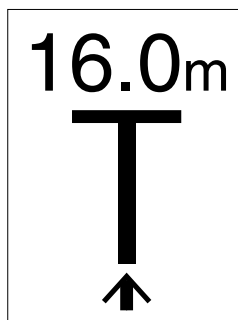


Fig. 15

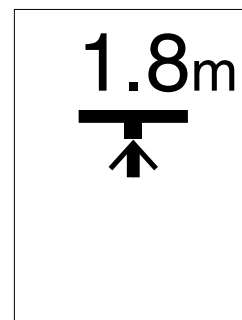


Fig. 16

NOTE: Fig.15 and Fig.16 are aircraft parking stands NR58A and NR58B only.

- (2) When the aircraft reaches the stopping position, a message "STOP" will be displayed on the screen together with two red squares, one each at the either side of the screen at the positions previously used for indication of a direction to turn(Fig.17), while for 58A, 58B will show "STOP" with a red border(Fig.18).

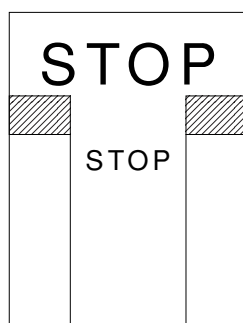


Fig. 17

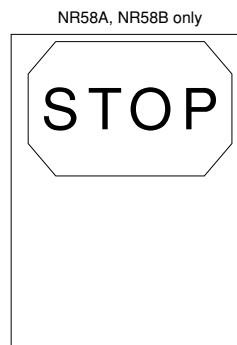


Fig. 18

- (3) When the aircraft is stopped at the correct stopping position, a message "OK" will be displayed on the screen in several seconds.(Fig.19)

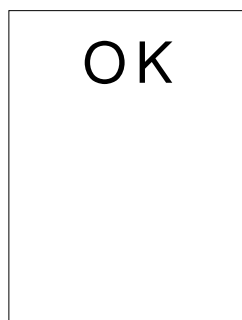


Fig. 19

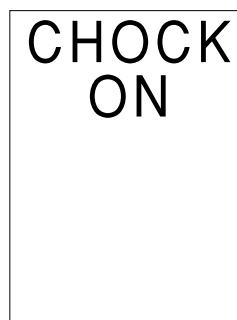


Fig. 20

- (4) When the operator applies chocks, and switches on "CHOCK ON" switch, the display screen will display "CHOCK ON." (Fig.20)

- (5) If the aircraft stops at a position beyond the correct stopping position, a message "TOO FAR" will be displayed on the screen.(Fig.21)



Fig. 21

5. Cautions and Safety

- (1) When the system displays an incorrect aircraft type, or when such a message as "STOP", "ID", "FAIL", or "WAIT" appears on the display screen, the pilots should stop the aircraft immediately.(Fig.4 to Fig.7, Fig.17, Fig.18, Fig.22, Fig.23)

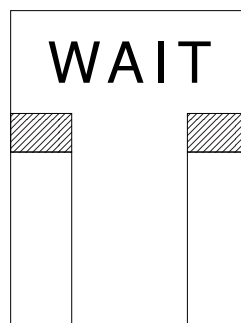


Fig. 22

NR58A, NR58B only

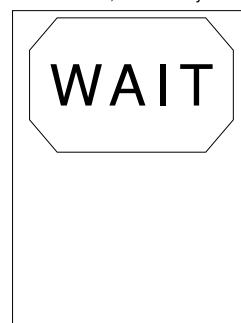


Fig. 23

- (2) During heavy fog, rain or snow the visibility for the docking system can be reduced.
When the system is activated and in capture mode, the display will deactivate the floating arrows and show "DOWN GRADE" (Fig.24, Fig.25), while for 58A, 58B will show "SLOW" (Fig.26).
The message will be superseded by the closing rate bar as soon as the system detects the approaching aircraft.
The pilot must not proceed beyond the bridge, unless the "DOWN GRADE" or "SLOW" text has been superseded by the closing rate bar.

→ Fig. 24 → Fig. 25 →

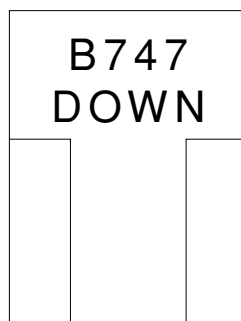


Fig. 24

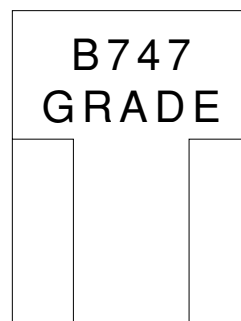


Fig. 25

NR58A, NR58B only



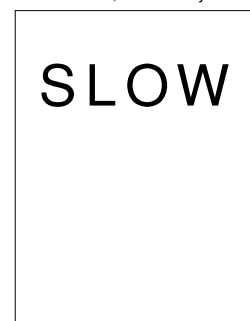


Fig. 26

Marking aids

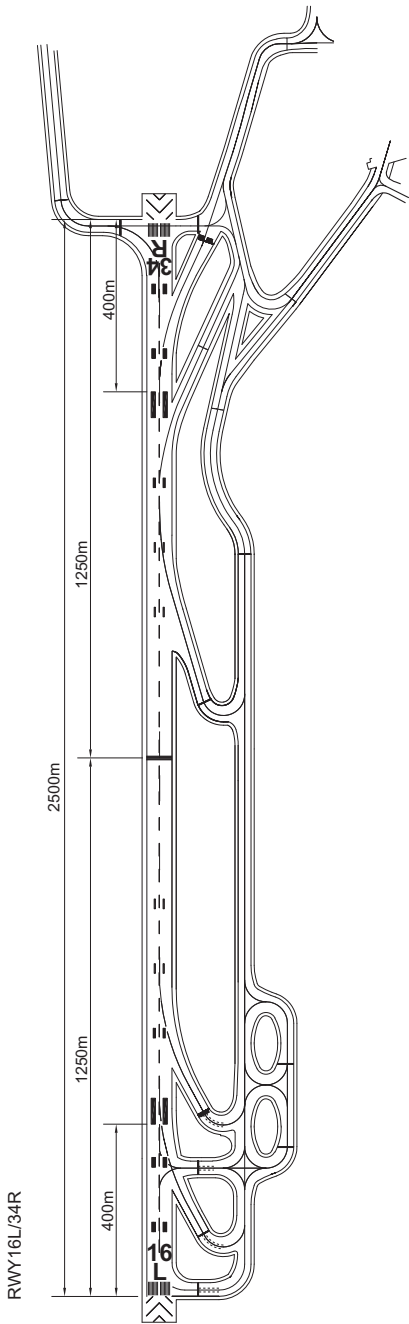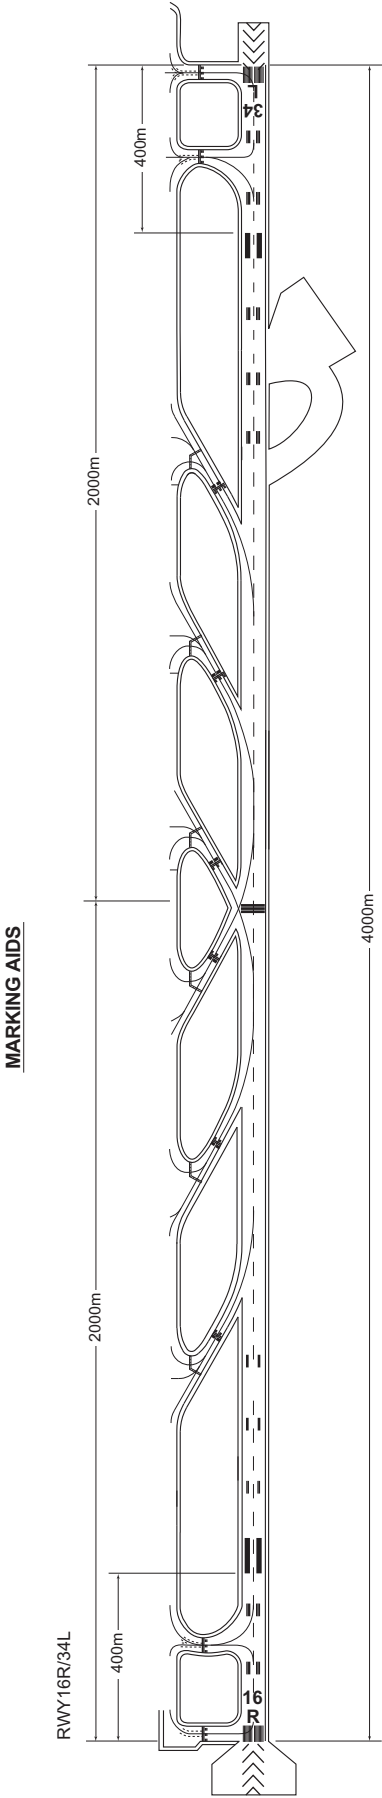

RJAA AD 2.10 AERODROME OBSTACLES

■ In Area2 See Obstacle data

■ In Area3 To be developed

RJAA AD 2.11 METEOROLOGICAL INFORMATION PROVIDED

1	Associated MET Office	NARITA
2	Hours of service MET Office outside hours	H24
3	Office responsible for TAF preparation Periods of validity	NARITA 30 Hours
4	Trend forecast Interval of issuance	TREND 30min.
5	Briefing/ consultation provided	P, Ja, En
6	Flight documentation Language(s) used	C En
7	Charts and other information available for briefing or consultation	S ₆ , U ₈₅ , U ₇ , U ₅ , U ₃ , U ₂₅ , U ₂ /T _r P _S , P ₅ , P ₃ , P ₂₅ , P _{SWE} , P _{SWF} , P _{SWG} , P _{SWI} , P _{SWM} , P _{SW} (domestic), E, C, W _E , W _F , W _G , W _I , W, N
8	Supplementary equipment available for providing information	Doppler Radar and Lidar for Airport Weather (See attached chart)
9	ATS units provided with information	TWR, APP, ATIS
10	Additional information (limitation of service, etc.)	Nil

RJAA AD 2.13 DECLARED DISTANCES

RWY Designator	TORA (m)	TODA (m)	ASDA (m)	LDA (m)	Remarks
1	2	3	4	5	6
16R	4000	4000	4000	4000	Nil
34L	4000	4000	4000	4000	Nil
16L	2500	2500	2500	2500	Nil
34R	2500	2500	2500	2500	Nil

RJAA AD 2.14 APPROACH AND RUNWAY LIGHTING

RWY Designator	APCH LGT type LEN INTST	RTHL Color WBAR	PAPI (VASIS) Angle DIST FM THR MEHT	RTZL LEN	RCLL LEN Spacing Color INTST	REDL LEN Spacing Color INTST	RENL Color WBAR	STWL LEN Color
1	2	3	4	5	6	7	8	9
16R	PALS (CAT III) 900m LIH	Green Green	PAPI 3.0°/Left 431m 67.3ft	900m	4000m 15m Coded color (White/Red) LIH	4000m 30m Coded color (White/Yellow) LIH	Red	Nil(*)
34L	PALS (CAT I) 750m LIH	Green Green	PAPI 3.0°/Left 425m 67.3ft	900m	4000m 15m Coded color (White/Red) LIH	4000m 30m Coded color (White/Yellow) LIH	Red	Nil(*)
16L	PALS (CAT I) 900m LIH	Green Green	PAPI 3.0°/Left 419m 65.6ft	900m	2500m 30m Coded color (White/Red) LIH	2500m 30m Coded color (White/Yellow) LIH	Red	Nil(*)
34R	PALS (CAT I) 900m LIH	Green Green	PAPI 3.0°/Right 460m 66.2ft	900m	2500m 30m Coded color (White/Red) LIH	2500m 30m Coded color (White/Yellow) LIH	Red	Nil(*)
Remarks								
10								
(*) Overrun area edge LGT(LEN:60m, color:Red)								

RJAA AD 2.15 OTHER LIGHTING, SECONDARY POWER SUPPLY

1	ABN/IBN location, characteristics and hours of operation	ABN: 354511N/1402400E, White/Green EV4.3sec, HO
2	LDI location and LGT Anemometer location and LGT	LDI : Nil Anemometer : RWY 34L : 276m from RWY 34L THR, LGTD RWY 16R : 397m from RWY 16R THR, LGTD RWY 34R : 415m from RWY 34R THR, LGTD RWY 16L : 485m from RWY 16L THR, LGTD
3	TWY edge and center line lighting	TWY edge LGT : Blue TWY CL LGT : ALTN Green/Yelow FM RWY leaving Report point, other Green
4	Secondary power supply/ switch-over time	Within 1sec: PALS(RWY16R/34L), PAPI, RENL, RTHL, WBAR, RCLL, RTZL, Stop bar LGT and RWY guard LGT(B1-B9) Within 15sec: Other lights
5	Remarks	WDI LGT

RJAA AD 2.16 HELICOPTER LANDING AREA


Nil

RJAA AD 2.17 ATS AIRSPACE

Designation and lateral limits		Vertical limits (ft)	Airspace classification	ATS unit call sign Language	Remarks
1		2	3	4	6
NARITA CTR	Area defined as follows. (1) Area within a radius of 5nm of NARITA INTERNATIONAL ARP(3546N14023E). (2) Area within a line connecting 354826N 1401749E, 355054N 1402341E, 355238N 1402225E, 354957N 1401647E and 354826N 1401749E	3000 or below	D	NARITA TWR En	exclude area(1)
NARITA PCA	See attached chart		C	TOKYO APP(1) NARITA TWR(2) En	(1)Primary (2)Secondary
TOKYO ACA	See RJTT attached chart		E	TOKYO APP TOKYO DEP TOKYO RADAR En	
TOKYO TCA	See RJTT attached chart		E	TOKYO TCA En	

成田特別管制区
Narita Positive Control Area

NAME	LATERAL LIMITS	UPPER LIMIT (AMSL)	UNIT PROVIDING SERVICE	REMARKS
		LOWER LIMIT (AMSL) M(ft)		
1 成田 Narita	2 下記に示された区域 The area shown below	3	4	5
			Primary Tokyo APP 124.4 127.7 261.2 Secondary Narita Tower 118.2 118.35 236.8	当該空域を飛行しようとする航空機は東京アプローチ又は成田タワーに連絡し、コールサイン、現在位置、高度及び意図を通報し指示を受けること。 Pilot of aircraft operating in this area shall contact Tokyo APP or Narita Tower for ATC instructions giving informations on aircraft identification, position, altitude and pilot's intentions.

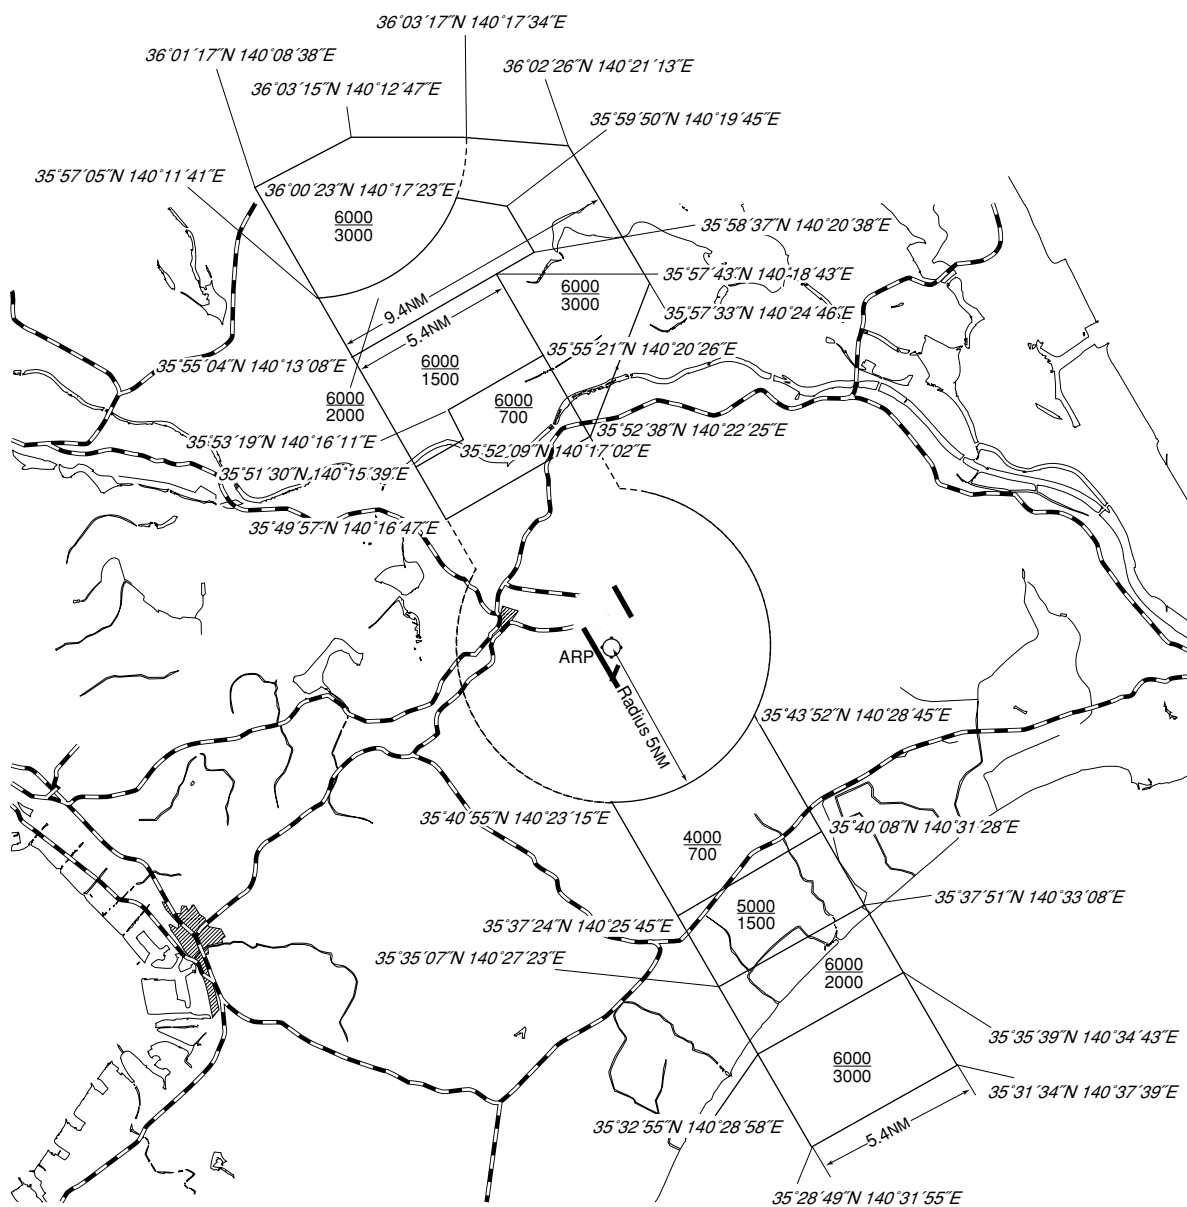

RJAA AD 2.18 ATS COMMUNICATION FACILITIES


Service designation	Call sign	Frequency	Hours of operation	Remarks
1	2	3	4	5
APP	Tokyo Approach	124.4MHz(1) 121.275MHz 125.2MHz 125.8MHz 127.7MHz 225.65MHz 121.5MHz(E) 243.0MHz(E)	H24	(1)Primary
ASR	Tokyo Radar	120.2MHz 121.5MHz(E) 243.0MHz(E)	H24	
DEP	Tokyo Departure	124.2MHz(1) 119.6MHz 120.6MHz 125.525MHz 127.5MHz	H24	
TCA	Tokyo TCA	119.45MHz 246.1MHz	2300 - 1030	
TWR	Narita Tower	118.2MHz(1) 118.35MHz 122.7MHz 126.2MHz 236.8MHz 121.5MHz(E) 243.0MHz(E)	H24	
GND	Narita Ground	121.95MHz(1) 121.85MHz	H24	
DELIVERY	Narita Delivery	121.9MHz(1) 121.65MHz	H24	
ATIS	Narita INTL Airport	128.25MHz	H24	
RAMP	Narita Ramp Control	121.6MHz 121.75MHz	H24	
A/G	Tokyo	(2)	H24	(2)SELCAL AVBL HF* RDO CK AVBL. *LOCAL HF AT NARITA INTL AP. NP: 2932KHz 5628KHz 5667KHz 6655KHz 8915KHz 8951KHz 10048KHz 11330KHz 13273KHz 17946KHz 21925KHz CWP: 2998KHz 3455KHz 4666KHz 6532KHz 8903KHz 11384KHz 13300KHz 17904KHz

RJAA AD 2.19 RADIO NAVIGATION AND LANDING AIDS

Type of aid (VOR declination)	ID	Frequency	Hours of operation	Position of transmitting antenna coordinates	Elevation of DME transmitting antenna	Remarks
1	2	3	4	5	6	7
VOR	NRE	117.9MHz	H24	354656.44N/1402145.13E		VOR unusable: 110°-120° beyond 15nm BLW 3000ft. 120°-150° beyond 25nm BLW 3000ft. 170°-180° beyond 35nm BLW 3000ft. 210°-220° beyond 35nm BLW 4000ft. 260°-270° beyond 35nm BLW 3000ft. 280°-300° beyond 25nm BLW 3000ft. Note: There is a course roughness due to crossing over the station by other aircraft.
DME	NRE	1213MHz (CH-126X)	H24	354656.44N/1402145.13E	153ft	DME unusable: 060°-110° beyond 30nm BLW 3000ft. 110°-120° beyond 20nm BLW 3000ft. 130°-140° beyond 25nm BLW 3000ft. 140°-150° beyond 35nm BLW 4000ft. 260°-270° beyond 35nm BLW 3000ft. 280°-300° beyond 25nm BLW 3000ft.
ILS-LOC 16R	IKF	111.5MHz	H24	354421.08N/1402337.38E		Back course unusable. LOC : 532m(1745ft) away FM RWY34L THR, BRG(MAG) 157°.
ILS-GP 16R	-	332.9MHz	H24	354615.99N/1402207.87E		GP: 340m(1115ft) inside FM RWY16R THR, 140m(459ft) W of RCL. GP angle 3.0°, HGT of ILS Ref datum 17.89m(58.7ft).
ILS-DME 16R	IKF	1013MHz (CH-52X)	H24	354615.89N/1402207.71E	145ft	DME : 340m(1115ft) inside FM RWY16R THR, 145m(475ft) W of RCL.
IM 16R	-	75MHz	H24	354635.61N/1402200.18E		IM : 280m(918ft) away FM RWY16R THR.
ILS-LOC 34L	IYQ	111.9MHz	H24	354640.25N/1402156.83E		Back course unusable. LOC : 446m(1463ft) away FM RWY16R THR. BRG(MAG) 337°.
ILS-GP 34L	-	331.1MHz	H24	354443.26N/1402315.36E		GP : 338m(1109ft) inside FM RWY34L THR, 130m(426ft) W of RCL. GP angle 3.0° HGT of ILS Ref datum 17.7m(58ft).
ILS-DME 34L	IYQ	1017.0MHz (CH-56X)	H24	354443.18N/1402315.19E	155ft	DME : 338m(1109ft) inside FM RWY34L THR, 135m(443ft) W of RCL.


Type of aid (VOR declination)	ID	Frequency	Hours of operation	Position of transmitting antenna coordinates	Elevation of DME transmitting antenna	Remarks
1	2	3	4	5	6	7
VOR	HKE	115.0MHz	H24	354851.00N/1402217.81E		Note : There is a course roughness due to crossing over the station by other aircraft.
DME	HKE	1184.0MHz (CH-97X)	H24	354851.00N/1402217.81E	177ft	
ILS-LOC 16L	ITM	110.7MHz	H24	354702.26N/1402336.44E		Back course unusable. LOC : 234m(767ft) away FM RWY34R THR, BRG (MAG) 157°
ILS-GP 16L	-	330.2MHz	H24	354810.90N/1402253.85E		GP : 369m(1210ft) inside FM RWY16L THR, 153m(500ft) E of RCL. GP angle 3.0°. HGT of ILS Ref datum 16.53m(54.2ft)
ILS-DME 16L	ITM	1005.0MHz (CH-44X)	H24	354810.82N/1402253.68E	142ft	DME: 369m(1210ft) inside FM RWY16L THR, 148m(484ft) E of RCL.
ILS-LOC 34R	ITJ	110.9MHz	H24	354826.12N/1402235.80E		Back course unusable. LOC : 265m(869ft) away FM RWY16L THR, BRG (MAG) 337°
ILS-GP 34R	-	330.8MHz	H24	354721.37N/1402330.81E		GP : 345m(1131ft) inside FM RWY34R THR, 177m(581ft) E of RCL. GP angle 3.0° HGT of ILS Ref datum 16.7m(54.9ft) .
ILS-DME 34R	ITJ	1007.0MHz (CH-46X)	H24	354721.45N/1402330.99E	149ft	DME : 345m(1131ft) inside FM RWY34R THR,182m(597ft) E of RCL.
DME	SND	1174MHz (CH-87X)	H24	355605.37N/1395853.23E	129ft	
MSAS		1575.42MHz	H24			Transmitting antennas are satellite based

ILS for RWY 16R

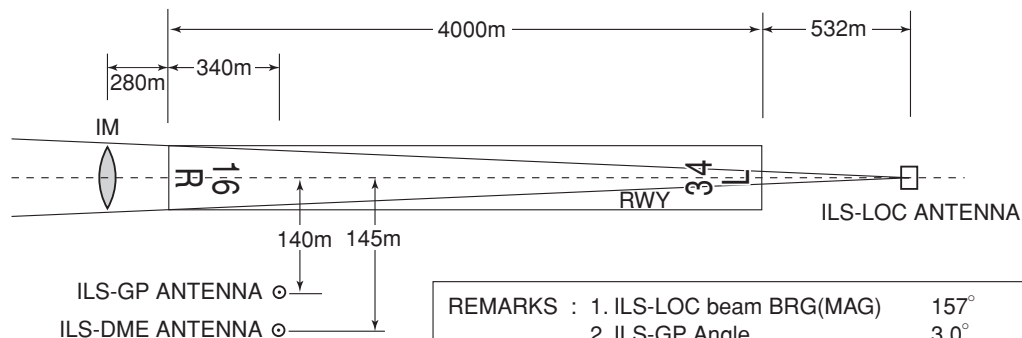


REMARKS : 1. ILS-LOC beam BRG(MAG) 157°
 2. ILS-GP Angle 3.0°
 3. ILS REF datum 17.89m(58.7ft)
 4. ELEV of ILS-DME 44.3m(145ft)

ILS for RWY 34L

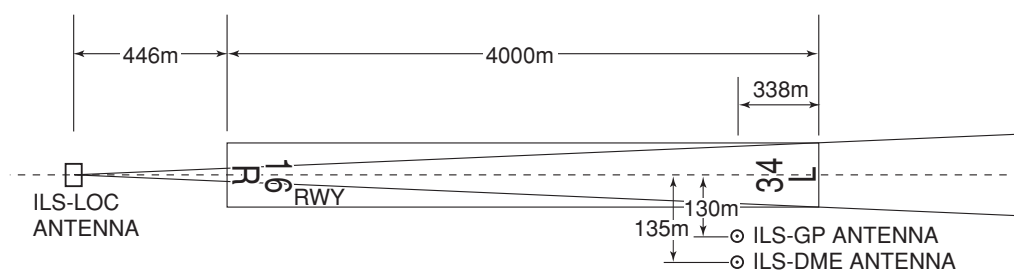


REMARKS : 1. ILS-LOC beam BRG(MAG) 337°
 2. ILS-GP Angle 3.0°
 3. ILS REF datum 17.7m(58ft)
 4. ELEV of ILS-DME 47.2m(155ft)

ILS for RWY 16L

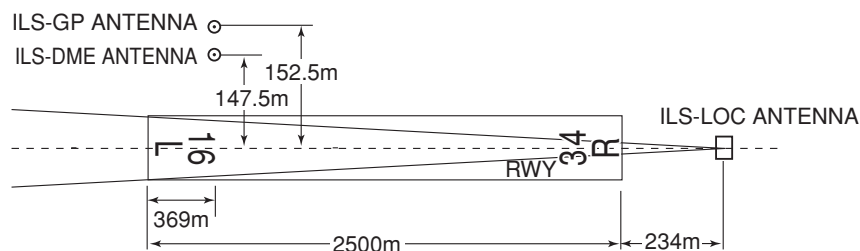

REMARKS : 1. ILS-LOC beam BRG(MAG) 157°
 2. ILS-GP Angle 3.0°
 3. ILS REF datum 16.53m(54.2ft)
 4. ELEV of ILS-DME 43.4m(142ft)

ILS for RWY 34R

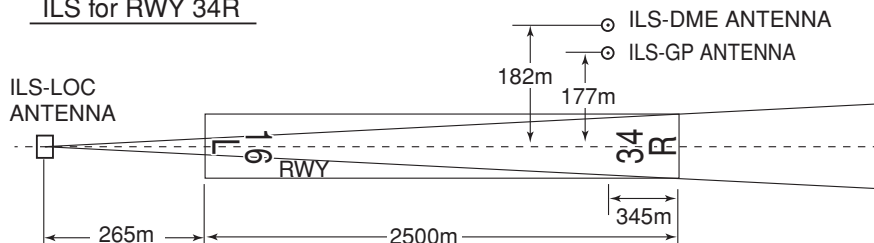

REMARKS : 1. ILS-LOC beam BRG(MAG) 337°
 2. ILS-GP Angle 3.0°
 3. ILS REF datum 16.7m(54.9ft)
 4. ELEV of ILS-DME 45.5m(149ft)

RJAA AD 2.20 LOCAL TRAFFIC REGULATIONS

1. Airport regulations

Local flying restrictions.

1.Noise restrictions

Time restrictions on departures and arrivals:

- (A) No take off or landing shall be permitted during the hours from 1500 UTC to 2100 UTC with the exception of aircraft in an emergency or in an unavoidable situation.

Note: "In an emergency or in an unavoidable situation" as described above shall be limited to the following cases:

- (a) Aircraft encountered with an abnormal situation.
- (b) When abnormal situation arose among crew or passengers.
- (c) Aircraft operating for the purpose of search-and-rescue activities.
- (d) Aircraft operating for the purpose of urgent news collection activities.
- (e) When take-off or landing is considered really unavoidable due to typhoon evacuation or other reasons.
- (f) When there arose necessity of urgent refuelling due to unusual weather conditions.

- (B) The airport office of JCAB shall not accept flight plans in violation of the paragraph (A) above.

- (C) (1) Only RWY 16R/34L is available during the hours from 1400 UTC to 1500 UTC

- (2) All aircraft taking off from/landing at Narita International Airport during the hours from 1400 UTC to 1500 UTC shall meet the following requirement.

The sum of noise values of the aircraft is at least 10 EPNdB below the total noise standard values at the flyover, approach and sideline measurement points as defined in Annex 16 to the Convention on International Civil Aviation Volume I Chapter 3 and all of the individual noise values measured at each of the measurement points are at least 2 EPNdB below the noise standard values at the corresponding points.

- (3) All aircraft scheduled to take off from/land at Narita International Airport during the hours from 2100 UTC to 1400 UTC shall also meet the criteria mentioned on paragraph (2) above in case they take off/land from 1400 UTC to 1500 UTC due to delay.

- (4) The provisions of the paragraph (1), (2), or (3) above shall not be applied in an emergency or in an unavoidable situation mentioned on the paragraph (A) above.

2.Operation

- (1) Efficient Use of 16L/34R

In order to maximize the operational efficiency of the airport, it is strongly encouraged for pilot to comply with the use of runway instructed by ATC, where ATC has determined its use upon giving due consideration to the overall traffic situation on the ground and in the air.

For this reason, arriving aircraft must be ready to accept landing on 16L/34R (2,500m) if ATC assigns the shorter runway.

Departing aircraft, upon giving due consideration of the distance to the destination as well as aircraft performance, must be ready to accept take-off from the runway assigned by ATC.

However, in the event where the assigned runway cannot be accepted due to unavoidable circumstances such as weather conditions, arriving aircraft must notify ATC of its intention at initial contact with Tokyo Approach and departing aircraft must notify ATC when requesting ATC clearance.

- (2) Gear down operation during an approach to RWY34L/RWY34R.

In order to prevent ice blocks falling from aircraft onto the ground, all flights making an approach to RWY34L/RWY34R from the seashore are required to complete gear down and locked before reaching IYQ 11.8DME (NRE 14.3DME) for RWY 34L/ ITJ 13.6DME (HKE 15.4DME) for RWY34R as far as the safety of the flight is not compromised.

- (3) Missed approach

Pilot roles and responsibilities, when simultaneous parallel ILS approaches are being conducted.

If executing a missed approach prior to reaching the final approach fix (FAF), fly the lateral navigation path of the instrument procedure to the FAF. And,

- A) ILS Z RWY16L

Comply with restrictions in the Instrument Approach Procedure (IAP) chart until reaching MARCH, then maintain 3,000FT until reaching FAF, then climb to the altitude specified for the missed approach procedure, except when another altitude is instructed by the ATC.

- B) ILS RWY 34L

Maintain 4,000FT until reaching FAF, then climb to the altitude specified for the missed approach procedure, except when another altitude is instructed by the ATC.

- C) ILS Z RWY16R/ILS Z RWY34R

Climb to the altitude specified for the missed approach procedure, except when another altitude is instructed by the ATC.

- (4) On use of this airport for small aircraft

- A) Take-off and landing of small aircraft shall be restricted by the airport authority excepting those engaged in security mission or permitted in advance.

- B) All small aircraft engaged in news report within Narita control zone are requested to inform flight schedule in advance to ATC office by telephone (0476-32-6532).

3.PDA (parts departing aircraft) reporting to NAA


In order to secure the safety of aircraft operations and to rectify the issue of falling objects from aircraft operating in the vicinity of Narita International Airport, airline operators are required to notify NAA Ramp Control Office (Tel 0476-32-2246, Fax 0476-30-1586, E-mail unkan@naa.jp) of any "Parts Departing Aircraft" from flights operating to/from Narita International Airport, without delay. This information shall be shared by relevant parties in order to prevent recurrence of such.


4. Special notice to Airbus A380 operators (See A380 MOVEMENT AREA CHART)

- (1) Runway:
 - The only available runway for A380 is 16R/34L, and A380 is not permitted to use RWY 16L/34R.
 - It is required to use a modern digital autopilot or flight director with track hold guidance, as RWY 16R/34L is with an ICAO Code E OFZ (obstacle free zone).
- (2) Runway-holding position:
 - RWY-holding position markings on A1, A2, A9 and A10 are located at 120m from runway center line. Clearance is adequate when A380 is properly holding on these holding positions.
- (3) Taxiway and apron:
 - A380 ground movement is only permitted within the areas as shown on the attached chart "A380 MOVEMENT AREA".
 - Reduced taxiway-taxilane center line separation of 90m is applied for simultaneous A380 taxi at W and R between W5 and S1, at W between C and W12, and at S1 between C and S. On these taxiways/taxilanes, A380 needs to reduce taxiing speed and accurately track the center lines.
 - Reduced taxilane-taxilane center line separation of 80m is applied for A380 taxi at T8 while another taxi lane T10 is limited up to ICAO Code E aircraft (which is max 65m wingspan, i.e. minimum 7.5m wingtip separation). On this taxi lane, A380 needs to reduce taxiing speed and accurately track the center line.
 - A380 should take taxilane T9 to taxi to NR96.
 - Taxilane T9 marking is blue.
 - T9 aircraft stand taxi lane center line lights are illuminated in alternating GREEN and BLUE.
These lights are turned on by ramp controller for A380 aircraft arriving or departing to/from NR96 parking stand.
- (4) Taxiing route:
 - Unless there is a particular reason, A380 taxiing route is only permitted within the areas as shown on the attached chart "A380 MOVEMENT AREA".
- (5) Parking stand:
 - Available parking stands for A380 are: NR15, NR26, NR45, NR46, NR54, NR66, NR67, NR68, NR96, NR191, NR192, NR231, NR232, NR410, NR411, NR427, NR428, NR444, NR445, NR446, NR447, NR448, NR449, NR450, NR709, NR802 and NR807.
- (6) Ground power supply:
 - The fixed power facility is capable of supplying 180KVA at NR15, NR26, NR66, NR96, NR231 and NR232.
 - The fixed power facility is capable of supplying 300KVA at NR45 and NR46.
 - APU restriction is also applied to A380 as stipulated in RJAA AD2.21 Noise abatement procedures, (II) Other Information, (D) Restrictions about the use of auxiliary power unit (APU).

5. Special notice to Boeing B747-8 operators (See B747-8 MOVEMENT AREA CHART)

- (1) Runway:
 - All runways are available for B747-8.
 - It is required to use a modern digital autopilot or flight director with track hold guidance, as all runways are with an ICAO Code E OFZ (obstacle free zone).
- (2) Taxiway and apron:
 - B747-8 ground movement is only permitted within the areas as shown on the attached chart "B747-8 MOVEMENT AREA".
 - Reduced taxiway center line-object separation is applied on K between B8 and E2. On this taxiway, B747-8 needs to reduce taxiing speed and accurately track the center line, as separation between wingtip and the boundary fence is 10.5m.
 - Reduced taxi lane center line-object (e.g. service roads) separation of 41.7m is applied at Q between NR205 and NR211, and M between NR509 and NR600C. On this taxi lanes, B747-8 needs to reduce taxiing speed and accurately track the center lines.
 - On taxiway D3, and N1 between D2 and D3, B747-8 is required to be towed during taxiing.
- (3) Taxiing route:
 - Unless there is a particular reason, B747-8 taxiing route is only permitted within the areas as shown on the attached chart "B747-8 MOVEMENT AREA CHART".
- (4) Parking stand:
 - Available parking stands for B747-8 are: NR26, NR67, NR68, NR191, NR192, NR204, NR205, NR207, NR208, NR209, NR210, NR211, NR231, NR232, NR410, NR411, NR422, NR423, NR424, NR425, NR426, NR427, NR428, NR444, NR445, NR446, NR447, NR448, NR449, NR450, NR702, NR703, NR704, NR705, NR706, NR707, NR708, NR709, NR710, NR801, NR802, NR803, NR804, NR805, NR806, NR807, NR808, NR902, NR903 and NR904.

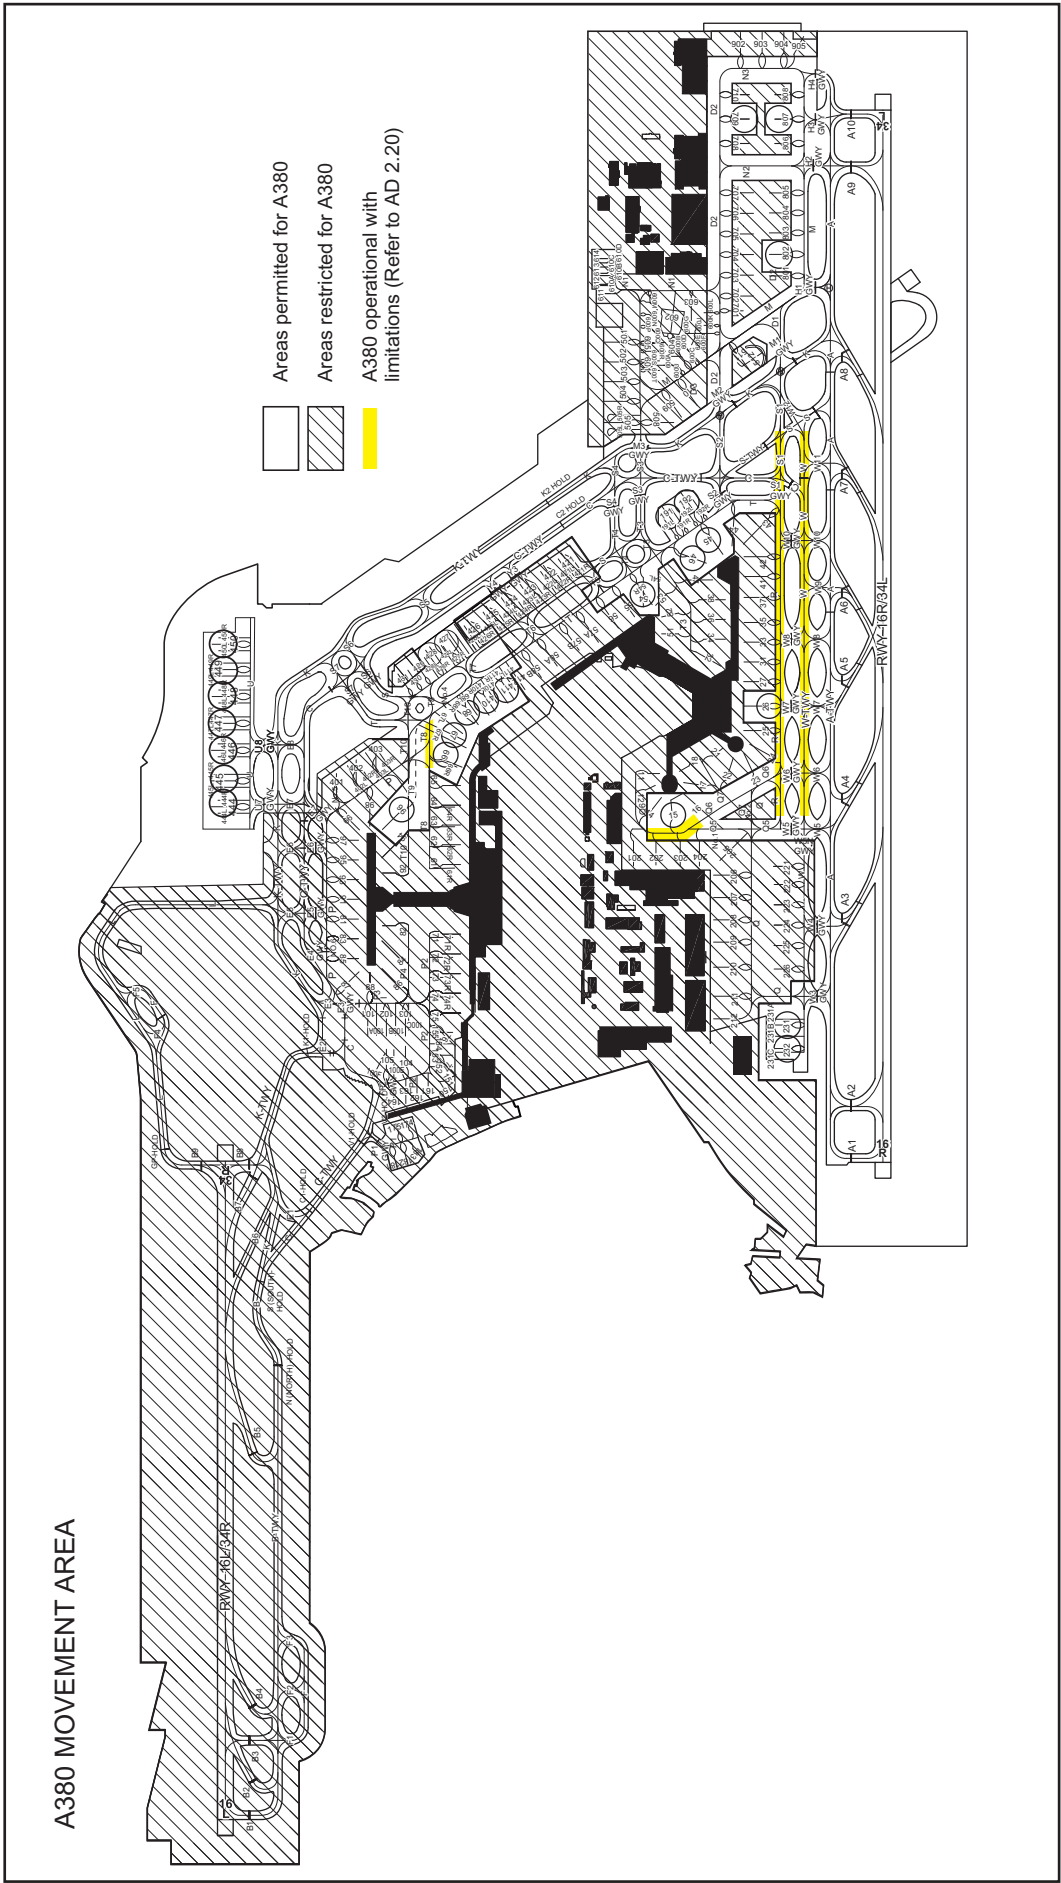

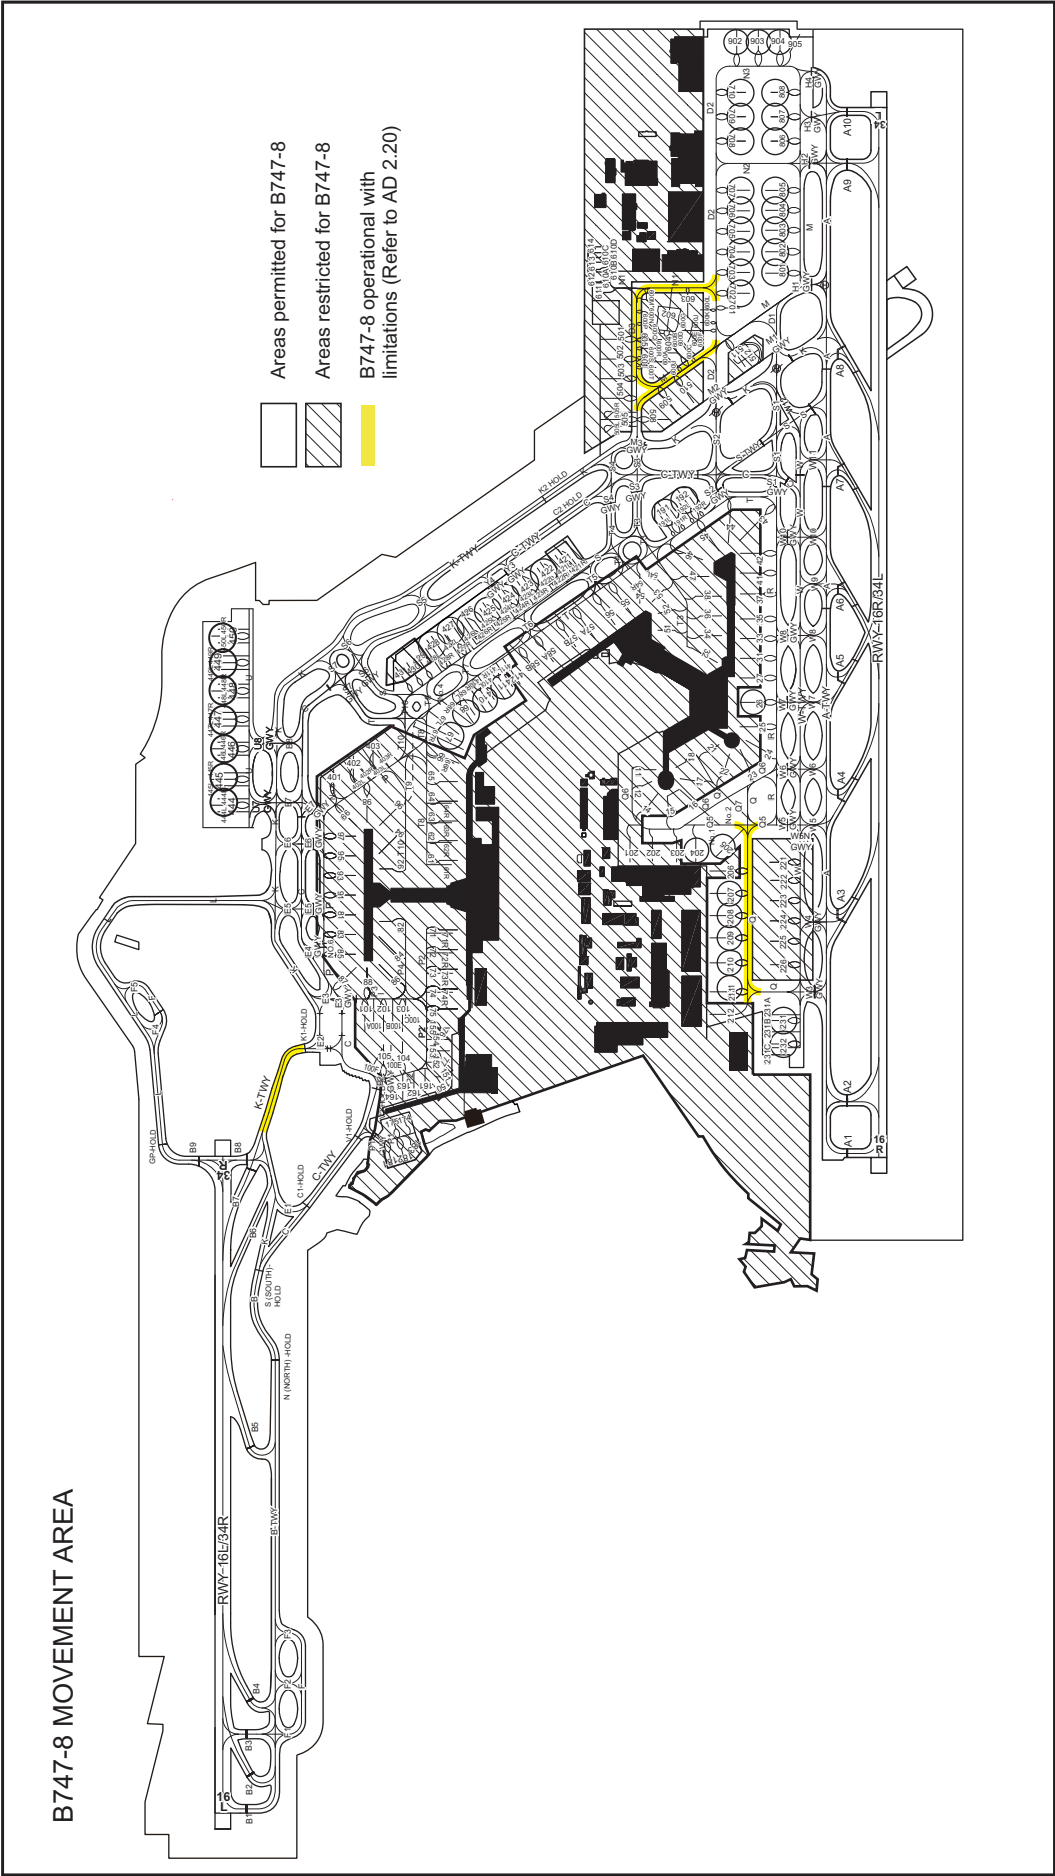

2. Taxiing to and from stands

2.1. GENERAL

1. Ramp control

(1) Ramp control services

With a view to ensuring a safe and smooth flow of aircraft traffic on the apron, the Narita International Airport Corporation operates an aeronautical station (Frequency : 121.6MHz and 121.75MHz, Call sign : NARITA RAMP CONTROL) and issues instruction, approval, and/or necessary information to aircraft ground-moved within the apron areas.

(2) Area of Competence

The area of competence is shown below. The Ramp Control will only issue such instruction, approval, and/or information, which are effective within the apron areas.

(3) Procedures

(A) Start-up Taxi Procedures for Departing Aircraft from Terminal Apron

- (a) Contact NARITA DELIVERY 15 minutes prior to starting engines. (see AD 2-46).
 - (b) When instructed by ATC, contact NARITA RAMP CONTROL on 121.6MHz or 121.75MHz for approval to start push-back or taxiing.
 - (c) Taxi is to be started from a safe position with due regard to the effects of engine exhaust blast.
 - (d) Unless otherwise specified by the "NARITA RAMP CONTROL", follow the route to the gateway (exit from/ entrance to apron) from the aircraft parking position, as shown on the Taxiing Charts.
 - (e) Expect instructions to contact NARITA GROUND on 121.95MHz or 121.85MHz before leaving apron.
 - (f) The name of the approaching gateway shall be reported at the initial contact with NARITA GROUND.
 - (g) To avoid frequency congestion, report the current ATIS code to NARITA GROUND upon initial contact.
- NOTE: DO NOT PROCEED INTO TAXIWAY WITHOUT TAXI INSTRUCTION FROM ATC.

(B) Taxi Procedures for Arriving Aircraft into Terminal Apron

- (a) When instructed by ATC, contact NARITA RAMP CONTROL on 121.6MHz or 121.75MHz for approval to continue taxiing into the apron.
- (b) The name of the approaching gateway shall be reported at the initial contact with NARITA RAMP CONTROL.
- (c) Unless otherwise specified by the "NARITA RAMP CONTROL", follow the route to the parking position from the gateway, as shown on the Taxiing Charts.
- (d) When holding at an apron stop bar shown on the above chart, stop the aircraft in front of stop bar lights.
- (e) When approaching the assigned parking position, reduce engine power to the extent practicable so as not to cause any hazard to others with due regard to exhaust blast.


NOTE: DO NOT PROCEED INTO APRON WITHOUT APPROVAL FROM RAMP CONTROL.

(C) Ground Movement of Aircraft other than Departing and Arriving Aircraft


Obtain an approval for taxi from the "NARITA RAMP CONTROL" prior to its start, then conform to the provisions of the paragraph (A) (Item (a), (b) and (g) are excluded) and (B).

(D) Ground Movement of Towed Aircraft


Towed aircraft is also subject to the Ramp Control. For details, see the Aircraft Operations Regulations (UNYOKANRI SAISOKU).

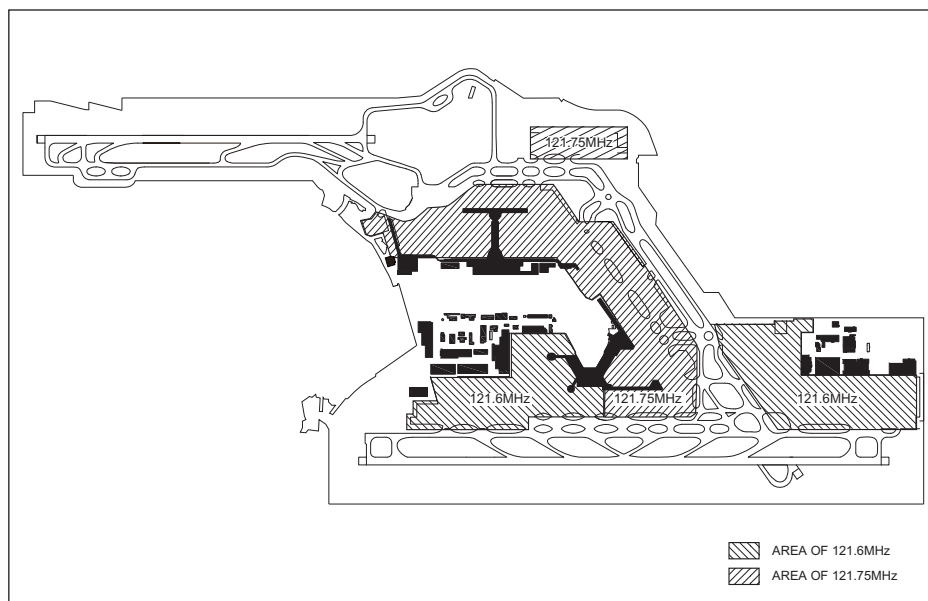


2.2. TAXIING CHART(16R ARRIVALS)

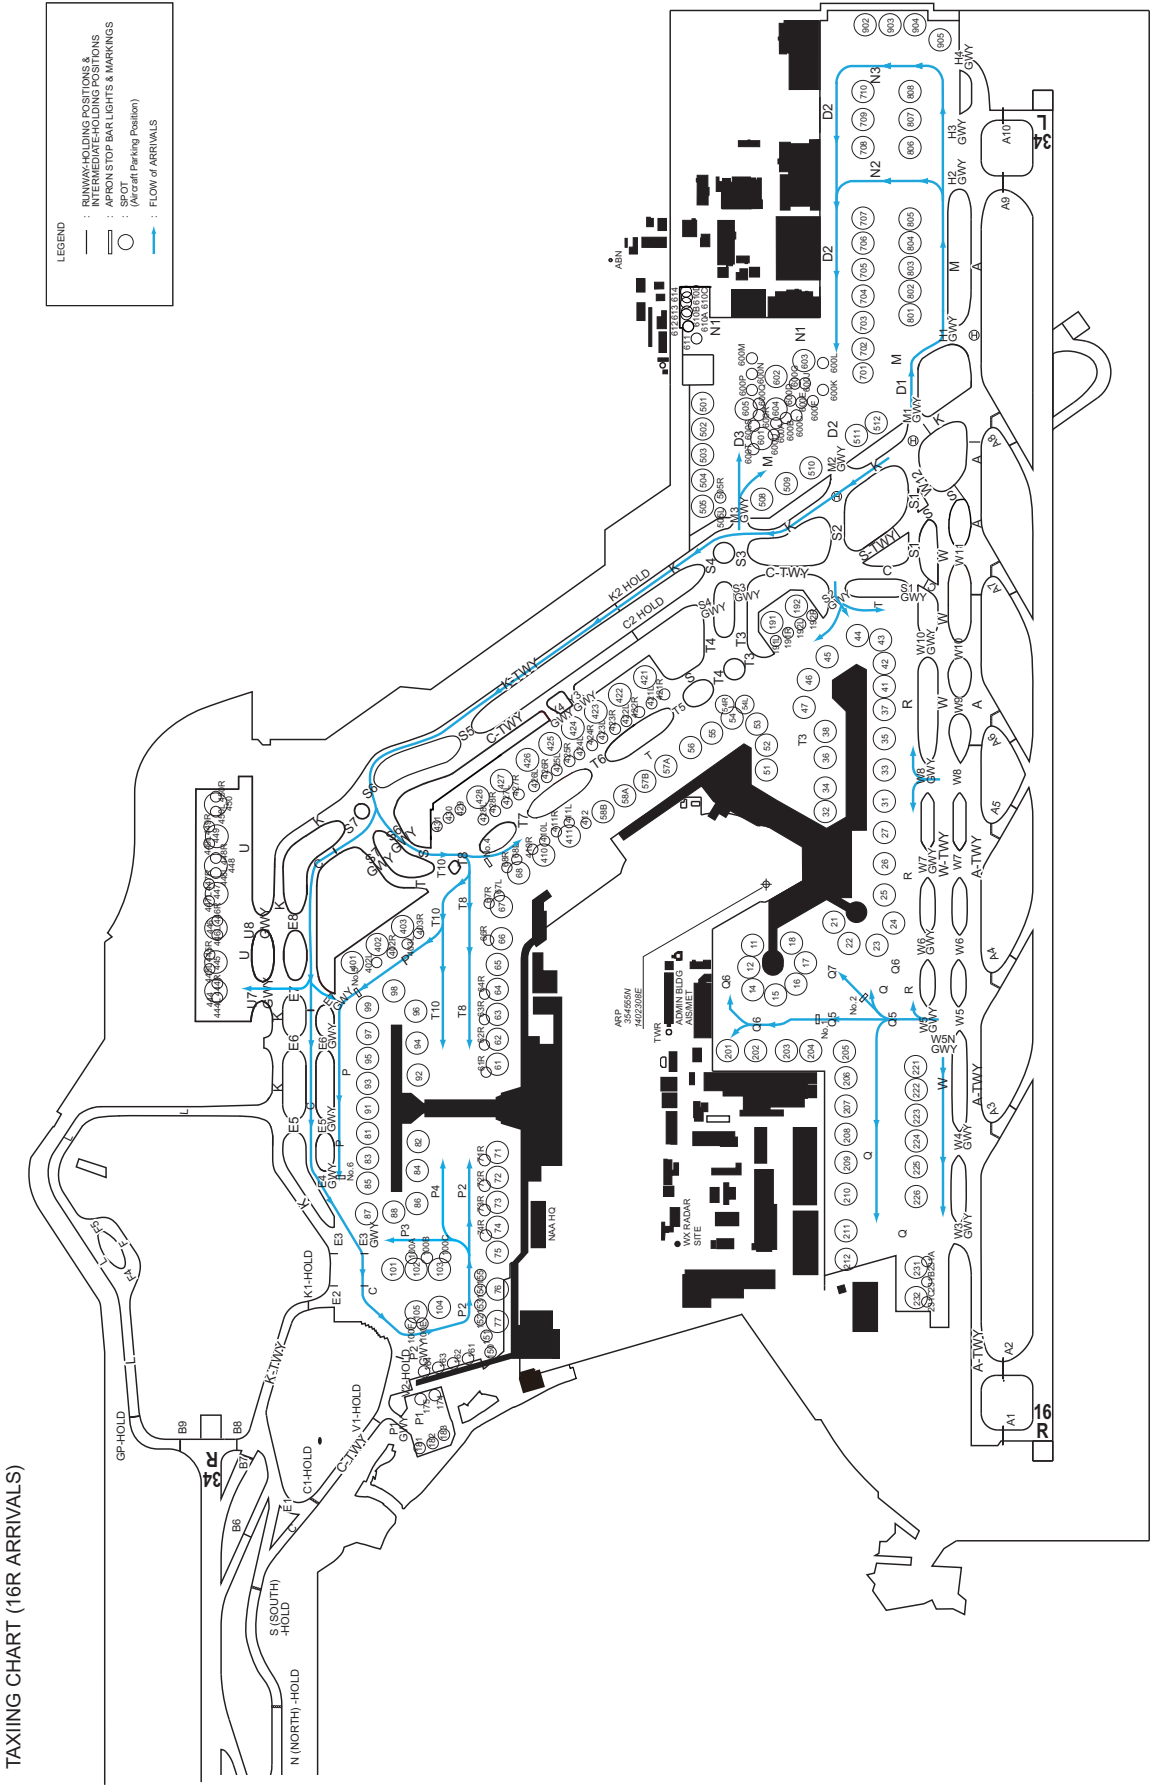


2.3. TAXIING CHART(16R DEPARTURES)

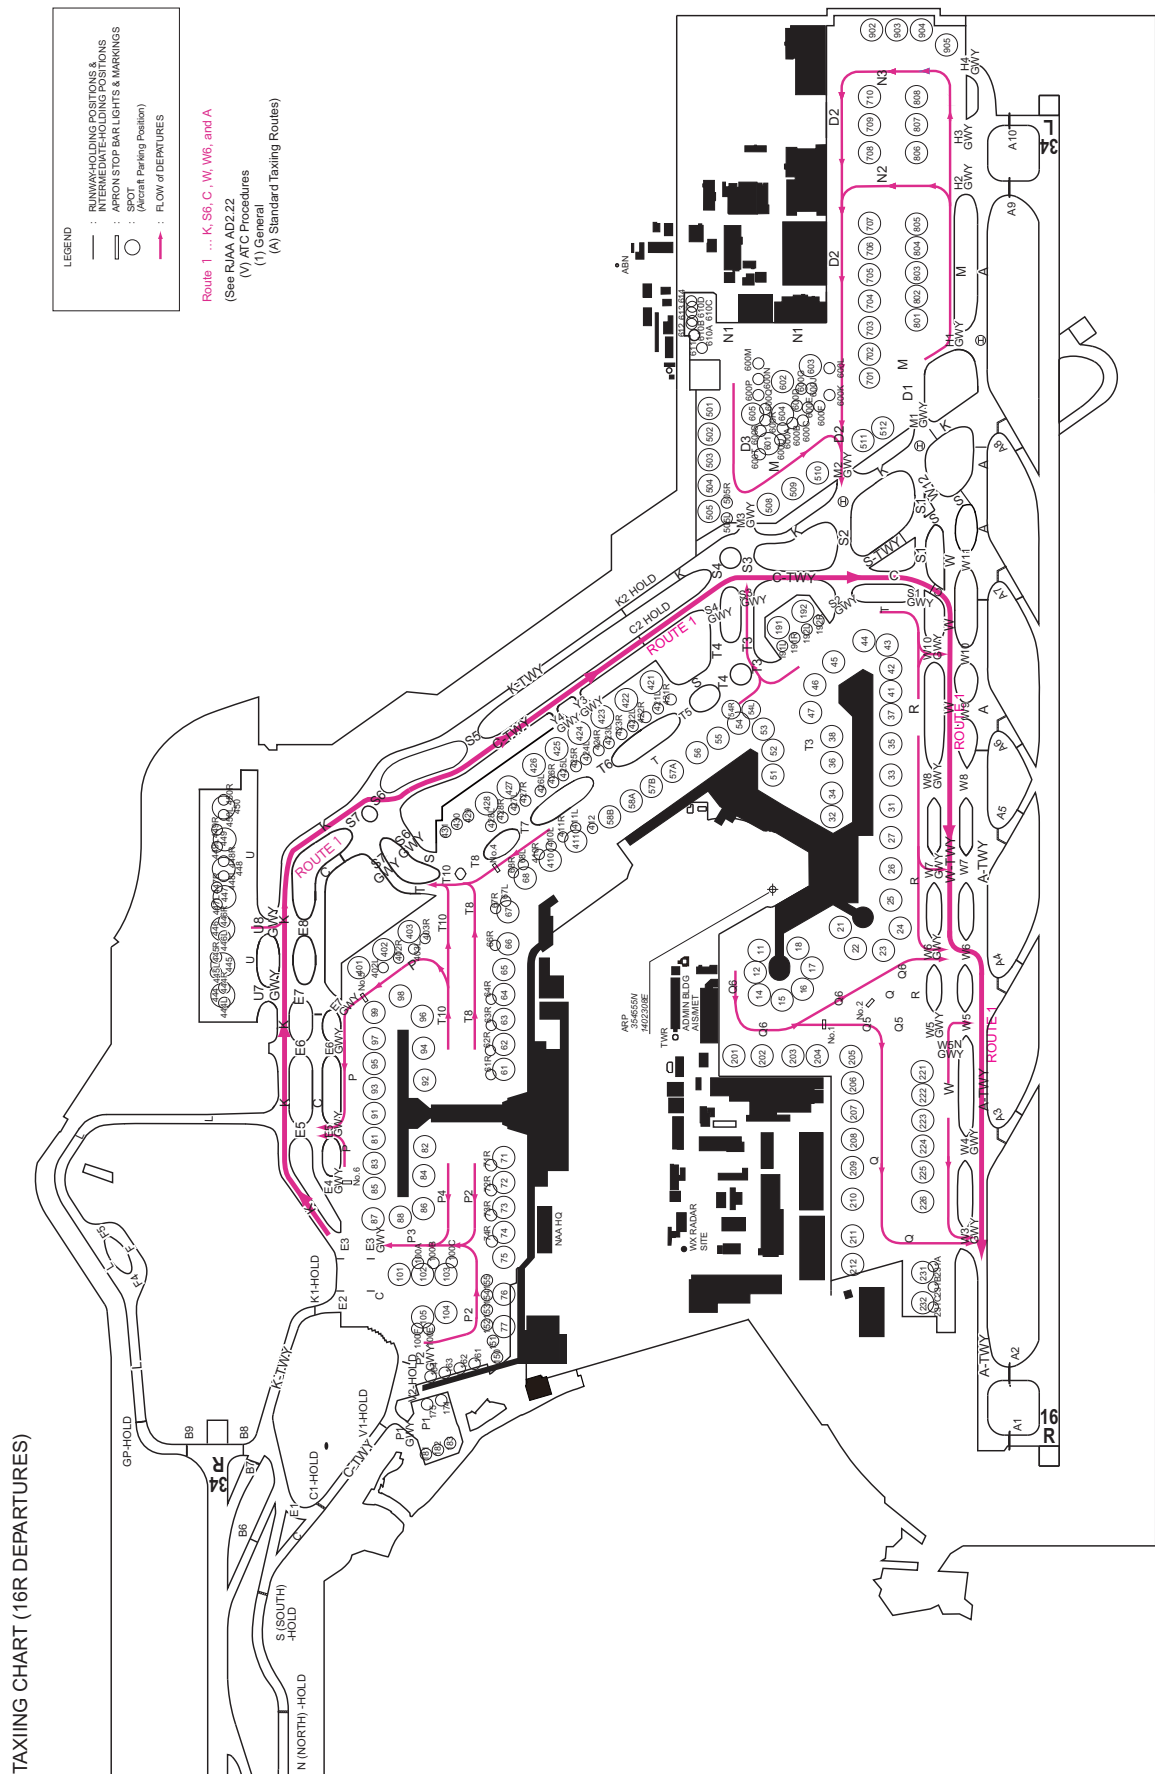


2.4. TAXIING CHART(34L ARRIVALS)

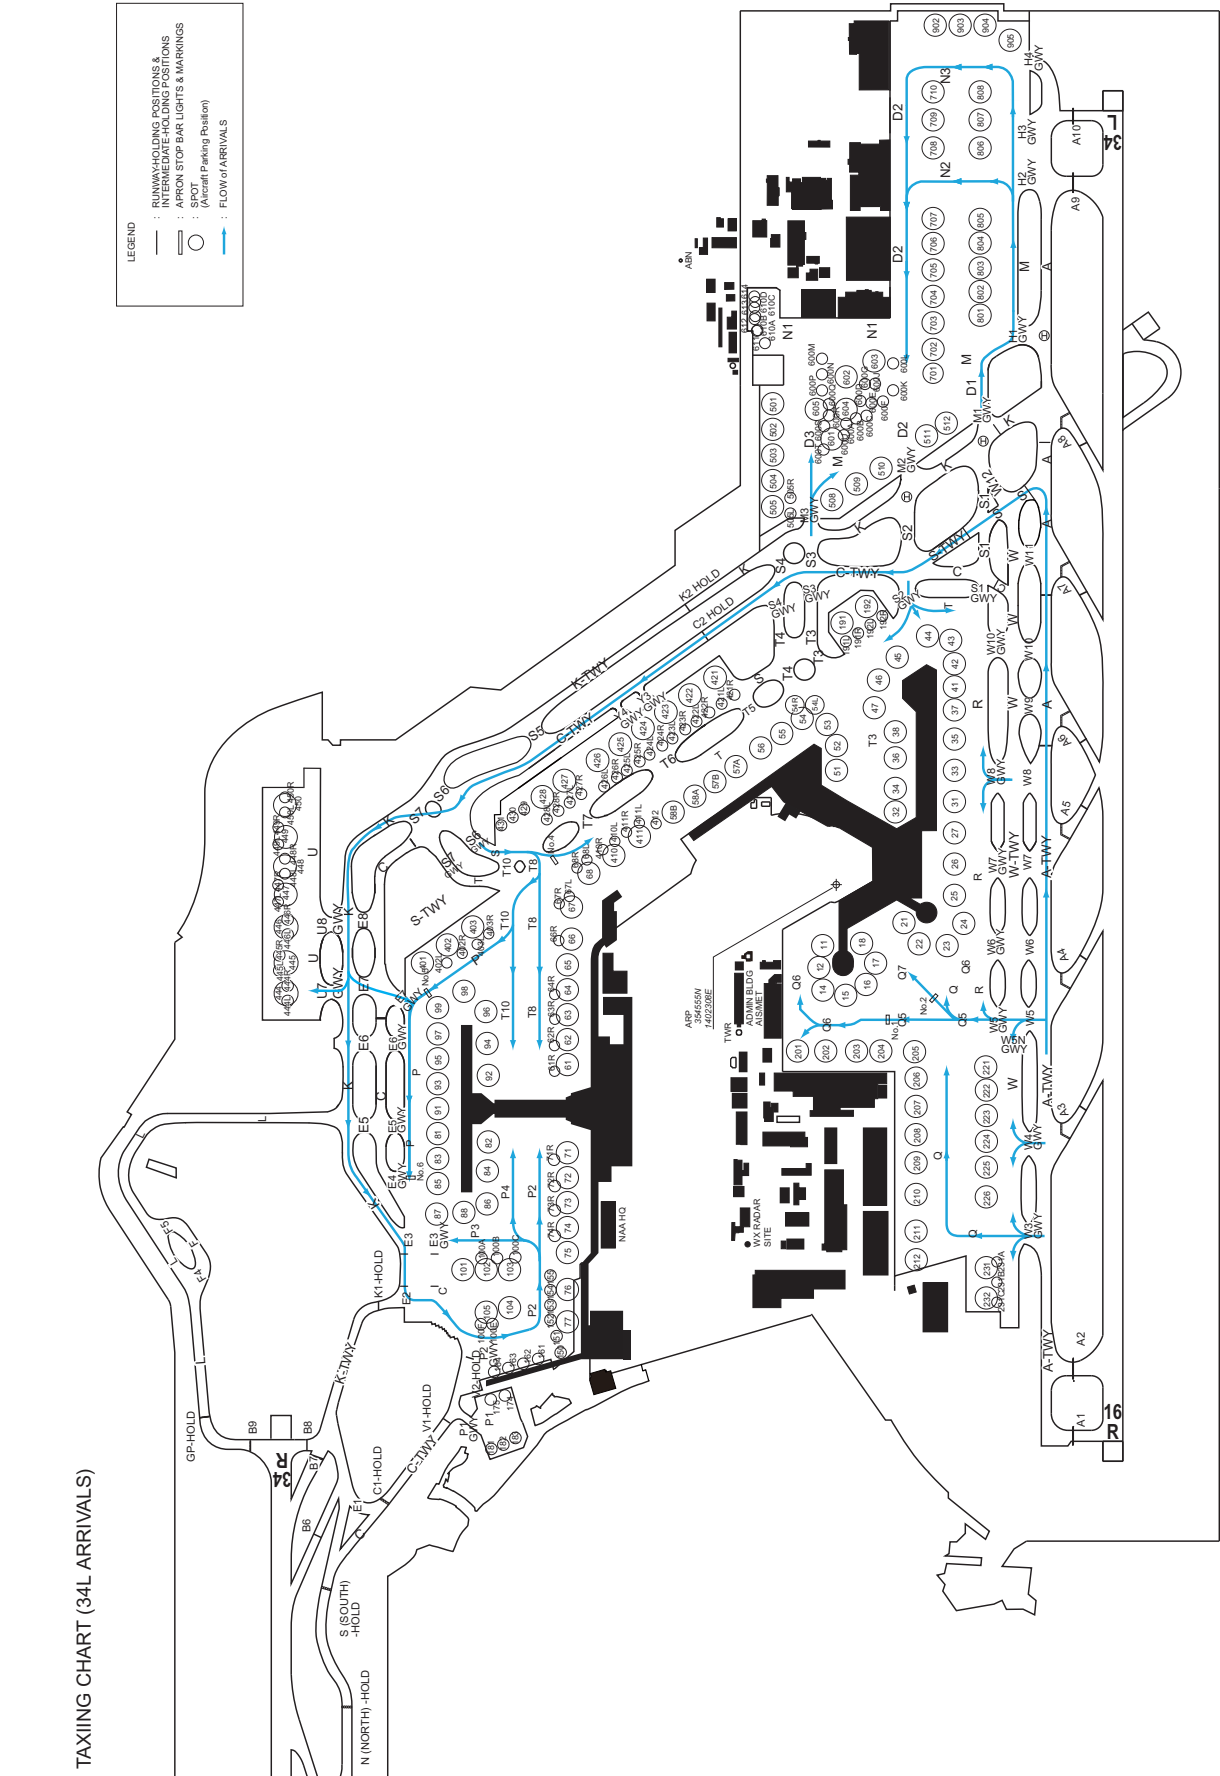


2.5. TAXIING CHART(34L DEPARTURES)

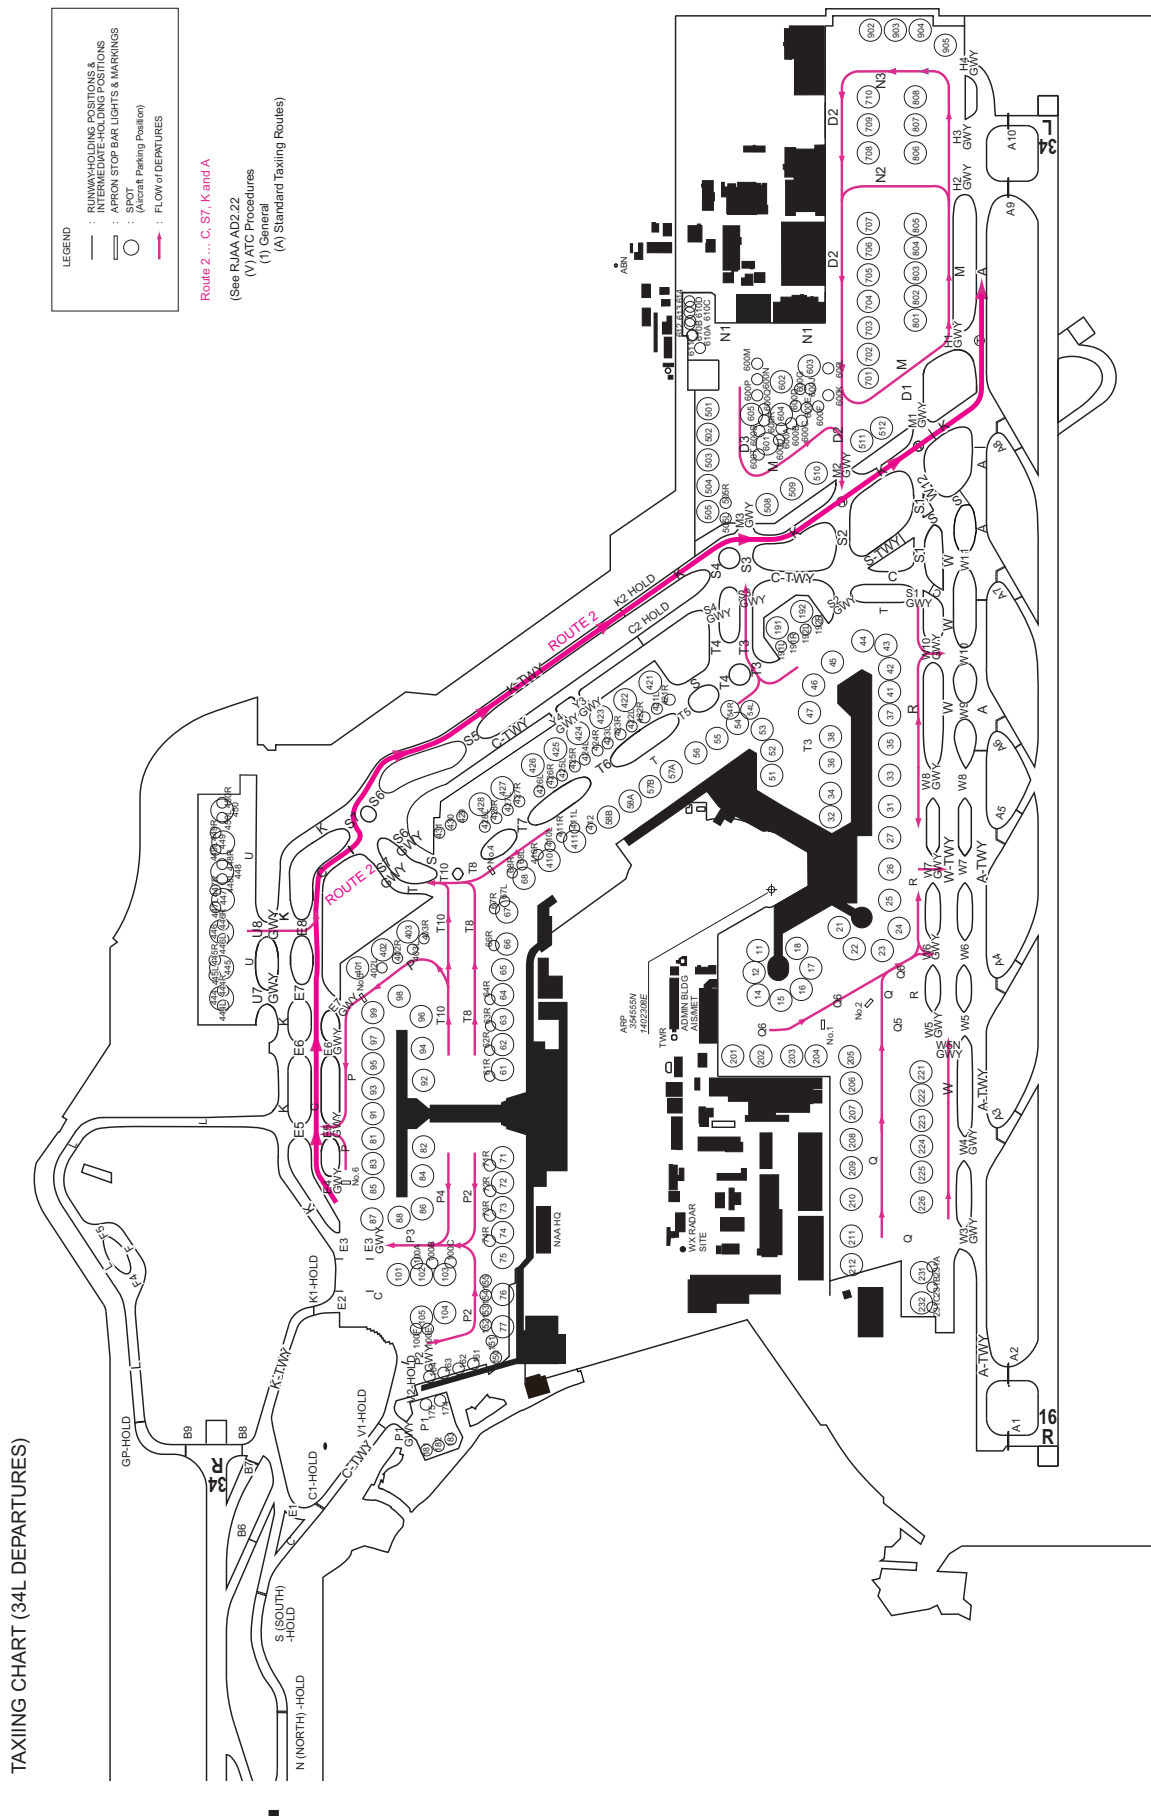


2.6. TAXIING CHART(16L ARRIVALS)

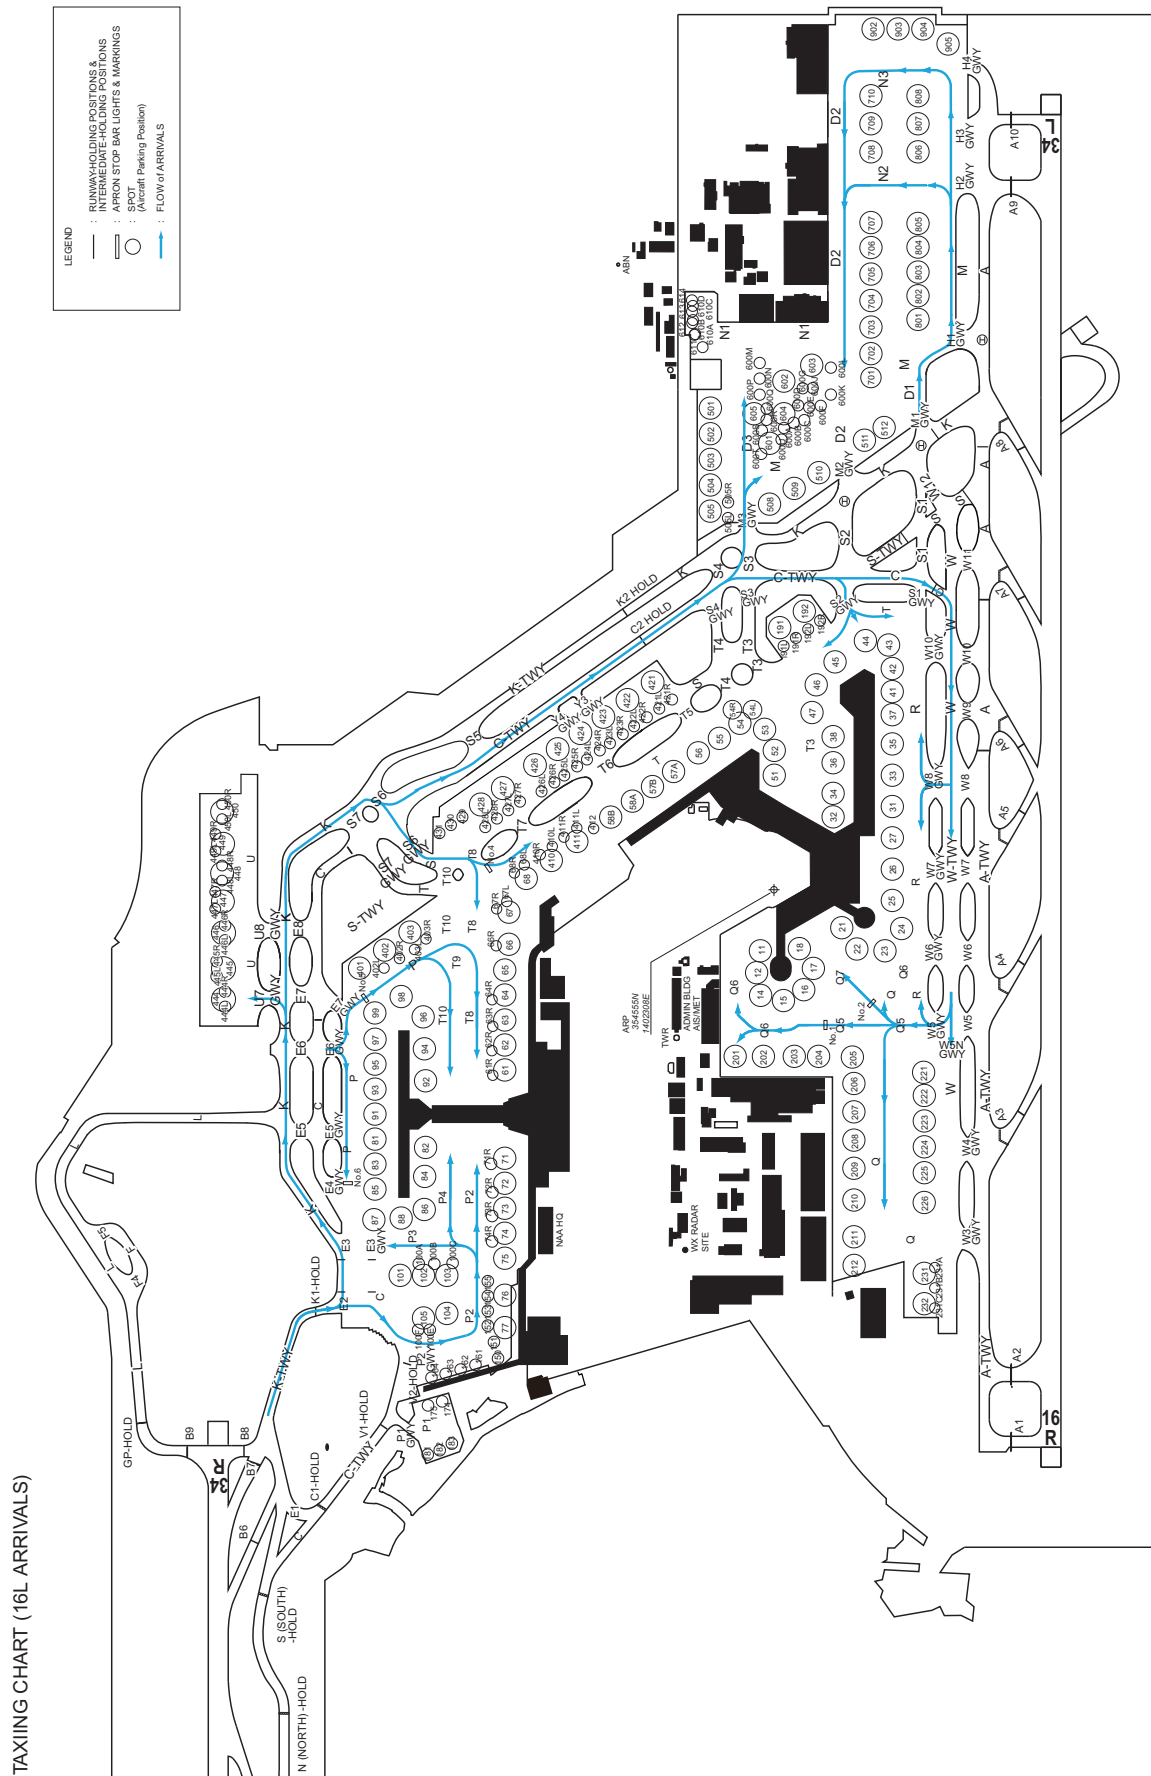


2.7. TAXIING CHART(16L DEPARTURES)

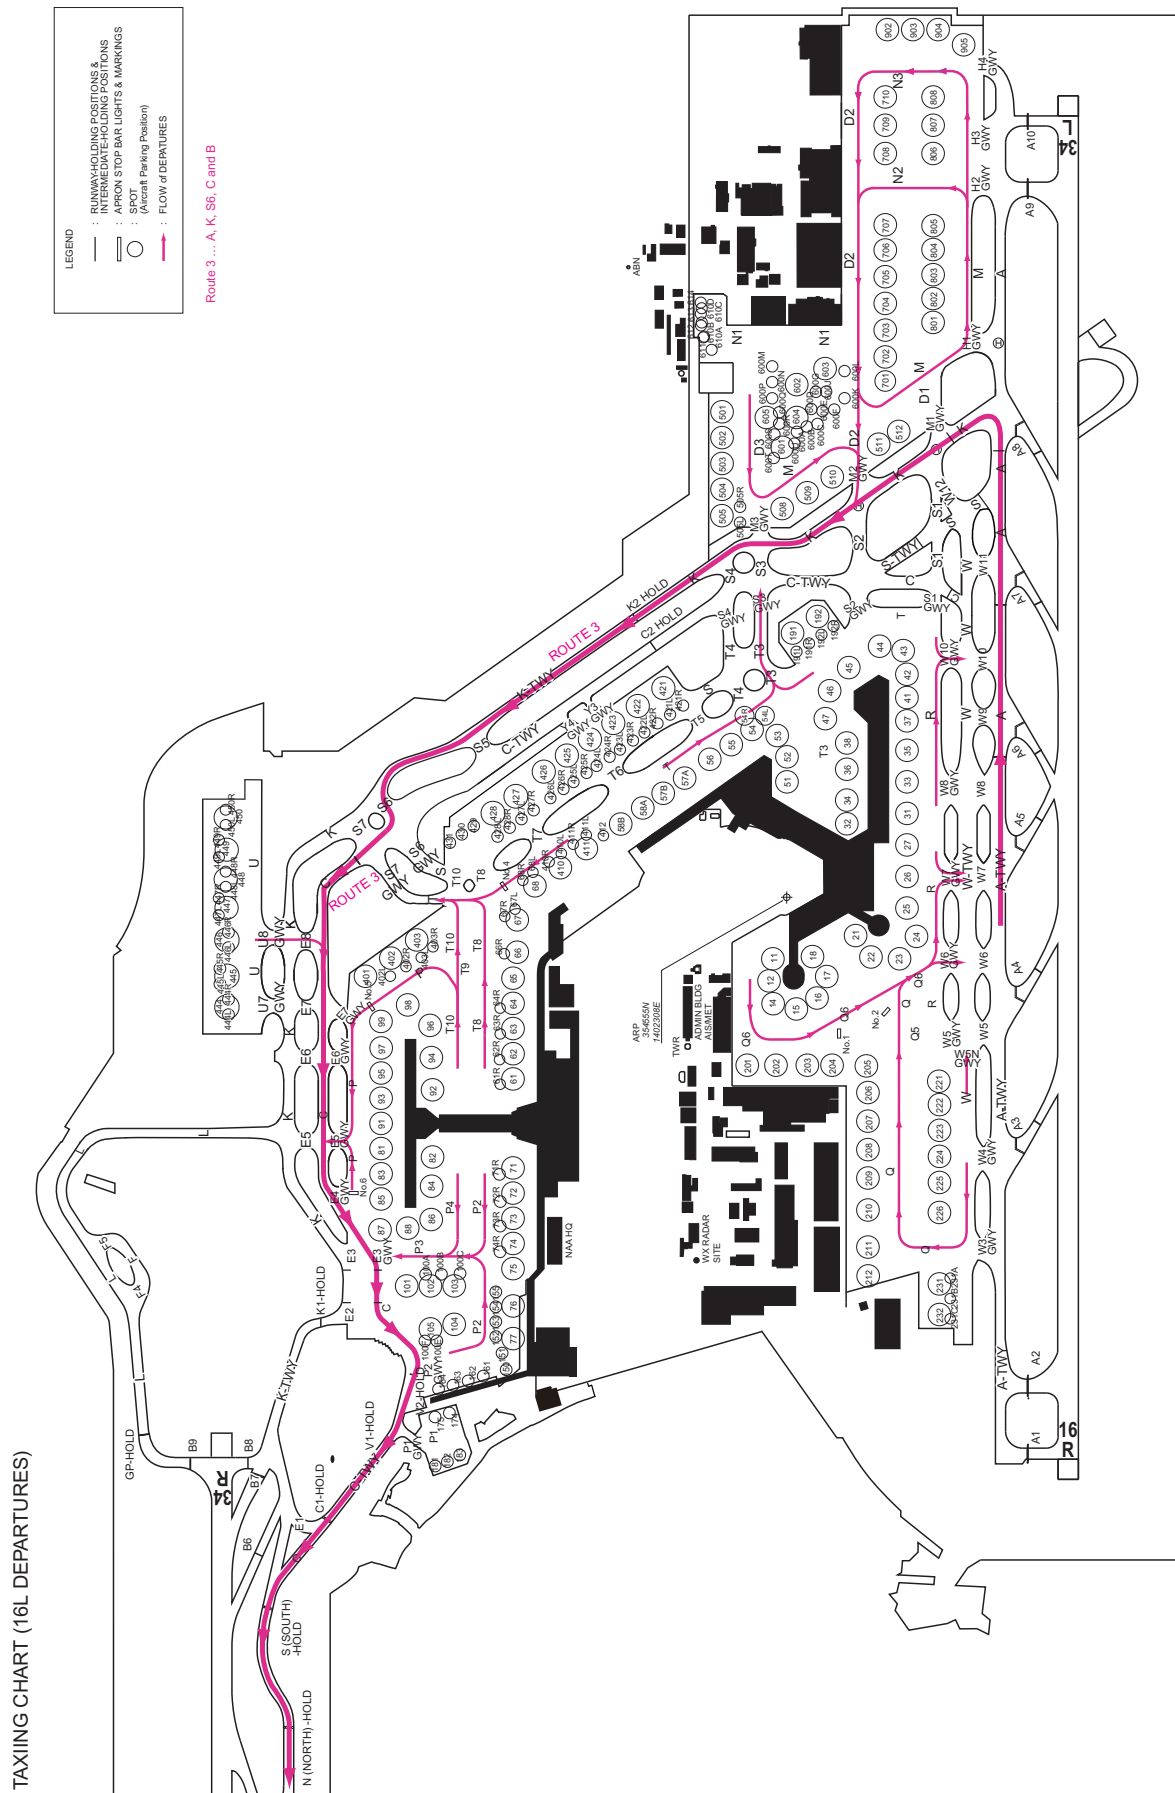


2.8. TAXIING CHART(34R ARRIVALS)

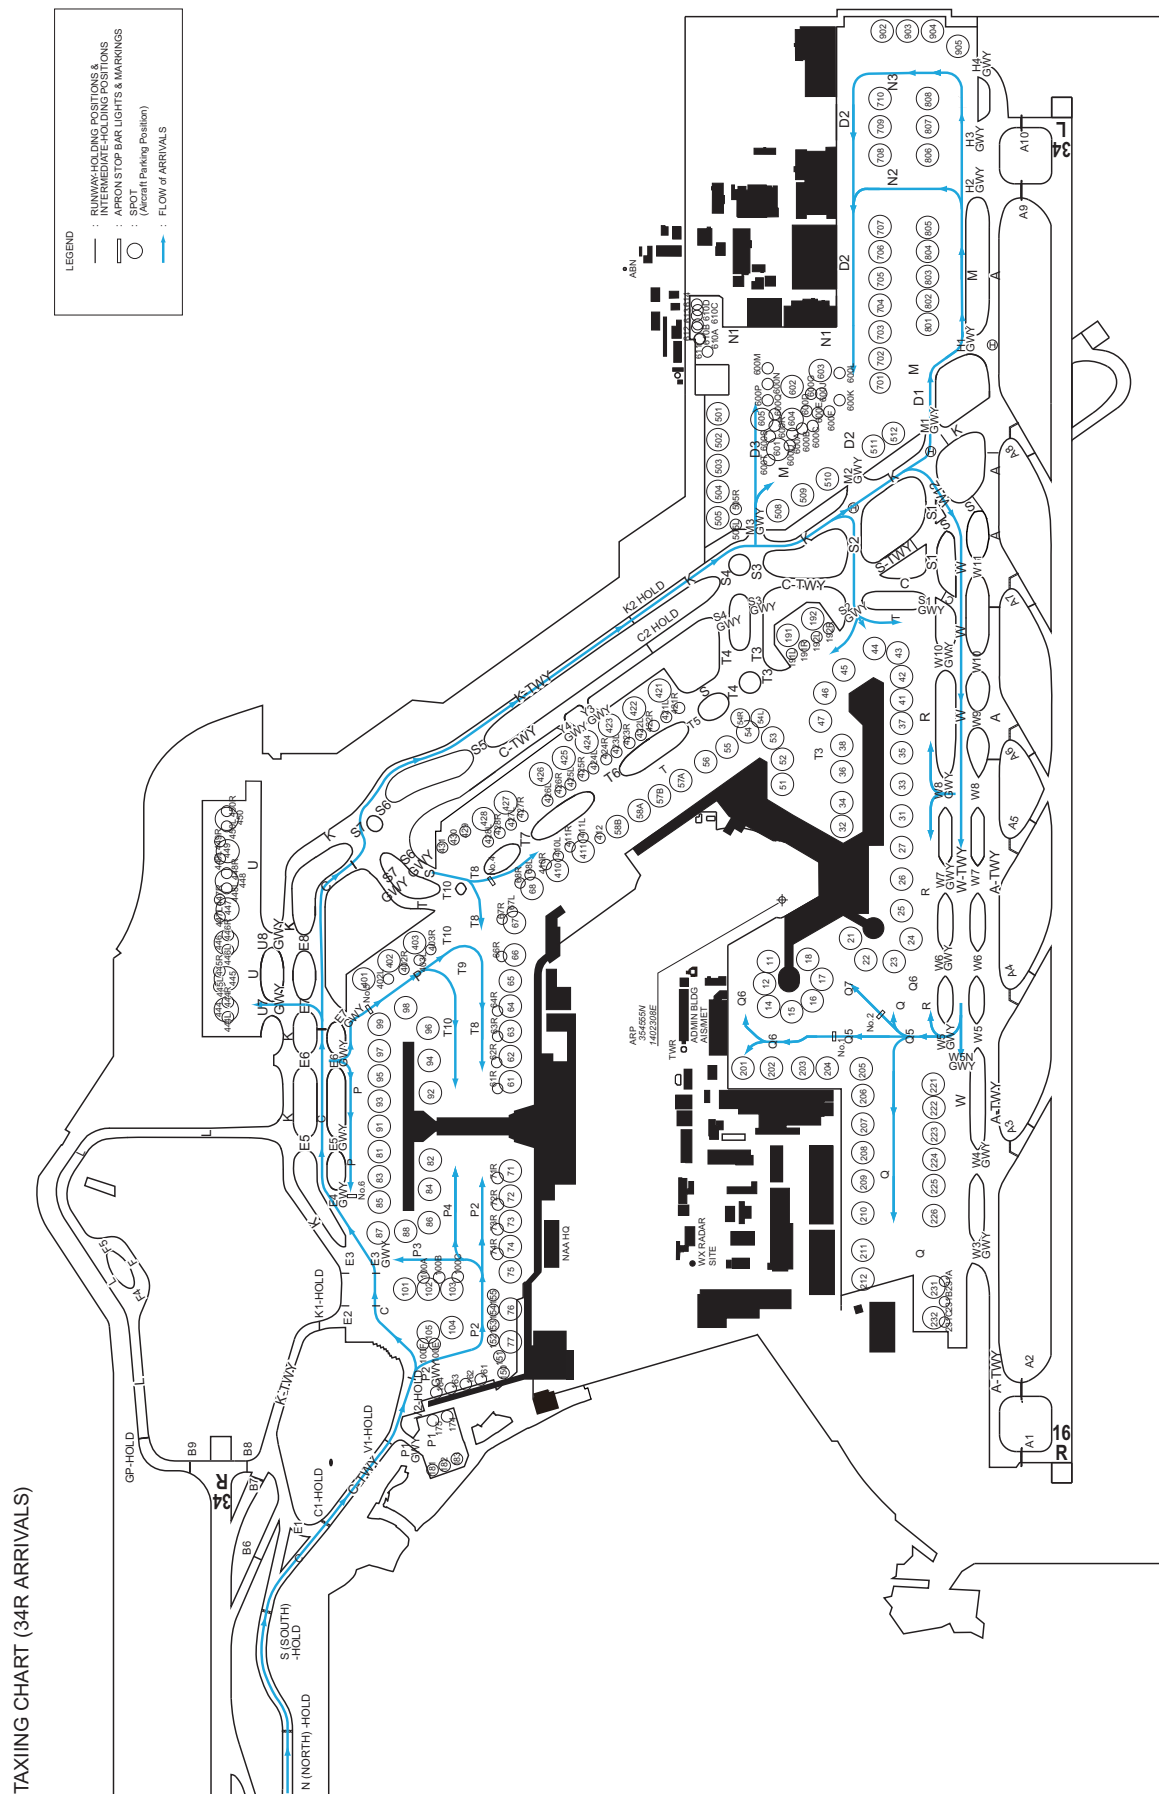

Civil Aviation Bureau, Japan (EFF:5 NOV 2020)

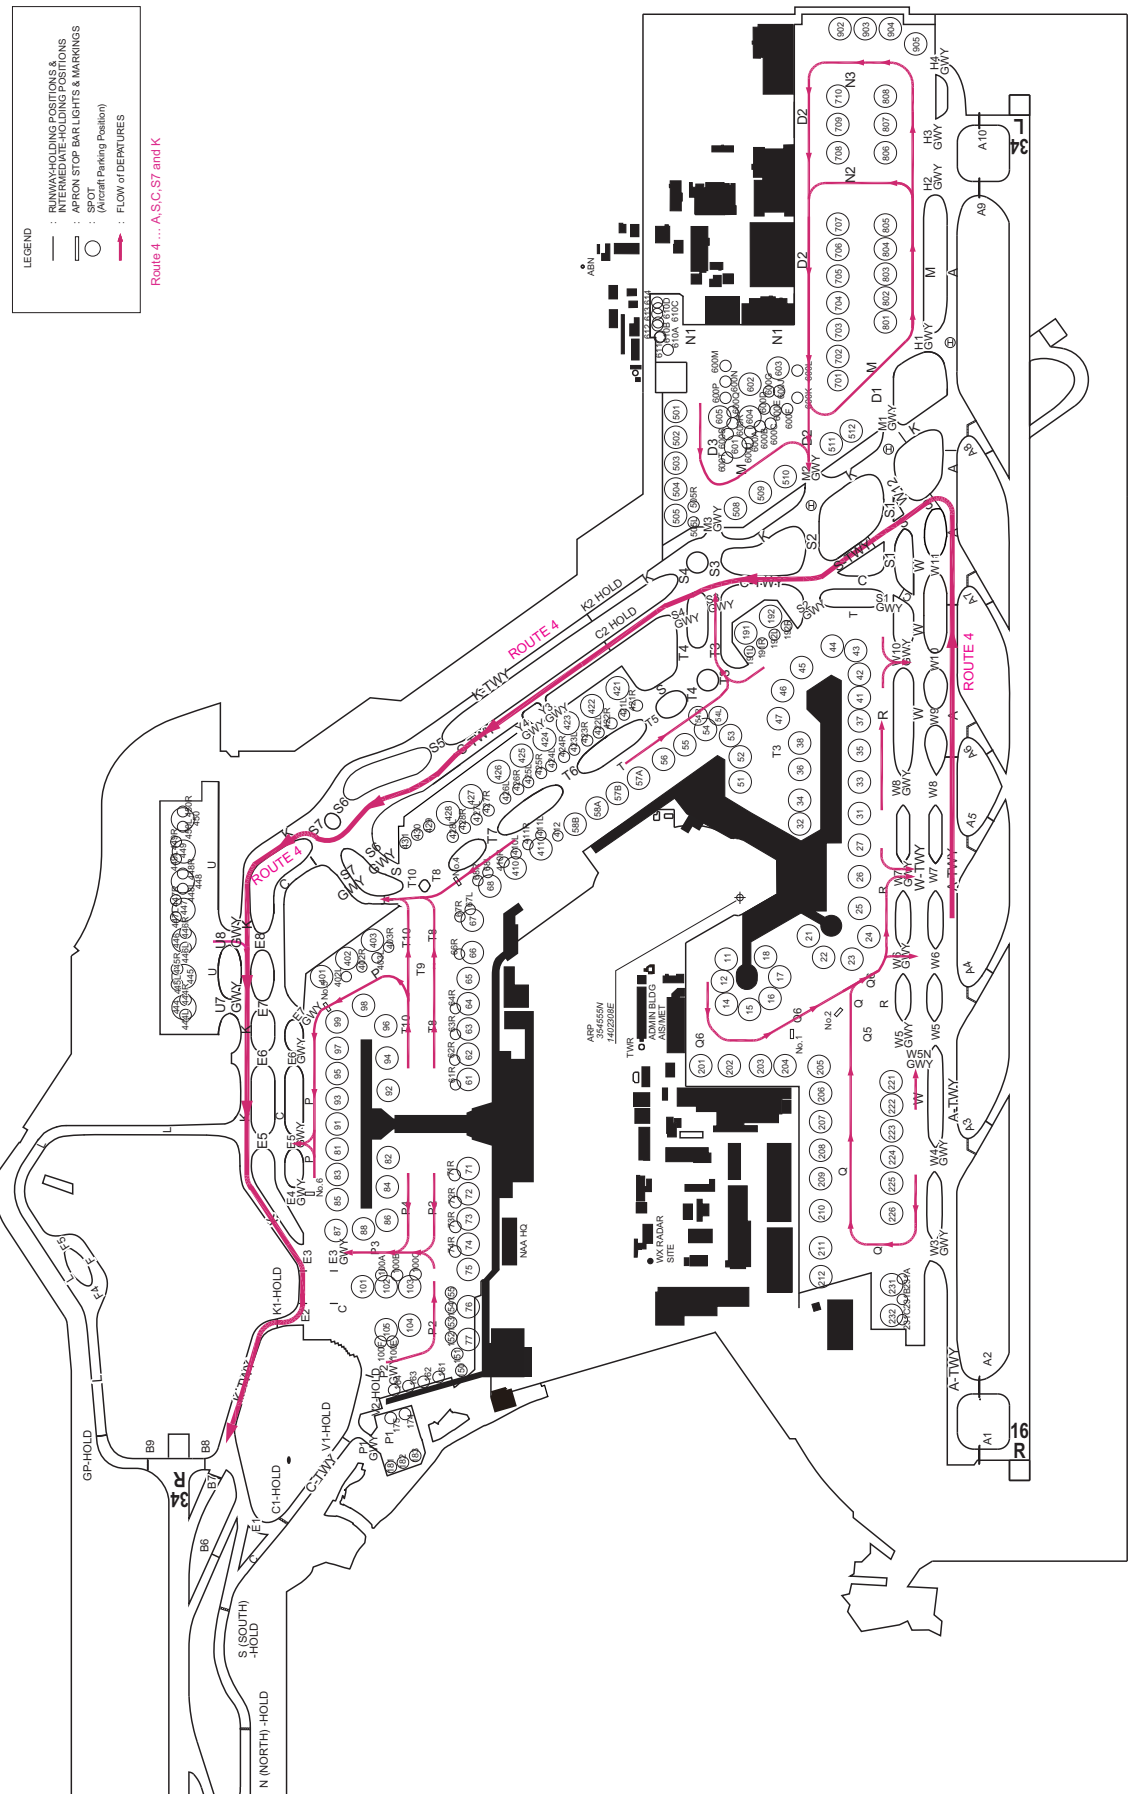


2.10. TAXIING ROUTES FOR CAT II/III OPERATIONS (ARRIVALS)

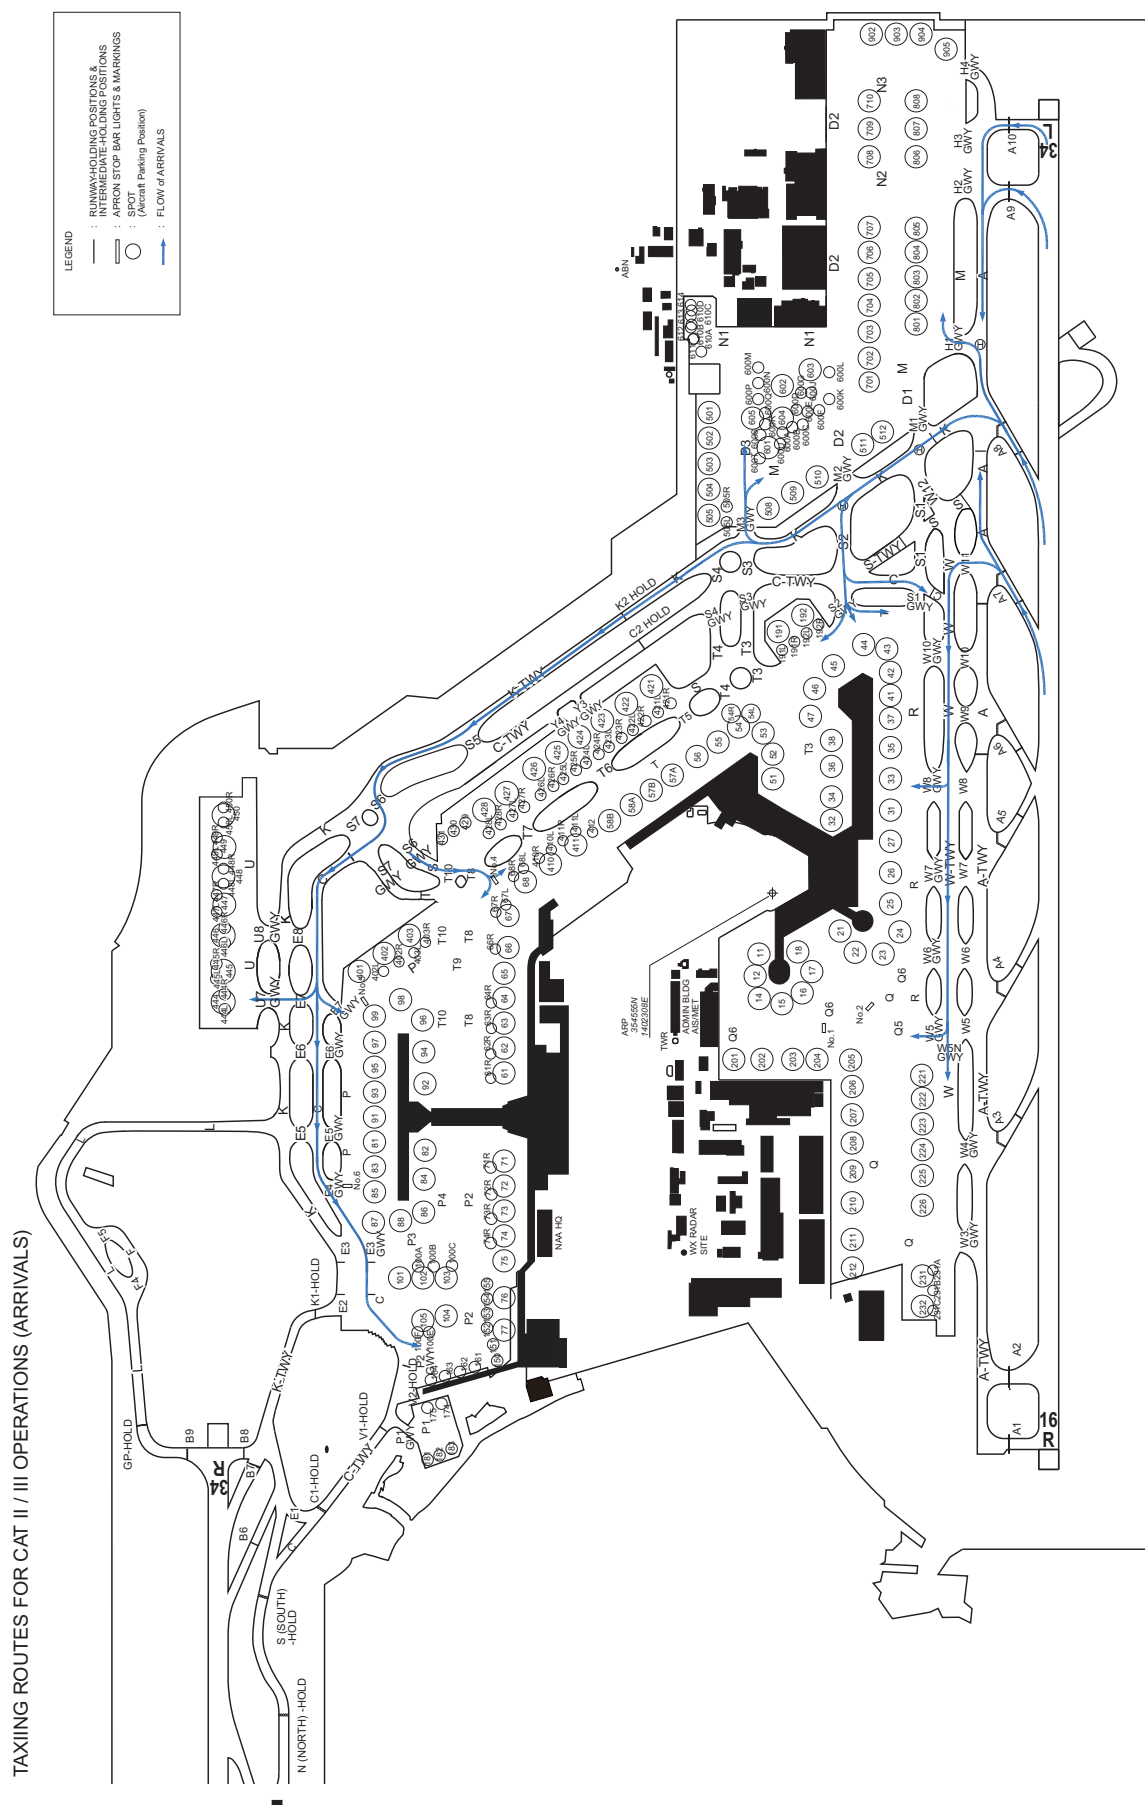

2.11. TAXIING ROUTES FOR CAT II/III OPERATIONS(DEPARTURES)

TAXIING ROUTES FOR CAT II / III OPERATIONS (DEPARTURES)

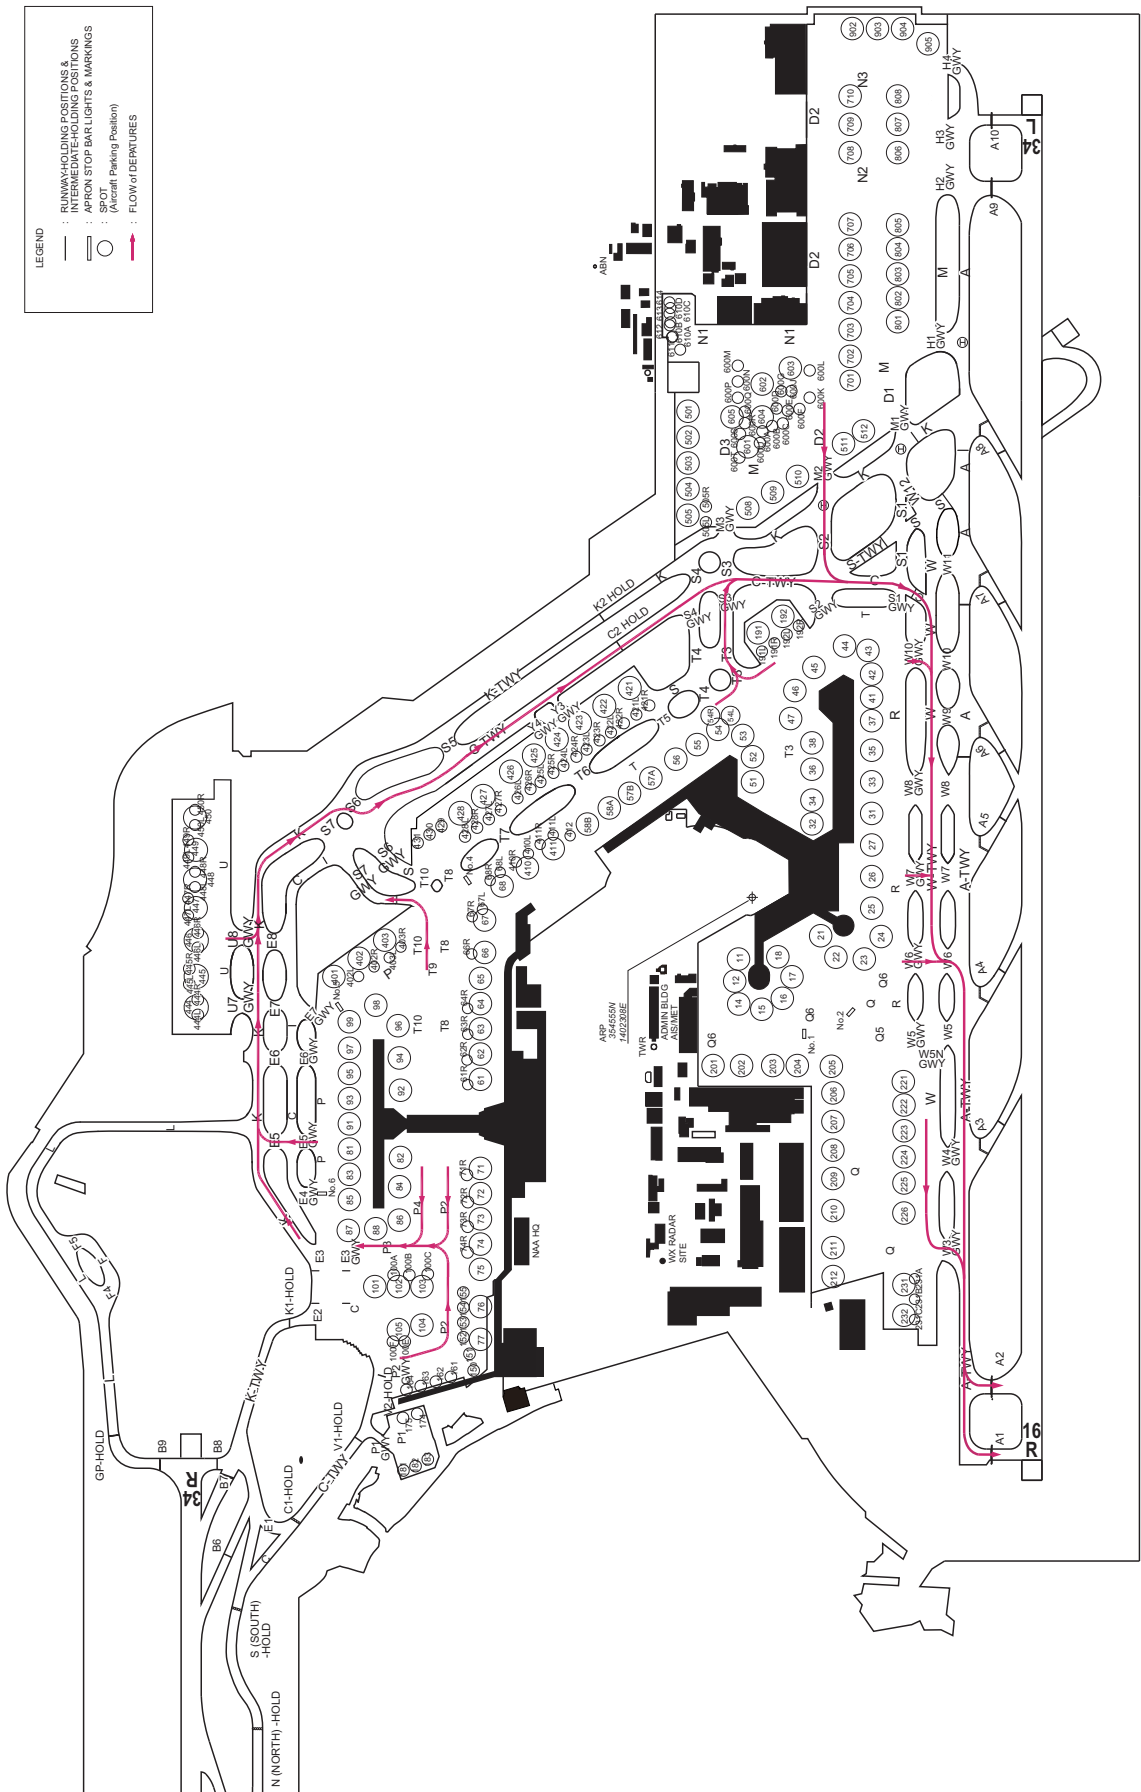

3. Parking area for small aircraft(General aviation)

Nil

4. Parking area for helicopters

Nil

5. Apron - taxiing during winter conditions

Nil

6. Taxiing - limitations

1. Wing tip clearance at the TWY intersection (REF AD1.1 6.8)

Wing tip clearance at the TWY intersection between the aircraft holding at the stop marking on the TWY and the other aircraft taxiing behind it are as follows.

(1) When B738 holding at the stop marking on TWY A2

Wing Span (WS) of aircraft taxiing on A TWY	WS ≤22.6m	22.6m < WS ≤39.6m	WS >39.6m
Wing tip clearance	*A	*B	*C

(2) When B738 holding at the stop marking on TWY A3

Wing Span (WS) of aircraft taxiing on A TWY	WS ≤24m	24m < WS ≤41m	WS >41m
Wing tip clearance	*A	*B	*C

(3) When B738 holding at the stop marking on TWY A4

Wing Span (WS) of aircraft taxiing on A TWY	WS ≤24m	24m < WS ≤41m	WS >41m
Wing tip clearance	*A	*B	*C

(4) When B738 holding at the stop marking on TWY A5

Wing Span (WS) of aircraft taxiing on A TWY	WS ≤24m	24m < WS ≤41m	WS >41m
Wing tip clearance	*A	*B	*C

(5) When B738 holding at the stop marking on TWY A6

Wing Span (WS) of aircraft taxiing on A TWY	WS ≤24m	24m < WS ≤41m	WS >41m
Wing tip clearance	*A	*B	*C

(6) When B738 holding at the stop marking on TWY A7

Wing Span (WS) of aircraft taxiing on A TWY	WS ≤24m	24m < WS ≤41m	WS >41m
Wing tip clearance	*A	*B	*C

- (7) When B738 holding at the stop marking on TWY A8

Wing Span (WS) of aircraft taxiing on A TWY	WS ≤ 24m	24m < WS ≤ 41m	WS > 41m
Wing tip clearance	*A	*B	*C

- (8) When B738 holding at the stop marking on TWY A9

Wing Span (WS) of aircraft taxiing on A TWY	WS ≤ 24m	24m < WS ≤ 41m	WS > 41m
Wing tip clearance	*A	*B	*C

- (9) When B738 holding at the stop marking on TWY B3

Wing Span (WS) of aircraft taxiing on B TWY	WS ≤ 84m
Wing tip clearance	*A

Legend:

*A:wing tip clearance ≥ 15m
 *B:6.5m ≤ wing tip clearance < 15m
 *C:wing tip clearance < 6.5m

2. On TWY K between E2 and B8 (See RJAA AD2.24 AD Chart)

- Larger aircraft (such as B747-8, A340-600, B747-400, B777-200LR, B777-300/300ER and B777F) needs to reduce taxiing speed so as to accurately track the center line, as separation between either wing tip and the boundary fence in certain areas of the taxiway is limited to 10.5m.

3. MD11/DC10 operations on RWY 16L/34R

- MD11/DC10 needs to taxi with its center engine at idle on TWY B between F3 and K, TWY K between B and E2, in order to prevent jet blast.
- MD11/DC10 can not enter RWY16L/34R from B8, due to jet blast.

4. Restricted taxiways

- While taxiing in the apron area, follow yellow guideline strictly.
In addition, taxiing behind the spot 76 and 77, in order to keep clearance between other aircraft or obstacle, the aircraft with wingspan of 60m or longer shall reduce taxiing speed and follow the taxiway center line strictly.
- All aircraft for runway 34R shall hold at "GP HOLD" on TWY L until receiving further taxi clearance to protect ILS glide slope signal.
- Only the aircraft with wingspan less than 36m can taxi on TWY P1.

5. On Y3-GWY and Y4-GWY

- Only when the aircraft with wingspan less than 36m is approved by ramp control, traffic to C TWY from the apron throughout Y3-GWY and Y4-GWY is permitted.
Traffic to the apron from C TWY is not possible.

6. Taxilane

- On Taxilane T9, only A380 is permitted to taxi for NR96. (Taxilane T9 marking is blue.)

7. School and training flights - technical test flights - use of runways

Nil

8. Helicopter traffic - limitation

Nil

9. Removal of disabled aircraft from runways

Nil

RJAA AD 2.21 NOISE ABATEMENT PROCEDURES

<p>(I) 騒音軽減運航方式</p> <p>(A) 空港周辺地域の航空機騒音を最小にするため、全ての乗員が次に掲げる運航方式、又は、これらの方式と同等の効果がある他の適切な方式を採用するよう強く求めるものである。ただし、これらの方式採用の最終的な権限はそれぞれの機長に委ねられており、機長が安全上の理由により必要と判断する場合は他の方式を採用することができる。</p> <p>1) 離陸について</p> <p>a) 離陸より 1500 フィート AGL(1635 フィート MSL) まで</p> <ul style="list-style-type: none"> — 離陸推力 — 離陸フラップまたは騒音軽減のための最適フラップ — 最大上昇勾配が得られる速度（機体姿勢角の制限範囲内であること） <p>例 .V2+10kt または 1.3Vs のうちいずれか大きい速度での上昇</p> <p>b) 1500 フィート AGL(1635 フィート MSL) において</p> <ul style="list-style-type: none"> — 上昇推力を下回らない出力まで減少 — a) と同様なフラップ及び速度 <p>c) 3000 フィート AGL(3135 フィート MSL)、またはそれ以上において</p> <ul style="list-style-type: none"> — 運航上昇のための通常速度及びフラップ上げ操作 <p>2) 進入について</p> <p>（ディレイド・フラップ進入及び低フラップ角着陸でのフラップ角設定）</p> <p>a) 次の地点を通過後、最終着陸フラップ角とすること。</p> <p>IKF から 4DME(RWY16R)、ITM から 4DME(RWY16L)、ITJ から 4DME(RWY34R)、IYQ から 4DME(RWY34L)</p> <p>b) 該当する条件に対して、飛行規程で承認された性能資料に規定されている最小着陸フラップ角を最終着陸フラップ角とすること。</p> <p>(B) 優先滑走路方式</p> <p>なし</p> <p>(C) 優先飛行経路</p> <p>なし</p>	<p>(II) Noise abatement Operating Procedures</p> <p>(A) It is strongly requested of all pilots to apply the following procedures, or any other appropriate procedures which are in effect equivalent to these procedures, in order to minimize public annoyance due to aircraft noise in the vicinity of the airport.</p> <p>The final authority to apply these procedures, however, rests on each pilot in command, and he may use other appropriate procedures if he determines it is necessary in the interest of safety.</p> <p>1) Take-off</p> <p>a) Take-off to 1500ft AGL(1635ft MSL)</p> <ul style="list-style-type: none"> • take-off power • take-off flaps or optimum flap setting for noise reduction. • climb at speed to gain maximum climb angle or as limited by body angle. <p>e.g. V2+10kt or 1.3Vs whichever is greater</p> <p>b) At 1500ft AGL(1635ft MSL)</p> <ul style="list-style-type: none"> • reduce power to not less than climb power • flaps and speed same as in a) <p>c) At 3000ft AGL(3135ft MSL) or above</p> <ul style="list-style-type: none"> • normal speed and flap retraction schedule to enroute climb <p>2) Approach (delayed flap and reduced flap setting)</p> <p>a) Extend final landing flaps after passing 4DME from IKF for RWY16R, 4DME from ITM for RWY16L, 4DME from ITJ for RWY34R or 4DME from IYQ for RWY34L.</p> <p>b) Use, as the final landing flap setting, the minimum certificated landing flaps setting forth in the approved performance information in the Airplane Flight Manual for the applicable conditions.</p> <p>(B) Preferential Runways Procedures</p> <p>Nil</p> <p>(C) Noise Preferential Routes</p> <p>Nil</p>
---	--

(II) Other Information

(A) Notwithstanding item (C), for improvement of noise abatement procedures, all aircraft departing from Narita International Airport strictly follow extension of the runway center line until passing 14DME from NRE for RWY16R, 15.4DME from HKE for RWY16L, 6DME from NRE for RWY34L or 3.9DME from HKE for RWY34R.

(B) Aircraft engine ground run-up

In order to minimize noise disturbance in areas adjacent to this Airport, ground run-up of aircraft engine(s) is controlled in accordance with instructions specified in Narita International Airport Administrative Regulations (KUKO KANRI KITEI).

(C) Observance of the flight routes

Unless otherwise instructed by ATC or under unavoidable circumstances, all aircraft arriving at and/or departing from the airport, over the inland area, are requested to follow the routes as prescribed in STARs and SIDs.

(D) Restrictions about the use of auxiliary power unit (APU)

When an aircraft is using an aircraft parking stand with fixed power facilities, APU shall not be used outside the time periods specified below except when specifically acknowledged by the authority as necessary.

- Less than 30 minutes prior to the estimated time of departure.
- The minimum time required for switching over to the fixed power facilities, after arrival at the parking stand.
- For the minimum time required for aircraft maintenance purposes if needed.

NOTE: Spot 11, 12, 14 - 18, 21 - 27, 31 - 38, 41 - 47, 51 - 56, 57A, 57B, 58A, 58B, 61 - 68, 71 - 77, 81 - 88, 91 - 99, 151 - 155, 161 - 164, 174, 175, 201 - 204, 206 - 212, 221-226, 231, 232, 410, 411 are aircraft parking stands with fixed power facilities.

RJAA AD 2.22 FLIGHT PROCEDURES

(I) TAKE OFF MINIMA

	RWY	ACFT CAT	REDL & RCLL		REDL or RCLL or RCL Marking		NIL (DAYTIME ONLY)	
			CEIL-RVR	CEIL-VIS	CEIL-RVR	CEIL-VIS	CEIL-RVR	CEIL-VIS
Multi-Engine ACFT with TKOF ALTN AP FILED	16R	A,B,C	0' - 400m * 0' - 200m **0' - 150m	0' - 400m * 0' - 200m	0' - 400m * 0' - 250m	0' - 400m * 0' - 250m	-	0' - 500m
		D	0' - 400m * 0' - 250m **0' - 200m	0' - 400m * 0' - 250m	0' - 400m * 0' - 300m	0' - 400m * 0' - 300m	-	0' - 500m
	34L	A,B,C,D	0' - 400m	0' - 400m	0' - 400m	0' - 400m	-	0' - 500m
	16L	A,B,C,D	200' - 1600m	200' - 1600m	200' - 1600m	200' - 1600m	-	200' - 1600m
	34R	A,B,C,D	0' - 400m	0' - 400m	0' - 400m	0' - 400m	-	0' - 500m
OTHER	16R	A,B,C,D	AVBL LDG MINIMA					
	34L							
	16L							
	34R							

* APPLICABLE WHEN SSP IN FORCE.

** APPLICABLE WHEN SSP IN FORCE and MULTIPLE RVRs AVAILABLE.

(II) Lost communication procedures for arrival aircraft under radar navigational guidance

If radio communications with Tokyo Approach/Radar are lost for 1 minute, squawk Mode A/3 Code 7600 and;

1. Contact Narita Tower.
2. If unable, proceed in accordance with visual flight rules.
3. If unable,
 - (1) RWY 34L/R; proceed to GIINA at last assigned altitude or 4,000 feet whichever is higher, and make an instrument approach to RWY34L.
 - (2) RWY 16L/R; proceed to LAKES at last assigned altitude or 6,000 feet whichever is higher, and make an instrument approach to RWY16R.

NOTE: Procedures other than above will be issued when situation required.

(III) Category II / III A / III B Operations at Narita International Airport

1. Facilities

The following Categories are available:

Runway 16R
<ul style="list-style-type: none"> • ILS Runway 16R-CAT III • Lighting system Runway 16R-CAT III • RVR by forward-scatter meters (the touchdown zone, the mid-point and stop-end of the runway)

2. Conditions

A. The following systems must be operative:

For ILS RWY 16R approach (CAT II)	For ILS RWY 16R approach (CAT IIIA/ IIIB)
(1) ILS comprising; <ul style="list-style-type: none"> • ILS-LOC 16R with standby transmitter • ILS-GP 16R with standby transmitter (When any standby transmitters unserviceable, downgrade ILS-CAT I.) • IM16R (When IM unserviceable, RA could be used as an alternate method) • ILS-DME 16R 	(1) ILS comprising; <ul style="list-style-type: none"> • ILS-LOC 16R with standby transmitter (including far field monitor) • ILS-GP 16R with standby transmitter (When any standby transmitters or far field monitor unserviceable, downgrade ILS-CAT I.) • ILS-DME 16R
(2) Lighting system comprising; <ul style="list-style-type: none"> • PALS 16R (including side row barrettes) • High INTST REDL • High INTST RTHL • RCLL and RTZL 	(2) Lighting system comprising; <ul style="list-style-type: none"> • PALS 16R (including side row barrettes) • High INTST REDL • High INTST RTHL • RCLL and RTZL
(3) Secondary power supply	(3) Secondary power supply
(4) RVR by forward-scatter meters at the touchdown zone and either (the mid-point or stop-end of the runway).	(4) RVR by forward-scatter meters at the touchdown zone, mid-point and stop-end of the runway.

B. The following information must be currently available:

- Surface wind speed and direction
- RVR

C. ITEM A and/or B are not met, the relevant information will be notified to the pilots as soon as practicable.

3. Precision Approach Terrain Profile Chart

See RJAA AD2.24

4. Operating Minimum

Approach minima stated in AD2.24(Instrument Approach Chart) are observed.

5. Special Safeguards and Procedures (SSP)

(1) CAT II / III A/ III B Operations are available when SSP are applied. SSP will be applied when the following conditions are met:

- Ceiling is at or less than 200ft and/or RVR is at or less than 800m.
- Facilities listed 1. above are operational.
- ILS Critical Area is protected.

(2) A. For arrival aircraft

a) Exit taxiway: A7 - A10

NOTE: A6 is not available as exit taxiway. (Its taxiway center line lights will be turned off.)

b) Taxi routes as shown in RJAA AD2.20.2.10.TAXIING ROUTES FOR CAT II/III OPERATIONS(ARRIVALS)

c) In order to protect ILS Critical Area, an arrival aircraft may be given following instruction by ATC.

" REPORT OUT OF ILS CRITICAL AREA "

The exit taxiway center line lights are fixed alternate green and yellow inside the ILS Critical Area. If an aircraft is given the above instruction, she is expected to advise the ATC when the exit taxiway center line lights change from alternate green and yellow to steady green.

B. For departure aircraft

a) Entering taxiway: A1 and A2

NOTE: Stop bar lights on A1 and A2 are controlled individually by ATC.

b) Taxi routes as shown in RJAA AD2.20.2.11.TAXIING ROUTES FOR CAT II/III OPERATIONS(DEPARTURES)

6. FOLLOW-ME service :

FOLLOW-ME service will be available on request.

7. Approval for CAT II / III A/ III B Operations

Operations must obtain operational approval from the State of Registry or State of Operator, as appropriate, to conduct CAT II / III A/ III B Operations.(See GEN1.5)

(IV) ATC Procedures

For the purpose of ensuring to provide the aircraft in and out of Narita with more orderly and efficient flow of traffic, aircraft operators are strongly requested to observe prearranged scheduled time and to comply with the following.

(1) General**(A) Standard Taxiing Routes (See RJAA AD2.20)**

Unless otherwise required, the standard taxiing routes for Departure are instructed by ATC using route names in the table below.

		Route Name	Routing via
Departure	to RWY16R	ROUTE 1	K, S6, C, W, W6 and A
	to RWY34L	ROUTE 2	C, S7, K and A
	to RWY16L	ROUTE 3	A, K, S6, C and B
	to RWY34R	ROUTE 4	A, S, C, S7 and K

NOTE: Alternate routing may be instructed by ATC as required.

(2) Departure**(A) ATC clearance**

ATC clearance will be obtained by "Voice radiotelephone (Voice RTF)" or "Departure Clearance by data link (DCL)".

Show in detail below (a) or (b).

CLEARANCE FLOW	(a) Voice RTF	(b) DCL
REQUEST CLEARANCE	Call Narita Delivery (121.9) at 15 minutes before starting engines, with the following information. (1) Call sign (2) Destination (3) Proposed flight level (4) Parking position (spot number)	Refer to ENR 1.5.4.1 (Operational for Departure Clearance by data link (DCL)) - Send RCD message at 15 minutes before starting engines. - Monitor Narita Delivery (121.9). NOTE: - Start monitoring Narita Delivery (121.9) once RCD message is sent. In case coordination is required, Narita Delivery calls the pilot on Voice RTF.
OBTAIN CLEARANCE	Clearance will be delivered on Voice RTF or DCL as soon as possible after coordination with TOKYO ACC. NOTE: - Clearance to specific aircraft will be deferred when coordination is not completed. If ATC clearance is not received in spite of being ready to start engines, the pilot shall inform Narita Delivery (121.9).	
CALL READY	Call Narita Delivery (121.9) when ready to start engines. Regardless of clearance source, pilots shall report ready to start engines (=doors are closed, boarding bridge removed, push-back vehicle connected.) to Narita Delivery (121.9) NOTE: - ATC will give different frequency (Narita Delivery 121.65 or Narita Ramp Control 121.6/121.75) to call ready to start engines if the situation requires.	
START ENGINES	- Delay information will be given if the situation requires - Contact Narita Ramp Control for approval to start engines ONLY WHEN instructed either Voice RTF or DCL by ATC	

(B) Intersection departure

The remaining runway length for intersection departures are as follows.

Runway	Taxiway	Remaining runway length*
34L	A9	3,630m (11,930 feet)
16R	A2	3,610m (11,870 feet)
34R	B6 B7	1,860m (6,100feet) 2,100m (6,890feet)
16L	B2 B3 B4	2,030m (6,660feet) 2,150m (7,050feet) 1,740m (5,710feet)

*Rounded down to the nearest 10m (10ft) from the measurement between the point where TWY CL meets RWY CL and RWY THR.

- (C) Pilot should ensure that they are able to follow the clearance to the take-off position or the take-off clearance without delay to reduce runway occupancy time. Cockpit check should be completed prior to line-up and checks requiring completion on the RWY should be kept to a minimum. If unable to do so, notify to Narita Tower.

(3) Arrival

- (A) Aircraft on final approach and in the control zone are recommended to turn the landing lights on.

(B) Speedy Turn-Off Procedure

- (a) For purposes of reducing runway occupancy time, pilots in their approach/landing briefing should plan on a specific exit taxiway and after landing, pilots should vacate the runway without delay, unless the use of another exit taxiway is assigned by ATC or unless the safety of the aircraft is jeopardized.
- (b) The exit taxiways, as a rule, which arriving aircraft should plan to use for vacating the runway, are listed below.

Runway	Taxiway	Distance from threshold(m/ft)	Remarks
34L	A5	1,800m(5,900feet)	BTCL
	A4	2,250m(7,380feet)	BTCL
16R	A6	1,800m(5,900feet)	BTCL
	A7	2,250m(7,380feet)	BTCL
34R	B4	1,740m(5,700feet)	BTCL
	B2	2,030m(6,660feet)	NONE
16L	B6	1,860m(6,100feet)	BTCL
	B7	2,100m(6,890feet)	NONE

Remarks :Brighter Taxiway Center line Lights (BTCL) Installation

For purposes of assisting the speedy turn-off, the intensity of the taxiway center line lights listed above will be brighter than that of other taxiways to improve the recognition of these locations.

Those lights are also lighted during daytime VMC to clearly indicate the exit taxiways, however those lights may be turned off or may not be brighter due to other operational requirements.

- (c) Should pilots plan to use other exit taxiways other than those listed above, where possible, pilots should inform ATC accordingly.
However, ATC may not be able to assign the exit taxiway as requested due to traffic conditions or any other reason.

(V) SIMULTANEOUS PARALLEL INDEPENDENT DEPARTURES (SPID)**1. Applicable aircraft for SPID**

SPID will be conducted for the aircraft flying RNAV1 SID on the adjacent runway complexes (RWY34L/34R or RWY16L/16R).

Note: For RWY34R, pilots are required to set the appropriate speed to avoid unintentional deviations (ex. ROUTE DISCONTINUITY on FMS*) especially under strong wind conditions aloft.

* FMS: Flight Management System

2. Conditions

SPID, where radar separation minima between aircraft on the adjacent straight-out departure courses are not prescribed, will be conducted when the following conditions are met. However, SPID shall not be applied under certain adverse weather conditions which might affect safe operations (e.g. windshear, strong crosswind, severe weather activity such as thunderstorms).

- (1) Departure No Transgression Zone (DNTZ) 610m wide is established equidistant between initial straight-out segments of departure courses and is depicted on the radar display.
- (2) Radar and appropriate frequencies are operating normally.

3. Information of SPID

Aircraft shall be advised that SPID are in force. This information may be provided through ATIS broadcasts.

"Simultaneous parallel departures (from runway [number] left and right are) in progress."

4. FMS Validation and Phraseologies

- (1) Pilots shall verify that the required RNAV path to the initial waypoint on the loaded SID is correctly associated with the departure runway. (see Table 1)

The following phraseologies require pilots' action to validate correct programming of the departure runway and departure procedures in FMS prior to take-off.

"VERIFY INITIAL WAYPOINT [initial fix]."

"RNAV TO [initial fix], RUNWAY [number], CLEARED FOR TAKE OFF."

Table 1: The initial fixes on RNAV SIDs associated with runway.

RUNWAY	INITIAL FIX	Departure Frequency*
34L	ARIES(ASTRA**)	124.2MHz
34R	BOXER	119.6MHz
16L	BEAMS	119.6MHz
16R	ASPEN	124.2MHz

* Unless otherwise instructed by ATC, a departure frequency is assigned for each runway.

* Do not change a frequency to the Departure Frequency until instructed by Tower.

** Only for PEDLA [number] DEPARTURE

- (2) If the loaded SID in FMS does not satisfy the initial-waypoint verification, pilots shall immediately advise ATC and shall not take-off until alternative instructions are received.

5. Track monitoring

Track monitoring for SPID shall be provided as follows;

- (1) Track monitoring controllers for each runway provide an initial departure control to ensure aircraft does not deviate from the required path within the initial straight-out climb.

Note: Parallel RNAV departures must not encroach on the airspace between extended parallel runway centerlines without specific ATC clearance. Manually intervene if necessary to stay on track to avoid transgressing in the direction of a parallel track.

- (2) Aircraft observed to continue on a track which will penetrate DNTZ will be instructed a heading to avoid aircraft on the adjacent departure course. If a deviating aircraft fails to respond to such instructions or is observed to penetrating DNTZ, the aircraft on the adjacent departure course shall be instructed to avoid the deviating aircraft.

"TRAFFIC ALERT, [repeat aircraft identification], TURN LEFT/RIGHT IMMEDIATELY, HEADING [number], (CLIMB AND) MAINTAIN [altitude]."

6. Response to "TRAFFIC ALERT"

All breakouts in response to ATC's instructions shall be accomplished quickly. These instructions will be issued on TOWER FREQUENCY or DEPARTURE FREQUENCY when situation required.

(VI) SPECIAL VFR FLIGHT ROUTE FOR HELICOPTER

Special VFR flight route for helicopter in the NARITA CONTROL ZONE (See Visual REP chart)
SHISUI-ROUTE: SHISUI-TOMISATO-LUNCH

RJAA AD 2.23 ADDITIONAL INFORMATION

1. HELIPAD

- (1) Three helipads on TWY intersections of TWY K and S2, K and S1, A and H1. (Refer to the Aerodrome Chart)
- (2) Helipad WEST located on the west side of RWY34L. (Refer to the Aerodrome Chart)

2. Scheduled maintenance hours on the runway

Scheduled runway unserviceability due to runway and facilities maintenance. (See NOTAM RJAA)

3. Vehicle traffic lines

White broken lines in the apron areas (15 centimeter wide, 3 meter long, 2 meter apart).

4. Obstruction

There are trees penetrating above the approach surface at the area about 400m before the Runway 34R threshold. Refer to attachment for detailed description and illustration of these obstructions and their relative positions to the obstruction lights. (See RJAA AD2.24)

RJAA AD 2.24 CHARTS RELATED TO AN AERODROME

Aerodrome Chart-1
Aerodrome Chart-2
Aerodrome Ground Movement Chart
Aerodrome Obstacle Chart-ICAO type A (RWY16R/34L)
Aerodrome Obstacle Chart-ICAO type A (RWY16L/34R)
Aerodrome Obstacle Chart-ICAO type B
Precision Approach Terrain Chart
Standard Departure Chart - Instrument (SAKURA)
Standard Departure Chart - Instrument (AKAGI)
Standard Departure Chart - Instrument (SUNNS)
Standard Departure Chart - Instrument (TETRA-RNAV)
Standard Departure Chart - Instrument (REDEK-RNAV)
Standard Departure Chart - Instrument (PIGOK-RNAV)
Standard Departure Chart - Instrument (GULBO-RNAV)
Standard Departure Chart - Instrument (BORLO-RNAV)
Standard Departure Chart - Instrument (PEDLA-RNAV)
Standard Departure Chart - Instrument (OLVAN-RNAV)
Standard Arrival Chart - Instrument (SOUTH)
Standard Arrival Chart - Instrument (NORTH)
Standard Arrival Chart - Instrument (RUTAS E/T-RNAV)
Standard Arrival Chart - Instrument (SWAMP E/T-RNAV)
Standard Arrival Chart - Instrument (SUPOK E/T-RNAV)
Standard Arrival Chart - Instrument (LUBLA E/T-RNAV)
Standard Arrival Chart - Instrument (RUTAS G/N-RNAV)
Standard Arrival Chart - Instrument (SWAMP G/N-RNAV)
Standard Arrival Chart - Instrument (SUPOK G/N-RNAV)
Standard Arrival Chart - Instrument (LUBLA G/N-RNAV)
Instrument Approach Chart (ILS RWY34L)
Instrument Approach Chart (LOC RWY34L)
Instrument Approach Chart (VOR RWY34L)
Instrument Approach Chart (ILS Z RWY34R)
Instrument Approach Chart (ILS Y or LOC RWY34R)
Instrument Approach Chart (VOR RWY34R)
Instrument Approach Chart (ILS Z RWY16R(CAT II & III))
Instrument Approach Chart (ILS Y or LOC RWY16R(CAT II & III))
Instrument Approach Chart (VOR RWY16R)
Instrument Approach Chart (ILS Z RWY16L)
Instrument Approach Chart (ILS Y or LOC RWY16L)
Instrument Approach Chart (VOR RWY16L)
Other Chart (HOLDING PATTERN)
Other Chart (HOLDING PATTERN-RNAV)
Other Chart (Visual REP)
Other Chart (LDG CHART)
Other Chart (LDG CHART / Trees)
Other Chart (MVA CHART)