



Smart Wind Speed Monitor

status active

Smart Wind Speed Monitor

Table of Contents

- [About](#)
- [Getting Started](#)
- [Circuit](#)
- [WebApp](#)
- [Usage](#)
- [List Of Components](#)
- [Built Using](#)
- [Authors](#)

About

This repo contains

- Backend
- Firmware
- Detailed instructions

for Smart Wind Speed Monitor.

Getting Started

These instructions will get you a copy of the project up and running on your system.

Prerequisites

Things you need to install the FW.

- Raspberry Pi Zero W
- PiSugar



- SIM7600-X

Installing

A step by step series that tell you how to get the Firmware and Backend running

Raspberry Pi Firmware Pre-Reqs

1. Download and install the latest Raspberry Pi OS Desktop image to your SD card
2. Open the terminal and execute the following command `sudo raspi-config`
3. Then follow the following pictures to enable I2C bus on you raspberry pi

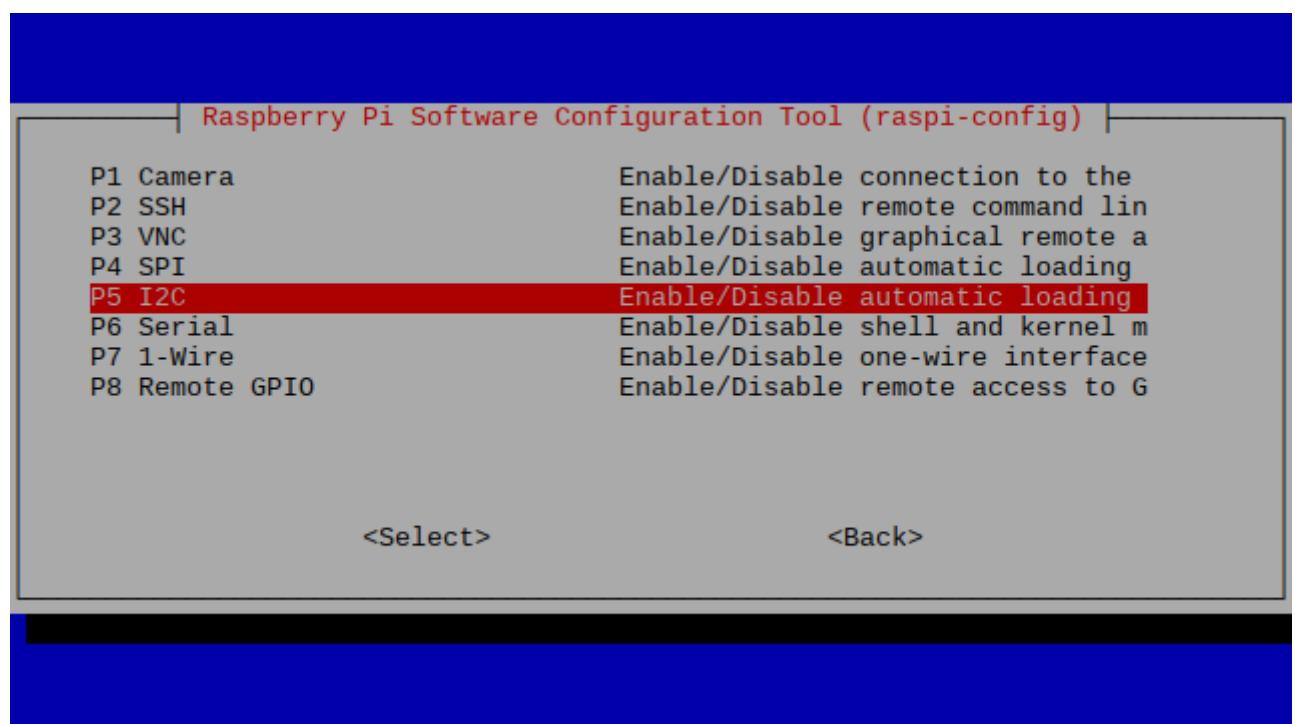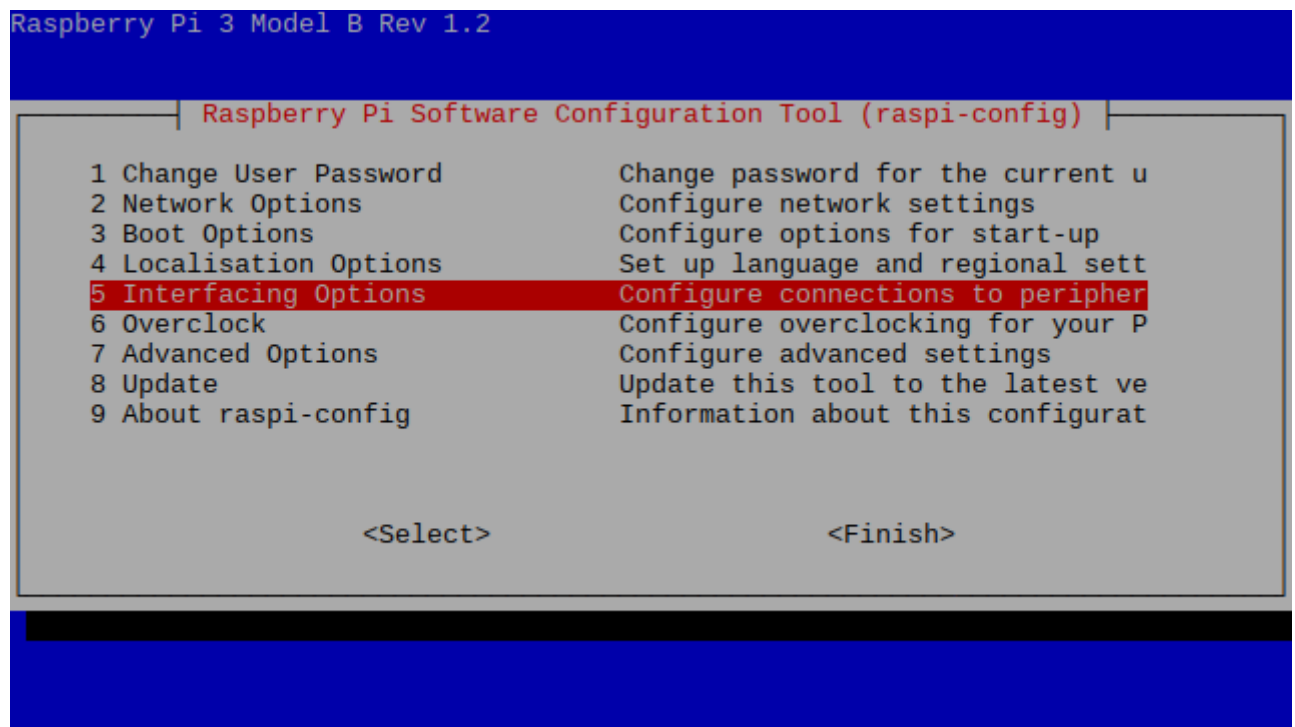


Would you like the ARM I2C interface to be enabled?

<Yes>


<No>


The ARM I2C interface is enabled

<Ok>

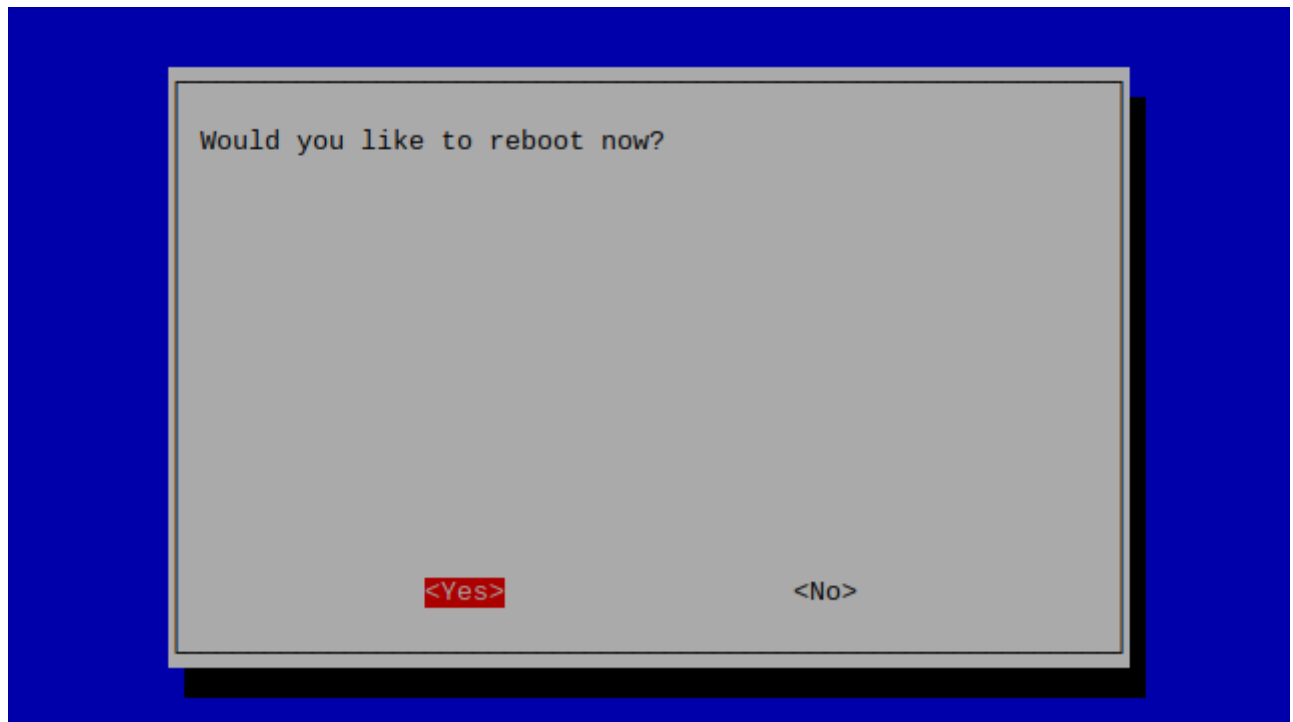

-
- Then do the same for Serial(UART) and SPI

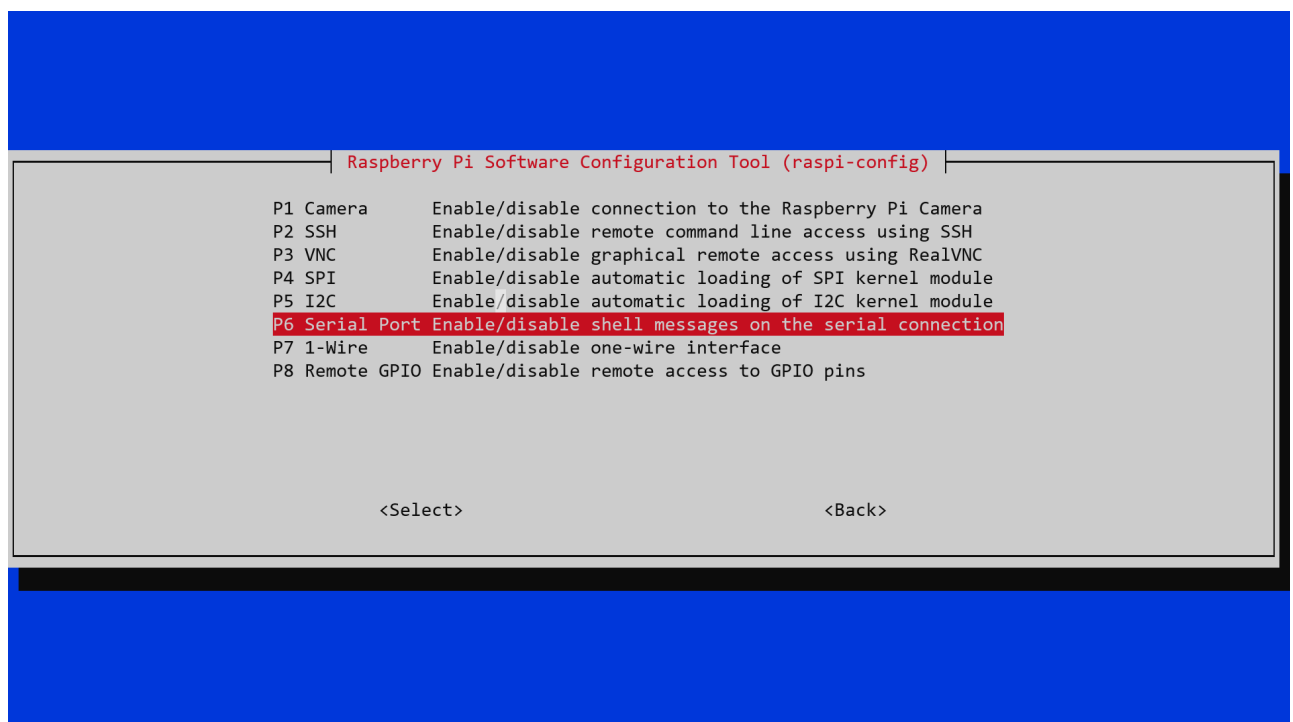

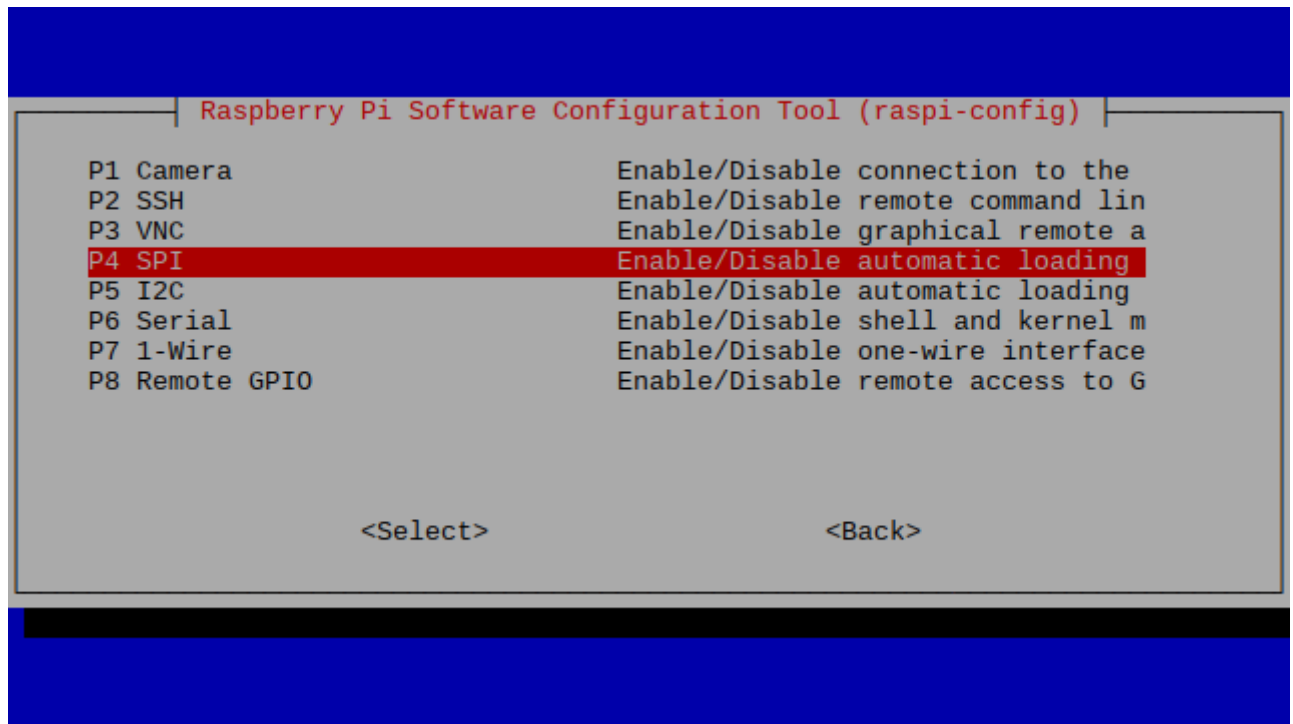

Configuring Raspberry Pi

1. Copy Firmware folder to the desktop of your Raspberry Pi, open the terminal of your Raspberry Pi and execute the following commands

- `sudo apt-get update`
- `sudo apt-get upgrade`
- `cd ~/Desktop/Firmware/`
- `sudo chmod a+rx starter.sh`
- `sudo apt install python3-pip`
- `sudo pip3 install --upgrade setuptools`
- `pip3 install paho-mqtt`
- `sudo pip3 install RPi.bme280`
- `pip3 install smbus-cffi==0.5.1`

Running the Firmware


- Execute the following command to run the firmware

```
./home/pi/Firmware/starter.sh
```

Circuit


Raspberry Pi Zero W Pinout

Follow the pinout diagram given below to connect different components to your Raspberry Pi Zero W.

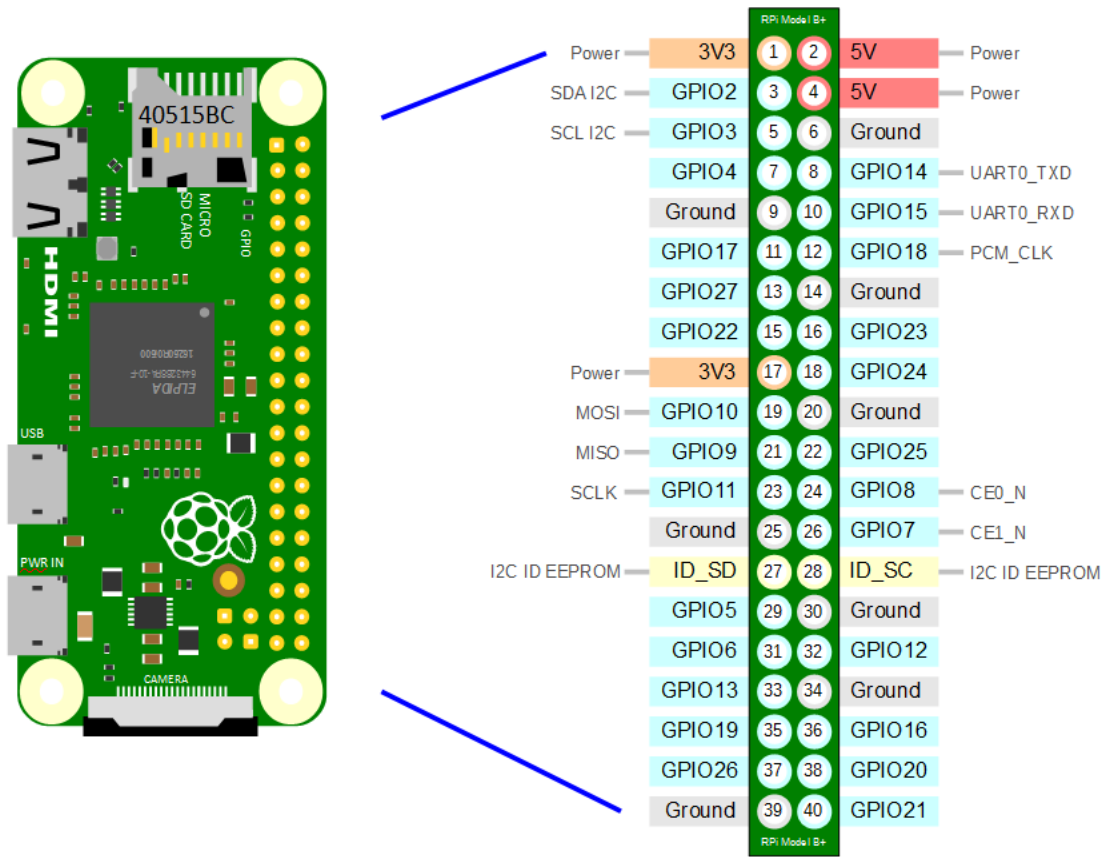

Pi Sugar Connection with Raspberry Pi Zero W

The Pi Sugar will be placed beneath the Raspberry Pi Zero W as shown in the sketch below.

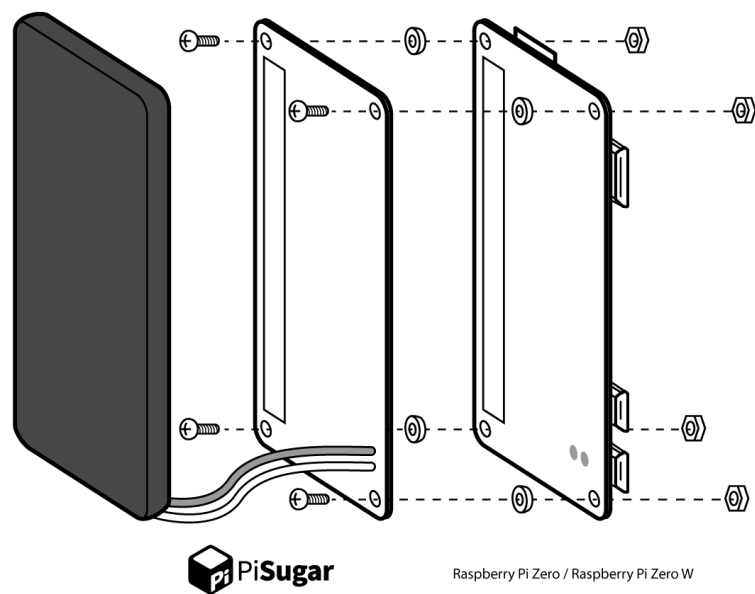


Sim7600E Connection with Raspberry Pi Zero W

The Pi Sugar will be placed above the Raspberry Pi Zero W as shown in the picture below. Moreover, the antennas for GPS and GPRS can be easily connected.



Complete Circuit Diagram

Here's the complete circuit diagram of the system.

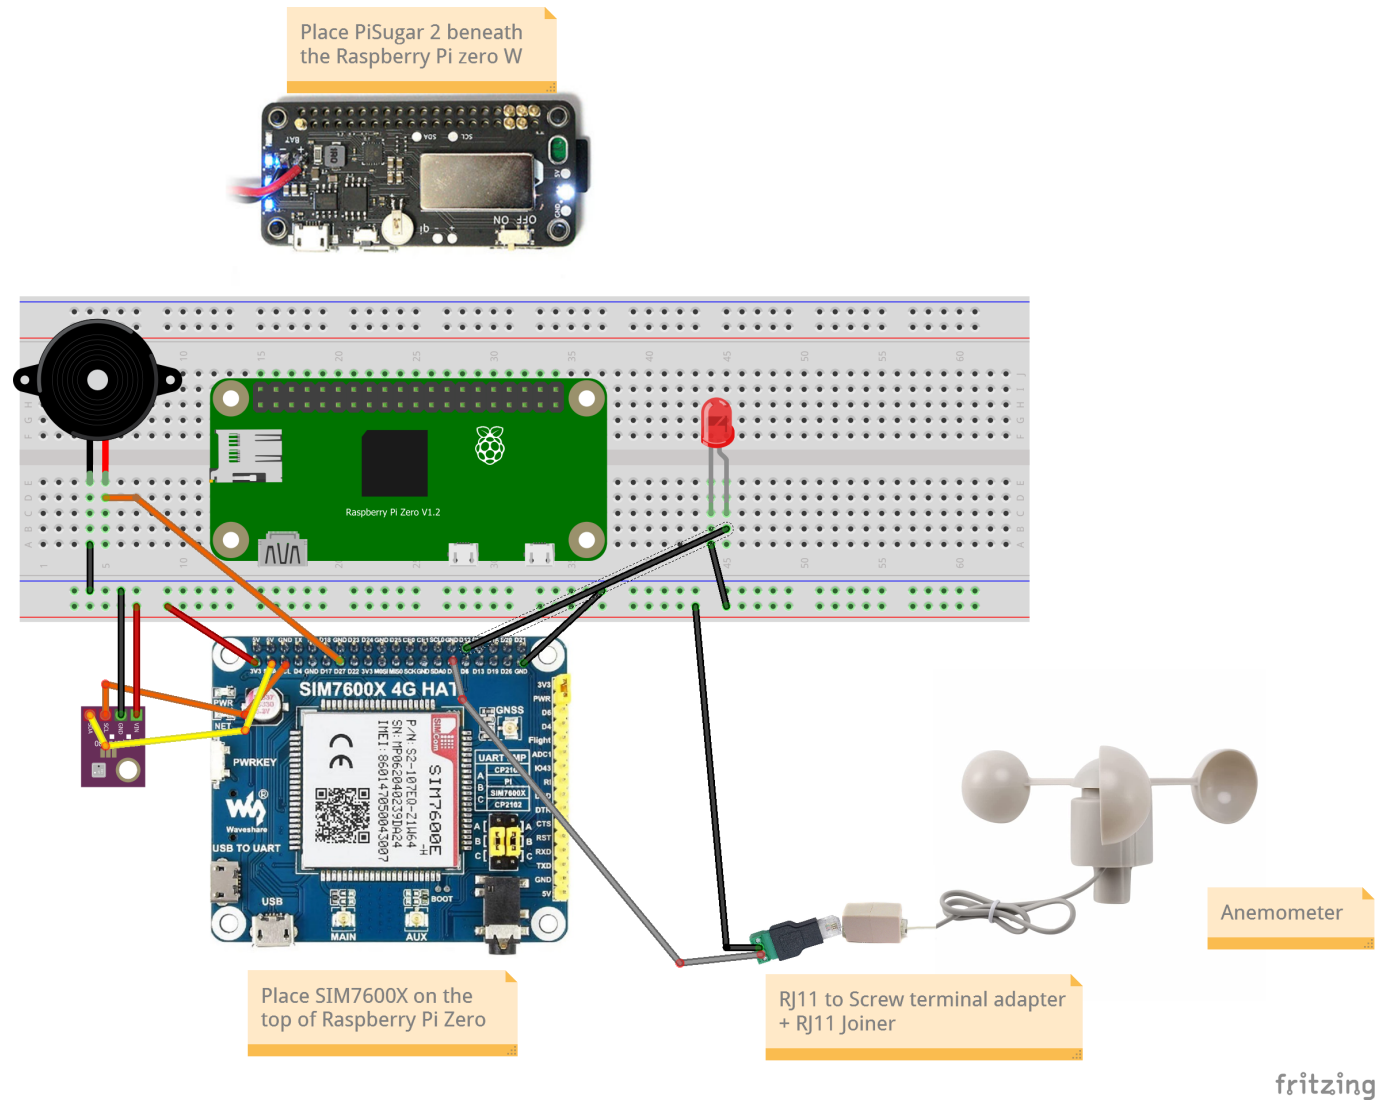

Components Pin Connection Details

Components pin connection details

LED Light

LED Light Connected with Rapberry Pi Zero W

LED Pins	Raspberry Pi Zero W
Pin 1 (longer pin)	D12
Pin 2 (shorter pin)	GND

Buzzer

Buzzer Connected with Rapberry Pi Zero W

Buzzer Pins	Raspberry Pi Zero W
Pin 1 (red)	D27

Buzzer Pins Raspberry Pi Zero W

Pin 2 (black) GND

Anemometer

Anemometer Connected with Raspberry Pi Zero W

Anemometer Pins Raspberry Pi Zero W

Pin 1 D5

Pin 2 GND

Temperature and Humidity Sensor (BME280)

BME280 Connected with Raspberry Pi Zero W

BME280 Pins Raspberry Pi Zero W

VIN 3.3V

GND GND

SCL SCL

SDA SDA

WebApp

((TO BE UPDATED IN THE UPCOMING MILESTONES))

Usage

((TO BE UPDATED IN THE UPCOMING MILESTONES))

List of Components

Following components are used to make this project

1. Raspberry Pi Zero W ○ https://www.amazon.co.uk/CanaKit-Raspberry-Wireless-Complete-Starter/dp/B072N3X39J/ref=sr_1_1?keywords=raspberry+pi+zero+w+w&qid=1639821510&sr=8-1
2. RPi Zero W UPS ○ https://www.amazon.co.uk/Pisugar2-Portable-Lithium-Raspberry-Accessories/dp/B08D678XPR/ref=sr_1_4?keywords=raspberry+pi+ups&qid=1639821580&sr=8-4
3. 4G GPRS and GPS SIM7600E-H ○ https://www.amazon.co.uk/IBest-GSM-GPRS-GNSS-Board/dp/B07PPSTY13/ref=sr_1_3?keywords=raspberry%2Bpi%2B4g&qid=1639821783&sr=8-3&th=1
4. BME280 Temperature, Humidity and Pressure Sensor ○ https://www.amazon.co.uk/CUQI-Barometric-Pressure-Temperature-Humidity/dp/B0991RKZSN/ref=sr_1_1?keywords=bme280&qid=1639822215&sr=8-1
5. Wind Speed Meter ○ https://www.amazon.co.uk/Nephit-Measurement-Meteorological-Instruments-Accessories/dp/B09F64GXQH/ref=sr_1_7?keywords=wind+speed+sensor&qid=1639822540&sr=8-7

6. RJ11 Screw Terminal ○ https://www.amazon.co.uk/JENOR-Terminal-Adapter-Connector-Splitter/dp/B087R3187F/ref=sr_1_2?keywords=rj11+terminal&qid=1639823304&sr=8-2
7. RJ11 Connector ○ https://www.amazon.co.uk/Rhinocables%C2%AE-Coupler-Extender-Extension-connector/dp/B00EVS92KQ/ref=sr_1_3?keywords=rj11+connector&qid=1639823380&sr=8-3
8. Alarm Buzzer ○ https://www.amazon.co.uk/sourcingmap%C2%AE-Continuons-Electronic-Buzzer-Sounder/dp/B010V4UZTK/ref=sr_1_9?keywords=alarm+buzzer&qid=1639823529&sr=8-9
9. 3v-6v LED ○ https://www.amazon.co.uk/Sourcingmap-20pcs-Wired-Light-Flashing/dp/B07DYZ1L3Y/ref=sr_1_12?keywords=led+light+5mm&qid=1639823838&sr=8-12

Demo Videos

- [Firmware Demo Video](#) - Smart Wind Speed Monitor Firmware Demo Video

Built Using

- [Python](#) - Programming Language - For Raspberry Pi Zero W Firmware
- [Fritzing](#) - Circuit Designer

Authors

- [@Nauman3S](#) - Development and Deployment