



Get started

Cloud Volumes ONTAP

NetApp
April 06, 2022

Table of Contents

- Get started 1
 - Learn about Cloud Volumes ONTAP 1
 - Get started in Amazon Web Services 2
 - Get started in Microsoft Azure 53
 - Get started in Google Cloud 75

Get started

Learn about Cloud Volumes ONTAP

Cloud Volumes ONTAP enables you to optimize your cloud storage costs and performance while enhancing data protection, security, and compliance.

Cloud Volumes ONTAP is a software-only storage appliance that runs ONTAP data management software in the cloud. It provides enterprise-grade storage with the following key features:

- Storage efficiencies

Leverage built-in data deduplication, data compression, thin provisioning, and cloning to minimize storage costs.

- High availability

Ensure enterprise reliability and continuous operations in case of failures in your cloud environment.

- Data protection

Cloud Volumes ONTAP leverages SnapMirror, NetApp's industry-leading replication technology, to replicate on-premises data to the cloud so it's easy to have secondary copies available for multiple use cases.

Cloud Volumes ONTAP also integrates with Cloud Backup to deliver backup and restore capabilities for protection, and long-term archive of your cloud data.

[Learn more about Cloud Backup](#)

- Data tiering

Switch between high and low-performance storage pools on-demand without taking applications offline.

- Application consistency

Ensure consistency of NetApp Snapshot copies using NetApp SnapCenter.

[Learn more about SnapCenter](#)

- Data security

Cloud Volumes ONTAP supports data encryption and provides protection against viruses and ransomware.

- Privacy compliance controls

Integration with Cloud Data Sense helps you understand data context and identify sensitive data.

[Learn more about Cloud Data Sense](#)



Licenses for ONTAP features are included with Cloud Volumes ONTAP.

[View supported Cloud Volumes ONTAP configurations](#)

Get started in Amazon Web Services

Quick start for Cloud Volumes ONTAP in AWS

Get started with Cloud Volumes ONTAP in AWS in a few steps.

1

Create a Connector

If you don't have a [Connector](#) yet, an Account Admin needs to create one. [Learn how to create a Connector in AWS](#).

When you create your first Cloud Volumes ONTAP working environment, Cloud Manager prompts you to deploy a Connector if you don't have one yet.

2

Plan your configuration

Cloud Manager offers preconfigured packages that match your workload requirements, or you can create your own configuration. If you choose your own configuration, you should understand the options available to you. [Learn more](#).

3

Set up your networking

- a. Ensure that your VPC and subnets will support connectivity between the Connector and Cloud Volumes ONTAP.
- b. Enable outbound internet access from the target VPC so the Connector and Cloud Volumes ONTAP can contact several endpoints.

This step is important because the Connector can't manage Cloud Volumes ONTAP without outbound internet access. If you need to limit outbound connectivity, refer to the list of endpoints for [the Connector and Cloud Volumes ONTAP](#).

- c. Set up a VPC endpoint to the S3 service.

A VPC endpoint is required if you want to tier cold data from Cloud Volumes ONTAP to low-cost object storage.

[Learn more about networking requirements](#).

4

Set up the AWS KMS

If you want to use Amazon encryption with Cloud Volumes ONTAP, then you need to ensure that an active Customer Master Key (CMK) exists. You also need to modify the key policy for each CMK by adding the IAM role that provides permissions to the Connector as a *key user*. [Learn more](#).

5

Launch Cloud Volumes ONTAP using Cloud Manager

Click **Add Working Environment**, select the type of system that you would like to deploy, and complete the steps in the wizard. [Read step-by-step instructions](#).

Related links

- [Creating a Connector from Cloud Manager](#)
- [Launching a Connector from the AWS Marketplace](#)
- [Installing the Connector software on a Linux host](#)
- [What Cloud Manager does with AWS permissions](#)

Planning your Cloud Volumes ONTAP configuration in AWS

When you deploy Cloud Volumes ONTAP in AWS, you can choose a preconfigured system that matches your workload requirements, or you can create your own configuration. If you choose your own configuration, you should understand the options available to you.

Viewing supported regions

Cloud Volumes ONTAP is supported in most AWS regions. [View the full list of supported regions](#).

Newer AWS regions must be enabled before you can create and manage resources in those regions. [Learn how to enable a region](#).

Choosing a license

Several licensing options are available for Cloud Volumes ONTAP. Each option enables you to choose a consumption model that meets your needs. [Learn about licensing options for Cloud Volumes ONTAP](#).

Choosing a supported instance

Cloud Volumes ONTAP supports several instance types, depending on the license type that you choose.

[Supported configurations for Cloud Volumes ONTAP in AWS](#)

Choosing a configuration that supports Flash Cache

Some Cloud Volumes ONTAP configurations in AWS include local NVMe storage, which Cloud Volumes ONTAP uses as *Flash Cache* for better performance. [Learn more about Flash Cache](#).

Understanding storage limits

The raw capacity limit for a Cloud Volumes ONTAP system is tied to the license. Additional limits impact the size of aggregates and volumes. You should be aware of these limits as you plan your configuration.

[Storage limits for Cloud Volumes ONTAP in AWS](#)

Sizing your system in AWS

Sizing your Cloud Volumes ONTAP system can help you meet requirements for performance and capacity. You should be aware of a few key points when choosing an instance type, disk type, and disk size:

Instance type

- Match your workload requirements to the maximum throughput and IOPS for each EC2 instance type.
- If several users write to the system at the same time, choose an instance type that has enough CPUs to manage the requests.
- If you have an application that is mostly reads, then choose a system with enough RAM.
 - [AWS Documentation: Amazon EC2 Instance Types](#)
 - [AWS Documentation: Amazon EBS–Optimized Instances](#)

EBS disk type

At a high level, the differences between EBS disk types are as follows. To learn more about the use cases for EBS disks, refer to [AWS Documentation: EBS Volume Types](#).

- *General Purpose SSD (gp3)* disks are the lowest-cost SSDs that balance cost and performance for a broad range of workloads. Performance is defined in terms of IOPS and throughput. gp3 disks are supported with Cloud Volumes ONTAP 9.7 and later.

When you select a gp3 disk, Cloud Manager fills in default IOPS and throughput values that provide performance that is equivalent to a gp2 disk based on the selected disk size. You can increase the values to get better performance at a higher cost, but we do not support lower values because it can result in inferior performance. In short, stick with the default values or increase them. Don't lower them. [Learn more about gp3 disks and their performance](#).

- *General Purpose SSD (gp2)* disks balance cost and performance for a broad range of workloads. Performance is defined in terms of IOPS.
- *Provisioned IOPS SSD (io1)* disks are for critical applications that require the highest performance at a higher cost.
- *Throughput Optimized HDD (st1)* disks are for frequently accessed workloads that require fast and consistent throughput at a lower price.



Tiering data to object storage is not recommended when using Throughput Optimized HDDs (st1).

EBS disk size

You need to choose an initial disk size when you launch a Cloud Volumes ONTAP system. After that, you can [let Cloud Manager manage a system's capacity for you](#), but if you want to [create aggregates yourself](#), be aware of the following:

- All disks in an aggregate must be the same size.
- The performance of EBS disks is tied to disk size. The size determines the baseline IOPS and maximum burst duration for SSD disks and the baseline and burst throughput for HDD disks.
- Ultimately, you should choose the disk size that gives you the *sustained performance* that you need.
- Even if you do choose larger disks (for example, six 4 TiB disks), you might not get all of the IOPS because the EC2 instance can reach its bandwidth limit.

For more details about EBS disk performance, refer to [AWS Documentation: EBS Volume Types](#).

Watch the following video for more details about sizing your Cloud Volumes ONTAP system in AWS:



Viewing default system disks

In addition to the storage for user data, Cloud Manager also purchases cloud storage for Cloud Volumes ONTAP system data (boot data, root data, core data, and NVRAM). For planning purposes, it might help for you to review these details before you deploy Cloud Volumes ONTAP.

[View the default disks for Cloud Volumes ONTAP system data in AWS.](#)



The Connector also requires a system disk. [View details about the Connector's default configuration.](#)

Preparing to deploy Cloud Volumes ONTAP in an AWS Outpost

If you have an AWS Outpost, you can deploy Cloud Volumes ONTAP in that Outpost by selecting the Outpost VPC in the Working Environment wizard. The experience is the same as any other VPC that resides in AWS. Note that you will need to first deploy a Connector in your AWS Outpost.

There are a few limitations to point out:

- Only single node Cloud Volumes ONTAP systems are supported at this time
- The EC2 instances that you can use with Cloud Volumes ONTAP are limited to what's available in your Outpost
- Only General Purpose SSDs (gp2) are supported at this time

AWS network information worksheet

When you launch Cloud Volumes ONTAP in AWS, you need to specify details about your VPC network. You can use a worksheet to collect the information from your administrator.

Network information for Cloud Volumes ONTAP

AWS information	Your value
Region	
VPC	
Subnet	
Security group (if using your own)	

Network information for an HA pair in multiple AZs

AWS information	Your value
Region	
VPC	
Security group (if using your own)	
Node 1 availability zone	
Node 1 subnet	
Node 2 availability zone	
Node 2 subnet	
Mediator availability zone	
Mediator subnet	
Key pair for the mediator	
Floating IP address for cluster management port	
Floating IP address for data on node 1	
Floating IP address for data on node 2	
Route tables for floating IP addresses	

Choosing a write speed

Cloud Manager enables you to choose a write speed setting for Cloud Volumes ONTAP. Before you choose a write speed, you should understand the differences between the normal and high settings and risks and recommendations when using high write speed. [Learn more about write speed.](#)

Choosing a volume usage profile

ONTAP includes several storage efficiency features that can reduce the total amount of storage that you need. When you create a volume in Cloud Manager, you can choose a profile that enables these features or a profile that disables them. You should learn more about these features to help you decide which profile to use.

NetApp storage efficiency features provide the following benefits:

Thin provisioning

Presents more logical storage to hosts or users than you actually have in your physical storage pool. Instead of preallocating storage space, storage space is allocated dynamically to each volume as data is written.

Deduplication

Improves efficiency by locating identical blocks of data and replacing them with references to a single shared block. This technique reduces storage capacity requirements by eliminating redundant blocks of data that reside in the same volume.

Compression

Reduces the physical capacity required to store data by compressing data within a volume on primary, secondary, and archive storage.

Set up your networking

Networking requirements for Cloud Volumes ONTAP in AWS

Cloud Manager handles the set up of networking components for Cloud Volumes ONTAP, such as IP addresses, netmasks, and routes. You need to make sure that outbound internet access is available, that enough private IP addresses are available, that the right connections are in place, and more.

General requirements

The following requirements must be met in AWS.

Outbound internet access for Cloud Volumes ONTAP nodes

Cloud Volumes ONTAP nodes require outbound internet access to send messages to NetApp AutoSupport, which proactively monitors the health of your storage.

Routing and firewall policies must allow AWS HTTP/HTTPS traffic to the following endpoints so Cloud Volumes ONTAP can send AutoSupport messages:

- <https://support.netapp.com/aods/asupmessage>
- <https://support.netapp.com/asupprod/post/1.0/postAsup>

If you have a NAT instance, you must define an inbound security group rule that allows HTTPS traffic from the private subnet to the internet.

[Learn how to configure AutoSupport.](#)

Outbound internet access for the HA mediator

The HA mediator instance must have an outbound connection to the AWS EC2 service so it can assist with storage failover. To provide the connection, you can add a public IP address, specify a proxy server, or use a manual option.

The manual option can be a NAT gateway or an interface VPC endpoint from the target subnet to the AWS EC2 service. For details about VPC endpoints, refer to [AWS Documentation: Interface VPC Endpoints \(AWS](#)

[PrivateLink](#)).

Private IP addresses

Cloud Manager automatically allocates the required number of private IP addresses to Cloud Volumes ONTAP. You need to ensure that your networking has enough private IP addresses available.

The number of LIFs that Cloud Manager allocates for Cloud Volumes ONTAP depends on whether you deploy a single node system or an HA pair. A LIF is an IP address associated with a physical port.

IP addresses for a single node system

Cloud Manager allocates 6 IP addresses to a single node system:

- Cluster management LIF
- Node management LIF
- Intercluster LIF
- NAS data LIF
- iSCSI data LIF
- Storage VM management LIF

A storage VM management LIF is used with management tools like SnapCenter.

IP addresses for HA pairs

HA pairs require more IP addresses than a single node system does. These IP addresses are spread across different ethernet interfaces, as shown in the following image:



The number of private IP addresses required for an HA pair depends on which deployment model you choose. An HA pair deployed in a *single* AWS Availability Zone (AZ) requires 15 private IP addresses, while an HA pair deployed in *multiple* AZs requires 13 private IP addresses.

The following tables provide details about the LIFs that are associated with each private IP address.

LIFs for HA pairs in a single AZ

LIF	Interface	Node	Purpose
Cluster management	eth0	node 1	Administrative management of the entire cluster (HA pair).
Node management	eth0	node 1 and node 2	Administrative management of a node.
Intercluster	eth0	node 1 and node 2	Cross-cluster communication, backup, and replication.
NAS data	eth0	node 1	Client access over NAS protocols.
iSCSI data	eth0	node 1 and node 2	Client access over the iSCSI protocol.

LIF	Interface	Node	Purpose
Cluster connectivity	eth1	node 1 and node 2	Enables the nodes to communicate with each other and to move data within the cluster.
HA connectivity	eth2	node 1 and node 2	Communication between the two nodes in case of failover.
RSM iSCSI traffic	eth3	node 1 and node 2	RAID SyncMirror iSCSI traffic, as well as communication between the two Cloud Volumes ONTAP nodes and the mediator.
Mediator	eth0	Mediator	A communication channel between the nodes and the mediator to assist in storage takeover and giveback processes.

LIFs for HA pairs in multiple AZs

LIF	Interface	Node	Purpose
Node management	eth0	node 1 and node 2	Administrative management of a node.
Intercluster	eth0	node 1 and node 2	Cross-cluster communication, backup, and replication.
iSCSI data	eth0	node 1 and node 2	Client access over the iSCSI protocol. This LIF also manages the migration of floating IP addresses between nodes.
Cluster connectivity	eth1	node 1 and node 2	Enables the nodes to communicate with each other and to move data within the cluster.
HA connectivity	eth2	node 1 and node 2	Communication between the two nodes in case of failover.
RSM iSCSI traffic	eth3	node 1 and node 2	RAID SyncMirror iSCSI traffic, as well as communication between the two Cloud Volumes ONTAP nodes and the mediator.
Mediator	eth0	Mediator	A communication channel between the nodes and the mediator to assist in storage takeover and giveback processes.



When deployed in multiple Availability Zones, several LIFs are associated with [floating IP addresses](#), which don't count against the AWS private IP limit.

Security groups

You do not need to create security groups because Cloud Manager does that for you. If you need to use your own, refer to [Security group rules](#).

Connection for data tiering

If you want to use EBS as a performance tier and AWS S3 as a capacity tier, you must ensure that Cloud Volumes ONTAP has a connection to S3. The best way to provide that connection is by creating a VPC

Endpoint to the S3 service. For instructions, see [AWS Documentation: Creating a Gateway Endpoint](#).

When you create the VPC Endpoint, be sure to select the region, VPC, and route table that corresponds to the Cloud Volumes ONTAP instance. You must also modify the security group to add an outbound HTTPS rule that enables traffic to the S3 endpoint. Otherwise, Cloud Volumes ONTAP cannot connect to the S3 service.

If you experience any issues, see [AWS Support Knowledge Center: Why can't I connect to an S3 bucket using a gateway VPC endpoint?](#)

Connections to ONTAP systems

To replicate data between a Cloud Volumes ONTAP system in AWS and ONTAP systems in other networks, you must have a VPN connection between the AWS VPC and the other network—for example, an Azure VNet or your corporate network. For instructions, see [AWS Documentation: Setting Up an AWS VPN Connection](#).

DNS and Active Directory for CIFS

If you want to provision CIFS storage, you must set up DNS and Active Directory in AWS or extend your on-premises setup to AWS.

The DNS server must provide name resolution services for the Active Directory environment. You can configure DHCP option sets to use the default EC2 DNS server, which must not be the DNS server used by the Active Directory environment.

For instructions, refer to [AWS Documentation: Active Directory Domain Services on the AWS Cloud: Quick Start Reference Deployment](#).

Requirements for HA pairs in multiple AZs

Additional AWS networking requirements apply to Cloud Volumes ONTAP HA configurations that use multiple Availability Zones (AZs). You should review these requirements before you launch an HA pair because you must enter the networking details in Cloud Manager when you create the working environment.

To understand how HA pairs work, see [High-availability pairs](#).

Availability Zones

This HA deployment model uses multiple AZs to ensure high availability of your data. You should use a dedicated AZ for each Cloud Volumes ONTAP instance and the mediator instance, which provides a communication channel between the HA pair.

A subnet should be available in each Availability Zone.

Floating IP addresses for NAS data and cluster/SVM management

HA configurations in multiple AZs use floating IP addresses that migrate between nodes if failures occur. They are not natively accessible from outside the VPC, unless you [set up an AWS transit gateway](#).

One floating IP address is for cluster management, one is for NFS/CIFS data on node 1, and one is for NFS/CIFS data on node 2. A fourth floating IP address for SVM management is optional.



A floating IP address is required for the SVM management LIF if you use SnapDrive for Windows or SnapCenter with the HA pair.

You need to enter the floating IP addresses in Cloud Manager when you create a Cloud Volumes ONTAP HA working environment. Cloud Manager allocates the IP addresses to the HA pair when it launches the

system.

The floating IP addresses must be outside of the CIDR blocks for all VPCs in the AWS region in which you deploy the HA configuration. Think of the floating IP addresses as a logical subnet that's outside of the VPCs in your region.

The following example shows the relationship between floating IP addresses and the VPCs in an AWS region. While the floating IP addresses are outside the CIDR blocks for all VPCs, they're routable to subnets through route tables.

AWS region



Cloud Manager automatically creates static IP addresses for iSCSI access and for NAS access from clients outside the VPC. You don't need to meet any requirements for these types of IP addresses.

Transit gateway to enable floating IP access from outside the VPC

If needed, [set up an AWS transit gateway](#) to enable access to an HA pair's floating IP addresses from outside the VPC where the HA pair resides.

Route tables

After you specify the floating IP addresses in Cloud Manager, you are then prompted to select the route tables that should include routes to the floating IP addresses. This enables client access to the HA pair.

If you have just one route table for the subnets in your VPC (the main route table), then Cloud Manager automatically adds the floating IP addresses to that route table. If you have more than one route table, it's very important to select the correct route tables when launching the HA pair. Otherwise, some clients might not have access to Cloud Volumes ONTAP.

For example, you might have two subnets that are associated with different route tables. If you select route table A, but not route table B, then clients in the subnet associated with route table A can access the HA pair, but clients in the subnet associated with route table B can't.

For more information about route tables, refer to [AWS Documentation: Route Tables](#).

Connection to NetApp management tools

To use NetApp management tools with HA configurations that are in multiple AZs, you have two connection options:

1. Deploy the NetApp management tools in a different VPC and [set up an AWS transit gateway](#). The gateway enables access to the floating IP address for the cluster management interface from outside the VPC.
2. Deploy the NetApp management tools in the same VPC with a similar routing configuration as NAS clients.

Example HA configuration

The following image illustrates the networking components specific to an HA pair in multiple AZs: three Availability Zones, three subnets, floating IP addresses, and a route table.



Requirements for the Connector

Set up your networking so that the Connector can manage resources and processes within your public cloud environment. The most important step is ensuring outbound internet access to various endpoints.



If your network uses a proxy server for all communication to the internet, you can specify the proxy server from the Settings page. Refer to [Configuring the Connector to use a proxy server](#).

Connection to target networks

A Connector requires a network connection to the VPCs and VNets in which you want to deploy Cloud Volumes ONTAP.

For example, if you install a Connector in your corporate network, then you must set up a VPN connection to the VPC or VNet in which you launch Cloud Volumes ONTAP.

Outbound internet access

The Connector requires outbound internet access to manage resources and processes within your public cloud environment.

Endpoints	Purpose
https://support.netapp.com	To obtain licensing information and to send AutoSupport messages to NetApp support.
https://*.cloudmanager.cloud.netapp.com	To provide SaaS features and services within Cloud Manager.
https://cloudmanagerinfraprod.azurecr.io	To upgrade the Connector and its Docker components.
https://*.blob.core.windows.net	

Setting up an AWS transit gateway for HA pairs in multiple AZs

Set up an AWS transit gateway to enable access to an HA pair's [floating IP addresses](#) from outside the VPC where the HA pair resides.

When a Cloud Volumes ONTAP HA configuration is spread across multiple AWS Availability Zones, floating IP addresses are required for NAS data access from within the VPC. These floating IP addresses can migrate between nodes when failures occur, but they are not natively accessible from outside the VPC. Separate private IP addresses provide data access from outside the VPC, but they don't provide automatic failover.

Floating IP addresses are also required for the cluster management interface and the optional SVM management LIF.

If you set up an AWS transit gateway, you enable access to the floating IP addresses from outside the VPC where the HA pair resides. That means NAS clients and NetApp management tools outside the VPC can access the floating IPs.

Here's an example that shows two VPCs connected by a transit gateway. An HA system resides in one VPC, while a client resides in the other. You could then mount a NAS volume on the client using the floating IP address.



The following steps illustrate how to set up a similar configuration.

Steps

1. [Create a transit gateway and attach the VPCs to the gateway.](#)
2. Associate the VPCs with the transit gateway route table.
 - a. In the **VPC** service, click **Transit Gateway Route Tables**.
 - b. Select the route table.
 - c. Click **Associations** and then select **Create association**.
 - d. Choose the attachments (the VPCs) to associate and then click **Create association**.
3. Create routes in the transit gateway's route table by specifying the HA pair's floating IP addresses.

You can find the floating IP addresses on the Working Environment Information page in Cloud Manager. Here's an example:

NFS & CIFS access from within the VPC using Floating IP

Auto failover

Cluster Management : 172.23.0.1

Data (nfs,cifs) : Node 1: 172.23.0.2 | Node 2: 172.23.0.3

Access

SVM Management : 172.23.0.4

The following sample image shows the route table for the transit gateway. It includes routes to the CIDR blocks of the two VPCs and four floating IP addresses used by Cloud Volumes ONTAP.

Transit Gateway Route Table: tgw-rtb-0ea8ee291c7aedd3

Details Associations Propagations **Routes** Tags

The table below will return a maximum of 1000 routes. Narrow the filter or use export routes to view more routes.

Create route Replace route Delete route

Filter by attributes or search by keyword

<input type="checkbox"/>	CIDR	Attachment	Resource type	Route type	Route state
<input type="checkbox"/>	10.100.0.0/16	tgw-attach-05e77bd34e2ff91f8 vpc-0b2bc30e0dc8e0db1	VPC2	propagated	active
<input type="checkbox"/>	10.160.0.0/20	tgw-attach-00eba3eac3250d7db vpc-673ae603	VPC1	propagated	active
<input type="checkbox"/>	172.23.0.1/32	tgw-attach-00eba3eac3250d7db vpc-673ae603	VPC	static	active
<input type="checkbox"/>	172.23.0.2/32	tgw-attach-00eba3eac3250d7db vpc-673ae603	Floating IP Addresses	static	active
<input type="checkbox"/>	172.23.0.3/32	tgw-attach-00eba3eac3250d7db vpc-673ae603	Floating IP Addresses	static	active
<input type="checkbox"/>	172.23.0.4/32	tgw-attach-00eba3eac3250d7db vpc-673ae603	Floating IP Addresses	static	active

4. Modify the route table of VPCs that need to access the floating IP addresses.
 - a. Add route entries to the floating IP addresses.
 - b. Add a route entry to the CIDR block of the VPC where the HA pair resides.

The following sample image shows the route table for VPC 2, which includes routes to VPC 1 and the floating IP addresses.

Route Table: rtb-0569a1bd740ed033f

Summary Routes Subnet Associations Route Propagation Tags

Edit routes

View All routes

Destination	Target	Status	Propagated
10.100.0.0/16	local	active	No
0.0.0.0/0	igw-07250bd01781e67df	active	No
10.160.0.0/20	tgw-015b7c249661ac279	active	No
172.23.0.1/32	tgw-015b7c249661ac279	active	No
172.23.0.2/32	tgw-015b7c249661ac279	active	No
172.23.0.3/32	tgw-015b7c249661ac279	active	No
172.23.0.4/32	tgw-015b7c249661ac279	active	No

VPC1

Floating IP Addresses

- Modify the route table for the HA pair's VPC by adding a route to the VPC that needs access to the floating IP addresses.

This step is important because it completes the routing between the VPCs.

The following sample image shows the route table for VPC 1. It includes a route to the floating IP addresses and to VPC 2, which is where a client resides. Cloud Manager automatically added the floating IPs to the route table when it deployed the HA pair.

Summary Routes Subnet Associations Route Propagation Tags

Edit routes

View All routes

Destination	Target	Status
10.160.0.0/20	local	active
pl-68a54001 (com.amazonaws.us-west-2.s3, 54.231.160.0/19, 52.218.128.0/17, 52.92.32.0/22)	vpce-cb51a0a2	active
0.0.0.0/0	igw-b2182dd7	active
10.60.29.0/25	pcx-589c3331	active
10.100.0.0/16	tgw-015b7c249661ac279	active
10.129.0.0/20	pcx-ff7e1396	active
172.23.0.1/32	eni-0854d4715559c3cdb	active
172.23.0.2/32	eni-0854d4715559c3cdb	active
172.23.0.3/32	eni-0f76681216c3108ed	active
172.23.0.4/32	eni-0854d4715559c3cdb	active

VPC2

Floating IP Addresses

- Mount volumes to clients using the floating IP address.

You can find the correct IP address in Cloud Manager by selecting a volume and clicking **Mount Command**.

Volumes

2 Volumes | 0.22 TB Allocated | < 0.01 TB Used (0 TB in S3)



7. If you're mounting an NFS volume, configure the export policy to match the subnet of the client VPC.

[Learn how to edit a volume.](#)

Related links

- [High-availability pairs in AWS](#)
- [Networking requirements for Cloud Volumes ONTAP in AWS](#)

Security group rules for AWS

Cloud Manager creates AWS security groups that include the inbound and outbound rules that the Connector and Cloud Volumes ONTAP need to operate successfully. You might want to refer to the ports for testing purposes or if you prefer your to use own security groups.

Rules for Cloud Volumes ONTAP

The security group for Cloud Volumes ONTAP requires both inbound and outbound rules.

Inbound rules

The source for inbound rules in the predefined security group is 0.0.0.0/0.

Protocol	Port	Purpose
All ICMP	All	Pinging the instance
HTTP	80	HTTP access to the System Manager web console using the IP address of the cluster management LIF
HTTPS	443	HTTPS access to the System Manager web console using the IP address of the cluster management LIF
SSH	22	SSH access to the IP address of the cluster management LIF or a node management LIF

Protocol	Port	Purpose
TCP	111	Remote procedure call for NFS
TCP	139	NetBIOS service session for CIFS
TCP	161-162	Simple network management protocol
TCP	445	Microsoft SMB/CIFS over TCP with NetBIOS framing
TCP	635	NFS mount
TCP	749	Kerberos
TCP	2049	NFS server daemon
TCP	3260	iSCSI access through the iSCSI data LIF
TCP	4045	NFS lock daemon
TCP	4046	Network status monitor for NFS
TCP	10000	Backup using NDMP
TCP	11104	Management of intercluster communication sessions for SnapMirror
TCP	11105	SnapMirror data transfer using intercluster LIFs
UDP	111	Remote procedure call for NFS
UDP	161-162	Simple network management protocol
UDP	635	NFS mount
UDP	2049	NFS server daemon
UDP	4045	NFS lock daemon
UDP	4046	Network status monitor for NFS
UDP	4049	NFS rquotad protocol

Outbound rules

The predefined security group for Cloud Volumes ONTAP opens all outbound traffic. If that is acceptable, follow the basic outbound rules. If you need more rigid rules, use the advanced outbound rules.

Basic outbound rules

The predefined security group for Cloud Volumes ONTAP includes the following outbound rules.

Protocol	Port	Purpose
All ICMP	All	All outbound traffic
All TCP	All	All outbound traffic
All UDP	All	All outbound traffic

Advanced outbound rules

If you need rigid rules for outbound traffic, you can use the following information to open only those ports that are required for outbound communication by Cloud Volumes ONTAP.



The source is the interface (IP address) on the Cloud Volumes ONTAP system.

Service	Protocol	Port	Source	Destination	Purpose
Active Directory	TCP	88	Node management LIF	Active Directory forest	Kerberos V authentication
	UDP	137	Node management LIF	Active Directory forest	NetBIOS name service
	UDP	138	Node management LIF	Active Directory forest	NetBIOS datagram service
	TCP	139	Node management LIF	Active Directory forest	NetBIOS service session
	TCP & UDP	389	Node management LIF	Active Directory forest	LDAP
	TCP	445	Node management LIF	Active Directory forest	Microsoft SMB/CIFS over TCP with NetBIOS framing
	TCP	464	Node management LIF	Active Directory forest	Kerberos V change & set password (SET_CHANGE)
	UDP	464	Node management LIF	Active Directory forest	Kerberos key administration
	TCP	749	Node management LIF	Active Directory forest	Kerberos V change & set Password (RPCSEC_GSS)
	TCP	88	Data LIF (NFS, CIFS, iSCSI)	Active Directory forest	Kerberos V authentication
	UDP	137	Data LIF (NFS, CIFS)	Active Directory forest	NetBIOS name service
	UDP	138	Data LIF (NFS, CIFS)	Active Directory forest	NetBIOS datagram service
	TCP	139	Data LIF (NFS, CIFS)	Active Directory forest	NetBIOS service session
	TCP & UDP	389	Data LIF (NFS, CIFS)	Active Directory forest	LDAP
	TCP	445	Data LIF (NFS, CIFS)	Active Directory forest	Microsoft SMB/CIFS over TCP with NetBIOS framing
	TCP	464	Data LIF (NFS, CIFS)	Active Directory forest	Kerberos V change & set password (SET_CHANGE)
	UDP	464	Data LIF (NFS, CIFS)	Active Directory forest	Kerberos key administration
	TCP	749	Data LIF (NFS, CIFS)	Active Directory forest	Kerberos V change & set password (RPCSEC_GSS)

Service	Protocol	Port	Source	Destination	Purpose
AutoSupport	HTTPS	443	Node management LIF	support.netapp.com	AutoSupport (HTTPS is the default)
	HTTP	80	Node management LIF	support.netapp.com	AutoSupport (only if the transport protocol is changed from HTTPS to HTTP)
Backup to S3	TCP	5010	Intercluster LIF	Backup endpoint or restore endpoint	Back up and restore operations for the Backup to S3 feature
Cluster	All traffic	All traffic	All LIFs on one node	All LIFs on the other node	Intercluster communications (Cloud Volumes ONTAP HA only)
	TCP	3000	Node management LIF	HA mediator	ZAPI calls (Cloud Volumes ONTAP HA only)
	ICMP	1	Node management LIF	HA mediator	Keep alive (Cloud Volumes ONTAP HA only)
DHCP	UDP	68	Node management LIF	DHCP	DHCP client for first-time setup
DHCPs	UDP	67	Node management LIF	DHCP	DHCP server
DNS	UDP	53	Node management LIF and data LIF (NFS, CIFS)	DNS	DNS
NDMP	TCP	1860–18699	Node management LIF	Destination servers	NDMP copy
SMTP	TCP	25	Node management LIF	Mail server	SMTP alerts, can be used for AutoSupport
SNMP	TCP	161	Node management LIF	Monitor server	Monitoring by SNMP traps
	UDP	161	Node management LIF	Monitor server	Monitoring by SNMP traps
	TCP	162	Node management LIF	Monitor server	Monitoring by SNMP traps
	UDP	162	Node management LIF	Monitor server	Monitoring by SNMP traps
SnapMirror	TCP	11104	Intercluster LIF	ONTAP intercluster LIFs	Management of intercluster communication sessions for SnapMirror
	TCP	11105	Intercluster LIF	ONTAP intercluster LIFs	SnapMirror data transfer
Syslog	UDP	514	Node management LIF	Syslog server	Syslog forward messages

Rules for the HA mediator external security group

The predefined external security group for the Cloud Volumes ONTAP HA mediator includes the following inbound and outbound rules.

Inbound rules

The source for inbound rules is 0.0.0.0/0.

Protocol	Port	Purpose
SSH	22	SSH connections to the HA mediator
TCP	3000	RESTful API access from the Connector

Outbound rules

The predefined security group for the HA mediator opens all outbound traffic. If that is acceptable, follow the basic outbound rules. If you need more rigid rules, use the advanced outbound rules.

Basic outbound rules

The predefined security group for the HA mediator includes the following outbound rules.

Protocol	Port	Purpose
All TCP	All	All outbound traffic
All UDP	All	All outbound traffic

Advanced outbound rules

If you need rigid rules for outbound traffic, you can use the following information to open only those ports that are required for outbound communication by the HA mediator.

Protocol	Port	Destination	Purpose
HTTP	80	Connector IP address	Download upgrades for the mediator
HTTPS	443	AWS API services	Assist with storage failover
UDP	53	AWS API services	Assist with storage failover



Rather than open ports 443 and 53, you can create an interface VPC endpoint from the target subnet to the AWS EC2 service.

Rules for the HA mediator internal security group

The predefined internal security group for the Cloud Volumes ONTAP HA mediator includes the following rules. Cloud Manager always creates this security group. You do not have the option to use your own.

Inbound rules

The predefined security group includes the following inbound rules.

Protocol	Port	Purpose
All traffic	All	Communication between the HA mediator and HA nodes

Outbound rules

The predefined security group includes the following outbound rules.

Protocol	Port	Purpose
All traffic	All	Communication between the HA mediator and HA nodes

Rules for the Connector

The security group for the Connector requires both inbound and outbound rules.

Inbound rules

Protocol	Port	Purpose
SSH	22	Provides SSH access to the Connector host
HTTP	80	Provides HTTP access from client web browsers to the local user interface and connections from Cloud Data Sense
HTTPS	443	Provides HTTPS access from client web browsers to the local user interface
TCP	3128	Provides the Cloud Data Sense instance with internet access, if your AWS network doesn't use a NAT or proxy

Outbound rules

The predefined security group for the Connector opens all outbound traffic. If that is acceptable, follow the basic outbound rules. If you need more rigid rules, use the advanced outbound rules.

Basic outbound rules

The predefined security group for the Connector includes the following outbound rules.

Protocol	Port	Purpose
All TCP	All	All outbound traffic
All UDP	All	All outbound traffic

Advanced outbound rules

If you need rigid rules for outbound traffic, you can use the following information to open only those ports that are required for outbound communication by the Connector.



The source IP address is the Connector host.

Service	Protocol	Port	Destination	Purpose
Active Directory	TCP	88	Active Directory forest	Kerberos V authentication
	TCP	139	Active Directory forest	NetBIOS service session
	TCP	389	Active Directory forest	LDAP
	TCP	445	Active Directory forest	Microsoft SMB/CIFS over TCP with NetBIOS framing
	TCP	464	Active Directory forest	Kerberos V change & set password (SET_CHANGE)
	TCP	749	Active Directory forest	Active Directory Kerberos V change & set password (RPCSEC_GSS)
	UDP	137	Active Directory forest	NetBIOS name service
	UDP	138	Active Directory forest	NetBIOS datagram service
	UDP	464	Active Directory forest	Kerberos key administration
API calls and AutoSupport	HTTP	443	Outbound internet and ONTAP cluster management LIF	API calls to AWS and ONTAP, and sending AutoSupport messages to NetApp
API calls	TCP	3000	ONTAP HA mediator	Communication with the ONTAP HA mediator
	TCP	8088	Backup to S3	API calls to Backup to S3
DNS	UDP	53	DNS	Used for DNS resolve by Cloud Manager
Cloud Data Sense	HTTP	80	Cloud Data Sense instance	Cloud Data Sense for Cloud Volumes ONTAP

Setting up the AWS KMS

If you want to use Amazon encryption with Cloud Volumes ONTAP, then you need to set up the AWS Key Management Service (KMS).

Steps

1. Ensure that an active Customer Master Key (CMK) exists.

The CMK can be an AWS-managed CMK or a customer-managed CMK. It can be in the same AWS account as Cloud Manager and Cloud Volumes ONTAP or in a different AWS account.

[AWS Documentation: Customer Master Keys \(CMKs\)](#)

2. Modify the key policy for each CMK by adding the IAM role that provides permissions to Cloud Manager as a *key user*.

Adding the IAM role as a key user gives Cloud Manager permissions to use the CMK with Cloud Volumes ONTAP.


3. If the CMK is in a different AWS account, complete the following steps:

- a. Go to the KMS console from the account where the CMK resides.
- b. Select the key.
- c. In the **General configuration** pane, copy the ARN of the key.

You'll need to provide the ARN to Cloud Manager when you create the Cloud Volumes ONTAP system.

- d. In the **Other AWS accounts** pane, add the AWS account that provides Cloud Manager with permissions.

In most cases, this is the account where Cloud Manager resides. If Cloud Manager wasn't installed in AWS, it would be the account for which you provided AWS access keys to Cloud Manager.

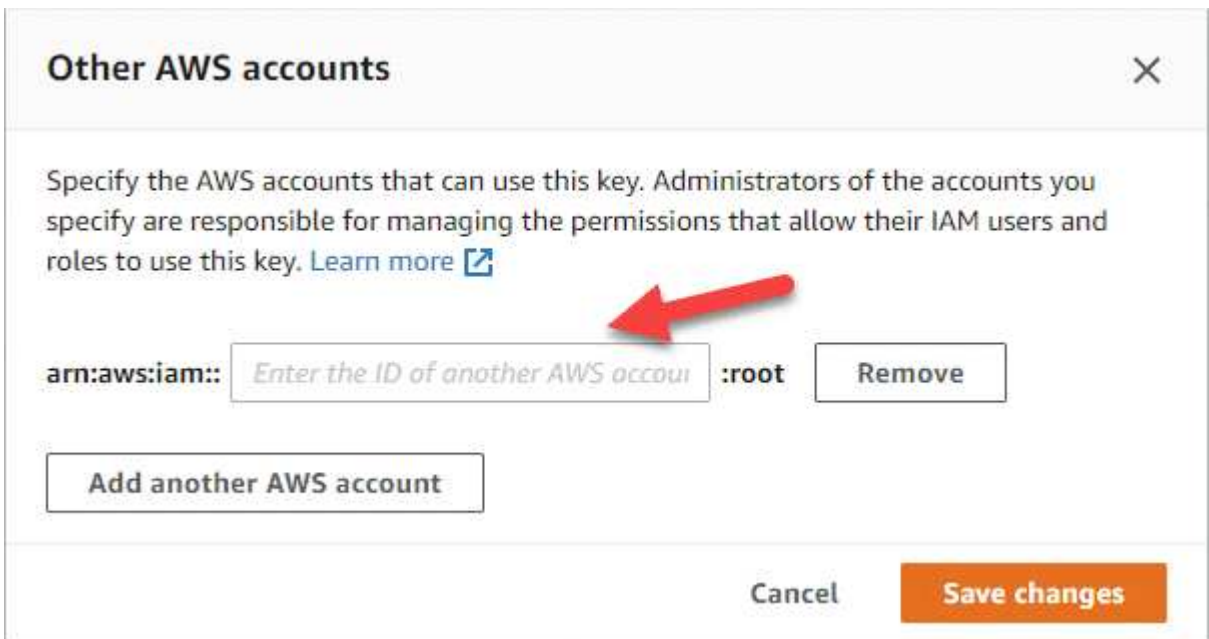

- e. Now switch to the AWS account that provides Cloud Manager with permissions and open the IAM console.
- f. Create an IAM policy that includes the permissions listed below.
- g. Attach the policy to the IAM role or IAM user that provides permissions to Cloud Manager.

The following policy provides the permissions that Cloud Manager needs to use the CMK from the external AWS account. Be sure to modify the region and account ID in the "Resource" sections.

```

{
  "Version": "2012-10-17",
  "Statement": [
    {
      "Sid": "AllowUseOfTheKey",
      "Effect": "Allow",
      "Action": [
        "kms:Encrypt",
        "kms:Decrypt",
        "kms:ReEncrypt*",
        "kms:GenerateDataKey*",
        "kms:DescribeKey"
      ],
      "Resource": [
        "arn:aws:kms:us-east-1:externalaccountid:key/externalkeyid"
      ]
    },
    {
      "Sid": "AllowAttachmentOfPersistentResources",
      "Effect": "Allow",
      "Action": [
        "kms:CreateGrant",
        "kms:ListGrants",
        "kms:RevokeGrant"
      ],
      "Resource": [
        "arn:aws:kms:us-east-1:externalaccountid:key/externalaccountid"
      ],
      "Condition": {
        "Bool": {
          "kms:GrantIsForAWSResource": true
        }
      }
    }
  ]
}

```

For additional details about this process, see [AWS Documentation: Allowing External AWS Accounts to Access a CMK](#).

4. If you are using a customer-managed CMK, modify the key policy for the CMK by adding the Cloud Volumes ONTAP IAM role as a *key user*.

This step is required if you enabled data tiering on Cloud Volumes ONTAP and want to encrypt the data

stored in the S3 bucket.

You'll need to perform this step *after* you deploy Cloud Volumes ONTAP because the IAM role is created when you create a working environment. (Of course, you do have the option to use an existing Cloud Volumes ONTAP IAM role, so it's possible to perform this step before.)

[AWS Documentation: Editing Keys](#)

Launching Cloud Volumes ONTAP in AWS

You can launch Cloud Volumes ONTAP in a single-system configuration or as an HA pair in AWS.

Before you get started

You need the following to create a working environment.

- A Connector that's up and running.
 - You should have a [Connector that is associated with your workspace](#).
 - [You should be prepared to leave the Connector running at all times](#).
- An understanding of the configuration that you want to use.

You should have prepared by choosing a configuration and by obtaining AWS networking information from your administrator. For details, see [Planning your Cloud Volumes ONTAP configuration](#).

- DNS and Active Directory for CIFS configurations.

For details, see [Networking requirements for Cloud Volumes ONTAP in AWS](#).

- An understanding of what's required to choose a specific licensing option in the Add Working Environment wizard. [Learn more about Cloud Volumes ONTAP licensing](#).

Licensing option	Requirement	How to meet the requirement
Freemium	A Marketplace subscription or NetApp Support Site (NSS) account is required.	<p>You'll have the option to subscribe to your cloud provider's marketplace from the Details & Credentials page.</p> <p>You can enter your NSS account on the Charging Methods and NSS Account page.</p>
Professional or Essential package	<p>A Marketplace subscription or capacity-based license (BYOL) is required.</p> <p>A Marketplace subscription is recommended for capacity-based charging in the event that your account doesn't have a valid capacity-based license, or in the event that your provisioned capacity exceeds the licensed capacity.</p>	<p>You'll have the option to subscribe to your cloud provider's marketplace from the Details & Credentials page.</p> <p>If you want to use a capacity-based license (BYOL) that you purchased from NetApp, you must first add it to the Digital Wallet. Learn how to add capacity-based BYOL licenses.</p>

Licensing option	Requirement	How to meet the requirement
Keystone Flex Subscription	Your account must be authorized and the subscription must be enabled for use with Cloud Volumes ONTAP.	<ol style="list-style-type: none"> 1. Contact NetApp to authorize your Cloud Manager user account with one or more Keystone Flex Subscriptions. 2. After NetApp authorizes your account, link your subscriptions for use with Cloud Volumes ONTAP. 3. Select the Keystone Flex Subscription charging method when you create a Cloud Volumes ONTAP HA pair.
Per node licensing	A Marketplace subscription is required or you need to bring your own license (BYOL). This option is available for customers with existing subscriptions or existing licenses. It's not available for new customers.	<p>If you want to use a node-based license (BYOL) that you purchased from NetApp, you must first add it to the Digital Wallet. Learn how to add node-based BYOL licenses.</p> <p>You can enter your NSS account on the Charging Methods and NSS Account page.</p>

Launching a single-node Cloud Volumes ONTAP system in AWS

If you want to launch Cloud Volumes ONTAP in AWS, you need to create a new working environment in Cloud Manager.

About this task

Immediately after you create the working environment, Cloud Manager launches a test instance in the specified VPC to verify connectivity. If successful, Cloud Manager immediately terminates the instance and then starts deploying the Cloud Volumes ONTAP system. If Cloud Manager cannot verify connectivity, creation of the working environment fails. The test instance is either a t2.nano (for default VPC tenancy) or m3.medium (for dedicated VPC tenancy).

Steps

1. On the Canvas page, click **Add Working Environment** and follow the prompts.
2. **Choose a Location:** Select **Amazon Web Services** and **Cloud Volumes ONTAP Single Node**.
3. If you're prompted, [create a Connector](#).
4. **Details and Credentials:** Optionally change the AWS credentials and subscription, enter a working environment name, add tags if needed, and then enter a password.

Some of the fields in this page are self-explanatory. The following table describes fields for which you might need guidance:

Field	Description
Working Environment Name	Cloud Manager uses the working environment name to name both the Cloud Volumes ONTAP system and the Amazon EC2 instance. It also uses the name as the prefix for the predefined security group, if you select that option.

Field	Description
Add tags	<p>AWS tags are metadata for your AWS resources. Cloud Manager adds the tags to the Cloud Volumes ONTAP instance and each AWS resource associated with the instance.</p> <p>You can add up to four tags from the user interface when creating a working environment, and then you can add more after its created. Note that the API does not limit you to four tags when creating a working environment.</p> <p>For information about tags, refer to AWS Documentation: Tagging your Amazon EC2 Resources.</p>
User name and password	<p>These are the credentials for the Cloud Volumes ONTAP cluster administrator account. You can use these credentials to connect to Cloud Volumes ONTAP through System Manager or its CLI. Keep the default <i>admin</i> user name or change it to a custom user name.</p>
Edit Credentials	<p>Choose the AWS credentials associated with the account where you want to deploy this system. You can also associate the AWS Marketplace subscription to use with this Cloud Volumes ONTAP system.</p> <p>Click Add Subscription to associate the selected credentials with a new AWS Marketplace subscription. The subscription can be for an annual contract or to pay for Cloud Volumes ONTAP at an hourly rate.</p> <p>Learn how to add additional AWS credentials to Cloud Manager.</p>

The following video shows how to associate a pay-as-you-go Marketplace subscription to your AWS credentials:

► https://docs.netapp.com/us-en/cloud-manager-cloud-volumes-ontap//media/video_subscribing_aws.mp4

(video)

If multiple IAM users work in the same AWS account, then each user needs to subscribe. After the first user subscribes, the AWS Marketplace informs subsequent users that they're already subscribed, as shown in the image below. While a subscription is in place for the *AWS account*, each IAM user needs to associate themselves with that subscription. If you see the message shown below, click the **click here** link to go to Cloud Central and complete the process.



Cloud Manager (for Cloud Volumes ONTAP)

You are currently subscribed to this product and will be charged for your accumulated usage at the end of your next billing cycle, based on the costs listed in Pricing information on the right.

**Having issues signing up for your product?**
If you were unable to complete the set-up process for this software, please [click here](#) to be taken to the product's registration area.

Subscribe

You are already subscribed to this product

Pricing Details

Software Fees

5. **Services:** Keep the services enabled or disable the individual services that you don't want to use with Cloud Volumes ONTAP.

- [Learn more about Cloud Data Sense.](#)
- [Learn more about Cloud Backup.](#)
- [Learn more about Monitoring.](#)

6. **Location & Connectivity:** Enter the network information that you recorded in the [AWS worksheet](#).

If you have an AWS Outpost, you can deploy a single node Cloud Volumes ONTAP system in that Outpost by selecting the Outpost VPC. The experience is the same as any other VPC that resides in AWS.

The following image shows the page filled out:

Location	Connectivity
<div>AWS Region US West Oregon</div>	<div>Security Group <input checked="" type="radio"/> Generated security group <input type="radio"/> Use existing security group</div>
<div>VPC vpc-3a01e05f - 172.31.0.0/16</div>	<div>SSH Authentication Method <input checked="" type="radio"/> Password <input type="radio"/> Key Pair</div>
<div>Subnet 172.31.5.0/24 (OCCM subnet)</div>	

7. **Data Encryption:** Choose no data encryption or AWS-managed encryption.

For AWS-managed encryption, you can choose a different Customer Master Key (CMK) from your account or another AWS account.



You can't change the AWS data encryption method after you create a Cloud Volumes ONTAP system.

[Learn how to set up the AWS KMS for Cloud Volumes ONTAP.](#)

[Learn more about supported encryption technologies.](#)

8. **Charging Methods and NSS Account:** Specify which charging option would you like to use with this system, and then specify a NetApp Support Site account.
 - [Learn about these charging methods.](#)
 - [Learn what's required in the wizard for the licensing method that you want to use.](#)

9. **Cloud Volumes ONTAP Configuration** (annual AWS Marketplace contract only): Review the default configuration and click **Continue** or click **Change Configuration** to select your own configuration.

If you keep the default configuration, then you only need to specify a volume and then review and approve the configuration.

10. **Preconfigured Packages** (hourly or BYOL only): Select one of the packages to quickly launch Cloud Volumes ONTAP, or click **Change Configuration** to select your own configuration.

If you choose one of the packages, then you only need to specify a volume and then review and approve the configuration.

11. **IAM Role:** It's best to keep the default option to let Cloud Manager create the role for you.

If you prefer to use your own policy, it must meet [policy requirements for Cloud Volumes ONTAP nodes](#).

12. **Licensing:** Change the Cloud Volumes ONTAP version as needed, select a license, an instance type, and the instance tenancy.

Licensing

Cloud Volumes ONTAP version to deploy: ONTAP.ENG-9.7. [Change version](#)

Cloud Volumes ONTAP Explore

Cloud Volumes ONTAP Standard

Cloud Volumes ONTAP Premium

Cloud Volumes ONTAP Standard Instances

Instance Type: m5.2xlarge

Instance Tenancy: Shared

If your needs change after you launch the instance, you can modify the license or instance type later.



If a newer Release Candidate, General Availability, or patch release is available for the selected version, then Cloud Manager updates the system to that version when creating the working environment. For example, the update occurs if you select Cloud Volumes ONTAP 9.6 RC1 and 9.6 GA is available. The update does not occur from one release to another—for example, from 9.6 to 9.7.

13. **Underlying Storage Resources:** Choose settings for the initial aggregate: a disk type, a size for each disk, and whether data tiering should be enabled.

Note the following:

- The disk type is for the initial volume. You can choose a different disk type for subsequent volumes.
- The disk size is for all disks in the initial aggregate and for any additional aggregates that Cloud Manager creates when you use the simple provisioning option. You can create aggregates that use a different disk size by using the advanced allocation option.

For help choosing a disk type and size, see [Sizing your system in AWS](#).

- You can choose a specific volume tiering policy when you create or edit a volume.
- If you disable data tiering, you can enable it on subsequent aggregates.

[Learn how data tiering works.](#)

14. **Write Speed & WORM:** Choose **Normal** or **High** write speed, and activate write once, read many (WORM) storage, if desired.

[Learn more about write speed.](#)

WORM can't be enabled if Cloud Backup was enabled or if data tiering was enabled.

[Learn more about WORM storage.](#)

15. **Create Volume:** Enter details for the new volume or click **Skip**.

Some of the fields in this page are self-explanatory. The following table describes fields for which you might need guidance:

Field	Description
Size	The maximum size that you can enter largely depends on whether you enable thin provisioning, which enables you to create a volume that is bigger than the physical storage currently available to it.
Access control (for NFS only)	An export policy defines the clients in the subnet that can access the volume. By default, Cloud Manager enters a value that provides access to all instances in the subnet.
Permissions and Users / Groups (for CIFS only)	These fields enable you to control the level of access to a share for users and groups (also called access control lists or ACLs). You can specify local or domain Windows users or groups, or UNIX users or groups. If you specify a domain Windows user name, you must include the user's domain using the format domain\username.
Snapshot Policy	A Snapshot copy policy specifies the frequency and number of automatically created NetApp Snapshot copies. A NetApp Snapshot copy is a point-in-time file system image that has no performance impact and requires minimal storage. You can choose the default policy or none. You might choose none for transient data: for example, tempdb for Microsoft SQL Server.
Advanced options (for NFS only)	Select an NFS version for the volume: either NFSv3 or NFSv4.

Field	Description
Initiator group and IQN (for iSCSI only)	<p>iSCSI storage targets are called LUNs (logical units) and are presented to hosts as standard block devices.</p> <p>Initiator groups are tables of iSCSI host node names and control which initiators have access to which LUNs.</p> <p>iSCSI targets connect to the network through standard Ethernet network adapters (NICs), TCP offload engine (TOE) cards with software initiators, converged network adapters (CNAs) or dedicated host bus adapters (HBAs) and are identified by iSCSI qualified names (IQNs).</p> <p>When you create an iSCSI volume, Cloud Manager automatically creates a LUN for you. We've made it simple by creating just one LUN per volume, so there's no management involved. After you create the volume, use the IQN to connect to the LUN from your hosts.</p>

The following image shows the Volume page filled out for the CIFS protocol:

Volume Details, Protection & Protocol

Details & Protection

Volume Name:

Size (GB):

Snapshot Policy:

Default Policy

Protocol

NFS **CIFS** iSCSI

Share name:

Permissions:

Users / Groups:

Valid users and groups separated by a semicolon

16. **CIFS Setup:** If you chose the CIFS protocol, set up a CIFS server.

Field	Description
DNS Primary and Secondary IP Address	<p>The IP addresses of the DNS servers that provide name resolution for the CIFS server.</p> <p>The listed DNS servers must contain the service location records (SRV) needed to locate the Active Directory LDAP servers and domain controllers for the domain that the CIFS server will join.</p>
Active Directory Domain to join	The FQDN of the Active Directory (AD) domain that you want the CIFS server to join.
Credentials authorized to join the domain	The name and password of a Windows account with sufficient privileges to add computers to the specified Organizational Unit (OU) within the AD domain.
CIFS server NetBIOS name	A CIFS server name that is unique in the AD domain.

Field	Description
Organizational Unit	The organizational unit within the AD domain to associate with the CIFS server. The default is CN=Computers. If you configure AWS Managed Microsoft AD as the AD server for Cloud Volumes ONTAP, you should enter OU=Computers,OU=corp in this field.
DNS Domain	The DNS domain for the Cloud Volumes ONTAP storage virtual machine (SVM). In most cases, the domain is the same as the AD domain.
NTP Server	Select Use Active Directory Domain to configure an NTP server using the Active Directory DNS. If you need to configure an NTP server using a different address, then you should use the API. See the Cloud Manager automation docs for details. Note that you can configure an NTP server only when creating a CIFS server. It's not configurable after you create the CIFS server.

17. **Usage Profile, Disk Type, and Tiering Policy:** Choose whether you want to enable storage efficiency features and edit the volume tiering policy, if needed.

For more information, see [Understanding volume usage profiles](#) and [Data tiering overview](#).

18. **Review & Approve:** Review and confirm your selections.

- Review details about the configuration.
- Click **More information** to review details about support and the AWS resources that Cloud Manager will purchase.
- Select the **I understand...** check boxes.
- Click **Go**.

Result

Cloud Manager launches the Cloud Volumes ONTAP instance. You can track the progress in the timeline.

If you experience any issues launching the Cloud Volumes ONTAP instance, review the failure message. You can also select the working environment and click Re-create environment.

For additional help, go to [NetApp Cloud Volumes ONTAP Support](#).

After you finish

- If you provisioned a CIFS share, give users or groups permissions to the files and folders and verify that those users can access the share and create a file.
- If you want to apply quotas to volumes, use System Manager or the CLI.

Quotas enable you to restrict or track the disk space and number of files used by a user, group, or qtree.

Launching a Cloud Volumes ONTAP HA pair in AWS

If you want to launch a Cloud Volumes ONTAP HA pair in AWS, you need to create an HA working environment in Cloud Manager.

Limitation

At this time, HA pairs are not supported with AWS Outposts.

About this task

Immediately after you create the working environment, Cloud Manager launches a test instance in the specified VPC to verify connectivity. If successful, Cloud Manager immediately terminates the instance and then starts deploying the Cloud Volumes ONTAP system. If Cloud Manager cannot verify connectivity, creation of the working environment fails. The test instance is either a t2.nano (for default VPC tenancy) or m3.medium (for dedicated VPC tenancy).

Steps

1. On the Canvas page, click **Add Working Environment** and follow the prompts.
2. **Choose a Location:** Select **Amazon Web Services** and **Cloud Volumes ONTAP Single Node**.
3. **Details and Credentials:** Optionally change the AWS credentials and subscription, enter a working environment name, add tags if needed, and then enter a password.

Some of the fields in this page are self-explanatory. The following table describes fields for which you might need guidance:

Field	Description
Working Environment Name	Cloud Manager uses the working environment name to name both the Cloud Volumes ONTAP system and the Amazon EC2 instance. It also uses the name as the prefix for the predefined security group, if you select that option.
Add tags	<p>AWS tags are metadata for your AWS resources. Cloud Manager adds the tags to the Cloud Volumes ONTAP instance and each AWS resource associated with the instance.</p> <p>You can add up to four tags from the user interface when creating a working environment, and then you can add more after its created. Note that the API does not limit you to four tags when creating a working environment.</p> <p>For information about tags, refer to AWS Documentation: Tagging your Amazon EC2 Resources.</p>
User name and password	These are the credentials for the Cloud Volumes ONTAP cluster administrator account. You can use these credentials to connect to Cloud Volumes ONTAP through System Manager or its CLI. Keep the default <i>admin</i> user name or change it to a custom user name.
Edit Credentials	<p>Choose the AWS credentials and marketplace subscription to use with this Cloud Volumes ONTAP system.</p> <p>Click Add Subscription to associate the selected credentials with a new AWS Marketplace subscription. The subscription can be for an annual contract or to pay for Cloud Volumes ONTAP at an hourly rate.</p> <p>If purchased a license directly from NetApp (BYOL), then an AWS subscription isn't required.</p> <p>Learn how to add additional AWS credentials to Cloud Manager.</p>

The following video shows how to associate a pay-as-you-go Marketplace subscription to your AWS credentials:

► https://docs.netapp.com/us-en/cloud-manager-cloud-volumes-ontap//media/video_subscribing_aws.mp4

(video)



If multiple IAM users work in the same AWS account, then each user needs to subscribe. After the first user subscribes, the AWS Marketplace informs subsequent users that they're already subscribed, as shown in the image below. While a subscription is in place for the *AWS account*, each IAM user needs to associate themselves with that subscription. If you see the message shown below, click the **click here** link to go to Cloud Central and complete the process.

4. **Services:** Keep the services enabled or disable the individual services that you don't want to use with this Cloud Volumes ONTAP system.
 - [Learn more about Cloud Data Sense.](#)
 - [Learn more about Cloud Backup.](#)
 - [Learn more about Monitoring.](#)
5. **HA Deployment Models:** Choose an HA configuration.

For an overview of the deployment models, see [Cloud Volumes ONTAP HA for AWS](#).

6. **Region & VPC:** Enter the network information that you recorded in the AWS worksheet.

The following image shows the page filled out for a multiple AZ configuration:

Region & VPC		
AWS Region	VPC	Security group
US East N. Virginia	vpc-a76d91c2 - 172.31.0.0/16	Use a generated security group
Node 1:	Node 2:	Mediator:
Availability Zone	Availability Zone	Availability Zone
us-east-1a	us-east-1b	us-east-1c
Subnet	Subnet	Subnet
172.31.8.0/24	172.31.9.0/24	172.31.2.0/24

7. **Connectivity and SSH Authentication:** Choose connection methods for the HA pair and the mediator.
8. **Floating IPs:** If you chose multiple AZs, specify the floating IP addresses.

The IP addresses must be outside of the CIDR block for all VPCs in the region. For additional details, see [AWS networking requirements for Cloud Volumes ONTAP HA in multiple AZs](#).

9. **Route Tables:** If you chose multiple AZs, select the route tables that should include routes to the floating

IP addresses.

If you have more than one route table, it is very important to select the correct route tables. Otherwise, some clients might not have access to the Cloud Volumes ONTAP HA pair. For more information about route tables, refer to [AWS Documentation: Route Tables](#).

10. **Data Encryption:** Choose no data encryption or AWS-managed encryption.

For AWS-managed encryption, you can choose a different Customer Master Key (CMK) from your account or another AWS account.



You can't change the AWS data encryption method after you create a Cloud Volumes ONTAP system.

[Learn how to set up the AWS KMS for Cloud Volumes ONTAP.](#)

[Learn more about supported encryption technologies.](#)

11. **Charging Methods and NSS Account:** Specify which charging option would you like to use with this system, and then specify a NetApp Support Site account.

- [Learn about these charging methods.](#)
- [Learn what's required in the wizard for the licensing method that you want to use.](#)

12. **Cloud Volumes ONTAP Configuration** (annual AWS Marketplace contract only): Review the default configuration and click **Continue** or click **Change Configuration** to select your own configuration.

If you keep the default configuration, then you only need to specify a volume and then review and approve the configuration.

13. **Preconfigured Packages** (hourly or BYOL only): Select one of the packages to quickly launch Cloud Volumes ONTAP, or click **Change Configuration** to select your own configuration.

If you choose one of the packages, then you only need to specify a volume and then review and approve the configuration.

14. **IAM Role:** It's best to keep the default option to let Cloud Manager create the role for you.

If you prefer to use your own policy, it must meet [policy requirements for Cloud Volumes ONTAP nodes and the HA mediator](#).

15. **Licensing:** Change the Cloud Volumes ONTAP version as needed, select a license, an instance type, and the instance tenancy.

Licensing

Cloud Volumes ONTAP version to deploy: ONTAP.ENG-9.7. [Change version](#)



Cloud Volumes ONTAP Explore



Cloud Volumes ONTAP Standard



Cloud Volumes ONTAP Premium

Cloud Volumes ONTAP Standard Instances

Instance Type

m5.2xlarge

Instance Tenancy

Shared

If your needs change after you launch the instances, you can modify the license or instance type later.



If a newer Release Candidate, General Availability, or patch release is available for the selected version, then Cloud Manager updates the system to that version when creating the working environment. For example, the update occurs if you select Cloud Volumes ONTAP 9.6 RC1 and 9.6 GA is available. The update does not occur from one release to another—for example, from 9.6 to 9.7.

16. **Underlying Storage Resources:** Choose settings for the initial aggregate: a disk type, a size for each disk, and whether data tiering should be enabled.

Note the following:

- The disk type is for the initial volume. You can choose a different disk type for subsequent volumes.
- The disk size is for all disks in the initial aggregate and for any additional aggregates that Cloud Manager creates when you use the simple provisioning option. You can create aggregates that use a different disk size by using the advanced allocation option.

For help choosing a disk type and size, see [Sizing your system in AWS](#).

- You can choose a specific volume tiering policy when you create or edit a volume.
- If you disable data tiering, you can enable it on subsequent aggregates.

[Learn how data tiering works.](#)

17. **Write Speed & WORM:** Choose **Normal** or **High** write speed, and activate write once, read many (WORM) storage, if desired.

[Learn more about write speed.](#)

WORM can't be enabled if Cloud Backup was enabled or if data tiering was enabled.

[Learn more about WORM storage.](#)

18. **Create Volume:** Enter details for the new volume or click **Skip**.

Some of the fields in this page are self-explanatory. The following table describes fields for which you might need guidance:

Field	Description
Size	The maximum size that you can enter largely depends on whether you enable thin provisioning, which enables you to create a volume that is bigger than the physical storage currently available to it.
Access control (for NFS only)	An export policy defines the clients in the subnet that can access the volume. By default, Cloud Manager enters a value that provides access to all instances in the subnet.
Permissions and Users / Groups (for CIFS only)	These fields enable you to control the level of access to a share for users and groups (also called access control lists or ACLs). You can specify local or domain Windows users or groups, or UNIX users or groups. If you specify a domain Windows user name, you must include the user's domain using the format domain\username.
Snapshot Policy	A Snapshot copy policy specifies the frequency and number of automatically created NetApp Snapshot copies. A NetApp Snapshot copy is a point-in-time file system image that has no performance impact and requires minimal storage. You can choose the default policy or none. You might choose none for transient data: for example, tempdb for Microsoft SQL Server.
Advanced options (for NFS only)	Select an NFS version for the volume: either NFSv3 or NFSv4.
Initiator group and IQN (for iSCSI only)	<p>iSCSI storage targets are called LUNs (logical units) and are presented to hosts as standard block devices.</p> <p>Initiator groups are tables of iSCSI host node names and control which initiators have access to which LUNs.</p> <p>iSCSI targets connect to the network through standard Ethernet network adapters (NICs), TCP offload engine (TOE) cards with software initiators, converged network adapters (CNAs) or dedicated host bus adapters (HBAs) and are identified by iSCSI qualified names (IQNs).</p> <p>When you create an iSCSI volume, Cloud Manager automatically creates a LUN for you. We've made it simple by creating just one LUN per volume, so there's no management involved. After you create the volume, use the IQN to connect to the LUN from your hosts.</p>

The following image shows the Volume page filled out for the CIFS protocol:

Volume Details, Protection & Protocol

Details & Protection

Volume Name: Size (GB): ⓘ

Snapshot Policy: ▼

ⓘ Default Policy

Protocol

NFS
CIFS
iSCSI

Share name: Permissions: ▼

Users / Groups:

Valid users and groups separated by a semicolon

19. **CIFS Setup:** If you selected the CIFS protocol, set up a CIFS server.

Field	Description
DNS Primary and Secondary IP Address	The IP addresses of the DNS servers that provide name resolution for the CIFS server. The listed DNS servers must contain the service location records (SRV) needed to locate the Active Directory LDAP servers and domain controllers for the domain that the CIFS server will join.
Active Directory Domain to join	The FQDN of the Active Directory (AD) domain that you want the CIFS server to join.
Credentials authorized to join the domain	The name and password of a Windows account with sufficient privileges to add computers to the specified Organizational Unit (OU) within the AD domain.
CIFS server NetBIOS name	A CIFS server name that is unique in the AD domain.
Organizational Unit	The organizational unit within the AD domain to associate with the CIFS server. The default is CN=Computers. If you configure AWS Managed Microsoft AD as the AD server for Cloud Volumes ONTAP, you should enter OU=Computers,OU=corp in this field.
DNS Domain	The DNS domain for the Cloud Volumes ONTAP storage virtual machine (SVM). In most cases, the domain is the same as the AD domain.
NTP Server	Select Use Active Directory Domain to configure an NTP server using the Active Directory DNS. If you need to configure an NTP server using a different address, then you should use the API. See the Cloud Manager automation docs for details. Note that you can configure an NTP server only when creating a CIFS server. It's not configurable after you create the CIFS server.

20. **Usage Profile, Disk Type, and Tiering Policy:** Choose whether you want to enable storage efficiency features and edit the volume tiering policy, if needed.

For more information, see [Understanding volume usage profiles](#) and [Data tiering overview](#).

21. **Review & Approve:** Review and confirm your selections.

- a. Review details about the configuration.
- b. Click **More information** to review details about support and the AWS resources that Cloud Manager will purchase.
- c. Select the **I understand...** check boxes.
- d. Click **Go**.

Result

Cloud Manager launches the Cloud Volumes ONTAP HA pair. You can track the progress in the timeline.

If you experience any issues launching the HA pair, review the failure message. You can also select the working environment and click Re-create environment.

For additional help, go to [NetApp Cloud Volumes ONTAP Support](#).

After you finish

- If you provisioned a CIFS share, give users or groups permissions to the files and folders and verify that those users can access the share and create a file.
- If you want to apply quotas to volumes, use System Manager or the CLI.

Quotas enable you to restrict or track the disk space and number of files used by a user, group, or qtree.

Get started with Cloud Volumes ONTAP in the AWS C2S environment

Similar to a standard AWS region, you can use Cloud Manager in the [AWS Commercial Cloud Services \(C2S\)](#) environment to deploy Cloud Volumes ONTAP, which provides enterprise-class features for your cloud storage. AWS C2S is a closed region specific to the U.S. Intelligence Community; the instructions on this page only apply to AWS C2S region users.

Supported features in C2S

The following features are available from Cloud Manager in the C2S environment:

- Cloud Volumes ONTAP
- Data replication
- A timeline for auditing

For Cloud Volumes ONTAP, you can create a single node system or an HA pair. Both licensing options are available: pay-as-you-go and bring your own license (BYOL).

Data tiering to S3 is also supported with Cloud Volumes ONTAP in C2S.

Limitations

None of NetApp's cloud services are available from Cloud Manager.

Because there's no internet access in the C2S environment, the following features aren't available either:

- Integration with NetApp Cloud Central
- Automated software upgrades from Cloud Manager
- NetApp AutoSupport
- AWS cost information for Cloud Volumes ONTAP resources

Deployment overview

Getting started with Cloud Volumes ONTAP in C2S includes a few steps.

1. Preparing your AWS environment.

This includes setting up networking, subscribing to Cloud Volumes ONTAP, setting up permissions, and optionally setting up the AWS KMS.

2. Installing the Connector and setting up Cloud Manager.

Before you can start using Cloud Manager to deploy Cloud Volumes ONTAP, you'll need to create a *Connector*. The Connector enables Cloud Manager to manage resources and processes within your public cloud environment (this includes Cloud Volumes ONTAP).

You'll log in to Cloud Manager from the software that gets installed on the Connector instance.

3. Launching Cloud Volumes ONTAP from Cloud Manager.

Each of these steps are described below.

Prepare your AWS environment

Your AWS environment must meet a few requirements.

Set up your networking

Set up your AWS networking so Cloud Volumes ONTAP can operate properly.

Steps

1. Choose the VPC and subnets in which you want to launch the Connector instance and Cloud Volumes ONTAP instances.
2. Ensure that your VPC and subnets will support connectivity between the Connector and Cloud Volumes ONTAP.
3. Set up a VPC endpoint to the S3 service.

A VPC endpoint is required if you want to tier cold data from Cloud Volumes ONTAP to low-cost object storage.

Subscribe to Cloud Volumes ONTAP

A Marketplace subscription is required to deploy Cloud Volumes ONTAP from Cloud Manager.

Steps

1. Go to the AWS Intelligence Community Marketplace and search for Cloud Volumes ONTAP.
2. Select the offering that you plan to deploy.

3. Review the terms and click **Accept**.
4. Repeat these steps for the other offerings, if you plan to deploy them.

You must use Cloud Manager to launch Cloud Volumes ONTAP instances. You must not launch Cloud Volumes ONTAP instances from the EC2 console.

Set up permissions

Set up IAM policies and roles that provide Cloud Manager and Cloud Volumes ONTAP with the permissions that they need to perform actions in the AWS Commercial Cloud Services environment.

You need an IAM policy and IAM role for each of the following:

- The Connector instance
- Cloud Volumes ONTAP instances
- The Cloud Volumes ONTAP HA mediator instance (if you want to deploy HA pairs)

Steps

1. Go to the AWS IAM console and click **Policies**.
2. Create a policy for the Connector instance.

```
{
  "Version": "2012-10-17",
  "Statement": [{
    "Effect": "Allow",
    "Action": [
      "ec2:DescribeInstances",
      "ec2:DescribeInstanceStatus",
      "ec2:RunInstances",
      "ec2:ModifyInstanceAttribute",
      "ec2:DescribeRouteTables",
      "ec2:DescribeImages",
      "ec2:CreateTags",
      "ec2:CreateVolume",
      "ec2:DescribeVolumes",
      "ec2:ModifyVolumeAttribute",
      "ec2>DeleteVolume",
      "ec2:CreateSecurityGroup",
      "ec2>DeleteSecurityGroup",
      "ec2:DescribeSecurityGroups",
      "ec2:RevokeSecurityGroupEgress",
      "ec2:RevokeSecurityGroupIngress",
      "ec2:AuthorizeSecurityGroupEgress",
      "ec2:AuthorizeSecurityGroupIngress",
      "ec2:CreateNetworkInterface",
      "ec2:DescribeNetworkInterfaces",
      "ec2>DeleteNetworkInterface",
```

```

        "ec2:ModifyNetworkInterfaceAttribute",
        "ec2:DescribeSubnets",
        "ec2:DescribeVpcs",
        "ec2:DescribeDhcpOptions",
        "ec2:CreateSnapshot",
        "ec2>DeleteSnapshot",
        "ec2:DescribeSnapshots",
        "ec2:GetConsoleOutput",
        "ec2:DescribeKeyPairs",
        "ec2:DescribeRegions",
        "ec2>DeleteTags",
        "ec2:DescribeTags",
        "cloudformation:CreateStack",
        "cloudformation>DeleteStack",
        "cloudformation:DescribeStacks",
        "cloudformation:DescribeStackEvents",
        "cloudformation:ValidateTemplate",
        "iam:PassRole",
        "iam:CreateRole",
        "iam>DeleteRole",
        "iam:PutRolePolicy",
        "iam:CreateInstanceProfile",
        "iam>DeleteRolePolicy",
        "iam:AddRoleToInstanceProfile",
        "iam:RemoveRoleFromInstanceProfile",
        "iam>DeleteInstanceProfile",
        "s3:GetObject",
        "s3:ListBucket",
        "s3:GetBucketTagging",
        "s3:GetBucketLocation",
        "s3:ListAllMyBuckets",
        "kms:List*",
        "kms:Describe*",
        "ec2:AssociateIamInstanceProfile",
        "ec2:DescribeIamInstanceProfileAssociations",
        "ec2:DisassociateIamInstanceProfile",
        "ec2:DescribeInstanceAttribute",
        "ec2:CreatePlacementGroup",
        "ec2>DeletePlacementGroup"
    ],
    "Resource": "*"
},
{
    "Sid": "fabricPoolPolicy",
    "Effect": "Allow",
    "Action": [

```

```

        "s3:DeleteBucket",
        "s3:GetLifecycleConfiguration",
        "s3:PutLifecycleConfiguration",
        "s3:PutBucketTagging",
        "s3:ListBucketVersions"
    ],
    "Resource": [
        "arn:aws-iso:s3:::fabric-pool*"
    ]
},
{
    "Effect": "Allow",
    "Action": [
        "ec2:StartInstances",
        "ec2:StopInstances",
        "ec2:TerminateInstances",
        "ec2:AttachVolume",
        "ec2:DetachVolume"
    ],
    "Condition": {
        "StringLike": {
            "ec2:ResourceTag/WorkingEnvironment": "*"
        }
    },
    "Resource": [
        "arn:aws-iso:ec2:*:*:instance/*"
    ]
},
{
    "Effect": "Allow",
    "Action": [
        "ec2:AttachVolume",
        "ec2:DetachVolume"
    ],
    "Resource": [
        "arn:aws-iso:ec2:*:*:volume/*"
    ]
}
]
}

```

3. Create a policy for Cloud Volumes ONTAP.


```

{
  "Version": "2012-10-17",
  "Statement": [{
    "Action": "s3:ListAllMyBuckets",
    "Resource": "arn:aws-iso:s3:::*",
    "Effect": "Allow"
  }, {
    "Action": [
      "s3:ListBucket",
      "s3:GetBucketLocation"
    ],
    "Resource": "arn:aws-iso:s3:::fabric-pool-*",
    "Effect": "Allow"
  }, {
    "Action": [
      "s3:GetObject",
      "s3:PutObject",
      "s3:DeleteObject"
    ],
    "Resource": "arn:aws-iso:s3:::fabric-pool-*",
    "Effect": "Allow"
  }]
}

```

4. If you plan to deploy a Cloud Volumes ONTAP HA pair, create a policy for the HA mediator.

```

{
  "Version": "2012-10-17",
  "Statement": [{
    "Effect": "Allow",
    "Action": [
      "ec2:AssignPrivateIpAddresses",
      "ec2:CreateRoute",
      "ec2>DeleteRoute",
      "ec2:DescribeNetworkInterfaces",
      "ec2:DescribeRouteTables",
      "ec2:DescribeVpcs",
      "ec2:ReplaceRoute",
      "ec2:UnassignPrivateIpAddresses"
    ],
    "Resource": "*"
  }]
}

```

5. Create IAM roles with the role type Amazon EC2 and attach the policies that you created in the previous steps.

Similar to the policies, you should have one IAM role for the Connector, one for the Cloud Volumes ONTAP nodes, and one for the HA mediator (if you want to deploy HA pairs).

You must select the Connector IAM role when you launch the Connector instance.

You can select the IAM roles for Cloud Volumes ONTAP and the HA mediator when you create a Cloud Volumes ONTAP working environment from Cloud Manager.

Set up the AWS KMS

If you want to use Amazon encryption with Cloud Volumes ONTAP, ensure that requirements are met for the AWS Key Management Service.

Steps

1. Ensure that an active Customer Master Key (CMK) exists in your account or in another AWS account.

The CMK can be an AWS-managed CMK or a customer-managed CMK.

2. If the CMK is in an AWS account separate from the account where you plan to deploy Cloud Volumes ONTAP, then you need to obtain the ARN of that key.

You'll need to provide the ARN to Cloud Manager when you create the Cloud Volumes ONTAP system.

3. Add the IAM role for the Cloud Manager instance to the list of key users for a CMK.

This gives Cloud Manager permissions to use the CMK with Cloud Volumes ONTAP.

Install and set up Cloud Manager

Before you can launch Cloud Volumes ONTAP systems in AWS, you must first launch the Connector instance from the AWS Marketplace and then log in and set up Cloud Manager.

Steps

1. Obtain a root certificate signed by a certificate authority (CA) in the Privacy Enhanced Mail (PEM) Base-64 encoded X.509 format. Consult your organization's policies and procedures for obtaining the certificate.

You'll need to upload the certificate during the setup process. Cloud Manager uses the trusted certificate when sending requests to AWS over HTTPS.

2. Launch the Connector instance:
 - a. Go to the AWS Intelligence Community Marketplace page for Cloud Manager.
 - b. On the Custom Launch tab, choose the option to launch the instance from the EC2 console.
 - c. Follow the prompts to configure the instance.

Note the following as you configure the instance:

- We recommend t3.xlarge.
- You must choose the IAM role that you created when preparing your AWS environment.

- You should keep the default storage options.
 - The required connection methods for the Connector are as follows: SSH, HTTP, and HTTPS.
3. Set up Cloud Manager from a host that has a connection to the Connector instance:
 - a. Open a web browser and enter the following URL: <http://ipaddress:80>
 - b. Specify a proxy server for connectivity to AWS services.
 - c. Upload the certificate that you obtained in step 1.
 - d. Complete the steps in the Setup wizard to set up Cloud Manager.
 - **System Details:** Enter a name for this instance of Cloud Manager and provide your company name.
 - **Create User:** Create the Admin user that you'll use to administer Cloud Manager.
 - **Review:** Review the details and approve the end user license agreement.
 - e. To complete installation of the CA-signed certificate, restart the Connector instance from the EC2 console.
 4. After the Connector restarts, log in using the administrator user account that you created in the Setup wizard.

Launch Cloud Volumes ONTAP

You can launch Cloud Volumes ONTAP instances in the AWS Commercial Cloud Services environment by creating new working environments in Cloud Manager.

What you'll need

- If you purchased a license, you must have the license file that you received from NetApp. The license file is a .NLF file in JSON format.
- A key pair is required to enable key-based SSH authentication to the HA mediator.

Steps

1. On the Working Environments page, click **Add Working Environment**.
2. Under Create, select Cloud Volumes ONTAP or Cloud Volumes ONTAP HA.
3. Complete the steps in the wizard to launch the Cloud Volumes ONTAP system.

Note the following as you complete the wizard:

- If you want to deploy Cloud Volumes ONTAP HA in multiple Availability Zones, deploy the configuration as follows because only two AZs were available in the AWS Commercial Cloud Services environment at the time of publication:
 - Node 1: Availability Zone A
 - Node 2: Availability Zone B
 - Mediator: Availability Zone A or B
- You should leave the default option to use a generated security group.

The predefined security group includes the rules that Cloud Volumes ONTAP needs to operate successfully. If you have a requirement to use your own, you can refer to the security group section below.

- You must choose the IAM role that you created when preparing your AWS environment.

- The underlying AWS disk type is for the initial Cloud Volumes ONTAP volume.

You can choose a different disk type for subsequent volumes.

- The performance of AWS disks is tied to disk size.

You should choose the disk size that gives you the sustained performance that you need. Refer to AWS documentation for more details about EBS performance.

- The disk size is the default size for all disks on the system.



If you need a different size later, you can use the Advanced allocation option to create an aggregate that uses disks of a specific size.

- Storage efficiency features can improve storage utilization and reduce the total amount of storage that you need.

Result

Cloud Manager launches the Cloud Volumes ONTAP instance. You can track the progress in the timeline.

Security group rules

Cloud Manager creates security groups that include the inbound and outbound rules that Cloud Manager and Cloud Volumes ONTAP need to operate successfully in the cloud. You might want to refer to the ports for testing purposes or if you prefer to use your own security groups.

Security group for the Connector

The security group for the Connector requires both inbound and outbound rules.

Inbound rules

Protocol	Port	Purpose
SSH	22	Provides SSH access to the Connector host
HTTP	80	Provides HTTP access from client web browsers to the local user interface
HTTPS	443	Provides HTTPS access from client web browsers to the local user interface

Outbound rules

The predefined security group for the Connector includes the following outbound rules.

Protocol	Port	Purpose
All TCP	All	All outbound traffic
All UDP	All	All outbound traffic

Security group for Cloud Volumes ONTAP

The security group for Cloud Volumes ONTAP nodes requires both inbound and outbound rules.

Inbound rules

The source for inbound rules in the predefined security group is 0.0.0.0/0.

Protocol	Port	Purpose
All ICMP	All	Pinging the instance
HTTP	80	HTTP access to the System Manager web console using the IP address of the cluster management LIF
HTTPS	443	HTTPS access to the System Manager web console using the IP address of the cluster management LIF
SSH	22	SSH access to the IP address of the cluster management LIF or a node management LIF
TCP	111	Remote procedure call for NFS
TCP	139	NetBIOS service session for CIFS
TCP	161-162	Simple network management protocol
TCP	445	Microsoft SMB/CIFS over TCP with NetBIOS framing
TCP	635	NFS mount
TCP	749	Kerberos
TCP	2049	NFS server daemon
TCP	3260	iSCSI access through the iSCSI data LIF
TCP	4045	NFS lock daemon
TCP	4046	Network status monitor for NFS
TCP	10000	Backup using NDMP
TCP	11104	Management of intercluster communication sessions for SnapMirror
TCP	11105	SnapMirror data transfer using intercluster LIFs
UDP	111	Remote procedure call for NFS
UDP	161-162	Simple network management protocol
UDP	635	NFS mount
UDP	2049	NFS server daemon
UDP	4045	NFS lock daemon
UDP	4046	Network status monitor for NFS
UDP	4049	NFS rquotad protocol

Outbound rules

The predefined security group for Cloud Volumes ONTAP includes the following outbound rules.

Protocol	Port	Purpose
All ICMP	All	All outbound traffic

Protocol	Port	Purpose
All TCP	All	All outbound traffic
All UDP	All	All outbound traffic

External security group for the HA mediator

The predefined external security group for the Cloud Volumes ONTAP HA mediator includes the following inbound and outbound rules.

Inbound rules

The source for inbound rules is traffic from the VPC where the Connector resides.

Protocol	Port	Purpose
SSH	22	SSH connections to the HA mediator
TCP	3000	RESTful API access from the Connector

Outbound rules

The predefined security group for the HA mediator includes the following outbound rules.

Protocol	Port	Purpose
All TCP	All	All outbound traffic
All UDP	All	All outbound traffic

Internal security group for the HA mediator

The predefined internal security group for the Cloud Volumes ONTAP HA mediator includes the following rules. Cloud Manager always creates this security group. You don't have the option to use your own.

Inbound rules

The predefined security group includes the following inbound rules.

Protocol	Port	Purpose
All traffic	All	Communication between the HA mediator and HA nodes

Outbound rules

The predefined security group includes the following outbound rules.

Protocol	Port	Purpose
All traffic	All	Communication between the HA mediator and HA nodes

Get started in Microsoft Azure

Quick start for Cloud Volumes ONTAP in Azure

Get started with Cloud Volumes ONTAP for Azure in a few steps.

1

Create a Connector

If you don't have a [Connector](#) yet, an Account Admin needs to create one. [Learn how to create a Connector in Azure.](#)

When you create your first Cloud Volumes ONTAP working environment, Cloud Manager prompts you to deploy a Connector if you don't have one yet.

2

Plan your configuration

Cloud Manager offers preconfigured packages that match your workload requirements, or you can create your own configuration. If you choose your own configuration, you should understand the options available to you. [Learn more.](#)

3

Set up your networking

- a. Ensure that your VNet and subnets will support connectivity between the Connector and Cloud Volumes ONTAP.
- b. Enable outbound internet access from the target VNet so the Connector and Cloud Volumes ONTAP can contact several endpoints.

This step is important because the Connector can't manage Cloud Volumes ONTAP without outbound internet access. If you need to limit outbound connectivity, refer to the list of endpoints for [the Connector and Cloud Volumes ONTAP](#).

[Learn more about networking requirements.](#)

4

Launch Cloud Volumes ONTAP using Cloud Manager

Click **Add Working Environment**, select the type of system that you would like to deploy, and complete the steps in the wizard. [Read step-by-step instructions.](#)

Related links

- [Creating a Connector from Cloud Manager](#)
- [Creating a Connector from the Azure Marketplace](#)
- [Installing the Connector software on a Linux host](#)
- [What Cloud Manager does with permissions](#)

Planning your Cloud Volumes ONTAP configuration in Azure

When you deploy Cloud Volumes ONTAP in Azure, you can choose a preconfigured

system that matches your workload requirements, or you can create your own configuration. If you choose your own configuration, you should understand the options available to you.

Viewing supported regions

Cloud Volumes ONTAP is supported in most Microsoft Azure regions. [View the full list of supported regions](#).

Choosing a license

Several licensing options are available for Cloud Volumes ONTAP. Each option enables you to choose a consumption model that meets your needs. [Learn about licensing options for Cloud Volumes ONTAP](#).

Supported VM types

Cloud Volumes ONTAP supports several VM types, depending on the license type that you choose.

[Supported configurations for Cloud Volumes ONTAP in Azure](#)

Understanding storage limits

The raw capacity limit for a Cloud Volumes ONTAP system is tied to the license. Additional limits impact the size of aggregates and volumes. You should be aware of these limits as you plan your configuration.

[Storage limits for Cloud Volumes ONTAP in Azure](#)

Sizing your system in Azure

Sizing your Cloud Volumes ONTAP system can help you meet requirements for performance and capacity. You should be aware of a few key points when choosing a VM type, disk type, and disk size:

Virtual machine type

Look at the supported virtual machine types in the [Cloud Volumes ONTAP Release Notes](#) and then review details about each supported VM type. Be aware that each VM type supports a specific number of data disks.

- [Azure documentation: General purpose virtual machine sizes](#)
- [Azure documentation: Memory optimized virtual machine sizes](#)

Azure disk type

When you create volumes for Cloud Volumes ONTAP, you need to choose the underlying cloud storage that Cloud Volumes ONTAP uses as a disk.

HA systems use Premium page blobs. Meanwhile, single node systems can use two types of Azure Managed Disks:

- *Premium SSD Managed Disks* provide high performance for I/O-intensive workloads at a higher cost.
- *Standard SSD Managed Disks* provide consistent performance for workloads that require low IOPS.
- *Standard HDD Managed Disks* are a good choice if you don't need high IOPS and want to reduce your costs.

For additional details about the use cases for these disks, see [Microsoft Azure Documentation: What](#)

[disk types are available in Azure?](#).

Azure disk size

When you launch Cloud Volumes ONTAP instances, you must choose the default disk size for aggregates. Cloud Manager uses this disk size for the initial aggregate, and for any additional aggregates that it creates when you use the simple provisioning option. You can create aggregates that use a disk size different from the default by [using the advanced allocation option](#).



All disks in an aggregate must be the same size.

When choosing a disk size, you should take several factors into consideration. The disk size impacts how much you pay for storage, the size of volumes that you can create in an aggregate, the total capacity available to Cloud Volumes ONTAP, and storage performance.

The performance of Azure Premium Storage is tied to the disk size. Larger disks provide higher IOPS and throughput. For example, choosing 1 TiB disks can provide better performance than 500 GiB disks, at a higher cost.

There are no performance differences between disk sizes for Standard Storage. You should choose disk size based on the capacity that you need.

Refer to Azure for IOPS and throughput by disk size:

- [Microsoft Azure: Managed Disks pricing](#)
- [Microsoft Azure: Page Blobs pricing](#)

Choosing a configuration that supports Flash Cache

A Cloud Volumes ONTAP configuration in Azure includes local NVMe storage, which Cloud Volumes ONTAP uses as *Flash Cache* for better performance. [Learn more about Flash Cache](#).

Viewing default system disks

In addition to the storage for user data, Cloud Manager also purchases cloud storage for Cloud Volumes ONTAP system data (boot data, root data, core data, and NVRAM). For planning purposes, it might help for you to review these details before you deploy Cloud Volumes ONTAP.

[View the default disks for Cloud Volumes ONTAP system data in Azure](#).



The Connector also requires a system disk. [View details about the Connector's default configuration](#).

Azure network information worksheet

When you deploy Cloud Volumes ONTAP in Azure, you need to specify details about your virtual network. You can use a worksheet to collect the information from your administrator.

Azure information	Your value
Region	
Virtual network (VNet)	

Azure information	Your value
Subnet	
Network security group (if using your own)	

Choosing a write speed

Cloud Manager enables you to choose a write speed setting for Cloud Volumes ONTAP. Before you choose a write speed, you should understand the differences between the normal and high settings and risks and recommendations when using high write speed. [Learn more about write speed.](#)

Choosing a volume usage profile

ONTAP includes several storage efficiency features that can reduce the total amount of storage that you need. When you create a volume in Cloud Manager, you can choose a profile that enables these features or a profile that disables them. You should learn more about these features to help you decide which profile to use.

NetApp storage efficiency features provide the following benefits:

Thin provisioning

Presents more logical storage to hosts or users than you actually have in your physical storage pool. Instead of preallocating storage space, storage space is allocated dynamically to each volume as data is written.

Deduplication

Improves efficiency by locating identical blocks of data and replacing them with references to a single shared block. This technique reduces storage capacity requirements by eliminating redundant blocks of data that reside in the same volume.

Compression

Reduces the physical capacity required to store data by compressing data within a volume on primary, secondary, and archive storage.

Networking requirements for Cloud Volumes ONTAP in Azure

Set up your Azure networking so Cloud Volumes ONTAP systems can operate properly. This includes networking for the Connector and Cloud Volumes ONTAP.

Requirements for Cloud Volumes ONTAP

The following networking requirements must be met in Azure.

Outbound internet access

Cloud Volumes ONTAP requires outbound internet access to send messages to NetApp AutoSupport, which proactively monitors the health of your storage.

Routing and firewall policies must allow HTTP/HTTPS traffic to the following endpoints so Cloud Volumes ONTAP can send AutoSupport messages:

- <https://support.netapp.com/aods/asupmessage>

- <https://support.netapp.com/asupprod/post/1.0/postAsup>

[Learn how to verify AutoSupport.](#)

IP addresses

Cloud Manager allocates the following number of IP addresses to Cloud Volumes ONTAP in Azure:

- Single node: 5 IP addresses
- HA pair: 16 IP addresses

Note that Cloud Manager creates an SVM management LIF on HA pairs, but not on single node systems in Azure.



A LIF is an IP address associated with a physical port. An SVM management LIF is required for management tools like SnapCenter.

Secure connections to Azure services

Cloud Manager sets up a VNet service endpoint and an Azure Private Link endpoint so that Cloud Volumes ONTAP can privately connect to Azure services.

Service endpoint

Cloud Manager enables a VNet service endpoint to create a secure connection from Cloud Volumes ONTAP to Azure Blob storage for data tiering. No additional service endpoints are supported from Cloud Volumes ONTAP to Azure services.

Cloud Manager enables a VNet service endpoint for you if the Cloud Manager policy has these permissions:

```
"Microsoft.Network/virtualNetworks/subnets/write",  
"Microsoft.Network/routeTables/join/action",
```

These permissions are included in the latest [Cloud Manager policy](#).

For details about setting up data tiering, see [Tiering cold data to low-cost object storage](#).

Private endpoint

By default, Cloud Manager enables an Azure Private Link connection between Cloud Volumes ONTAP and its associated storage accounts. A Private Link secures connections between endpoints in Azure and provides performance benefits. In most cases, there's nothing that you need to do—Cloud Manager manages the Azure Private Link for you. But if you use Azure Private DNS, then you'll need to edit a configuration file. You can also disable the Private Link connection, if desired.

[Learn more about using an Azure Private Link with Cloud Volumes ONTAP.](#)

Connections to other ONTAP systems

To replicate data between a Cloud Volumes ONTAP system in Azure and ONTAP systems in other networks, you must have a VPN connection between the Azure VNet and the other network—for example, an AWS VPC or your corporate network.

For instructions, refer to [Microsoft Azure Documentation: Create a Site-to-Site connection in the Azure portal](#).

Port for the HA interconnect

A Cloud Volumes ONTAP HA pair includes an HA interconnect, which allows each node to continually check whether its partner is functioning and to mirror log data for the other's nonvolatile memory. The HA interconnect uses TCP port 10006 for communication.

By default, communication between the HA interconnect LIFs is open and there are no security group rules for this port. But if you create a firewall between the HA interconnect LIFs, then you need to ensure that TCP traffic is open for port 10006 so that the HA pair can operate properly.

Only one HA pair in an Azure resource group

You must use a *dedicated* resource group for each Cloud Volumes ONTAP HA pair that you deploy in Azure. Only one HA pair is supported in a resource group.

Cloud Manager experiences connection issues if you try to deploy a second Cloud Volumes ONTAP HA pair in an Azure resource group.

Security groups

You don't need to create security groups because Cloud Manager does that for you. If you need to use your own, refer to the security group rules listed below.

Security group rules

Cloud Manager creates Azure security groups that include the inbound and outbound rules that Cloud Volumes ONTAP needs to operate successfully. You might want to refer to the ports for testing purposes or if you prefer your to use own security groups.

The security group for Cloud Volumes ONTAP requires both inbound and outbound rules.

Inbound rules for single node systems

The rules listed below allow traffic, unless the description notes that it blocks specific inbound traffic.

Priority and name	Port and protocol	Source and destination	Description
1000 inbound_ssh	22 TCP	Any to Any	SSH access to the IP address of the cluster management LIF or a node management LIF
1001 inbound_http	80 TCP	Any to Any	HTTP access to the System Manager web console using the IP address of the cluster management LIF
1002 inbound_111_tcp	111 TCP	Any to Any	Remote procedure call for NFS
1003 inbound_111_udp	111 UDP	Any to Any	Remote procedure call for NFS
1004 inbound_139	139 TCP	Any to Any	NetBIOS service session for CIFS

Priority and name	Port and protocol	Source and destination	Description
1005 inbound_161-162_tcp	161-162 TCP	Any to Any	Simple network management protocol
1006 inbound_161-162_udp	161-162 UDP	Any to Any	Simple network management protocol
1007 inbound_443	443 TCP	Any to Any	HTTPS access to the System Manager web console using the IP address of the cluster management LIF
1008 inbound_445	445 TCP	Any to Any	Microsoft SMB/CIFS over TCP with NetBIOS framing
1009 inbound_635_tcp	635 TCP	Any to Any	NFS mount
1010 inbound_635_udp	635 UDP	Any to Any	NFS mount
1011 inbound_749	749 TCP	Any to Any	Kerberos
1012 inbound_2049_tcp	2049 TCP	Any to Any	NFS server daemon
1013 inbound_2049_udp	2049 UDP	Any to Any	NFS server daemon
1014 inbound_3260	3260 TCP	Any to Any	iSCSI access through the iSCSI data LIF
1015 inbound_4045-4046_tcp	4045-4046 TCP	Any to Any	NFS lock daemon and network status monitor
1016 inbound_4045-4046_udp	4045-4046 UDP	Any to Any	NFS lock daemon and network status monitor
1017 inbound_10000	10000 TCP	Any to Any	Backup using NDMP
1018 inbound_11104-11105	11104-11105 TCP	Any to Any	SnapMirror data transfer
3000 inbound_deny_all_tcp	Any port TCP	Any to Any	Block all other TCP inbound traffic
3001 inbound_deny_all_udp	Any port UDP	Any to Any	Block all other UDP inbound traffic

Priority and name	Port and protocol	Source and destination	Description
65000 AllowVnetInBound	Any port Any protocol	VirtualNetwork to VirtualNetwork	Inbound traffic from within the VNet
65001 AllowAzureLoad BalancerInBound	Any port Any protocol	AzureLoadBalancer to Any	Data traffic from the Azure Standard Load Balancer
65500 DenyAllInBound	Any port Any protocol	Any to Any	Block all other inbound traffic

Inbound rules for HA systems

The rules listed below allow traffic, unless the description notes that it blocks specific inbound traffic.



HA systems have less inbound rules than single node systems because inbound data traffic goes through the Azure Standard Load Balancer. Because of this, traffic from the Load Balancer should be open, as shown in the "AllowAzureLoadBalancerInBound" rule.

Priority and name	Port and protocol	Source and destination	Description
100 inbound_443	443 Any protocol	Any to Any	HTTPS access to the System Manager web console using the IP address of the cluster management LIF
101 inbound_111_tcp	111 Any protocol	Any to Any	Remote procedure call for NFS
102 inbound_2049_tcp	2049 Any protocol	Any to Any	NFS server daemon
111 inbound_ssh	22 Any protocol	Any to Any	SSH access to the IP address of the cluster management LIF or a node management LIF
121 inbound_53	53 Any protocol	Any to Any	DNS and CIFS
65000 AllowVnetInBound	Any port Any protocol	VirtualNetwork to VirtualNetwork	Inbound traffic from within the VNet
65001 AllowAzureLoad BalancerInBound	Any port Any protocol	AzureLoadBalancer to Any	Data traffic from the Azure Standard Load Balancer

Priority and name	Port and protocol	Source and destination	Description
65500 DenyAllInBound	Any port Any protocol	Any to Any	Block all other inbound traffic

Outbound rules

The predefined security group for Cloud Volumes ONTAP opens all outbound traffic. If that is acceptable, follow the basic outbound rules. If you need more rigid rules, use the advanced outbound rules.

Basic outbound rules

The predefined security group for Cloud Volumes ONTAP includes the following outbound rules.

Port	Protocol	Purpose
All	All TCP	All outbound traffic
All	All UDP	All outbound traffic

Advanced outbound rules

If you need rigid rules for outbound traffic, you can use the following information to open only those ports that are required for outbound communication by Cloud Volumes ONTAP.



The source is the interface (IP address) on the Cloud Volumes ONTAP system.

Service	Port	Protocol	Source	Destination	Purpose
Active Directory	88	TCP	Node management LIF	Active Directory forest	Kerberos V authentication
	137	UDP	Node management LIF	Active Directory forest	NetBIOS name service
	138	UDP	Node management LIF	Active Directory forest	NetBIOS datagram service
	139	TCP	Node management LIF	Active Directory forest	NetBIOS service session
	389	TCP & UDP	Node management LIF	Active Directory forest	LDAP
	445	TCP	Node management LIF	Active Directory forest	Microsoft SMB/CIFS over TCP with NetBIOS framing
	464	TCP	Node management LIF	Active Directory forest	Kerberos V change & set password (SET_CHANGE)
	464	UDP	Node management LIF	Active Directory forest	Kerberos key administration
	749	TCP	Node management LIF	Active Directory forest	Kerberos V change & set Password (RPCSEC_GSS)
	88	TCP	Data LIF (NFS, CIFS, iSCSI)	Active Directory forest	Kerberos V authentication
	137	UDP	Data LIF (NFS, CIFS)	Active Directory forest	NetBIOS name service
	138	UDP	Data LIF (NFS, CIFS)	Active Directory forest	NetBIOS datagram service
	139	TCP	Data LIF (NFS, CIFS)	Active Directory forest	NetBIOS service session
	389	TCP & UDP	Data LIF (NFS, CIFS)	Active Directory forest	LDAP
	445	TCP	Data LIF (NFS, CIFS)	Active Directory forest	Microsoft SMB/CIFS over TCP with NetBIOS framing
	464	TCP	Data LIF (NFS, CIFS)	Active Directory forest	Kerberos V change & set password (SET_CHANGE)
	464	UDP	Data LIF (NFS, CIFS)	Active Directory forest	Kerberos key administration
	749	TCP	Data LIF (NFS, CIFS)	Active Directory forest	Kerberos V change & set password (RPCSEC_GSS)

Service	Port	Protocol	Source	Destination	Purpose
AutoSupport	HTTPS	443	Node management LIF	support.netapp.com	AutoSupport (HTTPS is the default)
	HTTP	80	Node management LIF	support.netapp.com	AutoSupport (only if the transport protocol is changed from HTTPS to HTTP)
DHCP	68	UDP	Node management LIF	DHCP	DHCP client for first-time setup
DHCPs	67	UDP	Node management LIF	DHCP	DHCP server
DNS	53	UDP	Node management LIF and data LIF (NFS, CIFS)	DNS	DNS
NDMP	18600–18699	TCP	Node management LIF	Destination servers	NDMP copy
SMTP	25	TCP	Node management LIF	Mail server	SMTP alerts, can be used for AutoSupport
SNMP	161	TCP	Node management LIF	Monitor server	Monitoring by SNMP traps
	161	UDP	Node management LIF	Monitor server	Monitoring by SNMP traps
	162	TCP	Node management LIF	Monitor server	Monitoring by SNMP traps
	162	UDP	Node management LIF	Monitor server	Monitoring by SNMP traps
SnapMirror	11104	TCP	Intercluster LIF	ONTAP intercluster LIFs	Management of intercluster communication sessions for SnapMirror
	11105	TCP	Intercluster LIF	ONTAP intercluster LIFs	SnapMirror data transfer
Syslog	514	UDP	Node management LIF	Syslog server	Syslog forward messages

Requirements for the Connector

Set up your networking so that the Connector can manage resources and processes within your public cloud environment. The most important step is ensuring outbound internet access to various endpoints.



If your network uses a proxy server for all communication to the internet, you can specify the proxy server from the Settings page. Refer to [Configuring the Connector to use a proxy server](#).

Connections to target networks

A Connector requires a network connection to the VPCs and VNets in which you want to deploy Cloud

Volumes ONTAP.

For example, if you install a Connector in your corporate network, then you must set up a VPN connection to the VPC or VNet in which you launch Cloud Volumes ONTAP.

Outbound internet access

The Connector requires outbound internet access to manage resources and processes within your public cloud environment.

Endpoints	Purpose
https://support.netapp.com	To obtain licensing information and to send AutoSupport messages to NetApp support.
https://*.cloudmanager.cloud.netapp.com	To provide SaaS features and services within Cloud Manager.
https://cloudmanagerinfraprod.azurecr.io https://*.blob.core.windows.net	To upgrade the Connector and its Docker components.

Security group rules

The security group for the Connector requires both inbound and outbound rules.

Inbound rules

Port	Protocol	Purpose
22	SSH	Provides SSH access to the Connector host
80	HTTP	Provides HTTP access from client web browsers to the local user interface
443	HTTPS	Provides HTTPS access from client web browsers to the local user interface

Outbound rules

The predefined security group for the Connector opens all outbound traffic. If that is acceptable, follow the basic outbound rules. If you need more rigid rules, use the advanced outbound rules.

Basic outbound rules

The predefined security group for the Connector includes the following outbound rules.

Port	Protocol	Purpose
All	All TCP	All outbound traffic
All	All UDP	All outbound traffic

Advanced outbound rules

If you need rigid rules for outbound traffic, you can use the following information to open only those ports that

are required for outbound communication by the Connector.



The source IP address is the Connector host.

Service	Port	Protocol	Destination	Purpose
Active Directory	88	TCP	Active Directory forest	Kerberos V authentication
	139	TCP	Active Directory forest	NetBIOS service session
	389	TCP	Active Directory forest	LDAP
	445	TCP	Active Directory forest	Microsoft SMB/CIFS over TCP with NetBIOS framing
	464	TCP	Active Directory forest	Kerberos V change & set password (SET_CHANGE)
	749	TCP	Active Directory forest	Active Directory Kerberos V change & set password (RPCSEC_GSS)
	137	UDP	Active Directory forest	NetBIOS name service
	138	UDP	Active Directory forest	NetBIOS datagram service
	464	UDP	Active Directory forest	Kerberos key administration
API calls and AutoSupport	443	HTTPS	Outbound internet and ONTAP cluster management LIF	API calls to AWS and ONTAP, and sending AutoSupport messages to NetApp
DNS	53	UDP	DNS	Used for DNS resolve by Cloud Manager

Set up Cloud Volumes ONTAP to use a customer-managed key in Azure

Data is automatically encrypted on Cloud Volumes ONTAP in Azure using [Azure Storage Service Encryption](#) with a Microsoft-managed key. But you can use your own encryption key instead by following the steps on this page.

Data encryption overview

Cloud Volumes ONTAP data is automatically encrypted in Azure using [Azure Storage Service Encryption](#). The default implementation uses a Microsoft-managed key. No setup is required.

If you want to use a customer-managed key with Cloud Volumes ONTAP, then you need to complete the following steps:

1. From Azure, create a key vault and then generate a key in that vault
2. From Cloud Manager, use the API to create a Cloud Volumes ONTAP working environment that uses the key

Key rotation

If you create a new version of your key, Cloud Volumes ONTAP automatically uses the latest key version.

How data is encrypted

After you create a Cloud Volumes ONTAP working environment that is configured to use a customer-managed key, Cloud Volumes ONTAP data is encrypted as follows.

HA pairs

- All Azure storage accounts for Cloud Volumes ONTAP are encrypted using a customer-managed key.
- Any new storage accounts (for example, when you add disks or aggregates) also use the same key.

Single node

- All Azure storage accounts for Cloud Volumes ONTAP are encrypted using a customer-managed key.
- For root, boot, and data disks, Cloud Manager uses a [disk encryption set](#), which enables management of encryption keys with managed disks.
- Any new data disks also use the same disk encryption set.
- NVRAM and the core disk are encrypted using a Microsoft-managed key, instead of the customer-managed key.

Create a key vault and generate a key

The key vault must reside in the same Azure subscription and region in which you plan to create the Cloud Volumes ONTAP system.

Steps

1. [Create a key vault in your Azure subscription.](#)

Note the following requirements for the key vault:

- The key vault must reside in the same region as the Cloud Volumes ONTAP system.
- The following options should be enabled:
 - **Soft-delete** (this option is enabled by default, but must *not* be disabled)
 - **Purge protection**
 - **Azure Disk Encryption for volume encryption** (for single node Cloud Volumes ONTAP systems only)

2. [Generate a key in the key vault.](#)

Note the following requirements for the key:

- The key type must be **RSA**.
- The recommended RSA key size is **2048**, but other sizes are supported.

Create a working environment that uses the encryption key

After you create the key vault and generate an encryption key, you can create a new Cloud Volumes ONTAP system that is configured to use the key. These steps are supported by using the Cloud Manager API.

Required permissions

If you want to use a customer-managed key with a single node Cloud Volumes ONTAP system, ensure that the Cloud Manager Connector has the following permissions:

```
"Microsoft.Compute/diskEncryptionSets/read"
"Microsoft.Compute/diskEncryptionSets/write",
"Microsoft.Compute/diskEncryptionSets/delete"
"Microsoft.KeyVault/vaults/deploy/action",
"Microsoft.KeyVault/vaults/read",
"Microsoft.KeyVault/vaults/accessPolicies/write"
```

You can find the latest list of permissions on the [Cloud Manager policies page](#).

These permissions aren't required for HA pairs.

Steps

1. Obtain the list of key vaults in your Azure subscription by using the following Cloud Manager API call.

For an HA pair: GET /azure/ha/metadata/vaults

For single node: GET /azure/vsa/metadata/vaults

Make note of the **name** and **resourceGroup**. You'll need to specify those values in the next step.

[Learn more about this API call.](#)

2. Obtain the list of keys within the vault by using the following Cloud Manager API call.

For an HA pair: GET /azure/ha/metadata/keys-vault

For single node: GET /azure/vsa/metadata/keys-vault

Make note of the **keyName**. You'll need to specify that value (along with the vault name) in the next step.

[Learn more about this API call.](#)

3. Create a Cloud Volumes ONTAP system by using the following Cloud Manager API call.

- a. For an HA pair:

POST /azure/ha/working-environments

The request body must include the following fields:

```
"azureEncryptionParameters": {
  "key": "keyName",
  "vaultName": "vaultName"
}
```

[Learn more about this API call.](#)

b. For a single node system:

POST /azure/vsa/working-environments

The request body must include the following fields:

```
"azureEncryptionParameters": {  
  "key": "keyName",  
  "vaultName": "vaultName"  
}
```

[Learn more about this API call.](#)

Result

You have a new Cloud Volumes ONTAP system that is configured to use your customer-managed key for data encryption.

Launching Cloud Volumes ONTAP in Azure

You can launch a single node system or an HA pair in Azure by creating a Cloud Volumes ONTAP working environment in Cloud Manager.

What you'll need

You need the following to create a working environment.

- A Connector that's up and running.
 - You should have a [Connector that is associated with your workspace](#).
 - [You should be prepared to leave the Connector running at all times](#).
- An understanding of the configuration that you want to use.

You should have chose a configuration and obtained Azure networking information from your administrator. For details, see [Planning your Cloud Volumes ONTAP configuration](#).

- An understanding of what's required to choose a specific licensing option in the Add Working Environment wizard. [Learn more about Cloud Volumes ONTAP licensing](#).

Licensing option	Requirement	How to meet the requirement
Freemium	A Marketplace subscription or NetApp Support Site (NSS) account is required.	<p>You'll have the option to subscribe to your cloud provider's marketplace from the Details & Credentials page.</p> <p>You can enter your NSS account on the Charging Methods and NSS Account page.</p>

Licensing option	Requirement	How to meet the requirement
Professional or Essential package	<p>A Marketplace subscription or capacity-based license (BYOL) is required.</p> <p>A Marketplace subscription is recommended for capacity-based charging in the event that your account doesn't have a valid capacity-based license, or in the event that your provisioned capacity exceeds the licensed capacity.</p>	<p>You'll have the option to subscribe to your cloud provider's marketplace from the Details & Credentials page.</p> <p>If you want to use a capacity-based license (BYOL) that you purchased from NetApp, you must first add it to the Digital Wallet. Learn how to add capacity-based BYOL licenses.</p>
Keystone Flex Subscription	Your account must be authorized and the subscription must be enabled for use with Cloud Volumes ONTAP.	<ol style="list-style-type: none"> 1. Contact NetApp to authorize your Cloud Manager user account with one or more Keystone Flex Subscriptions. 2. After NetApp authorizes your account, link your subscriptions for use with Cloud Volumes ONTAP. 3. Select the Keystone Flex Subscription charging method when you create a Cloud Volumes ONTAP HA pair.
Per node licensing	A Marketplace subscription is required or you need to bring your own license (BYOL). This option is available for customers with existing subscriptions or existing licenses. It's not available for new customers.	<p>If you want to use a node-based license (BYOL) that you purchased from NetApp, you must first add it to the Digital Wallet. Learn how to add node-based BYOL licenses.</p> <p>You can enter your NSS account on the Charging Methods and NSS Account page.</p>

About this task

When Cloud Manager creates a Cloud Volumes ONTAP system in Azure, it creates several Azure objects, such as a resource group, network interfaces, and storage accounts. You can review a summary of the resources at the end of the wizard.



Potential for Data Loss

The best practice is to use a new, dedicated resource group for each Cloud Volumes ONTAP system.

Deploying Cloud Volumes ONTAP in an existing, shared resource group is not recommended due to the risk of data loss. While Cloud Manager can remove Cloud Volumes ONTAP resources from a shared resource group in case of deployment failure or deletion, an Azure user might accidentally delete Cloud Volumes ONTAP resources from a shared resource group.

Steps

1. On the Canvas page, click **Add Working Environment** and follow the prompts.

2. **Choose a Location:** Select **Microsoft Azure** and **Cloud Volumes ONTAP Single Node** or **Cloud Volumes ONTAP High Availability**.
3. If you're prompted, [create a Connector](#).
4. **Details and Credentials:** Optionally change the Azure credentials and subscription, specify a cluster name, add tags if needed, and then specify credentials.

The following table describes fields for which you might need guidance:

Field	Description
Working Environment Name	Cloud Manager uses the working environment name to name both the Cloud Volumes ONTAP system and the Azure virtual machine. It also uses the name as the prefix for the predefined security group, if you select that option.
Resource Group Tags	<p>Tags are metadata for your Azure resources. When you enter tags in this field, Cloud Manager adds them to the resource group associated with the Cloud Volumes ONTAP system.</p> <p>You can add up to four tags from the user interface when creating a working environment, and then you can add more after its created. Note that the API does not limit you to four tags when creating a working environment.</p> <p>For information about tags, refer to Microsoft Azure Documentation: Using tags to organize your Azure resources.</p>
User name and password	These are the credentials for the Cloud Volumes ONTAP cluster administrator account. You can use these credentials to connect to Cloud Volumes ONTAP through System Manager or its CLI. Keep the default <i>admin</i> user name or change it to a custom user name.
Edit Credentials	You can choose different Azure credentials and a different Azure subscription to use with this Cloud Volumes ONTAP system. You need to associate an Azure Marketplace subscription with the selected Azure subscription in order to deploy a pay-as-you-go Cloud Volumes ONTAP system. Learn how to add credentials .

The following video shows how to associate a Marketplace subscription to an Azure subscription:

► <https://docs.netapp.com/us-en/cloud-manager-cloud-volumes->

[ontap//media/video_subscribing_azure.mp4](#) (video)

5. **Services:** Keep the services enabled or disable the individual services that you don't want to use with Cloud Volumes ONTAP.

- [Learn more about Cloud Data Sense.](#)
- [Learn more about Cloud Backup.](#)
- [Learn more about the Monitoring service.](#)

6. **Location & Connectivity:** Select a location, a resource group, a security group, and then select the checkbox to confirm network connectivity between the Connector and the target location.

The following table describes fields for which you might need guidance:

Field	Description
Location	For single node systems, you can choose the Availability Zone in which you'd like to deploy Cloud Volumes ONTAP. If you don't select an AZ, Cloud Manager will select one for you.
Resource Group	<p>Create a new resource group for Cloud Volumes ONTAP or use an existing resource group. The best practice is to use a new, dedicated resource group for Cloud Volumes ONTAP. While it is possible to deploy Cloud Volumes ONTAP in an existing, shared resource group, it's not recommended due to the risk of data loss. See the warning above for more details.</p> <p>You must use a dedicated resource group for each Cloud Volumes ONTAP HA pair that you deploy in Azure. Only one HA pair is supported in a resource group. Cloud Manager experiences connection issues if you try to deploy a second Cloud Volumes ONTAP HA pair in an Azure resource group.</p> <div> If the Azure account that you're using has the required permissions, Cloud Manager removes Cloud Volumes ONTAP resources from a resource group, in case of deployment failure or deletion.</div>
Security group	If you choose an existing security group, then it must meet Cloud Volumes ONTAP requirements. View the default security group.


7. **Charging Methods and NSS Account:** Specify which charging option would you like to use with this system, and then specify a NetApp Support Site account.

- [Learn about these charging methods.](#)
- [Learn what's required in the wizard for the licensing method that you want to use.](#)

8. **Preconfigured Packages:** Select one of the packages to quickly deploy a Cloud Volumes ONTAP system, or click **Create my own configuration**.

If you choose one of the packages, you only need to specify a volume and then review and approve the configuration.

9. **Licensing:** Change the Cloud Volumes ONTAP version as needed, select a license, and select a virtual machine type.

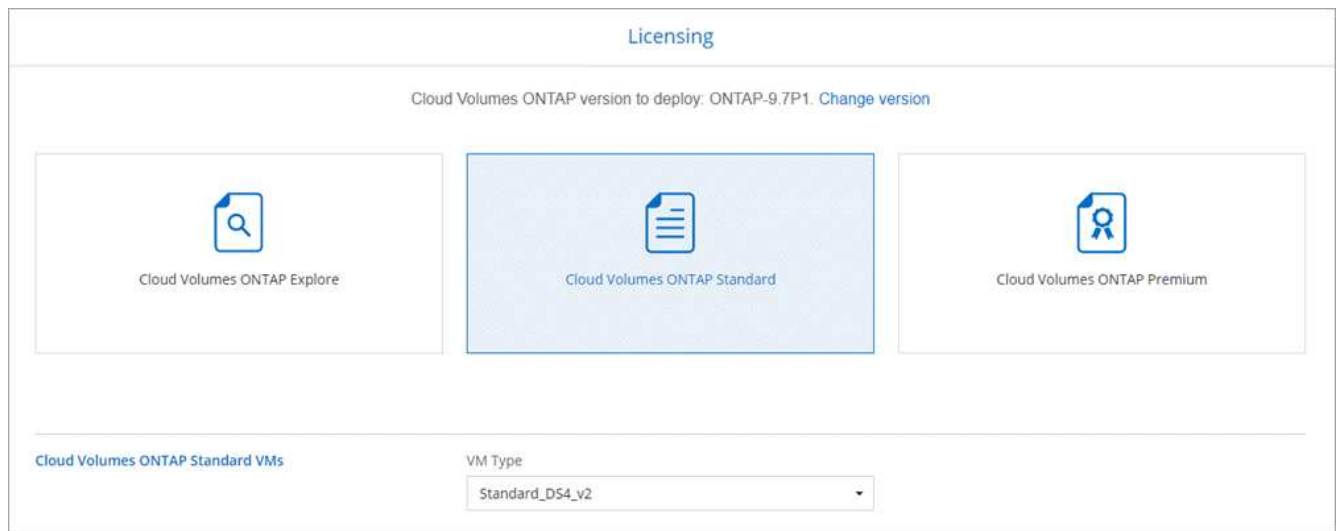

If your needs change after you launch the system, you can modify the license or virtual machine type later.



If a newer Release Candidate, General Availability, or patch release is available for the selected version, then Cloud Manager updates the system to that version when creating the working environment. For example, the update occurs if you select Cloud Volumes ONTAP 9.6 RC1 and 9.6 GA is available. The update does not occur from one release to another—for example, from 9.6 to 9.7.

10. **Subscribe from the Azure Marketplace:** Follow the steps if Cloud Manager could not enable programmatic deployments of Cloud Volumes ONTAP.
11. **Underlying Storage Resources:** Choose settings for the initial aggregate: a disk type, a size for each disk, and whether data tiering to Blob storage should be enabled.

Note the following:

- The disk type is for the initial volume. You can choose a different disk type for subsequent volumes.
- The disk size is for all disks in the initial aggregate and for any additional aggregates that Cloud Manager creates when you use the simple provisioning option. You can create aggregates that use a different disk size by using the advanced allocation option.

For help choosing a disk type and size, see [Sizing your system in Azure](#).

- You can choose a specific volume tiering policy when you create or edit a volume.
- If you disable data tiering, you can enable it on subsequent aggregates.

[Learn more about data tiering](#).

12. **Write Speed & WORM** (single node systems only): Choose **Normal** or **High** write speed, and activate write once, read many (WORM) storage, if desired.

[Learn more about write speed](#).

WORM can't be enabled if Cloud Backup was enabled or if data tiering was enabled.

[Learn more about WORM storage](#).

13. **Secure Communication to Storage & WORM** (HA only): Choose whether to enable an HTTPS

connection to Azure storage accounts, and activate write once, read many (WORM) storage, if desired.

The HTTPS connection is from a Cloud Volumes ONTAP 9.7 HA pair to Azure storage accounts. Note that enabling this option can impact write performance. You can't change the setting after you create the working environment.

[Learn more about WORM storage.](#)

14. **Create Volume:** Enter details for the new volume or click **Skip**.

Some of the fields in this page are self-explanatory. The following table describes fields for which you might need guidance:

Field	Description
Size	The maximum size that you can enter largely depends on whether you enable thin provisioning, which enables you to create a volume that is bigger than the physical storage currently available to it.
Access control (for NFS only)	An export policy defines the clients in the subnet that can access the volume. By default, Cloud Manager enters a value that provides access to all instances in the subnet.
Permissions and Users / Groups (for CIFS only)	These fields enable you to control the level of access to a share for users and groups (also called access control lists or ACLs). You can specify local or domain Windows users or groups, or UNIX users or groups. If you specify a domain Windows user name, you must include the user's domain using the format domain\username.
Snapshot Policy	A Snapshot copy policy specifies the frequency and number of automatically created NetApp Snapshot copies. A NetApp Snapshot copy is a point-in-time file system image that has no performance impact and requires minimal storage. You can choose the default policy or none. You might choose none for transient data: for example, tempdb for Microsoft SQL Server.
Advanced options (for NFS only)	Select an NFS version for the volume: either NFSv3 or NFSv4.
Initiator group and IQN (for iSCSI only)	<p>iSCSI storage targets are called LUNs (logical units) and are presented to hosts as standard block devices.</p> <p>Initiator groups are tables of iSCSI host node names and control which initiators have access to which LUNs.</p> <p>iSCSI targets connect to the network through standard Ethernet network adapters (NICs), TCP offload engine (TOE) cards with software initiators, converged network adapters (CNAs) or dedicated host bus adapters (HBAs) and are identified by iSCSI qualified names (IQNs).</p> <p>When you create an iSCSI volume, Cloud Manager automatically creates a LUN for you. We've made it simple by creating just one LUN per volume, so there's no management involved. After you create the volume, use the IQN to connect to the LUN from your hosts.</p>

The following image shows the Volume page filled out for the CIFS protocol:

Volume Details, Protection & Protocol

Details & Protection

Volume Name: Size (GB): ⓘ

Snapshot Policy: ▼

ⓘ Default Policy

Protocol

NFS
CIFS
iSCSI

Share name: Permissions: ▼

Users / Groups:

Valid users and groups separated by a semicolon

15. **CIFS Setup:** If you chose the CIFS protocol, set up a CIFS server.

Field	Description
DNS Primary and Secondary IP Address	The IP addresses of the DNS servers that provide name resolution for the CIFS server. The listed DNS servers must contain the service location records (SRV) needed to locate the Active Directory LDAP servers and domain controllers for the domain that the CIFS server will join.
Active Directory Domain to join	The FQDN of the Active Directory (AD) domain that you want the CIFS server to join.
Credentials authorized to join the domain	The name and password of a Windows account with sufficient privileges to add computers to the specified Organizational Unit (OU) within the AD domain.
CIFS server NetBIOS name	A CIFS server name that is unique in the AD domain.
Organizational Unit	The organizational unit within the AD domain to associate with the CIFS server. The default is CN=Computers. To configure Azure AD Domain Services as the AD server for Cloud Volumes ONTAP, you should enter OU=AADDC Computers or OU=AADDC Users in this field. Azure Documentation: Create an Organizational Unit (OU) in an Azure AD Domain Services managed domain
DNS Domain	The DNS domain for the Cloud Volumes ONTAP storage virtual machine (SVM). In most cases, the domain is the same as the AD domain.
NTP Server	Select Use Active Directory Domain to configure an NTP server using the Active Directory DNS. If you need to configure an NTP server using a different address, then you should use the API. See the Cloud Manager automation docs for details. Note that you can configure an NTP server only when creating a CIFS server. It's not configurable after you create the CIFS server.

16. **Usage Profile, Disk Type, and Tiering Policy:** Choose whether you want to enable storage efficiency

features and change the volume tiering policy, if needed.

For more information, see [Understanding volume usage profiles](#) and [Data tiering overview](#).

17. **Review & Approve:** Review and confirm your selections.

- a. Review details about the configuration.
- b. Click **More information** to review details about support and the Azure resources that Cloud Manager will purchase.
- c. Select the **I understand...** check boxes.
- d. Click **Go**.

Result

Cloud Manager deploys the Cloud Volumes ONTAP system. You can track the progress in the timeline.

If you experience any issues deploying the Cloud Volumes ONTAP system, review the failure message. You can also select the working environment and click **Re-create environment**.

For additional help, go to [NetApp Cloud Volumes ONTAP Support](#).

After you finish

- If you provisioned a CIFS share, give users or groups permissions to the files and folders and verify that those users can access the share and create a file.
- If you want to apply quotas to volumes, use System Manager or the CLI.

Quotas enable you to restrict or track the disk space and number of files used by a user, group, or qtree.

Get started in Google Cloud

Quick start for Cloud Volumes ONTAP in Google Cloud

Get started with Cloud Volumes ONTAP for GCP in a few steps.

1

Create a Connector

If you don't have a [Connector](#) yet, an Account Admin needs to create one. [Learn how to create a Connector in GCP](#).

When you create your first Cloud Volumes ONTAP working environment, Cloud Manager prompts you to deploy a Connector if you don't have one yet.

2

Plan your configuration

Cloud Manager offers preconfigured packages that match your workload requirements, or you can create your own configuration. If you choose your own configuration, you should understand the options available to you.

[Learn more about planning your configuration](#).

3

Set up your networking

- a. Ensure that your VPC and subnets will support connectivity between the Connector and Cloud Volumes ONTAP.
- b. If you plan to enable data tiering, [configure the Cloud Volumes ONTAP subnet for Private Google Access](#).
- c. If you're deploying an HA pair, ensure that you have four VPCs, each with their own subnet.
- d. If you're using a shared VPC, provide the *Compute Network User* role to the Connector service account.
- e. Enable outbound internet access from the target VPC so the Connector and Cloud Volumes ONTAP can contact several endpoints.

This step is important because the Connector can't manage Cloud Volumes ONTAP without outbound internet access. If you need to limit outbound connectivity, refer to the list of endpoints for [the Connector and Cloud Volumes ONTAP](#).

[Learn more about networking requirements.](#)

4

Set up a service account

Cloud Volumes ONTAP requires a Google Cloud service account for two purposes. The first is when you enable [data tiering](#) to tier cold data to low-cost object storage in Google Cloud. The second is when you enable the [Cloud Backup Service](#) to back up volumes to low-cost object storage.

You can set up one service account and use it for both purposes. The service account must have the **Storage Admin** role.

[Read step-by-step instructions.](#)

5

Enable Google Cloud APIs

[Enable the following Google Cloud APIs in your project.](#) These APIs are required to deploy the Connector and Cloud Volumes ONTAP.

- Cloud Deployment Manager V2 API
- Cloud Logging API
- Cloud Resource Manager API
- Compute Engine API
- Identity and Access Management (IAM) API

6

Launch Cloud Volumes ONTAP using Cloud Manager

Click **Add Working Environment**, select the type of system that you would like to deploy, and complete the steps in the wizard. [Read step-by-step instructions.](#)

Related links

- [Creating a Connector from Cloud Manager](#)
- [Installing the Connector software on a Linux host](#)

- [What Cloud Manager does with GCP permissions](#)

Planning your Cloud Volumes ONTAP configuration in Google Cloud

When you deploy Cloud Volumes ONTAP in Google Cloud, you can choose a preconfigured system that matches your workload requirements, or you can create your own configuration. If you choose your own configuration, you should understand the options available to you.

Viewing supported regions

Cloud Volumes ONTAP is supported in most Google Cloud regions. [View the full list of supported regions.](#)

Choosing a license

Several licensing options are available for Cloud Volumes ONTAP. Each option enables you to choose a consumption model that meets your needs. [Learn about licensing options for Cloud Volumes ONTAP.](#)

Supported machine types

Cloud Volumes ONTAP supports several machine types, depending on the license type that you choose.

[Supported configurations for Cloud Volumes ONTAP in GCP](#)

Understanding storage limits

The raw capacity limit for a Cloud Volumes ONTAP system is tied to the license. Additional limits impact the size of aggregates and volumes. You should be aware of these limits as you plan your configuration.

[Storage limits for Cloud Volumes ONTAP in GCP](#)

Sizing your system in GCP

Sizing your Cloud Volumes ONTAP system can help you meet requirements for performance and capacity. You should be aware of a few key points when choosing a machine type, disk type, and disk size:

Machine type

Look at the supported machine types in the [Cloud Volumes ONTAP Release Notes](#) and then review details from Google about each supported machine type. Match your workload requirements to the number of vCPUs and memory for the machine type. Note that each CPU core increases networking performance.

Refer to the following for more details:

- [Google Cloud documentation: N1 standard machine types](#)
- [Google Cloud documentation: Performance](#)

GCP disk type

When you create volumes for Cloud Volumes ONTAP, you need to choose the underlying cloud storage that Cloud Volumes ONTAP uses for a disk. The disk type can be any of the following:

- *Zonal SSD persistent disks*: SSD persistent disks are best for workloads that require high rates of random IOPS.

- *Zonal Balanced persistent disks*: These SSDs balance performance and cost by providing lower IOPS per GB.
- *Zonal Standard persistent disks* : Standard persistent disks are economical and can handle sequential read/write operations.

For more details, see [Google Cloud documentation: Zonal Persistent disks \(Standard and SSD\)](#).

GCP disk size

You need to choose an initial disk size when you deploy a Cloud Volumes ONTAP system. After that you can let Cloud Manager manage a system's capacity for you, but if you want to build aggregates yourself, be aware of the following:

- All disks in an aggregate must be the same size.
- Determine the space that you need, while taking performance into consideration.
- The performance of persistent disks scales automatically with disk size and the number of vCPUs available to the system.

Refer to the following for more details:

- [Google Cloud documentation: Zonal Persistent disks \(Standard and SSD\)](#)
- [Google Cloud documentation: Optimizing Persistent Disk and Local SSD Performance](#)

Viewing default system disks

In addition to the storage for user data, Cloud Manager also purchases cloud storage for Cloud Volumes ONTAP system data (boot data, root data, core data, and NVRAM). For planning purposes, it might help for you to review these details before you deploy Cloud Volumes ONTAP.

- [View the default disks for Cloud Volumes ONTAP system data in Google Cloud.](#)
- [Google Cloud docs: Resource quotas](#)

Google Cloud Compute Engine enforces quotas on resource usage so you should ensure that you haven't reached your limit before you deploy Cloud Volumes ONTAP.



The Connector also requires a system disk. [View details about the Connector's default configuration.](#)

GCP network information worksheet

When you deploy Cloud Volumes ONTAP in GCP, you need to specify details about your virtual network. You can use a worksheet to collect the information from your administrator.

Network information for a single-node system

GCP information	Your value
Region	
Zone	
VPC network	

GCP information	Your value
Subnet	
Firewall policy (if using your own)	

Network information for an HA pair in multiple zones

GCP information	Your value
Region	
Zone for Node 1	
Zone for Node 2	
Zone for the mediator	
VPC-0 and subnet	
VPC-1 and subnet	
VPC-2 and subnet	
VPC-3 and subnet	
Firewall policy (if using your own)	

Network information for an HA pair in a single zone

GCP information	Your value
Region	
Zone	
VPC-0 and subnet	
VPC-1 and subnet	
VPC-2 and subnet	
VPC-3 and subnet	
Firewall policy (if using your own)	

Choosing a write speed

Cloud Manager enables you to choose a write speed setting for Cloud Volumes ONTAP, except for high availability (HA) pairs in Google Cloud. Before you choose a write speed, you should understand the differences between the normal and high settings and risks and recommendations when using high write speed. [Learn more about write speed.](#)

Choosing a volume usage profile

ONTAP includes several storage efficiency features that can reduce the total amount of storage that you need. When you create a volume in Cloud Manager, you can choose a profile that enables these features or a profile

that disables them. You should learn more about these features to help you decide which profile to use.

NetApp storage efficiency features provide the following benefits:

Thin provisioning

Presents more logical storage to hosts or users than you actually have in your physical storage pool. Instead of preallocating storage space, storage space is allocated dynamically to each volume as data is written.

Deduplication

Improves efficiency by locating identical blocks of data and replacing them with references to a single shared block. This technique reduces storage capacity requirements by eliminating redundant blocks of data that reside in the same volume.

Compression

Reduces the physical capacity required to store data by compressing data within a volume on primary, secondary, and archive storage.

Networking requirements for Cloud Volumes ONTAP in GCP

Set up your Google Cloud Platform networking so Cloud Volumes ONTAP systems can operate properly. This includes networking for the Connector and Cloud Volumes ONTAP.

If you want to deploy an HA pair, you should [learn how HA pairs work in GCP](#).

Requirements for Cloud Volumes ONTAP

The following requirements must be met in GCP.

Internal load balancers

Cloud Manager automatically creates four Google Cloud internal load balancers (TCP/UDP) that manage incoming traffic to the Cloud Volumes ONTAP HA pair. No setup is required from your end. We've listed this as a requirement simply to inform you of the network traffic and to mitigate any security concerns.

One load balancer is for cluster management, one is for storage VM (SVM) management, one is for NAS traffic to node 1, and the last is for NAS traffic to node 2.

The setup for each load balancer is as follows:

- One shared private IP address
- One global health check

By default, the ports used by the health check are 63001, 63002, and 63003.

- One regional TCP backend service
- One regional UDP backend service
- One TCP forwarding rule
- One UDP forwarding rule
- Global access is disabled

Even though global access is disabled by default, enabling it post deployment is supported. We

disabled it because cross region traffic will have significantly higher latencies. We wanted to ensure that you didn't have a negative experience due to accidental cross region mounts. Enabling this option is specific to your business needs.

One or multiple zones for HA pairs

You can ensure the high availability of your data by deploying an HA configuration across multiple or in a single zone. Cloud Manager will prompt you to choose multiple zones or a single zone when you create the HA pair.

- Multiple zones (recommended)

Deploying an HA configuration across three zones ensures continuous data availability if a failure occurs within a zone. Note that write performance is slightly lower compared to using a single zone, but it's minimal.

- Single zone

When deployed in a single zone, a Cloud Volumes ONTAP HA configuration uses a spread placement policy. This policy ensures that an HA configuration is protected from a single point of failure within the zone, without having to use separate zones to achieve fault isolation.

This deployment model does lower your costs because there are no data egress charges between zones.

Four Virtual Private Clouds for HA pairs

Four Virtual Private Clouds (VPCs) are required for an HA configuration. Four VPCs are required because GCP requires that each network interface resides in a separate VPC network.

Cloud Manager will prompt you to choose four VPCs when you create the HA pair:

- VPC-0 for inbound connections to the data and nodes
- VPC-1, VPC-2, and VPC-3 for internal communication between the nodes and the HA mediator



Subnets for HA pairs

A private subnet is required for each VPC.

If you place the Connector in VPC-0, then you will need to enable Private Google Access on the subnet to access the APIs and to enable data tiering.

The subnets in these VPCs must have distinct CIDR ranges. They can't have overlapping CIDR ranges.

One Virtual Private Cloud for single node systems

One VPC is required for a single node system.

Shared VPCs

Cloud Volumes ONTAP and the Connector are supported in a Google Cloud shared VPC and also in standalone VPCs.

For a single node system, the VPC can be either a shared VPC or a standalone VPC.

For an HA pair, four VPCs are required. Each of those VPCs can be either shared or standalone. For example, VPC-0 could be a shared VPC, while VPC-1, VPC-2, and VPC-3 could be standalone VPCs.

A shared VPC enables you to configure and centrally manage virtual networks across multiple projects. You can set up shared VPC networks in the *host project* and deploy the Connector and Cloud Volumes ONTAP

virtual machine instances in a *service project*. [Google Cloud documentation: Shared VPC overview](#).

[Review the required shared VPC permissions covered in Connector deployment](#).

Packet mirroring in VPCs

[Packet mirroring](#) must be disabled in the Google Cloud VPC in which you deploy Cloud Volumes ONTAP. Cloud Volumes ONTAP can't operate properly if packet mirroring is enabled.

Outbound internet access for Cloud Volumes ONTAP

Cloud Volumes ONTAP requires outbound internet access to send messages to NetApp AutoSupport, which proactively monitors the health of your storage.

Routing and firewall policies must allow HTTP/HTTPS traffic to the following endpoints so Cloud Volumes ONTAP can send AutoSupport messages:

- <https://support.netapp.com/aods/asupmessage>
- <https://support.netapp.com/asupprod/post/1.0/postAsup>

[Learn how to verify AutoSupport](#).



If you're using an HA pair, the HA mediator doesn't require outbound internet access.

Private IP addresses

Cloud Manager allocates the following number of private IP addresses to Cloud Volumes ONTAP in GCP:

- **Single node:** 3 or 4 private IP addresses

You can skip creation of the storage VM (SVM) management LIF if you deploy Cloud Volumes ONTAP using the API and specify the following flag:

```
skipSvmManagementLif: true
```

A LIF is an IP address associated with a physical port. A storage VM (SVM) management LIF is required for management tools like SnapCenter.

- **HA pair:** 14 or 15 private IP addresses
 - 7 or 8 private IP addresses for VPC-0

You can skip creation of the storage VM (SVM) management LIF if you deploy Cloud Volumes ONTAP using the API and specify the following flag:

```
skipSvmManagementLif: true
```

- Two private IP addresses for VPC-1
- Two private IP addresses for VPC-2
- Three private IP addresses for VPC-3

Firewall rules

You don't need to create firewall rules because Cloud Manager does that for you. If you need to use your own, refer to the firewall rules listed below.

Note that two sets of firewall rules are required for an HA configuration:

- One set of rules for HA components in VPC-0. These rules enable data access to Cloud Volumes ONTAP. [Learn more](#).
- Another set of rules for HA components in VPC-1, VPC-2, and VPC-3. These rules are open for inbound & outbound communication between the HA components. [Learn more](#).

Connection from Cloud Volumes ONTAP to Google Cloud Storage for data tiering

If you want to tier cold data to a Google Cloud Storage bucket, the subnet in which Cloud Volumes ONTAP resides must be configured for Private Google Access (if you're using an HA pair, this is the subnet in VPC-0). For instructions, refer to [Google Cloud documentation: Configuring Private Google Access](#).

For additional steps required to set up data tiering in Cloud Manager, see [Tiering cold data to low-cost object storage](#).

Connections to ONTAP systems in other networks

To replicate data between a Cloud Volumes ONTAP system in GCP and ONTAP systems in other networks, you must have a VPN connection between the VPC and the other network—for example, your corporate network.

For instructions, refer to [Google Cloud documentation: Cloud VPN overview](#).

Requirements for the Connector

Set up your networking so that the Connector can manage resources and processes within your public cloud environment. The most important step is ensuring outbound internet access to various endpoints.



If your network uses a proxy server for all communication to the internet, you can specify the proxy server from the Settings page. Refer to [Configuring the Connector to use a proxy server](#).

Connection to target networks

A Connector requires a network connection to the VPCs in which you want to deploy Cloud Volumes ONTAP. If you're deploying an HA pair, then the Connector needs a connection to VPC-0 only.

Outbound internet access

The Connector requires outbound internet access to manage resources and processes within your public cloud environment.

Endpoints	Purpose
https://support.netapp.com	To obtain licensing information and to send AutoSupport messages to NetApp support.
https://*.cloudmanager.cloud.netapp.com	To provide SaaS features and services within Cloud Manager.
https://cloudmanagerinfraprod.azurecr.io https://*.blob.core.windows.net	To upgrade the Connector and its Docker components.

Firewall rules for Cloud Volumes ONTAP

Cloud Manager creates GCP firewall rules that include the inbound and outbound rules that Cloud Volumes ONTAP needs to operate successfully. You might want to refer to the ports for testing purposes or if you prefer

your to use own firewall rules.

The firewall rules for Cloud Volumes ONTAP requires both inbound and outbound rules.

If you're deploying an HA configuration, these are the firewall rules for Cloud Volumes ONTAP in VPC-0.

Inbound rules

The source for inbound rules in the predefined firewall is 0.0.0.0/0.

To create your own firewall, ensure that you add all networks that need to communicate with Cloud Volumes ONTAP, but also ensure to add both address ranges to allow the internal Google Load Balancer to function correctly. These addresses are 130.211.0.0/22 and 35.191.0.0/16. For more information, refer to [Google Cloud documentation: Load Balancer Firewall Rules](#).

Protocol	Port	Purpose
All ICMP	All	Pinging the instance
HTTP	80	HTTP access to the System Manager web console using the IP address of the cluster management LIF
HTTPS	443	HTTPS access to the System Manager web console using the IP address of the cluster management LIF
SSH	22	SSH access to the IP address of the cluster management LIF or a node management LIF
TCP	111	Remote procedure call for NFS
TCP	139	NetBIOS service session for CIFS
TCP	161-162	Simple network management protocol
TCP	445	Microsoft SMB/CIFS over TCP with NetBIOS framing
TCP	635	NFS mount
TCP	749	Kerberos
TCP	2049	NFS server daemon
TCP	3260	iSCSI access through the iSCSI data LIF
TCP	4045	NFS lock daemon
TCP	4046	Network status monitor for NFS
TCP	10000	Backup using NDMP
TCP	11104	Management of intercluster communication sessions for SnapMirror
TCP	11105	SnapMirror data transfer using intercluster LIFs
TCP	63001-63050	Load balance probe ports to determine which node is healthy (required for HA pairs only)
UDP	111	Remote procedure call for NFS
UDP	161-162	Simple network management protocol
UDP	635	NFS mount

Protocol	Port	Purpose
UDP	2049	NFS server daemon
UDP	4045	NFS lock daemon
UDP	4046	Network status monitor for NFS
UDP	4049	NFS rquotad protocol

Outbound rules

The predefined security group for Cloud Volumes ONTAP opens all outbound traffic. If that is acceptable, follow the basic outbound rules. If you need more rigid rules, use the advanced outbound rules.

Basic outbound rules

The predefined security group for Cloud Volumes ONTAP includes the following outbound rules.

Protocol	Port	Purpose
All ICMP	All	All outbound traffic
All TCP	All	All outbound traffic
All UDP	All	All outbound traffic

Advanced outbound rules

If you need rigid rules for outbound traffic, you can use the following information to open only those ports that are required for outbound communication by Cloud Volumes ONTAP.



The source is the interface (IP address) on the Cloud Volumes ONTAP system.

Service	Protocol	Port	Source	Destination	Purpose
Active Directory	TCP	88	Node management LIF	Active Directory forest	Kerberos V authentication
	UDP	137	Node management LIF	Active Directory forest	NetBIOS name service
	UDP	138	Node management LIF	Active Directory forest	NetBIOS datagram service
	TCP	139	Node management LIF	Active Directory forest	NetBIOS service session
	TCP & UDP	389	Node management LIF	Active Directory forest	LDAP
	TCP	445	Node management LIF	Active Directory forest	Microsoft SMB/CIFS over TCP with NetBIOS framing
	TCP	464	Node management LIF	Active Directory forest	Kerberos V change & set password (SET_CHANGE)
	UDP	464	Node management LIF	Active Directory forest	Kerberos key administration
	TCP	749	Node management LIF	Active Directory forest	Kerberos V change & set Password (RPCSEC_GSS)
	TCP	88	Data LIF (NFS, CIFS, iSCSI)	Active Directory forest	Kerberos V authentication
	UDP	137	Data LIF (NFS, CIFS)	Active Directory forest	NetBIOS name service
	UDP	138	Data LIF (NFS, CIFS)	Active Directory forest	NetBIOS datagram service
	TCP	139	Data LIF (NFS, CIFS)	Active Directory forest	NetBIOS service session
	TCP & UDP	389	Data LIF (NFS, CIFS)	Active Directory forest	LDAP
	TCP	445	Data LIF (NFS, CIFS)	Active Directory forest	Microsoft SMB/CIFS over TCP with NetBIOS framing
	TCP	464	Data LIF (NFS, CIFS)	Active Directory forest	Kerberos V change & set password (SET_CHANGE)
	UDP	464	Data LIF (NFS, CIFS)	Active Directory forest	Kerberos key administration
	TCP	749	Data LIF (NFS, CIFS)	Active Directory forest	Kerberos V change & set password (RPCSEC_GSS)
AutoSupport	HTTPS	443	Node management LIF	support.netapp.com	AutoSupport (HTTPS is the default)
	HTTP	80	Node management LIF	support.netapp.com	AutoSupport (only if the transport protocol is changed from HTTPS to HTTP)

Service	Protocol	Port	Source	Destination	Purpose
Cluster	All traffic	All traffic	All LIFs on one node	All LIFs on the other node	Intercluster communications (Cloud Volumes ONTAP HA only)
UDP	68	Node management LIF	DHCP	DHCP client for first-time setup	DHCPS
UDP	67	Node management LIF	DHCP	DHCP server	DNS
UDP	53	Node management LIF and data LIF (NFS, CIFS)	DNS	DNS	NDMP
TCP	18600–18699	Node management LIF	Destination servers	NDMP copy	SMTP

Service	Protocol	Port	Source	Destination	Purpose
TCP	25	Node management LIF	Mail server	SMTP alerts, can be used for AutoSupport	SNMP
TCP	161	Node management LIF	Monitor server	Monitoring by SNMP traps	
UDP	161	Node management LIF	Monitor server	Monitoring by SNMP traps	
TCP	162	Node management LIF	Monitor server	Monitoring by SNMP traps	
UDP	162	Node management LIF	Monitor server	Monitoring by SNMP traps	SnapMirror
TCP	11104	Intercluster LIF	ONTAP intercluster LIFs	Management of intercluster communication sessions for SnapMirror	
TCP	11105	Intercluster LIF	ONTAP intercluster LIFs	SnapMirror data transfer	Syslog

Firewall rules for VPC-1, VPC-2, and VPC-3

In GCP, an HA configuration is deployed across four VPCs. The firewall rules needed for the HA configuration in VPC-0 are [listed above for Cloud Volumes ONTAP](#).

Meanwhile, the predefined firewall rules that Cloud Manager creates for instances in VPC-1, VPC-2, and VPC-3 enables ingress communication over *all* protocols and ports. These rules enable communication between HA nodes.

Communication from the HA nodes to the HA mediator takes place over port 3260 (iSCSI).

Using your own firewall rules with VPCs 1-3

When you create an HA pair, Cloud Manager gives you the option to use predefined firewall rules or to use existing rules for each VPC. If you use your own firewall rules for VPCs 1-3 and you're deploying the HA pair across multiple Google Cloud zones, then you must set up a *target tag* for the firewall rule. If you don't set up target tags, then you'll experience an error during deployment.

1. When you create the firewall rules in Google Cloud, go to the **Targets** field, select **Specified target tags**, and enter the tag.

The value can be any text string that you'd like.

2. When you create the HA pair in Cloud Manager, select the existing firewall rules on the **Connectivity** page.

After the firewall rules are attached to Cloud Volumes ONTAP, the target tag is automatically added to the Cloud Volumes ONTAP nodes as *network tags*.

Firewall rules for the Connector

The firewall rules for the Connector requires both inbound and outbound rules.

Inbound rules

Protocol	Port	Purpose
SSH	22	Provides SSH access to the Connector host
HTTP	80	Provides HTTP access from client web browsers to the local user interface
HTTPS	443	Provides HTTPS access from client web browsers to the local user interface

Outbound rules

The predefined firewall rules for the Connector opens all outbound traffic. If that is acceptable, follow the basic outbound rules. If you need more rigid rules, use the advanced outbound rules.

Basic outbound rules

The predefined firewall rules for the Connector includes the following outbound rules.

Protocol	Port	Purpose
All TCP	All	All outbound traffic
All UDP	All	All outbound traffic

Advanced outbound rules

If you need rigid rules for outbound traffic, you can use the following information to open only those ports that are required for outbound communication by the Connector.



The source IP address is the Connector host.

Service	Protocol	Port	Destination	Purpose
Active Directory	TCP	88	Active Directory forest	Kerberos V authentication
	TCP	139	Active Directory forest	NetBIOS service session
	TCP	389	Active Directory forest	LDAP
	TCP	445	Active Directory forest	Microsoft SMB/CIFS over TCP with NetBIOS framing
	TCP	464	Active Directory forest	Kerberos V change & set password (SET_CHANGE)
	TCP	749	Active Directory forest	Active Directory Kerberos V change & set password (RPCSEC_GSS)
	UDP	137	Active Directory forest	NetBIOS name service
	UDP	138	Active Directory forest	NetBIOS datagram service
	UDP	464	Active Directory forest	Kerberos key administration
API calls and AutoSupport	HTTPS	443	Outbound internet and ONTAP cluster management LIF	API calls to GCP and ONTAP, and sending AutoSupport messages to NetApp
DNS	UDP	53	DNS	Used for DNS resolve by Cloud Manager

Planning for VPC Service Controls in GCP

When choosing to lock down your Google Cloud environment with VPC Service Controls, you should understand how Cloud Manager and Cloud Volumes ONTAP interact with the Google Cloud APIs, as well as how to configure your service perimeter to deploy Cloud Manager and Cloud Volumes ONTAP.

VPC Service Controls enable you to control access to Google-managed services outside of a trusted perimeter, to block data access from untrusted locations, and to mitigate unauthorized data transfer risks.

[Learn more about Google Cloud VPC Service Controls.](#)

How NetApp services communicate with VPC Service Controls

NetApp services such as Cloud Central and Cloud Manager communicate directly with the Google Cloud APIs. This is either triggered from an external IP address outside of Google Cloud (for example, from `api.services.cloud.netapp.com`), or within Google Cloud from an internal address assigned to the Cloud Manager Connector.

Depending on the deployment style of the Connector, certain exceptions may have to be made for your service perimeter.

Images

Both Cloud Volumes ONTAP and Cloud Manager use images from a project within GCP that is managed by NetApp. This can affect the deployment of the Cloud Manager Connector and Cloud Volumes ONTAP, if your organization has a policy that blocks the use of images that are not hosted within the organization.

You can deploy a Connector manually using the manual installation method, but Cloud Volumes ONTAP will also need to pull images from the NetApp project. You must provide an allowed list in order to deploy a Connector and Cloud Volumes ONTAP.

Deploying a Connector

The user who deploys a Connector needs to be able to reference an image hosted in the projectId *netapp-cloudmanager* and the project number *14190056516*.

Deploying Cloud Volumes ONTAP

- The Cloud Manager service account needs to reference an image hosted in the projectId *netapp-cloudmanager* and the project number *14190056516* from the service project.
- The service account for the default Google APIs Service Agent needs to reference an image hosted in the projectId *netapp-cloudmanager* and the project number *14190056516* from the service project.

Examples of the rules needed for pulling these images with VPC Service Controls are defined below.

VPC Service Controls perimeter policies

Policies allow exceptions to the VPC Service Controls rule sets. For more information about policies, please visit the [GCP VPC Service Controls Policy Documentation](#).

To set the policies that Cloud Manager requires, navigate to your VPC Service Controls Perimeter within your organization and add the following policies. The fields should match the options given in the VPC Service Controls policy page. Also note that **all** rules are required and the **OR** parameters should be used in the rule set.

Ingress rules

Rule 1

```
From:
  Identities:
    [User Email Address]
  Source > All sources allowed
To:
  Projects =
    [Service Project]
  Services =
    Service name: iam.googleapis.com
      Service methods: All actions
    Service name: compute.googleapis.com
      Service methods:All actions
```

OR

Rule 2

```
From:
  Identities:
    [User Email Address]
  Source > All sources allowed
To:
  Projects =
    [Host Project]
  Services =
    Service name: compute.googleapis.com
    Service methods: All actions
```

OR

Rule 3

```
From:
  Identities:
    [Service Project Number]@cloudservices.gserviceaccount.com
  Source > All sources allowed
To:
  Projects =
    [Service Project]
    [Host Project]
  Services =
    Service name: compute.googleapis.com
    Service methods: All actions
```

Egress rules

Rule 1:

```
From:
  Identities:
    [Service Project Number]@cloudservices.gserviceaccount.com
To:
  Projects =
    14190056516
  Service =
    Service name: compute.googleapis.com
    Service methods: All actions
```



The project number outlined above is the project *netapp-cloudmanager* used by NetApp to store images for the Connector and for Cloud Volumes ONTAP.

Create a service account for data tiering and backups

Cloud Volumes ONTAP requires a Google Cloud service account for two purposes. The first is when you enable [data tiering](#) to tier cold data to low-cost object storage in Google Cloud. The second is when you enable the [Cloud Backup Service](#) to back up volumes to low-cost object storage.

Cloud Volumes ONTAP uses the service account to access and manage one bucket for tiered data and another bucket for backups.

You can set up one service account and use it for both purposes. The service account must have the **Storage Admin** role.

Steps

1. In the Google Cloud console, [go to the Service accounts page](#).
2. Select your project.
3. Click **Create service account** and provide the required information.
 - a. **Service account details:** Enter a name and description.
 - b. **Grant this service account access to project:** Select the **Storage Admin** role.



- c. **Grant users access to this service account:** Add the Connector service account as a *Service Account User* to this new service account.

This step is required for data tiering only. It's not required for the Cloud Backup Service.

Create service account

✓ Service account details

|

✓ Grant this service account access to project (optional)

|

3 Grant users access to this service account (optional)

Grant access to users or groups that need to perform actions as this service account. [Learn more](#)

Service account users role

netapp-cloud-manager@iam.gserviceaccount.com ✕ ?

Grant users the permissions to deploy jobs and VMs with this service account

Service account admins role ?

Grant users the permission to administer this service account

DONE

CANCEL

What's next?

You'll need to select the service account later when you create a Cloud Volumes ONTAP working environment.

Details and Credentials

default-project
Google Cloud Project

gcp-sub2
Marketplace Subscription

Edit Project

Details

Working Environment Name (Cluster Name)
cloudvolumesontap

Service Account ⓘ

Service Account Name
account1

+ Add Labels

Optional Field | Up to four labels

Credentials

User Name
admin

Password

Confirm Password

Using customer-managed encryption keys with Cloud Volumes ONTAP

While Google Cloud Storage always encrypts your data before it's written to disk, you can use the Cloud Manager API to create a Cloud Volumes ONTAP system that uses *customer-managed encryption keys*. These are keys that you generate and manage in GCP using the Cloud Key Management Service.

Steps

1. Ensure that the Cloud Manager Connector service account has the correct permissions at the project level, in the project where the key is stored.

The permissions are provided by the [Cloud Manager YAML file](#) by default, but may not be applied if you use an alternate project for the Cloud Key Management Service.

The permissions are as follows:

- `cloudkms.cryptoKeyVersions.list`
- `cloudkms.cryptoKeys.get`
- `cloudkms.cryptoKeys.list`
- `cloudkms.keyRings.list`

2. Ensure that the service account for the [Google Compute Engine Service Agent](#) has Cloud KMS Encrypter/Decrypter permissions on the key.

The name of the service account uses the following format: "service-[service_project_number]@compute-system.iam.gserviceaccount.com".

[Google Cloud Documentation: Using IAM with Cloud KMS - Granting roles on a resource](#)

3. Obtain the "id" of the key by invoking the get command for the `/gcp/vsa/metadata/gcp-encryption-keys` API call or by choosing "Copy Resource Name" on the key in the GCP console.
4. If using customer-managed encryption keys and tiering data to object storage, Cloud Manager attempts to utilize the same keys that are used to encrypt the persistent disks. But you'll first need to enable Google Cloud Storage buckets to use the keys:
 - a. Find the Google Cloud Storage service agent by following the [Google Cloud Documentation: Getting the Cloud Storage service agent](#).
 - b. Navigate to the encryption key and assign the Google Cloud Storage service agent with Cloud KMS Encrypter/Decrypter permissions.

For more information, refer to [Google Cloud Documentation: Using customer-managed encryption keys](#)

5. Use the "GcpEncryption" parameter with your API request when creating a working environment.

Example

```
"gcpEncryptionParameters": {  
  "key": "projects/project-1/locations/us-east4/keyRings/keyring-  
1/cryptoKeys/generatedkey1"  
}
```

Refer to the [Cloud Manager automation docs](#) for more details about using the "GcpEncryption" parameter.

Launching Cloud Volumes ONTAP in GCP

You can launch Cloud Volumes ONTAP in a single-node configuration or as an HA pair in Google Cloud Platform.

Before you get started

You need the following to create a working environment.

- A Connector that's up and running.
 - You should have a [Connector that is associated with your workspace](#).
 - [You should be prepared to leave the Connector running at all times](#).
 - The service account associated with the Connector [should have the latest permissions](#).
- An understanding of the configuration that you want to use.

You should have prepared by choosing a configuration and by obtaining GCP networking information from your administrator. For details, see [Planning your Cloud Volumes ONTAP configuration](#).

- An understanding of what's required to choose a specific licensing option in the Add Working Environment wizard. [Learn more about Cloud Volumes ONTAP licensing](#).

Licensing option	Requirement	How to meet the requirement
Freemium	A Marketplace subscription or NetApp Support Site (NSS) account is required.	<p>You'll have the option to subscribe to your cloud provider's marketplace from the Details & Credentials page.</p> <p>You can enter your NSS account on the Charging Methods and NSS Account page.</p>
Professional or Essential package	<p>A Marketplace subscription or capacity-based license (BYOL) is required.</p> <p>A Marketplace subscription is recommended for capacity-based charging in the event that your account doesn't have a valid capacity-based license, or in the event that your provisioned capacity exceeds the licensed capacity.</p>	<p>You'll have the option to subscribe to your cloud provider's marketplace from the Details & Credentials page.</p> <p>If you want to use a capacity-based license (BYOL) that you purchased from NetApp, you must first add it to the Digital Wallet. Learn how to add capacity-based BYOL licenses.</p>
Keystone Flex Subscription	Your account must be authorized and the subscription must be enabled for use with Cloud Volumes ONTAP.	<ol style="list-style-type: none"> 1. Contact NetApp to authorize your Cloud Manager user account with one or more Keystone Flex Subscriptions. 2. After NetApp authorizes your account, link your subscriptions for use with Cloud Volumes ONTAP. 3. Select the Keystone Flex Subscription charging method when you create a Cloud Volumes ONTAP HA pair.
Per node licensing	A Marketplace subscription is required or you need to bring your own license (BYOL). This option is available for customers with existing subscriptions or existing licenses. It's not available for new customers.	<p>If you want to use a node-based license (BYOL) that you purchased from NetApp, you must first add it to the Digital Wallet. Learn how to add node-based BYOL licenses.</p> <p>You can enter your NSS account on the Charging Methods and NSS Account page.</p>

- Google Cloud APIs should be [enabled in your project](#):
 - Cloud Deployment Manager V2 API
 - Cloud Logging API
 - Cloud Resource Manager API
 - Compute Engine API
 - Identity and Access Management (IAM) API

Launching a single-node system in GCP

Create a working environment in Cloud Manager to launch Cloud Volumes ONTAP in GCP.

Steps

1. On the Canvas page, click **Add Working Environment** and follow the prompts.
2. **Choose a Location:** Select **Google Cloud** and **Cloud Volumes ONTAP**.
3. If you're prompted, [create a Connector](#).
4. **Details & Credentials:** Select a project, specify a cluster name, optionally select a Service Account, optionally add labels, and then specify credentials.

The following table describes fields for which you might need guidance:

Field	Description
Working Environment Name	Cloud Manager uses the working environment name to name both the Cloud Volumes ONTAP system and the GCP VM instance. It also uses the name as the prefix for the predefined security group, if you select that option.
Service Account Name	If you plan to use data tiering or Cloud Backup with Cloud Volumes ONTAP, then you need to enable Service Account and select a service account that has the predefined Storage Admin role. Learn how to create a service account .
Add Labels	<p>Labels are metadata for your GCP resources. Cloud Manager adds the labels to the Cloud Volumes ONTAP system and GCP resources associated with the system.</p> <p>You can add up to four labels from the user interface when creating a working environment, and then you can add more after its created. Note that the API does not limit you to four labels when creating a working environment.</p> <p>For information about labels, refer to Google Cloud Documentation: Labeling Resources.</p>
User name and password	These are the credentials for the Cloud Volumes ONTAP cluster administrator account. You can use these credentials to connect to Cloud Volumes ONTAP through System Manager or its CLI. Keep the default <i>admin</i> user name or change it to a custom user name.

Field	Description
Edit Project	<p>Select the project where you want Cloud Volumes ONTAP to reside. The default project is the project where Cloud Manager resides.</p> <p>If you don't see any additional projects in the drop-down list, then you haven't yet associated the Cloud Manager service account with other projects. Go to the Google Cloud console, open the IAM service, and select the project. Add the service account with the Cloud Manager role to that project. You'll need to repeat this step for each project.</p> <div>  <p>This is the service account that you set up for Cloud Manager, as described on this page.</p> </div> <p>Click Add Subscription to associate the selected credentials with a subscription.</p> <p>To create a pay-as-you-go Cloud Volumes ONTAP system, you need to select a GCP project that's associated with a subscription to Cloud Volumes ONTAP from the GCP Marketplace.</p>

The following video shows how to associate a pay-as-you-go Marketplace subscription to your GCP project. Alternatively, follow the steps to subscribe located in the [Associating a Marketplace subscription with GCP credentials](#) section.

► https://docs.netapp.com/us-en/cloud-manager-cloud-volumes-ontap//media/video_subscribing_gcp.mp4

(video)

5. **Services:** Select the services that you want to use on this system. In order to select Cloud Backup, or to use Tiering, you must have specified the Service Account in step 3.
6. **Location & Connectivity:** Select a location, choose a firewall policy, and select the checkbox to confirm network connectivity to Google Cloud storage for data tiering.

If you want to tier cold data to a Google Cloud Storage bucket, the subnet in which Cloud Volumes ONTAP resides must be configured for Private Google Access. For instructions, refer to [Google Cloud Documentation: Configuring Private Google Access](#).

7. **Charging Methods and NSS Account:** Specify which charging option would you like to use with this system, and then specify a NetApp Support Site account.
 - [Learn about these charging methods](#).
 - [Learn what's required in the wizard for the licensing method that you want to use](#).
8. **Preconfigured Packages:** Select one of the packages to quickly deploy a Cloud Volumes ONTAP system, or click **Create my own configuration**.

If you choose one of the packages, you only need to specify a volume and then review and approve the configuration.

9. **Licensing:** Change the Cloud Volumes ONTAP version as needed, select a license, and select a virtual machine type.

The screenshot shows the 'Licensing' step in the Cloud Volumes ONTAP deployment wizard. At the top, it says 'Cloud Volumes ONTAP version to deploy: ONTAP-9.7RC1' with a 'Change version' link. Below this are three selectable options, each with an icon and text: 'Cloud Volumes ONTAP Explore' (magnifying glass icon), 'Cloud Volumes ONTAP Standard Improved Functionality' (document icon, which is highlighted with a blue border), and 'Cloud Volumes ONTAP Premium Advanced Functionality' (award icon). At the bottom, there is a section for 'Machine Type' with a dropdown menu currently showing 'n1-standard-8'.

If your needs change after you launch the system, you can modify the license or virtual machine type later.



If a newer Release Candidate, General Availability, or patch release is available for the selected version, then Cloud Manager updates the system to that version when creating the working environment. For example, the update occurs if you select Cloud Volumes ONTAP 9.6 RC1 and 9.6 GA is available. The update does not occur from one release to another—for example, from 9.6 to 9.7.

10. **Underlying Storage Resources:** Choose settings for the initial aggregate: a disk type and the size for each disk.

The disk type is for the initial volume. You can choose a different disk type for subsequent volumes.

The disk size is for all disks in the initial aggregate and for any additional aggregates that Cloud Manager creates when you use the simple provisioning option. You can create aggregates that use a different disk size by using the advanced allocation option.

For help choosing a disk type and size, see [Sizing your system in GCP](#).

11. **Write Speed & WORM:** Choose **Normal** or **High** write speed, and activate write once, read many (WORM) storage, if desired.

Choosing a write speed is supported with single node systems only.

[Learn more about write speed](#).

WORM can't be enabled if Cloud Backup was enabled or if data tiering was enabled.

[Learn more about WORM storage](#).

12. **Data Tiering in Google Cloud Platform:** Choose whether to enable data tiering on the initial aggregate, choose a storage class for the tiered data, and then either select a service account that has the predefined Storage Admin role (required for Cloud Volumes ONTAP 9.7 or later), or select a GCP account (required for Cloud Volumes ONTAP 9.6).

Note the following:

- Cloud Manager sets the service account on the Cloud Volumes ONTAP instance. This service account provides permissions for data tiering to a Google Cloud Storage bucket. Be sure to add the Connector service account as a user of the tiering service account, otherwise, you can't select it from Cloud Manager.
- For help with adding a GCP account, see [Setting up and adding GCP accounts for data tiering with 9.6](#).
- You can choose a specific volume tiering policy when you create or edit a volume.
- If you disable data tiering, you can enable it on subsequent aggregates, but you'll need to turn off the system and add a service account from the GCP console.

[Learn more about data tiering](#).

13. **Create Volume:** Enter details for the new volume or click **Skip**.

Some of the fields in this page are self-explanatory. The following table describes fields for which you might need guidance:

Field	Description
Size	The maximum size that you can enter largely depends on whether you enable thin provisioning, which enables you to create a volume that is bigger than the physical storage currently available to it.
Access control (for NFS only)	An export policy defines the clients in the subnet that can access the volume. By default, Cloud Manager enters a value that provides access to all instances in the subnet.

Field	Description
Permissions and Users / Groups (for CIFS only)	These fields enable you to control the level of access to a share for users and groups (also called access control lists or ACLs). You can specify local or domain Windows users or groups, or UNIX users or groups. If you specify a domain Windows user name, you must include the user's domain using the format domain\username.
Snapshot Policy	A Snapshot copy policy specifies the frequency and number of automatically created NetApp Snapshot copies. A NetApp Snapshot copy is a point-in-time file system image that has no performance impact and requires minimal storage. You can choose the default policy or none. You might choose none for transient data: for example, tempdb for Microsoft SQL Server.
Advanced options (for NFS only)	Select an NFS version for the volume: either NFSv3 or NFSv4.
Initiator group and IQN (for iSCSI only)	<p>iSCSI storage targets are called LUNs (logical units) and are presented to hosts as standard block devices.</p> <p>Initiator groups are tables of iSCSI host node names and control which initiators have access to which LUNs.</p> <p>iSCSI targets connect to the network through standard Ethernet network adapters (NICs), TCP offload engine (TOE) cards with software initiators, converged network adapters (CNAs) or dedicated host bus adapters (HBAs) and are identified by iSCSI qualified names (IQNs).</p> <p>When you create an iSCSI volume, Cloud Manager automatically creates a LUN for you. We've made it simple by creating just one LUN per volume, so there's no management involved. After you create the volume, use the IQN to connect to the LUN from your hosts.</p>

The following image shows the Volume page filled out for the CIFS protocol:

Volume Details, Protection & Protocol

Details & Protection

Volume Name:

Size (GB):

Snapshot Policy:

Default Policy

Protocol

NFS **CIFS** iSCSI

Share name:

Permissions:

Users / Groups:

Valid users and groups separated by a semicolon

14. **CIFS Setup:** If you chose the CIFS protocol, set up a CIFS server.

Field	Description
DNS Primary and Secondary IP Address	The IP addresses of the DNS servers that provide name resolution for the CIFS server. The listed DNS servers must contain the service location records (SRV) needed to locate the Active Directory LDAP servers and domain controllers for the domain that the CIFS server will join.
Active Directory Domain to join	The FQDN of the Active Directory (AD) domain that you want the CIFS server to join.
Credentials authorized to join the domain	The name and password of a Windows account with sufficient privileges to add computers to the specified Organizational Unit (OU) within the AD domain.
CIFS server NetBIOS name	A CIFS server name that is unique in the AD domain.
Organizational Unit	The organizational unit within the AD domain to associate with the CIFS server. The default is CN=Computers.
DNS Domain	The DNS domain for the Cloud Volumes ONTAP storage virtual machine (SVM). In most cases, the domain is the same as the AD domain.
NTP Server	Select Use Active Directory Domain to configure an NTP server using the Active Directory DNS. If you need to configure an NTP server using a different address, then you should use the API. See the Cloud Manager automation docs for details. Note that you can configure an NTP server only when creating a CIFS server. It's not configurable after you create the CIFS server.

15. **Usage Profile, Disk Type, and Tiering Policy:** Choose whether you want to enable storage efficiency features and change the volume tiering policy, if needed.

For more information, see [Understanding volume usage profiles](#) and [Data tiering overview](#).

16. **Review & Approve:** Review and confirm your selections.
- Review details about the configuration.
 - Click **More information** to review details about support and the GCP resources that Cloud Manager will purchase.
 - Select the **I understand...** check boxes.
 - Click **Go**.

Result

Cloud Manager deploys the Cloud Volumes ONTAP system. You can track the progress in the timeline.

If you experience any issues deploying the Cloud Volumes ONTAP system, review the failure message. You can also select the working environment and click **Re-create environment**.

For additional help, go to [NetApp Cloud Volumes ONTAP Support](#).

After you finish

- If you provisioned a CIFS share, give users or groups permissions to the files and folders and verify that those users can access the share and create a file.

- If you want to apply quotas to volumes, use System Manager or the CLI.

Quotas enable you to restrict or track the disk space and number of files used by a user, group, or qtree.

Launching an HA pair in GCP

Create a working environment in Cloud Manager to launch Cloud Volumes ONTAP in GCP.

Steps

1. On the Canvas page, click **Add Working Environment** and follow the prompts.
2. **Choose a Location:** Select **Google Cloud** and **Cloud Volumes ONTAP HA**.
3. **Details & Credentials:** Select a project, specify a cluster name, optionally select a Service Account, optionally add labels, and then specify credentials.

The following table describes fields for which you might need guidance:

Field	Description
Working Environment Name	Cloud Manager uses the working environment name to name both the Cloud Volumes ONTAP system and the GCP VM instance. It also uses the name as the prefix for the predefined security group, if you select that option.
Service Account Name	If you plan to use the Tiering or Cloud Backup services, you need to enable the Service Account switch and then select the Service Account that has the predefined Storage Admin role.
Add Labels	<p>Labels are metadata for your GCP resources. Cloud Manager adds the labels to the Cloud Volumes ONTAP system and GCP resources associated with the system.</p> <p>You can add up to four labels from the user interface when creating a working environment, and then you can add more after its created. Note that the API does not limit you to four labels when creating a working environment.</p> <p>For information about labels, refer to Google Cloud Documentation: Labeling Resources.</p>
User name and password	These are the credentials for the Cloud Volumes ONTAP cluster administrator account. You can use these credentials to connect to Cloud Volumes ONTAP through System Manager or its CLI. Keep the default <i>admin</i> user name or change it to a custom user name.

Field	Description
Edit Project	<p>Select the project where you want Cloud Volumes ONTAP to reside. The default project is the project where Cloud Manager resides.</p> <p>If you don't see any additional projects in the drop-down list, then you haven't yet associated the Cloud Manager service account with other projects. Go to the Google Cloud console, open the IAM service, and select the project. Add the service account with the Cloud Manager role to that project. You'll need to repeat this step for each project.</p> <div>  <p>This is the service account that you set up for Cloud Manager, as described on this page.</p> </div> <p>Click Add Subscription to associate the selected credentials with a subscription.</p> <p>To create a pay-as-you-go Cloud Volumes ONTAP system, you need to select a GCP project that's associated with a subscription to Cloud Volumes ONTAP from the GCP Marketplace.</p>

The following video shows how to associate a pay-as-you-go Marketplace subscription to your GCP project. Alternatively, follow the steps to subscribe located in the [Associating a Marketplace subscription with GCP credentials](#) section.

► https://docs.netapp.com/us-en/cloud-manager-cloud-volumes-ontap//media/video_subscribing_gcp.mp4

(video)

4. **Services:** Select the services that you want to use on this system. In order to select Cloud Backup, or to use Tiering, you must have specified the Service Account in step 3.
5. **HA Deployment Models:** Choose multiple zones (recommended) or a single zone for the HA configuration. Then select a region and zones.

[Learn more about HA deployment models.](#)

6. **Connectivity:** Select four different VPCs for the HA configuration, a subnet in each VPC, and then choose a firewall policy.

[Learn more about networking requirements.](#)

7. **Charging Methods and NSS Account:** Specify which charging option would you like to use with this system, and then specify a NetApp Support Site account.
 - [Learn about these charging methods.](#)
 - [Learn what's required in the wizard for the licensing method that you want to use.](#)
8. **Preconfigured Packages:** Select one of the packages to quickly deploy a Cloud Volumes ONTAP system, or click **Create my own configuration**.

If you choose one of the packages, you only need to specify a volume and then review and approve the configuration.

9. **Licensing:** Change the Cloud Volumes ONTAP version as needed, select a license, and select a virtual machine type.

Licensing

Cloud Volumes ONTAP version to deploy: ONTAP-9.7RC1. [Change version](#)

Cloud Volumes ONTAP Explore

Cloud Volumes ONTAP Standard
Improved Functionality

Cloud Volumes ONTAP Premium
Advanced Functionality

Cloud Volumes ONTAP Standard Machine

Machine Type
n1-standard-8

If your needs change after you launch the system, you can modify the license or virtual machine type later.



If a newer Release Candidate, General Availability, or patch release is available for the selected version, then Cloud Manager updates the system to that version when creating the working environment. For example, the update occurs if you select Cloud Volumes ONTAP 9.8 RC1 and 9.8 GA is available. The update does not occur from one release to another—for example, from 9.7 to 9.8.

10. **Underlying Storage Resources:** Choose settings for the initial aggregate: a disk type and the size for

each disk.

The disk type is for the initial volume. You can choose a different disk type for subsequent volumes.

The disk size is for all disks in the initial aggregate and for any additional aggregates that Cloud Manager creates when you use the simple provisioning option. You can create aggregates that use a different disk size by using the advanced allocation option.

For help choosing a disk type and size, see [Sizing your system in GCP](#).

11. **WORM:** Activate write once, read many (WORM) storage, if desired.

WORM can't be enabled if data tiering was enabled. [Learn more about WORM storage](#).

12. **Data Tiering in Google Cloud Platform:** Choose whether to enable data tiering on the initial aggregate, choose a storage class for the tiered data, and then select a service account that has the predefined Storage Admin role.

Note the following:

- Cloud Manager sets the service account on the Cloud Volumes ONTAP instance. This service account provides permissions for data tiering to a Google Cloud Storage bucket. Be sure to add the Connector service account as a user of the tiering service account, otherwise, you can't select it from Cloud Manager.
- You can choose a specific volume tiering policy when you create or edit a volume.
- If you disable data tiering, you can enable it on subsequent aggregates, but you'll need to turn off the system and add a service account from the GCP console.

[Learn more about data tiering](#).

13. **Create Volume:** Enter details for the new volume or click **Skip**.

Some of the fields in this page are self-explanatory. The following table describes fields for which you might need guidance:

Field	Description
Size	The maximum size that you can enter largely depends on whether you enable thin provisioning, which enables you to create a volume that is bigger than the physical storage currently available to it.
Access control (for NFS only)	An export policy defines the clients in the subnet that can access the volume. By default, Cloud Manager enters a value that provides access to all instances in the subnet.
Permissions and Users / Groups (for CIFS only)	These fields enable you to control the level of access to a share for users and groups (also called access control lists or ACLs). You can specify local or domain Windows users or groups, or UNIX users or groups. If you specify a domain Windows user name, you must include the user's domain using the format domain\username.

Field	Description
Snapshot Policy	A Snapshot copy policy specifies the frequency and number of automatically created NetApp Snapshot copies. A NetApp Snapshot copy is a point-in-time file system image that has no performance impact and requires minimal storage. You can choose the default policy or none. You might choose none for transient data: for example, tempdb for Microsoft SQL Server.
Advanced options (for NFS only)	Select an NFS version for the volume: either NFSv3 or NFSv4.
Initiator group and IQN (for iSCSI only)	<p>iSCSI storage targets are called LUNs (logical units) and are presented to hosts as standard block devices.</p> <p>Initiator groups are tables of iSCSI host node names and control which initiators have access to which LUNs.</p> <p>iSCSI targets connect to the network through standard Ethernet network adapters (NICs), TCP offload engine (TOE) cards with software initiators, converged network adapters (CNAs) or dedicated host bus adapters (HBAs) and are identified by iSCSI qualified names (IQNs).</p> <p>When you create an iSCSI volume, Cloud Manager automatically creates a LUN for you. We've made it simple by creating just one LUN per volume, so there's no management involved. After you create the volume, use the IQN to connect to the LUN from your hosts.</p>

The following image shows the Volume page filled out for the CIFS protocol:

Volume Details, Protection & Protocol

Details & Protection

Volume Name: Size (GB):

Snapshot Policy:

default

Default Policy

Protocol

NFS
CIFS
iSCSI

Share name: Permissions:

Full Control

Users / Groups:

Valid users and groups separated by a semicolon

14. **CIFS Setup:** If you chose the CIFS protocol, set up a CIFS server.

Field	Description
DNS Primary and Secondary IP Address	<p>The IP addresses of the DNS servers that provide name resolution for the CIFS server.</p> <p>The listed DNS servers must contain the service location records (SRV) needed to locate the Active Directory LDAP servers and domain controllers for the domain that the CIFS server will join.</p>

Field	Description
Active Directory Domain to join	The FQDN of the Active Directory (AD) domain that you want the CIFS server to join.
Credentials authorized to join the domain	The name and password of a Windows account with sufficient privileges to add computers to the specified Organizational Unit (OU) within the AD domain.
CIFS server NetBIOS name	A CIFS server name that is unique in the AD domain.
Organizational Unit	The organizational unit within the AD domain to associate with the CIFS server. The default is CN=Computers.
DNS Domain	The DNS domain for the Cloud Volumes ONTAP storage virtual machine (SVM). In most cases, the domain is the same as the AD domain.
NTP Server	<p>Select Use Active Directory Domain to configure an NTP server using the Active Directory DNS. If you need to configure an NTP server using a different address, then you should use the API. See the Cloud Manager automation docs for details.</p> <p>Note that you can configure an NTP server only when creating a CIFS server. It's not configurable after you create the CIFS server.</p>

15. **Usage Profile, Disk Type, and Tiering Policy:** Choose whether you want to enable storage efficiency features and change the volume tiering policy, if needed.

For more information, see [Understanding volume usage profiles](#) and [Data tiering overview](#).

16. **Review & Approve:** Review and confirm your selections.
- Review details about the configuration.
 - Click **More information** to review details about support and the GCP resources that Cloud Manager will purchase.
 - Select the **I understand...** check boxes.
 - Click **Go**.

Result

Cloud Manager deploys the Cloud Volumes ONTAP system. You can track the progress in the timeline.

If you experience any issues deploying the Cloud Volumes ONTAP system, review the failure message. You can also select the working environment and click **Re-create environment**.

For additional help, go to [NetApp Cloud Volumes ONTAP Support](#).

After you finish

- If you provisioned a CIFS share, give users or groups permissions to the files and folders and verify that those users can access the share and create a file.
- If you want to apply quotas to volumes, use System Manager or the CLI.

Quotas enable you to restrict or track the disk space and number of files used by a user, group, or qtree.

Copyright Information

Copyright © 2022 NetApp, Inc. All rights reserved. Printed in the U.S. No part of this document covered by copyright may be reproduced in any form or by any means-graphic, electronic, or mechanical, including photocopying, recording, taping, or storage in an electronic retrieval system-without prior written permission of the copyright owner.

Software derived from copyrighted NetApp material is subject to the following license and disclaimer:

THIS SOFTWARE IS PROVIDED BY NETAPP "AS IS" AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT SHALL NETAPP BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NetApp reserves the right to change any products described herein at any time, and without notice. NetApp assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by NetApp. The use or purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of NetApp.

The product described in this manual may be protected by one or more U.S. patents, foreign patents, or pending applications.

RESTRICTED RIGHTS LEGEND: Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.277-7103 (October 1988) and FAR 52-227-19 (June 1987).

Trademark Information

NETAPP, the NETAPP logo, and the marks listed at <http://www.netapp.com/TM> are trademarks of NetApp, Inc. Other company and product names may be trademarks of their respective owners.