

# Searching the minimum value of 16-bit data

## MIN(P)(\_U)

FX5S

FX5UJ

FX5U

FX5UC

These instructions search the minimum value from the (n) point(s) of 16-bit binary data in the device starting from the one specified by (s), and store the minimum value in the device specified by (d).

Ladder diagram	Structured text <sup>*1</sup>	
	ENO:=MINP(EN,s,n,d);	ENO:=MINP_U(EN,s,n,d);
FBD/LD <sup>*1</sup>		

<sup>\*1</sup> The MIN and MIN\_U instructions are not supported by the ST language and the FBD/LD language. Use MIN of the standard function.  
 ➞ Page 1327 MAX(\_E), MIN(\_E)

## Setting data

### ■Descriptions, ranges, and data types


Operand	Description	Range	Data type	Data type (label)
(s)	MIN(P)	—	16-bit signed binary	ANY16_S
	MIN(P)_U		16-bit unsigned binary	ANY16_U
(d)	MIN(P)	—	16-bit signed binary	ANY16_S_ARRAY (Number of elements: 3)
	MIN(P)_U		16-bit unsigned binary	ANY16_U_ARRAY (Number of elements: 3)
(n)	Number of data to be searched	0 to 65535	16-bit unsigned binary	ANY16
EN	Execution condition	—	Bit	BOOL
ENO	Execution result	—	Bit	BOOL

### ■Applicable devices

Operand	Bit	Word			Double word		Indirect specification	Constant			Others
	X, Y, M, L, SM, F, B, SB, S	T, ST, C, D, W, SD, SW, R	U□\G□	Z	LC	LZ		K, H	E	\$	
(s)	—	○	—	—	—	—	○	—	—	—	—
(d)	—	○	—	—	—	—	○	—	—	—	—
(n)	○	○	○	○	—	—	○	○	—	—	—

## Processing details

- These instructions search the minimum value from the (n) point(s) of 16-bit binary data in the device starting from the one specified by (s), and store the minimum value in the device specified by (d). These instructions start searching from the device specified by (s), and store the location from (s) of the first minimum value in (d)+1 and the number of minimum values in (d)+2.

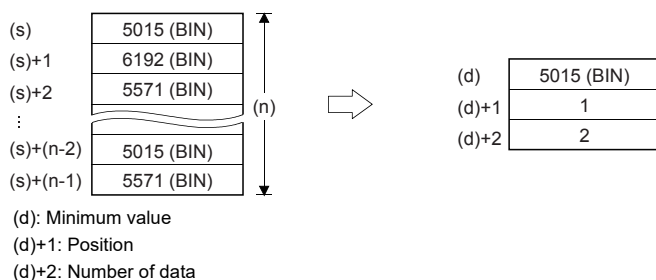

## Operation error

Error code (SD0/SD8067)	Description
2820H	The (n) point(s) of data in the device starting from the one specified by (s) exceed the corresponding device range.
	The device specified by (d) exceeds the corresponding device range.