

# RX Family

R20AN0075EJ0106

Rev.1.06

Nov 30, 2016

## Web server using the embedded TCP/IP M3S-T4-Tiny Module Firmware Integration Technology

### Introduction

This application note explains Web server using the embedded TCP/IP M3S-T4-Tiny Module (hereafter Web server).

Web server is provided as Firmware Integration Technology (FIT) Module. Please refer to the URL to know FIT outline.

<https://www.renesas.com/en-us/solutions/rx-applications/fit.html>

Web server is used by combining the following middleware products.

**Table 1 Middleware products**

Function	Middleware Product	Web Page*1
TCP/IP	M3S-T4-Tiny (hereafter T4) (R20AN0051)	<a href="http://www.renesas.com/mw/t4">http://www.renesas.com/mw/t4</a>
FTP server and Web server Interface	File driver for FTP server and Web server Module (R20AN0333)	<a href="http://www.renesas.com/mw/t4">http://www.renesas.com/mw/t4</a>
File system	M3S-TFAT- Tiny(R20AN0038)	<a href="http://www.renesas.com/mw/tfat">http://www.renesas.com/mw/tfat</a>
File system Interface	M3S-TFAT-Tiny Memory Driver Interface (R20AN0335)	<a href="http://www.renesas.com/mw/tfat">http://www.renesas.com/mw/tfat</a>
Time management	System Timer Module (R20AN0431)	<a href="http://www.renesas.com/mw/t4">http://www.renesas.com/mw/t4</a>
MMC driver	SPI mode MultiMediaCard Driver*2	<a href="http://www.renesas.com/mw/tfat">http://www.renesas.com/mw/tfat</a> <a href="http://www.renesas.com/mw/tfs">http://www.renesas.com/mw/tfs</a>
MMC extensions (board)	Middleware Evaluation board*3	<a href="http://www.renesas.com/mw/tfat">http://www.renesas.com/mw/tfat</a> <a href="http://www.renesas.com/mw/tfs">http://www.renesas.com/mw/tfs</a> <a href="http://www.renesas.com/mw/s2">http://www.renesas.com/mw/s2</a> <a href="http://www.renesas.com/mw/dtmf">http://www.renesas.com/mw/dtmf</a>
USB driver	USB driver	<a href="http://www.renesas.com/driver/us">http://www.renesas.com/driver/us</a> <a href="http://www.renesas.com/driver/us">b</a>

Notes: 1. The items with multiple page references can be downloaded from the related middleware sites.

There are no differences between the downloadable application notes themselves.

2. The SD(less 2GB size) card that has compatible command for MMC is available on this software.

3. The middleware evaluation board must be produced by the user based on these application notes.

Since each of these middleware packages are independent, they can be combined freely if the user implements interface programs. For example, the file system can be replaced by another file system, or the MMC driver can be replaced with a USB driver.

Furthermore, since the web server program itself contains no program code that depends on the microcontroller, it can be easily ported to another microcontroller simply by replacing the TCP/IP software stack with one for the other microcontroller.

We prepared sample programs for each CPU board included in [the Renesas Starter Kit](#). For more information, see Renesas Starter Kit for sample application notes.

**Table 2 Sample application notes**

<b>sample application notes</b>	<b>document number</b>	<b>website</b>
Application example using T4 (DHCP/DNS/FTP/HTTP) Firmware Integration Technology	R20AN0314	<a href="https://www.renesas.com/mw/t4">https://www.renesas.com/mw/t4</a>

## Target Device

RX Family

---

**Contents**

<b>1. Outline.....</b>	<b>4</b>
1.1 System Structure .....	4
1.2 Software Structure .....	5
1.2.1 In case MMC driver or in case USB driver.....	5
1.2.2 In case internal ROM .....	6
1.3 CGI function.....	6
<b>2. API Information .....</b>	<b>7</b>
2.1 Hardware Requirements.....	7
2.2 Software Requirements .....	7
2.3 Supported Toolchains .....	7
2.4 Limitations .....	7
2.5 Header Files .....	7
2.6 Configuration Overview.....	8
2.7 Adding Library to Your Project.....	10
2.7.1 Adding FIT Module for Your Project .....	10
2.7.2 Combination with TCP/IP(T4 Library) .....	10
<b>3. API Functions .....</b>	<b>11</b>
3.1 R_TCPIP_HttpServerOpen .....	11
3.2 R_TCPIP_HttpServerClose.....	12
3.3 R_TCPIP_HttpServerPendingReleaseRequest .....	13
3.4 R_TCPIP_HttpServerGetVersion .....	14
3.5 R_TCPIP_HttpServerReset.....	15
<b>4. File driver for FTP server and Web server Module .....</b>	<b>16</b>
<b>5. Callback Function .....</b>	<b>17</b>
5.1 http_server_cgi_callback .....	17
5.2 http_server_post_callback.....	18

## 1. Outline

This web server is an application that operates over TCP/IP, can be accessed from an ordinary web browser, and provides functions for transferring content stored on the web server to web browsers using TCP/IP.

### 1.1 System Structure

Show System Structure Example.

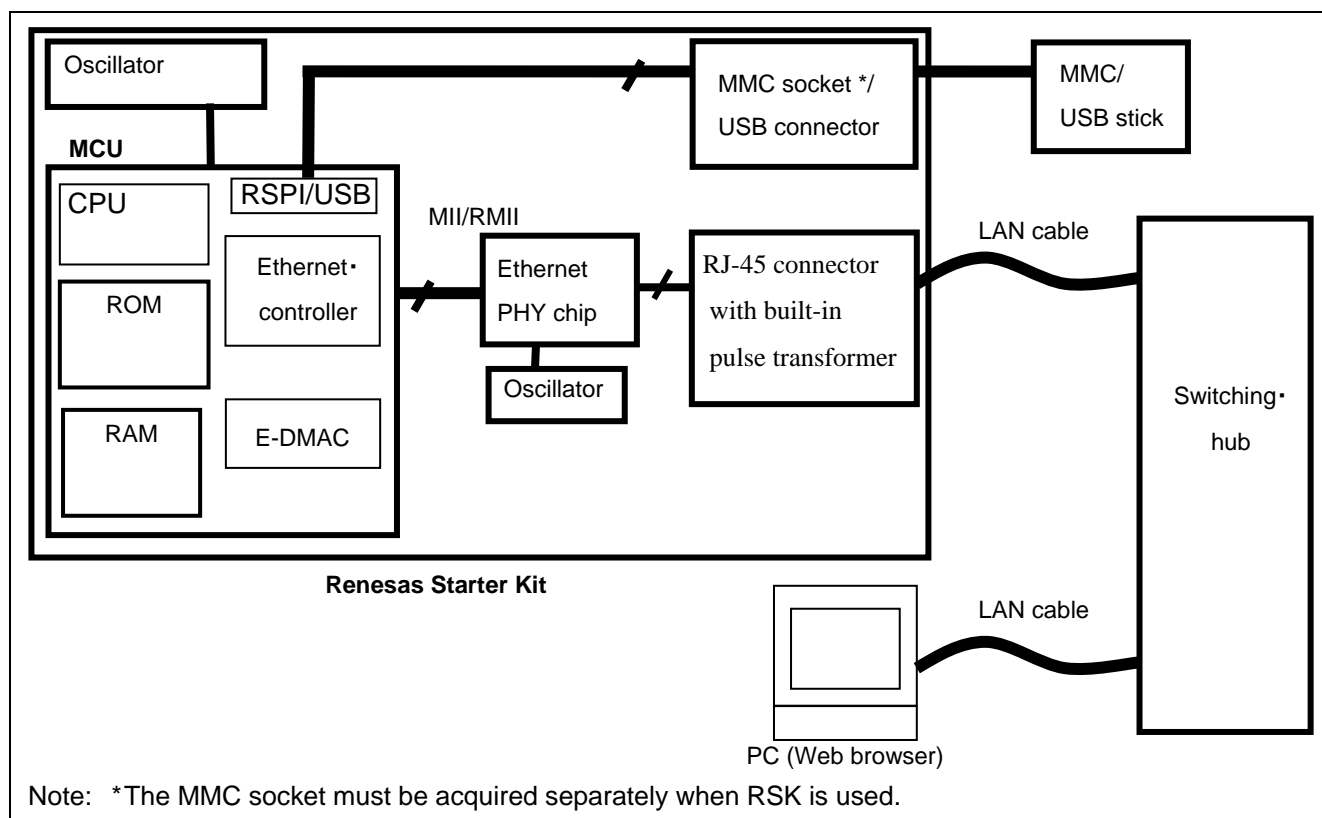


Figure 1 System Structure Example

1.2 Software Structure

1.2.1 In case MMC driver or in case USB driver

Show Software Structure Example in case MMC driver or in case USB driver.

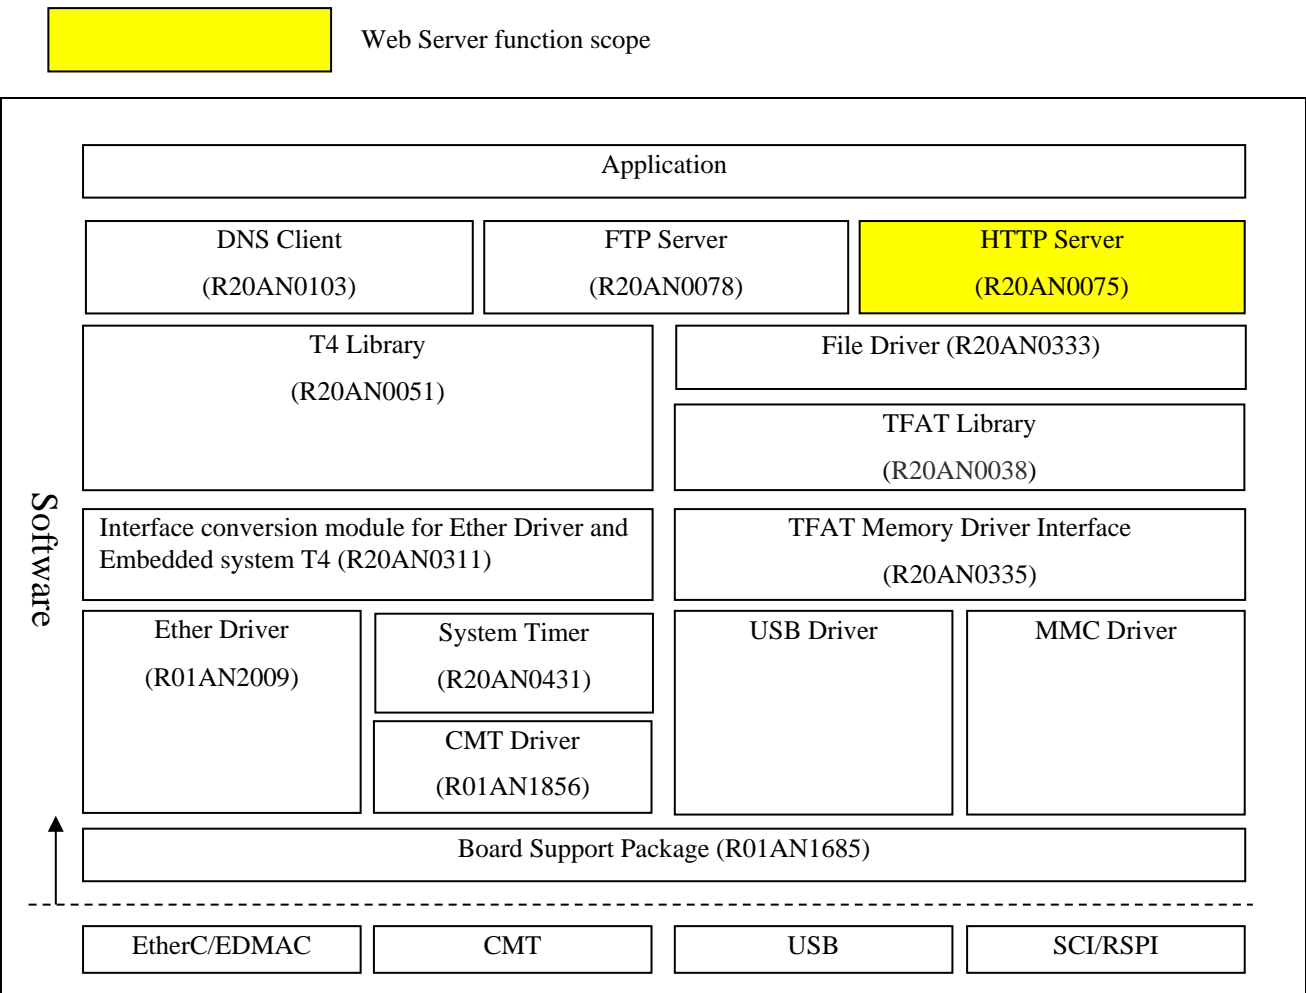


Figure 2 Software Structure Example (in case, store the web contents to MMC/USB memory)

### 1.2.2 In case internal ROM

Show Software Structure Example in case internal ROM.

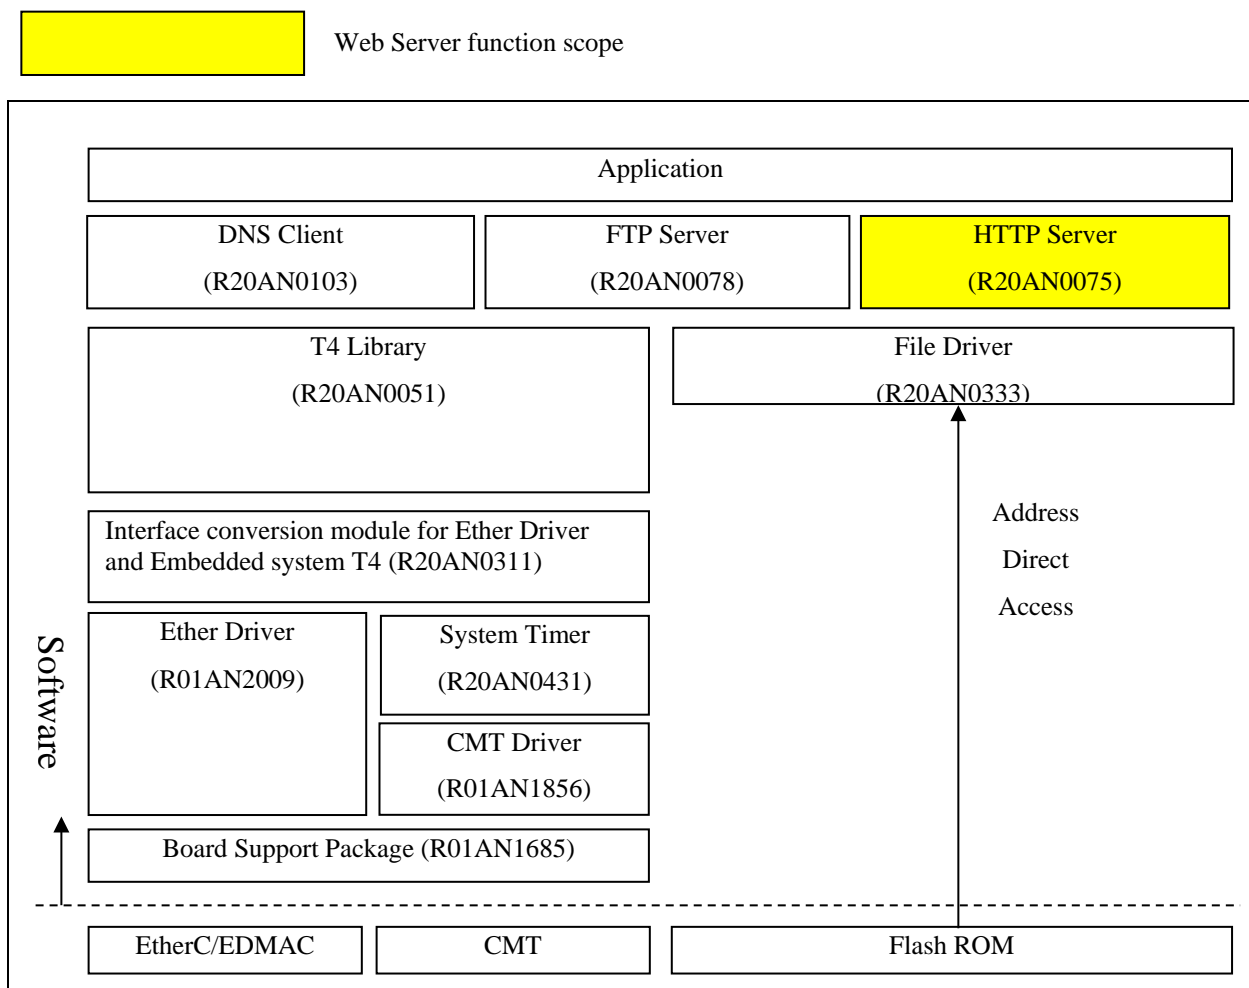


Figure 3 Software Structure Example (in case internal ROM)

### 1.3 CGI function

This Web server has easily implementation CGI (Common Gateway Interface) function. CGI is way to execute user program on Web server under the Web browser request. This Web server can call the CGI functions that corresponds to the URL. The CGI functions can be set in config file.

## 2. API Information

### 2.1 Hardware Requirements

None

### 2.2 Software Requirements

This module is dependent upon the following packages:

`r_t4_rx`

`r_t4_file_driver_rx`

`r_sys_time_rx`

### 2.3 Supported Toolchains

This library is tested and working with following toolchains:

Renesas RX Toolchain v.2.05.00

### 2.4 Limitations

This program uses `stdio.h`, `stdlib.h`, `string.h`, and `ctype.h`. Specify `stdio`, `stdlib`, `string`, and `ctype` as compiler options when compiling user programs.

### 2.5 Header Files

All API calls are accessed by including a single file "`r_t4_http_server_rx_if.h`" which is supplied with this software's project code.

## 2.6 Configuration Overview

All configurable options that can be set at build time are located in the file “r\_t4\_http\_server\_rx\_config.h”. A summary of these settings are provided in the following table:

**Table 3 Configuration options**

Configuration options in <i>r_t4_http_server_rx_config.h</i>	
#define HTTPD_VERSION_CODE ※Default value is ” ”Renesas Embedded Web Server/1.06”” .	Server header field. The data stored in the server header field transmitted to the web browser during communication with the web browser can be specified.
#define ROOT_DIR ※Default value is ” ””(NULL literal) ”” .	Root directory. Which directory in external memory is seen as the root directory can be specified. Example : #define ROOT_DIR “” #define ROOT_DIR “user” #define ROOT_DIR “user/root_dir”
#define INDEXES ※Default value is ” 1” .	Displaying or not displaying an index page. The behavior when a directory is specified from the web browser can be specified. When set to 1, the directory contents are returned as the response. When set to 0, the file specified as the DEFAULT_FILE_NAME is returned as the response.
#define DEFAULT_FILE_NAME ※Default value is ” ”index.htm”” .	File returned as response when do not display index page is specified This file is the response when INDEXES is set to 0. A "404 Not Found" response is returned if the specified file cannot be found.
#define MAX_EXTENSION ※Default value is ” 15” .	The number of corresponding content-type. This is the max number of a list of the file extensions stored in external memory.



<pre>#define EXTENSION_TYPE_TABLE_LIST ※Default value is " {"def", "application/octet-stream"},\ {"htm", "text/html"},\ {"txt", "text/plain"},\ {"exe", "application/octet-stream"},\ {"com", "application/octet-stream"},\ {"jpg", "image/jpeg"},\ {"gif", "image/gif"},\ {"png", "image/png"},\ {"zip", "application/octet-stream"},\ {"mp3", "audio/mpeg"},\ {"wav", "Nvaudio/x-wav"},\ {"dat", "application/octet-stream"},\ {"xls", "application/vnd.ms-excel"},\ {"doc", "application/msword"},\ {"cgi", "text/html"},\}" .</pre>	<p>Corresponding content-type</p> <p>This is a list of the file extensions stored in external memory.</p> <p>If a file with an extension not defined here is transferred, the system will respond to that file with the settings for the extension defined at the head of the list.</p>
<pre>#define MAX_CGI_FILE ※Default value is " 1" .</pre>	The number of registered CGI file
<pre>#define CGI_FILE_NAME_TABLE_LIST Default value is " {"cgi_smpl.cgi", NULL}, " .</pre>	The table includes CGI file name and corresponding internal functionCGI
<pre>#define HTTP_POST_CALLBACK_FUNCTION ※Default value is NULL</pre>	Callback function for receiving POST command.
<pre>#define LF_CODE ※Default value is " "\r\n" .</pre>	New line code used for index page generation.
<pre>#define HTTP_TCP_CEP_NUM ※Default value is " 4" .</pre>	<p>Maximum number of clients that can be accepted at the same time</p> <p>This value must be set to match the number of sockets defined in config_tcpudp.c</p>
<pre>#define HTTP_START_TCP_CEP ※Default value is " 0" .</pre>	The offset value of starting position of the communication endpoint in "config_tcpudp.c".
<pre>#define HTTP_MAX_FILE_LIST ※Default value is " 16" .</pre>	<p>Maximum number of files that can be displayed on the index page</p> <p>Set this value so that BODY_BUF_SIZE is not exceeded.</p>
<pre>#define RCV_BUF_SIZE ※Default value is " 1024" .</pre>	Reception buffer size
<pre>#define HDR_BUF_SIZE ※Default value is " 1460" .</pre>	Header file transmission buffer size
<pre>#define BODY_BUF_SIZE ※Default value is " 2048" .</pre>	Body field transmission buffer size
<pre>#define NO_COMMUNICATION_TIMEOUT_TIMER ※Default value is " 10" .</pre>	Timeout timer for no communication, unit is second.

## 2.7 Adding Library to Your Project

### 2.7.1 Adding FIT Module for Your Project

Please refer to the Adding Firmware Integration Technology Modules to Projects (r01an1723eu0111\_rx.pdf, for e<sup>2</sup> studio) or the Adding Firmware Integration Technology Modules to CS+ Projects (r01an1826ej0102\_rx.pdf).

### 2.7.2 Combination with TCP/IP(T4 Library)

Please add the config\_tcpudp.c that is included into TCP/IP (T4) as the following.

This example set the macro HTTP\_TCP\_CEP\_NUM = 4, HTTP\_START\_TCP\_CEP=0.

1. Please add the 4 reception points (tcp\_crep[] array) settings from HTTP\_START\_TCP\_CEP (=0) to HTTP\_TCP\_CEP\_NUM(=4). And change last member to 80.

```
T_TCP_CREP tcp_crep[] =
{
    { 0x0000, { 0, 80 }}, /* =HTTP_START_TCP_CEP */
    { 0x0000, { 0, 80 }},
    { 0x0000, { 0, 80 }},
    { 0x0000, { 0, 80 }},
};
```

2. Please add the 4 communication endpoints (tcp\_ccep[] array) settings from HTTP\_START\_TCP\_CEP (=0) to HTTP\_TCP\_CEP\_NUM(=4). And change last member to R\_TCPIP\_HttpServerCallback.

```
T_TCP_CCEP tcp_ccep[] =
{
    /* { attribute of TCP communication end point,
        top address of transmit window buffer, size of transmit window
buffer,
        top address of receive window buffer, size of receive window buffer,
address of callback routine }
    */
    { 0, 0, 0, 0, 1460, R_TCPIP_HttpServerCallback }, /* =HTTP_START_TCP_CEP */
    { 0, 0, 0, 0, 1460, R_TCPIP_HttpServerCallback },
    { 0, 0, 0, 0, 1460, R_TCPIP_HttpServerCallback },
    { 0, 0, 0, 0, 1460, R_TCPIP_HttpServerCallback },
};
```

3. Please add the R\_TCPIP\_HttpServerCallback() extern declaration.

```
#include "r_t4_itcpip.h"
extern ER R_TCPIP_HttpServerCallback(ID cepid, FN fncd , VP p_parblk);
```

### 3. API Functions

#### 3.1 R\_TCPIP\_HttpServerOpen

This function starts Web server process.

##### Format

```
int32_t R_TCPIP_HttpServerOpen(void)
```

##### Parameters

None

##### Return Value

- 0 : Normal termination
- excluding 0 : Illegal termination (No register the TCP/IP process to system timer)
- 

##### Properties

Prototyped in file "r\_t4\_http\_server\_rx\_if.h".

##### Description

This function communicates itself is performed automatically as driven by interrupts.

##### Reentrant

No

##### Special Notes

None

### 3.2 R\_TCPIP\_HttpServerClose

This function starts Web server process.

#### Format

```
int32_t R_TCPIP_HttpServerClose(void)
```

#### Parameters

None

#### Return Value

- 0 : Normal termination

#### Properties

Prototyped in file “r\_t4\_http\_server\_rx\_if.h”.

#### Description

This function terminates the Web server.

#### Reentrant

No

#### Special Notes

None

### 3.3 R\_TCPIP\_HttpServerPendingReleaseRequest

The function that is called when application would like to release the CGI pending

#### Format

```
void R_TCPIP_HttpServerPendingReleaseRequest(ID cepid)
```

#### Parameters

cepid	input	communication endpoint ID
-------	-------	---------------------------

#### Return Value

None

#### Properties

Prototyped in file “r\_t4\_http\_server\_rx\_if.h”.

#### Description

Application calls this function when release the CGI pending

Please refer to the section 5.1.http\_server\_cgi\_callback.

#### Reentrant

No

#### Special Notes

None

### 3.4 R\_TCPIP\_HttpServerGetVersion

This function returns the version number of Web server.

#### Format

```
uint32_t R_TCPIP_HttpServerGetVersion(void)
```

#### Parameters

None

#### Return Value

Version number of Web server

#### Properties

Prototyped in file “r\_t4\_http\_server\_rx\_if.h”.

#### Description

Returns the version of this module. The version number is encoded such that the top two bytes are the major version number and the bottom two bytes are the minor version number.

For example, version ‘4.25’, the return value is ‘0x00040019’.

#### Reentrant

Yes

#### Special Notes

This function is inlined using the “#pragma inline” directive in “r\_http\_server.c”.

### 3.5 R\_TCPIP\_HttpServerReset

Initialize memory for Web server.

#### Format

```
void R_TCPIP_HttpServerReset(uint8_t channel)
```

#### Parameters

channel	input	RJ45 port
---------	-------	-----------

#### Return Value

None

#### Properties

Prototyped in file “r\_t4\_http\_server\_rx\_if.h”.

#### Description

This function initializes the memory for web server communication endpoints running on channel that is specified by argument.

#### Reentrant

No

#### Special Notes

Please do not call this function in interrupt function.

#### 4. File driver for FTP server and Web server Module

The web server calls these functions. The user must code the processing performed by these functions appropriately for the file system used. Also, the web server can use this data structure to acquire information from external memory.

Please refer the application note for each function details.

Document Title : RX Family File driver for FTP server and Web server Module Firmware Integration Technology

Document No. : R20AN0333

**Table 4 API**

Name	Function
change_dir()	Change current directory
file_close()	Close file
file_delete()	Delete file
file_open()	Open file
file_read()	Read file
file_rename()	Rename file
file_exist()	Confirm exit file
file_write()	Write file
get_file_info()	Get file information
get_file_list_info()	Get file list information
get_file_size()	Get file size
make_dir()	Make directory
remove_dir()	Remove directory

The gray out function is not used this sample program.



## 5. Callback Function

### 5.1 http\_server\_cgi\_callback

#### Description

This callback function that is defined into CGI\_FILE\_NAME\_TABLE\_LIST in "r\_t4\_http\_server\_config.h". User can name this function in originally. In case, user uses CGI function, please register the function pointer to the CGI\_FILE\_NAME\_TABLE\_LIST and implement callback function.

The second element (cgi function pointer) of CGI\_FILE\_NAME\_TABLE\_LIST will be called when web browser requests the defined cgi file URL. And next, R\_TCPIP\_HttpServerProcess() will call cgi function.

HTTPd behavior will be changed by the return value.

case: Normal termination

CGI process finishes in this function.

case: Internal error

CGI process errors occur in this function.

case: CGI pending

CGI process does not finish in this function. The third element (cgi function pointer) of CGI\_FILE\_NAME\_TABLE\_LIST will be called when user will call R\_TCPIP\_HttpServerPendingReleaseRequest() in finishing CGI process.

#### Usage

```
#include "r_t4_itcpip.h"
#include "r_http_server_config.h"
#include "r_t4_http_server_rx_if.h"
ER http_server_cgi_callback (ID cepid, void *res_info);
```

#### Parameters

cepid	input	The Communication Endpoint ID that is requested CGI function execution.
res_info	input	(HTTPD_RESOURCE_INFO*)res_info->param
		The parameter from Web browser request.
	output	(HTTPD_RESOURCE_INFO*)res_info->res.body
		HTML strings as response
	output	(HTTPD_RESOURCE_INFO*)res_info->res.body_size
		HTML strings length as response

#### Return Value

-1	Internal Error
-2	CGI pending
0	Normal completion

#### Remark

None

## 5.2 http\_server\_post\_callback

### Description

This callback function that is defined into HTTP\_POST\_CALLBACK\_FUNCTION in "r\_t4\_http\_server\_config.h". User can name this function in originally. In case, user uses POST function, please register the function pointer to the HTTP\_POST\_CALLBACK\_FUNCTION and implement callback function.

This function is the Web server (received POST command) callback function that passes the received data to the user. POST command is often specified several MB as huge file size for embedded system. This function will be called when Web server received the data size reaching each RCV\_BUF\_SIZE after the POST command. This function specifies the following 4 kinds of event code to the 2nd argument. Please execute fitting process for each event code.

#### HTTP\_POST\_CALLBACK\_EVENT\_INITIALIZE

This event code will be specified when starting upload. This means passes the head of file.

#### HTTP\_POST\_CALLBACK\_EVENT\_PROCEEDING

This event code will be specified when uploading. This means passes the body of file.

#### HTTP\_POST\_CALLBACK\_EVENT\_FINALIZE

This event code will be specified when finishing upload. This means passes the tail of file.

#### HTTP\_POST\_CALLBACK\_EVENT\_ABORT

This event code will be specified when aborted.

### Usage

```
#include "r_t4_itcpip.h"
#include "r_http_server_config.h"
#include "r_t4_http_server_rx_if.h"

void http_server_post_callback(ID id, uint8_t event, uint8_t *file_name, uint8_t *receive_data,
                              uint32_t receive_data_size, uint32_t uploaded_file_size);
```

### Parameters

id	input	Communication endpoint ID received POST command
event	input	Current processing event code
file_name	input	The file name that specified by POST command
receive_data	input	Receive data pointer
receive_data_size	input	Receive data size
uploaded_file_size	input	File size for current uploading

### Return Value

None

### Remark

None

## Website and Support

Renesas Electronics Website

<http://www.renesas.com/>

Inquiries

<http://www.renesas.com/contact/>

All trademarks and registered trademarks are the property of their respective owners.

## Revision History

Rev.	Date	Description	
		Page	Summary
1.06	Nov 30, 16	—	Corresponded to POST command.
		1	Fixed Table 1
		4	Fixed Figure 2
		5	Fixed Figure 3
		7	Fixed Section 2.2.
		10	Added explanation for combine with T4 in Section 2.7.2.
		11-13	Changed API names in Section 3.1-3.3.
		15	Added Section 3.4 R_TCPIP_HttpServerReset
		16	Fixed Section 4
		—	Delete section “User-Defined Function Reference”
1.05	Oct 01.16	—	Updated the xml file for FIT.
1.04	Jan 05.15	1	Fixed FIT Module URL Added Support MCUs.
		4	Fixed Figure 2
		5	Fixed Figure 3
1.03	May 09.14	—	Corresponded to FIT Modules.
1.02	Apr 28.14	—	Corresponded to RX63N MCU.
		—	Corresponded to simple CGI function.
		—	Add web server runs by only internal ROM.
1.01	Sep 27.12	3	Add information about USB stick
1.00	Apr 12.11	—	First edition issued

## General Precautions in the Handling of Microprocessing Unit and Microcontroller Unit Products

The following usage notes are applicable to all Microprocessing unit and Microcontroller unit products from Renesas. For detailed usage notes on the products covered by this document, refer to the relevant sections of the document as well as any technical updates that have been issued for the products.

### 1. Handling of Unused Pins

Handle unused pins in accordance with the directions given under Handling of Unused Pins in the manual.

- The input pins of CMOS products are generally in the high-impedance state. In operation with an unused pin in the open-circuit state, extra electromagnetic noise is induced in the vicinity of LSI, an associated shoot-through current flows internally, and malfunctions occur due to the false recognition of the pin state as an input signal become possible. Unused pins should be handled as described under Handling of Unused Pins in the manual.

### 2. Processing at Power-on

The state of the product is undefined at the moment when power is supplied.

- The states of internal circuits in the LSI are indeterminate and the states of register settings and pins are undefined at the moment when power is supplied.  
In a finished product where the reset signal is applied to the external reset pin, the states of pins are not guaranteed from the moment when power is supplied until the reset process is completed.  
In a similar way, the states of pins in a product that is reset by an on-chip power-on reset function are not guaranteed from the moment when power is supplied until the power reaches the level at which resetting has been specified.

### 3. Prohibition of Access to Reserved Addresses

Access to reserved addresses is prohibited.

- The reserved addresses are provided for the possible future expansion of functions. Do not access these addresses; the correct operation of LSI is not guaranteed if they are accessed.

### 4. Clock Signals

After applying a reset, only release the reset line after the operating clock signal has become stable. When switching the clock signal during program execution, wait until the target clock signal has stabilized.

- When the clock signal is generated with an external resonator (or from an external oscillator) during a reset, ensure that the reset line is only released after full stabilization of the clock signal. Moreover, when switching to a clock signal produced with an external resonator (or by an external oscillator) while program execution is in progress, wait until the target clock signal is stable.

### 5. Differences between Products

Before changing from one product to another, i.e. to a product with a different part number, confirm that the change will not lead to problems.

- The characteristics of Microprocessing unit or Microcontroller unit products in the same group but having a different part number may differ in terms of the internal memory capacity, layout pattern, and other factors, which can affect the ranges of electrical characteristics, such as characteristic values, operating margins, immunity to noise, and amount of radiated noise. When changing to a product with a different part number, implement a system-evaluation test for the given product.

## Notice

1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation of these circuits, software, and information in the design of your equipment. Renesas Electronics assumes no responsibility for any losses incurred by you or third parties arising from the use of these circuits, software, or information.
2. Renesas Electronics has used reasonable care in preparing the information included in this document, but Renesas Electronics does not warrant that such information is error free. Renesas Electronics assumes no liability whatsoever for any damages incurred by you resulting from errors in or omissions from the information included herein.
3. Renesas Electronics does not assume any liability for infringement of patents, copyrights, or other intellectual property rights of third parties by or arising from the use of Renesas Electronics products or technical information described in this document. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
4. You should not alter, modify, copy, or otherwise misappropriate any Renesas Electronics product, whether in whole or in part. Renesas Electronics assumes no responsibility for any losses incurred by you or third parties arising from such alteration, modification, copy or otherwise misappropriation of Renesas Electronics product.
5. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The recommended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below.  
"Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; and industrial robots etc.  
"High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control systems; anti-disaster systems; anti-crime systems; and safety equipment etc.  
Renesas Electronics products are neither intended nor authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems, surgical implantations etc.), or may cause serious property damages (nuclear reactor control systems, military equipment etc.). You must check the quality grade of each Renesas Electronics product before using it in a particular application. You may not use any Renesas Electronics product for any application for which it is not intended. Renesas Electronics shall not be in any way liable for any damages or losses incurred by you or third parties arising from the use of any Renesas Electronics product for which the product is not intended by Renesas Electronics.
6. You should use the Renesas Electronics products described in this document within the range specified by Renesas Electronics, especially with respect to the maximum rating, operating supply voltage range, movement power voltage range, heat radiation characteristics, installation and other product characteristics. Renesas Electronics shall have no liability for malfunctions or damages arising out of the use of Renesas Electronics products beyond such specified ranges.
7. Although Renesas Electronics endeavors to improve the quality and reliability of its products, semiconductor products have specific characteristics such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Further, Renesas Electronics products are not subject to radiation resistance design. Please be sure to implement safety measures to guard them against the possibility of physical injury, and injury or damage caused by fire in the event of the failure of a Renesas Electronics product, such as safety design for hardware and software including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult, please evaluate the safety of the final products or systems manufactured by you.
8. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. Please use Renesas Electronics products in compliance with all applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive. Renesas Electronics assumes no liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
9. Renesas Electronics products and technology may not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You should not use Renesas Electronics products or technology described in this document for any purpose relating to military applications or use by the military, including but not limited to the development of weapons of mass destruction. When exporting the Renesas Electronics products or technology described in this document, you should comply with the applicable export control laws and regulations and follow the procedures required by such laws and regulations.
10. It is the responsibility of the buyer or distributor of Renesas Electronics products, who distributes, disposes of, or otherwise places the product with a third party, to notify such third party in advance of the contents and conditions set forth in this document, Renesas Electronics assumes no responsibility for any losses incurred by you or third parties as a result of unauthorized use of Renesas Electronics products.
11. This document may not be reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products, or if you have any other inquiries.  
(Note 1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its majority-owned subsidiaries.  
(Note 2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.



### SALES OFFICES

### Renesas Electronics Corporation

<http://www.renesas.com>

Refer to "http://www.renesas.com/" for the latest and detailed information.

#### **Renesas Electronics America Inc.**

2801 Scott Boulevard Santa Clara, CA 95050-2549, U.S.A.  
Tel: +1-408-588-6000, Fax: +1-408-588-6130

#### **Renesas Electronics Canada Limited**

9251 Yonge Street, Suite 8309 Richmond Hill, Ontario Canada L4C 9T3  
Tel: +1-905-237-2004

#### **Renesas Electronics Europe Limited**

Dukes Meadow, Millboard Road, Bourne End, Buckinghamshire, SL8 5FH, U.K.  
Tel: +44-1628-585-100, Fax: +44-1628-585-900

#### **Renesas Electronics Europe GmbH**

Arcadiastrasse 10, 40472 Düsseldorf, Germany  
Tel: +49-211-6503-0, Fax: +49-211-6503-1327

#### **Renesas Electronics (China) Co., Ltd.**

Room 1709, Quantum Plaza, No.27 ZhiChunLu Haidian District, Beijing 100191, P.R.China  
Tel: +86-10-8235-1155, Fax: +86-10-8235-7679

#### **Renesas Electronics (Shanghai) Co., Ltd.**

Unit 301, Tower A, Central Towers, 555 Langao Road, Putuo District, Shanghai, P. R. China 200333  
Tel: +86-21-2226-0888, Fax: +86-21-2226-0999

#### **Renesas Electronics Hong Kong Limited**

Unit 1601-1611, 16/F., Tower 2, Grand Century Place, 193 Prince Edward Road West, Mongkok, Kowloon, Hong Kong  
Tel: +852-2265-6688, Fax: +852 2886-9022

#### **Renesas Electronics Taiwan Co., Ltd.**

13F., No. 363, Fu Shing North Road, Taipei 10543, Taiwan  
Tel: +886-2-8175-9600, Fax: +886 2-8175-9670

#### **Renesas Electronics Singapore Pte. Ltd.**

80 Bendemeer Road, Unit #06-02 Hyflux Innovation Centre, Singapore 339949  
Tel: +65-6213-0200, Fax: +65-6213-0300

#### **Renesas Electronics Malaysia Sdn.Bhd.**

Unit 1207, Block B, Menara Amcorp, Amcorp Trade Centre, No. 18, Jln Persiaran Barat, 46050 Petaling Jaya, Selangor Darul Ehsan, Malaysia  
Tel: +60-3-7955-9390, Fax: +60-3-7955-9510

#### **Renesas Electronics India Pvt. Ltd.**

No.777C, 100 Feet Road, HALII Stage, Indiranagar, Bangalore, India  
Tel: +91-80-67208700, Fax: +91-80-67208777

#### **Renesas Electronics Korea Co., Ltd.**

12F., 234 Teheran-ro, Gangnam-Gu, Seoul, 135-080, Korea  
Tel: +82-2-558-3737, Fax: +82-2-558-5141