

NGC-UIT-ORD

User interface terminal for DigiTrace NGC systems

Installation Instructions

Description

The NGC-UIT-ORD is a panel mounted display used in conjunction with other approved DigiTrace® control and monitoring devices. The NGC-UIT-ORD is rated IP 54 (NEMA 4), however, the display can best be viewed indoors or when protected from direct sunlight. The NGC-UIT-ORD kit includes all hardware required for mounting in a suitable electrical panel. These instructions describe how to mount the NGC-UIT-ORD in an electrical panel and are intended only for personnel experienced in panel construction.

Tools Required

- Masking tape
- 11/32 inch nut driver
- Metal file
- #16 (3/16) drill bit
- Jig saw (recommend using carbon steel blade with 24 TPI)

Approvals/Certifications

Ordinary Areas



NGC-UIT-ORD kit shown
installed in user's panel

General

Supply voltage	100 – 240 VAC $\pm 10\%$, .25 A max/25 VA, 50/60 Hz
Operating temperature	–40°C to 65° (–40°F to 149°F)
EMC	Immunity – Industrial Emission – Commercial / Light Industrial
Vibration	Unit tested to IEC-60068-2-6
Shock	Unit tested to IEC-60068-2-27
Dimensions	260 mm wide X 168 mm high X 76 mm deep (10 1/4" wide X 6 5/8" high X 3" deep)

Control Outputs

Relay outputs	Three relay outputs, SPDT contacts, switching loads up to 277 VAC/3 Amps Relays may be assigned for alarm outputs 11 position Phoenix-style pluggable screw terminal connector with retaining screws
---------------	--

Network Connection

Local port/ remote	RS-485/RS-232, selectable. Port may be used to communicate with Supervisor Software RS-232 is non-isolated, RJ-11 connection RS-485, 2-wire Isolated. Phoenix-style pluggable screw terminal connector with retaining screws. Maximum number of devices 256. Fail safe design with optional termination resistors Data Rate to 2400 to 57600 baud Maximum cable length for RS-485 not to exceed 1200 m (4000 feet). Cable to be shielded twisted pair
--------------------	---

Field port	RS-485 2-wire isolated. Used to communicate with external devices, such as NGC-30-CRM, MONI-RMC and RMM2. Maximum cable length not to exceed 1200 m (4000 ft). Cable to be shielded twisted pair Phoenix style pluggable screw terminal connector with retaining screws. Maximum number of devices 256. Fail safe design with optional termination resistors Data rate to 9600 baud
LAN	10/100 Base-T Ethernet port with Link and Activity Status LEDs
USB port	USB 2.0 Host port Type A receptacle

Status LEDs

Relay	Three LEDs showing the ON/OFF Status for each relay, LED ON indicates relay is energized
Field	Transmit and Receive activity
Local/Remote	Transmit and Receive activity
USB host	Three colors showing status: Green = USB key inserted Red = USB key fault Yellow = USB in use
UIT status	Three colors showing system status: Green = Normal Condition Red = Fault Condition Yellow = loading software/configuration

LCD Display

Display	LCD is a 16.6 cm (6.5 inch) QVGA, color TFT transreflective device with integral CCFL backlight. (For use indoors or when protected from direct sunlight)
Touch screen	4-wire resistive touch screen interface for user entry. Usable with gloved fingers


WARNING:

This component is an electrical device which must be installed correctly to ensure proper operation and to prevent shock or fire. Read these important warnings and carefully follow all the installation instructions.

- Component approvals and performance are based on the use of specified parts only. Do not use substitute parts.

Kit Contents

Item	Qty	Description
A	1	NGC-UIT-ORD display
B	1	Sealing gasket
C	10	#8 washers (stainless steel)
D	10	#8/32 locknuts (stainless steel)
E	1	1.5 meter (5 feet) RS-232 adaptor cable

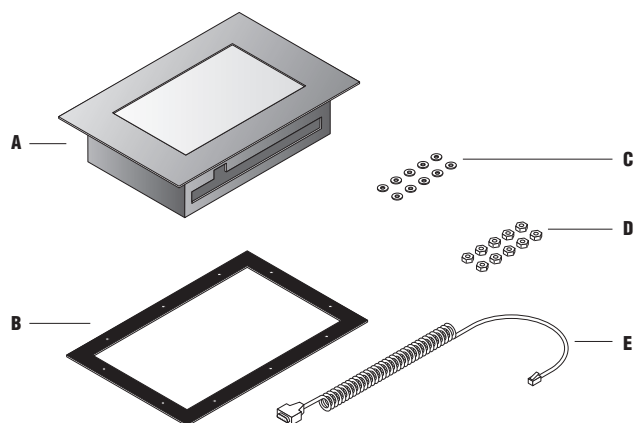

Overview of Installation Procedure for NGC-UIT-ORD

	Page #
A. Provide suitable panel enclosure, and determine locations for NGC-UIT-ORD assembly in panel	2
B. Cut opening and mount NGC-UIT-ORD on front of panel	3
C. Installing common alarm light	4
D. Connect power and communication to the UIT	4
E. Servicing	5
F. Cleaning	5
G. Configuration switches	5
H. Reset switch	5
I. Cutting template	7

A. Provide suitable panel enclosure, and determine locations for NGC-UIT-ORD assembly in panel


1. Provide suitable panel enclosure

To protect its electronic components, the NGC-UIT-ORD must be mounted in a minimum NEMA 1 enclosure. A IP 54 (NEMA 12) or better enclosure is recommended. The NGC-UIT-ORD assembly comes with a sealing gasket and hardware to mount the enclosure.

Note: The DigiTrace NGC-UIT-ORD is designed for operation in ambient temperatures from -40°C to 65°C (-40°F to 149°F). If the ambient temperature is outside this range, a space heater and/or cooling fan will be required in the panel.

2. Determine locations for the NGC-UIT-ORD assembly in the electrical panel

The NGC-UIT-ORD should be located on the front of the panel near eye level (for convenient viewing). The NGC-UIT-ORD assembly is an electronic unit and must not be located where it will be exposed to strong magnetic fields or excessive vibration.

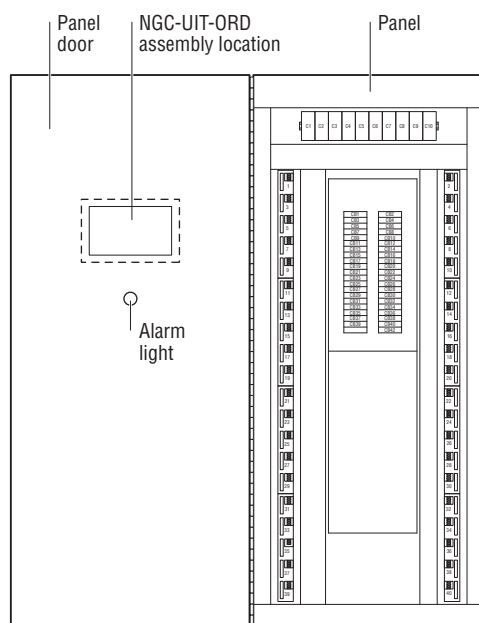


B. Cut opening and mount NGC-UIT-ORD on front of panel

1. Locate the NGC-UIT-ORD on front of panel

Locate the NGC-UIT-ORD assembly on the front of the panel at a level convenient for viewing. Make sure the cover on the back of the assembly will not interfere with existing panel hardware.

(Refer to full size cut-out template with all dimensions on page 7.)

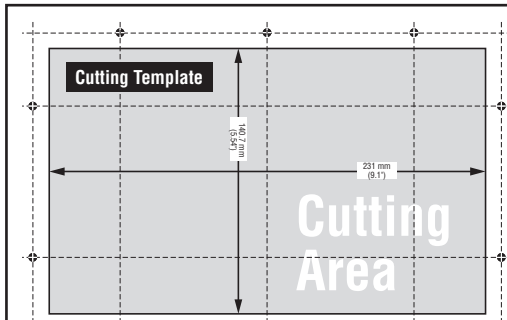

Note: Cutting the opening for the display is a craft sensitive procedure; if it is not done correctly, the panel door can be damaged. The procedure for laying out and cutting the opening for the display must be undertaken with care, and by personnel qualified and experienced in panel construction.

2. Prepare and mark the position of the display opening and mounting holes

- Use the cut-out template on page 7 to lay out the opening for the NGC-UIT-ORD display.
- Apply two layers of masking tape around the outer perimeter of the intended opening to prevent scratching the panel surface with the jigsaw.
- Use the template on page 7 to mark the opening and the mounting holes for the user interface assembly.

Note: The following steps are most easily accomplished if the panel door is on a horizontal surface.

3. Cut the display opening

Cut the opening for the NGC-UIT-ORD with a jigsaw using a 24 TPI blade. Take care not to damage the panel door. Remove all rough edges and burrs with a metal file before proceeding.

4. Drill the mounting holes



Drill the 10 holes with a 5 mm (3/16 inch) drill bit to mount the NGC-UIT-ORD assembly in the panel.

5. Position the gasket on the outside of the panel door


- Place the sealing gasket between the NGC-UIT-ORD and front side of enclosure door.

6. Mount the user interface assembly onto the panel door

- Place the NGC-UIT-ORD assembly in position; the ten mounting screws go through the ten holes on the NGC-UIT-ORD assembly mounting plate (see figure below).

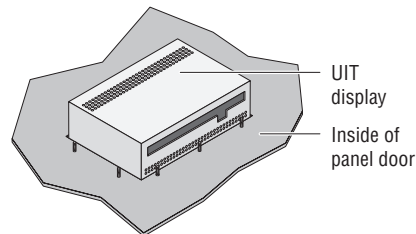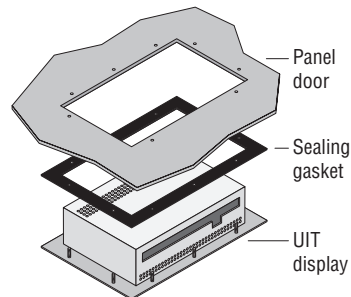

- Place a #8 washer and #8/32 locknut on each of the ten mounting studs; fasten only hand tight.

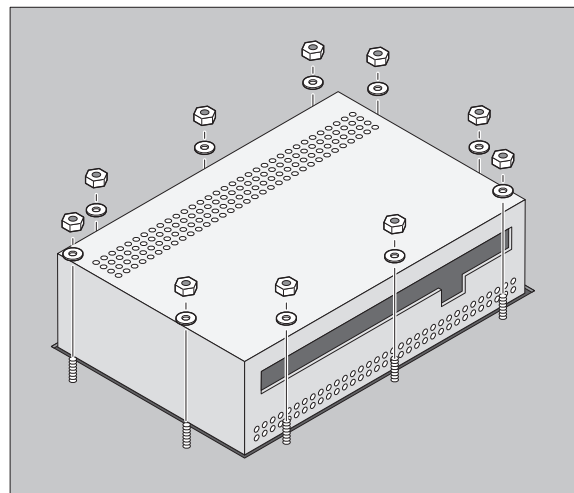


- Look at the front of the panel, and align the NGC-UIT-ORD assembly so it is level (loosen nuts if necessary to reposition the NGC-UIT-ORD assembly).
- After the display and gasket are properly positioned, tighten the nuts to 1.13 Nm (Newton Meter) of torque using an 11/32 inch nut driver.

Do not overtighten and risk damage to hardware.

C. Installing Common Alarm Light

An alarm light must be installed on the front of the enclosure to indicate when an alarm has occurred. Relay 1 has already been programmed for this purpose, and must be connected as shown.

If desired, install a push-to-test alarm light and/or interposing relay and test button.

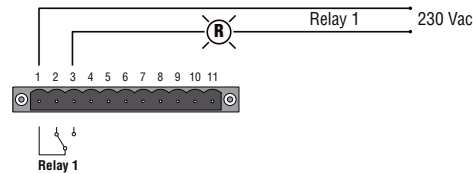

D. Connect power and communication to the UIT

Power and Earth Ground

1. Connect 100 to 277 Vac $\pm 10\%$ to AC input terminals (Line/L1 and Neutral/L2). Maximum wire size is 12 AWG, minimum wire size is 18 AWG.
Ensure that branch circuit breaker does not exceed 15A and is installed in accordance with local electrical codes.
2. A ground conductor must be terminated at the ground terminal of the AC Input connector.


Communication

Field side port

1. This port is used to communicate with ModBus® devices. Connections to these terminals should be a shielded, twisted pair cable. (Belden CDT cable 8761 or equivalent, maximum length is 1200 m [4000 feet]). For more information, refer to the *NGC-30 Programming Guide* (Install 111) and the *NGC-30 Installation Manual* (Install 114).

Local port

1. This port is used to communicate to a host computer and is user selectable for either RS-232 or RS-485.
2. If the RS-232 port is utilized, the supplied RJ-11 to RS-232 adaptor cable must be used. For more information, refer to the *NGC-30 Programming Guide* (install 111) and the *NGC-30 Installation Manual* (install 114).

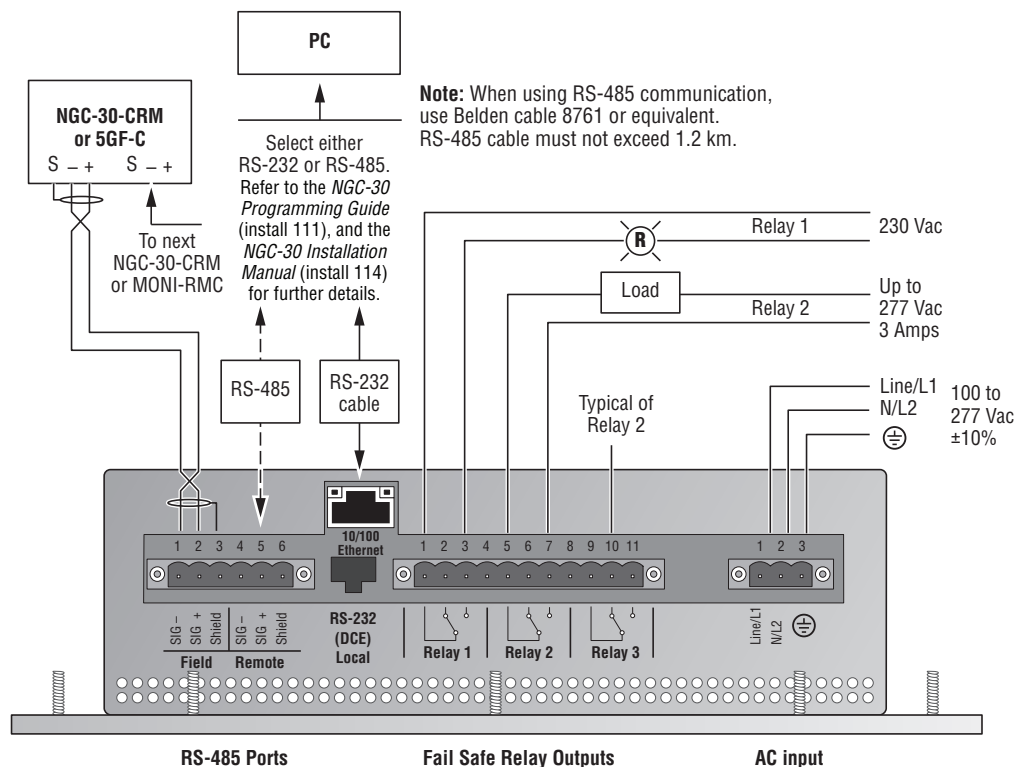

Note: Relays are shown in the energized position (without an alarm condition).

E. Servicing

The NGC-UIT-ORD contains no user-serviceable parts. Contact your Tyco Thermal Controls representative for service and an authorization number if required.

F. Cleaning

The touch screen area of the NGC-UIT-ORD may be cleaned with a damp or dry cloth. Typical window cleaning agents may be applied to aid in the removal of dirt, dust and grease. **Do not use abrasive cleaners.**

G. Configuration switches

The configuration switches are found on the side of the NGC-UIT-ORD. Refer to the table below for settings.

Switch	Position		Comments
	On	Off	
TERM R-FIELD (Field Port Termination Select)	120 Ohm Termination Enabled (Factory Default)	Termination Disabled	This switch should be enabled if this NGC-UIT-ORD is the first or last in a series of devices connected via RS-485
TERM R-REMOTE (Remote Port Termination Select)	120 Ohm Termination Enabled	Termination Disabled (Factory Default)	Enabled only if this NGC-UIT-ORD is the last in a series of devices connected via RS-485
WDT (Watch Dog Timer)	WDT Enabled (Factory Default)	WDT Disabled	WDT should normally be enabled


H. Reset switch

The Reset switch can be found on the side of the NGC-UIT-ORD. A pointed object is required to press the reset switch and restart the UIT software.

Side View



This Page Purposely Left Blank

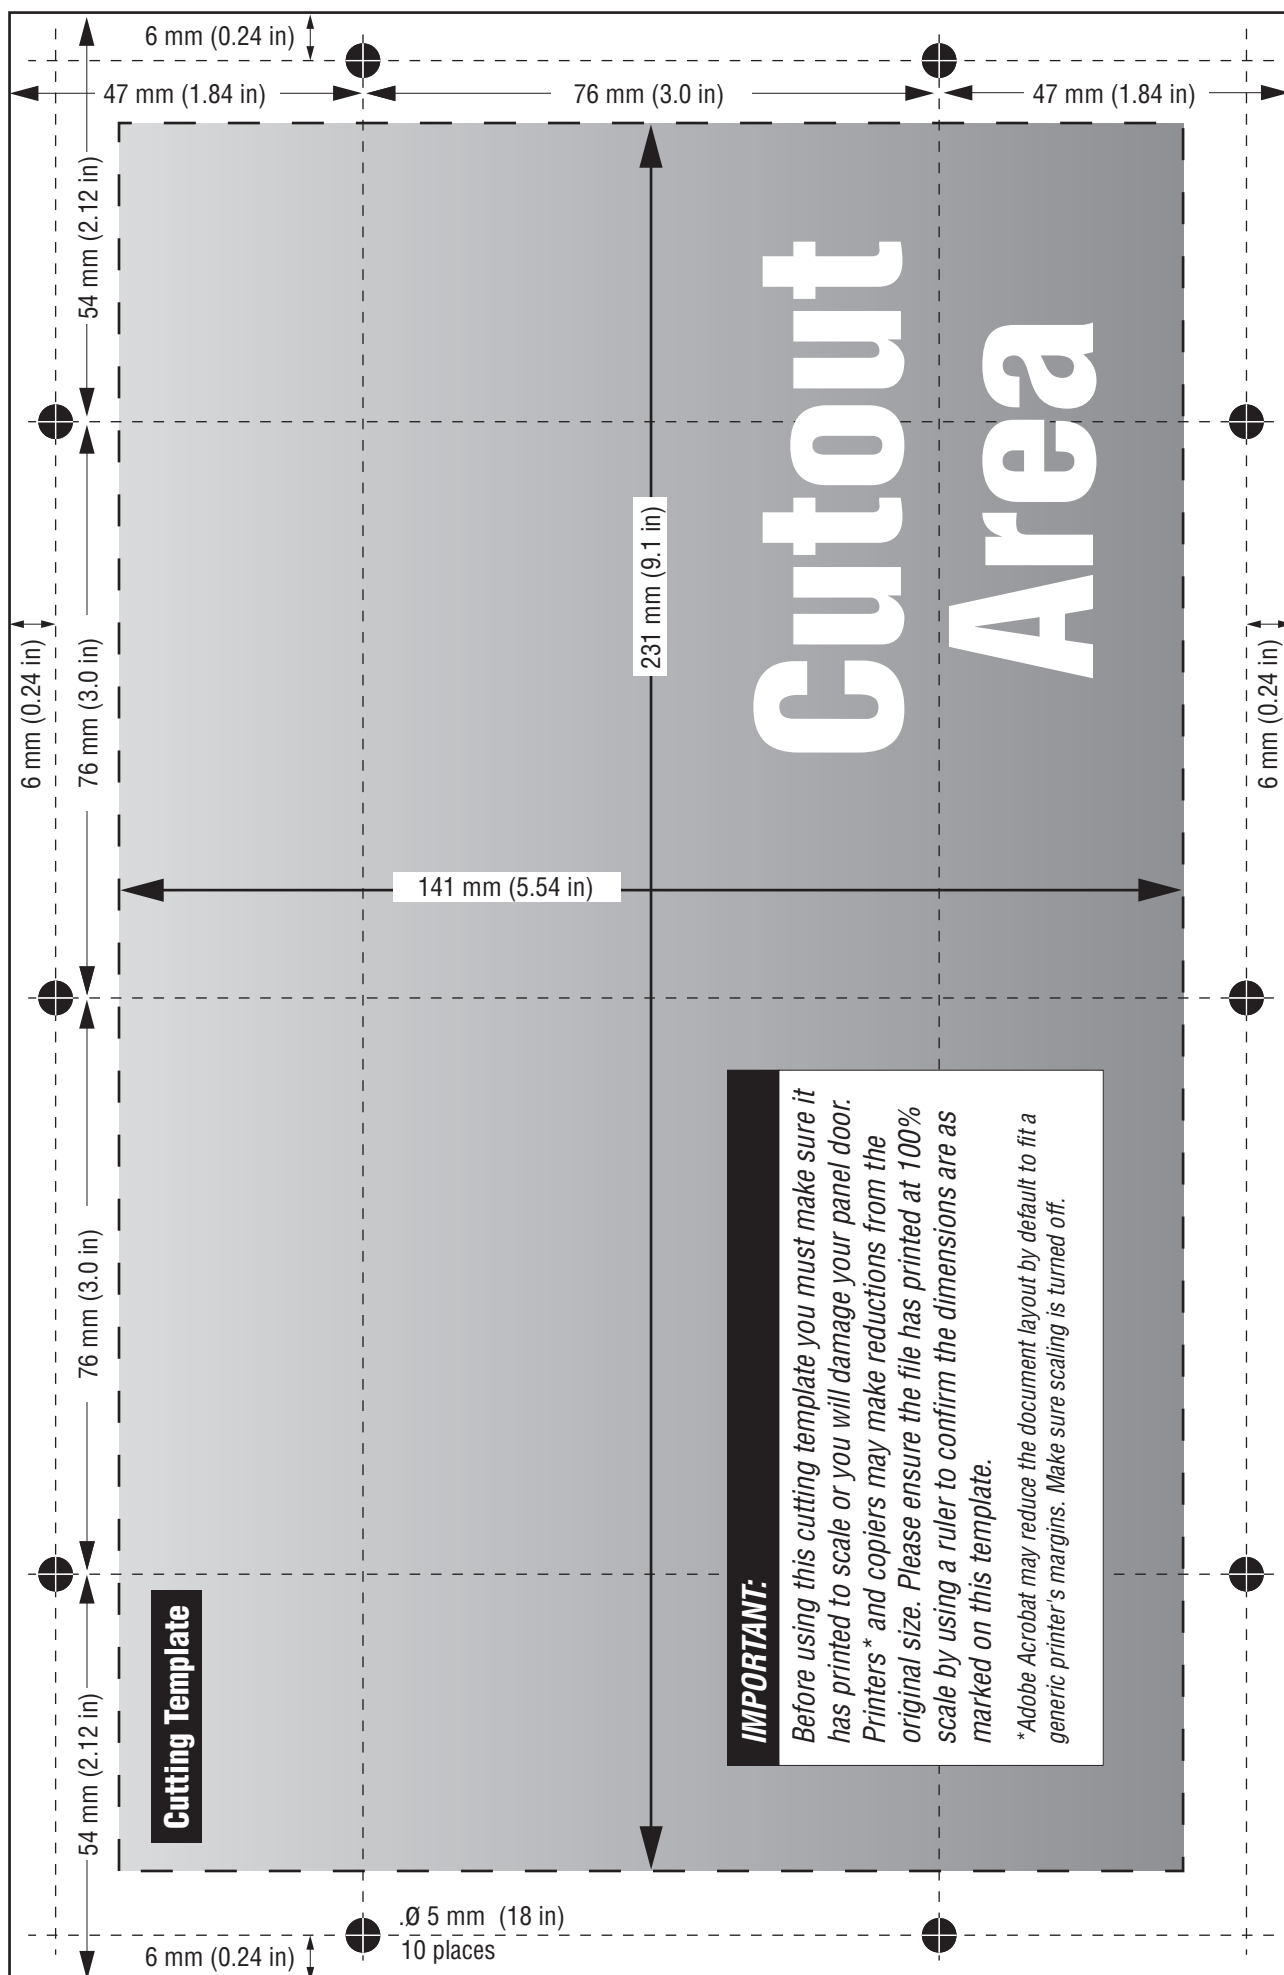

European Headquarters**Tyco Thermal Controls**

Staatsbaan 4A
3210 Lubbeek
Belgium
Tel. (32) 16 213 511
Fax (32) 16 213 610
info@tycothermal.com

België / Belgique

Tyco Thermal Controls
Staatsbaan 4A
3210 Lubbeek
Tel. (016) 213 511
Fax (016) 213 610

Bulgaria

ERZET Engineering
Kompl. Bratja Miladinovi/bl57/vch.4A
BG-8000 Burgas
Tel./fax (56) 3 4198
Mobile (88) 639 903
Fax (UK) +44 8701368787

Česká Republika

Raychem HTS s.r.o.
Novodvorská 82
14200 Praha 4
Tel. 241 009 215
Fax 241 009 219

Danmark

Tyco Thermal Controls Nordic AB
Flöjelbergsgatan 20B
S-431 37 Mölndal
Tel. 70 11 04 00
Fax 70 11 04 01

Deutschland

Tyco Thermal Controls GmbH
Birlenbacher Strasse 19-21
57078 Siegen-Geisweid
Tel. 0800 1818205
Fax 0800 1818204

España

Tracelec
C/Josep V. Foix, 10
Apdo. 1326-43080
43007 Tarragona
Tel. (34) 977 290 039
Fax (34) 977 290 032

France

Tyco Thermal Controls SA
B.P. 90738
95004 Cergy-Pontoise Cedex
Tél. 0800 906045
Fax 0800 906003

Hrvatska

ELGRI d.o.o.
S. Mihalica 2
10000 Zagreb
Tel. (1) 6050188
Fax (1) 6050187

Italia

Tyco Electronics Raychem SPA
Centro Direzionale Milanofiori
Palazzo E5
20090 Assago, Milano
Tel. (02) 57 57 61
Fax (02) 57 57 62 01

Lithuania/Latvia/Estonia

Tyco Thermal Controls BV Atstovybe
Smolensko g. 6
3210 LT Vilnius
Tel. +370 5 2136633
Fax +370 5 2330084

Magyarország

Szarka Ignác
Maroshévisz u. 8
1173 Budapest
Tel. (1) 253 76 17
Fax (1) 253 76 18

Nederland

Tyco Thermal Controls b.v.
Van Heuven Goedhartlaan 121
1181 KK Amstelveen
Tel. 0800 0224978
Fax 0800 0224993

Norge

Tyco Thermal Controls Norway AS
Postboks 6076 - Etterstad
0601 Oslo
Tel. +47 66 81 79 90
Fax +47 66 80 83 92

Österreich

Tyco Thermal Controls N.V. Lubbeek
Office Wien
Brown-Boveri Strasse 6/14
2351 Wiener Neudorf
Tel. (0 22 36) 86 00 77
Fax (0 22 36) 86 00 77-5

Polska

Tyco Thermal Controls Polska Sp. z o.o.
ul. Cybernetyki 19
02-677 Warszawa
Tel. 0 800 800 114
Fax 0 800 800 115

Romania

Tyco Thermal Controls Romania
53 Primaverii Bvd.
011973 Bucuresti
Tel. 21 317 92 87
Fax 21 317 92 87

Schweiz / Suisse

Tyco Thermal Controls N.V.
Office Baar
Haldenstrasse 5
Postfach 2724
6342 Baar
Tel. (041) 766 30 80
Fax (041) 766 30 81

Suomi

Tyco Thermal Controls Nordic AB
Flöjelbergsgatan 20B
S-431 37 Mölndal
Puh. 0800 11 67 99
Telekopio 0800 11 86 74

Sverige

Tyco Thermal Controls Nordic AB
Kanalvägen 3 A
S-194 61 Upplands Väsby
Tel. 08-590 094 60
Fax 08-590 925 70

Türkiye

HENA Ltd.
Ressam Vecih Bereketoglu Sokak
Candan Ap. No 8/1
Caddebostan
81060 Kadiköy, Istanbul
Tel. (216) 363 1212
Fax (216) 360 3816

United Kingdom

Tyco Thermal Controls (UK) Ltd
3 Rutherford Road,
Stephenson Industrial Estate
Washington, Tyne & Wear
NE37 3HX
Tel. 0800 969013
Fax: 0800 968624

РОССИЯ и другие страны СНГ**РАЙХЕМ**

Россия, 127081, Москва
пр. Дежнева 29, стр. 1

Republic of Kazakhstan

Tyco Thermal Controls
4 Khakimov St.
Atyrau, 060002
Tel. +7 3122 32 56 51
Fax +7 3122 32 56 38

Serbia and Montenegro

Keying d.o.o.
Vuka Karadžića 79
23300 Kikinda
Tel. (230) 401 770
Fax (230) 401 790

Worldwide Headquarters**Tyco Thermal Controls**

2415 Bay Road
Redwood City, CA 94063-3032
USA
Tel. (1)(650) 216-1526
Fax (1)(650) 474-7711
info@tycothermal.com

www.tycothermal.com

DigiTrace is a trademark of Tyco Thermal Controls, LLC or its affiliates.

Important: All information, including illustrations, is believed to be reliable. Users, however, should independently evaluate the suitability of each product for their particular application. Tyco Thermal Controls makes no warranties as to the accuracy or completeness of the information, and disclaims any liability regarding its use. Tyco Thermal Controls' only obligations are those in the Tyco Thermal Controls Standard Terms and Conditions of Sale for this product, and in no case will Tyco Thermal Controls or its distributors be liable for any incidental, indirect or consequential damages arising from the sale, resale, use or misuse of the product. Specifications are subject to change without notice. In addition, Tyco Thermal Controls reserves the right to make changes, without notification to the Buyer, to processing or materials that do not affect compliance with any applicable specification.

tyco*Thermal Controls*