

OPL1000

ULTRA-LOW POWER 2.4GHZ WI-FI + BLUETOOTH SMART SOC

BLE to WiFi Application Development Guide



OPULINKS

<http://www.opulinks.com/>

Copyright © 2017-2018, Opulinks. All Rights Reserved.

OPL1000-BLEWIFI-Application-Dev-Guide-R01 | Version 04

Date	Version	Contents Updated
2018/4/1	0.1	<ul style="list-style-type: none">Initial Release
2018/6/19	0.2	<ul style="list-style-type: none">Add message chart and add new command IDs
2018/6/20	0.3	<ul style="list-style-type: none">Modify WIFI status part
2018/7/19	0.4	<ul style="list-style-type: none">Add document application scope, abbr., reference etc.

TABLE OF CONTENTS

1. 介绍	3
1.1. 文档应用范围	3
1.2. 缩略语	3
1.3. 参考文献	3
2. List of Command ID	4
3. The Usage of Command ID	6
3.1. SCAN REQUEST	6
3.2. SCAN REPORT RESPONSE	6
3.3. SCAN RESPONSE END	7
3.4. CONNECT REQUEST	8
3.5. CONNECT RESPONSE	8
3.6. DISCONNECT REQUEST	9
3.7. DISCONNECT RESPONSE	10
3.8. RECONNECT REQUEST	10
3.9. RECONNECT RESPONSE	11
3.10. READ DEVICE INFORMATION REQUEST	12
3.11. READ DEVICE INFORMATION RESPONSE	12
3.12. WRITE DEVICE INFORMATION REQUEST	13
3.13. WRITE DEVICE INFORMATION RESPONSE	13
3.14. WIFI STATUS REQUEST	14
3.15. WIFI STATUS RESPONSE	15
3.16. RESET REQUEST	16
3.17. RESET RESPONSE	16
4. Message Chart	17
4.1. Wi-Fi Scan	17
4.2. Wi-Fi Scan (TimeOut)	18
4.3. Wi-Fi Scan (REPORT TimeOut)	19
4.4. Wi-Fi Status	20
4.5. Wi-Fi Status (TimeOut)	21
4.6. Wi-Fi Connect	22
4.7. Wi-Fi Connect (Failure)	23
4.8. Wi-Fi Connect (TimeOut)	24
4.9. Wi-Fi Disconnect	25
4.10. Wi-Fi Disconnect (TimeOut)	26
4.11. Wi-Fi Reset	27

4.12. Wi-Fi Reset (Failure)	28
4.13. Wi-Fi Reset (TimeOut)	29

1. 介绍

1.1. 文档应用范围

本文介绍了通过 BLE 配网 WIFI AP 的过程，使用的 API 调用接口以及消息流程。对应于 OPL1000 SDK Package 的示例工程 SDK\APS_PATCH\examples\bluetooth\blewifi。

1.2. 缩略语

Abbr.	Explanation
BLE	Bluetooth Energy 低功耗蓝牙
WIFI	Wireless Fidelity 无线局域网

1.3. 参考文献

[1] BLE 配网 WIFI AP 演示说明 OPL1000-Demo-BLE-setup-network-guide.pdf


2. List of Command ID

Name	Value	Description
BLEWIFI_REQ_SCAN	0x0000	The app sends a request of scan command to driver.
BLEWIFI_REQ_CONNECT	0x0001	The app sends a request of connect command to driver.
BLEWIFI_REQ_DISCONNECT	0x0002	The app sends a request of disconnect command to driver.
BLEWIFI_REQ_RECONNECT	0x0003	The app sends a request of reconnect command to driver.
BLEWIFI_REQ_READ_DEVICE_INFO	0x0004	The app sends a request of get device information.
BLEWIFI_REQ_WRITE_DEVICE_INFO	0x0005	The app sends a request of set device information.
BLEWIFI_REQ_WIFI_STATUS	0x0006	The app send a request of get Wi-Fi status
BLEWIFI_REQ_RESET	0x0007	The app send a request of reset Wi-Fi record
BLEWIFI_RSP_SCAN_REPORT	0x1000	Driver reports an event of scan results to app.
BLEWIFI_RSP_SCAN_END	0x1001	Driver reports an event of scan end to app, to notify app to stop to receive scan result events.
BLEWIFI_RSP_CONNECT	0x1002	Driver reports an event of connect to app.
BLEWIFI_RSP_DISCONNECT	0x1003	Driver reports an event of disconnect to app.
BLEWIFI_RSP_RECONNECT	0x1004	Driver reports an event of reconnect to app.
BLEWIFI_RSP_READ_DEVICE_INFO	0x1005	Driver reports data of device information.

Name	Value	Description
BLEWIFI_RSP_WRITE_DEVICE_INFO	0x1006	Driver reports an event about whether the data is set successfully or not.
BLEWIFI_RSP_WIFI_STATUS	0x1007	Driver report an event of Wi-Fi status of device to app.
BLEWIFI_RSP_RESET	0x1008	Driver report an event reset results to app.


3. The Usage of Command ID

3.1. SCAN REQUEST

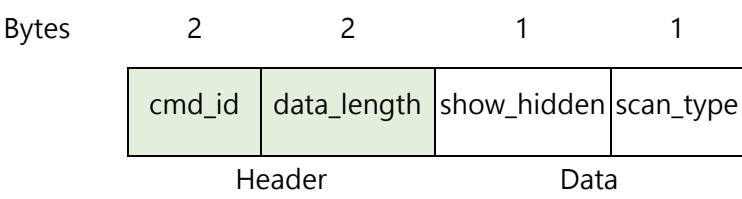


- CMD_ID: Command ID, please refer to Command ID section.
- Data_Length: Size of data.
- Show_hidden: Enable to scan AP whose SSID is hidden; enable (1), disable (0).
- Scan_type: Scan type, active or passive; active (0), passive (1).

Example for frame format:

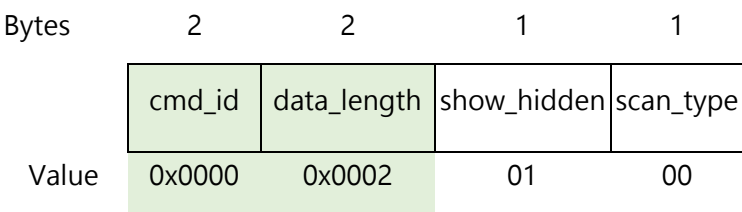

3.2. SCAN REPORT RESPONSE

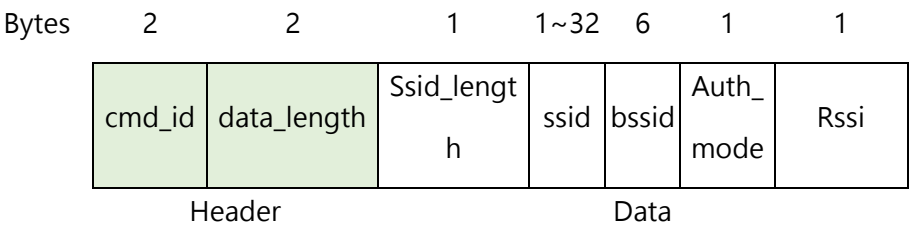

- CMD_ID: Command ID, please refer to Command ID section.
- Data_Length: Size of data.

- Ssid_length: Length of the SSID.
- Ssid: Stores the predefined SSID.
- Bssid: AP's MAC address.
- Auth_mode: This defines the wireless authentication mode to indicate the Wi-Fi device authentication attribute. Open (0), WEP (1), WPA_PSK (2), WPA2_PSK (3), WPA_WPA_2_PSK (4), WPA2_ENTERPRISE (5).
- Rssi: Records the RSSI value when probe response is received.

Example for frame format:

Bytes	2	2	1	1~32	6	1	1
	cmd_id	data_length	Ssid_length	ssid	bssid	Auth_mode	Rssi
Value	0x1000	0x0017	08	44 2d 4c 69 6e 6b 5f 44	74 DA DA E7 08 F1	03	1E

3.3. SCAN RESPONSE END


Bytes	2	2
	cmd_id	data_length
	Header	

- CMD_ID: Command ID, please refer to Command ID section.
- Data_Length: Size of data.

Example for frame format:


Bytes	2	2
	cmd_id	data_length
Value	0x1001	0x0000

3.4. CONNECT REQUEST

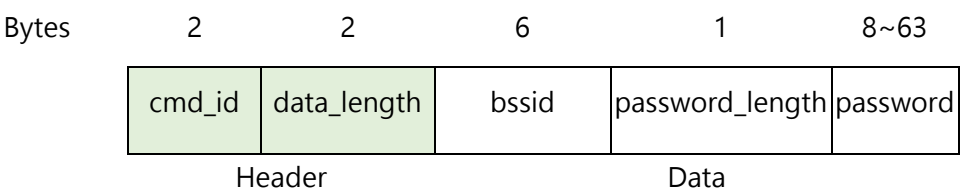


- CMD_ID: Command ID, please refer to Command ID section.
- Data_Length: Size of data.
- Bssid: AP's MAC address.
- Password_length: The length of the password.
- Password: The password of the target AP.

Example for frame format:

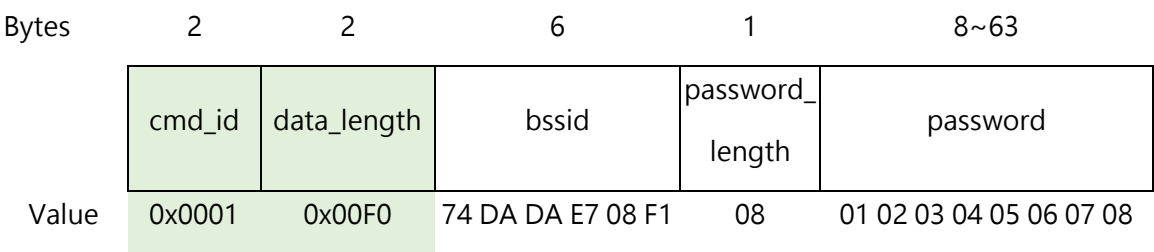

3.5. CONNECT RESPONSE

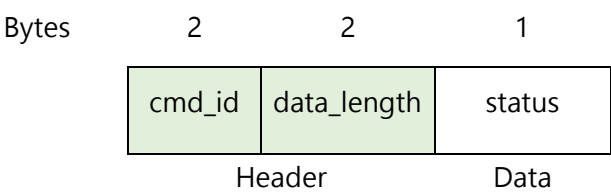

- CMD_ID: Command ID, please refer to Command ID section.
- Data_Length: Size of data.
- Status: Return success (0) or failed reason code (1).

Example for frame format:

Bytes	2	2	1
	cmd_id	data_length	status
Value	0x1002	0x0001	00

3.6. DISCONNECT REQUEST


Bytes	2	2
	cmd_id	data_length
	Header	

- CMD_ID: Command ID, please refer to Command ID section.
- Data_Length: Size of data.

Example for frame format:


Bytes	2	2
	cmd_id	data_length
Value	0x0002	0x0000

3.7. DISCONNECT RESPONSE

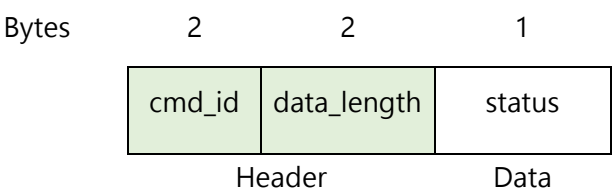


- CMD_ID: Command ID, please refer to Command ID section.
- Data_Length: Size of data.
- Status: Return success (0) or failed reason code (1).

Example for frame format:

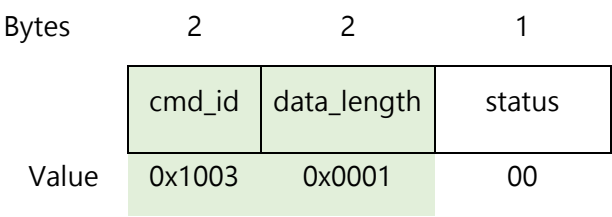

3.8. RECONNECT REQUEST

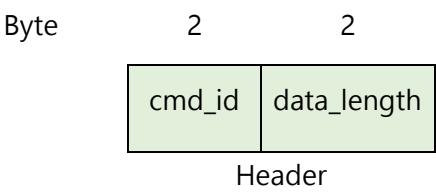

- CMD_ID: Command ID, please refer to Command ID section.
- Data_Length: Size of data.

Example for frame format:



	cmd_id	data_length
Value	0x0003	0x0000

3.9. RECONNECT RESPONSE


Byte	2	2	1
	cmd_id	data_length	status
	Header		Data

- CMD_ID: Command ID, please refer to Command ID section.
- Data_Length: Size of data.
- Status: Return success (0) or failed reason code (1).

Example for frame format:


Byte	2	2	1
	cmd_id	data_length	status
Value	0x1004	0x0001	00

3.10. READ DEVICE INFORMATION REQUEST

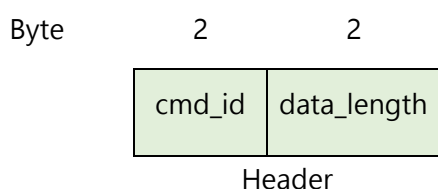


- CMD_ID: Command ID, please refer to Command ID section.
- Data_Length: Size of data.

Example for frame format:

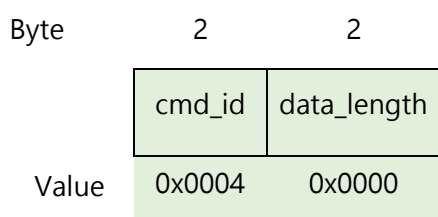

3.11. READ DEVICE INFORMATION RESPONSE

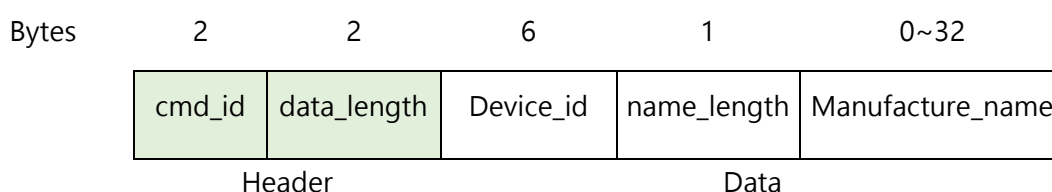

- CMD_ID: Command ID, please refer to Command ID section.
- Data_Length: Size of data.
- Device_Id: The device MAC address.
- Name_Length: The length of the manufacture name.
- Manufacture Name: The device manufacture name.

Example for frame format:

Bytes	2	2	6	1	7
	cmd_id	data_length	Device_id	name_length	Manufacture_name
Value	0x1005	0x000E	AA BB CC DD EE FF	07	Example

3.12. WRITE DEVICE INFORMATION REQUEST

Bytes	2	2	6	1	0~32
	cmd_id	data_length	Device_id	name_length	Manufacture_name
	Header		Data		

- CMD_ID: Command ID, please refer to Command ID section.
- Data_Length: Size of data.
- Device_Id: The device MAC address.
- Name_Length: The length of the manufacture name.
- Manufacture_Name: The device manufacture name.

Example for frame format:

Bytes	2	2	6	1	8
	cmd_id	data_length	Device_id	name_length	Manufacture_name
Value	0x0005	0x000F	AA BB CC DD EE FF	08	Example2

3.13. WRITE DEVICE INFORMATION RESPONSE

Bytes	2	2	1
	cmd_id	data_length	status
	Header		Data

- CMD_ID: Command ID, please refer to Command ID section.
- Data_Length: Size of data.
- Status: Return success (0) or failed reason code (1).

Example for frame format:

Bytes	2	2	1
	cmd_id	data_length	status
Value	0x1006	0x0001	00

3.14. WIFI STATUS REQUEST


Bytes	2	2
	cmd_id	data_length
	Header	

- CMD_ID : command ID, please refer to section of Command ID.
- Data_Length : size of data

Example for frame format:


Bytes	2	2
	cmd_id	data_length
Value	0x0006	0x0000

3.15. WIFI STATUS RESPONSE

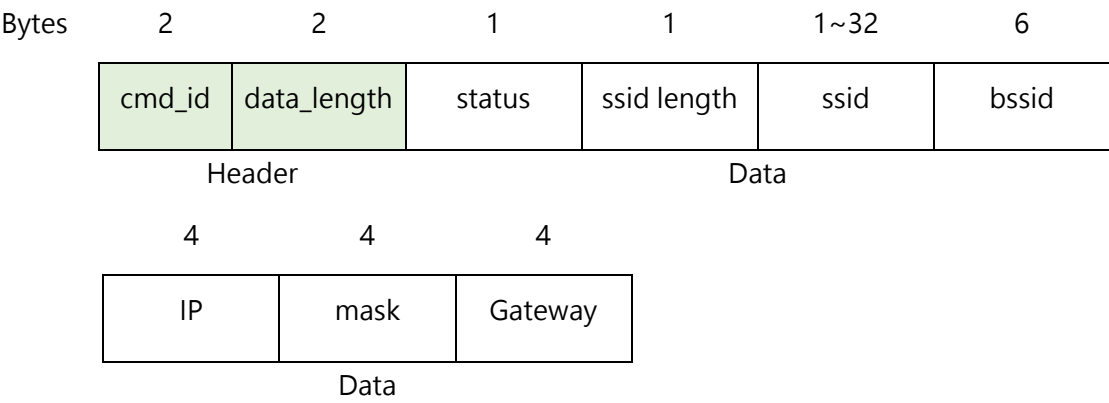


- CMD_ID : command ID, please refer to section of Command ID.
- Data_Length : size of data
- Status : return success (0) or failed reason code (1)
- Ssid_length: Length of the SSID.
- Ssid: Stores the predefined SSID.
- Bssid: AP's MAC address.
- IP: The IP address of device.
- Mask: The mask IP address of device.
- Gateway: The gateway IP address which get to device.

Example for frame format:

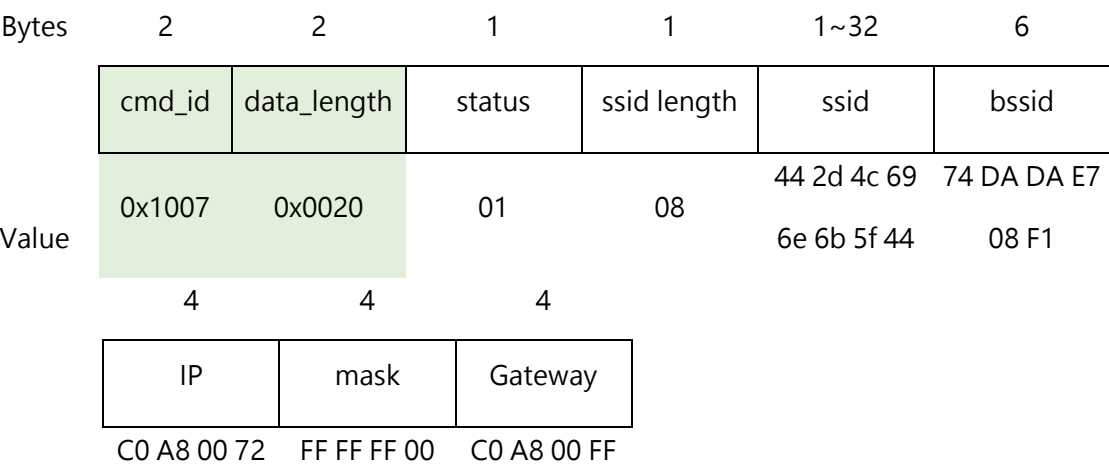


3.16. RESET REQUEST

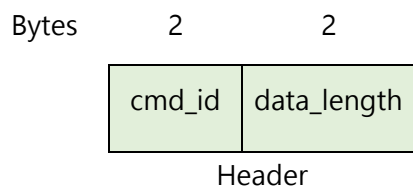


- CMD_ID : command ID, please refer to section of Command ID.
- Data_Length : size of data

Example for frame format:

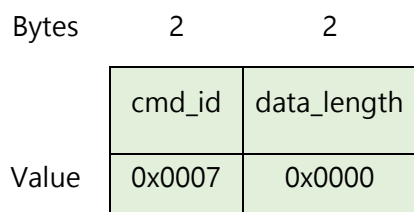


3.17. RESET RESPONSE

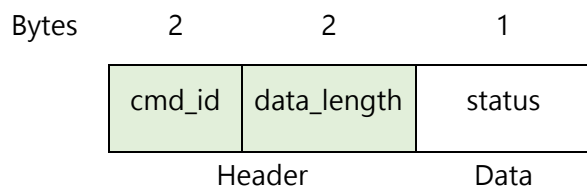


- CMD_ID : command ID, please refer to section of Command ID.
- Data_Length : size of data
- Status : return success (0) or failed reason code (1)

Example for frame format:

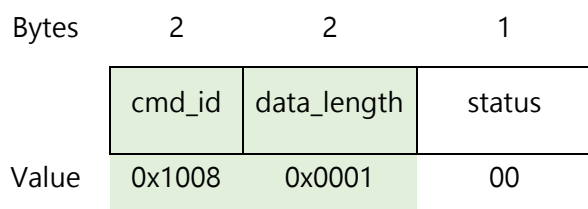


4. Message Chart


4.1. Wi-Fi Scan

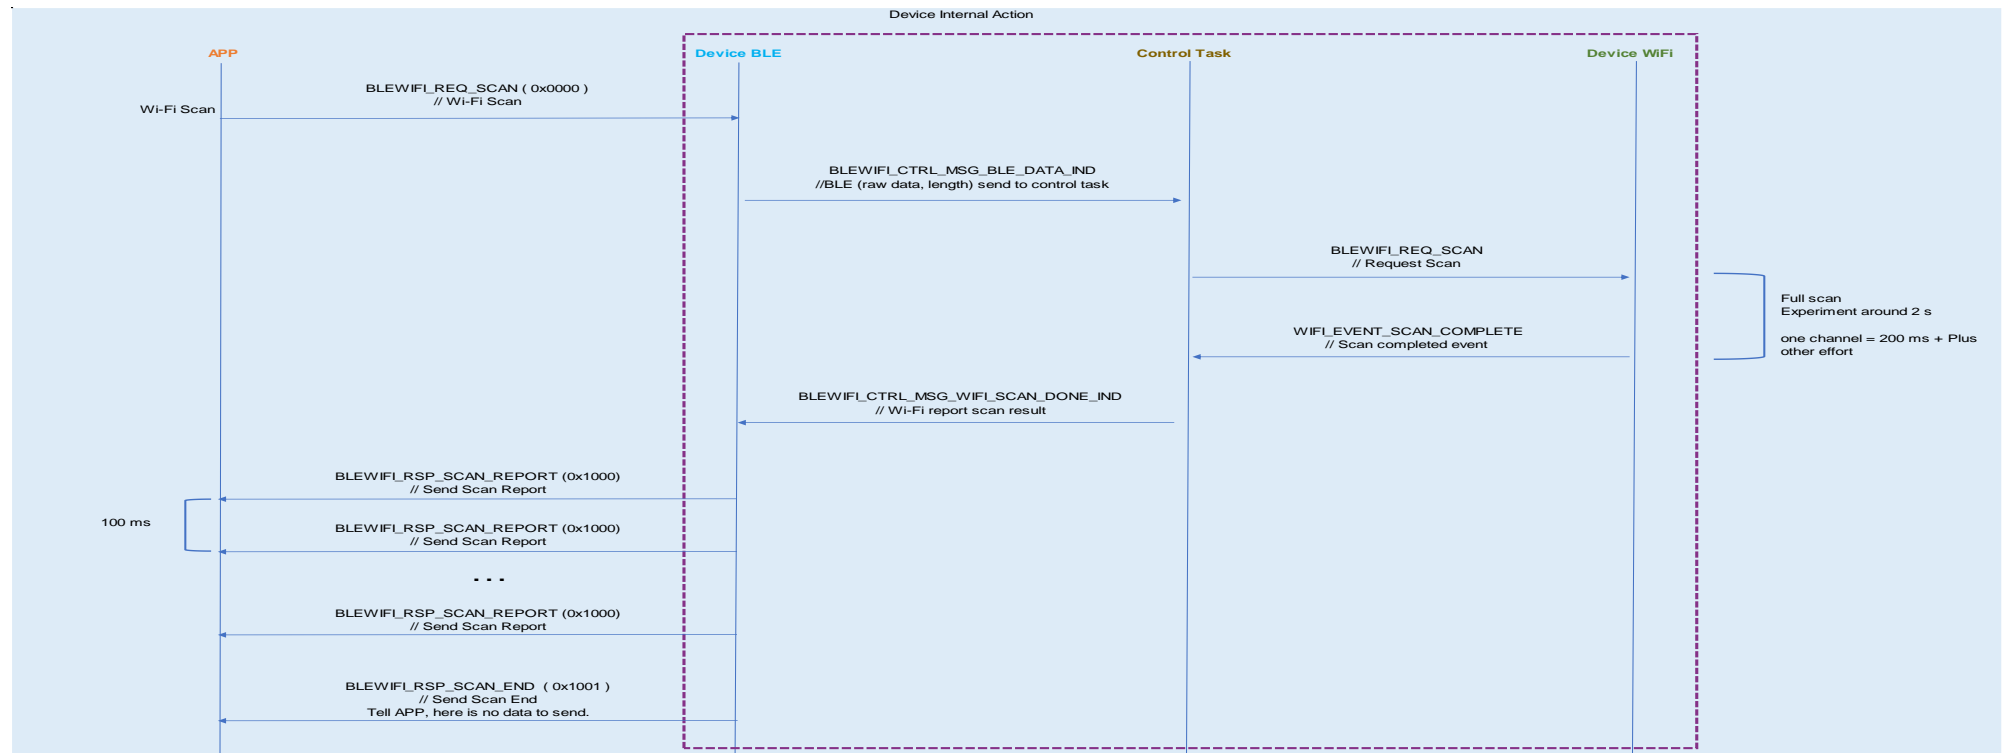


4.2. Wi-Fi Scan (TimeOut)

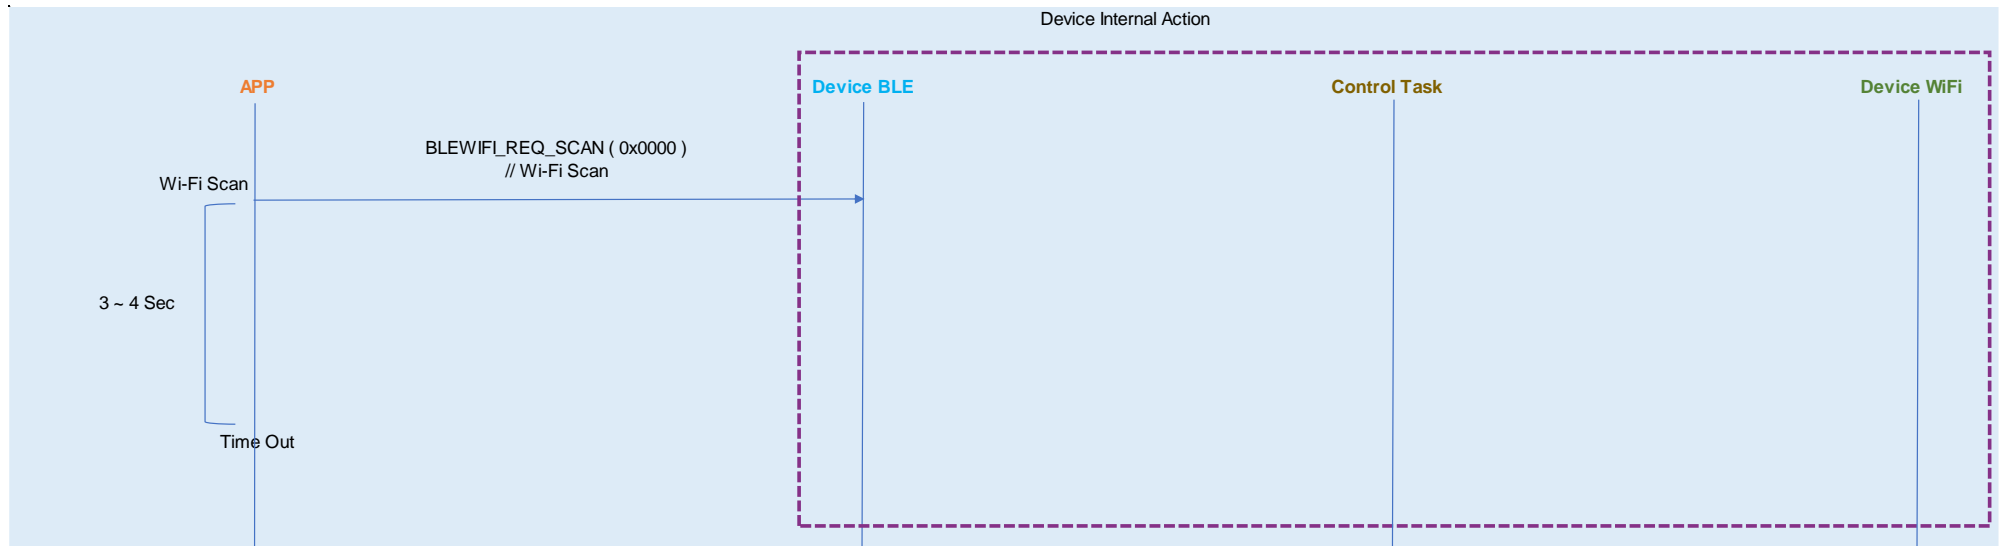


4.3. Wi-Fi Scan (REPORT TimeOut)

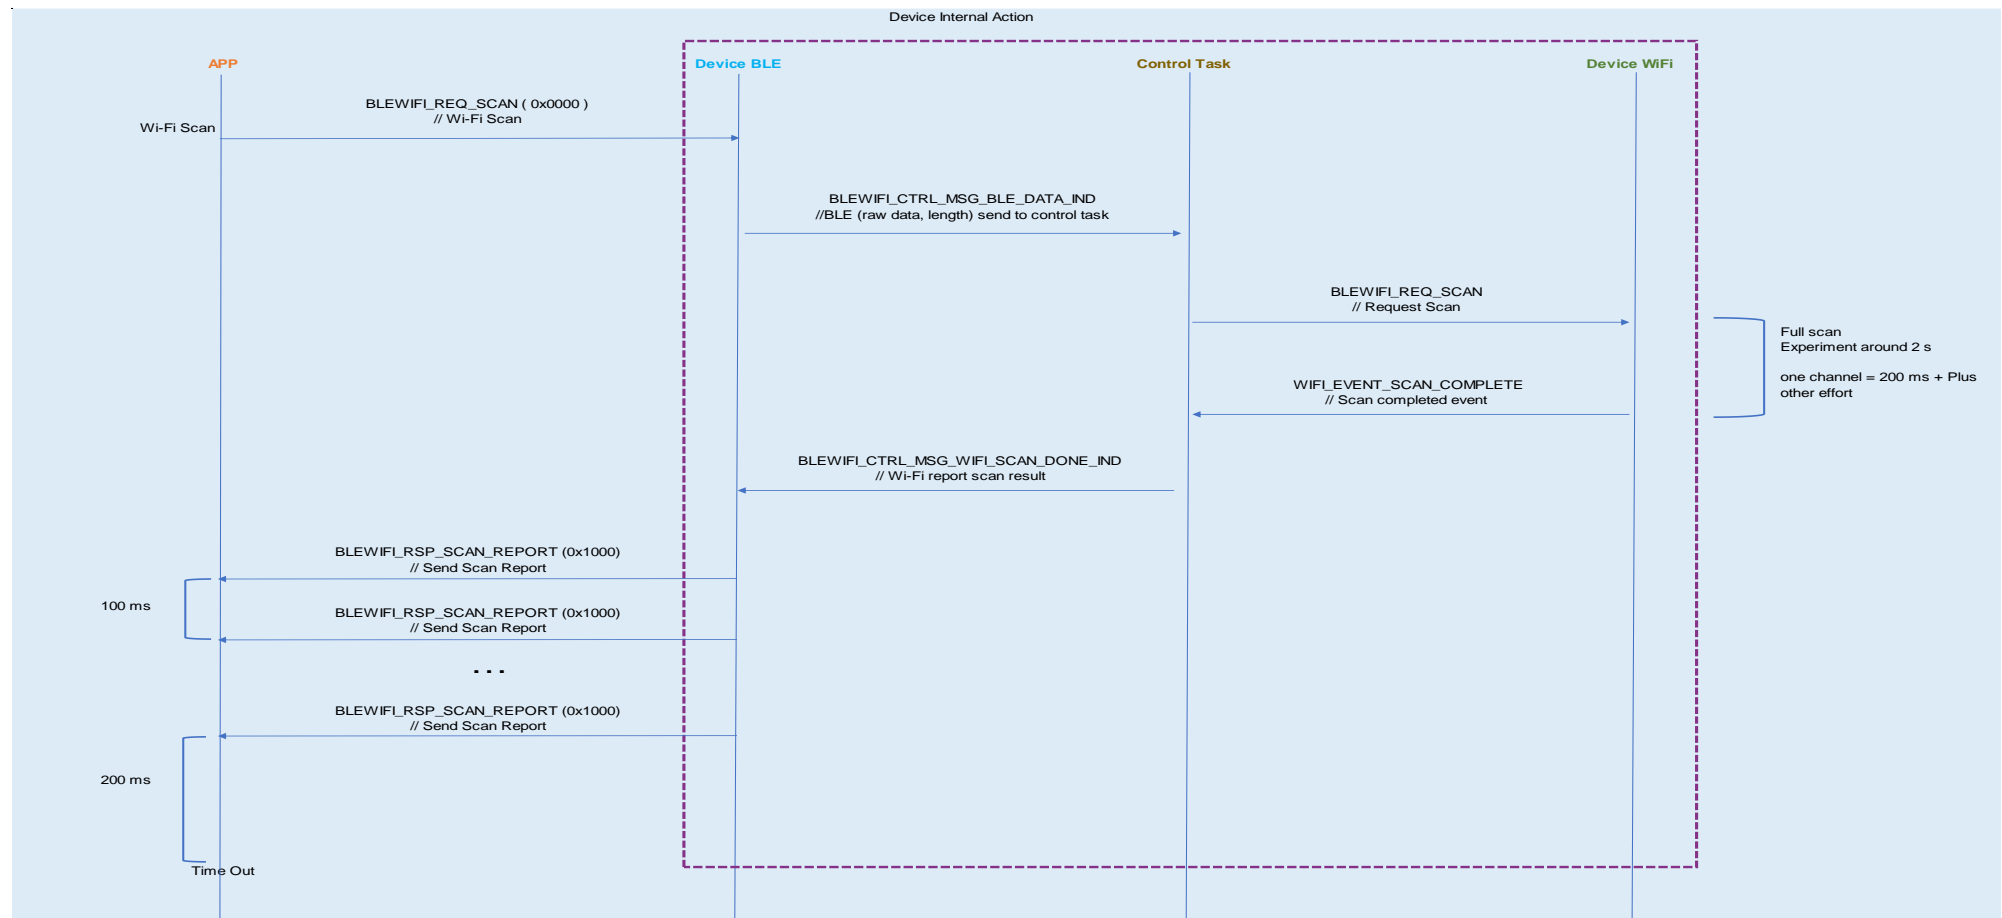


4.4. Wi-Fi Status

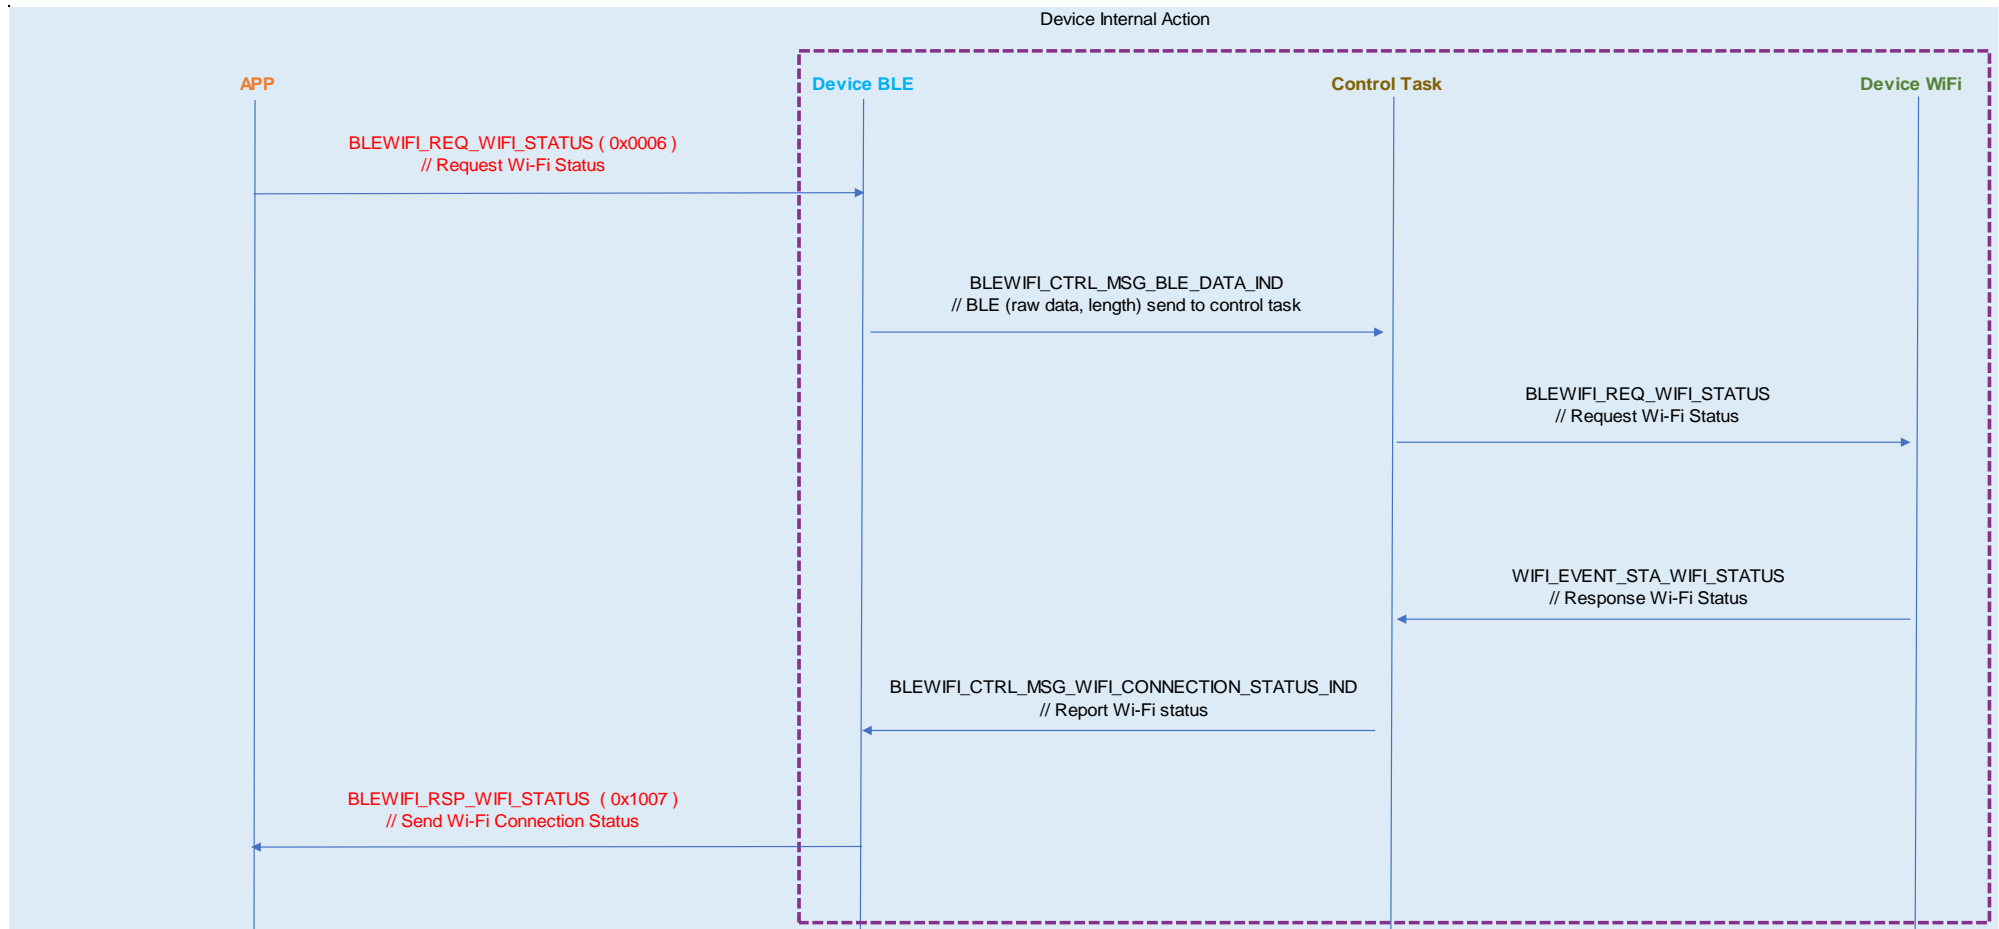


4.5. Wi-Fi Status (TimeOut)

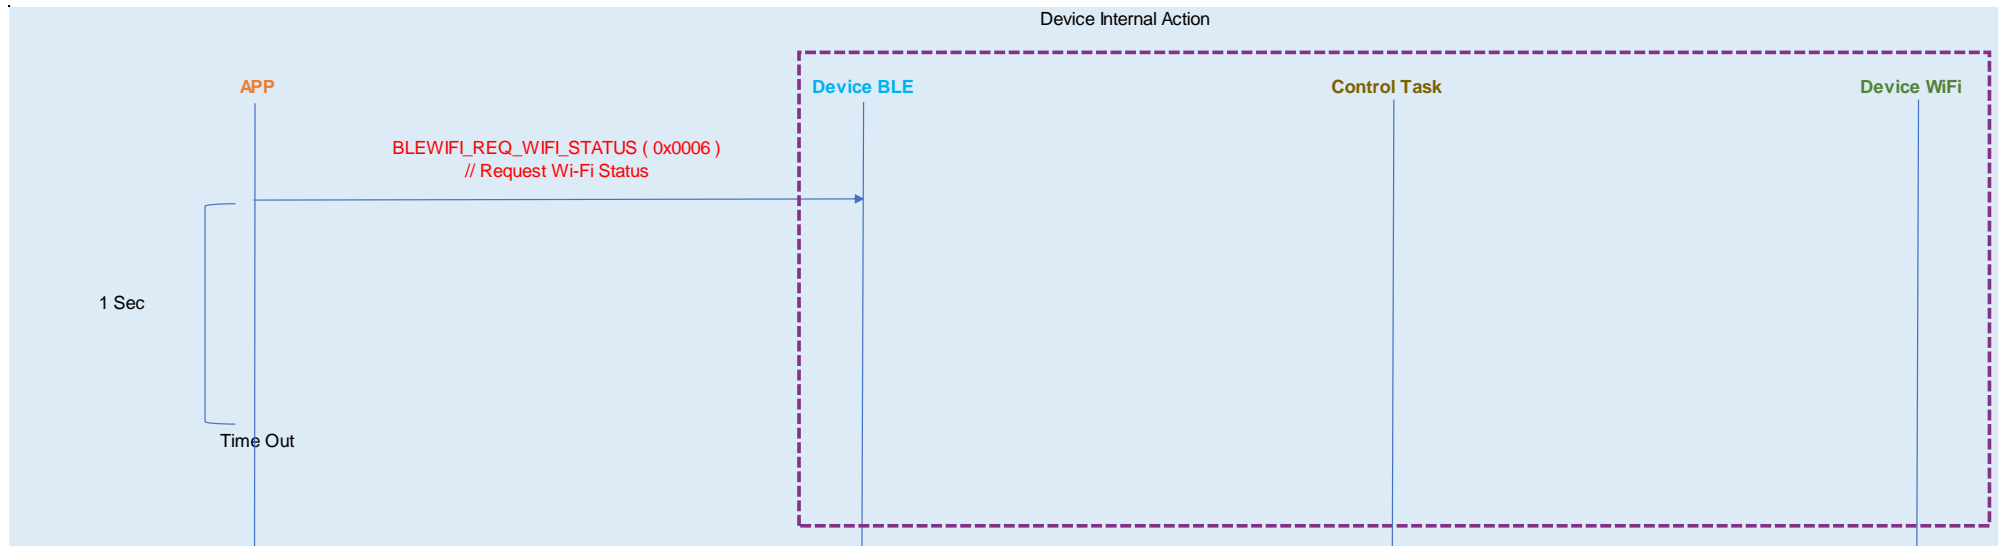


4.6. Wi-Fi Connect

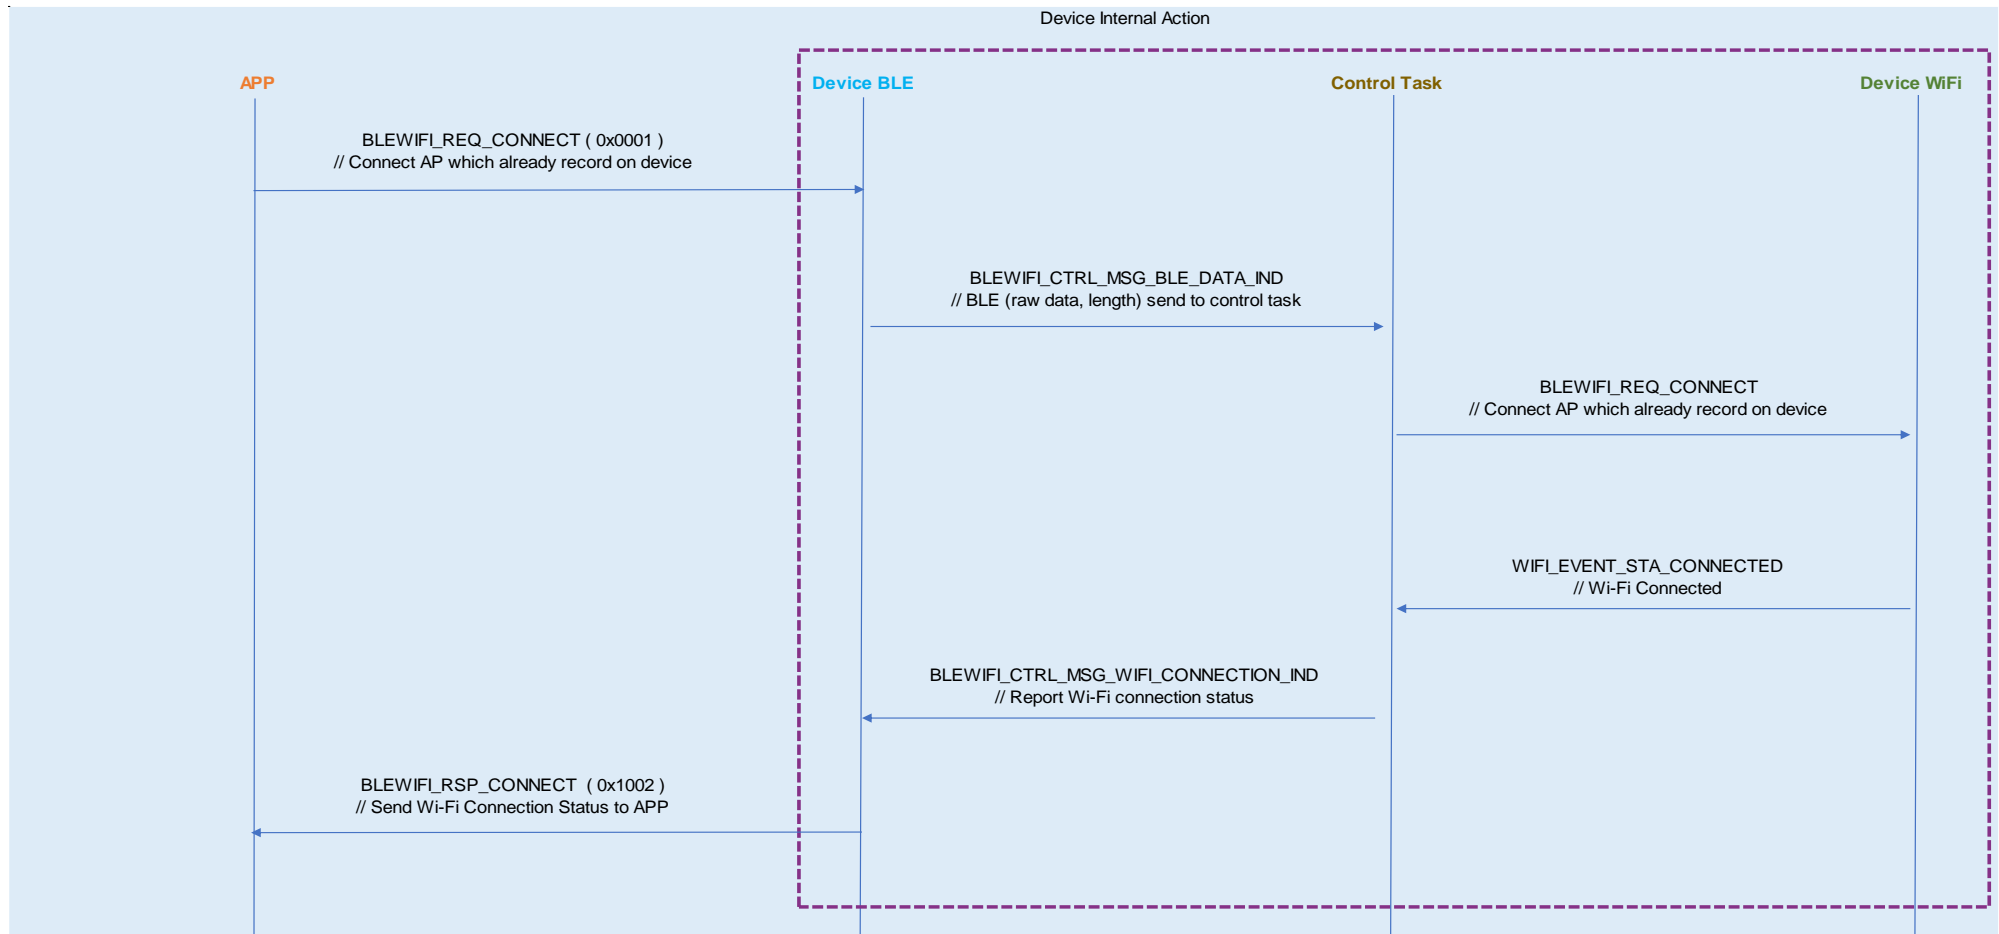


4.7. Wi-Fi Connect (Failure)

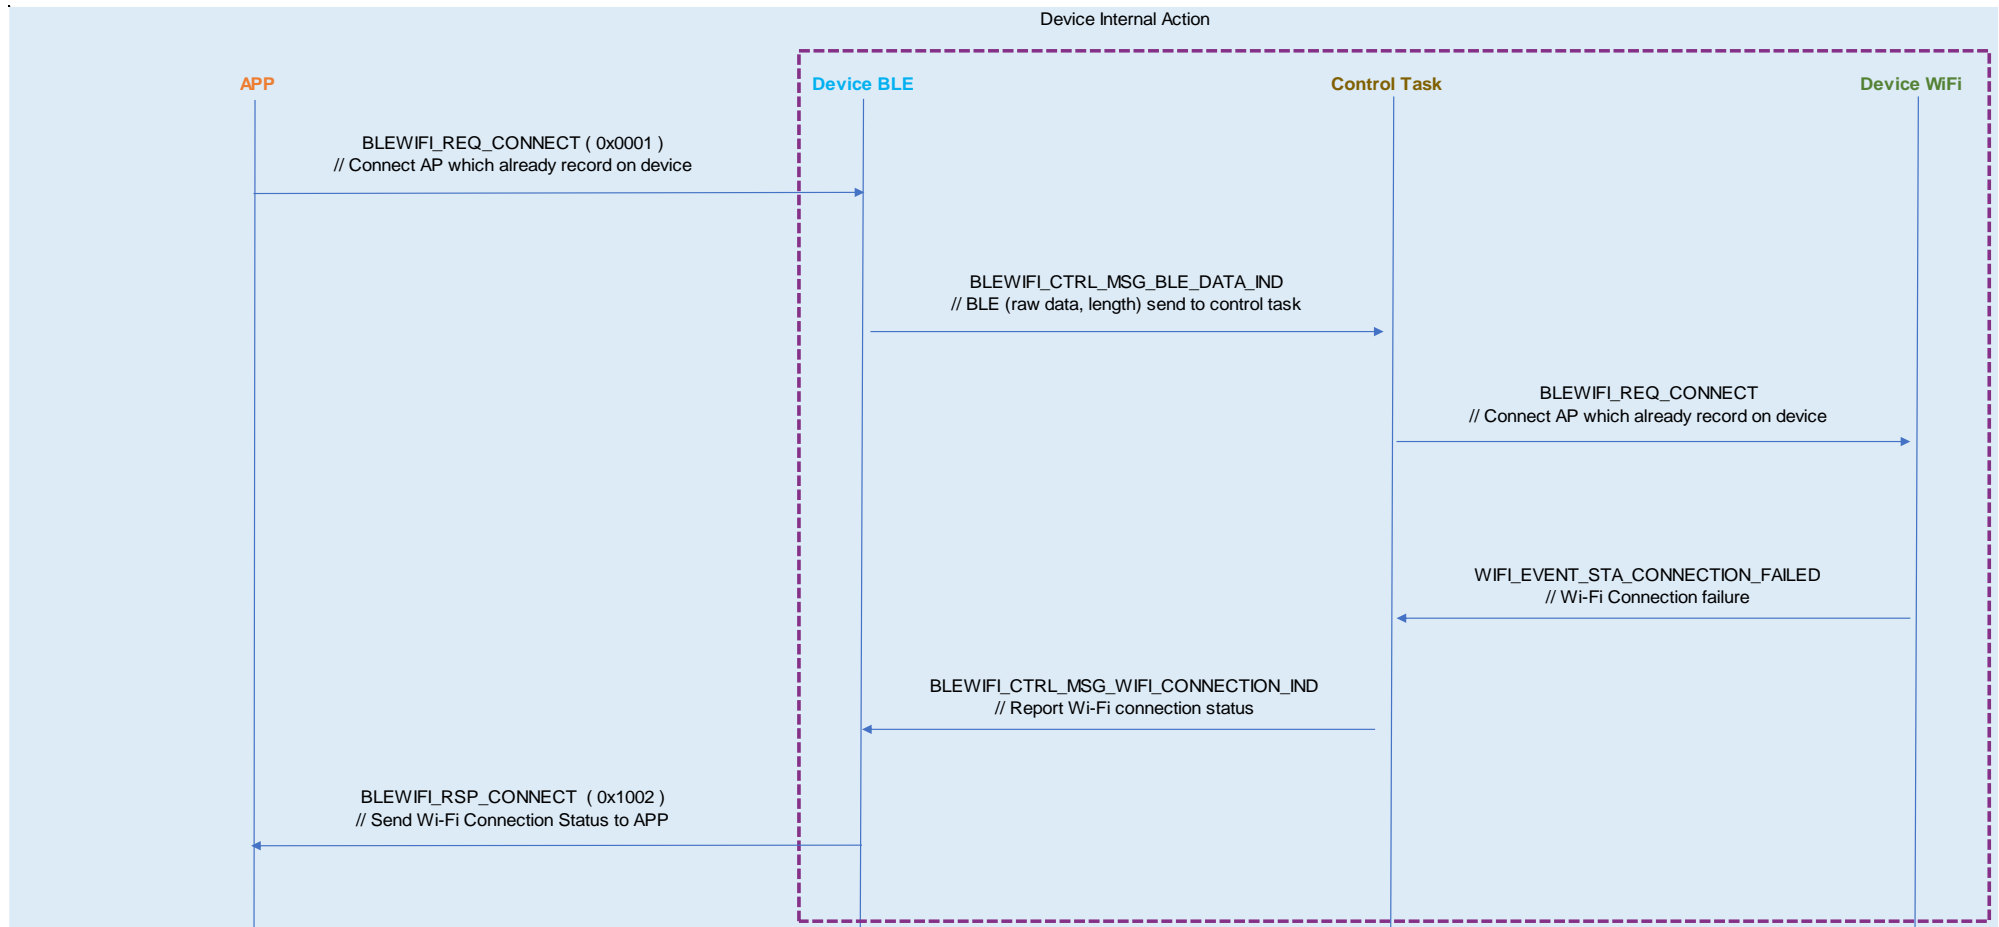


4.8. Wi-Fi Connect (TimeOut)

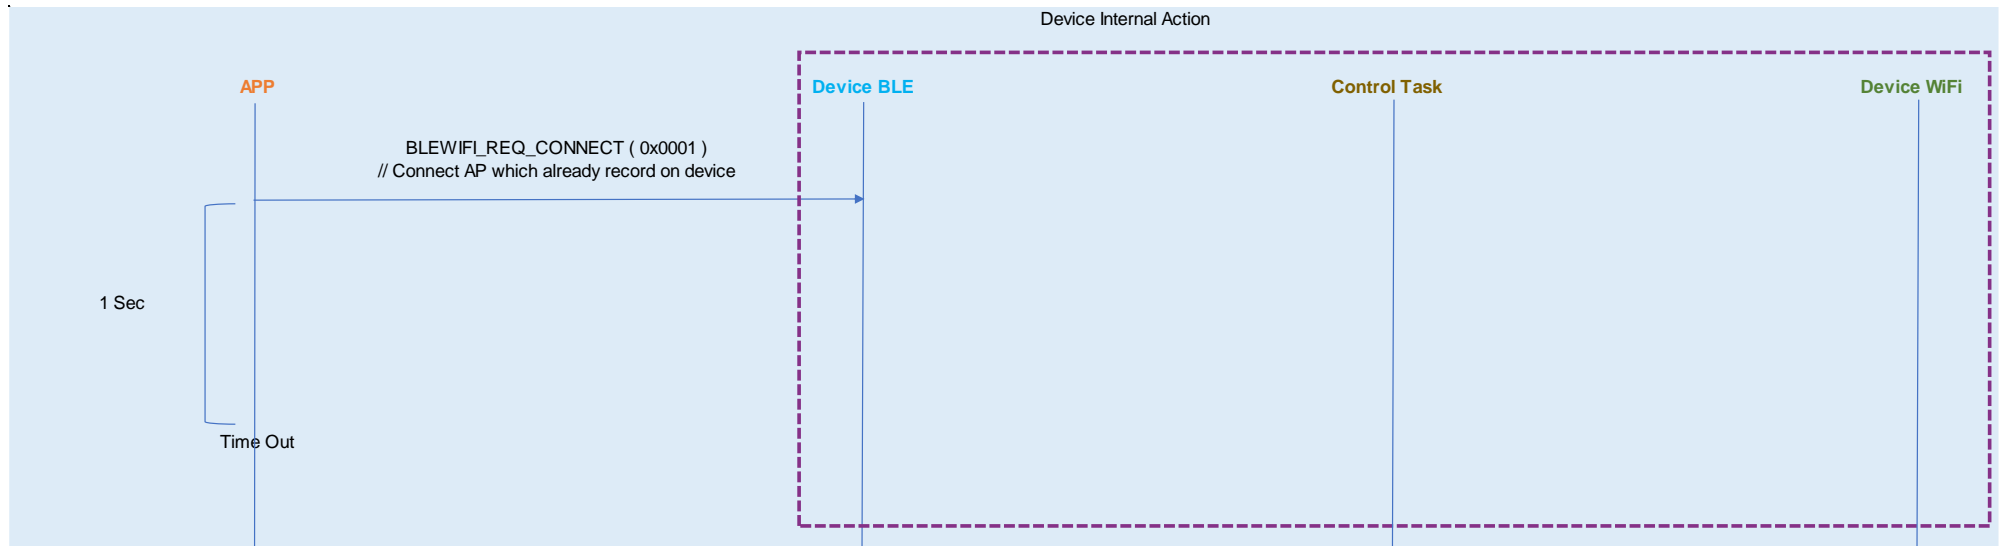


4.9. Wi-Fi Disconnect

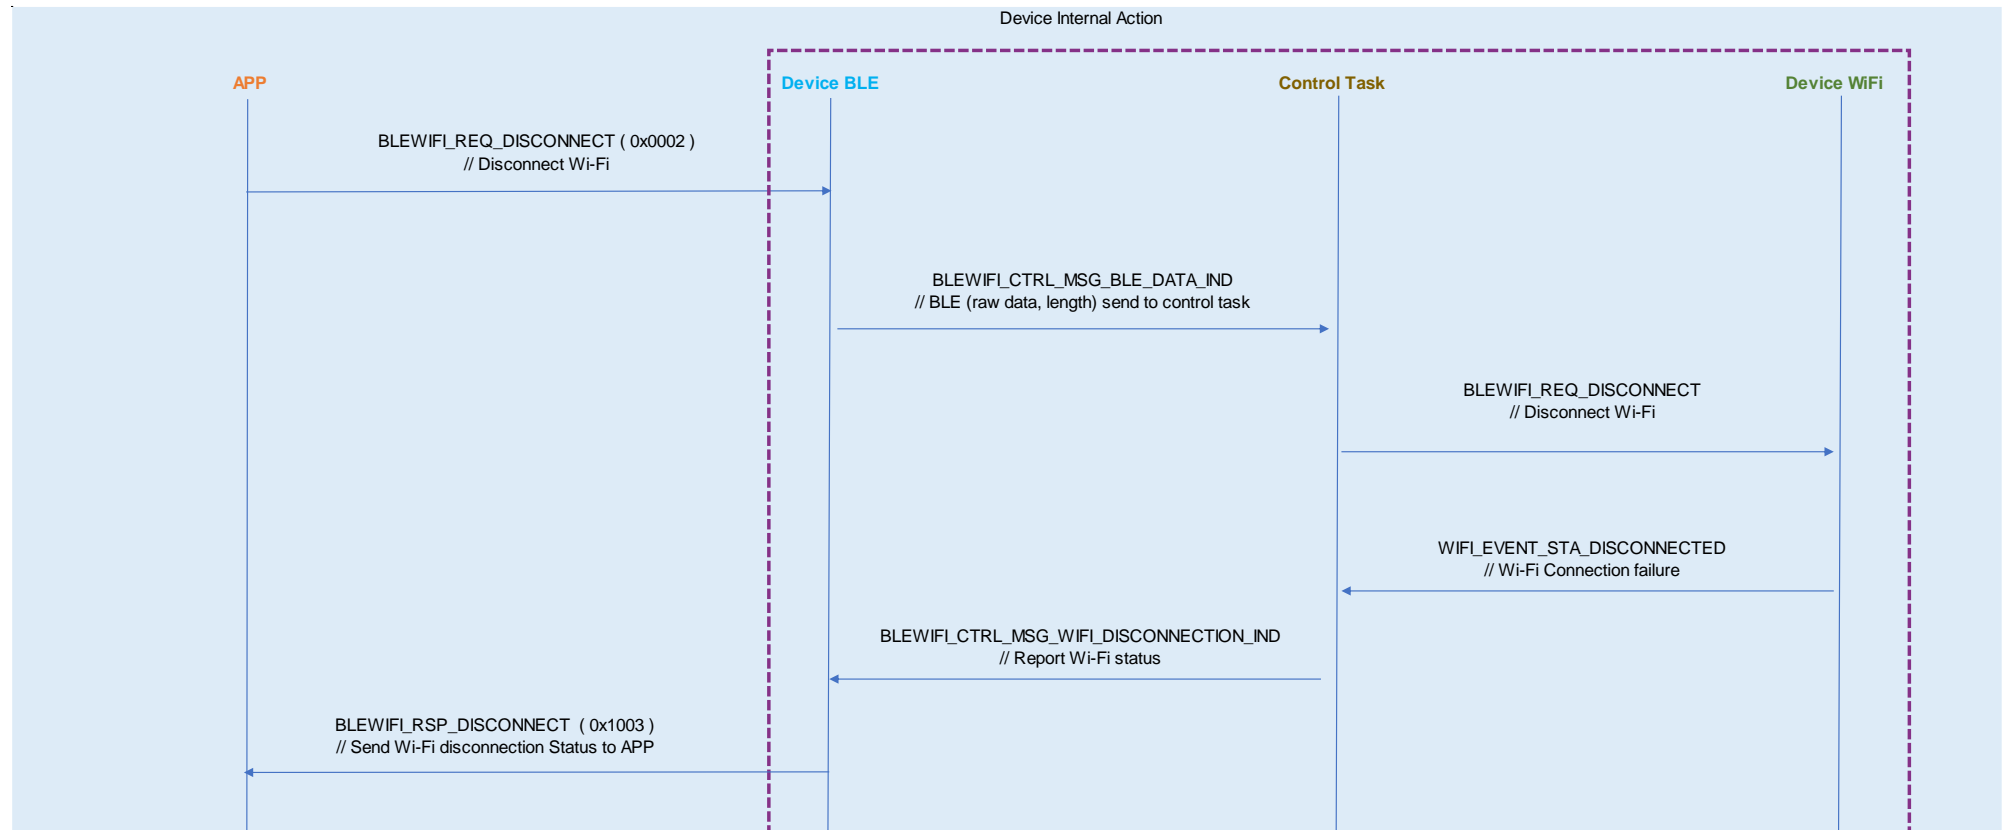


4.10. Wi-Fi Disconnect (TimeOut)

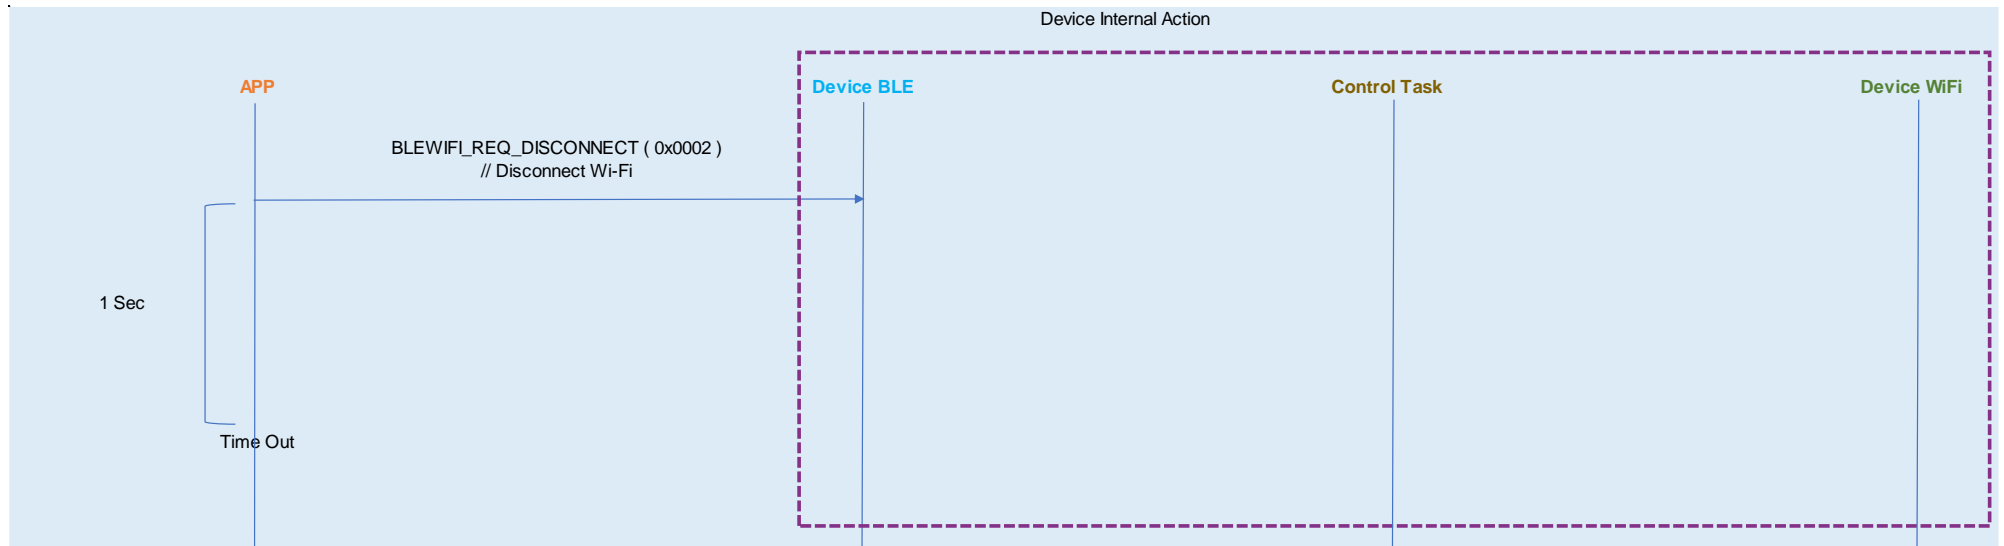


4.11. Wi-Fi Reset

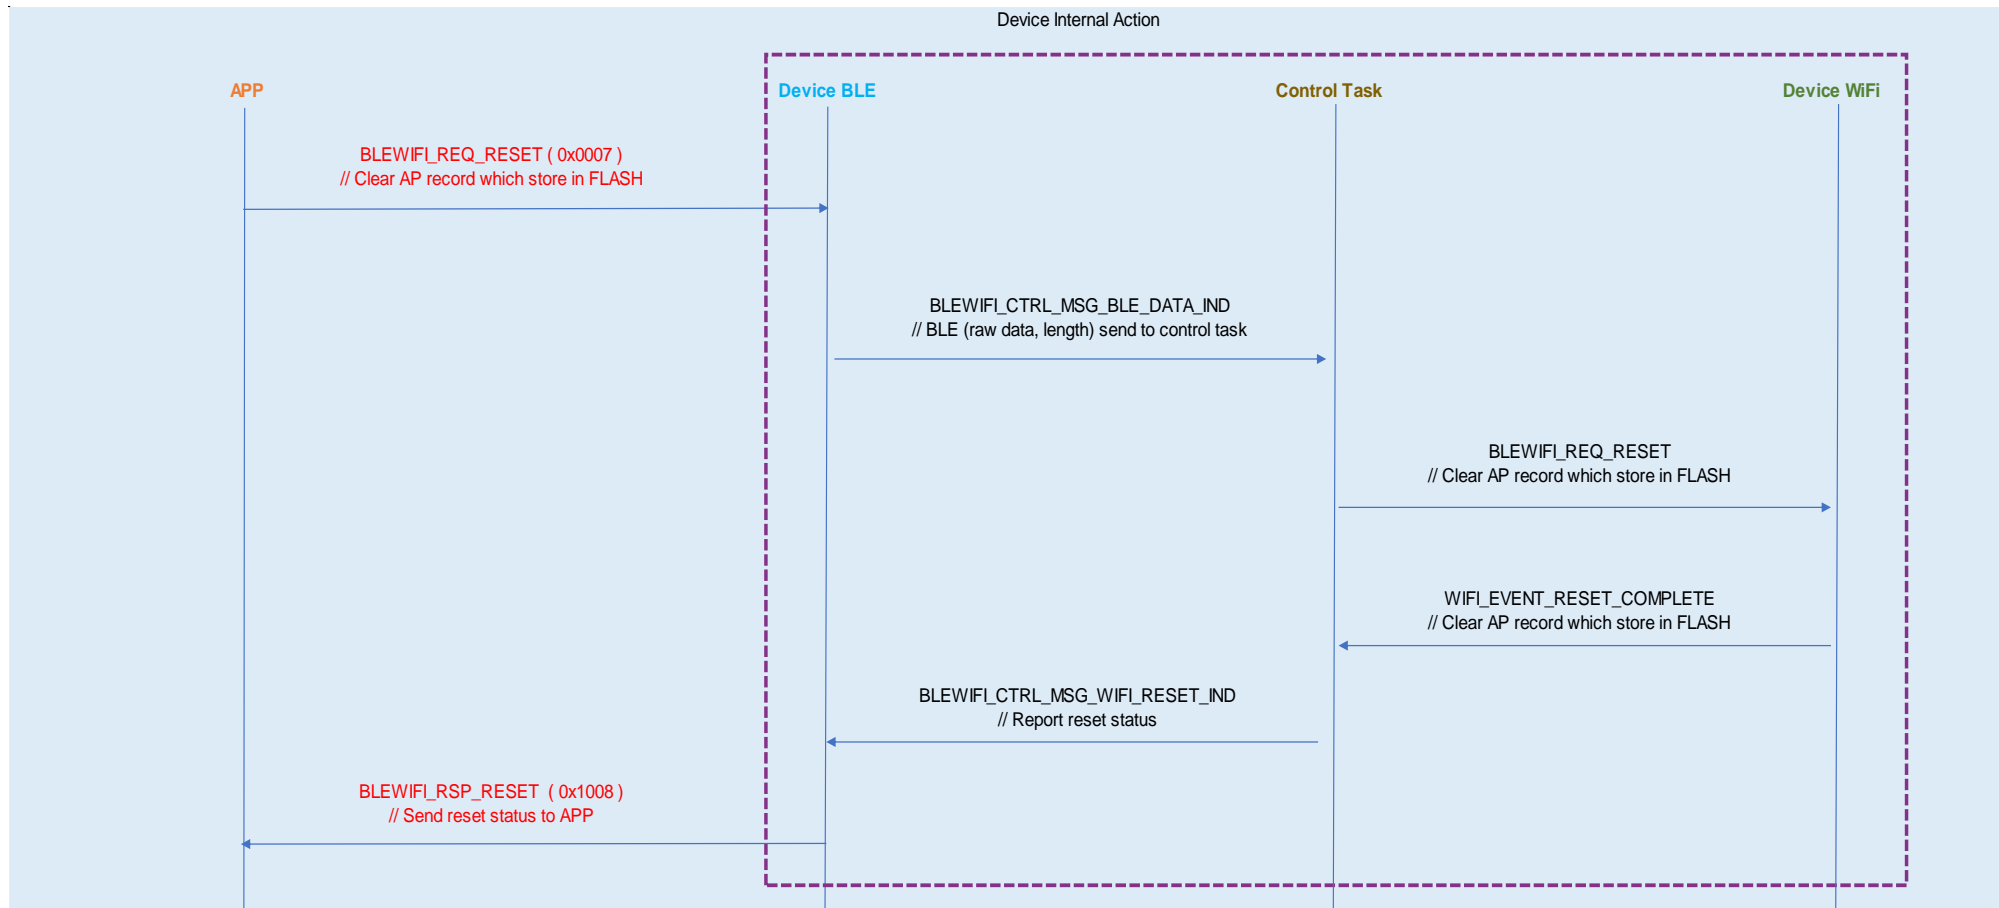

4.12. Wi-Fi Reset (Failure)

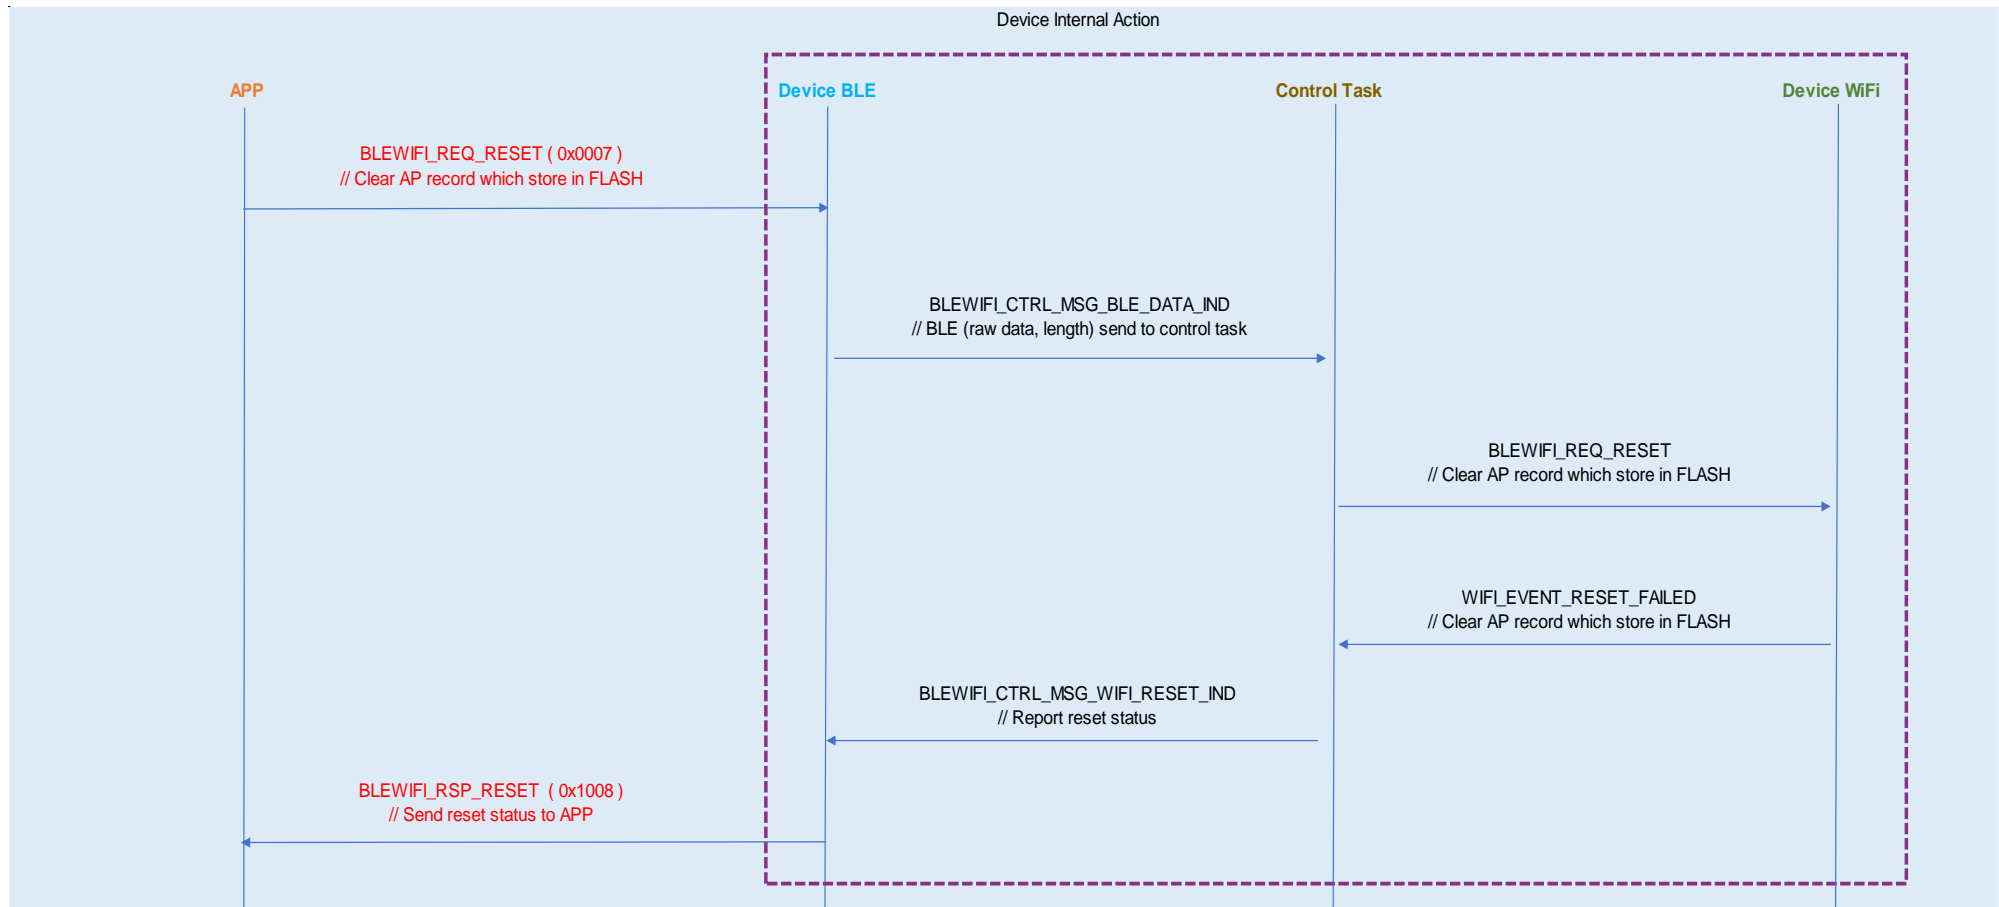

4.13. Wi-Fi Reset (TimeOut)

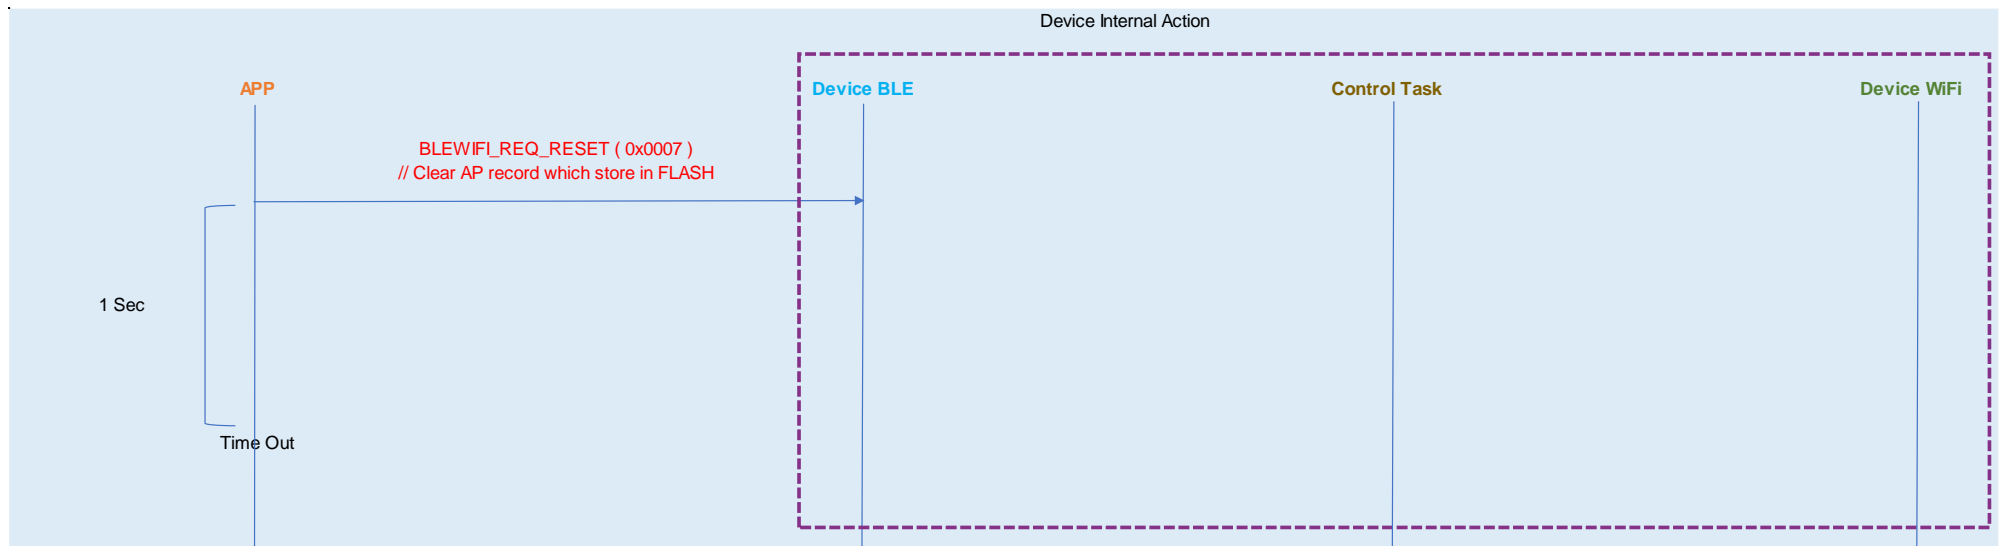

CONTACT

sales@Opulinks.com