

OS-Duplex Decoder Manual

Dual DCC decoder for solenoids, relays and turnout motors



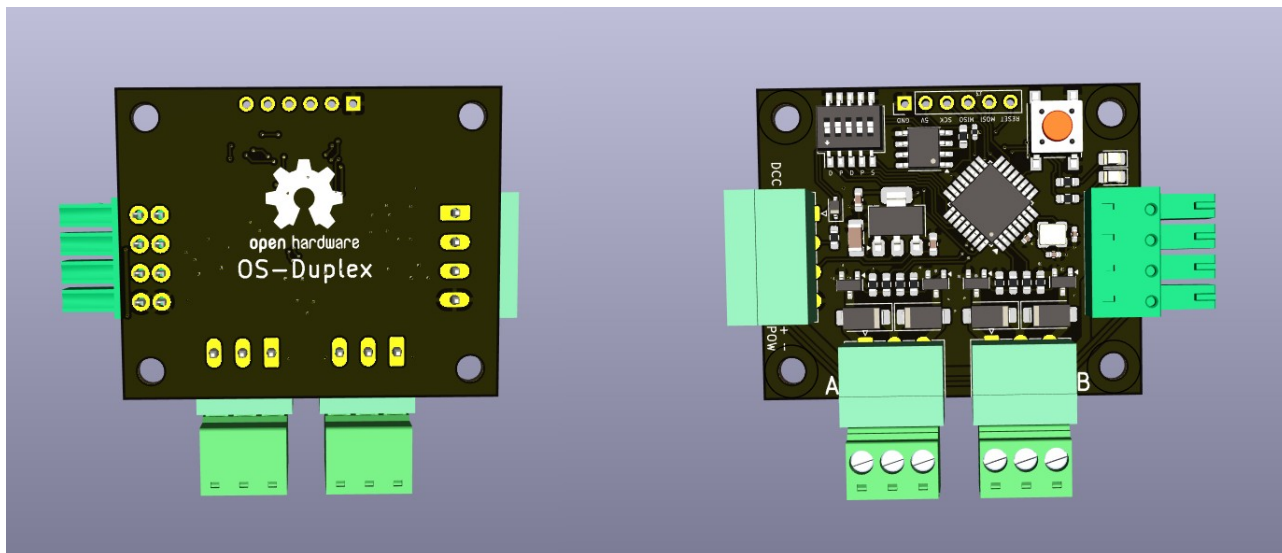


Introduction

The **OS-Duplex** is a dual DCC accessory decoder designed for all types of turnout drives — from traditional solenoids to motor drives and relay modules for frog polarization.

Each side (**A** and **B**) can operate independently or be linked together.

Every side can act as either:

- **A** / **B** **two independent single outputs** (each with its own DCC address), or
-  **one combined double output** for a twin-coil or motor drive turnout.

Optional relay sockets allow you to add point frog polarization, or use the same outputs to drive extra coils or motors.



Power Supply

The OS-Duplex requires an **external DC power supply** between **12 V and 18 V DC**.

The polarity is absolute.

Always observe correct “+” and “–” connections.

Use lower voltages (12 V) for point motor drives,
and higher voltages (up to 18 V) for coil drives,

✚ Connections

- 🍷 **DCC IN** – Input for the DCC command signal
- ⚡ **POW + / POW -** – Power inputs for each output section
- ⚙️ **OUT A / OUT B** – Drive outputs for coils, motors, or relays
- 🍷 **Pass-Through Connectors** - You can plug in more Duplex decoders in the following sockets.

You can plug in up to **four relay modules**

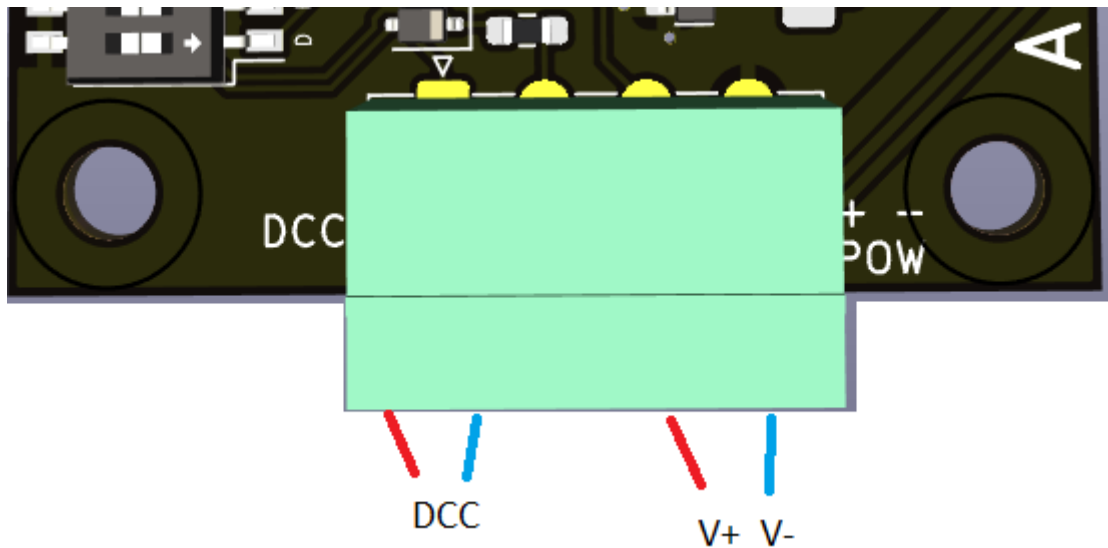


Figure 1: Main power terminals

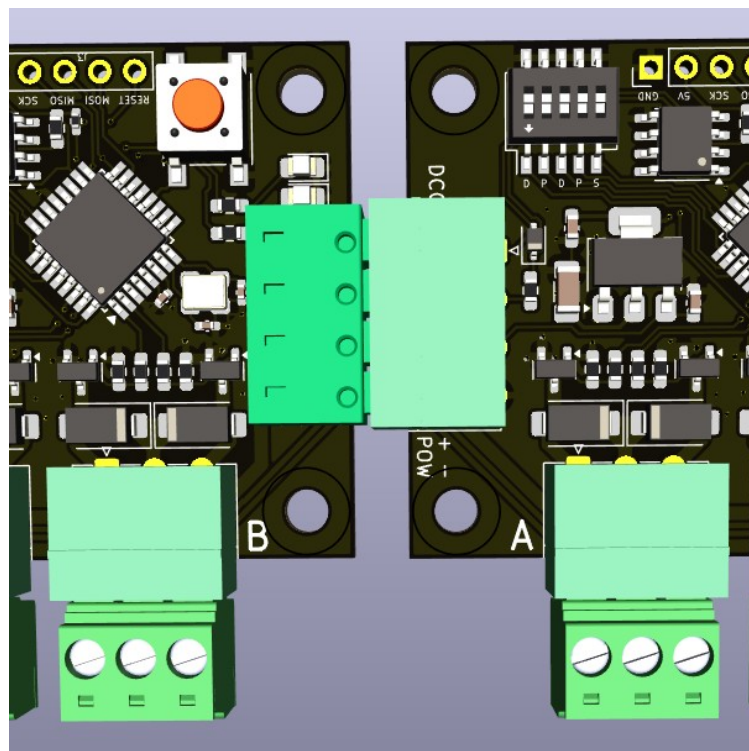


Figure 2: 2 Duplex decoders daisy chained

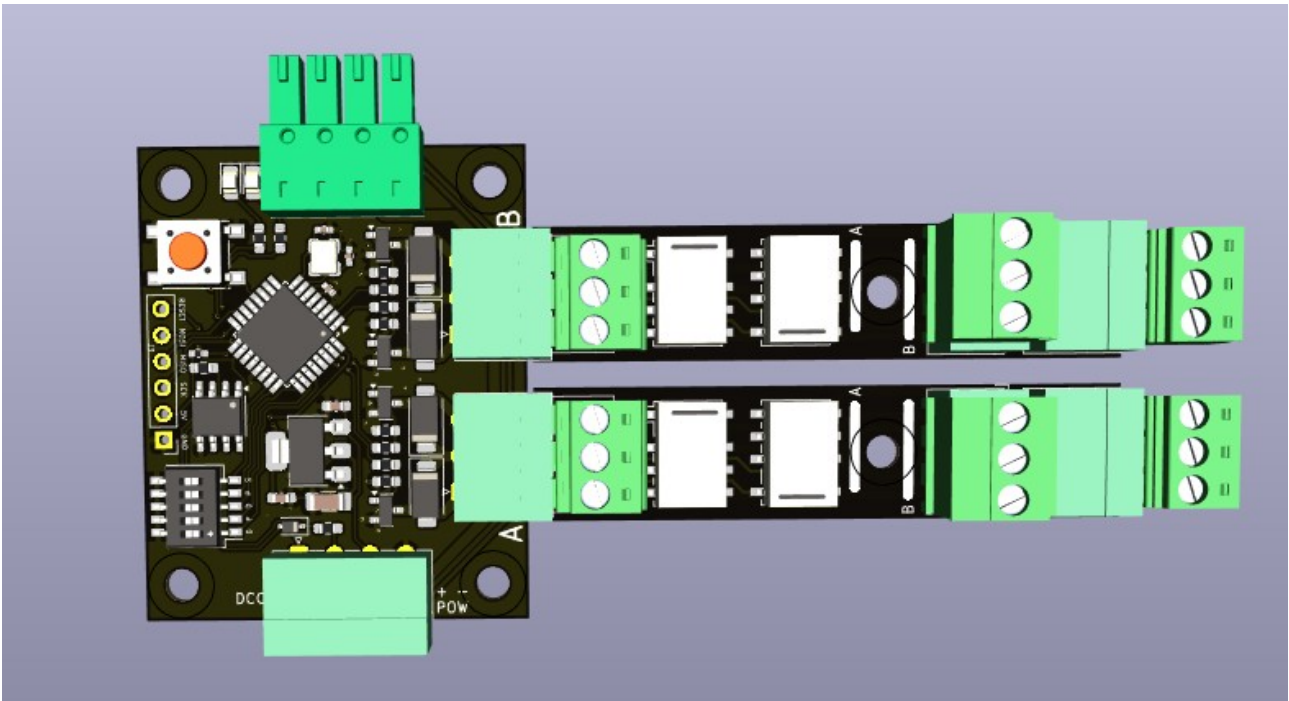


Figure 3: 2 double relais modules plugged in


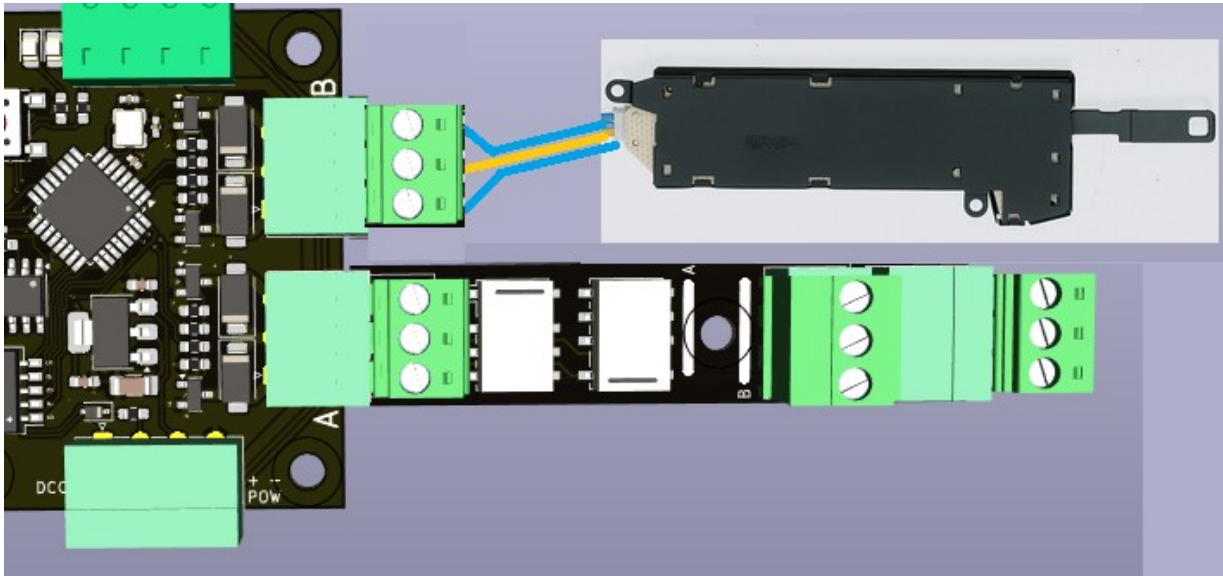


Figure 4: Example 1 Double Coil Drive and Double relay modulee






DIP-Switch Configuration

Five DIP switches define all operating modes:

- 1 **Output A – Mode Select** Single / Double output
- 2 **Output A – Pulse Mode** Pulse (typical coil) or Continuous (motor)
- 3 **Output B – Mode Select** Single / Double output
- 4 **Output B – Pulse Mode** Pulse or Continuous
- 5 **Link Switch** Links Output B to Output A (slave mode)

Only active if A is set to Double mode.

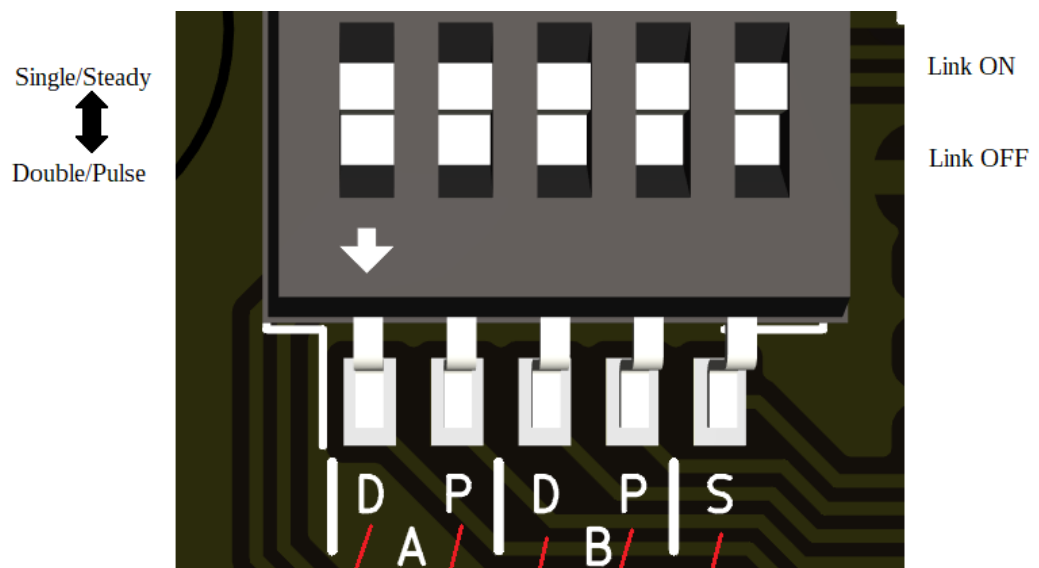

Output A – Mode Select Single / Double output

Output A – Pulse Mode Pulse (typical coil) or Continuous (motor)

Output B – Mode Select Single / Double output

Output B – Pulse Mode Pulse or Continuous

Link Switch Links Output B to Output A (slave mode)

⚙️ Operating Logic

A Output A (Primary)

- Works as **single** or **double** output.
- In double mode, one DCC address controls both outputs, whether they are pulsed or steady.
- In single mode, each output uses its own address.

B Output B (Secondary)

- May run independently like **A** or as **slave** to **A**.
- In linked operation, B can automatically handle **frog polarization** it switches the relays and point motor in a specific sequence to prevent shorts from occurring.
 1. De-energize frog
 2. Switch turnout
 3. Re-energize frog with opposite polarity.

This timing supports **Electrofrog** and **Uni-frog** layouts.

🔗 Slave Mode Extensions.


Signal mode

When the link is enabled between the outputs, Output B changes behavior depending on A's mode:


- If A is **Single + Pulse**, the decoder accepts **DCC Extended commands** for **4-lamp signals**. Both outputs act together as a miniature signal controller.

The Duplex has no concept of settings, aspects or pre-sets when it comes to signals. Instead we use the DCC-extended commands with which we can transmit a value of 0 - 255 to the decoder.


The value works in binary, 255 has a binary value of 1111 1111. The first ones tell which LEDs need to flash, the 2nd set tells if lights need to be on or off. When a light is set to flash with the first nibble, the corresponding bit in the 2nd nibble needs to be a '0'. For example, when only the first 2 lights have to flash, the 3rd light is off and the 4th light is on, the value would be 1100 0001 or 193 decimal.

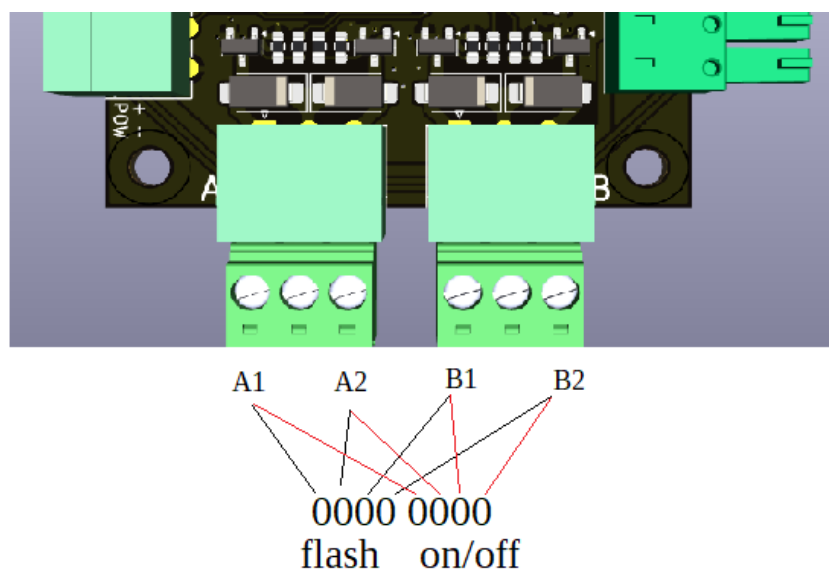

The computer program that you use for your model railway layout need to link the signal's aspects and DCC EXT values. You need to write down the binary value to match with your desired aspect and then calculate the decimal value. You can make use of window's native calculator tool. Put the calculator in Programmer mode first.

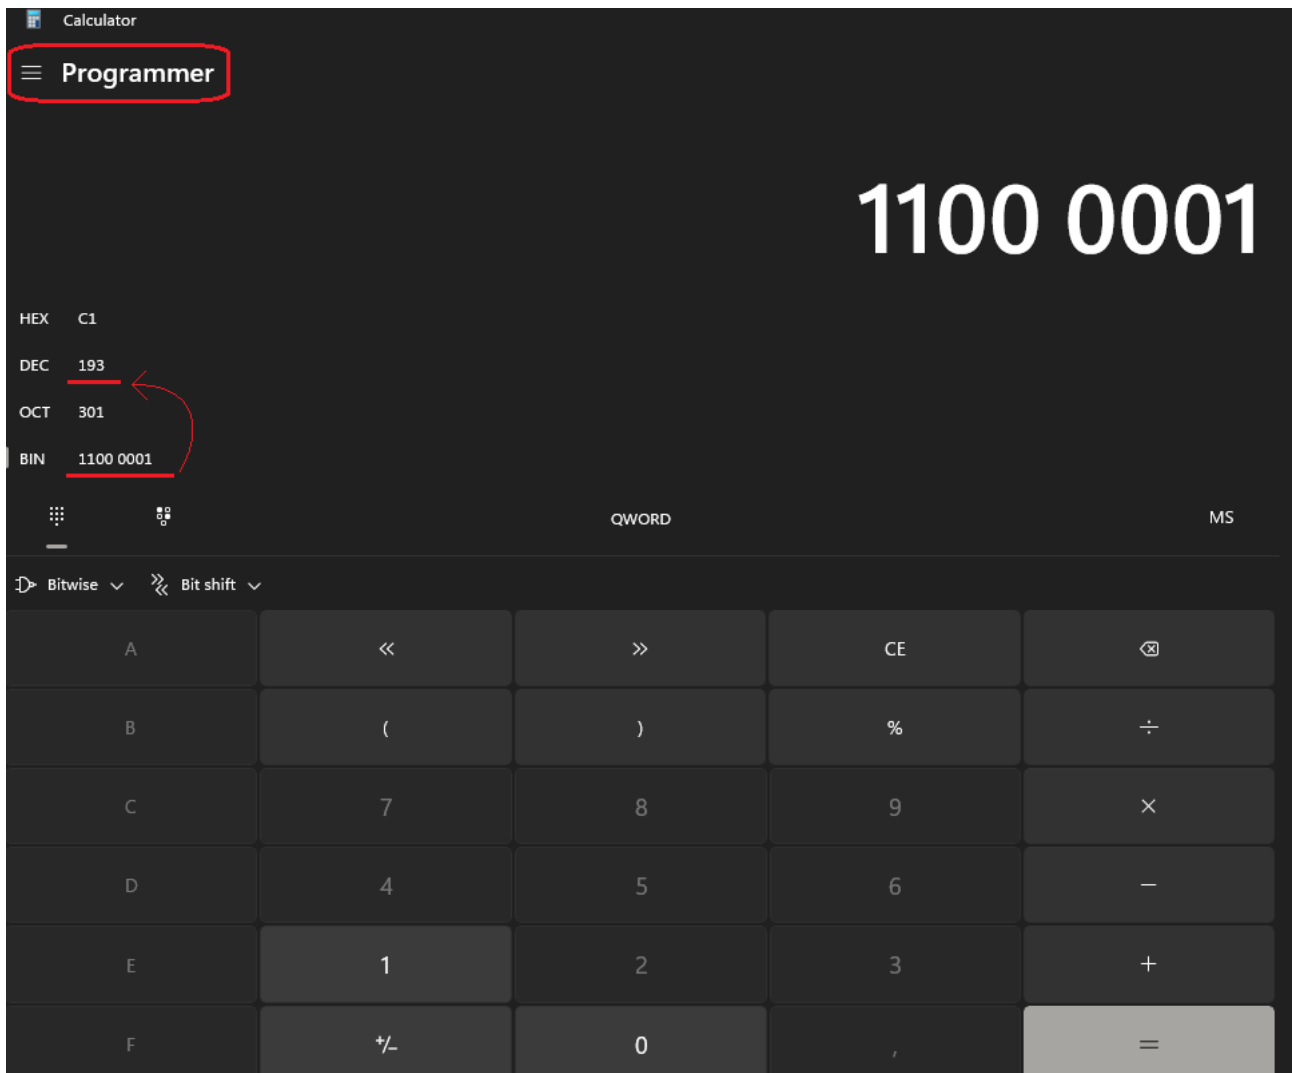

As example we take a Dutch main Line signal. We connect green to A1, yellow to A2, red to B1 and the number box to B2. Purple is the common + lead

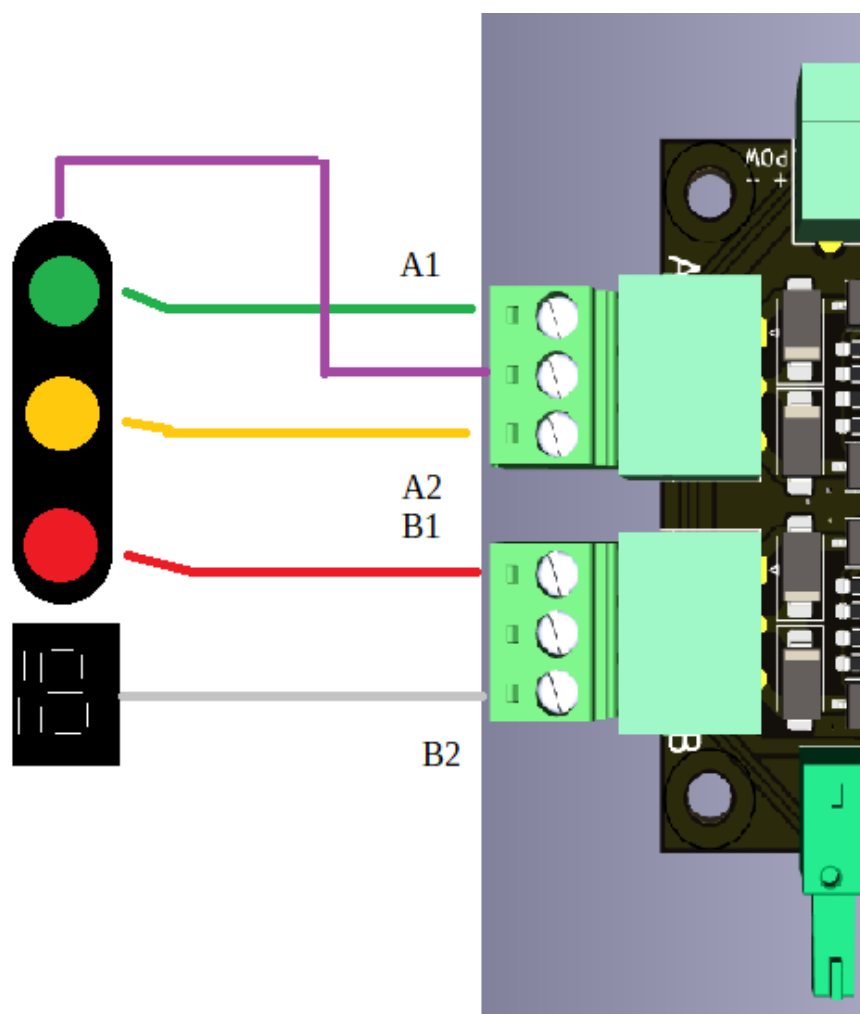

This signal uses these aspects.

Aspect	Lamps (G/Y/R/W)	High nibble (flash bits)	Low nibble (on/off bits)	Decimal
Stop	R	0000	0100	4
Proceed	G	0000	0001	1
Caution / Expect stop	Y	0000	0010	2
Drive on sight (Y flashing)	Y (flash)	0010	0000	32
Diverging / speed route (G flashing)	G (flash)	0001	0000	16
Speed indicated at this signal (G flashing + W ON)	G (flash) + W ON	0001	1000	24
Approach with speed at next signal (Y + W ON)	Y ON + W ON	0000	1010	10

In your computer program such as Itrain you need to enter the same decimal value behind the corresponding aspects.



Technical Notes

- Compatible with **Roco**, **NMRA**, and **extended DCC** addressing.
 - Each output can safely source standard turnout coils or small motors.
 - EEPROM stores last configuration and addresses.
 - Firmware supports address learning via DCC command or button input (if implemented).
-



Safety & Recommendations

- Always verify correct supply polarity before powering.
 - Do **not** exceed 18 V DC.
 - Keep adequate spacing if driving four high-current relays simultaneously.
 - Use a proper DC supply with current capability matching your turnout type.
-

Appendix A, DIP switch combinations

Individual outputs

Dipswitches	Description
00000	A = Double Pulse, B = Double Pulse
00010	A = Double Pulse, B = Double Steady
00110	A = Double Pulse, B = Single Steady
01000	A = Double Steady, B = Double Pulse
01010	A = Double Steady, B = Double Steady
01110	A = Double Steady, B = Single Steady
11000	A = Single Steady, B = Double Pulse
11010	A = Single Steady, B = Double Steady
11110	A = Single Steady, B = Single Steady

Output B linked to output A

Dipswitches	Description
00001	A = Double Pulse, B = Double Relay
00101	A = Double Pulse, B = Single Relay
01001	A = Double Steady, B = Double Relay
01101	A = Double Steady, B = Single Relay
10001	Signal mode