

NVT-Loader Reference Guide

V1.00.002

Publication Release Date: Jul. 2012

Support Chips:

W55FA Series

Support Platforms:

Non-OS

The information in this document is subject to change without notice.

The Nuvoton Technology Corp. shall not be liable for technical or editorial errors or omissions contained herein; nor for incidental or consequential damages resulting from the furnishing, performance, or use of this material.

This documentation may not, in whole or in part, be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine readable form without prior consent, in writing, from the Nuvoton Technology Corp.

Nuvoton Technology Corp. All rights reserved.

1. General Description4

2. Introduction5

2.1. Feature..... 5

2.2. Execution Flow 6

2.3. Memory Map 7


3. Revision History8

1. General Description

NVT loader acts as the 3rd stage to load kernel. NVT Loader is used to load Linux kernel to memory address 0 and make it running well. It can load kernel binary file from NAND disk or SD card. As power on, CPU runs at IBR. IBR detects the DRAM memory type and size then parsing the NAND-Loader whether exists or not on NAND or SD card system area. IBR will load the NAND-Loader to SDRAM memory address 0. Then pass the CPU control to NAND-Loader. NAND-Loader set the default PLL to 192MHz or 240MHz and the SDRAM timing and clock skew respectively. Then checking the system area whether has logo file or not. And NVT-Loader binary file. It loaded logo file and NVT-Loader to memory address 0x400000 and 0x500000 respectively.

The sequence for loading the kernel from power on was showed as following figure.

Figure 1-1: Sequence for loading kernel

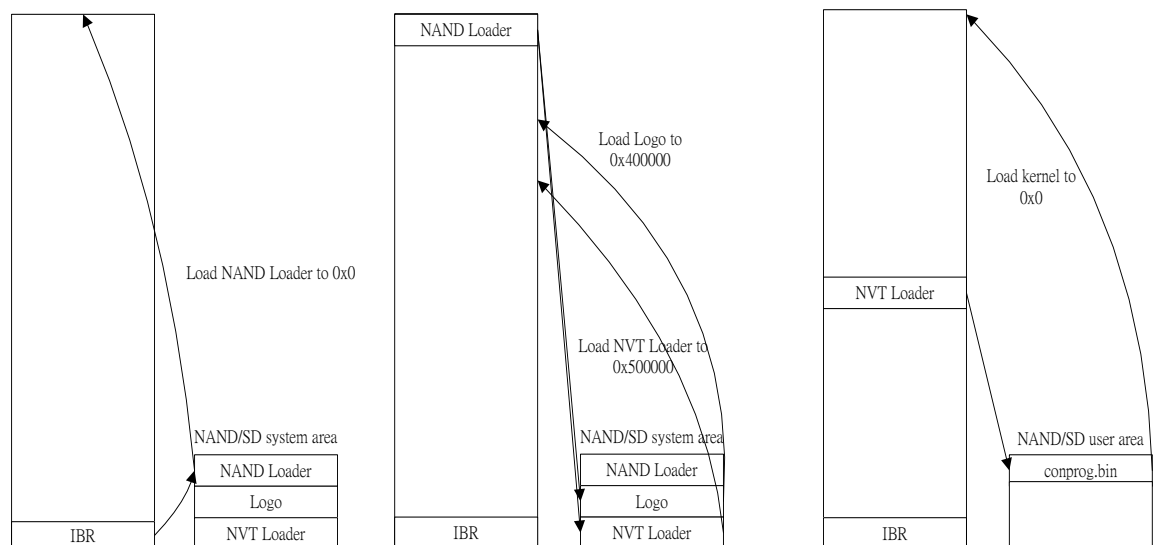

2. Introduction

NVT-Loader acts as the 3rd stage to load kernel. It does not have code size limitation thus could provide more features than NAND loader. NVT-Loader's feature includes:


2.1. Feature

- Supports FAT file system on NAND flash.
- Supports USB mass storage connection with PC.
- Supports AVI playback
- Supports basic production test code

2.2. Execution Flow

There are two mainly branch to load kernel from on board NAND flash or external SD card. The following figure shows the control flow.

Figure 2-1: Execute Flow

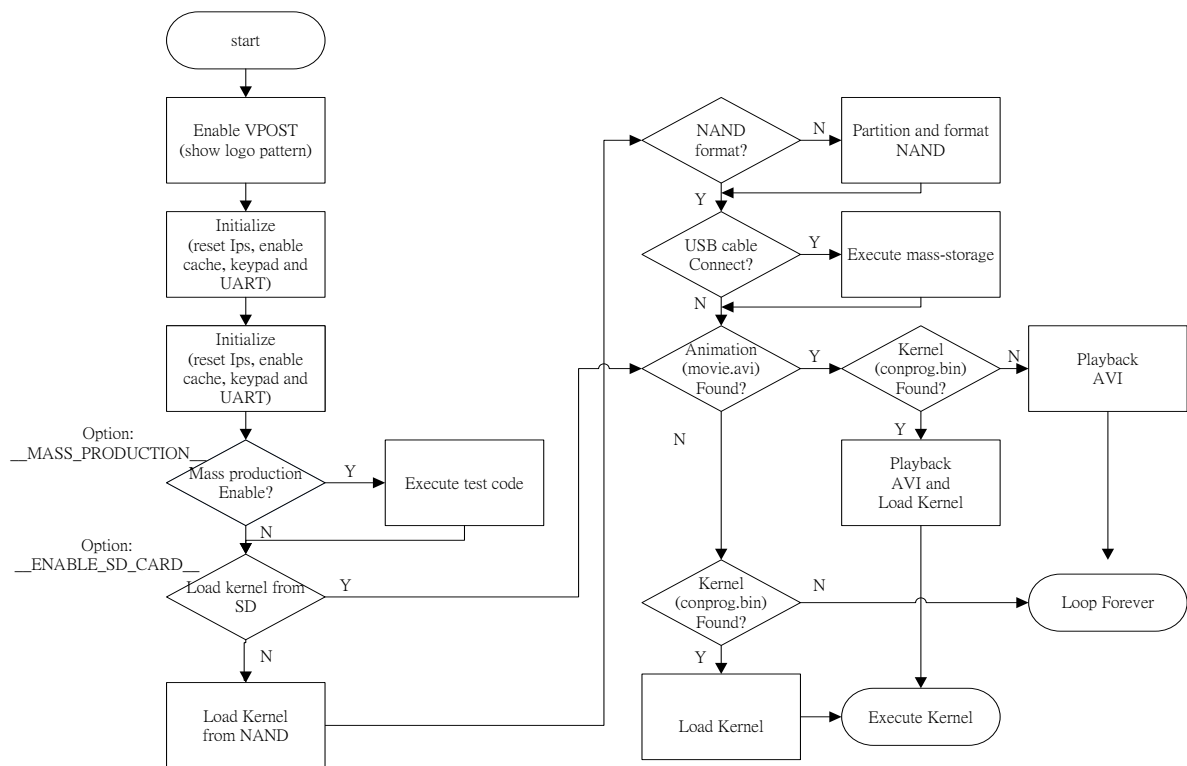


Please note the file conprog.bin, user could rename any binary code of sample code into conprog.bin. Copy the file into the root directory to execute.

2.3. Memory Map

Scatter description loading file describes the memory map in load and execute view. NVT-Loader should be loaded to address 0x500000. Otherwise, it does not run well. The following figure shows the execute view.

Figure 2-2: NVT-Loader Execute View

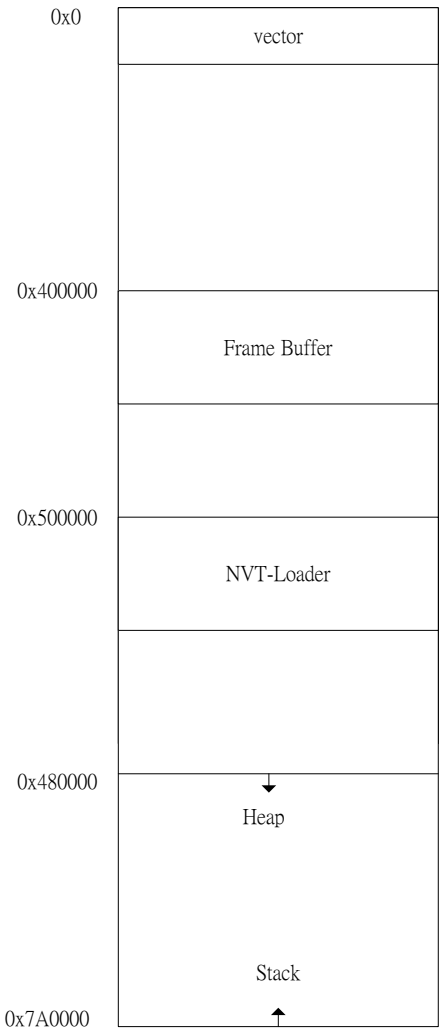

3. Revision History

Version	Date	Description
V1.00.002	Jul. 12, 2012	<ul style="list-style-type: none"> • Modify for FA93QDN
V1	May. 5, 2011	<ul style="list-style-type: none"> • Created

Important Notice

Nuvoton products are not designed, intended, authorized or warranted for use as components in equipment or systems intended for surgical implantation, atomic energy control instruments, aircraft or spacecraft instruments, transportation instruments, traffic signal instruments, combustion control instruments, or for any other applications intended to support or sustain life. Furthermore, Nuvoton products are not intended for applications whereby failure could result or lead to personal injury, death or severe property or environmental damage.

Nuvoton customers using or selling these products for such applications do so at their own risk and agree to fully indemnify Nuvoton for any damages resulting from their improper use or sales.