

**ARM® ARM926EJ-S**  
**32-bit Microprocessor**

**NuMaker NuWicam**  
**Samples**

*The information described in this document is the exclusive intellectual property of Nuvoton Technology Corporation and shall not be reproduced without permission from Nuvoton.*

*Nuvoton is providing this document only for reference purposes of NuMicro microcontroller based system design. Nuvoton assumes no responsibility for errors or omissions.*

*All data and specifications are subject to change without notice.*

For additional information or questions, please contact: Nuvoton Technology Corporation.

[www.nuvoton.com](http://www.nuvoton.com)

## Table of Contents

1	INTRODUCTION .....	3
1.1	Modbus RTU .....	3
1.2	Function testing .....	4
1.2.1	Using NuWicam player APP .....	4
1.2.2	Using PC utilities .....	4
2	ARDUINO UNO (OR NUMAKER UNO) BOARD .....	8
2.1	Board schematics.....	8
2.2	Requirement .....	9
2.2.1	Hardware.....	9
2.2.2	Software .....	9
2.3	Purchasing information .....	9
2.4	Arduino IDE installation .....	10
2.5	Sample code building .....	13
3	NUMAKER-PFM-NUC472 BOARD .....	16
3.1	Board schematics.....	16
3.2	Requirement .....	16
3.2.1	Hardware.....	16
3.2.2	Software .....	16
3.3	Purchasing information .....	17
3.4	Sample code building .....	17
4	REVISION HISTORY .....	21

## 1 INTRODUCTION

In NuWicam samples, we use Modbus RTU protocol to communicate between mobile device and low-end MCUs. Modbus is often used to connect a supervisory computer with a remote terminal unit (RTU) in supervisory control and data acquisition (SCADA) systems.

In this document, we will describe how to construct the NuMaker NuWicam<sup>[1]</sup> samples. These samples include LEDs controlling, get temperature value from digital or analog sensor. These samples can be executed on Arduino(or NuMaker) UNO or NuMaker-PFM-NUC472 board. We will describe more details in sub-chapter as below.

- Arduino(or NuMaker) UNO board
- NuMaker-PFM-NUC472 board

### 1.1 Modbus RTU

**Modbus**<sup>[2]</sup> is a serial communications protocol. It is simple, robust and now a commonly available means of connecting industrial electronic devices. Main reasons as below:

- Developed with applications in mind.
- Openly published and royalty-free.
- Easy to deploy and maintain.
- Moves raw bits or words without placing many restrictions on vendors.

In NuWicam application, our data mapping table is as below:

Register name	Address	Descript	Note
MB_InCounter	0x00	[R] Modbus query counter	※
MB_OutCounter	0x01	[R] Modbus response counter	※
MB_ErrorCounter	0x02	[R] Modbus error query counter	※
BUTTON(DI)	0x03	[R] 4 button input value.	
6-LED(DO)	0x04	[R/W] 6 LED output value.	※
RGB(DO)	0x05	[R] RGB value.	
7-Segment Display(DO)	0x06	[R] 2-digit value.	
Temperture sesnor	0x07	[R] Temperature value.(degrees Celsius)	※

(※): Only valid on NuMaker UNO board.

[1] NuWicam is short for NuMaker NuWicam.

[2] More modbus details, please refer <https://en.wikipedia.org/wiki/Modbus>.

## 1.2 Function testing

### 1.2.1 Using NuWicam player APP

Open NuMaker NuWicam Player mobile APP to test function. As below figure, it shows a temperature value on the screen and these six circles are for every LED controllers. You can press these circles to light on/off LED. Current temperature information also is shown on 7-segment LEDs(Only on NuEdu M451 board).

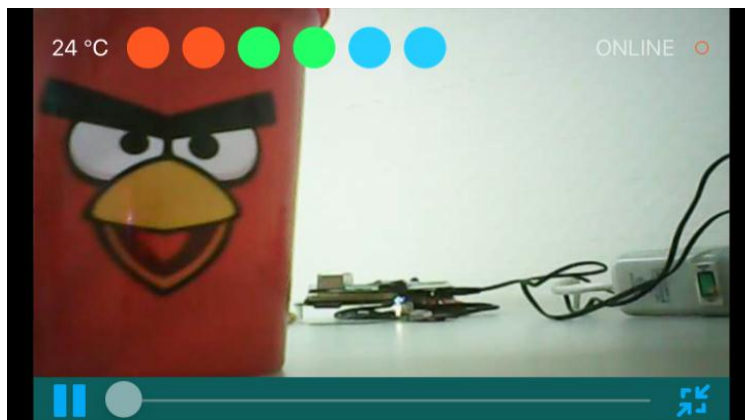


Figure 1-1 NuWicam Player APP snapshot

### 1.2.2 Using PC utilities

#### 1.2.2.1 Using VLC to get A/V stream

You can use VLC utility to get audio and video streams from NuWicam.

Press [Media], [Open Network Stream..] and input the network URL. The URL is '**rtsp://192.168.100.1:554/cam1/mpeg4**'. Then, press [Play] to play.

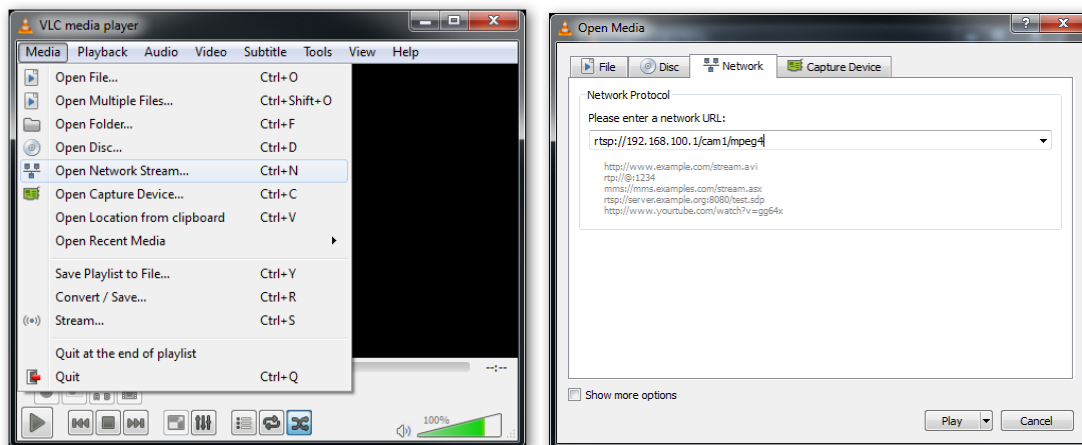


Figure 1-2 VLC configuration for NuWicam RTSP connection

### 1.2.2.2 Using Modbus poll to poll data

**Connction setting** - You can use 'Modpoll' utility to do Modbus communication beweeet PC and NuMaker UNO (or mbed board). At first, In 'Connection Setup' page, select 'Modbus RTU/ASCII Over TCP/IP' item in 'Connection' combo list. In 'Mode' radio group, select RTU. In 'Response Timeout', input 1000 into 'Response Timeout' textedit and input 100 into 'Delay Between Polls' textedit. Finally, the IP address is '192.168.100.1' and 'Server Port' is 502. You also refer below Figure 1-3 to fill settings.

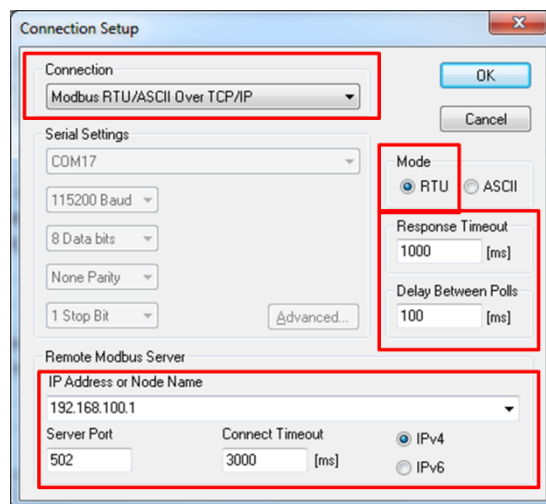


Figure 1-3 Modbus RTU Over TCP/IP connection

**Data register polling** - You can open 'Read-Write Definition' to set modbus slave paramters. At first, input '1' into 'Slave ID' textedit, select '03 Read Holding Registers (4x)' in 'Function' combo list, input '0' into 'Address' textedit, input '8' into 'Quantity' textedit and input '500' into 'Scan Rate' textedit. Finally, press 'OK' to start polling data. You also refer below Figure 1-4 to fill settings.

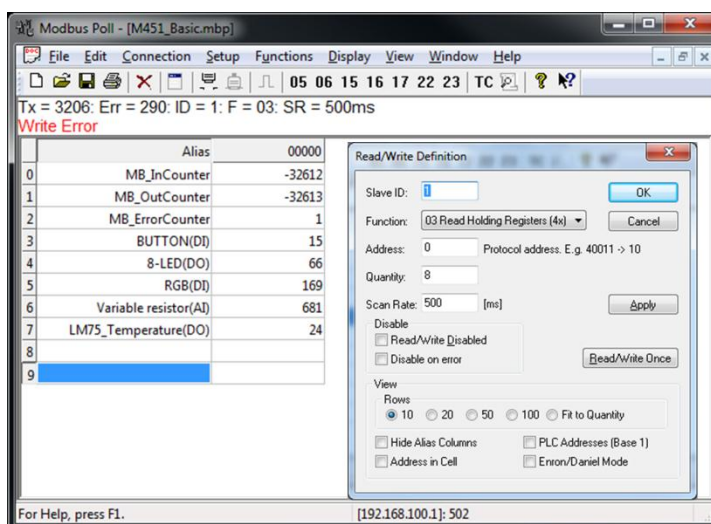


Figure 1-4 Modbus register Read/Writer setting for NuWicam sample

**Data traffic monitor** - You can open 'Communication Traffic' of 'Modbus poll' to analysis data traffic and also open Wireshark to analysis TCP data between NuWicam and PC.

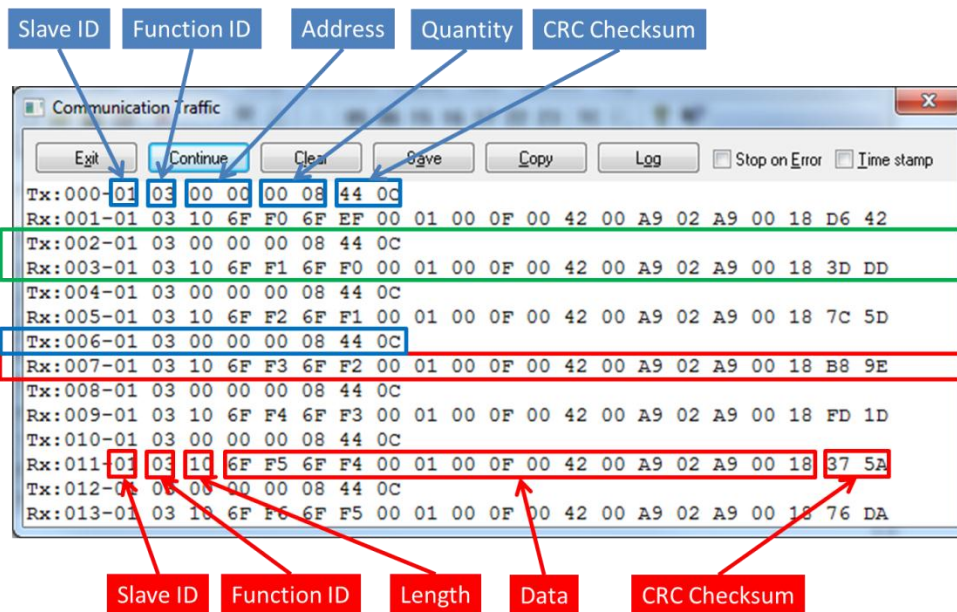


Figure 1-5 Modbus protocol communication traffic between master and slave

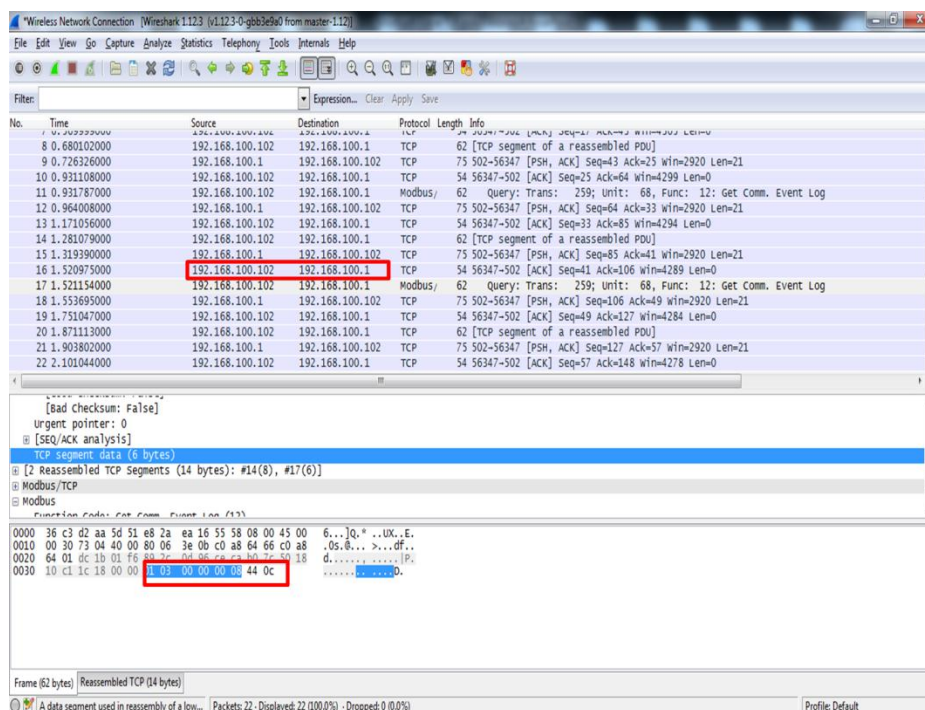


Figure 1-6 TCP data traffic using Wireshark – Modbus master TX data



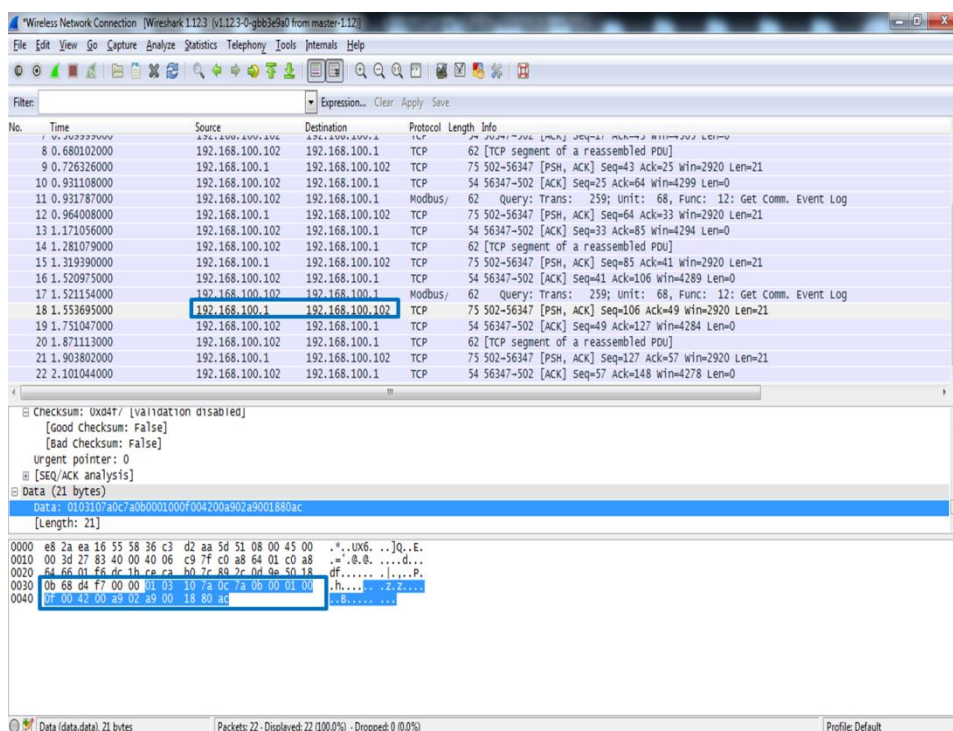


Figure 1-7 TCP data traffic using Wireshark – Modbus master RX data

## 2 ARDUINO UNO (OR NUMAKER UNO) BOARD

### 2.1 Board schematics

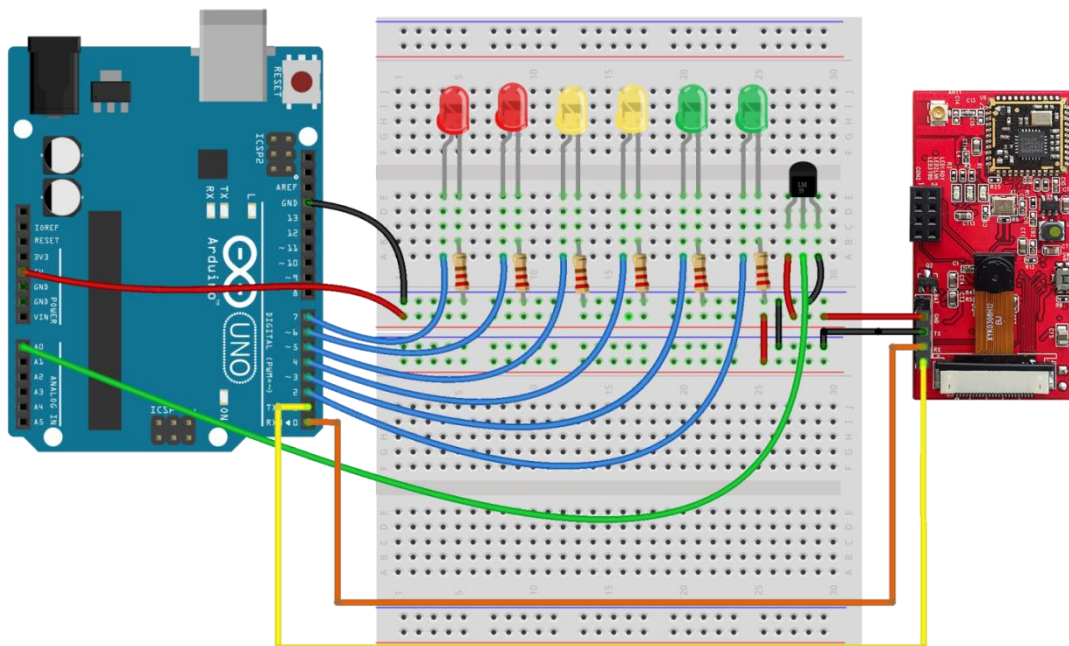


Figure 2-1 NuWicam-VGA board with Arduino UNO

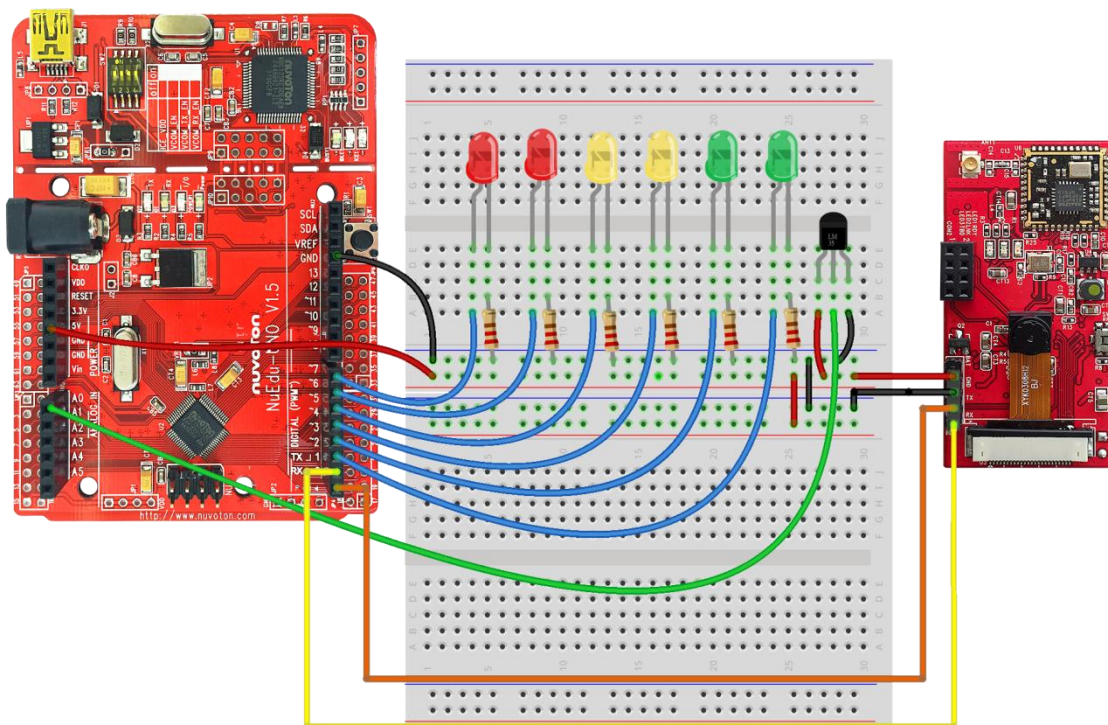


Figure 2-2 NuWicam-VGA board with NuMaker UNO



## 2.2 Requirement

### 2.2.1 Hardware

- NuWicam board with firmware x 1
- Geduino UNO(or NuMaker UNO) board x 1 ( with USB Line, DC Power adapter )
  - **If your board is NuMaker UNO, please remember to switch 2, 3 and 4 of SW2 to 'OFF' on the board.**
- Red LEDs x 2, Green LEDs x 2 and Blue LEDs x 2
- 220 ohm resistor x 6
- Some dupont lines
- LM35 analog temperature sensor
- USB power adapter(5V/1A).

### 2.2.2 Software

- Arduino IDE v1.6.9 (or later)
  - You can refer the page to install arduino IDE for NuEdu-UNO.  
<https://github.com/OpenNuvoton/NuEdu-UNO>
- Modified Modbus-Master-Slave-for-Arduino Modbus library
  - Please download library on github server.
  - Path:  
[https://github.com/OpenNuvoton/NuMaker\\_NuWicam\\_Samples/NuMaker\\_NuWiCam\\_Arduino\\_UNO/Modbus-Master-Slave-for-Arduino.zip](https://github.com/OpenNuvoton/NuMaker_NuWicam_Samples/NuMaker_NuWiCam_Arduino_UNO/Modbus-Master-Slave-for-Arduino.zip)
- NuWicam sample code for NuMaker UNO board.
  - Please download source on github server.
  - Path:  
[https://github.com/OpenNuvoton/NuMaker\\_NuWicam\\_Samples/NuMaker\\_NuWiCam\\_Arduino\\_UNO](https://github.com/OpenNuvoton/NuMaker_NuWicam_Samples/NuMaker_NuWiCam_Arduino_UNO)

## 2.3 Purchasing information

- **NuMaker UNO board**  
 URL: <https://world.tmall.com/item/523268526584.htm?spm=a312a.7700824.w4011-6765047385.25.2qjifz&id=523268526584&rn=93873a1038dd4952f86ee4c2766ccae0&abbucket=10>
- **LM35 analog temperature sensor module**  
 URL: <https://world.taobao.com>


## 2.4 Arduino IDE installation

Step 1: Download Arduino 1.6.10 IDE from <https://www.arduino.cc/en/Main/Software>




Step 2: Extract arduino-1.6.10-windows.zip to c:\arduino-1.6.10.

Step 3: Double-click arduino.exe, and then go to File->Preferences.

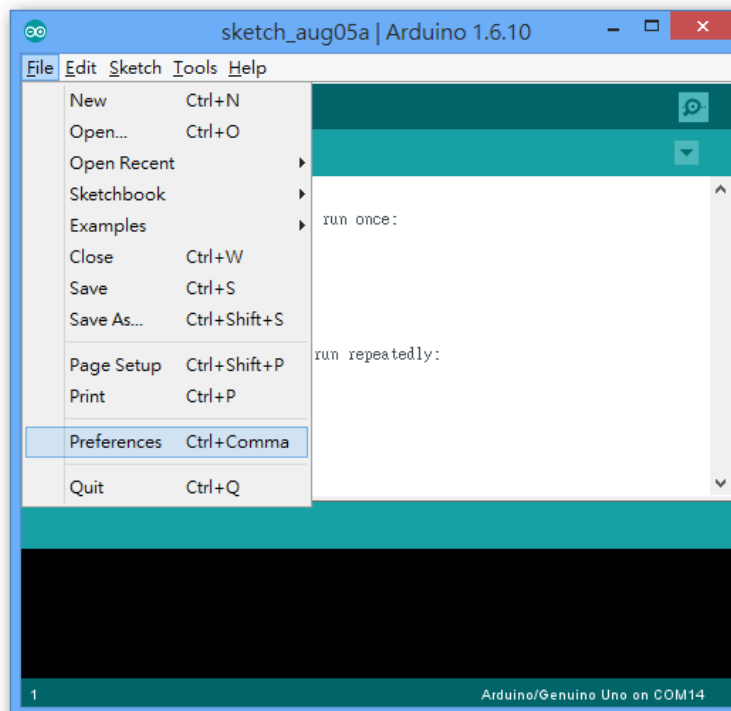


**Step 4: Paste following URL to 'Additional Boards Manager URLs' input field:**


[https://raw.githubusercontent.com/OpenNuvoton/NuEdu-UNO/master/package\\_nuvoton\\_index.json](https://raw.githubusercontent.com/OpenNuvoton/NuEdu-UNO/master/package_nuvoton_index.json)

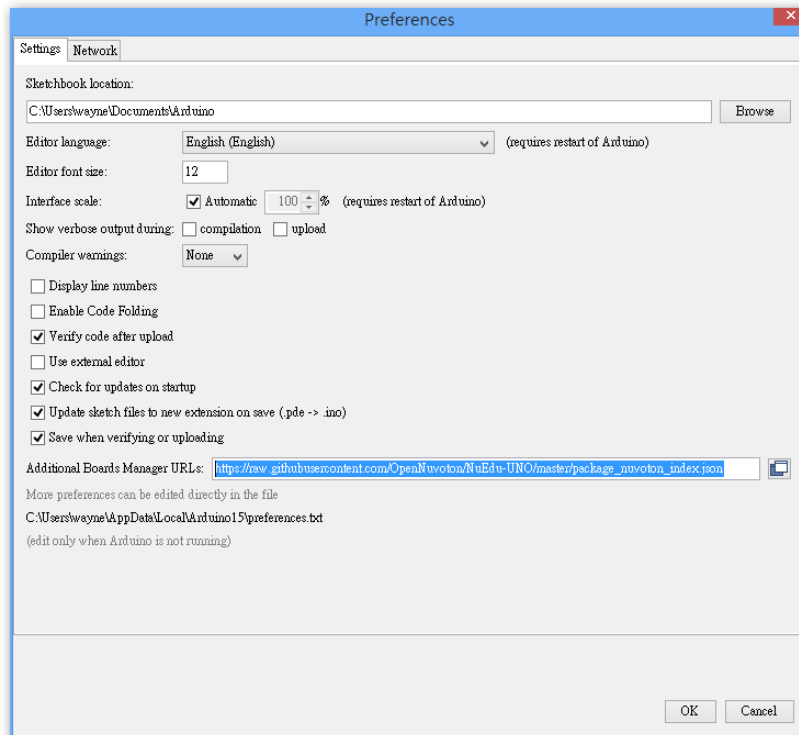

**Step 5: Under Tools->Board->Boards Manger, search NuEdu-UNO by Nuvoton, click Install**

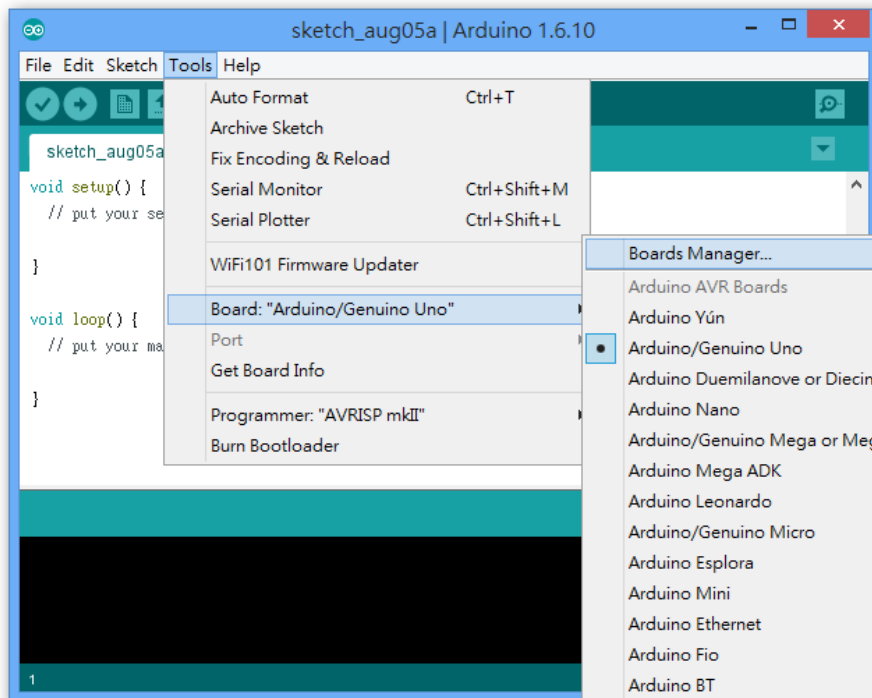

Step 6: You can select NuEdu-UNO in Arduino IDE now.

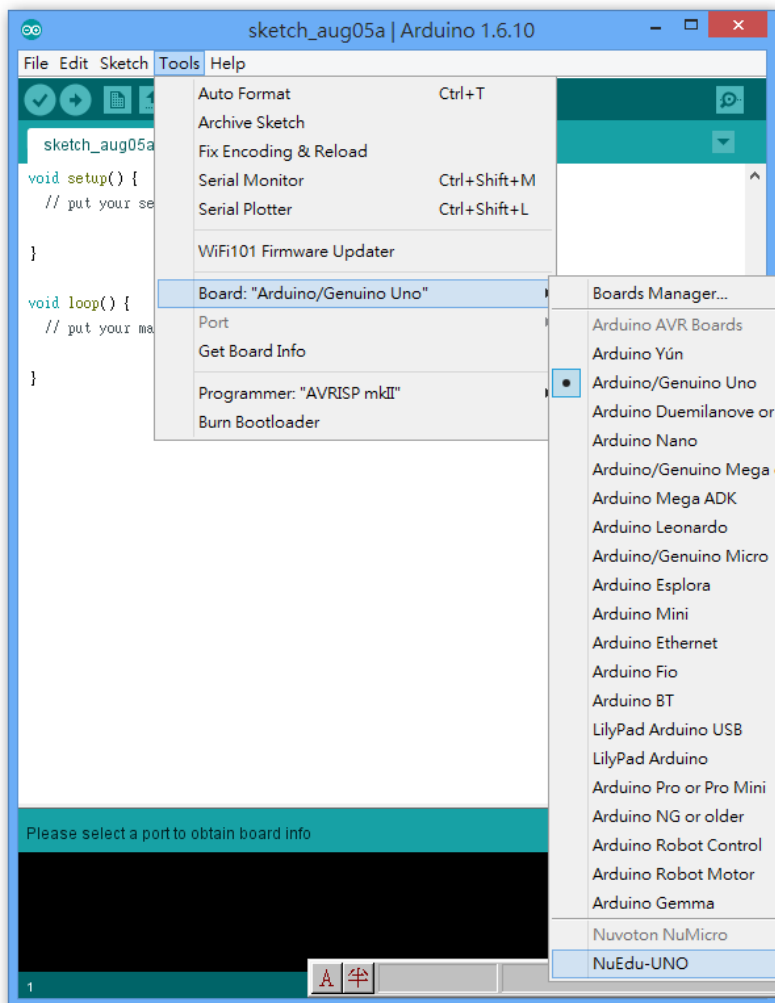


## 2.5 Sample code building


Please follow below steps to build executable binary.

### Step 1: Import the modified Modbus-Master-Slave-for-Arduino Modbus.zip library

<Sketch> → <Include Library> → <Add .ZIP library ...> → Select the .zip file path. → <Open>

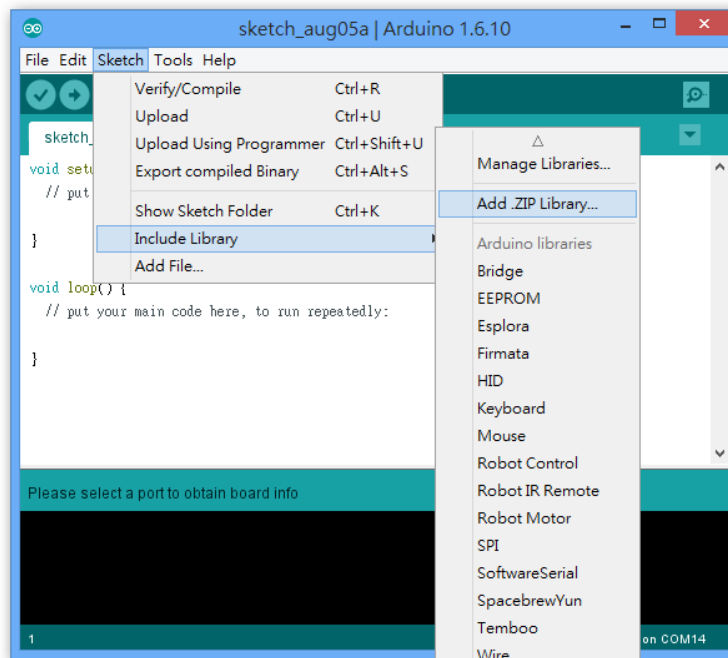


### Step 2: Load NuWicam sample code for Arduino UNO board.

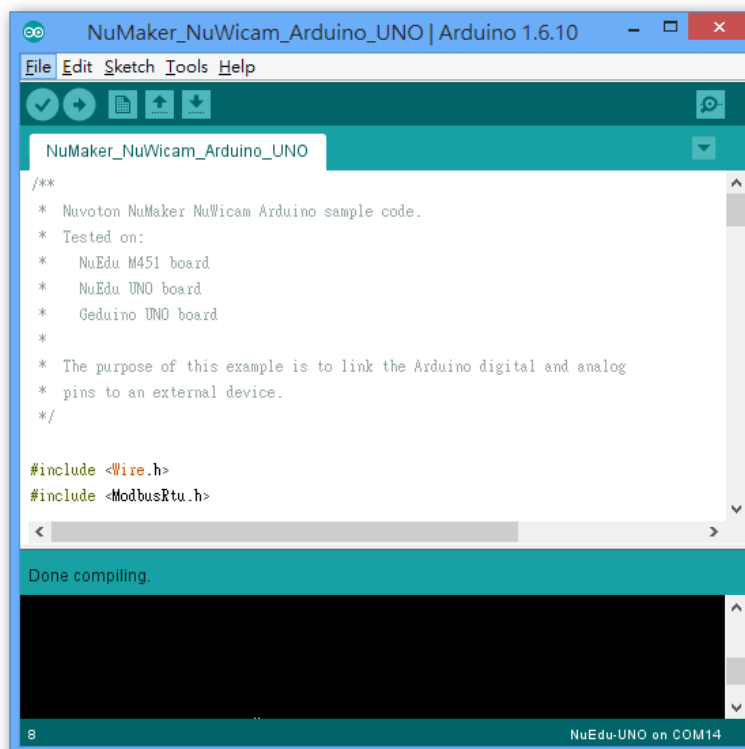




**Step 3: Select configuration for Geduino UNO board.**

**<Tools> → <Board: “Arduino/Geduino UNO”> → Select Arduino/Geduino UNO.**

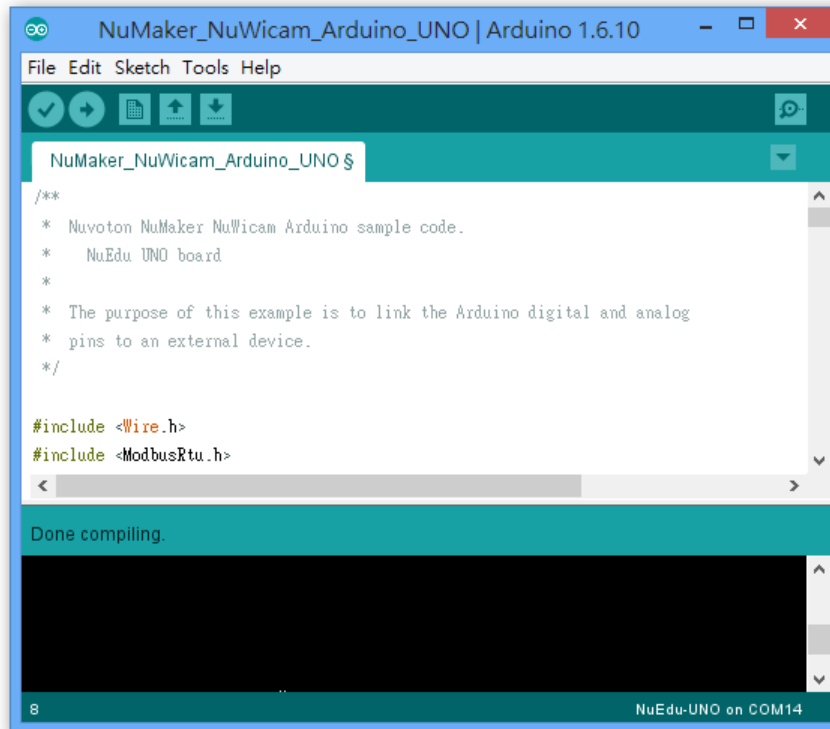


**Step 4: Build sample code.**

**<Sketch> → <Verify/Compile>**

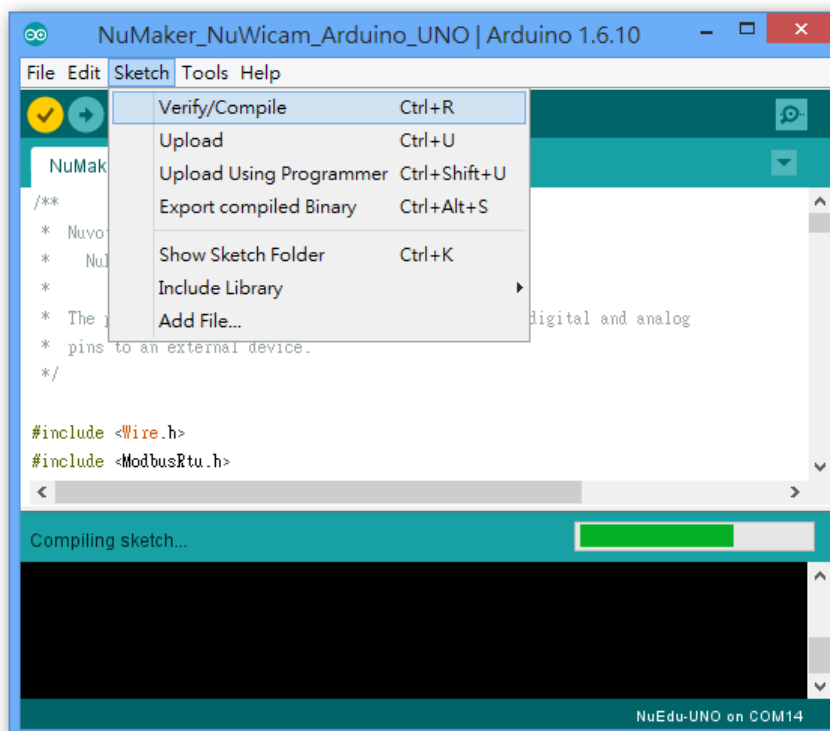

Step 5: Upload executable binary to board.

<Sketch> → <Upload>

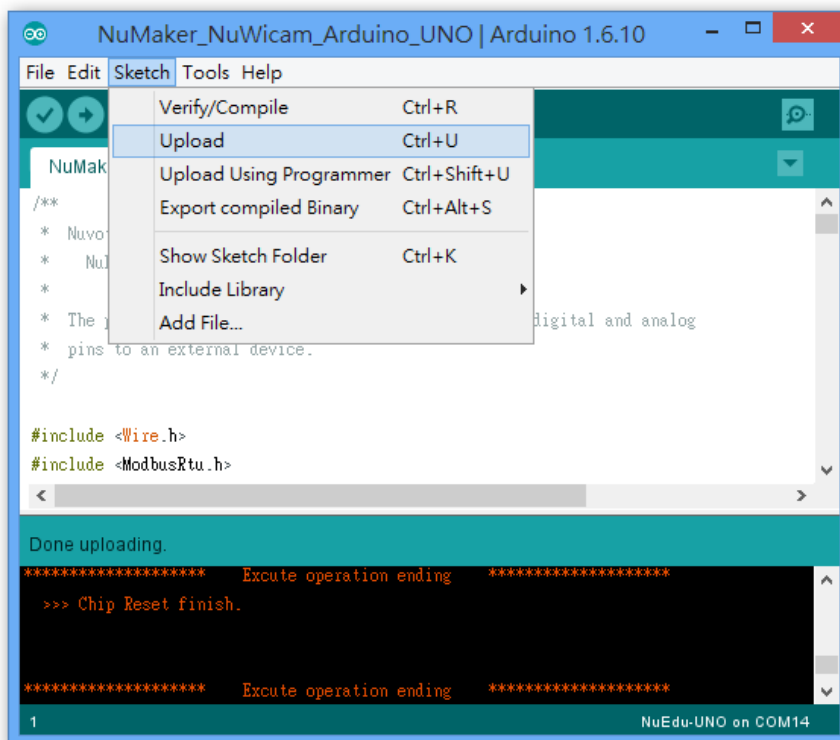

### 3 NUMAKER-PFM-NUC472 BOARD

#### 3.1 Board schematics

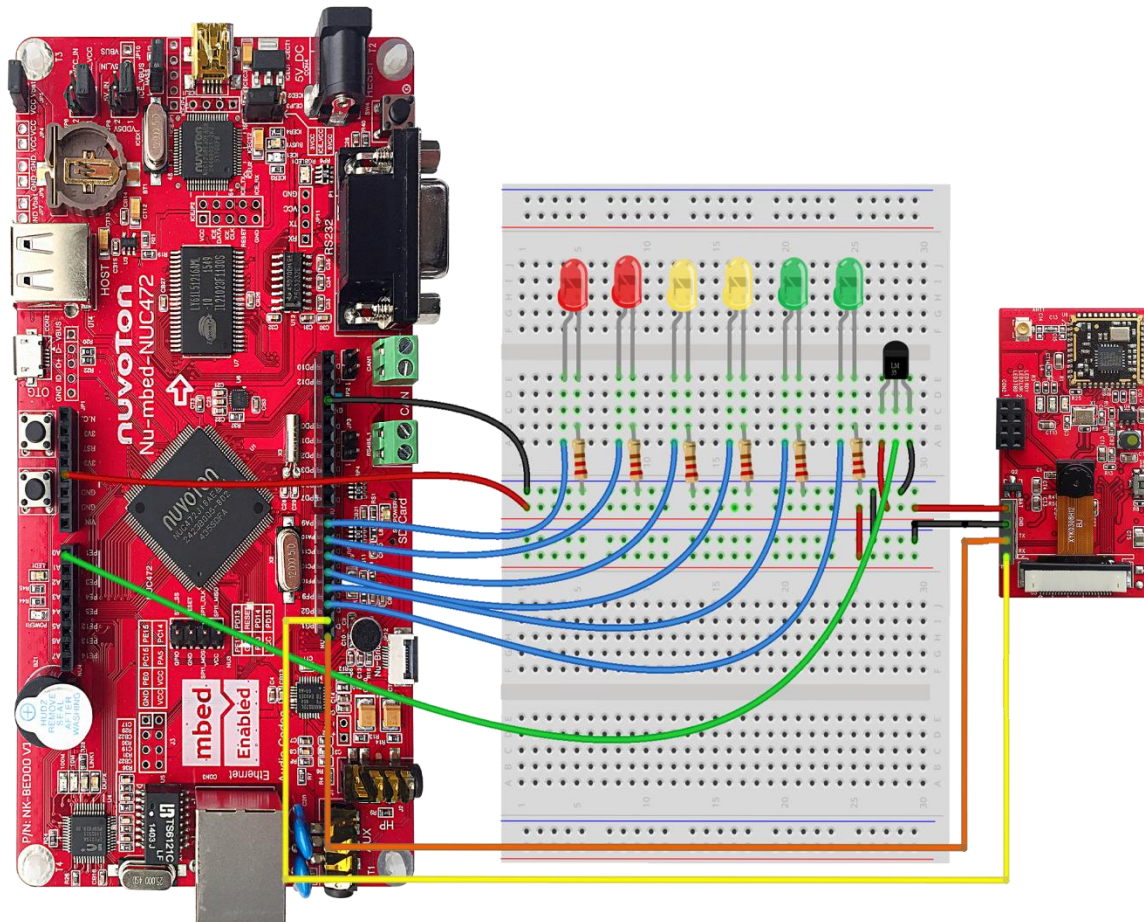


Figure 4-1 NuWicam-VGA board with NuMaker-FPM-NUC472 board

#### 3.2 Requirement

##### 3.2.1 Hardware

- NuWicam board with firmware x 1
- NuMaker-FPM-NUC472 board x 1 ( with USB Line, DC Power adapter )
- Red LEDs x 2, Green LEDs x 2 and Blue LEDs x 2
- 220 ohm resistor x 6
- Some dupont lines
- LM35 analog temperature sensor
- USB power adapter(5V/1A).

##### 3.2.2 Software

- Google Chrome Browser
- NuWicam sample code for NuMaker-FPM-NUC472 board.
  - Please visit ARM website.
  - Path: [https://developer.mbed.org/users/wclin/code/NuMaker\\_NuWicam\\_Lite/](https://developer.mbed.org/users/wclin/code/NuMaker_NuWicam_Lite/)

### 3.3 Purchasing information


- NuMaker-FPM-NUC472 board  
URL: N/A
- LM35 analog temperature sensor module  
URL: <https://world.taobao.com>

### 3.4 Sample code building

Please follow below steps to build executable binary.




**Step 1: Open Google Chrome web browser and Login your ARM mbed account.**

Path: <https://developer.mbed.org/>

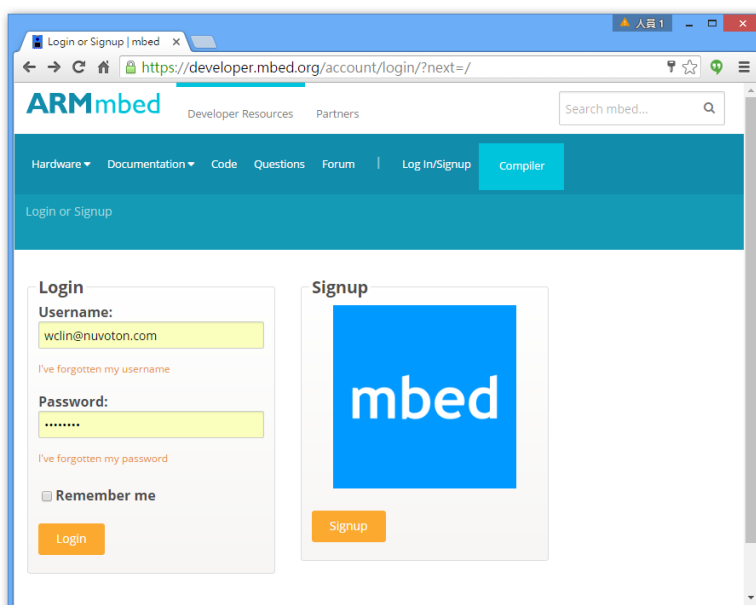

## Step 2: Import NuWicam sample into 'ARM mbed Compiler'.



Path: [https://developer.mbed.org/users/wclin/code/NuMaker\\_NuWicam\\_Lite/](https://developer.mbed.org/users/wclin/code/NuMaker_NuWicam_Lite/)  
Press **<Import into Compiler>** button, it will import the program.

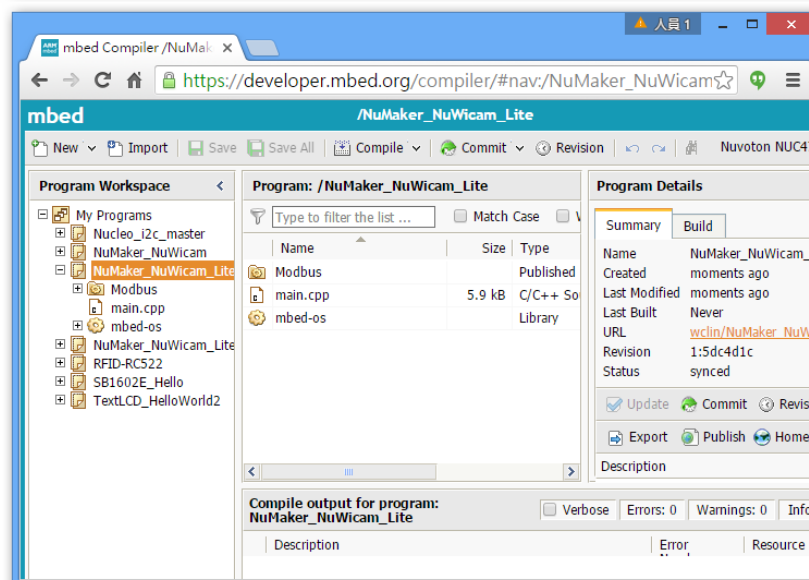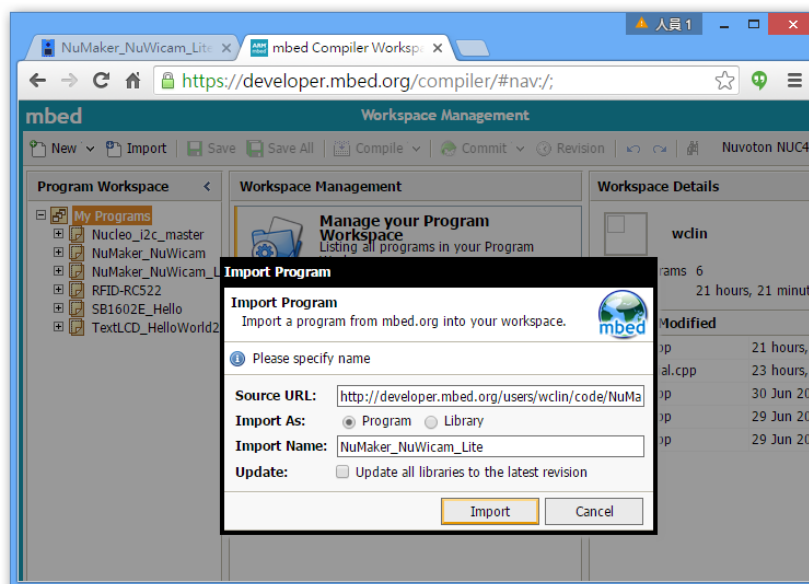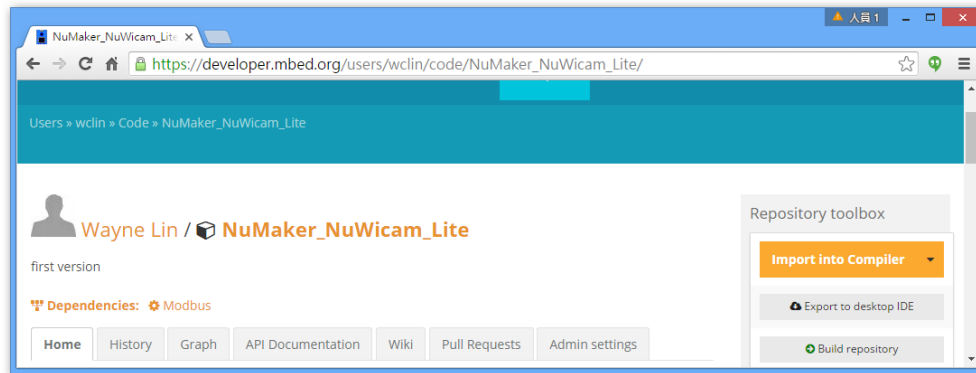





### Step 3: Build sample code

Press **<Compile>** to build the sample code. After done, it will produce downloadable file.

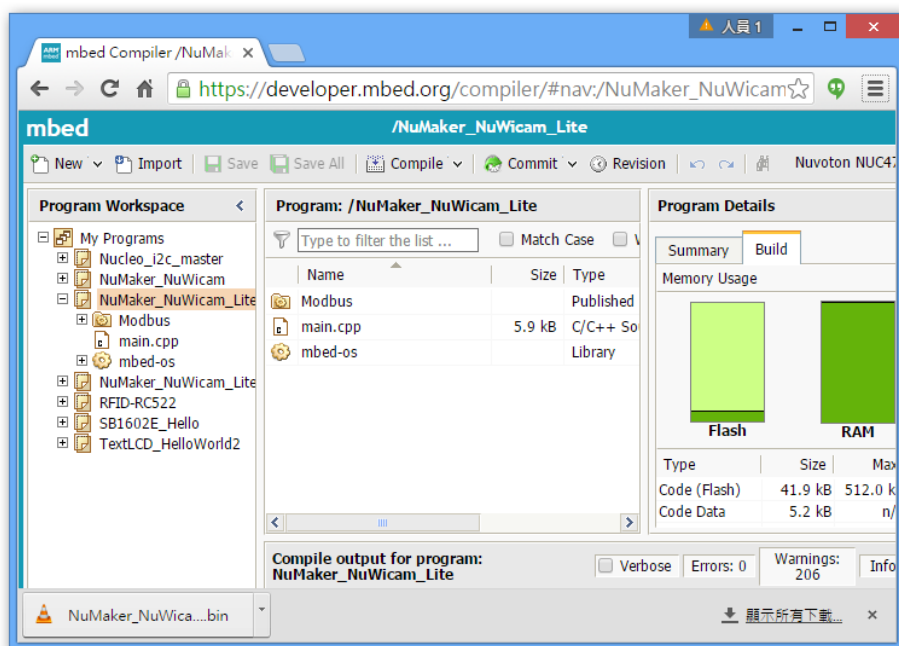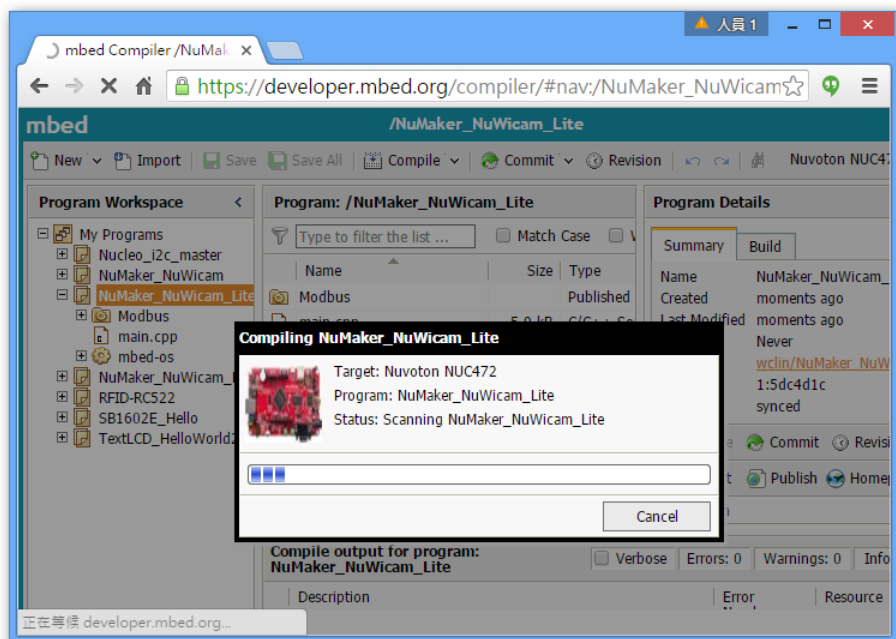

#### Step 4: Upload executable binary to board.

Copy the 'NuMaker\_NuWicam\_Lite\_NUMAKER\_PFM\_NUC472.bin' to mbed disk. You can find the mbed disk in your computer manager.

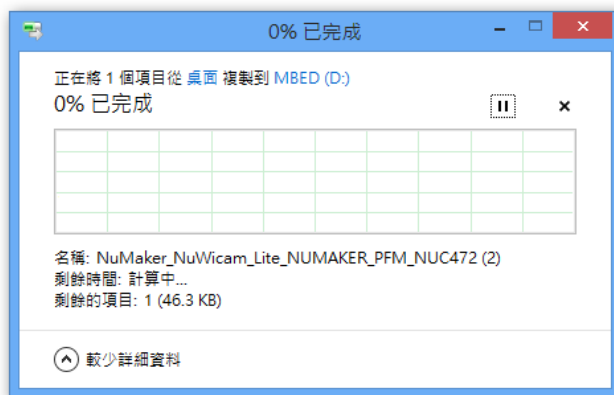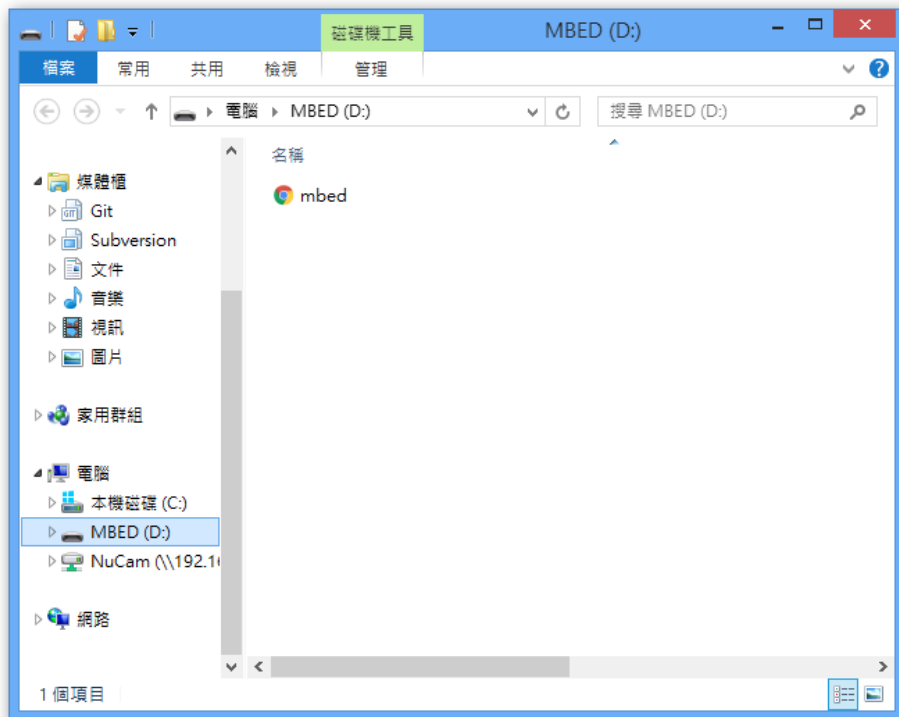

#### 4 REVISION HISTORY

Date	Revision	Description
2016.08.10	1.00	1. Initially issued.
2016.08.17	1.01	2. Modify Nuduino to NuMaker UNO
2016.08.31	1.02	3. Add some testing utilities description for window platform.

### Important Notice

Nuvoton Products are neither intended nor warranted for usage in systems or equipment, any malfunction or failure of which may cause loss of human life, bodily injury or severe property damage. Such applications are deemed, "Insecure Usage".

Insecure usage includes, but is not limited to: equipment for surgical implementation, atomic energy control instruments, airplane or spaceship instruments, the control or operation of dynamic, brake or safety systems designed for vehicular use, traffic signal instruments, all types of safety devices, and other applications intended to support or sustain life.

All Insecure Usage shall be made at customer's risk, and in the event that third parties lay claims to Nuvoton as a result of customer's Insecure Usage, customer shall indemnify the damages and liabilities thus incurred by Nuvoton.

---

Please note that all data and specifications are subject to change without notice.  
All the trademarks of products and companies mentioned in this datasheet belong to their respective owners.