

Arm® Cortex®-M
32-bit Microcontroller

NuMicro® Family
NuMicroPy
User Manual

The information described in this document is the exclusive intellectual property of Nuvoton Technology Corporation and shall not be reproduced without permission from Nuvoton.

Nuvoton is providing this document only for reference purposes of NuMicro microcontroller based system design. Nuvoton assumes no responsibility for errors or omissions.

All data and specifications are subject to change without notice.

For additional information or questions, please contact: Nuvoton Technology Corporation.

www.nuvoton.com

Table of Contents

1	Overview	4
2	NuMicroPy Introduction	5
2.1	REPL.....	5
2.2	Embedded Flash Partition	5
2.3	Modules and I/O Classes Support List	6
3	How to Start NuMicroPy.....	9
3.1	Nuvoton Nu-Link Driver Download and Install	9
3.2	Hardware Setup Steps	9
3.3	Burn Firmware.....	9
3.4	Python Code Update Steps	10
4	How to Customize MicroPython Firmware	13
4.1	Packages Requirement	13
4.2	Install GNU Arm Toolchain	13
4.3	Build Firmware	13
4.4	Enable/Disable Module	13
4.5	Enable/Disable I/O Class	15
5	I/O Class Quick Reference	17
5.1	LAN Class.....	17
5.2	WLAN Class	17
5.3	Pin Class	17
5.4	ADC Class	20
5.5	SPI Class.....	21
5.6	I ² C Class	22
5.7	RTC Class	23
5.8	UART Class.....	23
5.9	CAN Class	24
5.10	USB HID Class	25
5.11	USB VCP Class	26
5.12	LED Class.....	26
5.13	Switch Class	27
5.14	Timer Class	27
5.15	PWM Class	30

5.16	WDT Class	31
5.17	Accel Class	31
5.18	Gyro Class	31
5.19	Mag Class.....	32
6	LittlevGL Binding	33
6.1	How to Run LittlevGL.....	33
6.2	Build MicroPython with LittlevGL firmware.....	41
7	Summary	42
8	Troubleshooting	43
8.1	Meet “MemoryError: memory allocation failed” message	43
9	Revision History	44

1 OVERVIEW

NuMicroPy is the port of MicroPython to Nuvoton NuMicro® family microcontrollers (MCUs). The [MicroPython](http://micropython.org/)¹ project aims to put an implementation of Python 3.x on the microcontrollers and small embedded systems. Refer to Table 1-1 for NuMicroPy support status.

MCU	Board	Firmware ROM Size	Firmware RAM Size
M487	NuMaker-PFM-M487	357KB/648KB(W/lvgl)	86KB/123KB(W/lvgl) ²
M487	NuMaker-IOT-M487	322KB	46KB
M263	NuMaker-M263KI	266KB	35KB

Table 1-1 NuMicroPy Support Status

The MicroPython implements Python 3.4 and some selected feature of Python 3.5, but there are some conflicting results in MicroPython when compared to standard Python. See [details](http://docs.micropython.org/en/latest/genrst/index.html#)³.

¹ <http://micropython.org/>

² LittlevGL required RAM size 123KB = 91KB + 32KB(SPIM cache)

³ <http://docs.micropython.org/en/latest/genrst/index.html#>

2 NUMICROPY INTRODUCTION

The MicroPython divides the code into two parts, python interpreter firmware (firmware.bin) and the user's python code. The firmware must be burned into the MCU first. After boot, the firmware executes the user's python code.

The execution of the python code supports the REPL mode and/or performs the python code from storage. The firmware tries to perform the python code from storage first, and finally enter REPL mode. Users can test their python code in REPL mode, and finally put the python code into storage.

The MicroPython defines the I/O classes associated with the MCU peripheral in the pyb module⁴. NuMicroPy implements these I/O classes according to these definitions.

2.1 REPL

REPL stands for Read Evaluate Print Loop, and is the name given to the interactive MicroPython prompt that you can access on the MCUs. Using the REPL is by far the easiest way to test out your python code (Figure 2-1).

The REPL is always available on the UART0 serial peripheral. The baud rate of the REPL is 115200. In the NuMaker board, Nu-Link-Me has a USB-to-serial converter on it then you should be able to access the REPL directly from your PC.

To access the prompt over USB-to-serial you need to use a terminal emulator program. On Windows, Tera Term is a good choice; on Mac you can use the built-in screen program, and Linux has picocom and minicom.

```

COM4 - Tera Term VT
File Edit Setup Control Window KanjiCode Help
+-----+
|           Micropython Code for Nuvoton M48x           |
+-----+
MicroPython e52bf49-dirty on 2019-08-16; NuMaker-PFN-M487 with Nuvoton-M48x
>>> 1+2
3
>>> 1/2
0.5
>>> 12**3
1728
>>> █
  
```

Figure 2-1 REPL Mode

2.2 Embedded Flash Partition

The NuMicroPy divides the MCU's embedded flash into two partitions, one is the firmware partition and the other is the data partition.

The firmware partition is used to put the firmware binary code.

The data partition will be a partition of FAT file system. The firmware will attempt to mount the data

⁴ pyb module: MicroPython board related module.

partition at the beginning of execution. If mount fails, it will force the data partition to be formatted into FAT file system and produce two blank python file (main.py and boot.py). You can force the firmware into USB mass storage mode and then write your python code to these files. Table 2-1 shows the default embedded Flash partition status.

MCU	Embedded Flash Size	Firmware Partition Start Address	Firmware Partition Size	Data Partition Start Address	Data Partition Size
M487	512KB	0x0	384KB	0x60000	128KB
M263	512KB	0x0	384KB	0x60000	128KB

Table 2-1 Default Embedded Flash Partition Status

2.3 Modules and I/O Classes Support List

Table 2-2 and Table 2-3 show the M487 and M263 support status on the modules and I/O classes of MicroPython.

Module	Description	M487	M263
array	Arrays of numeric data	✓	✓
cmath	Mathematical function for complex numbers	✓	✓
gc	Control the garbage collector	✓	✓
math	Mathematical functions	✓	✓
sys	System specific functions	✓	✓
ubinascii	Binary/ASCII conversions	✓	✓
ucollections	Collection and container types	✓	✓
uerrno	System error codes	✓	✓
uhashlib	Hashing algorithms	✓	✓
uheapq	Heap queue algorithm	✓	✓
uio	Input/output streams	✓	✓
ujson	JSON encoding and decoding	✓	✓
uos	Basic “operating system” service	✓	✓
ure	Simple regular expressions	✓	✓
uselect	Wait for events on a set of streams	✓	✓
usocket	Socket module	✓	-

ussl	SSL/TLS module	✓	-
ustruct	Pack and unpack primitive data types	✓	✓
utime	Time related functions	✓	✓
uzlib	zlib decompression	✓	✓
_thread	Multithreading support	✓	✓
network	Network configuration	✓	-
uctypes	Access binary data in a structured way	✓	✓
Machine	Functions related to the hardware	✓	✓
ucryptolib	Cryptographic ciphers	✓	-

Table 2-2 Default Supported Modules

I/O Class	Description	M487	M263
ADC	Analog to digital conversion	✓	✓
CAN	Controller area network communication bus	✓	✓
I ² C	A two-wire serial protocol	✓	✓
LED	LED object	✓	✓
Pin	Control I/O pins	✓	✓
PinAF	Pin alternate functions	✓	✓
RTC	Real time clock	✓	✓
SPI	A master-driven serial protocol	✓	✓
Switch	Switch button object	✓	-
Timer	Control internal timers	✓	✓
TimerChannel	Setup a channel for a timer	✓	✓
UART	Duplex serial communication bus	✓	✓
USB_HID	USB Human Interface Device	✓	✓
USB_VCP	USP virtual com port	✓	✓
PWM	BPWM/EPWM generator and capture timer	✓	✓
WDT	Watchdog timer	✓	✓

LAN	Ethernet network interface	Only for NuMaker-PFM-M487	-
WLAN	Wireless network interface (ESP8266 module)	Only for NuMaker-IOT-M487	-
Accel	Accelerometer control (Bosch BMX055)	Only for NuMaker-IOT-M487	-
Gyro	Gyroscope control (Bosch BMX055)	Only for NuMaker-IOT-M487	-
Mag	Magnetometer control (Bosch BMX055)	Only for NuMaker-IOT-M487	-

Table 2-3 Default Supported I/O Classes

3 HOW TO START NUMICROPY

The following uses the NuMaker-PFM-M487 board to show how to burn firmware into the NuMicro® MCU and how to update your python code.

3.1 Nuvoton Nu-Link Driver Download and Install

Please visit the Nuvoton software download website to download “Nu-Link_Command_Tool” file. When the Nu-Link command tool has been downloaded successfully, please unzip the file and execute the “NuMicro NuLink Command Tool.exe” to install the driver.

3.2 Hardware Setup Steps

1. Turn on ICE function switch pin 1, 2, 3 and 4.
2. Connect USB ICE to PC (Figure 3-1).

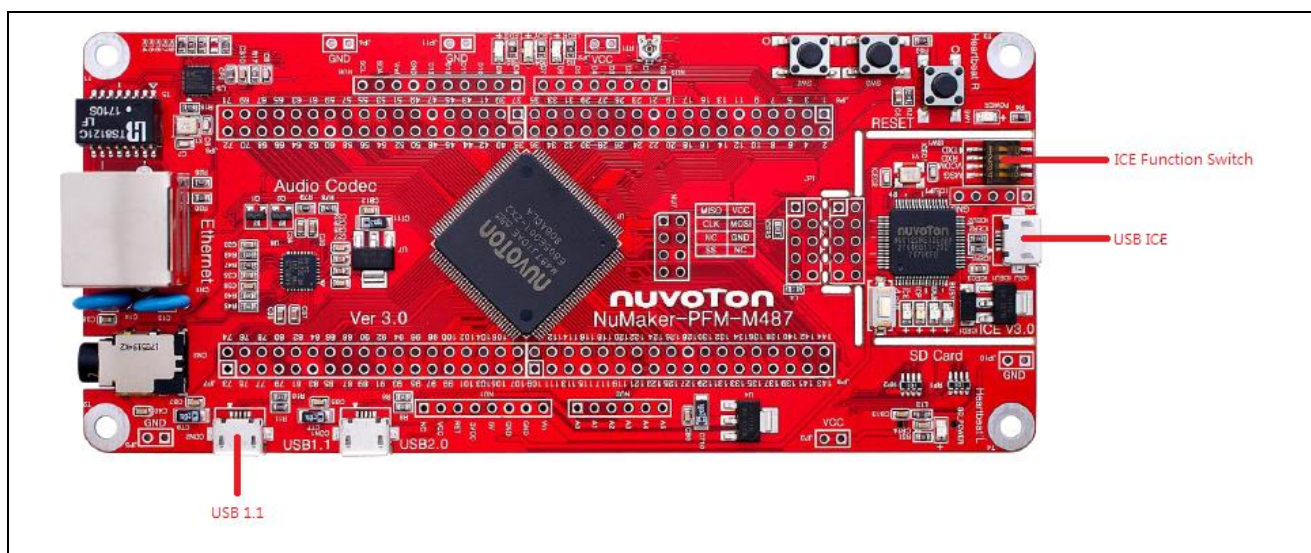


Figure 3-1 NuMaker-PFM-M487 Board

3.3 Burn Firmware

The Nu-Link-Me exports a “NuMicro MCU” disk, just Copy and Paste your firmware.bin into “NuMicro MCU” disk (Figure 3-2). After firmware burning, you can see MicroPython prompt on your terminal screen as Figure 2-1.

You can get prebuilt firmware from [NuMicroPy repository](https://github.com/OpenNuvoton/NuMicroPy)⁵.

⁵ <https://github.com/OpenNuvoton/NuMicroPy>

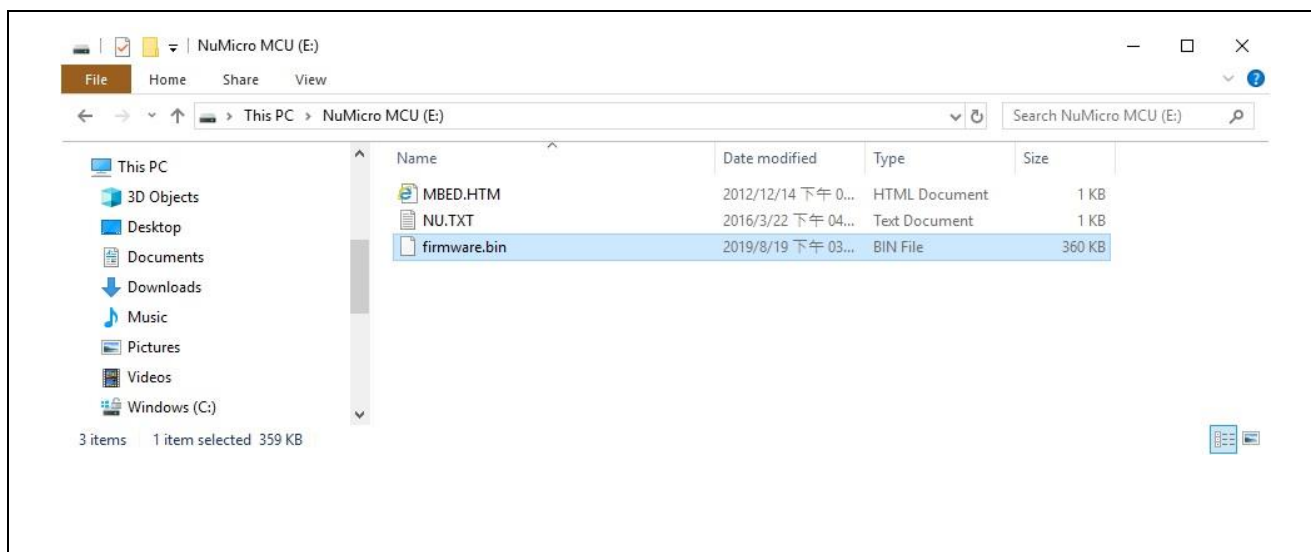


Figure 3-2 Copy and Paste Firmware

3.4 Python Code Update Steps

1. Connect USB1.1 to PC
2. Set up your terminal program (Figure 3-3 and Figure 3-4).

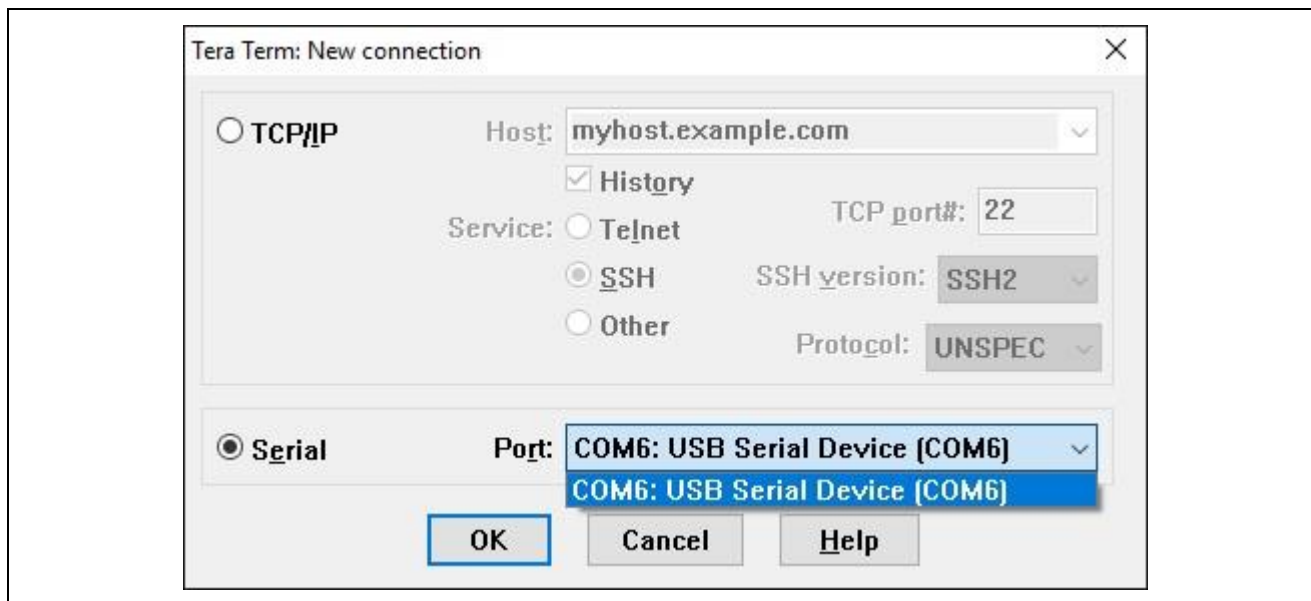


Figure 3-3 Create a Serial Connection

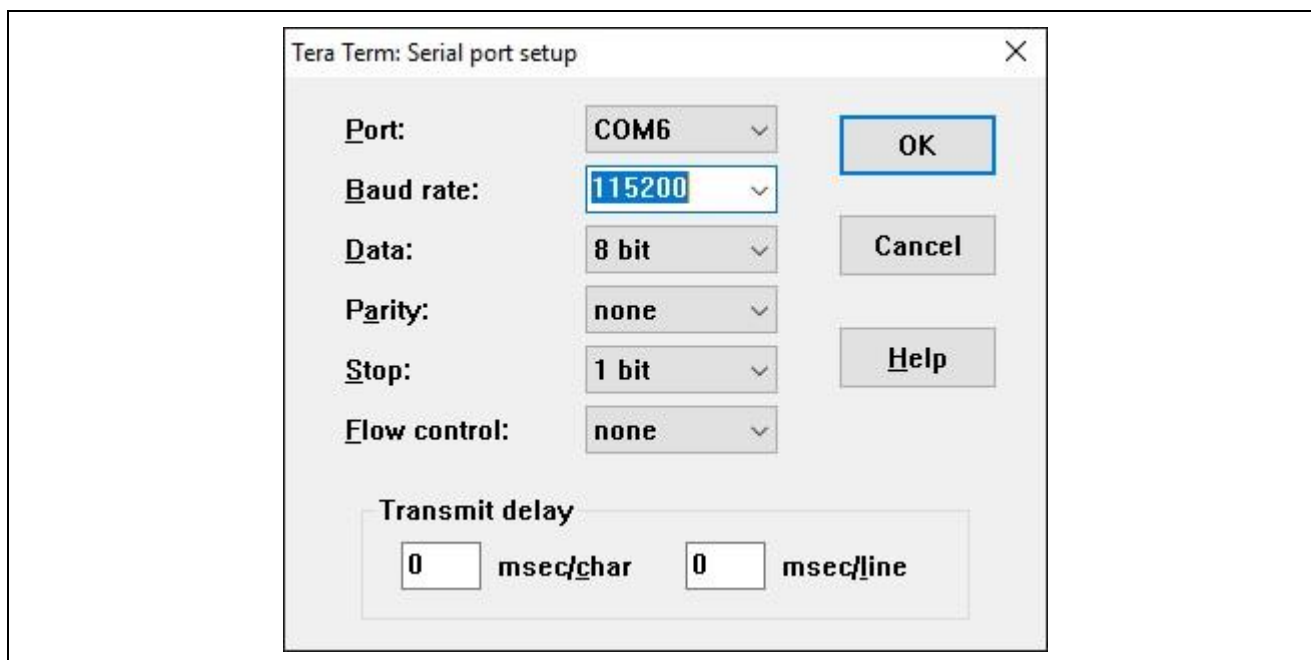


Figure 3-4 Serial Port Setup

3. Enable USB mass storage mode. The firmware will export a PYBFLASH disk (Figure 3-5).
 - Press RESET button.
 - NuMaker-M263KI: Press the RESET button.
4. Update your python code to boot.py or main.py (Figure 3-6).
5. For NuMaker-M263KI, unplugging the USB cable.
6. Press the RESET button (Figure 3-7).

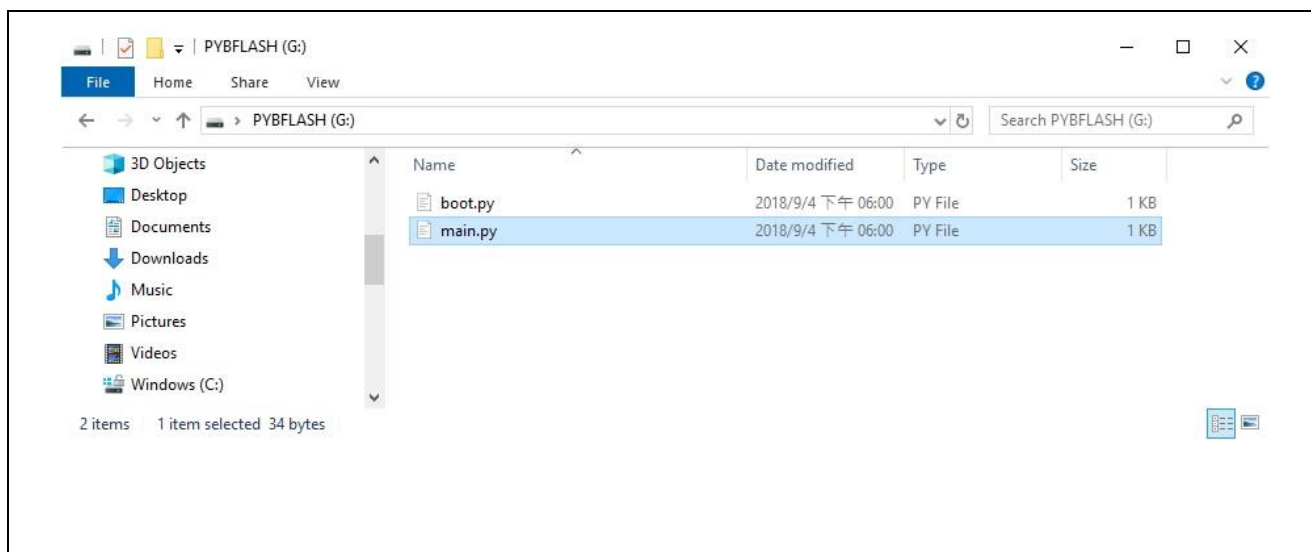


Figure 3-5 PYBFLASH Disk



```

main.py - Notepad
File Edit Format View Help
# main.py -- put your code here!
import pyb

def sw2_callback():
    print('sw2 press')

def sw3_callback():
    print('sw3 press')


sw2 = pyb.Switch('sw2')
sw3 = pyb.Switch('sw3')

sw2.callback(sw2_callback)
sw3.callback(sw3_callback)

while True:
    pyb.delay(1000)
    
```

Windows (CRLF) Ln 18, Col 1 100%

Figure 3-6 Write Switch Button Example Code

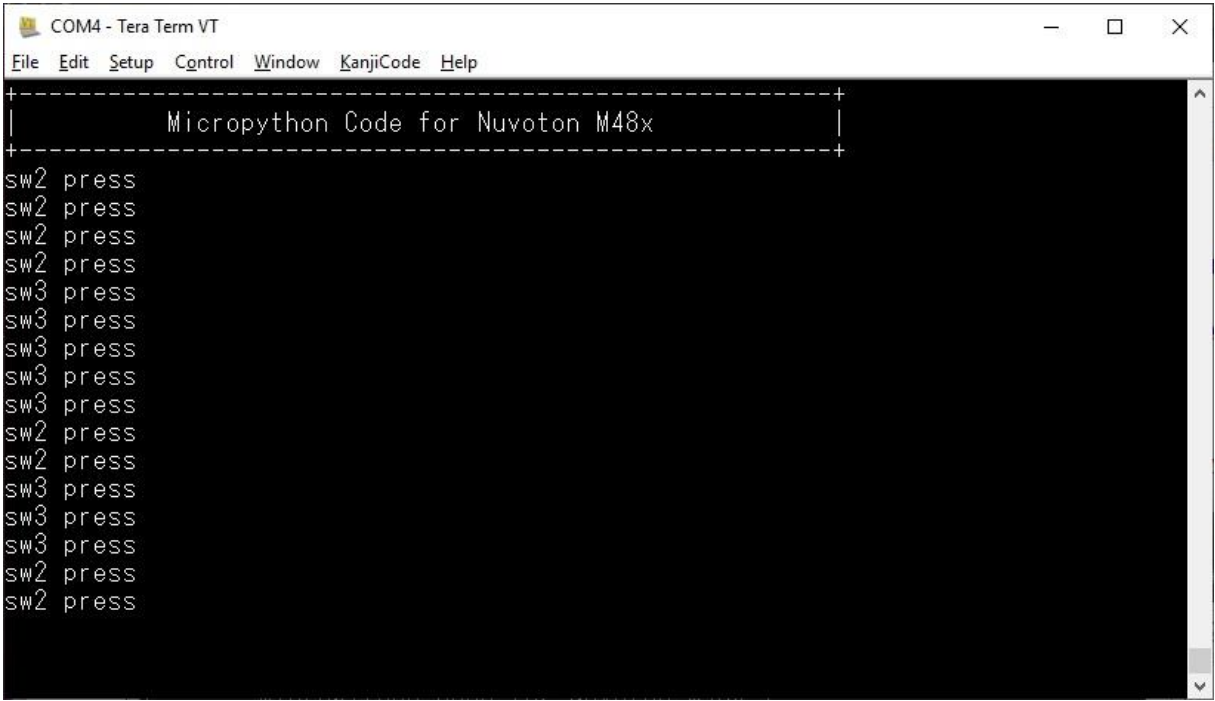

```

COM4 - Tera Term VT
File Edit Setup Control Window KanjiCode Help
+-----+
|          Micropython Code for Nuvoton M48x          |
+-----+
sw2 press
sw2 press
sw2 press
sw2 press
sw3 press
sw3 press
sw3 press
sw3 press
sw3 press
sw2 press
sw2 press
sw3 press
sw3 press
sw3 press
sw2 press
sw2 press
    
```

Figure 3-7 Execute Switch Button Example Code

4 HOW TO CUSTOMIZE MICROPYTHON FIRMWARE

The development of MicroPython firmware is in the Unix-like environment. The description below uses Ubuntu 16.04.

4.1 Packages Requirement

The following packages will need to be installed before you can compile and run MicroPython.

- build-essential
- libreadline-dev
- libffi-dev
- git
- pkg-config

To install these packages, use the following command.

```
1. sudo apt-get install build-essential libreadline-dev libffi-dev git pkg-config
```

4.2 Install GNU Arm Toolchain

Download GNU Arm toolchain linux 64-bit version 7-2018-q2 update from [Arm Developer](https://developer.arm.com/open-source/gnu-toolchain/gnu-rm/downloads)⁶ website.

Next, use the tar command to extract the file to your favor directory (ex. /usr/local)

```
1. mv gcc-arm-none-eabi-7-2018-q2-update-linux.tar.bz2 /usr/local/
2. cd /usr/local
3. tar -xjvf gcc-arm-none-eabi-7-2018-q2-update-linux.tar.bz2
```

Now, modify your PATH environment variable to access the bin directory of toolchain

4.3 Build Firmware

Get source code from GitHub.

```
1. git clone --recursive https://github.com/OpenNuvoton/NuMicroPy.git
2. cd patch
3. ./run_patch.sh
```

To build NuMaker-PFM-M487 firmware, use the following command.

```
4. cd ../M48x
5. make V=1
```

To build NuMaker-IOT-M487 firmware, use the following command.

```
4. cd ../M48x
5. make BOARD=NuMaker-IOT-M487 V=1
```

To build NuMaker-M263KI firmware, use the following command.

```
4. cd ../M26x
5. make V=1
```

4.4 Enable/Disable Module

Default modules support list as Table 2-2. You can enable/disable the built-in modules of MicroPython by modifying the options of mpconfigport.h. It should be noted that some options may have dependencies, which may cause compiling failure. Below is part of M48x/mpconfigport.h.

```
1. #include <stdint.h>
2.
```

⁶ <https://developer.arm.com/open-source/gnu-toolchain/gnu-rm/downloads>

```

3. #include "mpconfigboard.h"
4. #include "mpconfigboard_common.h"
5. #include "NuMicro.h"
6. // options to control how MicroPython is built
7.
8. // You can disable the built-in MicroPython compiler by setting the following
9. // config option to 0. If you do this then you won't get a REPL prompt, but you
10. // will still be able to execute pre-compiled scripts, compiled with mpy-cross.
11. #define MICROPY_ENABLE_COMPILER (1)
12.
13. #define MICROPY_QSTR_BYTES_IN_HASH (1)
14. #define MICROPY_QSTR_EXTRA_POOL mp_qstr_frozen_const_pool
15. #define MICROPY_ALLOC_PATH_MAX (256)
16. #define MICROPY_ALLOC_PARSE_CHUNK_INIT (16)
17. #define MICROPY_EMIT_X64 (0)
18. #define MICROPY_EMIT_THUMB (0)
19. #define MICROPY_EMIT_INLINE_THUMB (0)
20. #define MICROPY_COMP_MODULE_CONST (0)
21. #define MICROPY_COMP_CONST (0)
22. #define MICROPY_COMP_DOUBLE_TUPLE_ASSIGN (0)
23. #define MICROPY_COMP_TRIPLE_TUPLE_ASSIGN (0)
24. #define MICROPY_MEM_STATS (0)
25. #define MICROPY_DEBUG_PRINTERS (0)
26. #define MICROPY_GC_ALLOC_THRESHOLD (0)
27. #define MICROPY_REPL_EVENT_DRIVEN (0)
28. #define MICROPY_HELPER_LEXER_UNIX (0)
29. #define MICROPY_ENABLE_SOURCE_LINE (0)
30. #define MICROPY_ENABLE_DOC_STRING (0)
31. #define MICROPY_ERROR_REPORTING (MICROPY_ERROR_REPORTING_TERSE)
32. #define MICROPY_BUILTIN_METHOD_CHECK_SELF_ARG (0)
33. #define MICROPY_PY_ASYNC_AWAIT (0)
34. #define MICROPY_PY_FILE__ (0)
35. #define MICROPY_PY_GC (1)
36. #define MICROPY_PY_ARRAY (1)
37. #define MICROPY_PY_ATTRTUPLE (1)
38. #define MICROPY_PY_COLLECTIONS (1)
39. #define MICROPY_PY_COLLECTIONS_DEQUE (1)
40. #define MICROPY_PY_COLLECTIONS_ORDEREDDICT (1)
41. #define MICROPY_PY_MATH (1)
42. #define MICROPY_PY_CMATH (1)
43. #define MICROPY_PY_IO (1)
44. #define MICROPY_PY_IO_FILEIO (1)
45. #define MICROPY_PY_STRUCT (1)
46. // #define MICROPY_PY_SYS (0)
47. #define MICROPY_PY_SYS_MAXSIZE (1)
48. #define MICROPY_PY_SYS_EXIT (1)
49. #define MICROPY_PY_SYS_STDFILES (1)
50. #define MICROPY_PY_SYS_STDIO_BUFFER (1)
51. #ifndef MICROPY_PY_SYS_PLATFORM // let boards override it if they want
52. #define MICROPY_PY_SYS_PLATFORM "pyboard"
53. #endif
54.
55. #define MICROPY_MODULE_FROZEN_MPY (1)
56. #define MICROPY_CPYTHON_COMPAT (0)
57. #define MICROPY_LONGINT_IMPL (MICROPY_LONGINT_IMPL_NONE)
58. #define MICROPY_FLOAT_IMPL (MICROPY_FLOAT_IMPL_FLOAT)
59. #define MICROPY_PY_UERRNO (1)
60.
61. // control over Python builtins
62. #define MICROPY_PY_BUILTINS_BYTEARRAY (1)
63. #define MICROPY_PY_BUILTINS_MEMORYVIEW (1)
64. #define MICROPY_PY_BUILTINS_ENUMERATE (0)

```



```

65. #define MICROPY_PY_BUILTINS_FILTER (0)
66. #define MICROPY_PY_BUILTINS_FROZENSET (0)
67. #define MICROPY_PY_BUILTINS_REVERSED (0)
68. #define MICROPY_PY_BUILTINS_SET (0)
69. #define MICROPY_PY_BUILTINS_SLICE (0)
70. #define MICROPY_PY_BUILTINS_PROPERTY (0)
71. #define MICROPY_PY_BUILTINS_MIN_MAX (0)
72.
73.
74.
75. // Python internal features
76. #define MICROPY_ENABLE_GC (1)
77. #define MICROPY_READER_VFS (1)
78. #define MICROPY_HELPER_REPL (1)

```

4.5 Enable/Disable I/O Class

The MicroPython defines I/O classes in pyb and machine modules. User can modify mpconfigboard.h to enable/disable I/O classes or modify the pin definitions for individual I/O class. The I/O class support is disabled if the definition of I/O pin is deleted. When modifying the individual I/O pin, it needs to be consistent with the pin alternatives function definition file (xxx_af.csv). Below are some contents of M48x/mpconfigboard.h and M48x/board/m487_af.csv.

- mpconfigboard.h

```

1. // I2C busses
2. #define MICROPY_HW_I2C0_SCL (pin_A5)
3. #define MICROPY_HW_I2C0_SDA (pin_A4)
4. #define MICROPY_HW_I2C1_SCL (pin_A3)
5. #define MICROPY_HW_I2C1_SDA (pin_A2)
6.
7.
8. // SPI busses
9. #define MICROPY_HW_SPI0_NSS (pin_A3) //D10
10. #define MICROPY_HW_SPI0_SCK (pin_A2) //D13
11. #define MICROPY_HW_SPI0_MISO (pin_A1) //D12
12. #define MICROPY_HW_SPI0_MOSI (pin_A0) //D11
13.
14. #define MICROPY_HW_SPI3_NSS (pin_C9) //D2
15. #define MICROPY_HW_SPI3_SCK (pin_C10) //D3
16. #define MICROPY_HW_SPI3_MISO (pin_B9) //A3
17. #define MICROPY_HW_SPI3_MOSI (pin_B8) //A2
18.
19. //ADC(using EADC pin to implement ADC class)
20. #define MICROPY_HW_EADC0_CH0 (pin_B0) //10
21. #define MICROPY_HW_EADC0_CH1 (pin_B1) // 9
22. #define MICROPY_HW_EADC0_CH2 (pin_B2) // 4
23. #define MICROPY_HW_EADC0_CH3 (pin_B3) // 3
24. // #define MICROPY_HW_EADC0_CH4 (pin_B0) //not implement yet
25. // #define MICROPY_HW_EADC0_CH5 (pin_B0) //not implement yet
26. #define MICROPY_HW_EADC0_CH6 (pin_B6) //144
27. #define MICROPY_HW_EADC0_CH7 (pin_B7) //143
28. #define MICROPY_HW_EADC0_CH8 (pin_B8) //142 //A2
29. #define MICROPY_HW_EADC0_CH9 (pin_B9) //141 //A3
30. // #define MICROPY_HW_EADC0_CH10 (pin_B0) //
31. // #define MICROPY_HW_EADC0_CH11 (pin_B0) //
32. // #define MICROPY_HW_EADC0_CH12 (pin_B0) //
33. // #define MICROPY_HW_EADC0_CH13 (pin_B0) //
34. // #define MICROPY_HW_EADC0_CH14 (pin_B0) //

```

- m487_af.csv

```

1. #Port,Pin,MFPL/MFPH,SPIM,,,,,,,,,,,,,EVENTOUT,

```

2. PortA, PA0, MFPL, SPIM0_MOSI, QSPI0_MOSI0, SPI0_MOSI, SD1_DAT0, SC0_CLK, UART0_RXD, UART1_nRTS, I2C2_SDA, BPWM0_CH0, EPWM0_CH5, DAC0_ST, EVENTOUT,
3. PortA, PA1, MFPL, SPIM0_MISO, QSPI0_MISO0, SPI0_MISO, SD1_DAT1, SC0_DAT, UART0_TXD, UART1_nCTS, I2C2_SCL, BPWM0_CH1, EPWM0_CH4, DAC1_ST, EVENTOUT,
4. PortA, PA2, MFPL, SPIM0_CLK, QSPI0_CLK, SPI0_CLK, SD1_DAT2, SC0_RST, UART4_RXD, UART1_RXD, I2C1_SDA, BPWM0_CH2, EPWM0_CH3, EVENTOUT,
5. PortA, PA3, MFPL, SPIM0_SS, QSPI0_SS, SPI0_SS, SD1_DAT3, SC0_PWR, UART4_TXD, UART1_TXD, I2C1_SCL, BPWM0_CH3, EPWM0_CH2, QEIO_B, EVENTOUT,
6. PortA, PA4, MFPL, SPIM0_D3, QSPI0_MOSI1, SPI0_I2SMCLK, SD1_CLK, SC0_nCD, UART0_nRTS, UART5_RXD, I2C0_SDA, CAN0_RXD, BPWM0_CH4, EPWM0_CH1, QEIO_A, EVENTOUT,
7. PortA, PA5, MFPL, SPIM0_D2, QSPI0_MISO1, SPI1_I2SMCLK, SD1_CMD, SC2_nCD, UART0_nCTS, UART5_TXD, I2C0_SCL, CAN0_TXD, BPWM0_CH5, EPWM0_CH0, QEIO_INDEX, EVENTOUT,
- 8.
9. PortB, PB0, MFPL, SPI0_I2SMCLK, SD0_CMD, UART2_RXD, I2C1_SDA, EPWM0_CH5, EPWM1_CH5, EPWM0_BRAKE1, OPA0_P, EBI0_ADR9, EADC0_CH0, EVENTOUT,
10. PortB, PB1, MFPL, EADC0_CH1, OPA0_N, EBI0_ADR8, SD0_CLK, EMAC0_RMII_RXERR, SPI1_I2SMCLK, SPI3_I2SMCLK, UART2_TXD, USCI1_CLK, I2C1_SCL, I2S0_LRCK, EPWM0_CH4, EPWM1_CH4, EPWM0_BRAKE0, EVENTOUT,

5 I/O CLASS QUICK REFERENCE

The MicroPython provides the [document](#)⁷ to describe how to access MCU's I/O by python language, and, has [description](#)⁸ to introduce how to add a module written in C. This document only provides the NuMicro® MCU's I/O quick reference for you reference.

5.1 LAN Class

The NuMicroPy implements a LAN class to network module according to the network class definitions of MicroPython. The LAN class is based on lwIP TCP/IP stack and associated with EMAC hardware.

Once the network is established, the usocket module can be used to create and use TCP/UDP sockets as usual.

```
1. import network
2.
3. lan = network.LAN()      # create lan interface
4. lan.isconnected()        # check if the lan is connected and up
5. lan.active(True)         # Activate the lan interface
6. lan.ifconfig(('192.168.0.4', '255.255.255.0', '192.168.0.1', '8.8.8.8')) #set IP
   address, subnet mask, gateway and DNS
7. lan.ifconfig()           # get IP address, subnet mask, gateway and DNS
8. lan.ifconfig('dhcp')     # set dynamic IP
```

5.2 WLAN Class

The WLAN class is based on [ESP_AT_Lib](#)⁹ stack and associated with [ESP8266](#)¹⁰ wireless module.

Once the network is established, the usocket module can be used to create and use TCP/UDP sockets as usual.

```
1. import network
2.
3. wlan = network.WLAN()    # create wlan interface
4. wlan.isconnected()       # check if the wlan is connected and up
5. wlan.connect(ssid, key)  # associate with wireless access point
6. wlan.ifconfig()          # get IP address, subnet mask, gateway and DNS
7. wlan.scan()              # scan wireless access point
8. wlan.disconnect()        # disassociate with wireless access point
```

5.3 Pin Class

All board pins are predefined as pyb.Pin.board.name. CPU pins corresponding to the board pins are available as pyb.Pin.cpu.Name. For example, on the NuMaker-PFM-M487 board, pyb.Pin.board.D0 corresponds to pyb.Pin.cpu.B2. Table 5-1 is the board pin name and CPU pin name mapping table.

Board	Board Pin Name	CPU Pin Name
NuMaker-PFM-M487	D0	B2

⁷ <http://docs.micropython.org/en/latest/library/index.html>

⁸ <https://micropython-dev-docs.readthedocs.io/en/latest/adding-module.html>

⁹ https://majerle.eu/documentation/esp_at/html/index.html

¹⁰ <https://www.espressif.com/en/products/hardware/esp8266ex/overview>

NuMaker-IOT-M487	D1	B3
	D2	C9
	D3	C10
	D4	C11
	D5	C12
	D6	E4
	D7	E5
	D8	A5
	D9	A4
	D10	A3
	D11	A0
	D12	A1
	D13	A2
	A0	B6
	A1	B7
	A2	B8
	A3	B9
	A4	B0
	A5	B1
	SW2	G15: NuMaker-PFM-M487
		F11: NuMaker-IOT-M487
	SW3	F11: NuMaker-PFM-M487
		G5: NuMaker-IOT-M487
	LEDR	H0
	LEDY	H1
	LEDG	H2

NuMaker-M263KI	D0	B2
	D1	B3
	D2	C4
	D3	C5
	D4	C3
	D5	C2
	D6	A7
	D7	A6
	D8	A5
	D9	A4
	D10	A3
	D11	A0
	D12	A1
	D13	A2
	A0	B7
	A1	B6
	A2	B5
	A3	B4
	A4	B0
	A5	B1
	LEDR	B10

Table 5-1 Board Pin Name and CPU Pin Name Mapping

```

1. from pyb import Pin
2.
3. p_d0 = Pin(Pin.board.D0, Pin.OUT)    # create output pin on GPIO B2
4. p_d0.value(1)                        # set pin to on/high
5.
6. p_d1 = Pin(Pin.board.D1, Pin.IN)     # create input pin on GPIO B3
7. print(p_d1.value())                  # get value, 0 or 1
8.
9. Pin.board.D2.af_list()                # list available alternate functions on GPIO C9
10.
11. def sw2_callback(pin):               # define sw2 (switch button 2) callback

```

```
12. print(pin)
13.
14. sw2 = Pin.board.SW2
15. sw2.irq(handler=sw2_callback, trigger=Pin.IRQ_RISING) # configure sw2 to interrupt
```

Pin(id, mode, [pull=Pin.PUL_NONE, alt=-1])

- mode can be one of:
 - Pin.IN – configure the pin for input
 - Pin.OUT – configure the pin for output, with push-pull control
 - Pin.OPEN_DRAIN – configure the pin for output, with open-drain control
 - Pin.QUASI – configure the pin for output, with quasi control
 - Pin.ALT – configure the pin for alternate function, push-pull
 - Pin.ALT_OPEN_DRAIN – configure the pin for alternate function, open-drain
- pull can be one of:
 - Pin.PULL_NONE – no pull up or down resistors
 - Pin.PULL_UP – enable the pull-up resistor
 - Pin.PULL – enable the pull-down resistor
- When the mode is Pin.ALT or Pin.ALT_OPEN_DRAIN, alt can be the name of one of the alternate functions associated with a pin. You can use *af_list()* to query available alternate functions for this pin.

pin.irq([handler=None, trigger=Pin.IRQ_FALLING|Pin.IRQ_RISING])

Configure GPIO pins to interrupt on external. If a falling or rising edge seen on this pin, the handler will be called.

5.4 ADC Class

The NuMicroPy uses EADC0 to implement ADC class. Table 5-2 is ADC channel support list by the board.

Board	Channel Number	Board Pin Name	CPU Pin Name
NuMaker-PFM-M487 NuMaker-IOT-M487	CH0	A4	B0
	CH1	A5	B1
	CH2	D0	B2
	CH3	D1	B3
	CH6	A0	B6
	CH7	A1	B7
	CH8	A2	B8
	CH9	A3	B9
NuMaker-M263KI	CH0	A4	B0
	CH1	A5	B1
	CH2	D0	B2
	CH3	D1	B3

	CH6	A3	B4
	CH7	A2	B5
	CH8	A1	B6
	CH9	A0	B7

Table 5-2 ADC Support List

```

1. from pyb import ADC, Pin
2.
3. adc0 = ADC(Pin.board.A4)           # create an analog object from a pin
4. val = adc0.read()                 # read an analog value
5.
6. adc_all = ADCALL(12, 0x00003)      # 12 bit resolution, internal channels 0 and 1
7. val = adc.read_channel(1)          # read analog value of channel 1
8. val = adc.read_core_temp()         # read MCU's temperature
9. val = adc.read_core_vbat()         # read MCU's VBAT

```

5.5 SPI Class

In the MicroPython, there are two SPI drivers. One is implemented in software and works on all pins, and is accessed via the machine.SPI class. The other is implemented in hardware and accessed via the pyb.SPI class. Table 5-3 is hardware SPI support list by the board.

Board	SPI Pin Name	Board Pin Name	CPU Pin Name
NuMaker-PFM-M487 NuMaker-IOT-M487	SPI0_NSS	D10	A3
	SPI0_SCK	D13	A2
	SPI0_MISO	D12	A1
	SPI0_MOSI	D11	A0
	SPI3_NSS	D2	C9
	SPI3_SCK	D3	C10
	SPI3_MISO	A3	B9
	SPI3_MOSI	A2	B8
NuMaker-M263KI	SPI0_NSS	D10	A3
	SPI0_SCK	D13	A2
	SPI0_MISO	D12	A1
	SPI0_MOSI	D11	A0
	SPI1_NSS	SDA	C0
	SPI1_SCK	SCL	C1

	SPI1_MISO	D4	C3
	SPI1_MOSI	D5	C2

Table 5-3 SPI Support List

```

1. from pyb import SPI
2.
3. # construct an SPI bus on the SPI0
4. # mode is Master
5. # polarity is the idle state of SCK
6. # phase=0 means sample on the first edge of SCK, phase=1 means the second
7. spi = SPI(0, SPI.MASTER, baudrate=100000, polarity=1, phase=0)
8.
9. spi.read(10)          # read 10 bytes on MISO
10. spi.read(10, 0xff)    # read 10 bytes while outputting 0xff on MOSI
11.
12. buf = bytearray(50)    # create a buffer
13. spi.readinto(buf)      # read into the given buffer (reads 50 bytes in this case)
14. spi.readinto(buf, 0xff) # read into the given buffer and output 0xff on MOSI
15.
16. spi.write(b'12345')    # write 5 bytes on MOSI
17.
18. buf = bytearray(4)     # create a buffer
19. spi.write_readinto(b'1234', buf) # write 4 bytes to MOSI and read from MISO into the
    buffer

```

SPI(bus, mode, [baudrate=328125, polarity=1, phase=0, bits=8, firstbit=SPI.MSB])

- mode must be either SPI.MASTER or SPI.SLAVE
- baudrate is the SCK clock rate (only sensible for master)
- polarity can be 0 or 1, and is the level the idle clock line sits at.
- phase can be 0 or 1 to sample data on the first or second clock edge respectively.
- bits can be 8 or 16 or 32
- firstbit can be SPI.MSB or SPI.LSB

5.6 I²C Class

Table 5-4 is hardware I²C support list by the board.

Board	I2C Pin Name	Board Pin Name	CPU Pin Name
NuMaker-PFM-M487 NuMaker-IOT-M487	I2C0_SCL	D8	A5
	I2C0_SDA	D9	A4
	I2C1_SCL	D10	A3
	I2C1_SDA	D13	A2
NuMaker-M263KI	I2C0_SCL	SCL	C1
	I2C0_SDA	SDA	C0
	I2C1_SCL	A5	B1
	I2C1_SDA	A4	B0
	I2C2_SCL	D12	A1

	I2C2_SDA	D11	A0
--	----------	-----	----

Table 5-4 I²C Support List

```

1. from pyb import I2C
2.
3. i2c = I2C(1, I2C.MASTER)      # create and initiate I2C1 as a master
4. i2c.scan()                   # scan for slaves on the bus, returning a list of valid addresses.
    Only valid when in master mode.
5. i2c.is_ready(0x42)           # check if slave 0x42 is ready
6. i2c.send('123', 0x42)       # send 3 bytes to slave with address 0x42
7. data = bytearray(3)         # create a buffer
8. i2c.recv(data)              # receive 3 bytes, writing them into data
9. i2c.deinit()                # turn off the peripheral

```

I2C(bus, mode, [addr=-0x12, baudrate=100000, gencall=False])

- mode must be either I2C.MASTER or I2C.SLAVE
- addr is the 7-bit address (only sensible for a slave)
- baudrate is the SCL clock rate (only sensible for a master)
- gencall is whether to support general call mode.

5.7 RTC Class

```

1. from pyb import RTC
2.
3. rtc = RTC()
4. rtc.datetime((2017, 8, 23, 1, 12, 48, 0, 0)) # set a specific date and time
5. rtc.datetime() # get date and time

```

5.8 UART Class

Table 5-5 is UART support list by the board.

Board	UART Pin Name	Board Pin Name	CPU Pin Name
NuMaker-PFM-M487 NuMaker-IOT-M487	UART1_RXD	D0	B2
	UART1_TXD	D1	B3
	UART1_CTS	D12	A1
	UART1_RTS	D11	A0
	UART5_RXD	D9	A4
	UART5_TXD	D8	A5
	UART5_CTS	D0	B2
	UART5_RTS	D1	B3
NuMaker-M263KI	UART1_RXD	D0	B2
	UART1_TXD	D1	B3
	UART1_CTS	D12	A1

	UART1_RTS	D11	A0
	UART2_RXD	A4	B0
	UART2_TXD	A5	B1
	UART2_CTS	D5	C2
	UART2_RTS	D4	C3
	UART5_RXD	D9	A4
	UART5_TXD	D8	A5
	UART5_CTS	D0	B2
	UART5_RTS	D1	B3

Table 5-5 UART Support List

```

1. from pyb import UART
2.
3. uart = UART(1, 9600, bits=8, parity=None, stop=1) # initiate UART1
4. uart.read(10) # read 10 characters, returns a bytes object
5. uart.read() # read all available characters
6. uart.readline() # read a line
7. uart.readinto(buf) # read and store into the given buffer
8. uart.write('abc') # write the 3 characters
9. uart.readchar() # read 1 character and returns it as an integer
10. uart.writechar(42) # write 1 character
11. uart.any() # returns the number of characters waiting
12. uart.deinit() # turn off the UART bus

```

UART(bus, baudrate, [bits=8, parity=None, stop=1, timeout=2000, flow=0, timeout_char=0, read_buf_len=64])

- baudrate is the clock rate.
- bits is the number of bits per character, 5, 6, 7 or 8.
- parity is the parity, None, 0(even) or 1(odd).
- stop is the number of stop bits, 1 or 2.
- flow sets the flow control type. Can be 0, UART.RTS, UART.CTS or UART.RTS | UART.CTS.
- timeout is the timeout in milliseconds to wait for writing/reading the first character.
- timeout_char is the timeout in milliseconds to wait between characters while writing or reading.
- read_buf_len is the character length of the read buffer(0 to disable).

5.9 CAN Class

Table 5-6 is CAN support list by the board.

Board	CAN Pin Name	Board Pin Name	CPU Pin Name
NuMaker-PFM-M487	CAN0_RXD	D9	A4
NuMaker-IOT-M487	CAN0_TXD	D8	A5
	CAN1_RXD	D2	C9

	CAN1_TXD	D3	C10
NuMaker-M263KI	CAN0_RXD	D9	A4
	CAN0_TXD	D8	A5

Table 5-6 CAN Support List

```

1. from pyb import CAN
2.
3. can = CAN(1, mode=CAN.NORMAL, extframe=True, baudrate=500000) # create and initiate
   an object on CAN1
4. can.setfilter(id=0x55, fifo=10, mask=0xf0) # set a filter to receive messages with
   id=0x55 and mask is 0xf0 on FIFO 10
5. can.send('message!', id=0x50) # send a message with id 0x50
6. can.recv(fifo=10) # receive message on FIFO 10
7.
8. buf = bytearray(8)
9. data_lst = [0, 0, 0, memoryview(buf)]
10.
11. def can_cb1(bus, reason, fifo_num):
12.     if reason == CAN.CB_REASON_RX:
13.         bus.recv(fifo = fifo_num, list = data_lst)
14.         print(data_lst)
15.     if reason == CAN.CB_REASON_ERROR_WARNING:
16.         print('Error Warning')
17.     if reason == CAN.CB_REASON_ERROR_PASSIVE:
18.         print('Error Passive')
19.     if reason == CB_REASON_ERROR_BUS_OFF:
20.         print('Bus off')
21.
22. can.rxcallback(can_cb1) # register a callback when a message is accepted into FIFO

```

CAN(bus, [mode=CAN.NORMAL, extframe=True, baudrate=500000])

- mode is one of: CAN.NORMAL, CAN.LOOPBACK, CAN.SILENT and CAN.SILENT_LOOPBACK.
- If extframe is True then the bus uses extended identifiers in the frames.
- baudrate is the clock rate

can.setfilter(id=0, fifo=0, mask=0)

- id is the identifier of the frame that will be received.
- fifo is the FIFO number, from 0 to 31.
- mask is the identifier mask used for a acceptance filtering.

can.recv(fifo=0, list=None, timeout=5000)

- fifo is an integer, which is the FIFO to receive on.
- list is an option list object to be used as the return value.
- timeout is the timeout in milliseconds to wait for receive.

Return value: A tuple containing four fields.

- The id of the message.
- A boolean that indicates if the message is an RTP message.
- Always 0
- An array containing the data

5.10 USB HID Class

The USB_HID class allows creation of an object representing the USB 1.1 Human Interface Device.

For NuMaker-M263KI, please confirm that the USB cable is unplugged during system booting (prevent system entering USB mass storage mode at the beginning).

```

1. import pyb

```

```

2.
3. pyb.usb_mode('HID') # set USB device mode to HID
4. hid = pyb.USB_HID() # create a new USB HID object
5.
6. #prepare multiple of 64 bytes buffer for sending or receiving, beacuse each HID
   transaction is 64 bytes
7. send_pakcet_size = hid.send_packet_size()
8. send_buf = bytearray(send_pakcet_size)
9. recv_pakcet_size = hid.recv_packet_size()
10. recv_buf = bytearray(recv_pakcet_size)
11.
12. send_buf[0] = 1
13. hid.send(send_buf) # send data on the bus
14. hid.recv(recv_buf) # receive data on the bus

```

5.11 USB VCP Class

The USB_VCP class allows creation of an object representing the USB 1.1 virtual com port. It can be used to read and write data over USB to the connected host.

For NuMaker-M263KI, please confirm that the USB cable is unplugged during system booting (prevent system entering USB mass storage mode at the beginning).

```

1. import pyb
2.
3. pyb.usb_mode('VCP') # set USB device mode to VCP
4. vcp = pyb.USB_VCP() # create a new USB VCP object
5.
6. # prepare sending or receiving buffer
7. send_pakcet_size = 64
8. send_buf = bytearray(send_pakcet_size)
9. recv_pakcet_size = 64
10. recv_buf = bytearray(recv_pakcet_size)
11.
12. vcp.isconnected() # return True if USB is connected as a serial device
13. vcp.any() # return True if any characters waiting
14. vcp.read(64) # read at most 64 from the serial device
15. vcp.readline() # read a whole line from the serial device
16. vcp.readinto(recv_buf) # read bytes from the serial device and store them into
   buffer
17. vcp.recv(recv_buf, timeout = 100) # receive data with timeout
18. vcp.write(send_buf) # write the bytes from buffer to the serial device
19. vcp.send(send_buf) # send data over the USB VCP

```

5.12 LED Class

The LED object controls an individual LED. Table 5-7 is LED support list by the board.

Board	LED Name	Board Pin Name	CPU Pin Name
NuMaker-PFM-M487 NuMaker-IOT-M487	led0	LEDR	H0
	led1	LEDY	H1
	led2	LEDG	H2
NuMaker-M263KI	led0	LEDR	B10

Table 5-7 LED Support List

```

1. from pyb import LED
2.

```

```
3. led = LED('led0')      # create an LED object
4. led.off()              # turn the LED off
5. led.on()               # turn the LED on
6. led.toggle()           # toggle the LED between on and off
```

5.13 Switch Class

A Switch object is used to control a push-button switch. Table 5-8 is switch support list by the board.

Board	Switch Name	Board Pin Name	CPU Pin Name
NuMaker-PFM-M487	sw2	SW2	G15
	sw3	SW3	F11
NuMaker-IOT-M487	sw2	SW2	F11
	sw3	SW3	G5

Table 5-8 Switch Support List

```
1. from pyb import Switch
2.
3. sw = Switch('sw2')      # create a switch object
4. sw.value()              # get state (True if pressed, False otherwise)
5. sw()                   # shorthand notation to get the switch state
6.
7. def sw2_callback():
8.     print('sw2 press')
9.
10. sw.callback(sw2_callback) # register a callback to be called when the switch is
    pressed down
11. sw.callback(None)       # remove the callback
```

5.14 Timer Class

Each timer consists of a counter that counts up at a certain rate. When the counter reaches the timer period it triggers an event, and the counter reset back to zero. By using the callback method, the timer event can call a Python function.

```
1. from pyb import Pin
2. from pyb import Timer
3.
4. def tick(timer):
5.     print(timer.counter())
6.
7. tim = Timer(3, freq = 2) # create a timer object using timer 3 and trigger at 2Hz
8. tim.callback(tick)      # set the function to be called when the timer triggers
9.
10. # configure timer to be a PWM, output compare, or input capture channel
11. chan = tim.channel(Timer.PWM, pin = Pin.board.D0, pulse_width_percent = 20)
12. chan.callback(tick)     # set the function to be called when the timer channel triggers
13.
14. chan.capture()          # get the capture associated with a input capture channel
15.
16. chan.compare(100)       # set compare value associated with a channel
17. chan.compare()          # get the compare value associated with a channel
18.
19. chan.pulse_width_percent(50) # set the pulse width percentage associated with a PWM
    channel
```

Board	PWM Pin Name	Board Pin Name	CPU Pin Name
NuMaker-PFM-M487 NuMaker-IOT-M487	BPWM0_CH0	D11	A0
	BPWM0_CH1	D12	A1
	BPWM0_CH2	D13	A2
		D6	E4
	BPWM0_CH3	D10	A3
		D7	E5
	BPWM0_CH4	D9	A4
	BPWM0_CH5	D8	A5
	BPWM1_CH2	A3	B9
	BPWM1_CH3	A2	B8
	BPWM1_CH4	A1	B7
	BPWM1_CH5	A0	B6
	EPWM0_CH0	D8	A5
	EPWM0_CH1	D9	A4
	EPWM0_CH2	D10	A3
		D1	B3
		D7	E5
	EPWM0_CH3	D13	A2
		D0	B2
		D6	E4
	EPWM0_CH4	D12	A1
		A5	B1
	EPWM0_CH5	D11	A0
		A4	B0
	EPWM1_CH0	D5	C12
	EPWM1_CH1	D4	C11
	EPWM1_CH2	D3	C10
	EPWM1_CH3	D2	C9
	EPWM1_CH4	A5	B1
		A1	B7
	EPWM1_CH5	A4	B0
		A0	B6

NuMaker-M263KI	BPWM0_CH0	D11	A0
	BPWM0_CH1	D12	A1
	BPWM0_CH2	D13	A2
	BPWM0_CH3	D10	A3
	BPWM0_CH4	D9	A4
	BPWM0_CH5	D8	A5
	BPWM1_CH2	D6	A7
	BPWM1_CH3	D7	A6
	BPWM1_CH4	A0	B7
	BPWM1_CH5	A1	B6
	EPWM0_CH0	D8	A5
		A2	B5
	EPWM0_CH1	D9	A4
		A3	B4
	EPWM0_CH2	D10	A3
		D1	B3
	EPWM0_CH3	D13	A2
		D0	B2
	EPWM0_CH4	D12	A1
		A5	B1
	EPWM0_CH5	B7	A0
		A4	B0
	EPWM1_CH0	D3	C5
	EPWM1_CH1	D2	C4
	EPWM1_CH2	D4	C3
	EPWM1_CH3	D5	C2
	EPWM1_CH4	D6	A7
		A5	B1
		A0	B7
		SCL	C1
	EPWM1_CH5	D7	A6
		A4	B0

		A1	B6
		SDA	C0

```
20. chan.pulse_width_percent() # get the pulse width percentage associated with a PWM channel
```

Timer(id, freq=0, [prescaler=-1, period=-1, mode=Timer.PERIODIC, callback=None])

- freq specifies the periodic frequency of timer.
- prescaler specifies the value to be loaded into the timer's prescale counter register.
- period specifies the value to be loaded into the timer's comparator register.
- mode specifies the timer's operation mode. It can be one of Timer.ONESHOT, Timer.PERIODIC or Timer.CONTINUOUS.
- callback specifies the function to be called when the timer triggers.

timer.channel(mode, pin=None, [callback=None, pulse_width_percent=50, polarity=-1])

- mode can be one of:
 - Timer.PWM: configure the timer in PWM mode.
 - Timer.OC_TOGGLE: the pin will be toggled when a compare match occurs.
 - Timer.IC: configure the timer in Input Capture mode.
- pin is a Pin object. If specified this will cause the alternate function of the indicated pin to be configured for this timer channel.
- callback specifies the function to be called when the timer channel triggers.

For Timer.PWM mode:

- pulse_width_percent determines the initial pulse width percentage to use.

For Timer.IC mode:

- polarity can be one of:
 - Timer.RISING: captures on rising edge.
 - Timer.FALLING: captures on falling edge.
 - Timer.BOTH: captures on both edge.

5.15 PWM Class

The NuMicroPy supports BPWM and EPWM for PWM class. Table 5-9 is PWM pin support list by the board.

Table 5-9 PWM Pin Support List

```
1. from pyb import PWM
2. from pyb import Pin
3.
4. def capture_cb(chan, reason):
5.     if reason == PWM.RISING:
6.         print('rising edge')
7.     elif reason == PWM.FALLING:
8.         print('falling edge')
9.     else:
10.        print('both edge')
11.
12.
13. bpwm1 = PWM(1, freq = 2) # create BPWM1 object
14. epwm0 = PWM(0, PWM.EPWM, freq = 8) #create EPWM0 object
15.
16. # configure bpwm 1 channel 4 to be a output channel. Board pin A1, CPU pin B7
17. bpwm1ch4 = bpwm1.channel(mode = PWM.OUTPUT, pulse_width_percent = 50, pin = Pin.board.A1)
18.
19. # configure epwm 0 channel 1 to be a capture channel. Board pin D9, CPU pin A4
20. epwm0ch1 = epwm0.channel(mode = PWM.CAPTURE, capture_edge = PWM.RISING, pin = Pin.board.D9, callback = capture_cb)
21.
```

```

22. bpwm1ch4.pulse_width_percent(50) # set the pulse width percentage associated with a
    PWM channel
23. bpwm1ch4.pulse_width_percent()   # get the pulse width percentage associated with a
    PWM channel
24.
25. epwm0ch1.capture() # get the capture data associated with a input capture channel
26. epwm0ch1.disable() # disable channel

```

PWM(id, type, freq=0)

- type can be on of:
 - PWM.BPWM: create a BPWM object
 - PWM.EPWM: create a EPWM object
- freq specifies the periodic frequency of PWM.

pwm.channel(mode =0, pin= None, [callback=None, pulse_width_percent=50, capture_edge=PWM.RISING, freq=0, complementary=False])

- mode can be on of:
 - PWM.OUTPUT: configure the channel to PWM output mode.
 - PWM.CAPTURE: configure the channel to input capture mode.
- pin is a Pin object. If specified this will cause the alternate function of the indicated pin to be configured for this PWM channel.

For capture mode:

- callback specifies the function to be called when the PWM capture channel triggered by rising or falling edge.
- capture_edge can be one of:
 - PWM.RISING: captures on rising edge.
 - PWM.FALLING: captures on falling edge.
 - PWM.RISING_FALLING: captures on both edge.

For output mode:

- pulse_width_percent determines the initial pulse width percentage to use for PWM output channel.

For EPWM channel:

- freq specifies the periodic frequency of EPWM individual channel.
- complementary enable/disable EPWM channel complementary mode.

5.16 WDT Class

```

1. from pyb import WDT
2.
3. wdt = WDT(timeout = 1000) # start watchdog timer
4. wdt.feed() # reset watchdog timer counter

```

WDT(timeout=5000)

- timeout specifies the time-out interval and the interval is 2~ 26000ms

5.17 Accel Class

```

1. from pyb import Accel
2.
3. a = Accel(range = Accel.RANGE_4G) # create and return an accelerometer object
4. ax = a.x() # get x axis value
5. ay = a.y() # get y axis value
6. az = a.z() # get z axis value
7. a_reg = a.read(0x00) # read register value
8. a.write(0x0F, 0x08) # write register value

```

Accel([range=Accel.RANGE_8G])

- range can be one of RANGE_2G, RANGE_4G, RANGE_8G and RANGE_16G

5.18 Gyro Class

```

1. from pyb import Gyro

```

```

2.
3. g = Gyro(range = Gyro.RANGE_2000DPS) # create and return a gyroscope object
4. gx = g.x() # get x axis value
5. gy = g.y() # get y axis value
6. gz = g.z() # get z axis value
7. g_reg = g.read(0x00) # read register value
8. g.write(0x0F, 0x08) # write register value

```

Gyro([range=Gyro.RANGE_2000DPS])

- range can be one of RANGE_125DPS, RANGE_250DPS, RANGE_500DPS, RANGE_1000DPS and RANGE_2000DPS

5.19 Mag Class

```

1. from pyb import Mag
2.
3. m = Mag() # create and return a magnetometer object
4. mx = m.x() # get x axis value
5. my = m.y() # get y axis value
6. mz = m.z() # get z axis value
7. m_reg = m.read(0x00) # read register value
8. m.write(0x0F, 0x08) # write register value

```


6 LITTLEVGL BINDING

[LittlevGL](#)¹¹(lvgl) is a high-level GUI library. It can be binding with MicroPython provides an automatically generated MicroPython module with classes and functions that allow the user access the lvgl module.

6.1 How to Run LittlevGL

- 1. Hardware requirement: NuMaker-PFM-M487 + M487 Advance Ver 4.0



Figure 6-1 NuMaker-PFM-M487 + M487 Advance

Pin connection

Board	SPIM	CPU Pin Name
NuMaker-PFM-M487	CLK	C2
	SS	C3
	MISO	C1
	MOSI	C0

Table 6-1 SPIM interface

Board	ILI9341	CPU Pin Name
NuMaker-PFM-M487	EBI AD0~5	G9~14
	EBI AD6~7	D8~9
	EBI AD8~9	E14~15

¹¹ <https://littlevgl.com/>

	EBI AD10~11	E1~0
	EBI AD12~15	H8~11
	EBI RD	E4
	EBI WR	E5
	EBI CS0	D14
	LCD RS	H3
	LCD RST	B6
	LCD Backlight	B7

Table 6-2 ILI9341 interface

Board	Touch ADC	CPU Pin Name
NuMaker-PFM-M487	XR	B9
	YD	H5
	XL	H4
	YU	B8

Table 6-3 Touch ADC interface

2. Burn firmware.bin (build/NuMaker-PFM-M487/WithLittlevGL/) to APARM and firmware_spim.bin (build/NuMaker-PFM-M487/WithLittlevGL/) to SPI flash.
 - a. Execute [NuMicro ICP programming tool](#)¹² and connect to target chip (M480 Series).

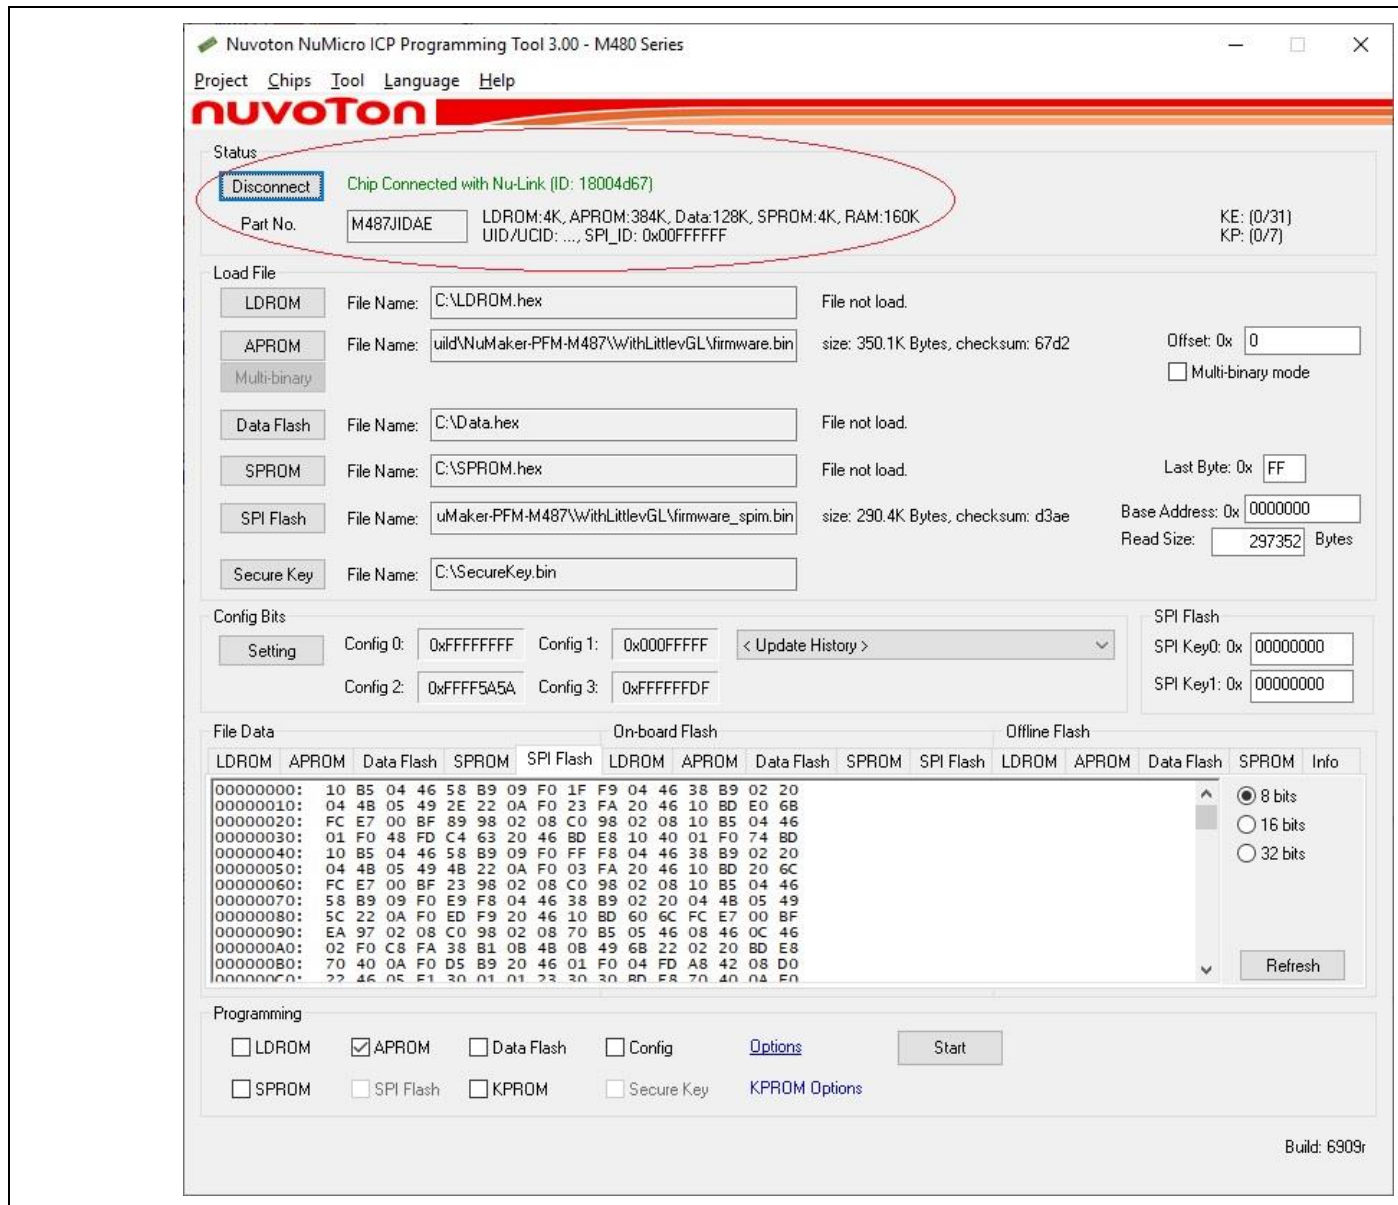


Figure 6-2 Execute ICP tool

¹² https://www.nuvoton.com/hq/support/tool-and-software/software/programmer/?__locale=en

- b. Check SPIM multi-function pin select to PC2/PC3/PC1/PC0

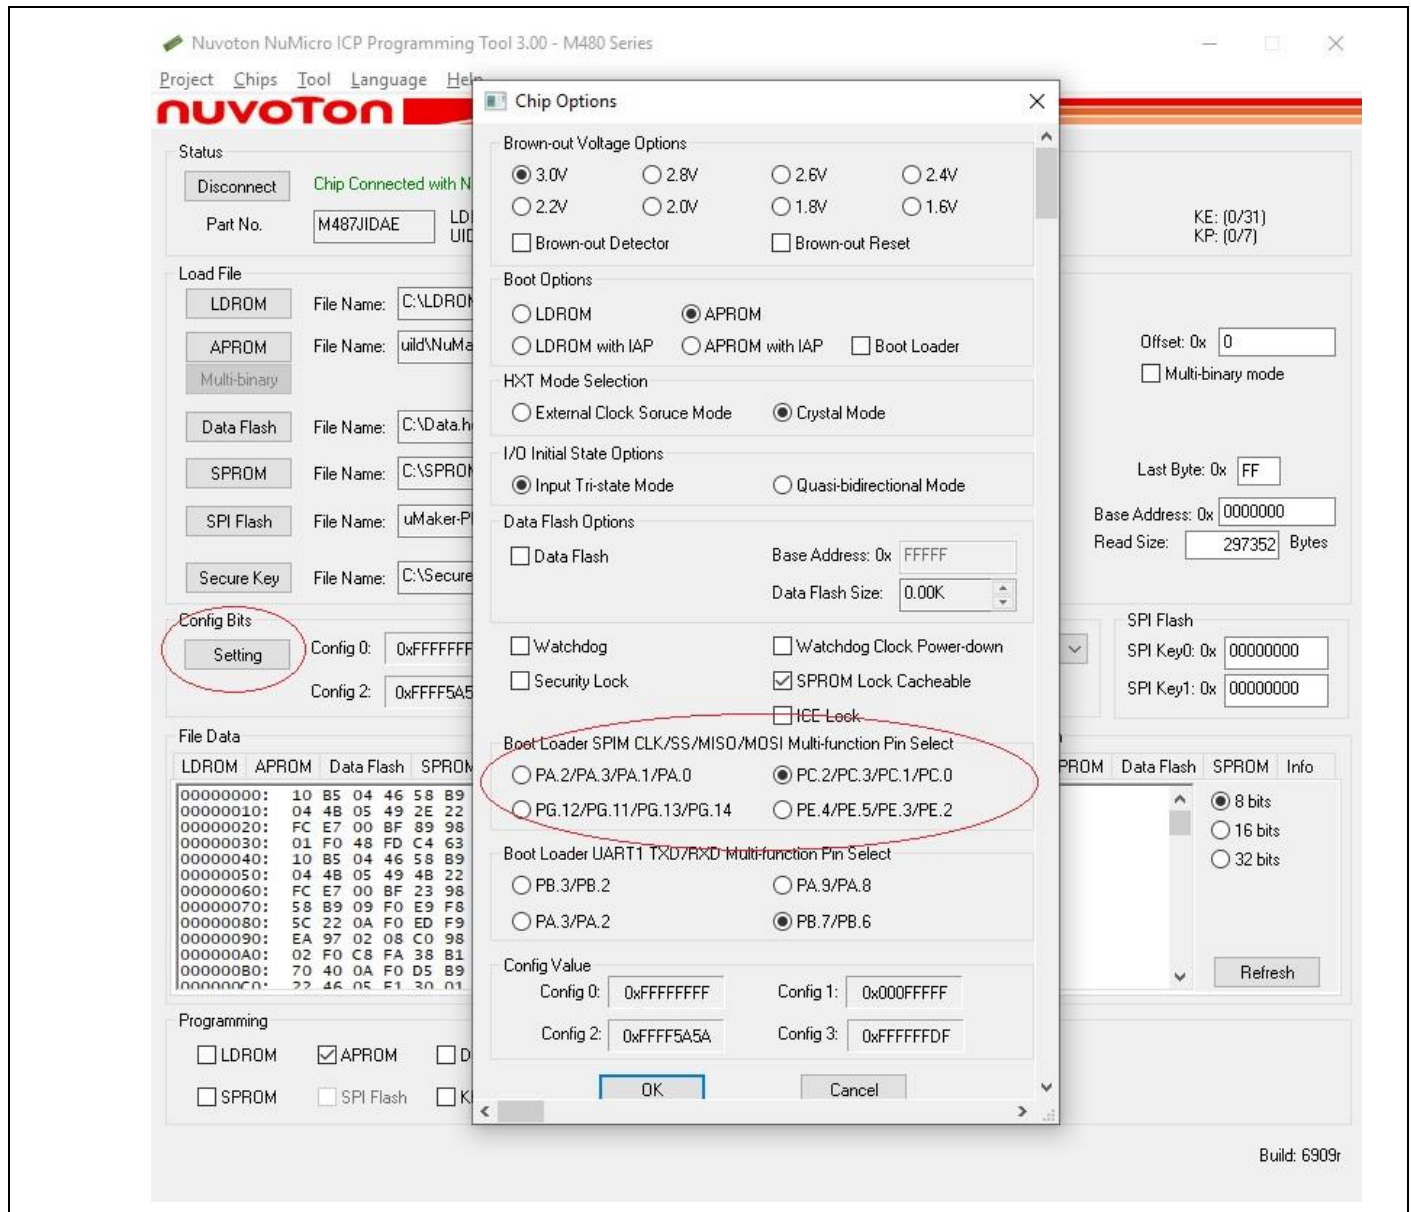


Figure 6-3 Check SPIM multi-function pin

c. Programming configuration setting.

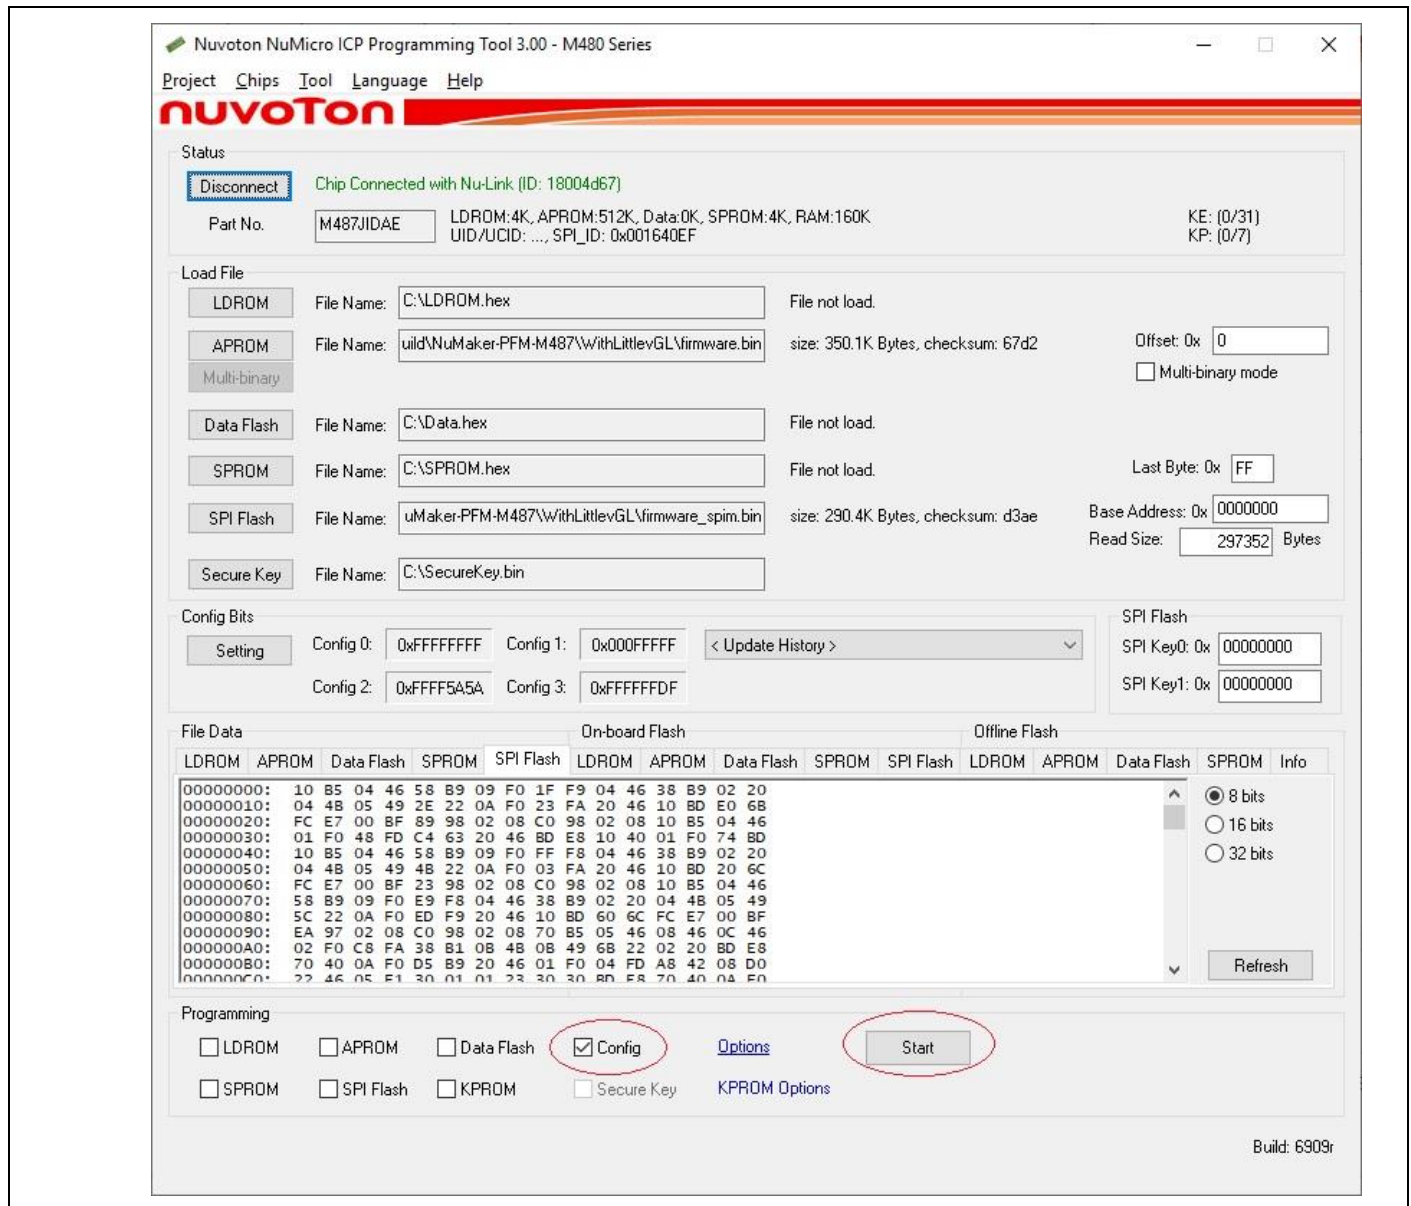


Figure 6-4 Programming configuration setting

d. Programming APROM(firmware.bin) and SPI flash(firmware_spim.bin)

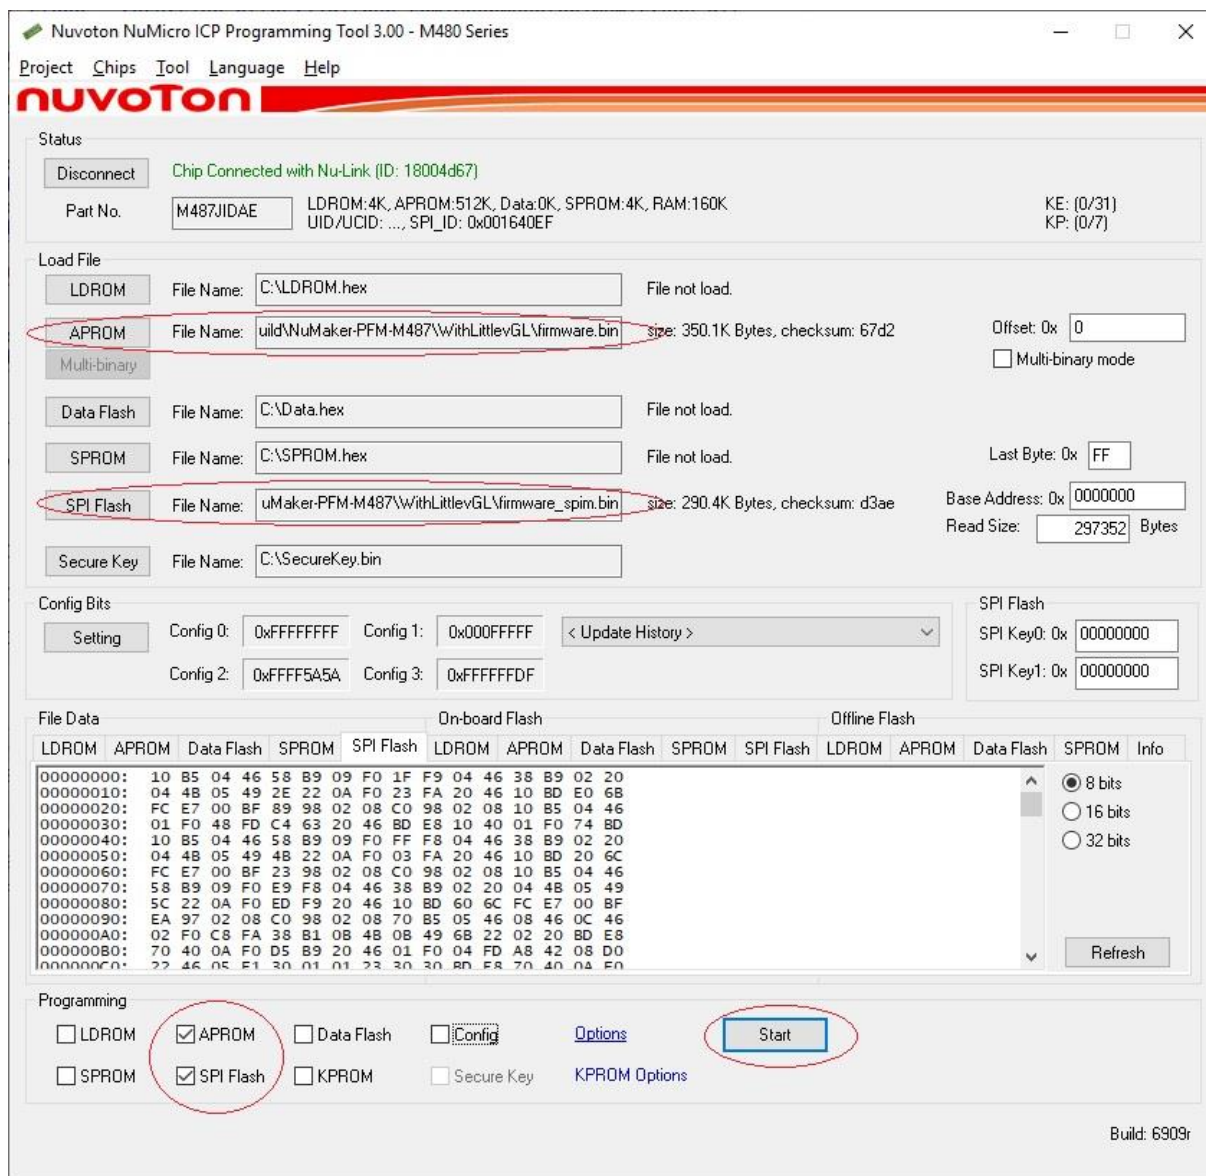


Figure 6-5 APROM and SPI Flash

- e. Disconnect target chip and press NuMaker-PRM-M487 RESET button

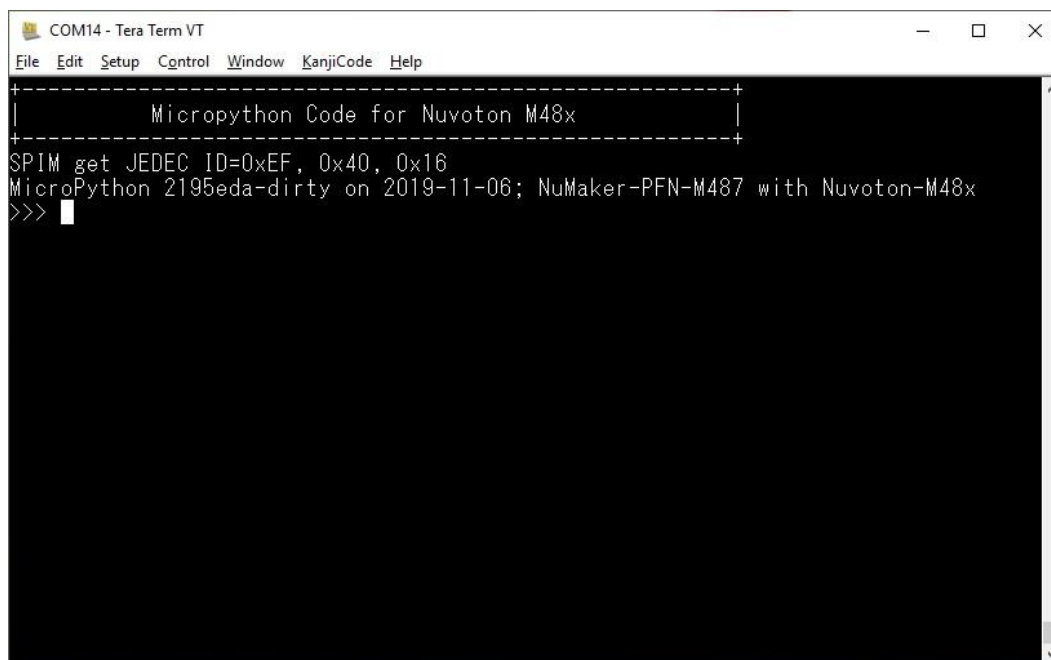
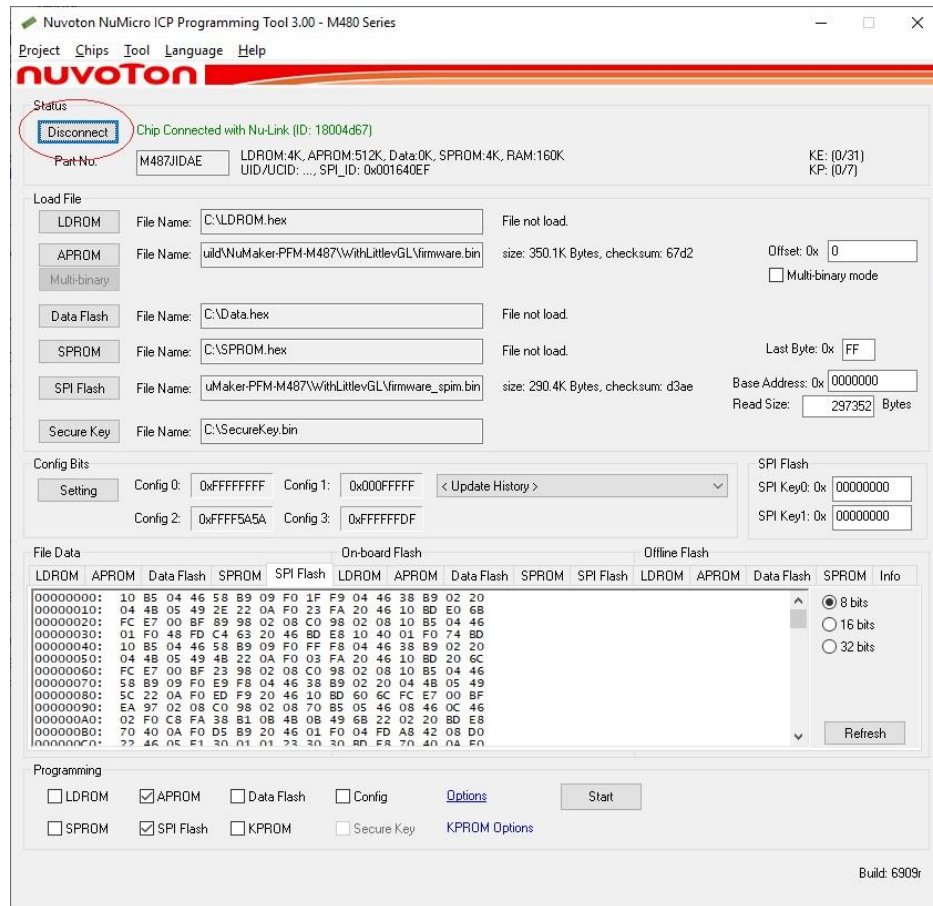


Figure 6-6 ICP tool disconnect

- Follow [Section 3.4](#). Copy example code (M48x/example/LittlevGL.py) to main.py

The image shows two windows. The top window is 'main.py - Notepad' containing the following Python code:

```
# main.py -- put your code here!
import lvgl as lv
import ILI9341 as ili
import TouchADC as TP

lv.init()
tp = TP.touch()
tp.init()
disp = ili.display()
disp.init()

disp_buf1 = lv.disp_buf_t()
buf1_1 = bytearray(320*10)
lv.disp_buf_init(disp_buf1, buf1_1, None, len(buf1_1)//4)
disp_drv = lv.disp_drv_t()
lv.disp_drv_init(disp_drv)
disp_drv.buffer = disp_buf1
disp_drv.flush_cb = disp.flush
lv_disp = lv.disp_drv_register(disp_drv)

indev_drv = lv.indev_drv_t()
lv.indev_drv_init(indev_drv)
indev_drv.type = lv.INDEV_TYPE.POINTER
indev_drv.read_cb = tp.read
lv.indev_drv_register(indev_drv)
```

The bottom window is 'COM14 - Tera Term VT' showing the output of the code:

```
-----+-----
|           Micropython Code for Nuvoton M48x           |
+-----+-----
SPIM get JEDEC ID=0xEF, 0x40, 0x16
Unable open file /TouchCalibrate
0Ah = 9c.
0Bh = e8.
0Ch = 05.
Initial ILI9341 LCD Module done.

Calibration constants: -4331216 6580 -6 -2748416 38 5096 65536
```

Figure 6-7 Update main.py

6.2 Build MicroPython with LittlevGL firmware

Enable MICROPY_LVGL build option. Edit M48x/mpconfigport.mk file and follow [section 4.3](#)

```
1. # Enable/disable modules and 3rd-party libs to be included in interpreter
2. # _thread module using pthreads
3. MICROPY_PY_THREAD = 1
4. # LittlevGL binding
5. MICROPY_LVGL = 1
```

7 SUMMARY

The MicroPython is a Python programming language interpreter that runs on the small embedded system. With MicroPython you can write clean and simple Python code to control hardware instead of having to use complex low-level languages like C or C++.

The MicroPython is only a programming language interpreter and does not include an IDE, but you can write code in your desired text editor and then use Copy and Paste (file access) to upload and run the code on a board.

One disadvantage of interpreted code is less performance and sometimes more memory usage when interpreting code.

8 TROUBLESHOOTING

Correct some problems that maybe encountered in use.

8.1 Meet “MemoryError: memory allocation failed” message

It caused by the default heap size of MicroPython is not enough for your python code. Open main.c and modify the value of “MP_TASK_HEAP_SIZE”.

```
1. #define MP_TASK_PRIORITY      (configMAX_PRIORITIES - 1)
2. #define MP_TASK_STACK_SIZE    (4 * 1024)
3. #define MP_TASK_STACK_LEN     (MP_TASK_STACK_SIZE / sizeof(StackType_t))
4.
5. #ifndef MP_TASK_HEAP_SIZE
6. #define MP_TASK_HEAP_SIZE      (28 * 1024)
7. #endif
```

Rebuild and update firmware.

9 REVISION HISTORY

Date	Revision	Description
2019.03.29	1.00	1. Initially issued.
2019.08.21	1.10	1. Supported NuMaker-M263KI board.
2019.10.16	1.20	1. Supported WLAN class
2019.11.08	1.30	1. Supported LittlevGL module
2020.03.16	1.31	1. Update LittlevGL required RAM size
2020.0507	1.40	1. Modify Python code update section

Important Notice

Nuvoton Products are neither intended nor warranted for usage in systems or equipment, any malfunction or failure of which may cause loss of human life, bodily injury or severe property damage. Such applications are deemed, "Insecure Usage".

Insecure usage includes, but is not limited to: equipment for surgical implementation, atomic energy control instruments, airplane or spaceship instruments, the control or operation of dynamic, brake or safety systems designed for vehicular use, traffic signal instruments, all types of safety devices, and other applications intended to support or sustain life.

All Insecure Usage shall be made at customer's risk, and in the event that third parties lay claims to Nuvoton as a result of customer's Insecure Usage, customer shall indemnify the damages and liabilities thus incurred by Nuvoton.

Please note that all data and specifications are subject to change without notice.
All the trademarks of products and companies mentioned in this datasheet belong to their respective owners.