

Dantherm UvC Controller

Modbus TCP/IP

Dantherm UV-C Controller

Page 2 / 52

Modbus TCP/IP

Date: 20150821
Responsible: EO

Author	Document revision	Status	Last updated	Pages
EO	3	First release version	20150821	52

Table of Contents

1	Revision History.....	8
2	Introduction	9
3	Registers model.....	10
3.1	Communication.....	10
3.2	Modbus commands.....	10
3.3	Date storing format.....	10
3.3.1	32 bit parameters.....	10
3.3.2	Date/time format.....	11
3.3.3	Float.....	11
4	Modbus Registers.....	12
4.1	Communication.....	12
4.1.1	Functionality.....	12
4.1.2	Parameter table.....	12
4.1.3	Example: Read IP Address	13
4.1.4	Example: Read MAC Address	13
4.2	Ventilation unit info	14
4.2.1	Functionality.....	14
4.2.2	Parameter table.....	14
4.2.3	Example: Read serial number.....	16
4.2.4	Example: Read unit type	17

Modbus TCP/IPDate: 20150821
Responsible: EO

4.2.5	Example: Read Unit Name.....	17
4.2.6	Example: Read A/B switch position.....	19
4.3	Software versions.....	20
4.3.1	Functionality.....	20
4.3.2	Parameter table.....	20
4.3.3	Example: Read firmware version	20
4.3.4	Example: Read HAC software version	21
4.4	Time & Date.....	22
4.4.1	Functionality.....	22
4.4.2	Parameter table.....	22
4.4.3	Example: Read time.....	22
4.4.4	Example: Read time.....	22
4.4.5	Example: Set time.....	22
4.4.6	Example: Read Work time	23
4.4.7	Read date of installation	23
4.5	Mode of operation	24
4.5.1	Functionality.....	24
4.5.2	Parameter table.....	25
4.5.3	Change between basic modes.....	26
4.5.4	Start/end other modes.....	27
4.6	Fan info.....	28

4.6.1	Functionality.....	28
Relation between fans and switch position;		28
4.6.2	Parameter table.....	28
4.7	Temperatures.....	29
4.7.1	Functionality.....	29
4.7.2	Parameter table.....	29
4.8	Filter	30
4.8.1	Functionality.....	30
4.8.2	Parameter table.....	30
4.9	Alarms	31
4.9.1	Functionality.....	31
4.9.2	Parameter table.....	31
4.10	Week Program.....	33
4.10.1	Functionality.....	33
4.10.2	Parameter table.....	33
4.10.3	Example: Programming week program 11.....	36
Week program Monday/.....		36
4.11	Night Mode	37
4.11.1	Functionality.....	37
4.11.2	Parameter table.....	37
4.12	Heat recovery /bypass.....	38

Modbus TCP/IPDate: 20150821
Responsible: EO

4.12.1	Functionality.....	38
4.12.2	Parameter table.....	39
4.12.3	Select/de-select manual bypass	39
4.13	Preheater.....	40
4.13.1	Functionality.....	40
4.13.2	Parameter table.....	40
4.14	Commissioning setting	41
4.14.1	Functionality.....	41
4.14.2	Parameter table.....	41
4.15	VOC sensor	41
4.15.1	Functionality.....	41
4.15.2	Parameter table.....	42
4.16	RH sensor.....	44
4.16.1	Functionality.....	44
4.16.2	Parameter table.....	44
4.17	HAC parts.....	45
4.17.1	Functionality.....	45
4.17.2	Parameter table.....	46
4.17.3	Example: Show status of HAC-module auto detection	47
5	Test.....	48
5.1	Test setup.....	48

Modbus TCP/IP

Date: 20150821
Responsible: EO

5.1.1	Ethernet connection.....	48
5.1.2	Test software.....	48
5.1.3	Network address setup	48
5.1.4	Example: Read Temperature values.....	50

1 Revision History

Date	Author	Comment	Revision	Status
20150630	EO	First draft version	1	Draft
20150720	EO	Register addresses added. Some functionality described. App. 80% finished. Confirmed parts marked green. Not confirmed parts marked yellow. Main sections to improve: <ul style="list-style-type: none">• Mode change• Alarms• HAC-module	2	Draft
20150821	EO	Updated: <ul style="list-style-type: none">• Mode change• Alarms• HAC-module	3	First release

2 Introduction

The new generation of controllers in the Dantherm ventilation units has the possibility to communicate Modbus TCP/IP over the Ethernet port. This is used for Building Management Systems (BMS) or communication with smartphone apps.

The purpose of this document is to describe the functionality of this interface. Functionality has been divided into subchapters. In each subchapter there is a list of used Modbus registers. There are examples included for some of the most complex registers.

In the end of the document, there is an example of how to test the interface.

3 Registers model

3.1 Communication

For MPCB control the Modbus protocol v 1.1 is used (TCP/IP over Ethernet). System port **502** is used for communication. The ventilation unit has a maximum of 3 sockets to be connected at the same time.



Warning: If socket is unused for 1 minute and more, the connection will be closed by MPCB.

3.2 Modbus commands

The Ventilation unit supports the following commands of Modbus protocol:

- Read holding registers (0x03);
- Write multiple Holding registers (0x10).

3.3 Date storing format

3.3.1 32 bit parameters

All parameters of the ventilation unit have a 32-bits dimension. However the Modbus works with registers which have 16-bits dimension. Each parameter in the ventilation unit is therefore separated in two parts (Low and High). Modbus model stores it like two registers (R0 and R1 according), which are located together in sequence. A register with Low part of parameters has the lower address.

Example:

prmT1 – temperature T1, float, modbus addr 40089.

prmT1	bytes	Byte3	Byte2	Byte1	Byte0
	Modbus	R1 (40090)		R0 (40089)	
	Value			14.30	°C

For changing the parameter it is necessary to send both parts of parameter in one packet.

 Warning: if the two parts of one parameter are sent to the ventilation unit over different packets, then the parameter will not be written.

3.3.2 Date/Time format

All date/time parameters contain value in Unix time (amount of seconds from 1.1.1970).

3.3.3 Float

A floating point value is 32 bits, but Modbus uses 16 bit registers therefore this 32 bit value is mapped to two register. The sequence used is CDAB.

4 Modbus Registers

4.1 Communication

Network settings can be read over Modbus.

4.1.1 Functionality

Default network settings can be changed using the PC Configuration Tool. After change of network settings, the ventilation unit must be restarted.

If DHCP is enabled, then the router will assign an IP-address to the ventilation unit at start up.

If DHCP is disabled, manual set addresses will be assigned to the ventilation unit at start up.

4.1.2 Parameter table

Register address	Specific Parameter Name	Type	R/W	Max	Min	Description
40027	prmDHCPEN	UINT	Read	1	0	DHCP enable
40029	prmCurrentIPAddress	UINT	Read	4294967295	0	IP address
40033	prmCurrentIPMask	UINT	Read	4294967295	0	IP mask
40037	prmCurrenttPGateway	UINT	Read	4294967295	0	Gateway
40041	prmMACAddrHigh	UINT	Read	4294967295	0	MAC Address [high:low]
40043	prmMACAddrLow	UINT	Read	4294967295	0	

4.1.3 Example: Read IP Address

Read from ventilation unit:

Register address	Parameter	Value (decimal)	Value (bin)
40029	prmCurrentIPAddress (low)	364	0000000101101100
40030	prmCurrentIPAddress (high)	49320	110000010101000

Conversion:

40030	40029
Byte 3	Byte 1
11000000	00000001
192	108

Current IP address is therefore:

192.168.1.108

4.1.4 Example: Read MAC Address

Read from ventilation unit:

Register address	Parameter	Value (decimal)	Value (bin)
40041	prmMACAddrHigh (low)	128	000000010000000
40042	prmMACAddrHigh (high)	0	000000000000000
40043	prmMACAddrLow (low)	34308	10001100000100
40044	prmMACAddrLow (high)	57625	111000100011001

Conversion:

40042	40041	40044	40043
Byte 7	Byte 6	Byte 5	Byte 4
00000000	00000000	00000000	10000000
		0	128

MAC Address is represented by Byte 0 to 5. The MAC Address is therefore: 0.128.225.25.134.4

4.2 Ventilation unit info

4.2.1 Functionality

4.2.2 Parameter table

Register address	Specific Parameter Name	Type	R/W	Max	Min	Description
40003	prnSystemID	UINT	Read	4294967295	0	Packed System Information: - Installed components (16 bits) - future unit type (8 bits): always 0 - current unit type (8 bits)

Dantherm UVC Controller

Page 15 / 52

Modbus TCP/IP

Date: 20150821
Responsible: EO

Modbus Register Map						
Register Address	Register Name	Type	Description	Unit	Min Value	Max Value
40001	prmsystemName1	UINT	System name	String	0	32
40002	prmsystemName2	UINT	System name	String	0	32
40003	prmsystemSerialNumHigh	UINT	System serial number high	Byte	0	255
40004	prmsystemSerialNumLow	UINT	System serial number low	Byte	0	255
40005	prmsystemSerialNumLow	UINT	System serial number [high:low]	Byte	0	255
40006	prmsystemSerialNumLow	UINT	System serial number [high:low]	Byte	0	255
40007	prmsystemSerialNumHigh	UINT	System serial number high	Byte	0	255
40008	prmsystemSerialNumLow	UINT	System serial number low	Byte	0	255
40009	prmsystemName1	UINT	System name	String	0	32
40010	prmsystemName2	UINT	System name	String	0	32

Dantherm UVC Controller

Page 16/52

Modbus TCP/IP

Date: 20150821
Responsible: EO

4.2.3 Example: Read serial number

4.2.3 Example: Read s

Register address	Parameter	Value (decimal)	Value (bin)
40005	prmSystemSerialNumLow (low)	20909	0101000110101101
40006	prmSystemSerialNumLow (high)	12314	001100000011010
40007	prmSystemSerialNumHigh (low)	327	00000010100011
40008	prmSystemSerialNumHigh (high)	0	0000000000000000

Conversion:

The serial number is therefore 1405261337005.

4.2.4 Example: Read unit type

Read from ventilation unit:

Register address	Parameter	Value (decimal)	Value (bin)
40003	prmSystemID (low)	13779	0011010111010011
40004	prmSystemID (high)	1024	0000010000000000

Conversion:

40004	40003
Byte 3	Byte 2
00000100	00000000
4	

Type is represented by Byte 4 in prmSystemID. Type is therefore HCC 2

4.2.5 Example: Read Unit Name

Read from ventilation unit:

Register address	Parameter	Value (decimal)	Value (bin)
40009	prmSystemName1 (low)	25942	0110010101010110
40010	prmSystemName1 (high)	29806	0111010001101110
40011	prmSystemName2 (low)	27753	0110110001101001
40012	prmSystemName2 (high)	29793	0111010001100001
40013	prmSystemName3 (low)	28521	011011101101001
40014	prmSystemName3 (high)	8302	0010000001101110

Dantherm UV/C Controller

Page 18 / 52

Modbus TCP/IP

Date: 20150821
Responsible: EO

40015	prmSystemName4 (low)	28277	0110111001110101
40016	prmSystemName4 (high)	29801	0111010001101001
40017	prmSystemName5 (low)	0	0000000000000000
40018	prmSystemName5 (high)	0	0000000000000000
40019	prmSystemName6 (low)	0	0000000000000000
40020	prmSystemName6 (high)	0	0000000000000000
40021	prmSystemName7 (low)	0	0000000000000000
40022	prmSystemName7 (high)	0	0000000000000000
40023	prmSystemName8 (low)	0	0000000000000000
40024	prmSystemName8 (high)	0	0000000000000000

Conversion:

40012	40011	40010	40009
Byte 7	Byte 6	Byte 5	Byte 4
01110100	01100001	01101100	01101001
116	97	108	105

t	A	i	t	N	E	V
---	---	---	---	---	---	---

40016	40015	40014	40013
Byte 15	Byte 14	Byte 13	Byte 12
01110100	01101001	01101110	01101010
116	105	110	117

t	i	n	u	N	O	i
---	---	---	---	---	---	---

40020	40019	40018	40017
Byte 15	Byte 14	Byte 13	Byte 12
00000000	00000000	00000000	00000000

Modbus TCP/IP

0	0	0	0	0	0	0	0
---	---	---	---	---	---	---	---

40024	40023	40022	40021	Byte 15	Byte 14	Byte 13	Byte 12
00000000	00000000	00000000	00000000	0	0	0	0
0	0	0	0	0	0	0	0

Unit Name is therefore "Ventilation unit"

4.2.6 Example: Read A/B switch position

Read from ventilation unit:

Register address	Parameter	Value (decimal)	Value (bin)
40085	prmHALLeft (low)	0	
40086	prmHALLeft (high)	0	
40087	prmHALRight (low)	1	
40088	prmHALRight (high)	0	

Switch position is therefore A.

4.3 Software versions

4.3.1 Functionality

4.3.2 Parameter table

Register address	Specific Parameter Name	Type	R/W	Max	Min	Description
40025	prmFWVersion	UINT	Read	4294967295	0	FW version: Major(8bits) and Minor(8bits). Byte3 and Byte 2 are 0. Byte 1 is Major part. Byte 0 is minor part. For example: v. 1.169 is stored like 0x000001A8
						System serial number Bytes order Values
40193	prmRamIdxHac1FirmwareVersion	UINT	Read	65535	0	HAC1 FW Version

4.3.3 Example: Read firmware version

prmFWVersion			
	high	low	
Register address	40026	40025	
Value (decimal)	0	552	
Value (bin)	0000000000000000	000001000101000	
Byte number	Byte 3	Byte 2	Byte 1
Byte (bin)	00000000	00000000	0000010
Byte (dec)	2	40	

Firmware version is 2.40

Modbus TCP/IP

4.3.4 Example: Read HAC software version

		prmFWVersion	
	high	low	
Register address	40194	40193	
Value (decimal)	0	12288	
Value (bin)	0000000000000000	0011000000000000	
Value (hex)	0	3000	

Version is stored in BCD (**binary coded decimal**) form:

0b0011000000000000 = 0x3000

where:

3 - first digit - major version

0 - second digit - minor version

0 - third digit - revision

0 - firth digit - beta version (isn't displayed on system devices)

HAC software version is therefore 3.00

Remote control will show HAC software version to be 300

4.4 Time & Date

4.4.1 Functionality

4.4.2 Parameter table

Register address	Specific Parameter Name	Type	R/W	Max	Min	Description
40109	prmDateTime	UINT	Read	4294967295	0	Current Date/time in Unix time (amount of seconds from 1.1.1970)
40111	prmDateTimeSet	UINT	Write	4294967295	0	New date/time in Unix time
40625	prmWorkTime	UINT	Read	4294967295	0	Work time of system, in hours
40669	prmStartExploitationDateStamp	UINT	Read	4294967295	0	Date Stamp of the system start of Exploitation in Unix time (amount of seconds from 1.1.1970)

4.4.3 Example: Read time

4.4.4 Example: Read time

	prmDateTime	
Register address	High	Low
Value (decimal)	21930	15962
Value (16 bit)	01010101101010	001111001011010
Value (32 bit)	01010101101010001111001011010	
Value (decimal)	1437220442	
Time	18-07-2015	11:54:02

4.4.5 Example: Set time

	prmDateTime
	High

Register address	40112	40111
Time	01-07-2015 00:00:00	
Unix time	1435708800	
Value (32 bit)	01010101100100110010110110000000	
Value (16 bit)	0101010110010011	0010110110000000
Value (decimal)	21907	11648

4.4.6 Example: Read Work time

	prmWorkTime	
	High	Low
Register address	40626	40625
Value (decimal)	0	44
Value (16 bit)	0000000000000000	000000000101100
Value (32 bit)	00000000000000000000000000000000	00000000000000000000000000000000
Value (decimal)	44	

4.4.7 Read date of installation

	prmStartExploitationDateStamp	
	High	Low
Register address	40670	40669
Value(decimal)	21893	24000
Value (16 bit)	0101010110000101	01011011000000
Value (32 bit)	010101011000010101011011000000	
Value (decimal)	1434803648	
Time	20 Jun 2015 12:34:08	

4.5 Mode of operation

4.5.1 Functionality

There are 3 basic running modes:

- Manual Mode
- Week Program Mode
- Demand Mode

Furthermore, there are some additional modes that can be selected either by the user or automatically by the ventilation unit control

	Mode	User interfaces						Description	
		Vent. Unit contr.	Foil panel	Wired remote	Wireless remote	PC-Tool	HAC-module	Modbus TCP/IP	
0	Standby	--	--	--	--	--	w	r	Standby via switch connected to HAC-module
1	Manual Mode	--	w	w	w	w	--	w	In Manual Mode, the unit can run in fan step 0, 1, 2, 3 and 4. Fan step 0 can be blocked. When selecting fan step 0 or 4, there is automatic setback to fan step 3 after a fixed time period.
2	Demand Mode	--	w	w	w	w	--	w	Demand mode using one or more of the following sensors: <ul style="list-style-type: none">• RH-sensor in ventilation unit• VOC-sensor in ventilation unit• CO2-sensor via HAC-module At least one sensor must be connected.
3	WeekProgram Mode	--	w	w	w	w	--	w	Ventilation unit can run predefined programs 1-10 or user defined week

Modbus TCP/IP

Date: 20150821
Responsible: EO

								program 11.
4	Servoflow	w	(r)	w	--	r	--	r
5	Away Mode	--	--	w	w	--	w	Holiday function with low fan speed.
6	Summer Mode	--	w	--	r	r	--	w Only exhaust fan running.
7	DI Override	(w)	(r)	(r)	(r)	r	--	r
8	Hygrostat override	--	(r)	(r)	(r)	r	w	r
9	Fireplace Boost Mode	--	w	w	w	w	--	w Over pressure for a limited time
10	Installer Mode	--	w	w	w	w	--	r Calibration, Preheater test or setup via wireless remote.
11	Fall Safe 1	w	(r)	(r)	(r)	r	(r)	r
12	Fall Safe 2	w	(r)	(r)	(r)	r	(r)	r
13	Fall Off	w	(r)	(r)	(r)	r	(r)	r
14	Defrost Off	w	--	--	(r)	r	--	r Defrost function
15	Defrost	w	(r)	(r)	(r)	r	--	r
16	Night Mode	w	(r)	(r)	r	r	--	r Night function with low fan speed.

4.5.2 Parameter table

Register address	Specific Parameter Name	Type	R/W	Max	Min	Description		
40473	prnCurrentBLState	UINT	Read	4294967295	0	Current unit mode:		

Modbus TCP/IP

Date: 20150821
Responsible: EO

8	Hygrostat override				
9	Fireplace				
10	Installer				
11	Fail Safe 1				
12	Fail Safe 2				
13	Fail Off				
14	Defrost Off				
15	Defrost				
16	Night				
40169	prmRamIdxUnitMode	UINT	Write	65535	0
					Active Unit mode:
					Demand Mode
					0x0002
					Manual Mode
					0x0004
					WeekProgram Mode
					0x0008
					Away Mode
					0x0010
					Fireplace Mode
					0x0040
					Summer Mode
					0x0800

4.5.3 Change between basic modes

4.5.3 Change between basic modes
Change to Demand Mode: Write 0x0002 (2) to 40169 prmRamIdxUnitMode.

Change to Manual Mode: Write 0x0004 (4) to 40169 prmRamIdxUnitMode..

Change to Week Program Mode: Write 0x0008 (8) to 40169 prmRamIdxUnitMode.

Modbus TCP/IP

4.5.4 Start/end other modes

Start Away Mode: Write 0x0010 (16) to 40169 prmRamIdxUnitMode.

End Away Mode: Write 0x8010 (32784) to 40169 prmRamIdxUnitMode.

Start Fireplace Mode: Write 0x0040 (64) to 40169 prmRamIdxUnitMode.

End Fireplace Mode: Write 0x8040 (32832) to 40169 prmRamIdxUnitMode.

Start Summer Mode: Write 0x0800 (2048) to 40169 prmRamIdxUnitMode.

End Summer Mode: Write 0x8800 (34816) to 40169 prmRamIdxUnitMode.

4.6 Fan info

4.6.1 Functionality

Relation between fans and switch position:

	Switch position A	Switch position B
Fan 1	Extract	Supply
Fan 2	Supply	Extract

4.6.2 Parameter table

Register address	Specific Parameter Name	Type	R/W	Max	Min	Description
40325	prmRmdIdxSpeedLevel	UINT	Write	4	0	Speed level of Fans Manual mode: Fan step can be set Other modes: Fan step can be read.
40101	prmHALFan01	FLOAT	Read	5000	0	Fan1 rpm
40103	prmHALFan02	FLOAT	Read	5000	0	Fan2 rpm

4.7 Temperatures

4.7.1 Functionality

4.7.2 Parameter table

Register address	Specific Parameter Name	Type	R/W	Max	Min	Description
40133	prmRamIdxT1	FLOAT	Read	327.67	-327.68	Outdoor temperature T1, °C
40135	prmRamIdxT2	FLOAT	Read	327.67	-327.68	Supply temperature T2 °C
40137	prmRamIdxT3	FLOAT	Read	327.67	-327.68	Extract temperature T3, °C
40139	prmRamIdxT4	FLOAT	Read	327.67	-327.68	Exhaust temperature T4, °C
40141	prmRamIdxT5	FLOAT	Read	327.67	-327.68	Room temperature wireless remote T5, °C

Modbus TCP/IP

4.8 Filter

4.8.1 Functionality

4.8.2 Parameter table

Register address	Specific Parameter Name	Type	R/W	Max	Min	Description
40555	prnFilterRemainingTime	UINT	Read	360	0	Remaining time of the Filter Lifetime (Days)
40557	prnFilterDefaultTime	UINT	Write	360	0	Filter Lifetime (Days)
40559	prnFilterReset	UINT	Write	1	0	1: Reset filter timer

4.9 Alarms

4.9.1 Functionality

4.9.2 Parameter table

Register address	Specific Parameter Name	Type	R/W	Max	Min	Description
40515	prmSetAlarmNum	UINT	Write	15	0	Clear Alarm: 0 None 1 Exhaust FAN Alarm 2 Supply FAN Alarm 3 Bypass Alarm 4 TI Alarm 5 T2 Alarm 6 T3 Alarm 7 T4 Alarm 8 T5 Alarm 9 RH Alarm 10 Outdoor/T3 Alarm 11 Supply5 Alarm 12 Fire Alarm 13 Communication Alarm 14 FireTermostat Alarm 15 High water-level Alarm
40517	prmLastActiveAlarm	UINT	Read	4294967295	0	Reset to 0 by MPCB after checking. Active Alarm:

Dantherm UVC Controller

Page 32/ 52

Modbus TCP/IP

Date: 20150821
Responsible: EO

	0	<i>None</i>
	1	<i>Exhaust FAN Alarm</i>
	2	<i>Supply FAN Alarm</i>
	3	<i>Bypass Alarm</i>
	4	<i>T1 Alarm</i>
	5	<i>T2 Alarm</i>
	6	<i>T3 Alarm</i>
	7	<i>T4 Alarm</i>
	8	<i>T5 Alarm</i>
	9	<i>RH Alarm</i>
	10	<i>Outdoor13 Alarm</i>
	11	<i>Supply5 Alarm</i>
	12	<i>Fire Alarm</i>
	13	<i>Communication Alarm</i>
	14	<i>FireTermostat Alarm</i>
	15	<i>High waterlevel Alarm</i>

4.10 Week Program

4.10.1 Functionality

There are ten predefined week programs (Week program 1-10) and one that can be user defined (Week program 11).

4.10.2 Parameter table

Register address	Specific Parameter Name	Type	R/W	Max	Min	Description
40467	prmNumOfWeekProgram	UINT	Write	10	0	Number of the Active Week Program (for Week Program mode) Write value one lower than desired week program. For example write value 10 to select week program 11.
40627	PrnWeekMon1	UINT	Write	4294967295	0	Schedule of the Fan Speed in Monday of 11 Week Program:
40629	PrnWeekMon2	UINT	Write	4294967295	0	Interval
40631	PrnWeekMon3	UINT	Write	4294967295	0-1	Bytes Address
				1-2		Byte 3
				2-3		Byte 2
				3-4		40628
				4-5		Byte 2
				5-6		40627
				6-7		Byte 0
				7-8		Byte 0
				8-9		Byte 3
				9-10		40630
				10-11		Byte 2
				11-12		Byte 2

Dantherm UV/C Controller

Page 34/ 52

Modbus TCP/IP

Date: 20150821
Responsible: EO

Register Address	Register Type	Register Value	Description
12-13	Byte 1		
13-14	Byte 1	40629	
14-15	Byte 0		
15-16	Byte 0		
16-17	Byte 3		
17-18	Byte 3	40632	
18-19	Byte 2		
19-20	Byte 2		
20-21	Byte 1		
21-22	Byte 1	40631	
22-23	Byte 0		
23-0	Byte 0		
Fan Speed Codes:			
0	Fan Step0		
1	Fan Step1		
2	Fan Step2		
3	Fan Step3		
4	Fan Step4		
5	Demand (Auto)		
40633	PrnWeekTue1	UINT Write	4294967295
40635	PrnWeekTue2	UINT Write	4294967295
40637	PrnWeekTue3	UINT Write	4294967295
40639	PrnWeekWed1	UINT Write	4294967295
40641	PrnWeekWed2	UINT Write	4294967295

Dantherm UVC Controller

Page 35 / 52

Modbus TCP/IP

Date: 20150821
Responsible: EO

40643	PrnWeekWed3	UINT	Write	4294967295	0
40645	PrnWeekThu1	UINT	Write	4294967295	0
40647	PrnWeekThu2	UINT	Write	4294967295	0
40649	PrnWeekThu3	UINT	Write	4294967295	0
40651	PrnWeekFri1	UINT	Write	4294967295	0
40653	PrnWeekFri2	UINT	Write	4294967295	0
40655	PrnWeekFri3	UINT	Write	4294967295	0
40657	PrnWeekSat1	UINT	Write	4294967295	0
40659	PrnWeekSat2	UINT	Write	4294967295	0
40661	PrnWeekSat3	UINT	Write	4294967295	0
40663	PrnWeekSun1	UINT	Write	4294967295	0
40665	PrnWeekSun2	UINT	Write	4294967295	0
40667	PrnWeekSun3	UINT	Write	4294967295	0

Modbus TCP/IP

4.10.3 Example: Programming week program 11

Week program Monday:

MONDAY			
			00-01
			01-02
			02-03
			03-04
			04-05
			05-06
			06-07
			07-08
			08-09
			09-10
AUTO			10-11
AUTO			11-12
AUTO			12-13
AUTO			13-14
AUTO			14-15
AUTO			15-16
AUTO			16-17
			17-18
			18-19
			19-20
			20-21
			21-22
			22-23
			23-24

4.11 Night Mode

4.11.1 Functionality

4.11.2 Parameter table

Register address	Specific Parameter Name	Type	R/W	Max	Min	Description
40169	prmRanIdxUnitMode	UINT	Write	65535	0	Night mode enable: Write the value 0x0020 (32) Night mode disable: Write the value 0x8020 (32800)
40333	prmRomIdxNightModeStartHour	UINT	Write	255	0	Night mode start hour (0-23)
40335	prmRomIdxNightModeStartMin	UINT	Write	255	0	Night mode start minute (0-59)
40337	prmRomIdxNightModeEndHour	UINT	Write	255	0	Night mode end hour (0-23)
40339	prmRomIdxNightModeEndMin	UINT	Write	255	0	Night mode end minute (0-59)

Modbus TCP/IP

4.12 Heat recovery / bypass

4.12.1 Functionality

Bypass has to be mounted in order to use bypass functionality.

Bypass is disabled if `prmBypassTmax = 0`.

Automatic bypass:

The by-pass will open when all the following conditions are fulfilled:

$T1 < T3 - 2$

$T1 > prmBypassTmin$

$T3 > prmBypassTmax$

And close if one of the following conditions is fulfilled while open:

$T1 > T3$

$T1 < (prmBypassTmin - 2)$

$T3 < (prmBypassTmax - 1)$

4.12.2 Parameter table

Register address	Specific Parameter Name	Type	R/W	Max	Min	Description
40445	prmBypassTmin	FLOAT	Read	15,0	12,0	Min temperature for outdoor air (T1)
40447	prmBypassTmax	FLOAT	Read	27,0	21,0 (0)	Max temperature for extract air (T3)
40199	prmRamIdxBypassActualState	UINT	Read	255	0	Bypass state: 0: Closed 1: In process 32: Closing 64: Opening 255: Opened
40265	prmRamIdxBypassManualTimeout	UINT	Read	480	60	Manual bypass duration in minutes
40169	prmRamIdxUnitMode	UINT	Write	65535	0	Manual Bypass 0x0080 (128)

4.12.3 Select/de-select manual bypass

Select manual bypass: Write 0x0080 (128) to 40169 prmRamIdxUnitMode.

Deselect Manual bypass: Write 0x8080 (32896) to 40169 prmRamIdxUnitMode.

4.13 Preheater

4.13.1 Functionality

4.13.2 Parameter table

Register address	Specific Parameter Name	Type	R/W	Max	Min	Description
40161	prmPreheaterDutyCycle	UINT	Read	100	0	Power of Preheater in %

4.14 Commissioning setting

4.14.1 Functionality

4.14.2 Parameter table


Register address	Specific Parameter Name	Type	R/W	Max	Min	Description
40519	prmRefValEx	UINT	Read	65535	0	Reference Extract Fan Speed for Step3 (rpm).
40521	prmRefValSupl	UINT	Read	65535	0	Reference Supply Fan Speed for Step3 (rpm).
40541	prmFireplacePreset	UINT	Read	1	0	0: Fireplace not present. Unbalanced defrost allowed. 1: Fireplace present. Unbalanced defrost not allowed.

4.15 VOC sensor

4.15.1 Functionality

VOC-sensor is accessory that can be placed inside the ventilation unit in the extract side. Relation between VOC-level and fan speed is seen in the figure below:

VOC Demand Control

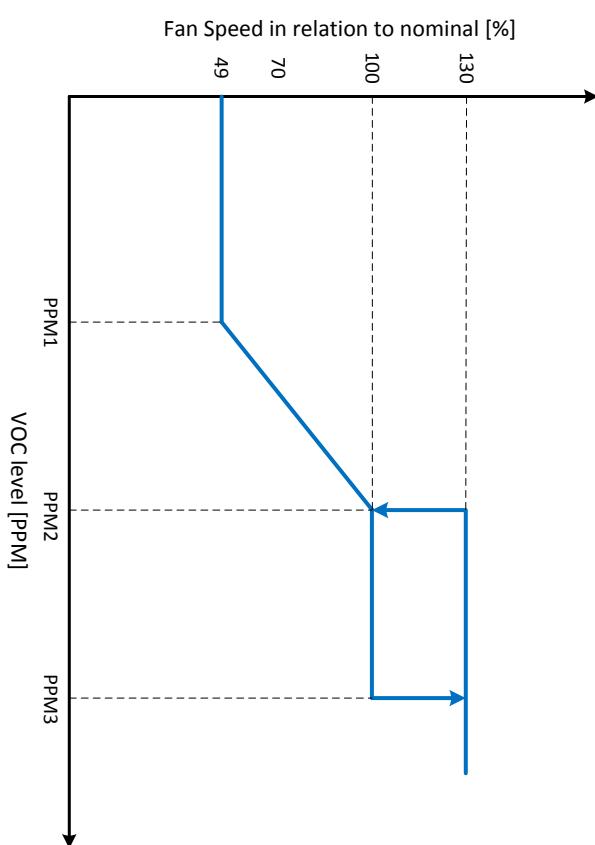

Sensitivity is defined by the following sets of PPM settings.

VOC sensibility	Low	Medium	High
prmPPM1Unit	1000	800	600
prmPPM2Unit	1500	1200	900
prmPPM3Unit	2000	1500	1200

4.15.2 Parameter table

Register address	Specific Parameter Name	Type	R/W	Max	Min	Description
40431	prmVOC	UINT	Read	65535	0	VOC sensor value (read from VOC); ppm. If VOC is not installed, then 0.

Dantherm UV/C Controller

Date: 20150821

Responsible: EO

Modbus TCP/IP

40563	prmPPM1Unit	UINT	Write	65535	0	Low Threshold of VOC (ppm)
40565	prmPPM2Unit	UINT	Write	65535	0	Middle Threshold of VOC (ppm)
40567	prmPPM3Unit	UINT	Write	65535	0	High Threshold of VOC (ppm)

4.16 RH sensor

4.16.1 Functionality

Rh-sensor can be mounted in the ventilation unit.

Functionality is implemented as a PI-controller with output range between fan step 1 and fan step 3.

The RH-controller is a part of demand mode. If either VOC- or CO2-sensor is also present, then the controller with highest output will be used.

4.16.2 Parameter table


Register address	Specific Parameter Name	Type	R/W	Max	Min	Description
40197	prmRamIdxRh3Corrected	UINT	Read	100	0	Value of RH sensor, % 0: RH sensor not connected
40341	prmRamIdxRhSetPoint	UINT	Read	65	35	Setpoint of RH in %

4.17 HAC parts

4.17.1 Functionality

CO2-sensor is accessory that can be connected via the HAC-module. Relation between CO2-level and fan speed is seen in the figure below:

CO2 Demand Control

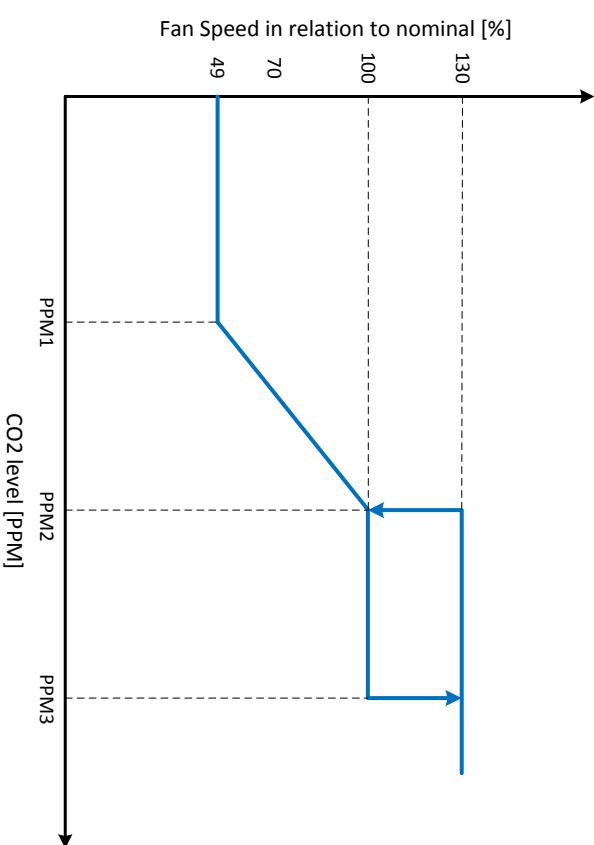

Sensitivity is defined by the following sets of PPM settings.

CO2 sensibility	Low	Medium	High
prmPPM1External	600	600	600
prmPPM2External	1300	1100	900
prmPPM3External	1800	1600	1400

4.17.2 Parameter table

Register address	Specific Parameter Name	Type	R/W	Max	Min	Description
40611	prmSystemIDComponents	UINT	Read	4294967295	0	HAC1 0x0200
40575	prmHACCO2Val	UINT	Read	65535	0	HAC1 CO2 Level (ppm)
40569	prmPPM1External	UINT	Write	65535	0	Low Threshold of CO2 (ppm)
40571	prmPPM2External	UINT	Write	65535	0	Middle Threshold of CO2 (ppm)
40573	prmPPM3External	UINT	Write	65535	0	High Threshold of CO2 (ppm)
40245	prmRamIdxHac1Components	UINT	Read	255	0	List of the HAC1 components (binary fields): CO2 Sensor 0x0001 ok PreHeater 0x0004 PreCooler 0x0008 AfterHeater 0x0010 AfterCooler 0x0020 Hygostat 0x0040
40345	prmRomIdxAfterHeaterT2SetPoint	INT	Write	30	0	Setpoint of the T2 (°C); If HAC1 AfterHeater is active (prmRamIdxHac1ActiveComponent(40301)) and T2 < T2Setpoint, then HAC1 AfterHeater should be turned on; If T2Setpoint is 0, then T2 is not checked
40347	prmRomIdxAfterHeaterT3SetPoint	INT	Write	30	0	Setpoint of the T3 (°C); If HAC1 AfterHeater is active (prmRamIdxHac1ActiveComponent(40301)) and T3 < T3Setpoint, then HAC1 AfterHeater should be turned on; If T3Setpoint is 0, then T3 is not checked
40349	prmRomIdxAfterHeaterT5SetPoint	INT	Write	30	0	Setpoint of the T5 (°C);

If HAC1 AfterHeater is active (**prmRamIdxHac1ActiveComponent(40301)**) and T5 < T5Setpoint, then HAC1 AfterHeater should be turned on,
If T5Setpoint is 0, then T5 is not checked

4.17.3 Example: Show status of HAC-module auto detection

With HAC-module connected:

prmSystemIDComponents		
	High	Low
Register address	40612	40611
Value (decimal)	256	30471
Value (16 bit)	00000010000000	01110110000011
Value (32 bit)	0000001000000000111011100000111	

Without HAC-module connected:

prmSystemIDComponents		
	High	Low
Register address	40612	40611
Value (decimal)	256	13575
Value (16 bit)	00000010000000	00110101000011
Value (32 bit)	0000001000000000011010100000111	

5 Test

5.1 Test setup

5.1.1 Ethernet connection

In these tests, the ventilation unit has been connected to a router via cable. The test PC has been connected to the router either via cable or via Wi-Fi.

5.1.2 Test software

Modbus Poll - 64 Bit version 6.2.2 Build 871 was used for the test:

<http://www.modbustools.com/>

5.1.3 Network address setup

Network settings can be set using the PC-Tool:

DHCP dynamic settings

Please note that the ventilation unit must be restarted.


IP address	192	.	168	.	1	.	108
Network address	255	.	255	.	255	.	0
Gateway	192	.	168	.	1	.	1
MAC address	0	.	128	.	225	.	25
					134	.	4

After change of network settings, the ventilation must be restarted.

Modbus TCP/IP

Date: 20150821
Responsible: EO

Connection can be tested by opening cmd.exe in windows and use ping function.

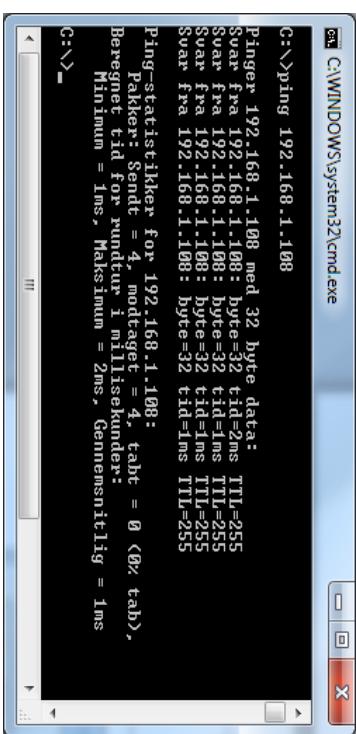

```
C:\>ping 192.168.1.108
Pinger 192.168.1.108 med 32 byte data:
Suar fra 192.168.1.108: byte=32 tid=2ms TTL=255
Suar fra 192.168.1.108: byte=32 tid=1ms TTL=255
Suar fra 192.168.1.108: byte=32 tid=1ms TTL=255
Suar fra 192.168.1.108: byte=32 tid=1ms TTL=255
Ping-statistikker for 192.168.1.108:
Pakker: Sendt = 4, modtaget = 4, tabt = 0 <B: tab>,
Beregnet tid for rundtur i millisekunder:
Minimum = 1ms, Maksimum = 2ms. Gennemsnitlig = 1ms
```

In Modbus Poll/Connection/Connect, type the IP-address of the unit:

Modbus TCP/IP

Date: 20150821
Responsible: EO



5.1.4 Example: Read Temperature values

In Modbus Poll/Set/Read/Write Definition:

- Choose 03 Read Holding Registers (4x)
- Choose start Address (last 3 digits)
- Choose Quantity (2 per parameter)
- Select PLC Addresses (Base 1). Otherwise there will be an address offset of 1

Dantherm UVC Controller

Page 51 / 52

Modbus TCP/IP

Date: 20150821
Responsible: EO




In the main window, right click on the values and select Float CD AB as format:

Dantherm UV/C Controller

Page 52 / 52

Modbus TCP/IP

Date: 20150821
Responsible: EO

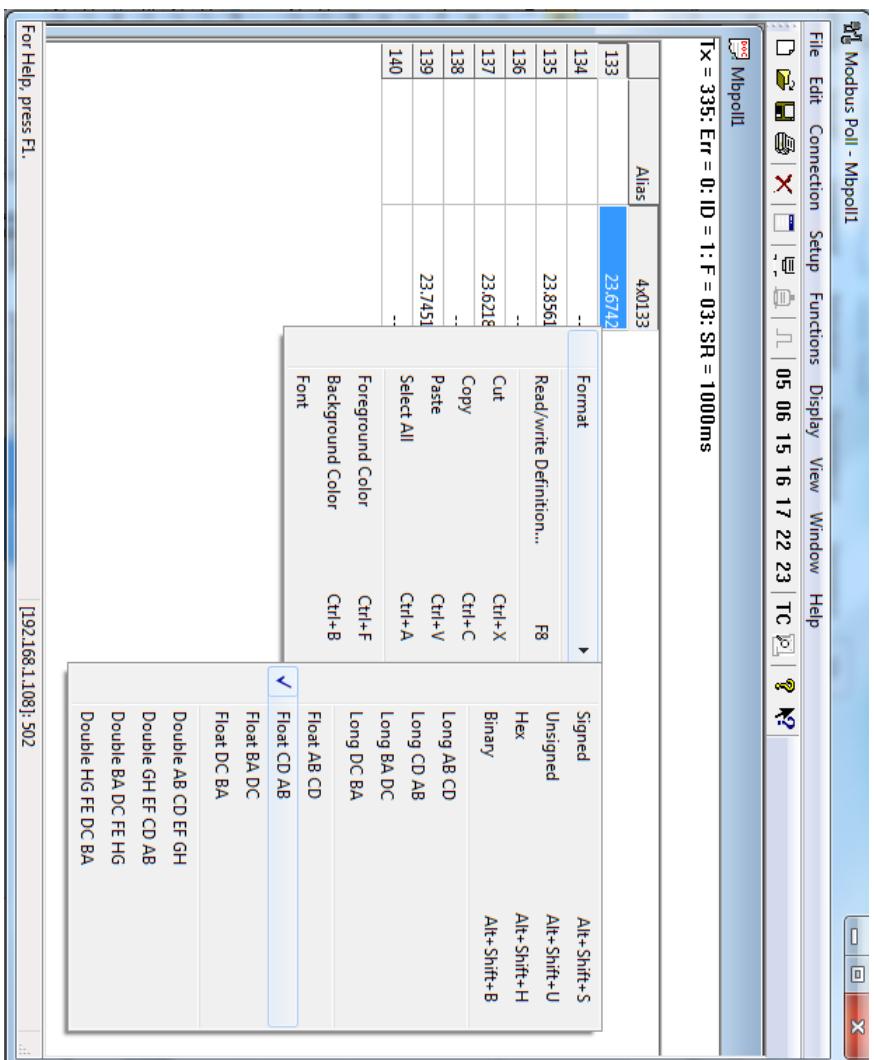

Notice that only some of the parameters use float values.