

INSTRUCTION MANUAL



HS2
(HydroSense II)
11/11

Copyright © 2011
Campbell Scientific, Inc.

Warranty

“PRODUCTS MANUFACTURED BY CAMPBELL SCIENTIFIC, INC. are warranted by Campbell Scientific, Inc. (“Campbell”) to be free from defects in materials and workmanship under normal use and service for twelve (12) months from date of shipment unless otherwise specified in the corresponding Campbell product manual. Batteries, fine-wire thermocouples, desiccant, and other consumables have no warranty. Campbell's obligation under this warranty is limited to repairing or replacing (at Campbell's option) defective products, which shall be the sole and exclusive remedy under this warranty. The customer shall assume all costs of removing, reinstalling, and shipping defective products to Campbell. Campbell will return such products by surface carrier prepaid within the continental United States of America. To all other locations, Campbell will return such products best way CIP (Port of Entry) INCOTERM® 2010, prepaid. This warranty shall not apply to any Campbell products which have been subjected to modification, misuse, neglect, improper service, accidents of nature, or shipping damage. This warranty is in lieu of all other warranties, expressed or implied. The warranty for installation services performed by Campbell such as programming to customer specifications, electrical connections to products manufactured by Campbell, and product specific training, is part of Campbell's product warranty. CAMPBELL EXPRESSLY DISCLAIMS AND EXCLUDES ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Campbell is not liable for any special, indirect, incidental, and/or consequential damages.”

Assistance

Products may not be returned without prior authorization. The following contact information is for US and international customers residing in countries served by Campbell Scientific, Inc. directly. Affiliate companies handle repairs for customers within their territories. Please visit www.campbellsci.com to determine which Campbell Scientific company serves your country.

To obtain a Returned Materials Authorization (RMA), contact CAMPBELL SCIENTIFIC, INC., phone (435) 227-2342. After an applications engineer determines the nature of the problem, an RMA number will be issued. Please write this number clearly on the outside of the shipping container. Campbell Scientific's shipping address is:

CAMPBELL SCIENTIFIC, INC.

RMA# _____
815 West 1800 North
Logan, Utah 84321-1784

For all returns, the customer must fill out a "Statement of Product Cleanliness and Decontamination" form and comply with the requirements specified in it. The form is available from our web site at www.campbellsci.com/repair. A completed form must be either emailed to repair@campbellsci.com or faxed to (435) 227-9579. Campbell Scientific is unable to process any returns until we receive this form. If the form is not received within three days of product receipt or is incomplete, the product will be returned to the customer at the customer's expense. Campbell Scientific reserves the right to refuse service on products that were exposed to contaminants that may cause health or safety concerns for our employees.

HydroSense II Table of Contents

PDF viewers: These page numbers refer to the printed version of this document. Use the PDF reader bookmarks tab for links to specific sections.


1. Introduction	1-1
2. Cautionary Statements	2-1
3. Quickstart	3-1
4. Overview	4-1
5. Specifications	5-1
5.1 Display Specifications.....	5-1
5.2 Sensor Specifications	5-1
6. Operation	6-1
6.1 Assembly and First Use	6-1
6.2 Measurements	6-1
6.3 Water Content Data.....	6-2
6.4 Water Deficit Data	6-2
6.4.1 Soil Types.....	6-3
6.4.2 Configuring Soil Profiles.....	6-4
6.4.3 Storage.....	6-5
6.4.4 Proper Measurement Technique and Limitations.....	6-6
6.4.4.1 Measurement Principle	6-6
6.4.4.2 Rod Insertion	6-6
6.4.4.3 Soil Factors Affecting Measurement	6-6
6.4.4.4 Measurements in Special Materials	6-7
7. User Interface	7-1
7.1 Buttons	7-1
7.2 Splash Screen	7-2
7.3 Main Screen	7-2
7.3.1 GPS Information	7-2
7.3.2 Status Information	7-3
7.3.3 Measurement Display.....	7-4
7.3.4 Deficit Display	7-4
8. Data Storage and Retrieval	8-1
8.1 Storing Data	8-1
8.2 What is stored?.....	8-1
8.3 Software	8-1
8.4 Connecting via Bluetooth.....	8-2
8.5 Collecting Data	8-2

9. GPS	9-1
9.1 GPS Synchronization	9-1
9.2 Geotagging and Zones	9-1
10. Troubleshooting	10-1
11. Maintenance	11-1
11.1 Batteries	11-1
11.1.1 How to Replace the Battery Pack	11-1
11.2 Rod Installation/Replacement	11-2
11.3 Operating System Updates	11-3

List of Tables

4-1. Comparison of HydroSense II and HydroSense(I)	4-1
4-2. HydroSense II Parts	4-3
6-1. Default Soil Profiles	6-3
7-1. Status Icons	7-3

Section 1. Introduction

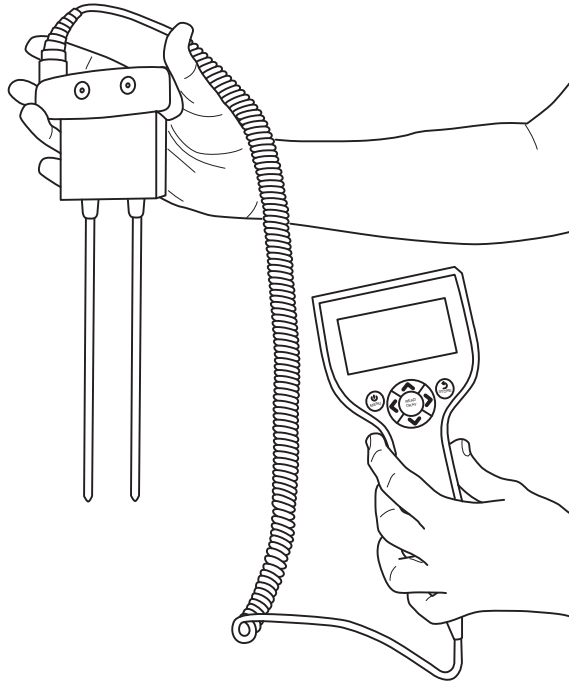






The HydroSense II is an easy-to-use, portable device for measuring volumetric water content of soil. The major components of the system are the display, the sensor, and the software. A sensor with 12 cm rods (model CS659) and a sensor with 20 cm rods (model CS658) are available.

Section 2. Cautionary Statements

- The connectors that connect the HydroSense II display to the sensor are a push-pull type with locators to align the connectors. **DO NOT TWIST.** The connectors can be damaged if the user twists them or attempts to screw or unscrew them.
- Remove the AA batteries before putting the HydroSense II display into storage.
- An unobstructed view of the sky may be required to achieve the most accurate global position data possible from the HydroSense II GPS.
- Sensor rods must be completely inserted into the soil before making a measurement.

Section 3. Quickstart

- Remove the HydroSense II display from the carry case.
- Remove the blue protective strip from the display window.
- Remove the sensor from the carry case.
- Connect the sensor to the display by mating the connector on the cable to the connector at the bottom of the display. **DO NOT TWIST** the connectors.
- Turn on the HydroSense by holding the  button for 3 seconds.
- Establishing a GPS sync may take up to one minute or more. When the GPS icon is displayed () , synchronization has been successful. Measurements with GPS data can now be taken. See [APPENDIX. GPS Settings](#) (p. A-7) for information on toggling the GPS.
- Insert the sensor rods fully into the soil.
- To take a measurement, press  . When the hourglass icon () in the lower right of the screen is extinguished, the measured VWC and period are shown on the screen.
- Press  to store the measurement. Assuming the GPS is in sync, follow the prompts to create a zone.
- Data are now stored in memory. To retrieve data, first establish a Bluetooth link with your PC, then collect data using the HydroSense II support software. See [SECTION. Connecting via Bluetooth](#) (p. 8-2) and [SECTION. Collecting Data](#) (p. 8-2).

Section 4. Overview

The HydroSense II is a portable system for measuring volumetric water content of soil. It is an improved successor to the HydroSense. [TABLE 4-1. Comparison of HydroSense II and HydroSense\(I\)](#) compares features of the HydroSense II and HydroSense (I).

TABLE 4-1. Comparison of HydroSense II and HydroSense(I)		
Feature	HydroSense II	HydroSense (I)
Volumetric water content and period	Yes, period as μ s	Yes, period as ms
Relative water content & water deficit with wet and dry references	Yes (10 profiles)	Yes (5 sites)
Sensor rod length	20 cm & 12 cm (NOT interchangeable)	20 cm & 12 cm (interchangeable)
Accuracy	20 cm rods: $\pm 3\%$ ($EC \leq 4dS/m$) 12 cm rods: $\pm 3\%$ ($EC \leq 6.5dS/m$)	$\pm 3\%$ VWC ($EC < 2dS/m$)
GPS and geotagging	Yes	No
GPS zones	Yes	No
Data storage	Yes (1000+ readings)	No
Bluetooth	Yes	No
Date and time	Yes (with GPS accuracy when available)	No
Display	128 x 64 pixel graphic LCD	2 line x 16 char alphanumeric LCD
LCD backlight	Yes	No
Firmware updates	User updateable	Factory only
Field carry case	Yes	No
Portable	Yes	Yes
Battery life	1000+ readings	2000+ readings

NOTE

Unlike the HydroSense (I), the 12 cm and 20 cm rods of the HydroSense II are not interchangeable.

The HydroSense II can display relative water content (RWC) based on wet and dry references set by the user. The unit also displays water deficit, which

indicates how much water is required (in mm of applied water) to return the soil to the previously saved wet reference.

Measurements are made by fully inserting the sensor rods into the soil and pressing **READ** **OK**. The process takes 3 to 4 seconds. The measurement can be stored and later downloaded to a computer for display and analysis. Communications between the computer and HydroSense II are via *Bluetooth* (p. 8-2). The HydroSense II includes a *GPS* (Global Positioning System) (p. 9-1) receiver that enables data to be stored with position information (*geotagged* (p. 9-1)).

The HydroSense II has these default power saving features:

- turns off when idle for a configurable period
- adjustable backlight brightness and on-time
- backlight automatically disabled in bright conditions
- GPS and Bluetooth can each be forced off.

The HydroSense II system consists of parts listed in [TABLE 4-2. HydroSense II Parts](#).



TABLE 4-2. HydroSense II Parts

Qty	Description
1	HydroSense II measurement and display unit (model CD660)
1	CS658 (20cm) or CS659 (12cm) water content sensor
4	AA batteries (factory installed inside the display)
1	Spare battery holder (spare batteries not included)
1	Wrench for installing / replacing rods
1	Tube of thread locking compound for rod replacement
1	Phillips screwdriver
1	Carry case
1	HydroSense II Support Software (HydroSoft) for PC on CD

Spare and Supporting Parts Available from Campbell Scientific:

- Spare 20 cm rods (pn 26483) for the CS658 sensor
- Spare 12 cm rods (pn 10184) for the CS659 sensor
- USB Bluetooth adapter for supporting PCs (pn 28411).

Section 5. Specifications

5.1 Display Specifications

Features

GPS accurate to ± 5 meter (typical) and ± 1 millisecond

Data storage >1000 records (ring memory)

Zone storage >100 records (fill and stop)

Display

128 x 64 pixel graphic LCD

Backlight

blue / white LED

brightness adjustable

Compatibility

Bluetooth (to ≈ 10 m)

Google Earth (via software)

Power Requirement

Source: 4 x AA alkaline batteries

Load

Asleep: 20 μ A

Backlight off: 2 mA

Backlight 60%: 18 mA

Backlight 100%: 30 mA

GPS active: 35 mA

Bluetooth active: 30 mA

Battery Life: 6 to 12 months (depends on usage and battery quality)

Weight:

0.34 kg (0.75 lbs)

Dimensions:

200 x 100 x 58 mm (7.9 x 3.9 x 2.3 in)

5.2 Sensor Specifications

Features:

Volumetric water content measurement

Measurement principle: time domain reflectometry

Measurement range: 0% - 50%

Precision: <0.05%

Accuracy

$\pm 3\%$ VWC in mineral soils

with solution EC ≤ 4.0 dS/m (20 cm rods)

with solution EC ≤ 6.5 dS/m (12 cm rods)

Weight: 0.45 kg (0.99 lbs)

Dimensions

Sensor body (L x W x H): 100 x 92 x 40 mm (3.9 x 3.6 x 1.6 in)

Rod length: 20 cm and 12 cm, rods not interchangeable

Rod diameter: 4.7 mm (nominal)

Section 6. Operation

6.1 Assembly and First Use

HydroSense II setup:





- Remove the HydroSense II display from the carry case.
- Remove the blue protective strip from the display window and discard.
- Remove the sensor from the carry case.
- Connect the sensor to the display by mating the connector on the cable to the connector at the bottom of the display.

NOTE

The connector is a push-pull type with locators to align the connectors. The connectors can be damaged if the user attempts to screw or unscrew them. To mate the connectors, simply bring them together and turn until they are aligned, then applying firm pressure, slide them together until they click. To disconnect, pull back on the connector collar with the thumb and forefinger and pull the two connectors apart.

The HydroSense II stores positional information (when available), time, and date with measurements. To reliably take advantage of the GPS, use the HydroSense II outdoors with a clear view of the sky. Measurements can be made and data stored without a [GPS](#) (p. 9-1) signal; however, the HydroSense II Support Software (HydroSoft) will be unable to later group and display data geographically.

Taking a measurement:

- Turn on the HydroSense II by holding the  button for 3 seconds.
- Establishing GPS sync may take up to one minute or more. When the GPS icon is displayed () , synchronization is successful. Measurements with GPS data can now be taken.
- Fully insert the sensor rods into the soil.
- To take a measurement, press the  button. When the hourglass icon () in the lower right of the screen is extinguished, the measured VWC and period are shown on the screen.

6.2 Measurements

The HydroSense II presents two distinct data sets. One data set includes volumetric water content expressed as percent (%) and period (μ s). The second data set includes an estimate of relative water content relative to pre-measured wet and dry references, and water deficit. Water deficit provides an estimate of applied water required (in mm) to return the soil to the “wet” water content.

By default, only water content data are displayed. Using the [configuration menu](#) (p. A-1), water deficit data can be enabled to display side-by-side with water content data.

6.3 Water Content Data

Volumetric water content (VWC) and period (PER) data are retrieved from the sensor. The HydroSense II sensor uses a proprietary technique to determine water content over widely varying soils while correcting for a range of bulk electrical conductivities. Volumetric water content (labeled “VWC” on the display) and period (labeled “PER” on the display) data are requested from the sensor via SDI-12 serial protocol.

Soil consists of three main constituents – mineral particles (sand, loam, or clay), water and air. Air and water occupy the spaces or pores formed between the mineral particles. In agricultural soils, these pore spaces typically make up approximately 50% of the soil by volume, with water and air together making up the remaining 50%. As a result, water content normally ranges from 0% to 50%. In some conditions, the sensor is unable to determine the soil water content. In these cases an out-of-range symbol (---) is displayed.

NOTE

Even when the sensor cannot determine the VWC, the signal period measurement will always be displayed. In special media this value can often be used with a soil specific calibration to estimate water content.

6.4 Water Deficit Data

Water deficit data help irrigators with water management decisions. By default the HydroSense II does not show water deficit data on the display screen. To enable the water deficit data display, turn on Deficit Mode in the [configuration menus](#) (p. A-1).

In water deficit mode, wet and dry references can be stored for up to ten soils. The current measurement is compared to those reference values and relative water content (RWC) is calculated on a scale from 0% (dry) to 100% (wet). While any two volumetric water content measurements can be stored as “wet” and “dry” references, the normal procedure is to store the wilting point as the “dry” value and field capacity as “wet”. The relative water content is calculated as

$$RWC = \frac{VWC - VWC_{dry}}{VWC_{wet} - VWC_{dry}} \times 100$$

where

VWC = the current measurement

VWC_{dry} = the dry reference

VWC_{wet} = the wet reference.

For example, a particular clay-loam soil may reach wilting point at 18% and field capacity at 35%. With these references, a VWC measurement of 24.5% will display as a relative water content of 38.2%. A VWC of 30% is calculated as an RWC of 70.6%.

An RWC value greater than 100% indicates that the soil has a water content value greater than the “wet” reference; a negative value indicates that the water content is below the “dry” reference.

Water required (in mm of applied water) to return the soil to the “wet” reference is also calculated and reported as water deficit. A negative deficit indicates that the water content is greater than the “wet” reference for that soil type.

Since the sensors average water content along the length of the rods, the sample volume difference between the 20 cm and 12 cm sensors is significant. This difference affects the water deficit value. Therefore, the current measurement and reference values must be made with the same rod length.

6.4.1 Soil Types

The HydroSense II needs three parameters to calculate relative water content and deficit:

- “wet” water content set point
- “dry” water content set point
- sensor length

These parameters are soil specific and grouped as “soil profiles”. The HydroSense II holds up to 10 soil profiles labeled “SOIL 1” through “SOIL 10”.



Some soil profiles are preset to default values. These values may be used or overwritten as desired, but take care to record what soil type is used for each profile. The default soil profiles are described in [TABLE 6-1. Default Soil Profiles](#).

TABLE 6-1. Default Soil Profiles				
Soil No	“Dry”	“Wet”	Rod Length	Soil Description
1	7%	15%	20 cm	Sand
2	10%	20%	20 cm	Sandy Loam
3	18%	35%	12 cm	Sandy Clay
4	15%	30%	12 cm	Loam
5	20%	40%	12 cm	Silty Clay
6	17%	35%	12 cm	Clay Loam

6.4.2 Configuring Soil Profiles




```

10/11/2011      22:48:02
ZONE 00001      * 5 1 *
VWC 10.0%      SOIL 1
PER 1.000us     RWC 37.5%
                DEF 10.0mm
CS658 20cm
Lt19°15.000'S  Ln146°45.000'E
  
```

When Deficit Mode is enabled (*SECTION. Deficit Display* (p. 7-4)), soil profiles are accessed from the *main screen* (p. 7-2) of the HydroSense II. To select the current soil profile (“SOIL 1” in the preceding figure), press the  button. The soil profile number will be highlighted. To open the soil profile list, press .

```

                SOIL TYPE
SOIL 1
SOIL 2
SOIL 3
SOIL 4
SOIL 5
SOIL 6
SELECT: OK      CANCEL: 
  
```

The soil profile list should be displayed. Use   to move through the list to the desired soil profile and press .



```


                SOIL 1 - CS658 20cm
DRY VWC: 7.0%
WET VWC: 15.0%
CLEAR SOIL
SELECT THIS SOIL
  
```

```

SELECT: OK      EXIT: 
  
```

A soil profile page will be displayed. This page shows the reference values stored for this soil profile and the rod length used.

To select this soil profile to apply to the current measurement, press  to highlight **SELECT THIS SOIL** and press .

New reference values can be set from the soil profile screen. To do so, correctly insert the sensor in the reference soil and select “WET VWC” or “DRY VWC” and press .



The screen will show MEASURING... while the measurement is taken. After 3 to 4 seconds, the soil profile page will be shown with the reference value changed. Repeat this process for the remaining wet or dry set point.

If desired, the soil profile can be cleared by selecting **CLEAR SOIL** then **READ OK**.

NOTE

The CLEAR SOIL operation cannot be undone.

The sensor length stored in a soil profile is automatically updated to match the sensor used whenever the wet and dry reference values are changed. If the sensor length used to change one of the references is different to that previously used for the soil profile, the following screen will be shown.

```

SELECT PROBE - SOIL 1
OLD PROBE - CS658 20cm
NEW PROBE - CS659 12cm
  
```

SELECT: OK

EXIT:

Selecting **NEW PROBE** will overwrite the soil profile, clearing the other reference value, whereas selecting **OLD PROBE** will discard the measurement and leave the soil profile unchanged. This feature forces both reference values to use the same rod length. This step cannot be reversed. Using , select the desired option and press **READ OK** to accept or **STORE** to discard the new measurement and return to the soil profile screen.

Once the soil profile changes are complete, use to choose **SELECT THIS SOIL** and press **READ OK**. This will return to the *main screen* (p. 7-2) and use the new soil profile.

6.4.3 Storage

The HydroSense II does not store relative water content or deficit measurements to flash. Only water content measurements are stored.

6.4.4 Proper Measurement Technique and Limitations

6.4.4.1 Measurement Principle

The HydroSense II uses soil dielectric permittivity to estimate volumetric water content. Dielectric permittivity of water is much greater than that of other soil constituents making possible the correlation of water content to measured dielectric permittivity. Additionally, water and air are the only soil constituents that change appreciably over biological time scales.

The electronics contained in the water content sensor generate the high frequency electromagnetic energy necessary to polarize water molecules such that their permittivity can be determined. The energy passes along a waveguide formed by the two rods and reflects from the end of the rods and back into the sensor head where the reflected signal is detected and time of travel is measured. The time of travel along the waveguide is predominantly dependent on the dielectric permittivity. Since the measured time is the net result of passing down the length of the rods and back again, it reflects an average of the water content over the volume of the waveguide. The sensor electronics also detect electrical conductivity (EC) between the rods and use this to correct the permittivity measurement. This allows the sensor to operate in a wider range of soil EC. The calibration coefficients to convert measured time of travel to dielectric constant and water content are contained within the sensor head and are the intellectual property of Campbell Scientific.

6.4.4.2 Rod Insertion

For accurate, repeatable measurements, the rods of the sensor must be fully inserted into the soil. Since the water content is averaged over the length of the rods, the reading from a 20 cm sensor inserted vertically will be the average of the soil moisture over the top 20 cm; however, the same rods inserted at 45° will yield an average of the top 14 cm. This is often used for shallow rooted crops, such as turf, to measure the average water content in the root zone of the plant. Inserting the rods completely at an angle often requires more attention during the insertion action.

The measurement volume of a sensor varies somewhat with soil type. As a guide, volume extends along the full length of the rods and outward radially from each rod a distance of approximately 3 cm.

Soil is not homogeneous. Cracks, rocks, pore size, plant roots, and texture layers are not usually distributed uniformly throughout a measured profile. If the water content over a large area such as a cropped field is to be determined, several measurements may be required to establish a representative measurement.

6.4.4.3 Soil Factors Affecting Measurement

The HydroSense II is predominantly sensitive to dielectric permittivity, and therefore soil water content (see [SECTION. Measurement Principle](#) (p. 6-6)). Other physical properties of the soil can affect the measurement. If the soil contains a large clay fraction or has high electrical conductivity (EC), the applied signal can be attenuated sufficiently to affect detection of the reflected signal in the sensor electronics. A very high organic matter fraction has a similar effect. The HydroSense II will still respond to changes in water content in these atypical soils, but its response will deviate from that of soils wherein the attenuation factors are present in small non-interfering amounts. The

calibration coefficients fixed in the HydroSense II sensor were determined in laboratory studies on typical soils. When measuring atypical soils, user determined coefficients can often be applied to the measured period value.

Rocky soils can make rod insertion difficult and introduce variability in water content measurements taken in the same general area. Rocks occupy space otherwise occupied by the fine soil fraction, but they do not hold water in the same manner as soil. If two proximal measurements are made in rocky soil, the measured water content can differ significantly if large quantities of rock occupy part of the sensitive volume of one measurement but not the other.

6.4.4.4 Measurements in Special Materials

The HydroSense II was designed for use in agricultural soils, but the measurement technique underlying the instrument supports other potential applications. Other porous media can be monitored using the period value shown on the display. The period is strongly related to dielectric permittivity of the material surrounding the sensor rods and can be used as a relative value to measure changes in the material of interest. Period generally increases proportionally with water content. For actual water content values, a soil specific calibration can be performed using an independent measure of water content such as gravimetric analysis. A calibration equation can then be derived to relate period to water content.








Section 7. User Interface

The following section contains a detailed description of the HydroSense II user interface.


Screenshots included in this section were captured using factory default settings (except where noted); however, they may not reflect the exact image seen on your screen because of configuration settings chosen or operating system updates

Red highlights on the images mark areas of interest. The highlights are added for illustrative purposes and are not present on the screen of an actual display.

7.1 Buttons

User Interface Buttons	
Button	Function
	Power/MENU — To turn the HydroSense II on or off, press and hold this button for 3 seconds. When pressed for less than 3 seconds in the <i>main screen</i> (p. 7-2), the <i>main menu</i> (p. A-1) will be displayed.
	READ/OK — Triggers a new measurement in the <i>main screen</i> (p. 7-2). Also used to select an item in a list or to answer “OK” to prompts.
	Back/STORE — From the <i>main screen</i> (p. 7-2), used to store the current reading to flash memory. In the menu system, used to move “Back” to the previous menu.
	Up — Moves the cursor up.
	Down — Moves the cursor down.
	Left — Moves the cursor to the left.
	Right — Moves the cursor to the right.

7.2 Splash Screen

To turn the HydroSense II on, press and hold  MENU for 3 seconds. The following splash screen is displayed.

CAMPBELL SCIENTIFIC

HydroSense II

OS: 1.02


SN: 27384

The operating system version number and device serial number are displayed. The splash screen is shown for 2.5 seconds.

7.3 Main Screen

After the splash screen, the main screen is shown. The main screen contains a number of different elements which are explained in the following subsections.

7.3.1 GPS Information

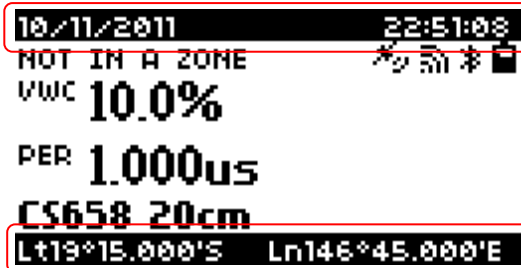

The image shows a monochrome LCD screen with the following text:

Top bar: 10/11/2011 22:51:08

Line 1: NOT IN A ZONE (with signal strength icons)


Line 2: VWC 10.0%

Line 3: PER 1.000us

Line 4: CS658 20cm

Bottom bar: Lt19°15.000'S Ln146°45.000'E

The top bar of the screen displays the current date and time information. This time is synchronized with the GPS when available. The bottom bar shows the current GPS coordinates. Both values are updated automatically.

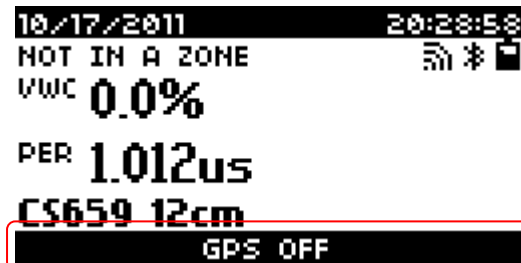

The image shows the same monochrome LCD screen as above, but with the following changes:

Top bar: 10/17/2011 20:28:58

Line 1: NOT IN A ZONE (with signal strength icons)

Line 2: VWC 0.0%

Line 3: PER 1.012us


Line 4: CS659 12cm

Bottom bar: GPS OFF


If the GPS is turned off using the [configuration menu](#) (p. A-1), GPS OFF is displayed at the bottom.

7.3.2 Status Information

The zone name is shown in the upper left of the screen:

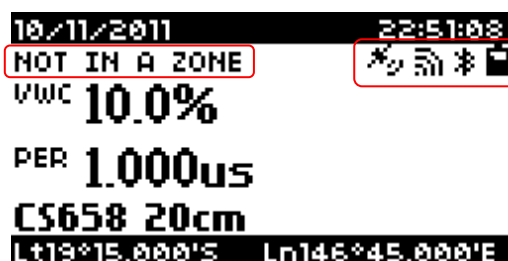



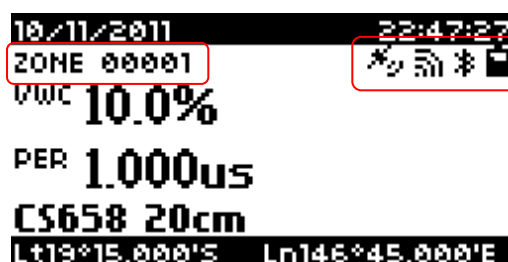



When the current position is not within an existing zone, **NOT IN A ZONE** is displayed. When the HydroSense II is moved within the boundaries of an existing zone (such as ZONE 00001 in the following figure), the zone name will be displayed.




This change occurs automatically when the HydroSense II detects that it is within the boundaries of a zone. For more information on zones, please see [SECTION. Geotagging and Zones](#) (p. 9-1).

The upper left of the [main screen](#) (p. 7-2) shows a group of status icons. They are detailed in [TABLE 7-1. Status Icons](#).

TABLE 7-1. Status Icons	
	GPS--This icon is shown when the GPS has acquired synchronization with the GPS satellite constellation. This icon disappears when the GPS is turned off or the GPS sync is lost.
	Bluetooth connection--This icon is displayed when a Bluetooth connection has been successfully established. When the Bluetooth connection is closed, this icon disappears.
	Bluetooth active--This icon is shown whenever the Bluetooth radio is turned on and discoverable. If the Bluetooth is turned off, this icon disappears.
	Battery--This icon indicates the state of charge of the battery pack. The icon changes from  , which indicates the battery is fully charged, to  when it is empty.

7.3.3 Measurement Display

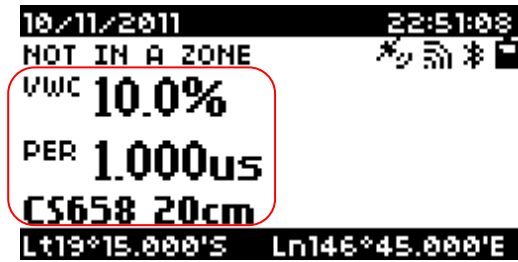


10/11/2011 22:51:08
NOT IN A ZONE
VWC 10.0%
PER 1.000uS
CS658 20cm
Lt19°15.000'S Ln146°45.000'E

The center left of the screen contains the measurement results.

- VWC — This section shows volumetric water content in percent. This value is automatically compensated for varying soil conditions. If the measurement is out of range the display will show “---” in this position.
- PER — The average period measured -- expressed in microseconds.

Under the sensor readings are displayed model number and rod length of the sensor used (in this case “CS658 20cm”). This is updated with each measurement.

If the water content sensor is not properly connected or is malfunctioning, the display will show “SENSOR TIMEOUT”.



10/17/2011 20:21:50
NOT IN A ZONE
VWC
PER
SENSOR TIMEOUT
Lt19°17.386'S Ln146°50.013'E

7.3.4 Deficit Display


When deficit mode is enabled, the water deficit section is displayed at center right of the [main screen](#) (p. 7-2).

The following image shows the main screen without deficit mode enabled.



10/11/2011 22:47:27
ZONE 00001
VWC 10.0%
PER 1.000uS
CS658 20cm
Lt19°15.000'S Ln146°45.000'E

The following image shows the main screen with deficit mode enabled.

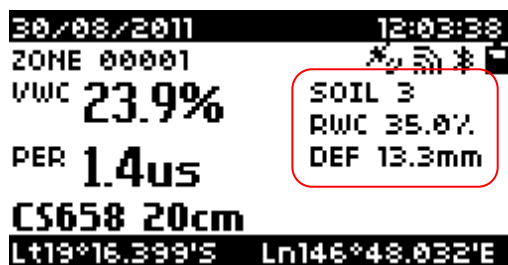

30/08/2011 12:03:38
ZONE 00001 % 51 %
VWC 23.9% SOIL 3
PER 1.4us RWC 35.0%
CS658 20cm DEF 13.3mm
Lt19°16.399'S Ln146°48.032'E


The water deficit section of the display contains the following information.

- SOIL # (soil profile number) — Range: 1 to 10.
- RWC — relative water content. Range: 0% to 100% where 0% represents “dry” (wilting point) and 100% is “wet” (field capacity).
- DEF— water deficit expressed in millimeters (mm).



Section 8. *Data Storage and Retrieval*

The HydroSense II includes non-volatile flash memory for storage of data and configuration settings. FLASH memory is preserved when the batteries are exhausted or changed.


8.1 Storing Data

To store data with the HydroSense II, press the  button from the *main screen* (p. 7-2). If the current location is not within an existing zone, a prompt to create a new zone will be presented. If a zone already exists, data are attributed to that zone.

NOTE

The  function stores volumetric water content values. Make a measurement before pressing the  button.

8.2 What is stored?

The flash file system holds the water content data file, the zone table, and the table of configuration settings. The most important among these is the water content data file. When the user stores a measurement by pressing , the most recent measurement of volumetric water content (VWC) is stored with the measured period, sensor type, current date and time, and latitude and longitude (if GPS synchronization has been achieved). If the GPS is switched off or does not have a valid synchronization, system time and date are used without GPS confirmation of their accuracy. When the GPS is disabled, check and adjust the system clock before storing data.

The water content data file is configured as ring memory and is large enough to hold over 1000 values. When the file becomes full, the oldest data are overwritten and storage continues.

The zone data file is configured as fill-and-stop memory. It holds a list of zones that have been created. Zones are created whenever a datum is stored in a new location. Each zone record contains the center position (latitude and longitude), radius in meters, and the zone name. The zone file is large enough to hold over 100 zones. When the zone data file is full, a new zone cannot be created until an old zone is removed.


The configuration settings file is managed automatically. These settings are synchronized to the computer where they can be viewed, modified, backed up, and restored. For more information, please refer to the HydroSense II Support Software user guide.

8.3 Software

The HydroSense II ships with the latest version of the HydroSense II Support Software on CD. For the latest version, please contact Campbell Scientific. For a complete guide to the use of this software, please refer to the HydroSense II Support Software user guide.

8.4 Connecting via Bluetooth

Steps to achieve a Bluetooth connection:

- Start HydroSense II Support Software.
- Turn on the HydroSense II display by holding the  button for 3 seconds.
- In HydroSense II Support Software, click the Discover button to find Bluetooth devices within range.
- When the HydroSense II unit is discovered, click the “Connect” button.

The first time the HydroSense II unit is used with a new computer, the computer and HydroSense II must be “paired” before a connection can be made. The pairing code is “1234”. For more information, please refer to the HydroSense II Support Software user guide.

While a Bluetooth connection is open, the HydroSense II will not shut down. Turn off the HydroSense or disable the Bluetooth once data have been collected or settings have been updated to avoid early depletion of the batteries.

8.5 Collecting Data

Before collecting data, establish a Bluetooth connection ([SECTION. Connecting via Bluetooth](#) (p. 8-2)). Data are downloaded to the computer by clicking the “Synchronise” button in HydroSense II Support Software. The synchronization process downloads new water content data and updates the zone table and configuration settings.

For more information, please refer to the HydroSense II Support Software user guide.

Section 9. GPS

The HydroSense II incorporates a receiver for the Global Positioning System (GPS). To calculate position, the GPS module must receive radio time signals from at least four satellites simultaneously. If the receiver detects signals from more than four satellites, it will use the additional data to determine a more accurate position.

9.1 GPS Synchronization

The GPS receiver needs a clear view of the sky to reliably calculate position. When the receiver resolves the current position, it has achieved “synchronization”.

The GPS antenna is located inside the display above the LCD. The antenna faces toward the sky when the display is held upright in a comfortable reading position.

To synchronize the GPS, take the HydroSense II outside, away from tall buildings or large obstructions and turn it on. GPS synchronization will normally be achieved in approximately 30 seconds, but may take up to a minute or more. The HydroSense II indicates that synchronization has been achieved by displaying the GPS sync icon (✱) on the *main screen* (p. 7-2). When the GPS is synchronized, the internal clock of the HydroSense II is adjusted to match GPS time to within one millisecond. GPS can be disabled using the *configuration menus* (p. A-1).

9.2 Geotagging and Zones

When the GPS module is enabled, the HydroSense II is able to store water content data tagged with position information (latitude and longitude).

Using this position information, data can be grouped by geographical location. These geographical areas are referred to as “zones” and are characterized by a center coordinate and radius. Volumetric water content values are grouped, filtered and charted by the computer software based on the zone in which the data was collected.

The HydroSense II keeps a table of up to 100 GPS zones in memory and searches through this table every few seconds to determine if it is within the boundary of a zone. When it has determined that the user is within a zone, it displays the zone name on the *main screen* (p. 7-2).





10/11/2011 22:47:27
ZONE 00001 ✱
VWC 10.0%
PER 1.000uS
CS658 20cm
Lt19°15.000'S Ln146°45.000'E

Zones can be created when data are stored. When the [Store](#) (p. 7-1) button is pressed, and the HydroSense II determines that the current location is not in an existing zone, **CREATE A NEW ZONE?** is displayed.

ZONE NOT FOUND

CREATE A NEW ZONE?


YES: OK NO: 




To create a new zone, select YES and press  ^{READ}OK . To exit without storing, press  ^{STORE}STORE.

When a new zone is created, the following screen is displayed.


GPS ZONE RADIUS

3 m
5 m
10 m
15 m
20 m
25 m

CREATE: OK CANCEL: 

Use the   buttons to select the radius to use for this zone and press ^{READ}OK  to save the new zone details. Press ^{STORE}STORE to return to the [main screen](#) (p. 7-2) without creating a new zone and without storing data.


Once a zone is created, the water content data will be stored. By default the zone name will be in the form “Zone xxxxx” where xxxxx is a number that automatically increases each time a new zone is created. Zones can be renamed and updated using HydroSense II Support Software.

 If the ^{STORE}STORE button is pressed when the GPS does not have a valid GPS sync, a warning message is display.

WARNING

NO GPS LOCK
STORE ANYWAY?

YES: OK NO: 


This message warns that the current measurement may not be stored with an accurate date or time. To continue and store data without GPS information, press ^{READ}OK  . To return to the [main screen](#) (p. 7-2) without storing, press ^{STORE}STORE.

Section 10. Troubleshooting

Problem	Explanation / Recommendation
Display shows “SENSOR TIMEOUT” continuously.	This message indicates that the HydroSense II display has not received a response from the sensor. Check that the connectors are mated correctly, the pins are clean, and the connector has not been damaged. If this problem persists, please contact Campbell Scientific.
Display shows “NO GPS LOCK. STORE ANYWAY?” when attempting to store data.	This warning indicates that the GPS has not achieved synchronization with the GPS satellite network. This may occur because the GPS has been turned off, does not have a clear view of the sky or simply has not been turned on long enough to achieve synchronization. If selecting OK in response to this query, data will be stored without positional information and the date and time information may be inaccurate.
The volumetric water content is reported as “---”.	“---” indicates that the water content sensor was unable to determine the volumetric water content for these soil conditions. Try taking the measurement a few more times or try another location close by. For extreme or special soils, period can sometimes be used in conjunction with a soil specific calibration to yield usable results.
The main screen shows “GPS off” in the bottom bar.	This indicates that the GPS is turned off. Please refer to APPENDIX. GPS Settings (p. A-7) to find the GPS power control.
On the display of my HydroSense II, the battery icon, the Bluetooth icon, and the GPS icon are visible, but a forth icon appears to be missing.	The forth icon is the Bluetooth connection icon. It appears only when the HydroSense II is paired to a computer and there is an active data connection between them. This happens when collecting data or changing configuration settings. Generally, when using the computer to collect data from the HydroSense II, focus is on the computer screen and not the HydroSense II display, so this icon may not be noticed.

Section 11. Maintenance


11.1 Batteries

The HydroSense II is powered by four AA alkaline batteries. Use a high quality battery for best operation. Battery brands considered adequate for the power requirements of the HydroSense II include (inclusively) Energizer[®], Duracell[®], and Panasonic[®]. Under normal use, the life of high quality batteries should be close to a year. Replace the batteries when the voltage is less than 4 V. The battery indicator icon on the *main screen* (p. 7-2) gives a warning of the battery status. When the indicator shows the batteries are near empty () , have replacement batteries available. The HydroSense II carry case has a spare battery pack (holder only – batteries not included).

Configuration settings, stored data, and zones are stored in flash memory such that they will be preserved during battery replacement.

11.1.1 How to Replace the Battery Pack

The process to replace the battery pack is:

- Place the HydroSense II face down on a clean dry surface.
- Remove the four (4) Phillips screws on the back of the HydroSense II case with the Phillips screwdriver provided in the carry case.
- Carefully separate the back cover from the front cover, taking care to keep the display face down (if the unit is turned face up, the battery holder inside may fall out and damage the battery wires).
- Unclip the battery connector from the battery holder. This connector looks similar to the terminals of a 9V PP3 battery. **DO NOT CONNECT A 9 V BATTERY TO THE TERMINALS.** This may cause permanent damage to the HydroSense II. Damage of this kind is not covered under warranty.
- Connect the spare battery holder to the battery connector.
- Carefully replace the back cover of the HydroSense II and replace the four screws.
- Turn over the HydroSense II and hold the  **MENU** button for 3 seconds to activate.

11.2 Rod Installation/Replacement

Threaded inserts in the epoxy body of the sensors allow user replacement of the stainless steel rods. Initially, these rods are fitted at the factory and with normal use should provide years of trouble-free service.

Insertion into rocky soils can lead to bending of the rods. Bent rods should be straightened or replaced as soon as possible since non-parallel rods can introduce error and lead to more serious bending or breaking. Small bends can often be straightened by hand, but more serious bends may require rod replacement. Spare rods can be purchased from Campbell Scientific.

- Spare 20 cm rods (pn 26483) for the CS658 sensor
- Spare 12 cm rods (pn 10184) for the CS659 sensor



The rods have a hexagonal nut collar at the base of the unthreaded portion. When threaded into the sensor body, this collar distributes lateral forces over a relatively large area to reduce rod deformation. Rods must be fully threaded into the sensor body with the collar in full contact with the sensor body. The nut should be tightened using the open-ended wrench provided. Do not over tighten.

Although the friction between the nut and the threaded insert is often enough to prevent the rods from becoming loose, apply thread locking compound to ensure the rods remain firmly attached. A small amount of Loctite® 222MS THREADLOCKER is included with the HydroSense II to use when replacing rods. The compound should be used sparingly. Only a thin coating is necessary. A thick coating may affect measurements. The small tube supplied is enough to treat several sets of rods.

Replacement of rods involves unscrewing the threaded end of each rod, applying thread locking compound to the threads of the replacement rods, and screwing them firmly into the sensor body using the wrench provided.

Unlike the original HydroSense, the HydroSense II sensors do not support interchangeable rods. The CS658 will only measure accurately with 20 cm rods and the CS659 only with 12 cm rods. Threads have been mismatched

intentionally to ensure that rods are not inadvertently mixed up. Please do not attempt to change rod sizes.

Note the following points.

- The threads of the replacement rods and the sensor body should be clean and free from damage.
- Avoid over-tightening. In extreme cases, this may cause damage to the threaded inserts of the sensor head, permanently damaging it.
- Full contact between the nut and sensor body is required for proper operation.
- To prevent loosening of the rods, the thread locking compound should be allowed to cure. This time depends on temperature, but is generally between 3 and 12 hours.

11.3 Operating System Updates

Updates to the HydroSense II operating system (firmware) are made available at www.campbellsci.com. These updates may provide fixes for known problems, add new features, change default settings, or make improvements to the user interface. Normal practice is to keep the HydroSense II operating system up to date.






For details of the operating system update procedure, please refer to the HydroSense II Support Software user guide. Updating the operating system will erase all data, zones, and configuration settings. Be sure data are collected and backed up on the computer before performing an update.

Begin an operating system upgrade with a fresh set of batteries. If the batteries in the HydroSense II fail during the update process, corruption of the operating system can result. Normally, the batteries can be replaced and the update restarted. In rare cases, however, this corruption will require factory repair.

Appendix A. Configuration Menus

A.1 Main Menu


```
MENU
DEFICIT MODE
BLUETOOTH ON/OFF
TIME/DATE
DISPLAY SETTINGS
GPS
SYSTEM SETTINGS
SELECT: OK          BACK: ↩
```

To enter the main menu, press  from the *main screen* (p. 7-2). Using the   buttons, select the desired menu item and press . To exit the menu, press .

A.2 Deficit Mode

```
DEFICIT MODE
ON
OFF
```





SAVE: OK CANCEL: ↩

This menu selects whether or not soil deficit is displayed. Select ON to show deficit results and OFF to hide them. To quit this menu without saving changes, press .

A.3 Bluetooth Power

```
BLUETOOTH POWER
ON
OFF
```

SAVE: OK CANCEL: ↩

This menu controls power to the Bluetooth module. Switching off Bluetooth will save power while the unit is awake and increase battery life. Bluetooth will need to be re-enabled to collect data with a computer. Using the   buttons, select the power state to use and press . To exit the menu without saving, press .

A.4 Time/Date Menu

```

TIME/DATE
SET TIME/DATE
DATE FORMAT
TIME ZONE
TIME SYNC

SELECT: OK          BACK: ↩

```

This submenu contains a list of settings to configure the clock system of the HydroSense II. Using the \wedge \vee buttons, highlight one of the options and press READ **OK**. Alternatively, press STORE to quit this menu.

A.5 Time Set

```

SET TIME
DATE FORMAT: DD/MM/YYYY

12 : 06 : 08
30 / 08 / 2011

CHOOSE: ← →      ADJUST: ↑ ↓
SAVE: OK          CANCEL: ↩

```

The HydroSense II clock is normally set automatically at GPS sync. This menu is used to set the HydroSense II clock if GPS is not used. The $\langle \rangle$ buttons can be used to move between the different parts of time and date, while the \wedge \vee buttons adjust each individual part of the time and date. At the top of the screen, the date format is displayed for reference. To save the adjusted time to the clock, press READ **OK**. To exit without saving, press STORE.



A.6 Date Format

```

DATE FORMAT
DD/MM/YYYY
MM/DD/YYYY
YYYY/MM/DD

SAVE: OK          CANCEL: 

```

This menu sets the format in which dates are displayed throughout the system. Use the   buttons to choose the desired format, and press ^{READ}OK. To quit the menu without saving, press ⁵STORE.



A.7 Time Zone

```


TIMEZONE
UTC+10:00
UTC+10:30
UTC+11:00
UTC+11:30
UTC+12:00
UTC+12:45
SAVE: OK          CANCEL: 

```

The HydroSense II is able to use its GPS to provide a very accurate clock. Whenever a valid GPS signal is detected, the clock is adjusted using the received time (in UTC) and the time zone selected in this menu.

Time zones from UTC-12 to UTC+14 are available. Use the following diagram for information on global time zones. Use   to select a time zone and press ^{READ}OK. To exit without making changes, press ⁵STORE.

The HydroSense II supports only standard time; it does not automatically adjust for daylight saving time. However, by incrementing or decrementing to an adjacent time zone, daylight saving time can effectively be used if desired.

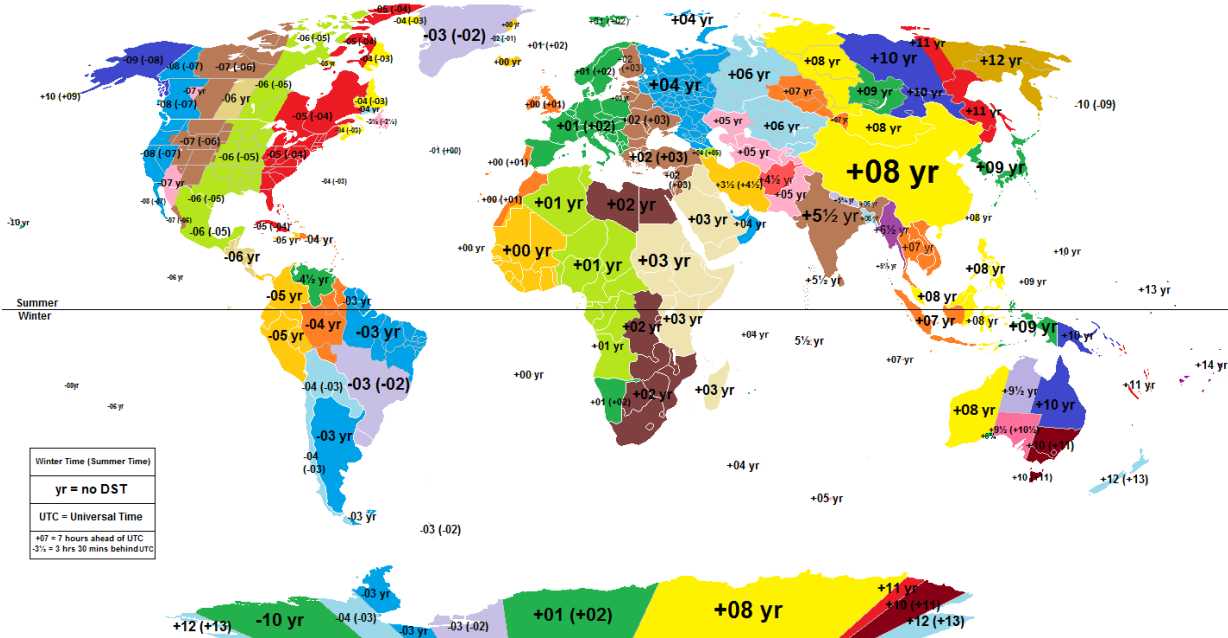

Source and copyright for this image - Wikipedia (http://en.wikipedia.org/wiki/Time_zone).

A.8 Time Synchronization



The HydroSense II uses its GPS to provide a very accurate clock. Whenever a valid GPS signal is detected, the clock is adjusted using the received time (in UTC) and the configured time zone. To use GPS synchronization, select ON from the list, or OFF to ignore the GPS time. This menu item does not disable GPS position. After highlighting a selection from the list, press **READ** **OK**. To quit the menu, press **STORE**.

A.9 Display Settings





```

DISPLAY SETTINGS
LCD CONTRAST
BACKLIGHT BRIGHTNESS
BACKLIGHT ON TIME
LIGHT SENSING

```

SELECT: OK

BACK: 

This submenu contains a list of settings related to the screen of the HydroSense II. Using the   buttons, highlight one of the options shown and press . Alternatively, press  to exit the menu.

A.10 Contrast





```

SET CONTRAST
- [ ] +

```

SAVE: OK

CANCEL: 

The contrast of the LCD can be affected by extremes of temperature or lighting. This menu controls screen contrast. Press the  button to lower the contrast (make the image lighter) or the  button to increase contrast (darker). Please note that the highest and lowest contrast settings should only be required in the most extreme conditions. Press  to save the new setting and  to exit.

A.11 Brightness

```




SET BRIGHTNESS
- [ ] +

```

SAVE: OK


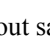
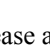
CANCEL: 

This menu allows the brightness of the LCD backlight to be adjusted. Since the backlight uses a significant amount of power, reducing the brightness will extend battery life. In bright, sunny conditions, the backlight has very little effect and generally doesn't help readability, so the HydroSense II detects the ambient light conditions and automatically turns off the backlight when

exposed to bright daylight. Using the  buttons, set the brightness to an acceptable level. Press  to save or  to quit.

A.12 Backlight on Time







The LCD backlight turns on whenever a button is pressed. This menu configures how long it remains lit after each press. The  buttons change the period and  will save it. Press  to exit without saving.

Setting the backlight on time to “Always On” will increase average power consumption significantly, and drastically reduce battery life.

A.13 Light Sensing



In bright, sunny conditions, the LCD backlight has very little effect on readability, so the HydroSense II detects the ambient light level and switches the backlight off in bright conditions. This feature can be disabled using this menu. Using the   buttons, select ON or OFF from the list and press  to save the setting. Press  to quit.

A.14 GPS Settings



```

GPS
GPS ON/OFF
COORDINATE FORMAT

```

SELECT: OK

BACK: 

This submenu contains a list of settings related to the GPS. Using the   buttons, highlight one of the options shown and press ^{READ}OK to select that item. Alternatively, press ⁵STORE to exit the menu.

A.15 GPS Power



```

GPS POWER
ON
OFF

```

SAVE: OK

CANCEL: 

This menu controls power to the GPS module. Switching off GPS will save power while the unit is awake and increase battery life; however, the time and date used by the HydroSense II may be less accurate and any stored data will not be geotagged for future display and charting. Using the   buttons, select a power state to use, and press ^{READ}OK. To exit the menu without saving, press ⁵STORE.

A.16 Coordinate Format

```

D-DEG, M-MIN, S-SEC
DDD.DDDD°
DDD°MM.MMM'
DDD°MM'SS"





```

SAVE: OK

CANCEL: 

Latitude and longitude information can be displayed on the [main screen](#) (p. 7-2) in one of three formats:


DDD.DDDD°	decimal degrees
DDD°MM.MMM'	degrees with decimal minutes
DDD°MM'SS"	degrees, minutes and seconds.





Using the   buttons, select a format, and press . To exit the menu without saving, press .

A.17 System Settings

```

SYSTEM SETTINGS
SYSTEM ON TIME
RESTORE SETTINGS
SERIAL NUMBER
    
```

SELECT: OK BACK: 

This submenu contains a list of system-wide settings. Using the   buttons, highlight one of the options shown and press . Alternatively, press  to exit the menu.





A.18 System on Time


```

SYSTEM ON TIME
    
```

 2 MINUTES 

SAVE: OK CANCEL: 

To save power, the HydroSense II will automatically power off after a period of inactivity. This menu allows configuration of this time period. Press the   buttons to choose a timeout period and press . Pressing  will exit without saving.

If the system on time is set to “Always on” the HydroSense II will only turn off when the  button is used. This will increase the average power consumption significantly. If the device is left running by accident, the batteries are likely to be exhausted in just a few days.

A.19 Restore Settings

RESTORE SETTINGS

**ARE YOU SURE YOU WISH
TO RESTORE FACTORY
DEFAULTS?**

SELECT: OK

BACK: 

This menu restores the HydroSense II to its factory defaults. Press ^{READ}OK to overwrite all configuration settings with default values or ⁵STORE to exit without changing settings.

This step cannot be undone. If the unit is inadvertently set to factory defaults, all settings will need to be restored manually through the previous menus.

A.20 Serial Number

SERIAL NUMBER

SN: 27384

BACK: 

This screen displays the serial number of the HydroSense II. This should match the serial number labeled on the front panel of the unit. Press ⁵STORE to exit this screen.

Campbell Scientific Companies

Campbell Scientific, Inc. (CSI)

815 West 1800 North
Logan, Utah 84321
UNITED STATES
www.campbellsci.com • info@campbellsci.com

Campbell Scientific Africa Pty. Ltd. (CSAf)

PO Box 2450
Somerset West 7129
SOUTH AFRICA
www.csafrica.co.za • cleroux@csafrica.co.za

Campbell Scientific Australia Pty. Ltd. (CSA)

PO Box 444
Thuringowa Central
QLD 4812 AUSTRALIA
www.campbellsci.com.au • info@campbellsci.com.au

Campbell Scientific do Brazil Ltda. (CSB)

Rua Luisa Crapsi Orsi, 15 Butantã
CEP: 005543-000 São Paulo SP BRAZIL
www.campbellsci.com.br • suporte@campbellsci.com.br

Campbell Scientific Canada Corp. (CSC)

11564 - 149th Street NW
Edmonton, Alberta T5M 1W7
CANADA
www.campbellsci.ca • dataloggers@campbellsci.ca

Campbell Scientific Centro Caribe S.A. (CSCC)

300 N Cementerio, Edificio Breller
Santo Domingo, Heredia 40305
COSTA RICA
www.campbellsci.cc • info@campbellsci.cc

Campbell Scientific Ltd. (CSL)

Campbell Park
80 Hathern Road
Shepshed, Loughborough LE12 9GX
UNITED KINGDOM
www.campbellsci.co.uk • sales@campbellsci.co.uk

Campbell Scientific Ltd. (France)

3 Avenue de la Division Leclerc
92160 ANTONY
FRANCE
www.campbellsci.fr • info@campbellsci.fr

Campbell Scientific Spain, S. L.

Avda. Pompeu Fabra 7-9, local 1
08024 Barcelona
SPAIN
www.campbellsci.es • info@campbellsci.es

Please visit www.campbellsci.com to obtain contact information for your local US or International representative.