


## Watershed Stream Delineation Tool

**Title** Watershed Stream Delineation Tool

### Description

This tool allows a user to delineate watersheds and streams using Digital Elevation Model (DEM) raster(s) and outlet point(s) provided as an input in ArcGIS Pro. The tool is built on ArcPy module, an ESRI Python package to extend the functionalities of ArcGIS products. It is suitable for students or professionals, such as hydrologists, researchers and consultants, working on watershed modeling, hydrologic data analysis and/or civil engineering projects.

### Illustration

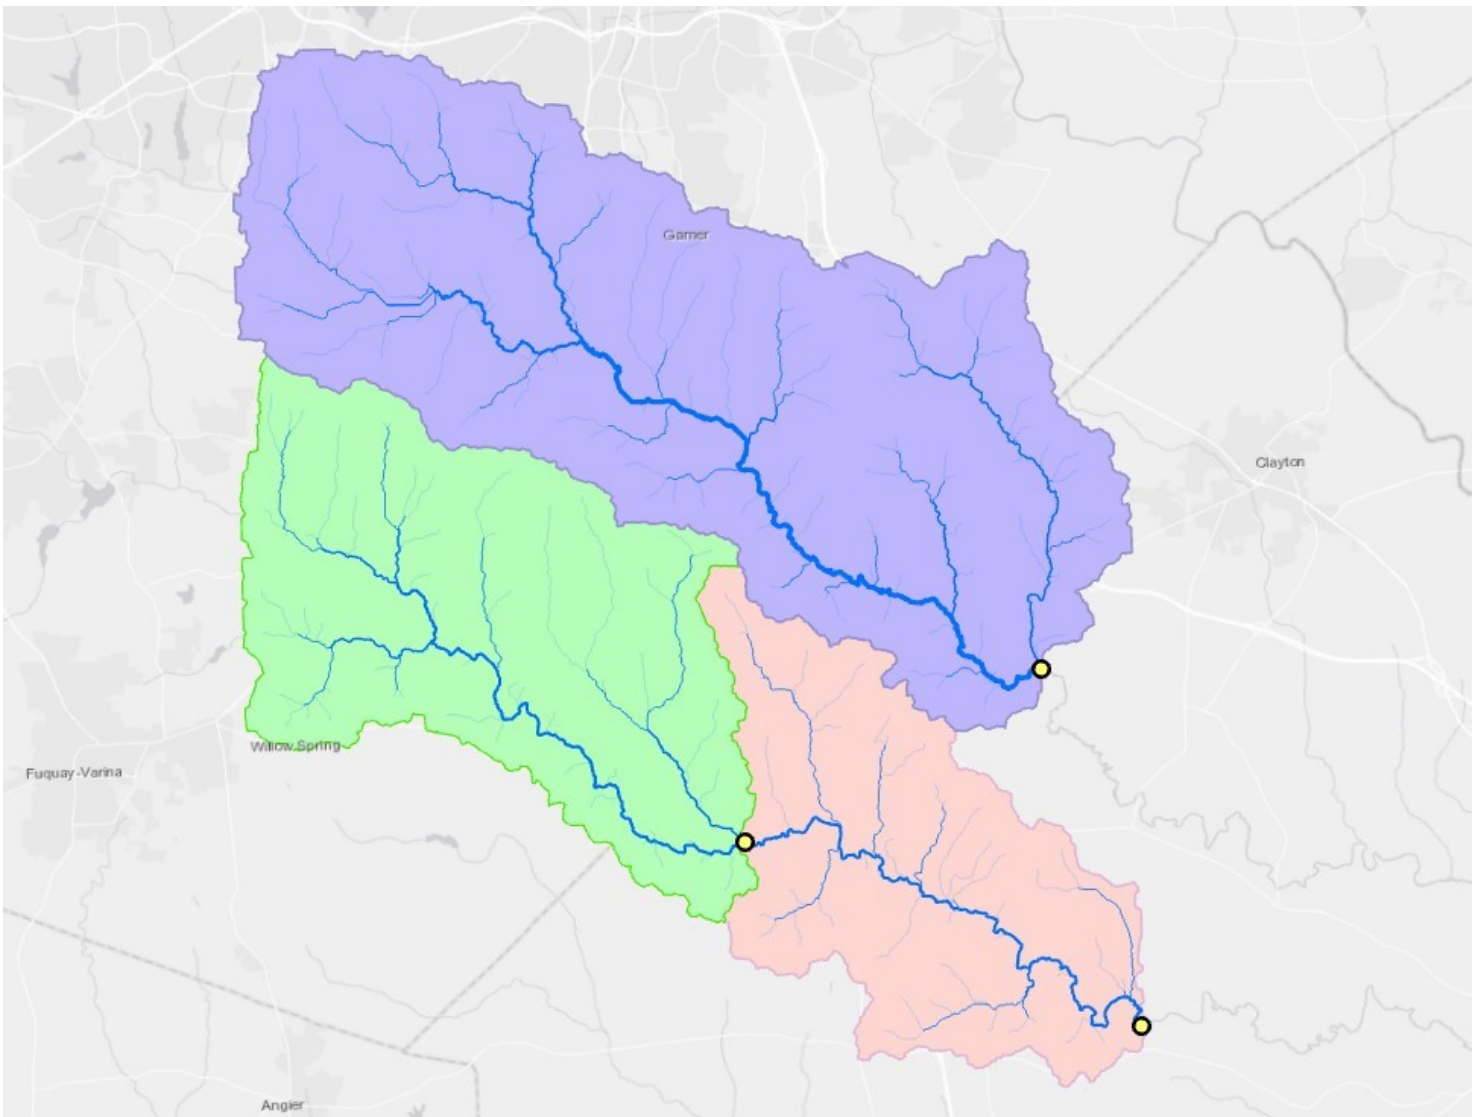

### Usage

This tool can be used to determine the geographical extent of an upstream area which drains into a specific outlet located downstream.

## Syntax

WatershedStreamDelineationTool\_ (Input\_DEM\_Raster, Input\_Outlet\_points, {Aggregate\_watershed?}, Outlet\_snap\_sensitivity, Stream\_network\_sensitivity)

Parameter	Explanation	Data Type
Input_DEM_Raster	<p><b>Dialog Reference</b></p> <p>Select a single or multiple Digital Elevation Model (DEM) raster(s). Multiple rasters are automatically joined to create a single raster. DEMs should be selected from your local drive and file path should not contain space character to avoid any errors.</p> <p>A few example DEMs are provided in the `data` folder for testing purposes. The folder `test_1` has a single DEM for an area in Wake County, NC. The folder `test_2` has 4 DEMs that geographically align next to each other. These can be used to see how multiple DEMs are handled.</p> <p>More DEMs can be found at USGS's National Map service.</p> <p>There is no python reference for this parameter.</p>	Multiple Value
Input_Outlet_points	<p><b>Dialog Reference</b></p> <p>An outlet, or a pour point, is a point through which the upstream water drains and flows out of the watershed. There are two ways to load outlet point(s):</p> <ol style="list-style-type: none"><li>1. Load a shapefile containing point feature(s) from your local drive. Make sure the file path has no space characters. Ideally, move your shapefile to `data` folder in the `Watershed-Stream-Delineation-Tool` parent directory.</li><li>2. Use the pencil tool located next to the drop down button on the geoprocessing pane for this tool.</li></ol> <p>Note - Outlet(s) should be located near a stream of flow accumulation</p> <p>A few example of shapefiles are provided in the `data` folder for testing purposes. The folder `test_1` has a shapefile with a single point feature from Wake County, NC. The folder `test_2` has a shapefile with 3 point features. This can be used with multiple DEM input rasters.</p> <p>There is no python reference for this parameter.</p>	Feature Set
Aggregate_watershed? (Optional)	<p><b>Dialog Reference</b></p> <p>If multiple outlets are provided, the user has a choice to either join the watersheds pertaining to each outlet or keep them separate.</p> <p>If checked, this input will aggregate separate smaller watersheds into 1 big watershed. If left unchecked, all the watersheds will be kept separate as their own polygon features.</p> <p>If only 1 outlet point is provided, any input for this field will not affect the output.</p> <p>There is no python reference for this parameter.</p>	Boolean
Outlet_snap_sensitivity	<p><b>Dialog Reference</b></p> <p>Specify the distance, in map units, within which the outlet point will be snapped to the pixel with the highest flow accumulation. A default value of 50 units is set. Increase the magnitude if you are uncertain about the proximity of your point features to a flowing stream.</p> <p>There is no python reference for this parameter.</p>	Long
Stream_network_sensitivity	<p><b>Dialog Reference</b></p> <p>Specify the threshold of flow accumulation that makes up a stream. It is the number of pixels that should flow into 1 pixel to determine a raster of</p>	Long

branches that represent the extent of a stream network. For instance, a value of 5000 for stream network sensitivity means that any cell in the flow accumulation raster having a value less than 5000 will not be a part of the delineated stream network. In other words, higher the sensitivity value, lower the branching of streams and lower the number of stream orders.

There is no python reference for this parameter.

---

## Code Samples

There are no code samples for this tool.

## Tags

watershed delineation, stream delineation, drainage basin, outlet, pour points, hydrology

## Credits

ENVIRON 859 2020, John Fay

-----  
Final Project by Pierre Mishra  
pm213@duke.edu  
Master of Environmental Management, 2021  
Duke University

## Use limitations

MIT License

Copyright (c) 2020 Pierre Mishra

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.