

<b>Document Title</b>	Specification of Basic Software Mode Manager
<b>Document Owner</b>	AUTOSAR
<b>Document Responsibility</b>	AUTOSAR
<b>Document Identification No</b>	313
<b>Document Classification</b>	Standard
<b>Document Status</b>	Final
<b>Part of AUTOSAR Standard</b>	Classic Platform
<b>Part of Standard Release</b>	4.3.0

Document Change History			
Date	Release	Changed by	Change Description
2016-11-30	4.3.0	AUTOSAR Release Management	<ul style="list-style-type: none"> <li>Added some actions/indications to allow for more BswM interaction with following BSW Modules: EthIf, EcuM</li> <li>Waiting functionality added using the BswMTimer mode request source</li> <li>Some mode requests are now modeled using BswMEventRequestPort, instead of BswMModeRequestPort</li> <li>Editorial changes, increased requirement traceability and minor changes to configuration containers/parameters</li> </ul>
2015-07-31	4.2.2	AUTOSAR Release Management	<ul style="list-style-type: none"> <li>Improved specification of service interfaces</li> <li>Additional functional requirements for BswMPduGroupSwitch action</li> <li>Added BswMNmlfCarWakeUpIndication as a new BswMModeRequestSource</li> <li>Deprecated some spec. elements (marked with “obsolete”), editorial changes, increased requirement traceability and minor changes to configuration containers/parameters</li> </ul>

Document Change History			
Date	Release	Changed by	Change Description
2014-10-31	4.2.1	AUTOSAR Release Management	<ul style="list-style-type: none"> <li>• New API and configuration containers to support EcuM Fixed for Multi Core</li> <li>• Addition of new container for defining mode values: BswMCompuScaleModeValue</li> <li>• New Action BswMFrSMAllSlots for invoking FrSM_AllSlots</li> <li>• New requirements for: Action list execution (SWS_BswM_00223) and Deadline Monitoring (SWS_BswM_00224,00225)</li> </ul>
2014-03-31	4.1.3	AUTOSAR Release Management	<ul style="list-style-type: none"> <li>• Removal of several unnecessary parameter range checks in APIs</li> <li>• J1939 fix: added missing action, missing included header files</li> <li>• Corrections in Figures 1, 2, 3, 5 and 6</li> <li>• Editorial changes</li> </ul>
2013-10-31	4.1.2	AUTOSAR Release Management	<ul style="list-style-type: none"> <li>• Removal of several requirements from Pretended Networking chapter</li> <li>• Addition of new configuration parameters to several Sd related Bswm Actions</li> <li>• Addition of new BswM Mode Request: BswMCanSMIcomIndication</li> <li>• Addition of new BswM Action: BswMRteModeRequest</li> <li>• Editorial changes</li> </ul>
2013-03-15	4.1.1	AUTOSAR Administration	<ul style="list-style-type: none"> <li>• Extended to support Pretended Networking mode handling</li> <li>• Adaption of BswM to concept Enhanced BSW Allocation</li> <li>• Extended to support Heavy Duty Vehicles and J1939</li> </ul>

Document Change History			
Date	Release	Changed by	Change Description
2011-12-22	4.0.3	AUTOSAR Administration	<ul style="list-style-type: none"><li>• Support of Mode Machine Instances assigned to the SchM</li><li>• Include of user defined header files</li><li>• Possibility to provide an initial value for a BswMModeRequestPort</li></ul>
2009-12-18	4.0.1	AUTOSAR Administration	<ul style="list-style-type: none"><li>• Include file BswMUserCallout.h added. This user defined header file contains declarations of the call out functions.</li><li>• Requirement that the BswM module shall perform inter module version checks added</li><li>• Information added for each configurable action which API to call</li><li>• Functions BswM_TriggerSlaveRTEStop and BswM_TriggerStartUpPhase2 added to control the start and stop of the RTE on slave cores</li></ul>
2010-02-02	3.1.4	AUTOSAR Administration	<ul style="list-style-type: none"><li>• Initial release</li></ul>

## Disclaimer

This specification and the material contained in it, as released by AUTOSAR, is for the purpose of information only. AUTOSAR and the companies that have contributed to it shall not be liable for any use of the specification.

The material contained in this specification is protected by copyright and other types of Intellectual Property Rights. The commercial exploitation of the material contained in this specification requires a license to such Intellectual Property Rights.

This specification may be utilized or reproduced without any modification, in any form or by any means, for informational purposes only. For any other purpose, no part of the specification may be utilized or reproduced, in any form or by any means, without permission in writing from the publisher.

The AUTOSAR specifications have been developed for automotive applications only. They have neither been developed, nor tested for non-automotive applications.

The word AUTOSAR and the AUTOSAR logo are registered trademarks.

## Advice for users

AUTOSAR specifications may contain exemplary items (exemplary reference models, "use cases", and/or references to exemplary technical solutions, devices, processes or software).

Any such exemplary items are contained in the specifications for illustration purposes only, and they themselves are not part of the AUTOSAR Standard. Neither their presence in such specifications, nor any later documentation of AUTOSAR conformance of products actually implementing such exemplary items, imply that intellectual property rights covering such exemplary items are licensed under the same rules as applicable to the AUTOSAR Standard.

## Table of Contents

1	Introduction and functional overview .....	10
2	Acronyms and abbreviations .....	11
3	Related documentation.....	12
3.1	Input documents .....	12
3.2	Related standards and norms .....	13
3.3	Related specification .....	13
4	Constraints and assumptions .....	14
4.1	Limitations .....	14
4.2	Applicability to car domains .....	14
5	Dependencies to other modules.....	15
5.1	RTE .....	15
5.2	EcuM - Fixed .....	15
5.3	EcuM - Flex .....	15
5.4	WdgM.....	15
5.5	ComM.....	15
5.6	COM.....	15
5.7	PduR .....	16
5.8	CanSM .....	16
5.9	LinSM .....	16
5.10	LinTp .....	16
5.11	FrSM .....	16
5.12	EthSM .....	16
5.13	DCM.....	16
5.14	J1939Dcm .....	17
5.15	J1939Nm.....	17
5.16	J1939Rm.....	17
5.17	NM Interface.....	17
5.18	NvM.....	17
5.19	OS.....	17
5.20	Sd.....	17
5.21	File structure .....	18
5.21.1	Header file structure .....	19
6	Requirements traceability .....	20
7	Functional specification .....	25
7.1	Mode Arbitration .....	25
7.1.1	Arbitration Rules .....	25
7.1.2	Mode Conditions and Logical Expressions. ....	25
7.1.3	Requirements of Mode Arbitration .....	27
7.1.4	Arbitration Behavior after Initialization.....	29
7.2	Mode Control.....	30
7.2.1	Mode Processing Cycle .....	31
7.2.2	Requirements on Mode Control .....	32
7.2.3	Triggered and Conditional action lists .....	34

7.2.4	Available Actions.....	35
7.2.5	Behavior of Mode Control after Initialization .....	35
7.2.6	Handling of I-PDU Group Actions .....	36
7.3	Waiting Functionality .....	37
7.4	Multi Partition Support .....	38
7.5	Debugging Support.....	38
7.6	Error classification .....	38
7.6.1	Development Errors .....	39
7.6.2	Runtime Errors.....	39
7.6.3	Transient Faults .....	40
7.6.4	Production Errors .....	40
7.6.5	Extended Production Errors .....	40
7.7	BswM Interfaces and Ports.....	40
7.7.1	Mode Request Ports .....	43
7.7.2	Mode Switch Ports.....	43
7.7.3	Notifications of Mode Switches .....	44
7.7.4	Component Type and Internal Behavior .....	44
7.8	Pretended Networking.....	45
8	API specification .....	46
8.1	Imported types.....	46
8.2	Type definitions .....	47
8.2.1	BswM_ConfigType.....	47
8.2.2	BswM_ModeType .....	47
8.2.3	BswM_UserType.....	47
8.3	Function definitions.....	47
8.3.1	BswM_BswMPartitionRestarted.....	47
8.3.2	BswM_CanSM_CurrentIcomConfiguration .....	48
8.3.3	BswM_CanSM_CurrentState .....	49
8.3.4	BswM_ComM_CurrentMode.....	49
8.3.5	BswM_ComM_CurrentPNCMode .....	50
8.3.6	BswM_ComM_InitiateReset.....	51
8.3.7	BswM_Dcm_ApplicationUpdated.....	51
8.3.8	BswM_Dcm_CommunicationMode_CurrentState.....	52
8.3.9	BswM_Deinit .....	52
8.3.10	BswM_EcuM_CurrentState .....	53
8.3.11	BswM_EcuM_CurrentWakeup.....	54
8.3.12	BswM_EcuM_RequestedState .....	54
8.3.13	BswM_EthIf_PortGroupLinkStateChg.....	55
8.3.14	BswM_EthSM_CurrentState .....	56
8.3.15	BswM_FrSM_CurrentState .....	57
8.3.16	BswM_GetVersionInfo .....	57
8.3.17	BswM_Init .....	58
8.3.18	BswM_J1939DcmBroadcastStatus .....	58
8.3.19	BswM_J1939Nm_StateChangeNotification .....	59
8.3.20	BswM_LinSM_CurrentSchedule.....	59
8.3.21	BswM_LinSM_CurrentState .....	60
8.3.22	BswM_LinTp_RequestMode.....	61
8.3.23	BswM_Nmlf_CarWakeUpIndication.....	62
8.3.24	BswM_NvM_CurrentBlockMode.....	62

8.3.25	BswM_NvM_CurrentJobMode .....	63
8.3.26	BswM_RequestMode .....	63
8.3.27	BswM_Sd_ClientServiceCurrentState .....	64
8.3.28	BswM_Sd_ConsumedEventGroupCurrentState .....	65
8.3.29	BswM_Sd_EventHandlerCurrentState .....	66
8.3.30	BswM_WdgM_RequestPartitionReset .....	66
8.4	Call-back notifications .....	67
8.5	Scheduled functions .....	67
8.5.1	BswM_MainFunction .....	67
8.6	Expected Interfaces .....	68
8.6.1	Mandatory Interfaces .....	68
8.6.2	Optional Interfaces .....	68
8.7	Service Interfaces .....	70
8.7.1	Scope of this Chapter .....	70
8.7.2	Ports .....	70
8.8	Callout Definitions .....	71
8.8.1	<BswMUserCalloutFunction> .....	71
9	Sequence diagrams .....	72
9.1	Deferred operation of BswM .....	72
9.2	Immediate operation of BswM .....	73
10	Configuration specification .....	74
10.1	How to read this chapter .....	74
10.2	Containers and configuration parameters .....	75
10.2.1	BswM .....	75
10.2.2	BswMConfig .....	75
10.2.3	BswMArbitration .....	76
10.2.4	BswMLogicalExpression .....	77
10.2.5	BswMModeCondition .....	79
10.2.6	BswMConditionValue .....	80
10.2.7	BswMBswMode .....	81
10.2.8	BswMModeDeclaration .....	81
10.2.9	BswMEventRequestPort .....	82
10.2.10	BswMModeRequestPort .....	83
10.2.11	BswMModelInitValue .....	84
10.2.12	BswMCompuScaleModeValue .....	84
10.2.13	BswMEventRequestSource .....	85
10.2.14	BswMModeRequestSource .....	86
10.2.15	BswMBswModeNotification .....	88
10.2.16	BswMCanSMIcomIndication .....	88
10.2.17	BswMCanSMIndication .....	89
10.2.18	BswMComMIndication .....	89
10.2.19	BswMComMInitiateReset .....	90
10.2.20	BswMComMPncRequest .....	90
10.2.21	BswMDcmApplicationUpdatedIndication .....	90
10.2.22	BswMDcmComModeRequest .....	91
10.2.23	BswMEcuMIndication .....	91
10.2.24	BswMEcuMRUNRequestIndication .....	91
10.2.25	BswMEcuMWakeupSource .....	92
10.2.26	BswMEthIfPortGroupLinkStateChg .....	93



10.2.27	BswMEthSMIndication .....	93
10.2.28	BswMFrSMIndication .....	94
10.2.29	BswMGenericRequest .....	94
10.2.30	BswMJ1939DcmBroadcastStatus .....	95
10.2.31	BswMJ1939NmIndication .....	95
10.2.32	BswMLinSMIndication .....	96
10.2.33	BswMLinScheduleIndication .....	97
10.2.34	BswMLinTpModeRequest .....	97
10.2.35	BswMModeSwitchErrorEvent .....	98
10.2.36	BswMNmIfCarWakeUpIndication .....	98
10.2.37	BswMNvMJobModeIndication .....	99
10.2.38	BswMNvMRequest .....	100
10.2.39	BswMPartitionRestarted .....	100
10.2.40	BswMSdClientServiceCurrentState .....	101
10.2.41	BswMSdConsumedEventGroupCurrentState .....	101
10.2.42	BswMSdEventHandlerCurrentState .....	101
10.2.43	BswMSwcModeNotification .....	102
10.2.44	BswMSwcModeRequest .....	102
10.2.45	BswMTimer .....	103
10.2.46	BswMWdgMRequestPartitionReset .....	103
10.2.47	BswMRule .....	104
10.2.48	BswMDataTypeMappingSets .....	106
10.2.49	BswMModeControl .....	106
10.2.50	BswMAAction .....	107
10.2.51	BswMAvailableActions .....	107
10.2.52	BswMClearEventRequest .....	110
10.2.53	BswMComMAllowCom .....	110
10.2.54	BswMComMModeLimitation .....	111
10.2.55	BswMComMModeSwitch .....	112
10.2.56	BswMCoreHaltMode .....	113
10.2.57	BswMDeadlineMonitoringControl .....	113
10.2.58	BswMEcuMDriverInitListBswM .....	114
10.2.59	BswMEcuMGoDown .....	115
10.2.60	BswMEcuMGoHalt .....	115
10.2.61	BswMEcuMGoPoll .....	116
10.2.62	BswMEcuMSelectShutdownTarget .....	116
10.2.63	BswMEcuMStateSwitch .....	117
10.2.64	BswMEthIfSwitchPortGroupRequestMode .....	118
10.2.65	BswMFrSMAllSlots .....	119
10.2.66	BswMJ1939DcmStateSwitch .....	119
10.2.67	BswMJ1939RmStateSwitch .....	120
10.2.68	BswMLinScheduleSwitch .....	121
10.2.69	BswMNMControl .....	122
10.2.70	BswMPduGroupSwitch .....	123
10.2.71	BswMPduRouterControl .....	124
10.2.72	BswMRteModeRequest .....	125
10.2.73	BswMRteSwitch .....	126
10.2.74	BswMSchMSwitch .....	127
10.2.75	BswMSdClientServiceModeRequest .....	127
10.2.76	BswMSdConsumedEventGroupModeRequest .....	128



10.2.77	BswMSdServerServiceModeRequest.....	129
10.2.78	BswMSwitchIPduMode .....	130
10.2.79	BswMTimerControl .....	131
10.2.80	BswMTriggerIPduSend.....	132
10.2.81	BswMUserCallout .....	132
10.2.82	BswMActionList .....	133
10.2.83	BswMActionListItem .....	134
10.2.84	BswMRteModeRequestPort .....	135
10.2.85	BswMSwitchPort.....	136
10.2.86	BswMGeneral .....	137
10.2.87	BswMUserIncludeFiles .....	142
10.3	Published Information.....	142
11	Not applicable requirements .....	144

## 1 Introduction and functional overview

This specification specifies the functionality, API and the configuration of the AUTOSAR Basic Software module BSW Mode Manager (BswM).

The BSW Mode Manager is the module that implements the part of the Vehicle Mode Management and Application Mode Management concept that resides in the BSW. Its responsibility is to arbitrate mode requests from application layer SW-Cs or other BSW modules based on simple rules, and perform actions based on the arbitration result.

## 2 Acronyms and abbreviations

<b>Abbreviation / Acronym:</b>	<b>Description:</b>
BSW	Basic Software
BswM	BSW Mode Manager
BSWMD	Basic Software Module Description
CDD	Complex Driver
Dem	Diagnostic Event Manager
Det	Default Error Tracer
ECU	Electronic Control Unit
ICOM	Intelligent Communication Controller
RTE	Real Time Environment
SWC / SW-C	Software Component
SWCD	Software Component Description

**Table 1: Table of acronyms and abbreviations**

## 3 Related documentation

### 3.1 Input documents

- [1] List of Basic Software Modules  
AUTOSAR\_TR\_BSWModuleList.pdf
- [2] Layered Software Architecture  
AUTOSAR\_EXP\_LayeredSoftwareArchitecture.pdf.pdf
- [3] General Requirements on Basic Software Modules  
AUTOSAR\_SRS\_BSWGeneral.pdf
- [4] Requirements on Mode Management  
AUTOSAR\_SRS\_ModeManagement.pdf
- [5] Specification of Communication  
AUTOSAR\_SWS\_COM.pdf
- [6] Specification of FlexRay State Manager  
AUTOSAR\_SWS\_FlexRayStateManager.pdf
- [7] Specification of PDU Router  
AUTOSAR\_SWS\_PDURouter.pdf
- [8] Specification of ECU Configuration  
AUTOSAR\_TPS\_ECUConfiguration.pdf
- [9] Specification of Default Error Tracer  
AUTOSAR\_SWS\_DefaultErrorTracer.pdf
- [10] Specification of RTE Software  
AUTOSAR\_SWS\_RTE.pdf
- [11] Specification of Diagnostic Communication Manager  
AUTOSAR\_SWS\_DiagnosticCommunicationManager.pdf
- [12] Specification of ECU State Manager  
AUTOSAR\_SWS\_ECUSTateManager.pdf
- [13] Specification of LIN State Manager  
AUTOSAR\_SWS\_LINStateManager.pdf
- [14] Specification of CAN State Manager  
AUTOSAR\_SWS\_CANStateManager.pdf
- [15] Specification of Generic Network Management Interface  
AUTOSAR\_SWS\_NetworkManagementInterface.pdf

[16] Specification of Communication Manager  
AUTOSAR\_SWS\_COMManager.pdf

[17] Specification of Ethernet State Manager  
AUTOSAR\_SWS\_EthernetStateManager.pdf

[18] General Specification of Basic Software Modules  
AUTOSAR\_SWS\_BSWGeneral.pdf

## 3.2 Related standards and norms

None.

## 3.3 Related specification

AUTOSAR provides a General Specification on Basic Software modules [18] (SWS BSW General), which is also valid for BSW Mode Manager.

Thus, the specification SWS BSW General shall be considered as an additional and required specification for BSW Mode Manager.

Information regarding the configuration and usage of the BSW Mode Manager is found in the auxillary document: AUTOSAR\_EXP\_ModemanagementGuide.pdf

## **4 Constraints and assumptions**

### **4.1 Limitations**

Maximum one instance of the BSW Mode Manager may be used within a partition.

### **4.2 Applicability to car domains**

The BSW Mode Manager is applicable to all car domains.

## 5 Dependencies to other modules

The BSW Mode Manager has interfaces to many of the BSW Modules in the AUTOSAR architecture. The majority of these interfaces are however optional and are used based on the needs of each ECU.

The dependencies listed in this chapter are intended to give an overview of some possible interactions between the BswM and other modules. The interactions and modules listed herein should not be considered an exhaustive list of all possibilities.

### 5.1 RTE

The BswM receives mode requests from the SW-Cs via the RTE. Mode Switch Notifications are also propagated to the SW-Cs via the RTE.

### 5.2 EcuM - Fixed

When EcuM – Fixed is used it will indicate the current ECU state to the BswM.

### 5.3 EcuM - Flex

EcuM Flex can indicate the state of its wakeup sources to BswM. When ECU Mode Handling is used, BswM can set the state of EcuM – Flex and receives status of certain modes based on the RUN Request Protocol.

### 5.4 WdgM

The WdgM may request partition reset related actions from the BswM via the [BswM\\_WdgM\\_RequestPartitionReset](#) API. The configuration for the WdgM partition reset request is accomplished via the BswMWdgMRequestPartitionReset mode request source.

### 5.5 ComM

Mode Switch Indications originating from the ComM go through the BswM for further propagation to the SW-Cs.

The BswM can request communication modes at the ComM by means of ComMUsers.

### 5.6 COM

The handling of I-PDU Groups in COM is performed by the BswM. As a part of I-PDU group start/stop, it is possible to have the included signal values reset to their corresponding initialization values.

BswM handles the enabling and disabling of deadline monitoring of signals in COM. BswM can also trigger transmission of an I-PDU.



## 5.7 PduR

The BswM can enable and disable routing groups of I-PDUs in the PDU router.

## 5.8 CanSM

Mode Switch Indications originating from the CanSM go through the BswM for further propagation to the SW-Cs.

## 5.9 LinSM

BswM coordinates switching of LIN Schedule Tables in the LinSM with starting and stopping of the corresponding I-PDU groups in COM.

Mode Switch Indications originating from the LinSM go through the BswM for further propagation to the SW-Cs.

## 5.10 LinTp

The LIN Transport Protocol that is a part of LinIf requests modes from BswM to make sure that the correct LIN Schedule Table is active during LinTp operation.

## 5.11 FrSM

Mode Switch Indications originating from the FrSM go through the BswM for further propagation to the SW-Cs.

The usage of “Single Slot Mode” on FlexRay is controlled by the FrSM by request of BswM. The send capability of the FlexRay stack can be controlled by the BswM via FrSM by calling the API FrSM\_SetEcuPassive.

## 5.12 EthSM

Mode Switch Indications originating from the EthSM go through the BswM for further propagation to the SW-Cs.

## 5.13 DCM

The DCM performs mode requests to the BswM based on the diagnostic requests it receives.

Example: DCM can request “Disable Normal Communication”. During this mode BswM will turn off the corresponding I-PDU groups and NM PDUs.

### **5.14 J1939Dcm**

The J1939Dcm reports communication state changes to the BswM for further propagation to the SW-Cs. BswM changes states of J1939Dcm via J1939Dcm\_SetState.

### **5.15 J1939Nm**

The J1939Nm provides a state indication via BswM\_J1939Nm\_StateChangeNotification.

### **5.16 J1939Rm**

BswM changes states of J1939Rm via J1939Rm\_SetState.

### **5.17 NM Interface**

BswM will use the Nm\_EnableCommunication and Nm\_DisableCommunication to control the NM communication based on the current mode.

Example: In “Disable Normal Communication” mode, the BswM needs to disable NM communication on the corresponding NM channel.

The NmIf uses BswM\_NmIf\_CarWakeUpIndication to indicate a CarWakeUp.

### **5.18 NvM**

The NvM module reports the state of its blocks to the BswM via “integration code” registered as NvM callbacks. BswM has actions causing the NvM to read and write all blocks during startup and shutdown.

### **5.19 OS**

The features of OS that are required by BswM, are implementation specific.

### **5.20 Sd**

The BswM receives status indications from Sd via several exported APIs (see chapter 8.3 for examples). These status indications from Sd can be configured as BswMModeRequestSources.



### 5.21.1 Header file structure

[SWS\_BswM\_00025] [

The BswM shall include the header files of all other BSW modules which API functions it uses.

Specifically it shall include Std\_Types.h and ComStack\_Types.h to avoid redefinition of types. ] (SRS\_BSW\_00348)

[SWS\_BswM\_00026] [

The BswM module shall provide the following set of header files for inclusion in other BSW modules only if the relevant configuration parameter is set to true. The header file shall provide interfaces and the corresponding types relevant to the other BSW module:

1. BswM header file: BswM.h, BswM\_CanSM.h, BswM\_ComM.h, BswM\_Dcm.h, BswM\_EcuM.h, BswM\_EthSM.h, BswM\_FrSM.h, BswM\_J1939Dcm.h, BswM\_J1939Nm.h, BswM\_LinSM.h, BswM\_LinTp.h, BswM\_Nm.h, BswM\_NvM.h, BswM\_Sd.h, BswM\_WdgM.h
  2. BswM configuration file: BswM\_Cfg.h]
- (SRS\_BSW\_00381, SRS\_BSW\_00412, SRS\_BSW\_00415)

## 6 Requirements traceability

Requirement	Description	Satisfied by
SRS_BSW_00003	All software modules shall provide version and identification information	SWS_BswM_00003
SRS_BSW_00101	The Basic Software Module shall be able to initialize variables and hardware in a separate initialization function	SWS_BswM_00002, SWS_BswM_00043, SWS_BswM_00044, SWS_BswM_00224, SWS_BswM_00261
SRS_BSW_00167	All AUTOSAR Basic Software Modules shall provide configuration rules and constraints to enable plausibility checks	SWS_BswM_00240, SWS_BswM_00242, SWS_BswM_00243, SWS_BswM_00256, SWS_BswM_CONSTR_00001, SWS_BswM_CONSTR_00002
SRS_BSW_00170	The AUTOSAR SW Components shall provide information about their dependency from faults, signal qualities, driver demands	SWS_BswM_09999
SRS_BSW_00301	All AUTOSAR Basic Software Modules shall only import the necessary information	SWS_BswM_00001, SWS_BswM_00237
SRS_BSW_00302	All AUTOSAR Basic Software Modules shall only export information needed by other modules	SWS_BswM_00218
SRS_BSW_00305	Data types naming convention	SWS_BswM_00041
SRS_BSW_00323	All AUTOSAR Basic Software Modules shall check passed API parameters for validity	SWS_BswM_00045, SWS_BswM_00089, SWS_BswM_00090, SWS_BswM_00091, SWS_BswM_00093, SWS_BswM_00095, SWS_BswM_00097, SWS_BswM_00099, SWS_BswM_00101, SWS_BswM_00103, SWS_BswM_00110, SWS_BswM_00113, SWS_BswM_00133, SWS_BswM_00150, SWS_BswM_00154, SWS_BswM_00206, SWS_BswM_00209, SWS_BswM_00212, SWS_BswM_00228, SWS_BswM_00229, SWS_BswM_00268
SRS_BSW_00336	Basic SW module shall be able to shutdown	SWS_BswM_00119, SWS_BswM_00120, SWS_BswM_09999
SRS_BSW_00339	Reporting of production relevant error status	SWS_BswM_09999

SRS_BSW_00344	BSW Modules shall support link-time configuration	SWS_BswM_00002
SRS_BSW_00348	All AUTOSAR standard types and constants shall be placed and organized in a standard type header file	SWS_BswM_00025
SRS_BSW_00358	The return type of init() functions implemented by AUTOSAR Basic Software Modules shall be void	SWS_BswM_00002
SRS_BSW_00381	The pre-compile time parameters shall be placed into a separate configuration header file	SWS_BswM_00026, SWS_BswM_00218
SRS_BSW_00384	The Basic Software Module specifications shall specify at least in the description which other modules they require	SWS_BswM_00007, SWS_BswM_00008
SRS_BSW_00385	List possible error notifications	SWS_BswM_00230
SRS_BSW_00399	Parameter-sets shall be located in a separate segment and shall be loaded after the code	SWS_BswM_09999
SRS_BSW_00400	Parameter shall be selected from multiple sets of parameters after code has been loaded and started	SWS_BswM_09999
SRS_BSW_00404	BSW Modules shall support post-build configuration	SWS_BswM_00002, SWS_BswM_00042, SWS_BswM_00213
SRS_BSW_00405	BSW Modules shall support multiple configuration sets	SWS_BswM_00002, SWS_BswM_09999
SRS_BSW_00406	A static status variable denoting if a BSW module is initialized shall be initialized with value 0 before any APIs of the BSW module is called	SWS_BswM_00076, SWS_BswM_00077, SWS_BswM_00078, SWS_BswM_00079, SWS_BswM_00080, SWS_BswM_00081, SWS_BswM_00082, SWS_BswM_00083, SWS_BswM_00084, SWS_BswM_00086, SWS_BswM_00109, SWS_BswM_00112, SWS_BswM_00132, SWS_BswM_00134, SWS_BswM_00149, SWS_BswM_00153, SWS_BswM_00159, SWS_BswM_00205, SWS_BswM_00208, SWS_BswM_00211, SWS_BswM_00227, SWS_BswM_00266, SWS_BswM_00267
SRS_BSW_00407	Each BSW module	SWS_BswM_00003

	shall provide a function to read out the version information of a dedicated module implementation	
SRS_BSW_00409	All production code error ID symbols are defined by the Dem module and shall be retrieved by the other BSW modules from Dem configuration	SWS_BswM_09999
SRS_BSW_00412	References to c-configuration parameters shall be placed into a separate h-file	SWS_BswM_00026, SWS_BswM_00218
SRS_BSW_00414	Init functions shall have a pointer to a configuration structure as single parameter	SWS_BswM_00002
SRS_BSW_00415	Interfaces which are provided exclusively for one module shall be separated into a dedicated header file	SWS_BswM_00026
SRS_BSW_00425	The BSW module description template shall provide means to model the defined trigger conditions of schedulable objects	SWS_BswM_00053
SRS_BSW_00441	Naming convention for type, macro and function	SWS_BswM_00213, SWS_BswM_00214, SWS_BswM_00216
SRS_BSW_00450	A Main function of a uninitialized module shall return immediately	SWS_BswM_00076
SRS_BSW_00452	Classification of runtime errors	SWS_BswM_00238, SWS_BswM_00239
SRS_BSW_00467	The init / deinit services shall only be called by BswM or EcuM	SWS_BswM_00118
SRS_ModeMgm_09116	Requesting and releasing the RUN state shall be provided	SWS_BswM_00226
SRS_ModeMgm_09174	The BSW Mode Manager shall support the 'disable normal Communication'	SWS_BswM_00038, SWS_BswM_00128, SWS_BswM_00129, SWS_BswM_00234
SRS_ModeMgm_09175	A configurable Set of Mode dependent enabled and	SWS_BswM_00038



	concomitant disabled IPDU groups shall be supported	
SRS_ModeMgm_09177	The rules of the mode arbitration shall be pre-compile and post-build configurable	SWS_BswM_00010, SWS_BswM_00012, SWS_BswM_00015, SWS_BswM_00016, SWS_BswM_00062, SWS_BswM_00067, SWS_BswM_00223, SWS_BswM_00252, SWS_BswM_00253, SWS_BswM_00256
SRS_ModeMgm_09178	The lists of mode transition specific actions shall be pre-compile and post-build configurable	SWS_BswM_00017, SWS_BswM_00018, SWS_BswM_00019, SWS_BswM_00037, SWS_BswM_00054, SWS_BswM_00055, SWS_BswM_00062, SWS_BswM_00067, SWS_BswM_00147, SWS_BswM_00223, SWS_BswM_00225, SWS_BswM_CONSTR_00001
SRS_ModeMgm_09179	The BSW Mode Manager shall provide an Interface to allow Mode Requests of SW-C's	SWS_BswM_00046, SWS_BswM_00064, SWS_BswM_00201, SWS_BswM_00203, SWS_BswM_00236
SRS_ModeMgm_09180	The BSW Mode Manager shall evaluate the current mode requests	SWS_BswM_00009, SWS_BswM_00011, SWS_BswM_00013, SWS_BswM_00014, SWS_BswM_00023, SWS_BswM_00035, SWS_BswM_00059, SWS_BswM_00060, SWS_BswM_00061, SWS_BswM_00064, SWS_BswM_00066, SWS_BswM_00068, SWS_BswM_00069, SWS_BswM_00075, SWS_BswM_00115, SWS_BswM_00116, SWS_BswM_00117, SWS_BswM_00189, SWS_BswM_00200, SWS_BswM_00203, SWS_BswM_00241, SWS_BswM_00244, SWS_BswM_00245, SWS_BswM_00246, SWS_BswM_00247, SWS_BswM_00248, SWS_BswM_00252, SWS_BswM_00253, SWS_BswM_00254, SWS_BswM_00255, SWS_BswM_00257, SWS_BswM_00258, SWS_BswM_00262, SWS_BswM_00263, SWS_BswM_00264, SWS_BswM_00265, SWS_BswM_00269
SRS_ModeMgm_09182	The BSW Mode Manager shall propagate a performed mode change to all local SW-Cs	SWS_BswM_00038, SWS_BswM_00202, SWS_BswM_00219, SWS_BswM_00259
SRS_ModeMgm_09183	Configurable Mode Activation initiated Reset of Signals to Initial Values shall be supported	SWS_BswM_00234, SWS_BswM_00251
SRS_ModeMgm_09184	The mode manager shall be able to use a COM interface to activate, respectively deactivate, I-PDU groups	SWS_BswM_00038, SWS_BswM_00128, SWS_BswM_00129, SWS_BswM_00234
SRS_ModeMgm_09228	The BSW Mode	SWS_BswM_00046, SWS_BswM_00047,

	Manager shall provide an Interface to allow Mode Requests of BSW Modules	SWS_BswM_00048, SWS_BswM_00050, SWS_BswM_00052, SWS_BswM_00058, SWS_BswM_00104, SWS_BswM_00148, SWS_BswM_00156, SWS_BswM_00158, SWS_BswM_00165, SWS_BswM_00193, SWS_BswM_00203, SWS_BswM_00207, SWS_BswM_00214, SWS_BswM_00217, SWS_BswM_00235, SWS_BswM_00250,	SWS_BswM_00049, SWS_BswM_00051, SWS_BswM_00056, SWS_BswM_00064, SWS_BswM_00131, SWS_BswM_00152, SWS_BswM_00157, SWS_BswM_00164, SWS_BswM_00166, SWS_BswM_00194, SWS_BswM_00204, SWS_BswM_00210, SWS_BswM_00216, SWS_BswM_00226, SWS_BswM_00249, SWS_BswM_91001
SRS_ModeMgm_09229	The mode manager shall be able to make generic, configured callouts of void functions to other BSW modules	SWS_BswM_00039, SWS_BswM_00040	
SRS_ModeMgm_09230	All actions shall only be performed on mode change	SWS_BswM_00011, SWS_BswM_00023, SWS_BswM_00066, SWS_BswM_00260	
SRS_ModeMgm_09240	ComM shall notify BswM of any PNC communication state change	SWS_BswM_00148	

## 7 Functional specification

This chapter specifies the functional behavior of the BSW Mode Manager. The operation of the BSW Mode Manager basic functionality can be described as two different tasks: Mode Arbitration and Mode Control.

The Mode Arbitration part initiates mode switches resulting from rule-based arbitration of mode requests and mode indications received from SW-Cs or other BSW modules.

The Mode Control part performs the mode switches by execution of action lists containing mode switch operations of other BSW modules.

The BswM should be seen as a mode management framework module in which behavior is completely defined by its configuration.

There may be different ways of implementing the BswM, such as generation of the complete BswM based on the configuration, or as a rule interpreter that parses an encoded configuration at run time.

However, this specification does not intend to specify any implementation details of the BSW Mode Manager. Hence, any examples stated in this document describing design details should be treated as explanatory text and not as requirements.

### 7.1 Mode Arbitration

The Mode Arbitration performed by the BswM is simple and rule-based. The rules used for mode arbitration are specified in the configuration of the BSW Mode Manager module.

The rules are composed of trivial Boolean expressions and the mode arbitration is thus expected to have a low runtime impact.

In order to know what action lists to execute, the BswM is required to detect changes in mode arbitration results from previous rule evaluation. How this is done, and the memory needed to store results, is implementation specific and not described in this document.

#### 7.1.1 Arbitration Rules

A rule is a logical expression that is composed of a set of mode request conditions. The rules are evaluated when the input mode requests and mode indications are changed, or during the execution of the BswM main function. The result of the evaluation (True or False) is used to decide about execution of the corresponding mode control Action List.

#### 7.1.2 Mode Conditions and Logical Expressions.

The logical expression that comprises a mode arbitration rule can use different operators such as AND, OR, XOR, NOT and NAND. Each term in the expression corresponds to a mode request condition. If the mode condition references a BswMModeRequestPort, the condition will verify if a requested or indicated mode is EQUAL or NOT\_EQUAL to a certain mode. If the condition references a BswMEventRequestPort, the condition will verify if the request port is SET or CLEAR. BswMEventRequestPort events requests differ from mode requests in that the

requester sends no requested mode/value to the BswM and as such, there is no mode condition for the BswM to evaluate. Rather, there is only the reception of the event for the BswM to evaluate. When the requester sends/calls the event, then the BswMEventRequestPort will be in a SET state. The BswM can then later place the BswMEventRequestPort into a CLEAR state by executing a BswMClearEventRequest action. An example rule with two conditions is shown in Figure 2. The rules and the set of available logical operations are defined as a part of the ECU configuration described in chapter 10.2.



Figure 2: Pseudocode representation of an example rule with two conditions.

[SWS\_BswM\_00252] [

When a BswMModeCondition has BswMConditionType=BSWM\_EVENT\_IS\_SET and references a BswMEventRequestPort:

- if the BswMEventRequestPort is in a SET state, then the BswMModeCondition shall evaluate to TRUE
- if the BswMEventRequestPort is in a CLEAR state, then the BswMModeCondition shall evaluate to FALSE

] (SRS\_ModeMgm\_09180, SRS\_ModeMgm\_09177)

[SWS\_BswM\_00253] [

When a BswMModeCondition has BswMConditionType=BSWM\_EVENT\_IS\_CLEARED and references a BswMEventRequestPort:

- if the BswMEventRequestPort is in a SET state, then the BswMModeCondition shall evaluate to FALSE

- if the BswMEventRequestPort is in a CLEAR state, then the BswMModeCondition shall evaluate to TRUE

] (SRS\_ModeMgm\_09180, SRS\_ModeMgm\_09177)

[SWS\_BswM\_00254] [

When the BswM receives an event on a configured BswMEventRequestPort (e.g. BswM\_ComM\_InitiateReset() is called by the ComM), the BswMEventRequestPort shall be placed in a SET state.] (SRS\_ModeMgm\_09180)

[SWS\_BswM\_00255] [

When a BswMClearEventRequest action is executed on a BswMEventRequestPort, the BswMEventRequestPort shall be placed in a CLEAR state. ] (SRS\_ModeMgm\_09180)

### 7.1.3 Requirements of Mode Arbitration

As mentioned above, the BswM accepts mode requests and mode indications as input for the mode arbitration. Mode requests normally originate from the application SW-Cs but may also originate from other BSW modules such as the DCM. Mode indications are always issued by other BSW modules, such as the different bus specific State Managers, the EcuM and the WdgM. In this document, the generic term *mode arbitration request* corresponds either to a mode indication or to a mode request.

[SWS\_BswM\_00009] [

The BswM shall perform mode arbitration based on incoming mode requests.] (SRS\_ModeMgm\_09180)

[SWS\_BswM\_00035] [

The BswM shall perform mode arbitration based on incoming mode indications. ] (SRS\_ModeMgm\_09180)

Note: All mode arbitration requests (requests and indications) are handled in the same way by the BswM. They are configured by selection of the corresponding mode condition type in the BswMModeRequestSource configuration container.

[SWS\_BswM\_00010] [

The BswM shall perform mode arbitration using configured rules. ] (SRS\_ModeMgm\_09177)

[SWS\_BswM\_00012] [

The mode arbitration rules shall be configurable using the module configuration parameters described in chapter 10.2.] (SRS\_ModeMgm\_09177)

[SWS\_BswM\_00117] [

BswM is not allowed to use results of previous arbitration rule evaluations as input for the logical expressions.] (SRS\_ModeMgm\_09180)

Note: Requirement SWS\_BswM\_00117 exists to prohibit using the results of rule evaluations as the input to other rule evaluations. It is largely satisfied by the existing structure of the BswM Configuration containers, because the configurable inputs for logical expressions excludes the results of previous rule evaluations.

[SWS\_BswM\_00147] [

The action(s) invoked as a result of evaluating a BswM arbitration rule may be called only in the context of an action list.] (SRS\_ModeMgm\_09178)

[SWS\_BswM\_00189] [

The BswM shall perform mode arbitration based on incoming mode switch notifications.] (SRS\_ModeMgm\_09180)

#### **7.1.3.1 Immediate and Deferred Operation**

There are two different ways to schedule the processing of the mode arbitration. It is either done immediately within the context of a mode request/indication, or deferred (cyclically) to the main function of the BswM.

An 'immediate' request is executed in the context of the caller. It is the responsibility of the system integrator to ensure that execution of the action list does not jeopardize system performance or consistency.

Especially, if the caller runs (or may run) in interrupt context, the restrictions concerning usage of system functions in interrupt context apply.

The difference between immediate and deferred operation is shown in the sequence diagrams in section 9.1 and 9.2.

[SWS\_BswM\_00061] [

A mode arbitration rule may contain any combination of immediate and deferred mode arbitration requests.] (SRS\_ModeMgm\_09180)

[SWS\_BswM\_00013] [

It shall be possible to configure the BswM to execute the mode arbitration immediately upon a mode arbitration request. This is configured by setting the BswMRequestProcessing configuration parameter (within the BswMModeRequestPort container) to BSWM\_IMMEDIATE.] (SRS\_ModeMgm\_09180)

[SWS\_BswM\_00059] [

Only the mode arbitration rules that use a specific immediate mode condition shall be evaluated by the BswM within the context of that specific mode request/indication.] (SRS\_ModeMgm\_09180)

[SWS\_BswM\_00014] [

It shall (also) be possible to defer the mode arbitration until the execution of the main function of the BswM. This is configured by setting the BswMRequestProcessing configuration parameter (within the BswMModeRequestPort container) to BSWM\_DEFERRED.] (SRS\_ModeMgm\_09180)



[SWS\_BswM\_00257] [

It shall be possible to configure the BswM to execute the mode arbitration immediately when an event is set. This is configured by setting the BswMRequestProcessing configuration parameter (within the BswMEventRequestPort container) to BSWM\_IMMEDIATE. ]  
(SRS\_ModeMgm\_09180)

[SWS\_BswM\_00258] [

It shall (also) be possible to defer the mode arbitration until the execution of the main function of the BswM. This is configured by setting the BswMRequestProcessing configuration parameter (within the BswMEventRequestPort container) to BSWM\_DEFERRED.] (SRS\_ModeMgm\_09180)

[SWS\_BswM\_00060] [

All rules that use at least one deferred mode condition shall be evaluated during every execution of the main function of BswM. ] (SRS\_ModeMgm\_09180)

[SWS\_BswM\_00068] [

BswM shall postpone mode arbitration requests received during the processing of its main function until it is finished. Any such postponed IMMEDIATE requests shall be processed directly before the BswM main function exits. Any such postponed DEFERRED requests shall be processed in the next subsequent BswM main function.] (SRS\_ModeMgm\_09180)

[SWS\_BswM\_00069] [

BswM shall postpone mode arbitration requests received during the processing of an IMMEDIATE request until it is finished. Any such postponed IMMEDIATE requests shall be processed directly after the processing of the original IMMEDIATE request. Any such postponed DEFERRED requests shall be processed in the next subsequent BswM main function.] (SRS\_ModeMgm\_09180)

#### **7.1.4 Arbitration Behavior after Initialization**

The behavior of the mode arbitration of BswM after initialization is controlled by the configuration container BswMModelInitValue. This parameter may be configured once for each BswMModeRequestPort in the configuration.

[SWS\_BswM\_00064] [

If the container BswMModelInitValue does not exist or the ModeRequest does not already have an initial value, the BswM shall treat the corresponding mode condition as undefined and not use it for mode arbitration until the corresponding mode arbitration request has been updated for the first time.] (SRS\_ModeMgm\_09179, SRS\_ModeMgm\_09228, SRS\_ModeMgm\_09180)

[SWS\_BswM\_00241] [



BswM shall only arbitrate rules that do not contain any undefined mode conditions within its logical expressions.] (SRS\_ModeMgm\_09180)

The initial value of each BswMModeRequestPort after initialization may be controlled by the configuration container BswMModelInitValue.

[SWS\_BswM\_00203] [

In case BswMModelInitValue is defined the BswM shall initialize the corresponding BswMModeRequestSource with either the BswMBswModelInitValue or the BswMCompuScaleModeValue while the BswM is initialized. The BswM shall reject configurations which contain both a BswMBswModelInitValue and a BswMCompuScaleModeValue for a single BswMModelInitValue. This initialization value shall be used for the arbitration rule until the corresponding mode arbitration request has been updated e.g. each call of BswM\_RequestMode shall update the GenericRequest mode. ] (SRS\_ModeMgm\_09179, SRS\_ModeMgm\_09228, SRS\_ModeMgm\_09180)

Note: the Rte and SchM modes always have an initial value (see [SRS\_Rte\_00116])

[SWS\_BswM\_00251] [

Upon initialization of the BswM, all BswMEventRequestPorts shall be initialized to a CLEAR state.] (SRS\_ModeMgm\_09183)

## 7.2 Mode Control

The Mode Control part of BswM performs all required actions based on the results of the mode arbitration. This is done using Action Lists. An Action List is an ordered list of actions that the BswM executes when triggered by the Mode Arbitration.

The actions in an Action List can be of three types:

1. Calls to other BSW modules or the RTE. A set of pre-defined actions are listed in 7.2.4.
2. Links to other action lists to be included in the execution.
3. Mode arbitration rules. These rules will be evaluated when the corresponding action list is executed. In this way, a hierarchy of rules is obtained.

The BswM is not required to store or react on any BSW module specific return values on its performed actions. Due to this, the different state managers in the BSW indicate their current state to the BswM to be used as input for the mode arbitration. However, if an error (E\_NOT\_OK) is returned, the BswM can issue a Det Runtime Error and/or cancel the currently executing action list.

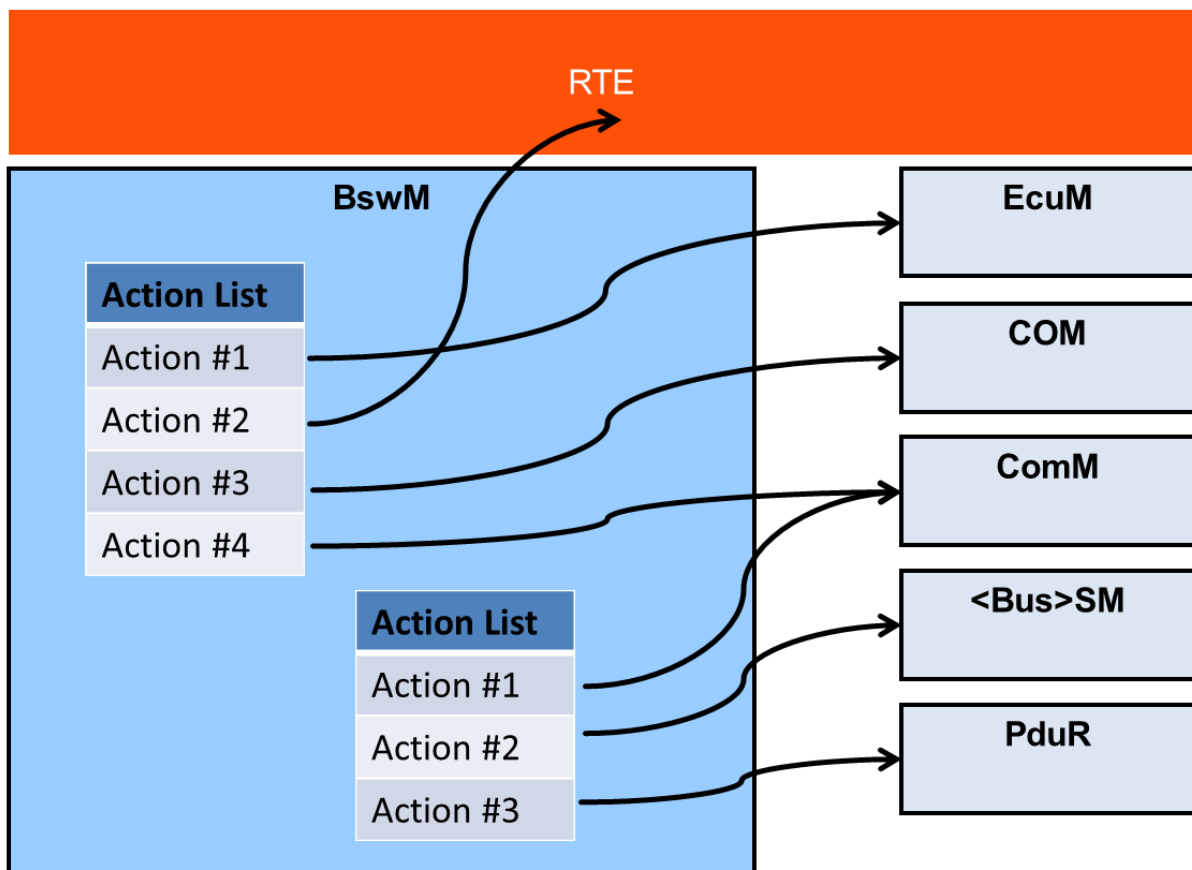


Figure 3: Example showing two action lists

As shown in Figure 3, the BswM may contain multiple Action Lists, and a single Action List can hold multiple actions. To reduce the overall number of action lists, it shall be possible to cascade them. An element of an action list can either be a concrete action or a reference to another action list, or as stated above, a rule to be executed by the mode arbitration. There shall be a flag connected to every action list entry that states its type (action/reference/rule). There shall be no difference between the way a list with concrete actions and the way a list with references or even a mixed list, is activated.

### 7.2.1 Mode Processing Cycle

Figure 4 shows the minimal processing cycle for a Mode Request:

- 1 The Mode Requester SW-C requests mode A through its Sender Port. The RTE distributes the request and the BswM receives it through its Receiver Port.
- 2 The BswM evaluates its rules either as a result of a received mode arbitration request, or cyclically during the execution of the BswM main function.
- 3 The corresponding Action List is executed according to the selected execution method (see section "Triggered and Conditional action lists").
- 4 When executing the Action List, the BswM may issue one or several calls to the RTE Switch API [10] as actions to inform the affected SW-Cs about the arbitration result. Any SW-C, especially the mode requester can register to receive the mode switch indications.

Note that the mode requester can only receive the mode switch indications from the local BswM; this is true also for requests that originate from a different ECU that is made by a local proxy SW-C.

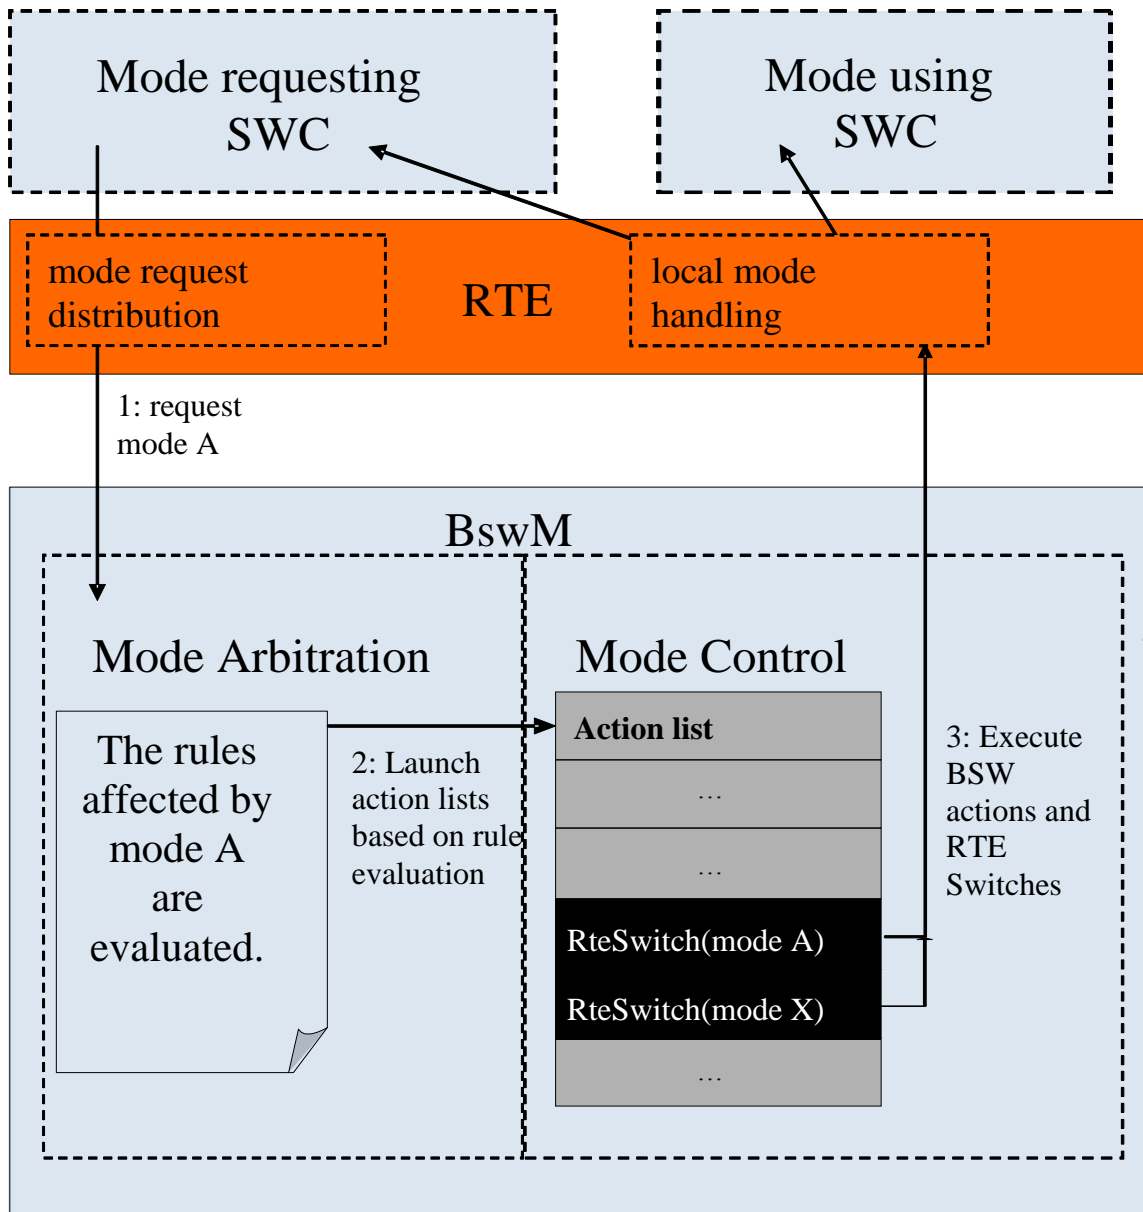


Figure 4: Mode Processing Cycle

## 7.2.2 Requirements on Mode Control

[SWS\_BswM\_00016] [

The BswM shall perform mode control by means of action lists that are executed as a result of rule evaluation in the mode arbitration.] (SRS\_ModeMgm\_09177)

[SWS\_BswM\_00015] [

For each rule of the mode arbitration, BswM shall be able to execute different action lists based on if the rule evaluates to True or False. ] (SRS\_ModeMgm\_09177)

[SWS\_BswM\_00017] [

An action list comprises a set of actions that BswM shall execute in an ordered manner. ] (SRS\_ModeMgm\_09178)

[SWS\_BswM\_00018] [

An action list may contain links to other action lists that BswM shall include in the execution.] (SRS\_ModeMgm\_09178)

[SWS\_BswM\_00019] [

An action list may also include links to mode arbitration rules that BswM shall evaluate within the scope of the execution of the current action list. ] (SRS\_ModeMgm\_09178)

[SWS\_BswM\_00067] [ If a rule is included in an action list as specified in [SWS\_BswM\_00019, any action list execution resulting from that evaluation shall be executed by BswM before it continues to execute the original action list. ] (SRS\_ModeMgm\_09177, SRS\_ModeMgm\_09178)

[SWS\_BswM\_00037] [

If cascaded action lists are used (i.e. using references to other rules or action lists) the action list structure may contain up to seven (7) hierarchic levels.

Note: The purpose of this limit is to make testing of BswM implementations and generator tools possible. The limit must be checked by the generator tool. ] (SRS\_ModeMgm\_09178)

[SWS\_BswM\_00062] [

Action lists associated with rules evaluated in the context of the mode arbitration request shall be executed by BswM immediately when triggered by the mode arbitration, and not be deferred to the main function execution.

Rationale: This allows very short latencies on mode requests when necessary. ] (SRS\_ModeMgm\_09177, SRS\_ModeMgm\_09178)

[SWS\_BswM\_00223] [

If a top-level action list is triggered by multiple rules during mode arbitration, this shall result in a single trigger to execute the action list during mode control. ] (SRS\_ModeMgm\_09177, SRS\_ModeMgm\_09178)

A top-level action list is an action list which is directly executed by a top-level rule (i.e. a rule which is not nested within an action list), and which is not nested within another action list. SWS\_BswM\_00223 only applies to top-level action lists. SWS\_BswM\_00223 does not apply to nested rules and nested action lists, since their order within the parent action list is user-defined and should be respected.

[SWS\_BswM\_CONSTR\_00001] [

The BswM shall reject configurations where a BswMActionList contains BswMActionListItem with same-valued BswMActionListItemIndexes. ]  
(SRS\_ModeMgm\_09178, SRS\_BSW\_00167)

[SWS\_BswM\_00260] [

When executing a BswMActionList: the BswM shall start with the BswMActionListItem that has the lowest-valued BswMActionListItemIndex. Subsequent BswMActionListItems shall be executed in increasing order of their BswMActionListItemIndex.] (SRS\_ModeMgm\_09230)

Within an action list, the configured BswMActionListItemIndexes do not necessarily need to be contiguous or zero-based. The BswM will start execution of the action list item with the lowest index, and continue to the one with the highest. If the indexes have "gaps" (i.e. are not contiguous), these gaps will simply be ignored. Because the action list is an ordered list, it is not allowed to configure BswMActionListItemIndexes of the same value within the context of an action list.

### 7.2.3 Triggered and Conditional action lists

There are two ways that an action list may be executed based on evaluation of rules. Either it is executed every time the rule is evaluated with the corresponding result, or only when the evaluation result has changed from the previous evaluation. The execution method for an action list is configured using the BswMActionListExecution parameter (within the BswMActionList container).

[SWS\_BswM\_00011] [

If a True action list is configured for triggered execution, the BswM shall only execute it when the evaluation of the corresponding rule changes from False to True.]  
(SRS\_ModeMgm\_09180, SRS\_ModeMgm\_09230)

[SWS\_BswM\_00023] [

If a False action list is configured for triggered execution the BswM shall only execute it when the evaluation of the corresponding rule changes from True to False.] (SRS\_ModeMgm\_09180, SRS\_ModeMgm\_09230)

[SWS\_BswM\_00115] [

If a True action list is configured for conditional execution, the BswM shall execute it every time the corresponding rule is evaluated to True.] (SRS\_ModeMgm\_09180)

[SWS\_BswM\_00116] [

If a False action list is configured for conditional execution, the BswM shall execute it every time the corresponding rule is evaluated to False.] (SRS\_ModeMgm\_09180)

[SWS\_BswM\_00055] [

The BswM shall abort the execution of an action list if an action returns E\_NOT\_OK and the corresponding BswMAbortOnFail configuration parameter is set to "true".]  
(SRS\_ModeMgm\_09178)

## 7.2.4 Available Actions

The set of actions that are available to use in an action list is predefined. The reason for this is to ease ECU configuration and generation of BswM configuration code.

[SWS\_BswM\_00038] [

BswM shall be able to execute the predefined actions defined by configuration container BswMAvailableActions. ] (SRS\_ModeMgm\_09175, SRS\_ModeMgm\_09174, SRS\_ModeMgm\_09182, SRS\_ModeMgm\_09184)

[SWS\_BswM\_00039] [

The BswM shall be able to call any function in the AUTOSAR BSW even though it is not among the standardized actions defined in BswMAvailableActions. ] (SRS\_ModeMgm\_09229)

[SWS\_BswM\_00040] [

The BswM shall be able to call user defined functions.] (SRS\_ModeMgm\_09229)

[SWS\_BswM\_00054] [

The parameters of the user defined functions, and their values, shall be defined at ECU configuration time using the BswMUserCallout configuration container. ] (SRS\_ModeMgm\_09178)

## 7.2.5 Behavior of Mode Control after Initialization

The behavior of the Mode Control after initialization of the BswM is configured by the BswMRuleInitState parameter (within the BswMRule container). It defines the “previous evaluation result” to be used when deciding on what action list to execute after the first evaluation of a rule after initialization. The configuration parameter BswMActionListExecution (within the BswMActionList container) also affects the action list execution after initialization.

[SWS\_BswM\_00066] [

The BswM shall act according to what is stated in Table 2 when a rule is evaluated for the first time after initialization.

<b>BswMRuleInitState</b>	<b>BswMActionListExecution</b>	<b>Rule evaluated to true</b>	<b>Rule evaluated to false</b>
BSWM_UNDEFINED	BSWM_TRIGGER	Execute "true" action list	Execute "false" action list
BSWM_TRUE	BSWM_TRIGGER	Do nothing	Execute "false" action list
BSWM_FALSE	BSWM_TRIGGER	Execute "true" action list	Do nothing
BSWM_UNDEFINED	BSWM_CONDITION	Execute "true"	Execute



		action list	"false" action list
BSWM_TRUE	BSWM_CONDITION	Execute "true" action list	Execute "false" action list
BSWM_FALSE	BSWM_CONDITION	Execute "true" action list	Execute "false" action list

**Table 2: Usage of the BswMRuleInitState configuration parameter**

Note: The "true" and "false" action lists are optional for each rule.

] (SRS\_ModeMgm\_09180, SRS\_ModeMgm\_09230)

## 7.2.6 Handling of I-PDU Group Actions

BswM is the only module that controls the starting and stopping of I-PDU groups, as well as the enabling/disabling of I-PDU group deadline monitoring. As such, Com does not provide accessor functions for the I-PDU group states, so the BswM must maintain several Com\_IpduGroupVectors to implement Com\_IpduGroupControl and Com\_ReceptionDMControl actions. Also, to perform I-PDU group switches (enable/disable) in an efficient and consistent way, the BswM shall perform the actual I-PDU Group Control function calls at the end of processing the main function or an immediate processing request. Essentially, this means that the BswMPduGroupSwitch action manipulates two I-PDU Group Vectors which are internal to the BswM and that these internal vectors are passed as parameters to Com\_IpduGroupControl. Likewise, the BswMDeadlineMonitoringControl action manipulates an I-PDU Group Vector internal to the BswM which is passed to Com\_ReceptionDMControl.

[SWS\_BswM\_00128] ]

BswM shall keep internal variables as an accumulative storage of the results of BswMPduGroupSwitch actions. These internal variables shall be initialized to all-zeros when the BswM is initialized. These internal variables shall be used as the parameters when calling the Com\_IpduGroupControl() function. ]  
(SRS\_ModeMgm\_09174, SRS\_ModeMgm\_09184)

The Com\_IpduGroupControl API offers an initialize flag which requests the initialization of newly started I-PDUs. The initialize flag offers no way (within a single call to Com\_IpduGroupControl) to start multiple I-PDUs, where some I-PDUs shall be initialized and some shall not. In order for the BswM to correctly support configurations where multiple BswMPduGroupSwitch actions (with differing values of BswMPduGroupSwitchReinit) are executed in a single processing cycle, multiple calls to Com\_IpduGroupControl are needed.

[SWS\_BswM\_00234] ]

The BswM shall utilize two different internal IpduGroupVectors for BswMPduGroupSwitch actions. One vector shall accumulate only the BswMPduGroupSwitches which have BswMPduGroupSwitchReinit set to true, and



the other vector shall accumulate all of BswMPduGroupSwitches (including those with BswMPduGroupSwitchReinit set to true). For the first call of Com\_IpduGroupControl, the vector for BswMPduGroupSwitchReinit == true shall be used. For the second call of Com\_IpduGroupControl, the other vector shall be used. After the second call of Com\_IpduGroupControl, the vector for BswMPduGroupSwitchReinit == true shall be overwritten with the value of the other vector. ] (SRS\_ModeMgm\_09183, SRS\_ModeMgm\_09174, SRS\_ModeMgm\_09184)

[SWS\_BswM\_00129] [

If any BswMPduGroupSwitch action(s) have been performed, the BswM shall execute the Com\_IpduGroupControl commands at the end of its processing of the BswM main function or an immediate request processing.] (SRS\_ModeMgm\_09174, SRS\_ModeMgm\_09184)

[SWS\_BswM\_00224] [

BswM shall keep internal variables as an accumulative storage of the results of BswMDeadlineMonitoringControl actions. These internal variables shall be initialized to all-zeros when the BswM is initialized. These internal variables shall be used as the parameters when calling the Com\_ReceptionDMControl() function. ] (SRS\_BSW\_00101)

[SWS\_BswM\_00225] [

If any BswMDeadlineMonitoringControl action(s) have been performed, the BswM shall execute the Com\_ReceptionDMControl command at the end of its processing of the BswM main function or an immediate request processing. ] (SRS\_ModeMgm\_09178)

## 7.3 Waiting Functionality

Sometimes it is necessary to delay specific actions or wait for further mode controls. For this reason a Timer handling was added to the BswM.

A Timer consists always of a BswMTimer as BswMModeRequestSource and corresponding actions (see BswMTimerControl) controlling this BswMTimer i.e. the timer can only be controlled in the context of the action BswMTimerControl -> BswMModeRequestSource/BswMTimer. The value of the BswMTimer (e.g. BSWM\_TIMER\_STOPPED, BSWM\_TIMER\_STARTED, BSWM\_TIMER\_EXPIRED) can be evaluated by other rules configured in the BswM, in order to trigger action lists. There is no external interface to control or manipulate the timer.

[SWS\_BswM\_00261] [

Each BswMTimer shall be stopped (BSWM\_TIMER\_STOPPED) during initialization. ] ( SRS\_BSW\_00101)

[SWS\_BswM\_00262] [

The action BswMTimerAction BSWM\_TIMER\_START shall reload the referenced BswMTimer (via BswMTimerRef) with the corresponding timer value (refer BswMTimerValue) and change the mode of the timer to BSWM\_TIMER\_STARTED.  
] ( SRS\_ModeMgm\_09180)

Note: The timer can only reload by the BswMTimerAction action (no automatic reload possible).

[SWS\_BswM\_00263] [

Each BswMTimer in mode BSWM\_TIMER\_STARTED shall decrement the timer during the BswM\_MainFunction (by the cycle time of the BswM\_MainFunction).] ( SRS\_ModeMgm\_09180)

Note: The BswMTimer resolution is a multiple of the BswM\_Mainfunction cycle. Also, the accuracy of the BswMTimer depends on the accuracy of the BswM\_MainFunction.

[SWS\_BswM\_00264] [

In case a BswMTimer which is in mode BSWM\_TIMER\_STARTED expires, its mode shall be changed to BSWM\_TIMER\_EXPIRED, and then the BswMTimer mode shall be arbitrated in the same BswM\_MainFunction cycle.] ( SRS\_ModeMgm\_09180)

[SWS\_BswM\_00265] [

The action BswMTimerAction BSWM\_TIMER\_STOP shall stop the referenced BswMTimer (via BswMTimerRef) immediately and change its' mode to BSWM\_TIMER\_STOPPED.] ( SRS\_ModeMgm\_09180)

## 7.4 Multi Partition Support

For multiple BswM instances, each BswM instance will generate its own separate service component description based on its own config set. The integrator will need to allocate these separate service components to the corresponding partition.

## 7.5 Debugging Support

For details refer to the chapter “Debugging support” in *SWS\_BSWGeneral*.

## 7.6 Error classification

Section 7.x "Error Handling" of the document "General Specification of Basic Software Modules" describes the error handling of the Basic Software in detail.

Above all, it constitutes a classification scheme consisting of five error types which may occur in BSW modules.

Based on this foundation, the following section specifies particular errors arranged in the respective subsections below

### 7.6.1 Development Errors

This chapter shall list all Development Errors that can be detected within this software module. For each error, a value shall be defined.

[SWS\_BswM\_00230] Development Error Types

<i>Type or error</i>	<i>Related error code</i>	<i>Value [hex]</i>
A service was called prior to initialization	BSWM_E_NO_INIT	0x01
A null pointer was passed as an argument	BSWM_E_NULL_POINTER	0x02
A parameter was invalid (unspecific)	BSWM_E_PARAM_INVALID	0x03
A requesting user was out of range	BSWM_E_REQ_USER_OUT_OF_RANGE	0x04
A requested mode was out of range	BSWM_E_REQ_MODE_OUT_OF_RANGE	0x05
The provided configuration is inconsistent	BSWM_E_PARAM_CONFIG	0x06
A parameter pointer was invalid	BSWM_E_PARAM_POINTER	0x07
Invalid configuration set selection	BSWM_E_INIT_FAILED	0x08

] (SRS\_BSW\_00385)

**Table 3: Development Error Types**

### 7.6.2 Runtime Errors

[SWS\_BswM\_00238] Runtime Error Types

<i>Type of error</i>	<i>Related error code</i>	<i>Value [hex]</i>
An action returned E_NOT_OK	BSWM_E_ACTION_FAILED	0x80..0xFF (as configured in BswMReportFailRuntimeErrorId)

] (SRS\_BSW\_00452)

[SWS\_BswM\_00239] [

If BswMReportFailRuntimeErrorId is configured for a BswMActionListItem, then the BswM shall report a BSWM\_E\_ACTION\_FAILED Runtime Error to Det if the action returns E\_NOT\_OK. The ErrorId reported in the BSWM\_E\_ACTION\_FAILED Runtime Error is given by the value configured in BswMReportFailRuntimeErrorId.

] (SRS\_BSW\_00452)

Since the calling context of the action depends on the configuration (e.g. DEFERRED or IMMEDIATE), the Apild reported in the BSWM\_E\_ACTION\_FAILED Runtime Error is not defined in this specification and may be implementation specific.

The BSWM\_E\_ACTION\_FAILED Runtime Error represents a range of ErrorId values. The range of values is restricted to the values given in the table for Runtime Error Types.

[SWS\_BswM\_00240] [

The BswM shall reject configurations where a BswMReportFailRuntimeErrorId does not lie within the range of values given for BSWM\_E\_ACTION\_FAILED in the Runtime Error Types table. ](SRS\_BSW\_00167)

### 7.6.3 Transient Faults

There are no transient faults.

### 7.6.4 Production Errors

There are no production errors.

### 7.6.5 Extended Production Errors

There are no extended production errors.

## 7.7 BswM Interfaces and Ports

This chapter specifies the AUTOSAR Interfaces and Ports that are provided by the Basic Software Mode Manager. Note that ports on both sides of the RTE are required: The SW-C description of the Basic Software Mode Manager services will define the ports below the RTE. Each AUTOSAR SW-C, which uses the services, must contain service ports in its own SW-C description. These ports are typed with the same interfaces and have to be connected to the ports of the Basic Software Mode Manager, so that the RTE can generate the appropriate IDs and the required symbols.

SW-Cs request modes from the BSW Mode Manager. To that end, they provide a Sender Port that has a special Sender/Receiver Interface (Mode Request Interface) with one data element. The corresponding Receiver Port at the BSW Mode Manager is described in Chapter 7.7.1. The data element's type has the same values as the Mode Declarations in the Mode Declaration Group of the corresponding mode (since the ImplementationDataType of the data element is mapped to the ModeDeclaration Group).

The same SW-C that requests a mode may also be a mode user because it may also need to know the arbitration result of the BSW Mode Manager. The SW-C has a Mode Switch Port, which is a R-Port with a Mode Switch Interface with one data element. This data element's type is then the Mode Declaration Group itself. In addition, other SW-Cs that do not request modes, but depend on them, have such a Mode Switch Port. See Chapter 7.7.3 for a detailed description of the interface to mode users. Note that the BSW Mode Manager also needs a Mode Switch R-Port if it needs to know the current mode in addition to the requested one in its decisions.

Mode Notifications are dispatched by the RTE when a Mode Manager switches the corresponding mode. To do that, the BSW Mode Manager has a Provided type Mode Switch Port that the SW-Cs can connect to. See Chapter 7.7.2 for a detailed description of Mode Switch Ports.

In the context of the requesting SW-C, a Mode Request Port (Sender/Receiver) is defined. The configuration of BSW Mode Manager references this port definition. Let us assume that the SW-C defines an Application Mode `AppModeType`, a corresponding `AppModeRequestType` and an `AppModeTypeMap` that maps the two types to each other:


```
ModeDeclarationGroup AppModeType {
    { APP_MODE_A, APP_MODE_B, APP_MODE_C }
    initialMode = APP_MODE_A;
};

ImplementationDataType AppModeRequestType {
    lowerLimit = 0;
    upperLimit = 2;
};

ModeRequestTypeMap AppModeTypeMap {
    modeGroup = AppModeType;
    implementationDataType = AppModeRequestType;
};
```

In the context of the SW-C, two Interfaces are defined: the `AppModeRequestInterface` of Sender/Receiver type where the SW-C is sender, and the `AppModeInterface` of Mode Switch type where the SW-C can have P-Ports and R-Ports depending upon the usage:


Figure 5 shows how the ports of the application SW-Cs connect to the service ports of the BSW Mode Manager. The Application Mode Manager SW-C has a Mode Request Port and a Mode Switch R-port (named `modeNotificationPort` to distinguish it from the Mode Switch P-ports). The first port is to request changes in its application mode, the latter to receive notifications when the BswM has performed the mode change. The Mode Request Port of the Application Mode Manager (`modeRequestPort0`) connects to the corresponding Mode Request Port of the BSW Mode Manager. Since this is normal Sender/Receiver communication, the Application Mode Manager may connect to multiple BSW Mode Managers even on remote ECUs.

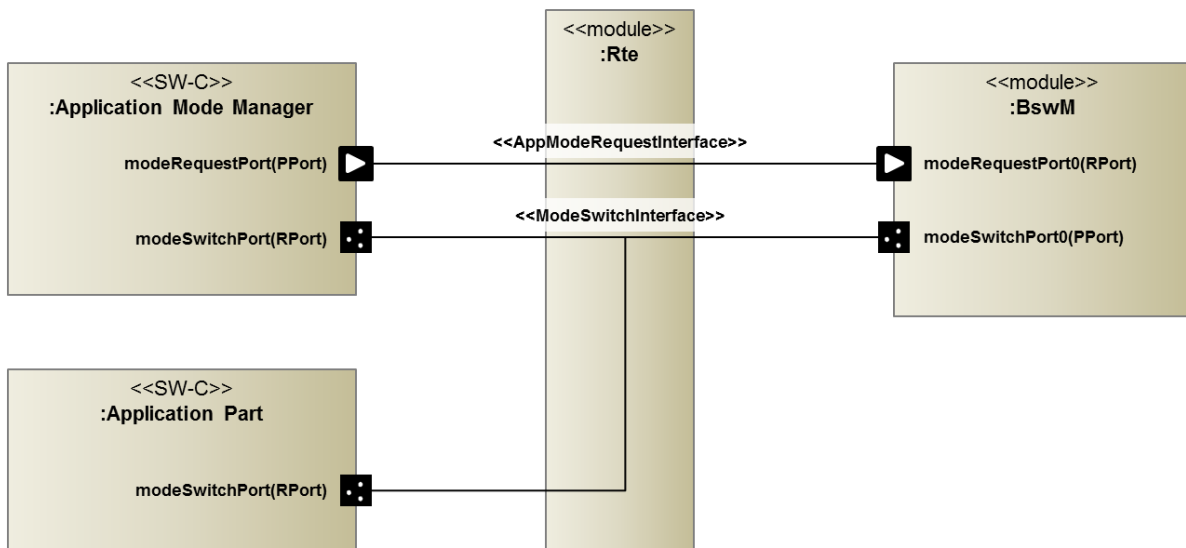

**Figure 5: Connections between Application Mode Manager, Application Parts and the BSW Mode Manager**

In order to switch the application mode, the BSW Mode Manager has a Mode Switch Port (`modeSwitchPort_{Name}`) that is implemented by the local RTE.

When the RTE performs the mode switch, it informs all connected entities (BSW Modules or SW-Cs) that are connected via Mode Switch R-Ports to the providing port. The following example presents the Application Mode Manager, the other mode-dependent Application Part and the BSW Mode Manager itself (Note that it's named `modeNotificationPort_{Name}` but the port type is Mode Switch Port). All of these connections are also local.

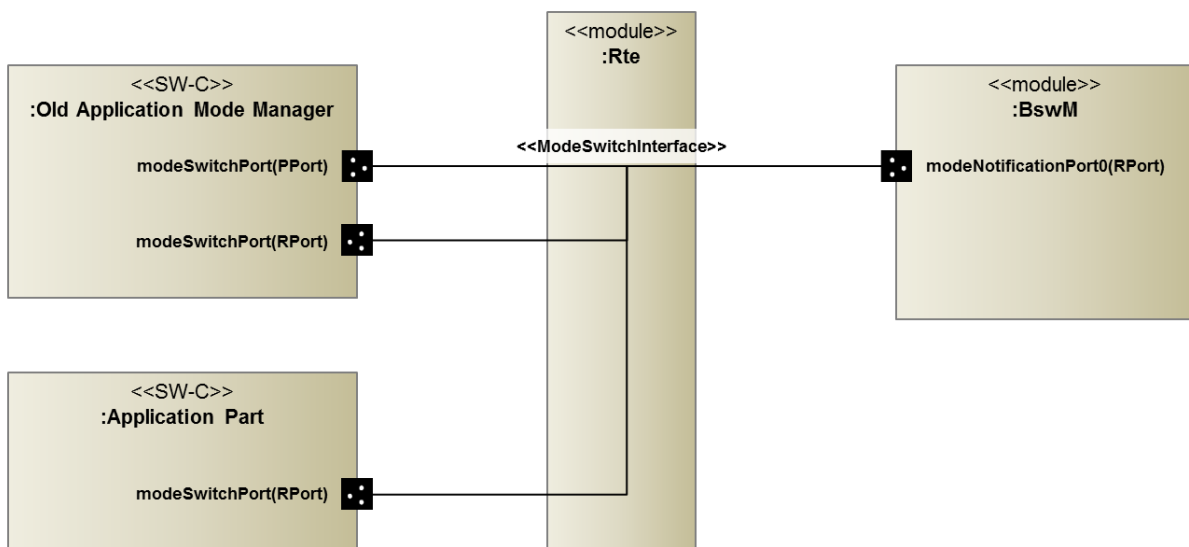

**Figure 6: Connections between SW-C based Application Mode Manager, Application Parts and the BSW Mode Manager**

Figure 6 shows that SW-C based Application Mode Managers (as used in AUTOSAR R3.1 and earlier) switch the application mode directly and do not request it from the BSW Mode Manager. Therefore, they directly connect a Mode Switch Port to the

local RTE. This implies that the application mode needs to be local to that ECU and that no arbitration in the BSW Mode Manager is possible. Nevertheless, the BSW Mode Manager may use the current application mode as an input for its rules because it can have a Mode Switch R-Port (named `modeNotificationPort0` in the figure) for this application mode.

*Note:* To configure the BswM, knowledge of what mode request ports and ECU resources are needed/available for a specific ECU is needed. Therefore, the SW-C description of the BswM can only be completed during ECU configuration time.

From now on, all following interface definitions are interpreted to be in:

```
ARPackage AUTOSAR_BswM/BswModuleDescription
```

Note that the pseudocode presented in this chapter is not exact, but provides a hint of how the corresponding model elements need to be defined.

### 7.7.1 Mode Request Ports

The BSW Mode Manager must declare a Receiver Port with the interface defined in the context of the SW-C:

```
RequirePort AppModeRequestInterface modeRequestPort_{ArbName}_{ReqName};
```

To read the currently requested mode, the BSW Mode Manager implementation must call:

```
Rte_Read_modeRequestPort_{ArbName}_{ReqName}_requestedMode( &<variable> );
```

### 7.7.2 Mode Switch Ports

As with Mode Requests, the BSW Mode Manager only references the mode switch interfaces defined in the context of the corresponding SW-C Description in its Provide Ports for mode switches. For the above example the declaration for a mode switch is:

```
ProvidePort AppModeInterface modeSwitchPort_{ModConName}_{SwitchName};
```

The configuration parameter `BswMModeSwitchInterfaceRef` references this Mode Switch interface.

To switch the currently active mode, the BSW Mode Manager implementation must insert one of the following calls into its actions list:

```
Rte_Switch_modeSwitchPort_{ModConName}_{SwitchName}_currentMode( <new_mode> );
```

```
SchM_Switch_modeSwitchPort_{ModConName}_{SwitchName}_currentMode( <new_mode> );
```



### 7.7.3 Notifications of Mode Switches

In addition to mode requests, the currently active modes can also be used as inputs to mode arbitration. For Application and Vehicle Modes, the BSW Mode Manager needs to register as a mode user. It then receives notifications about changed modes via a Mode Switch Port. For the above example the declaration for a mode notification is:

Note: In order to make it easier to distinguish between a RequirePort and ProvidePort of the ModeSwitchPort type, the RequirePorts are named mode notification port for the following example.

```
RequirePort AppModeInterface modeNotificationPort_{ArbName}_{ModeName};
```

To read the currently active mode, the BSW Mode Manager implementation must call one of the following functions:

```
Rte_Mode_modeNotificationPort_{ArbName}_{ModeName}_currentMode( &<variable> );
```

```
SchM_Mode_modeNotificationPort_{ArbName}_{ModeName}_currentMode( &<variable> );
```

In case the enhanced Rte\_Mode or SchM\_Mode is configured, the BSW Mode Manager implementation must call one of the following functions:

```
Rte_Mode_modeNotificationPort_{ArbName}_{ModeName}_currentMode( &<variable>, &<previousmode>, &<nextmode> );
```

```
SchM_Mode_modeNotificationPort_{ArbName}_{ModeName}_currentMode( &<variable>, &<previosmode>, &<nextmode> );
```

### 7.7.4 Component Type and Internal Behavior

The BSW Mode Manager is a Service Component that serves Mode Requests local to the ECU. The ServiceComponentType for the BSW Mode Manager declares all of the above-mentioned ports, and some Internal Behavior.

```
ServiceComponentType BswM {  
    ...  
    InternalBehavior {  
        ...  
    };  
};
```

The internal behavior depends on the parameter BswMRequestProcessing for the corresponding Mode Request Port. For BSWM\_DEFERRED, the RTE must not perform any special actions, as the BSWM Mode Manager reads the request cyclically in its BswM\_MainFunction. By contrast, for BSWM\_IMMEDIATE the RTE must trigger mode arbitration immediately. Therefore, the BSW Mode Manager needs to register a trigger function that triggers mode arbitration. For the above



example, an immediate processing of the mode request would need the following declaration in the Internal Behavior of the BSW Mode Manager:

```
RunnableEntity ModeArbitrationRunnable {  
    symbol = <mode_arbitration_function>;  
    canBeInvokedConcurrently = TRUE;  
};  
  
DataReceiveEvent AppModeRequestEvent {  
    port = modeRequestPort0;  
    dataElement = requestedMode;  
    startOnEvent = ModeArbitrationRunnable;  
};
```

*Note:* To deal with Mode Requests that originate from other ECUs, another kind of service component is needed. On the VFB level it looks like one global Service Component, but actually it is instantiated as one Service Component that resides above the RTE for each ECU. To support that, the SW-C Template offers the ServiceProxyComponentType instead of the normal ServiceComponentType.

The specification of the Mode Management Service Proxy Component is not described within this document since it is user specific.

## 7.8 Pretended Networking

The current version of the BswM SWS supports Pretended Networking only for the Can bus through the API BswM\_CanSM\_CurrentIcomConfiguration and the configuration container BswMCanSMIcomIndication.

The AUTOSAR\_EXP\_ModemanagementGuide document contains guidelines for the BswM configuration regarding Pretended Networking.

## 8 API specification

### 8.1 Imported types

[SWS\_BswM\_00237] [ The BSW Mode Manager shall use only the imported types which are listed in SWS\_BswM\_00001.] (SRS\_BSW\_00301)

[SWS\_BswM\_00001] [

<b>Module</b>	<b>Imported Type</b>
CanSM	CanSM_BswMCurrentStateType
Com	Com_IpduGroupIdxType
	Com_IpduGroupVector
ComM	ComM_InhibitionStatusType
	ComM_InitStatusType
	ComM_ModeType
	ComM_PncModeType
	ComM_UserHandleType
ComStack_Types	IcomConfigIdxType
	IcomSwitch_ErrorType
	NetworkHandleType
	PNCHandleType
	PdIdxType
Dcm	Dcm_CommunicationModeType
EcuM	EcuM_StateType
	EcuM_WakeupSourceType
	EcuM_WakeupStatusType
EcuM_flex	EcuM_RunStatusType
	EcuM_ShutdownTargetType
EthIf	EthIf_SwitchPortGroupIdxType
EthSM	EthSM_NetworkModeStateType
Eth_GeneralTypes	EthTrcv_LinkStateType
FrSm	FrSM_BswM_StateType
J1939Dcm	J1939Dcm_StateType
J1939Rm	J1939Rm_StateType
LinIf	LinIf_SchHandleType
	LinTp_Mode
LinSM	LinSM_ModeType
McOs	CoreIdxType
Nm	Nm_StateType
NvM	NvM_BlockIdxType
	NvM_RequestResultType
Os	ApplicationType
	IdleModeType
	StatusType
Sd	Sd_ClientServiceCurrentStateType
	Sd_ConsumedEventGroupCurrentStateType
	Sd_EventHandlerCurrentStateType
Std_Types	Std_ReturnType
	Std_VersionInfoType

] (SRS\_BSW\_00301)

## 8.2 Type definitions

[SWS\_BswM\_00041] [ The following Data Types shall be used for the functions defined in this specification.] (SRS\_BSW\_00305)

### 8.2.1 BswM\_ConfigType

[SWS\_BswM\_00213] [

<b>Name:</b>	BswM_ConfigType	
<b>Type:</b>	Structure	
<b>Range:</b>	-	The contents of this structure depends on the configuration variant.
<b>Description:</b>	This structure contains all post-build configurable parameters of the BSW Mode Manager. A pointer to this structure is passed to the BSW Mode Manager initialization function for configuration.	

] (SRS\_BSW\_00404, SRS\_BSW\_00441)

[SWS\_BswM\_00042] [ The structure BswM\_ConfigType shall contain all post-build configurable parameters of the BSW Mode Manager. The exact content of this structure depends on the selected configuration variant] (SRS\_BSW\_00404)

### 8.2.2 BswM\_ModeType

[SWS\_BswM\_00214] [

<b>Name:</b>	BswM_ModeType	
<b>Type:</b>	uint8, uint16	
<b>Range:</b>	0-255, 0-65535	-- The range of valid IDs depends on configuration and on the chosen platform type.
<b>Description:</b>	This type identifies the modes that can be requested by BswM Users.	

] (SRS\_ModeMgm\_09228, SRS\_BSW\_00441)

### 8.2.3 BswM\_UserType

[SWS\_BswM\_00216] [

<b>Name:</b>	BswM_UserType	
<b>Type:</b>	uint8, uint16	
<b>Range:</b>	0-255, 0-65535	-- The range of valid IDs depends on configuration and on the chosen platform type.
<b>Description:</b>	This type identifies a BswM User that makes mode requests to the BswM.	

] (SRS\_ModeMgm\_09228, SRS\_BSW\_00441)

## 8.3 Function definitions

### 8.3.1 BswM\_BswMPartitionRestarted

[SWS\_BswM\_00193] [

<b>Service name:</b>	BswM_BswMPartitionRestarted
<b>Syntax:</b>	void BswM_BswMPartitionRestarted( void

	)
<b>Service ID[hex]:</b>	0x1e
<b>Sync/Async:</b>	Synchronous
<b>Reentrancy:</b>	Reentrant
<b>Parameters (in):</b>	None
<b>Parameters (inout):</b>	None
<b>Parameters (out):</b>	None
<b>Return value:</b>	None
<b>Description:</b>	Function called by Restart Task if the partition containing the BswM has been restarted.

] (SRS\_ModeMgm\_09228)

The corresponding configuration container for this API is BswMPartitionRestarted.

### 8.3.2 BswM\_CanSM\_CurrentIcomConfiguration

[SWS\_BswM\_00164] [

<b>Service name:</b>	BswM_CanSM_CurrentIcomConfiguration	
<b>Syntax:</b>	<pre>void BswM_CanSM_CurrentIcomConfiguration(     NetworkHandleType Network,     IcomConfigIdType ActiveConfiguration,     IcomSwitch_ErrorType Error )</pre>	
<b>Service ID[hex]:</b>	0x1a	
<b>Sync/Async:</b>	Synchronous	
<b>Reentrancy:</b>	Reentrant	
<b>Parameters (in):</b>	Network	The CAN channel the requested state corresponds to.
	ActiveConfiguration	The configuration Id of the Icom configuration.
	Error	ICOM_SWITCH_E_OK: No Error ICOM_SWITCH_E_FAILED: Switch to requested Configuration failed. Severe Error.
<b>Parameters (inout):</b>	None	
<b>Parameters (out):</b>	None	
<b>Return value:</b>	None	
<b>Description:</b>	Function to inform BswM about the switch of Icom Configuration.	

] (SRS\_ModeMgm\_09228)

The corresponding configuration container for this API is BswMCanSMIcomIndication.

[SWS\_BswM\_00166] [

The interface BswM\_CanSM\_CurrentIcomConfiguration shall be used by the CanSM to inform the BswM about the activation of a new ICOM configuration for a given channel. The BswM shall match the Network and Error parameters to a configured BswMCanSMIcomIndication and utilize the ActiveConfiguration parameter as the value that gets evaluated in the arbitration rules.] ( SRS\_ModeMgm\_09228)

### 8.3.3 BswM\_CanSM\_CurrentState

#### [SWS\_BswM\_00049] [

<b>Service name:</b>	BswM_CanSM_CurrentState	
<b>Syntax:</b>	<pre>void BswM_CanSM_CurrentState(     NetworkHandleType Network,     CanSM_BswMCurrentStateType CurrentState )</pre>	
<b>Service ID[hex]:</b>	0x05	
<b>Sync/Async:</b>	Synchronous	
<b>Reentrancy:</b>	Reentrant	
<b>Parameters (in):</b>	Network	The CAN channel that the indicated state corresponds to.
	CurrentState	The current state of the CAN channel.
<b>Parameters (inout):</b>	None	
<b>Parameters (out):</b>	None	
<b>Return value:</b>	None	
<b>Description:</b>	Function called by CanSM to indicate its current state.	

] (SRS\_ModeMgm\_09228)

The corresponding configuration container for this API is BswMCanSMIndication.

#### [SWS\_BswM\_00080] [

If the BswMDevErrorDetect switch is enabled, the routine shall check if the BSW Mode Manager is initialized. In case of an error, the BswM shall ignore the state indication and report the error to the Default Error Tracer with the error code BSWM\_E\_NO\_INIT.] (SRS\_BSW\_00406)

#### [SWS\_BswM\_00095] [

If the BswMDevErrorDetect switch is enabled, the parameter CurrentState shall be checked for being in the allowed range. In case of an error, the BswM shall ignore the state indication and report the error to the Default Error Tracer with the value BSWM\_E\_REQ\_MODE\_OUT\_OF\_RANGE.] (SRS\_BSW\_00323)

### 8.3.4 BswM\_ComM\_CurrentMode

#### [SWS\_BswM\_00047] [

<b>Service name:</b>	BswM_ComM_CurrentMode	
<b>Syntax:</b>	<pre>void BswM_ComM_CurrentMode(     NetworkHandleType Network,     ComM_ModeType RequestedMode )</pre>	
<b>Service ID[hex]:</b>	0x0e	
<b>Sync/Async:</b>	Synchronous	
<b>Reentrancy:</b>	Reentrant	
<b>Parameters (in):</b>	Network	The ComM communication channel that the indicated state corresponds to.
	RequestedMode	The current state of the ComM communication channel
<b>Parameters (inout):</b>	None	
<b>Parameters (out):</b>	None	

<b>Return value:</b>	None
<b>Description:</b>	Function called by ComM to indicate the current communication mode of a ComM channel.

] (SRS\_ModeMgm\_09228)

The corresponding configuration container for this API is BswMComMIndication.

[SWS\_BswM\_00078] [

If the BswMDevErrorDetect switch is enabled, the routine shall check if the BSW Mode Manager is initialized. In case of an error, the BswM shall ignore the mode request and report the error to the Default Error Tracer with the error code BSWM\_E\_NO\_INIT.] (SRS\_BSW\_00406)

[SWS\_BswM\_00091] [

If the BswMDevErrorDetect switch is enabled, the parameter RequestedMode shall be checked for being in the allowed range. In case of an error, the BswM shall ignore the mode request and report the error to the Default Error Tracer with the value BSWM\_E\_REQ\_MODE\_OUT\_OF\_RANGE. ] (SRS\_BSW\_00323)

### 8.3.5 BswM\_ComM\_CurrentPNCMode

[SWS\_BswM\_00148] [

<b>Service name:</b>	BswM_ComM_CurrentPNCMode	
<b>Syntax:</b>	<pre>void BswM_ComM_CurrentPNCMode(     PNCHandleType PNC,     ComM_PncModeType CurrentPncMode )</pre>	
<b>Service ID[hex]:</b>	0x15	
<b>Sync/Async:</b>	Synchronous	
<b>Reentrancy:</b>	Reentrant	
<b>Parameters (in):</b>	PNC	The handle of the PNC for which the current state is reported.
	CurrentPncMode	The current mode of the PNC.
<b>Parameters (inout):</b>	None	
<b>Parameters (out):</b>	None	
<b>Return value:</b>	None	
<b>Description:</b>	Function called by ComM to indicate the current mode of the PNC.	

] (SRS\_ModeMgm\_09228, SRS\_ModeMgm\_09240)

The corresponding configuration container for this API is BswMComMPncRequest.

[SWS\_BswM\_00149] [

If the BswMDevErrorDetect switch is enabled, the routine shall check if the BSW Mode Manager is initialized. In case of an error, the BswM shall ignore the mode request and report the error to the Default Error Tracer with the error code BSWM\_E\_NO\_INIT.] (SRS\_BSW\_00406)

[SWS\_BswM\_00150] [

If the BswMDevErrorDetect switch is enabled, the parameter CurrentPncMode shall be checked for being in the allowed range. In case of an error, the BswM shall ignore

the mode request and report the error to the Default Error Tracer with the value BSWM\_E\_REQ\_MODE\_OUT\_OF\_RANGE. ] (SRS\_BSW\_00323)

### 8.3.6 BswM\_ComM\_InitiateReset

[SWS\_BswM\_00217] [

<b>Service name:</b>	BswM_ComM_InitiateReset
<b>Syntax:</b>	void BswM_ComM_InitiateReset( void )
<b>Service ID[hex]:</b>	0x22
<b>Sync/Async:</b>	Synchronous
<b>Reentrancy:</b>	Non Reentrant
<b>Parameters (in):</b>	None
<b>Parameters (inout):</b>	None
<b>Parameters (out):</b>	None
<b>Return value:</b>	None
<b>Description:</b>	Function called by ComM to signal a shutdown.

] (SRS\_ModeMgm\_09228)

The corresponding configuration container for this API is BswMComMInitiateReset.

### 8.3.7 BswM\_Dcm\_ApplicationUpdated

[SWS\_BswM\_00158] [

<b>Service name:</b>	BswM_Dcm_ApplicationUpdated
<b>Syntax:</b>	void BswM_Dcm_ApplicationUpdated( void )
<b>Service ID[hex]:</b>	0x14
<b>Sync/Async:</b>	Synchronous
<b>Reentrancy:</b>	Reentrant
<b>Parameters (in):</b>	None
<b>Parameters (inout):</b>	None
<b>Parameters (out):</b>	None
<b>Return value:</b>	None
<b>Description:</b>	This function is called by the DCM in order to report an updated application.

] (SRS\_ModeMgm\_09228)

The corresponding configuration container for this API is BswMDcmApplicationUpdatedIndication.

[SWS\_BswM\_00159] [

If the BswMDevErrorDetect switch is enabled, the routine shall check if the BSW Mode Manager is initialized. In case of an error, the BswM shall ignore the mode request and report the error to the Default Error Tracer with the error code BSWM\_E\_NO\_INIT.] (SRS\_BSW\_00406)

### 8.3.8 BswM\_Dcm\_CommunicationMode\_CurrentState

#### [SWS\_BswM\_00048] [

<b>Service name:</b>	BswM_Dcm_CommunicationMode_CurrentState	
<b>Syntax:</b>	<pre>void BswM_Dcm_CommunicationMode_CurrentState(     NetworkHandleType Network,     Dcm_CommunicationModeType RequestedMode )</pre>	
<b>Service ID[hex]:</b>	0x06	
<b>Sync/Async:</b>	Synchronous	
<b>Reentrancy:</b>	Reentrant	
<b>Parameters (in):</b>	Network	The communication channel that the diagnostic mode corresponds to.
	RequestedMode	The requested diagnostic communication mode.
<b>Parameters (inout):</b>	None	
<b>Parameters (out):</b>	None	
<b>Return value:</b>	None	
<b>Description:</b>	Function called by DCM to inform the BswM about the current state of the communication mode.	

] (SRS\_ModeMgm\_09228)

The behavior of this function shall be configured using the configuration container BswMDcmComModeRequest, wherein the configuration parameter BswMDcmComMChannelRef correlates to the argument `Network` of this function.

#### [SWS\_BswM\_00079] [

If the BswMDevErrorDetect switch is enabled, the routine shall check if the BSW Mode Manager is initialized. In case of an error, the BswM shall ignore the mode request and report the error to the Default Error Tracer with the error code BSWM\_E\_NO\_INIT.] (SRS\_BSW\_00406)

#### [SWS\_BswM\_00093] [

If the BswMDevErrorDetect switch is enabled, the parameter RequestedMode shall be checked for being in the allowed range. In case of an error, the BswM shall ignore the mode request and report the error to the Default Error Tracer with the value BSWM\_E\_REQ\_MODE\_OUT\_OF\_RANGE.] (SRS\_BSW\_00323)

CDD Implementation Hint: All AUTOSAR BSW modules that may trigger transmission of PDUs provide an API to enable/disable it. To e.g. disable the whole communication in a corresponding diagnostic request, it makes sense if CDD modules (which use communication protocols) provides such an API as well. These functions may be called in the configured action list which is linked to this function.

### 8.3.9 BswM\_Deinit

#### [SWS\_BswM\_00119] [

<b>Service name:</b>	BswM_Deinit	
<b>Syntax:</b>	<pre>void BswM_Deinit(     void )</pre>	



<b>Service ID[hex]:</b>	0x04
<b>Sync/Async:</b>	Synchronous
<b>Reentrancy:</b>	Non Reentrant
<b>Parameters (in):</b>	None
<b>Parameters (inout):</b>	None
<b>Parameters (out):</b>	None
<b>Return value:</b>	None
<b>Description:</b>	Deinitializes the BSW Mode Manager.

] (SRS\_BSW\_00336)

[SWS\_BswM\_00120] [

After a call of BswM\_Deinit no mode processing shall be performed by BswM even if any mode requests are made or the BswM main function is called. ]  
(SRS\_BSW\_00336)

### 8.3.10 BswM\_EcuM\_CurrentState

[SWS\_BswM\_00056] [

<b>Service name:</b>	BswM_EcuM_CurrentState
<b>Syntax:</b>	void BswM_EcuM_CurrentState( EcuM_StateType CurrentState )
<b>Service ID[hex]:</b>	0x0f
<b>Sync/Async:</b>	Synchronous
<b>Reentrancy:</b>	Reentrant
<b>Parameters (in):</b>	CurrentState      The requested ECU Operation Mode
<b>Parameters (inout):</b>	None
<b>Parameters (out):</b>	None
<b>Return value:</b>	None
<b>Description:</b>	Function called by EcuM to indicate the current ECU Operation Mode.

] (SRS\_ModeMgm\_09228)

The corresponding configuration container for this API is BswMEcuMIndication.

[SWS\_BswM\_00084] [

If the BswMDevErrorDetect switch is enabled, the routine shall check if the BSW Mode Manager is initialized. In case of an error, the BswM shall ignore the mode request and report the error to the Default Error Tracer with the error code BSWM\_E\_NO\_INIT.] (SRS\_BSW\_00406)

[SWS\_BswM\_00103] [

If the BswMDevErrorDetect switch is enabled, the parameter CurrentState shall be checked for being in the allowed range. In case of an error, the BswM shall ignore the mode request and report the error to the Default Error Tracer with the value BSWM\_E\_REQ\_MODE\_OUT\_OF\_RANGE.] (SRS\_BSW\_00323)

### 8.3.11 BswM\_EcuM\_CurrentWakeup

#### [SWS\_BswM\_00131] [

<b>Service name:</b>	BswM_EcuM_CurrentWakeup	
<b>Syntax:</b>	<pre>void BswM_EcuM_CurrentWakeup(     EcuM_WakeupSourceType source,     EcuM_WakeupStatusType state )</pre>	
<b>Service ID[hex]:</b>	0x10	
<b>Sync/Async:</b>	Synchronous	
<b>Reentrancy:</b>	Reentrant	
<b>Parameters (in):</b>	source	Wakeup source(s) that changed state.
	state	The new state of the wakeup source(s)
<b>Parameters (inout):</b>	None	
<b>Parameters (out):</b>	None	
<b>Return value:</b>	None	
<b>Description:</b>	Function called by EcuM to indicate the current state of a wakeup source.	

] (SRS\_ModeMgm\_09228)

The corresponding configuration container for this API is BswMEcuMWakeupSource.

#### [SWS\_BswM\_00132] [

If the BswMDevErrorDetect switch is enabled, the routine shall check if the BSW Mode Manager is initialized. In case of an error, the BswM shall ignore the mode request and report the error to the Default Error Tracer with the error code BSWM\_E\_NO\_INIT.] (SRS\_BSW\_00406)

#### [SWS\_BswM\_00133] [

If the BswMDevErrorDetect switch is enabled, the parameter state shall be checked for being in the allowed range. In case of an error, the BswM shall ignore the mode request and report the error to the Default Error Tracer with the value BSWM\_E\_REQ\_MODE\_OUT\_OF\_RANGE.] (SRS\_BSW\_00323)

### 8.3.12 BswM\_EcuM\_RequestedState

#### [SWS\_BswM\_00226] [

<b>Service name:</b>	BswM_EcuM_RequestedState	
<b>Syntax:</b>	<pre>void BswM_EcuM_RequestedState(     EcuM_StateType State,     EcuM_RunStatusType CurrentStatus )</pre>	
<b>Service ID[hex]:</b>	0x23	
<b>Sync/Async:</b>	Synchronous	
<b>Reentrancy:</b>	Reentrant	
<b>Parameters (in):</b>	State	The requested state by EcuMFlex.
	CurrentStatus	Result of the Run Request Protocol.
<b>Parameters (inout):</b>	None	
<b>Parameters (out):</b>	None	
<b>Return value:</b>	None	
<b>Description:</b>	Function called by EcuM to notify about current Status of the Run Request	

	Protocol.
--	-----------

] (SRS\_ModeMgm\_09116, SRS\_ModeMgm\_09228)

The corresponding configuration container for this API is BswMEcuMRUNRequestIndication.

[SWS\_BswM\_00227] [

If the BswMDevErrorDetect switch is enabled, the routine shall check if the BSW Mode Manager is initialized. In case of an error, the BswM shall ignore the mode request and report the error to the Default Error Tracer with the error code BSWM\_E\_NO\_INIT. ] (SRS\_BSW\_00406)

[SWS\_BswM\_00228] [

If the BswMDevErrorDetect switch is enabled, the parameter State shall be checked for being in the allowed range. In case of an error, the BswM shall ignore the mode request and report the error to the Default Error Tracer with the value BSWM\_E\_REQ\_MODE\_OUT\_OF\_RANGE. ] (SRS\_BSW\_00323)

[SWS\_BswM\_00229] [

If the BswMDevErrorDetect switch is enabled, the parameter CurrentStatus shall be checked for being in the allowed range. In case of an error, the BswM shall ignore the mode request and report the error to the Default Error Tracer with the value BSWM\_E\_REQ\_MODE\_OUT\_OF\_RANGE. ] (SRS\_BSW\_00323)

### 8.3.13 BswM\_EthIf\_PortGroupLinkStateChg

[SWS\_BswM\_91001] [

<b>Service name:</b>	BswM_EthIf_PortGroupLinkStateChg	
<b>Syntax:</b>	<pre>void BswM_EthIf_PortGroupLinkStateChg(     EthIf_SwitchPortGroupIdxType PortGroupIdx,     EthTrcv_LinkStateType PortGroupState )</pre>	
<b>Service ID[hex]:</b>	0x26	
<b>Sync/Async:</b>	Synchronous	
<b>Reentrancy:</b>	Reentrant	
<b>Parameters (in):</b>	PortGroupIdx	The port group index in the context of the Ethernet Interface
	PortGroupState	The state of the port group. State is derived from the physical link of the Ethernet Transceiver: ETHTRCV_LINK_STATE_DOWN == Port group has link down. ETHTRCV_LINK_STATE_ACTIVE == Port group has link up.
<b>Parameters (inout):</b>	None	
<b>Parameters (out):</b>	None	
<b>Return value:</b>	None	
<b>Description:</b>	Function called by EthIf to indicate the link state change of a certain Ethernet switch port group.	

] (SRS\_ModeMgm\_09228)

The corresponding configuration container for this API is BswMEthIfPortGroupLinkStateChg.

[SWS\_BswM\_00267] [

If the BswMDevErrorDetect switch is enabled, the BswM\_EthIf\_PortGroupLinkStateChg routine shall check if the BSW Mode Manager is initialized. In case the BswM is not initialized, the BswM shall ignore the mode request and report to the Default Error Tracer with the error code BSWM\_E\_NO\_INIT.] (SRS\_BSW\_00406)

[SWS\_BswM\_00268] [

If the BswMDevErrorDetect switch is enabled, the BswM\_EthIf\_PortGroupLinkStateChg parameters shall be checked for being in the allowed range. In case of an error, the BswM shall ignore the mode request and report to the Default Error Tracer with the value BSWM\_E\_REQ\_MODE\_OUT\_OF\_RANGE.] (SRS\_BSW\_00323)

### 8.3.14 BswM\_EthSM\_CurrentState

[SWS\_BswM\_00050] [

<b>Service name:</b>	BswM_EthSM_CurrentState	
<b>Syntax:</b>	<pre>void BswM_EthSM_CurrentState(     NetworkHandleType Network,     EthSM_NetworkModeStateType CurrentState )</pre>	
<b>Service ID[hex]:</b>	0x0d	
<b>Sync/Async:</b>	Synchronous	
<b>Reentrancy:</b>	Reentrant	
<b>Parameters (in):</b>	Network	The Ethernet channel that the indicated state corresponds to.
	CurrentState	The current state of the Ethernet channel.
<b>Parameters (inout):</b>	None	
<b>Parameters (out):</b>	None	
<b>Return value:</b>	None	
<b>Description:</b>	Function called by EthSM to indicate its current state.	

] (SRS\_ModeMgm\_09228)

The corresponding configuration container for this API is BswMEthSMIndication.

[SWS\_BswM\_00081] [

If the BswMDevErrorDetect switch is enabled, the routine shall check if the BSW Mode Manager is initialized. In case of an error, the BswM shall ignore the state indication and report the error to the Default Error Tracer with the error code BSWM\_E\_NO\_INIT.] (SRS\_BSW\_00406)

[SWS\_BswM\_00097] [

If the BswMDevErrorDetect switch is enabled, the parameter CurrentState shall be checked for being in the allowed range. In case of an error, the BswM shall ignore the state indication and report the error to the Default Error Tracer with the value BSWM\_E\_REQ\_MODE\_OUT\_OF\_RANGE.] (SRS\_BSW\_00323)

### 8.3.15 BswM\_FrSM\_CurrentState

#### [SWS\_BswM\_00051] [

<b>Service name:</b>	BswM_FrSM_CurrentState	
<b>Syntax:</b>	<pre>void BswM_FrSM_CurrentState(     NetworkHandleType Network,     FrSM_BswM_StateType CurrentState )</pre>	
<b>Service ID[hex]:</b>	0x0c	
<b>Sync/Async:</b>	Synchronous	
<b>Reentrancy:</b>	Reentrant	
<b>Parameters (in):</b>	Network	The FlexRay cluster that the indicated state corresponds to.
	CurrentState	The current state of the FlexRay cluster.
<b>Parameters (inout):</b>	None	
<b>Parameters (out):</b>	None	
<b>Return value:</b>	None	
<b>Description:</b>	Function called by FrSM to indicate its current state.	

] (SRS\_ModeMgm\_09228)

The corresponding configuration container for this API is BswMFrSMIndication.

#### [SWS\_BswM\_00082] [

If the BswMDevErrorDetect switch is enabled, the routine shall check if the BSW Mode Manager is initialized. In case of an error, the BswM shall ignore the state indication and report the error to the Default Error Tracer with the error code BSWM\_E\_NO\_INIT.] (SRS\_BSW\_00406)

#### [SWS\_BswM\_00099] [

If the BswMDevErrorDetect switch is enabled, the parameter CurrentState shall be checked for being in the allowed range. In case of an error, the BswM shall ignore the state indication and report the error to the Default Error Tracer with the value BSWM\_E\_REQ\_MODE\_OUT\_OF\_RANGE.] (SRS\_BSW\_00323)

### 8.3.16 BswM\_GetVersionInfo

#### [SWS\_BswM\_00003] [

<b>Service name:</b>	BswM_GetVersionInfo	
<b>Syntax:</b>	<pre>void BswM_GetVersionInfo(     Std_VersionInfoType* VersionInfo )</pre>	
<b>Service ID[hex]:</b>	0x01	
<b>Sync/Async:</b>	Synchronous	
<b>Reentrancy:</b>	Reentrant	
<b>Parameters (in):</b>	None	
<b>Parameters (inout):</b>	None	
<b>Parameters (out):</b>	VersionInfo	Pointer to where to store the version information of the module.
<b>Return value:</b>	None	
<b>Description:</b>	Returns the version information of this module.	

] (SRS\_BSW\_00407, SRS\_BSW\_00003)

### 8.3.17 BswM\_Init

#### [SWS\_BswM\_00002] [

<b>Service name:</b>	BswM_Init
<b>Syntax:</b>	void BswM_Init( const BswM_ConfigType * ConfigPtr )
<b>Service ID[hex]:</b>	0x00
<b>Sync/Async:</b>	Synchronous
<b>Reentrancy:</b>	Conditionally Reentrant
<b>Parameters (in):</b>	ConfigPtr   Pointer to post-build configuration data
<b>Parameters (inout):</b>	None
<b>Parameters (out):</b>	None
<b>Return value:</b>	None
<b>Description:</b>	Initializes the BSW Mode Manager.

] (SRS\_BSW\_00344, SRS\_BSW\_00404, SRS\_BSW\_00405, SRS\_BSW\_00101, SRS\_BSW\_00358, SRS\_BSW\_00414)

The Reentrancy for the BswM\_Init() API is set to "Conditionally reentrant" for support of implementations where the BswM is instantiated in multiple partitions (e.g. in single core systems using multiple BSW partitions OR in multi-core systems).

[SWS\_BswM\_00043] [ This routine initializes the BSW Mode Manager. After execution of this routine the BSW Mode Manager is ready to arbitrate incoming mode requests. ] (SRS\_BSW\_00101)

[SWS\_BswM\_00044] [ This routine shall initialize all module global variables of the BSW Mode Manager.] (SRS\_BSW\_00101)

[SWS\_BswM\_00118] [ BswM\_Init shall only require the OS and the SchM to be initialized before it can be called.] (SRS\_BSW\_00467)

[SWS\_BswM\_00045] [ If the BswMDevErrorDetect switch is enabled, the contents of the given configuration set shall be checked for being within the allowed boundaries. If an error is detected the initialization of the BSW Mode Manager shall not be executed and the error shall be reported to the Default Error Tracer with the value BSWM\_E\_PARAM\_CONFIG.] (SRS\_BSW\_00323)

### 8.3.18 BswM\_J1939DcmBroadcastStatus

#### [SWS\_BswM\_00165] [

<b>Service name:</b>	BswM_J1939DcmBroadcastStatus
<b>Syntax:</b>	void BswM_J1939DcmBroadcastStatus( uint16 NetworkMask )
<b>Service ID[hex]:</b>	0x1b
<b>Sync/Async:</b>	Synchronous
<b>Reentrancy:</b>	Reentrant
<b>Parameters (in):</b>	NetworkMask   Mask containing one bit for each available network. The bit position

		within this mask corresponds to the ComMChannel.ComMChannelId for the communication channel (so ComMChannelID 0 is represented by bit 0). The meaning for each bit is: 1: Network enabled, 0: Network disabled. Note: only the first 16 communication channel IDs can be supported by this API.
<b>Parameters (inout):</b>	None	
<b>Parameters (out):</b>	None	
<b>Return value:</b>	None	
<b>Description:</b>	This API tells the BswM the desired communication status of the available networks. The status will typically be activated via COM I-PDU group switches.	

] (SRS\_ModeMgm\_09228)

The corresponding configuration container for this API is BswMJ1939DcmBroadcastStatus.

[SWS\_BswM\_00249] [

The BswM\_J1939DcmBroadcastStatus parameter NetworkMask is a bitmask where the bit position corresponds to the ComMChannel.ComMChannelId which is referenced by the BswMJ1939DcmBroadcastStatus.BswMJ1939DcmChannelRef parameter. For rule processing, the BswM shall use the value in NetworkMask of the bit (0 or 1) which lies in the position configured by the referenced ComMChannel.ComMChannelId.] (SRS\_ModeMgm\_09228)

### 8.3.19 BswM\_J1939Nm\_StateChangeNotification

[SWS\_BswM\_00194] [

<b>Service name:</b>	BswM_J1939Nm_StateChangeNotification	
<b>Syntax:</b>	<pre>void BswM_J1939Nm_StateChangeNotification(     NetworkHandleType Network,     uint8 Node,     Nm_StateType NmState )</pre>	
<b>Service ID[hex]:</b>	0x18	
<b>Sync/Async:</b>	Synchronous	
<b>Reentrancy:</b>	Reentrant	
<b>Parameters (in):</b>	Network	Identification of the J1939 channel
	Node	Identification of the J1939 node
	NmState	Current (new) state of the J1939 node
<b>Parameters (inout):</b>	None	
<b>Parameters (out):</b>	None	
<b>Return value:</b>	None	
<b>Description:</b>	Notification of current J1939Nm state after state changes.	

] (SRS\_ModeMgm\_09228)

The corresponding configuration container for this API is BswMJ1939NmIndication.

### 8.3.20 BswM\_LinSM\_CurrentSchedule

[SWS\_BswM\_00058] [



<b>Service name:</b>	BswM_LinSM_CurrentSchedule	
<b>Syntax:</b>	<pre>void BswM_LinSM_CurrentSchedule(     NetworkHandleType Network,     LinIf_SchHandleType CurrentSchedule )</pre>	
<b>Service ID[hex]:</b>	0x0a	
<b>Sync/Async:</b>	Synchronous	
<b>Reentrancy:</b>	Reentrant	
<b>Parameters (in):</b>	Network	The LIN channel that the schedule table switch have occurred on.
	CurrentSchedule	The currently active schedule table of the LIN channel.
<b>Parameters (inout):</b>	None	
<b>Parameters (out):</b>	None	
<b>Return value:</b>	None	
<b>Description:</b>	Function called by LinSM to indicate the currently active schedule table for a specific LIN channel.	

] (SRS\_ModeMgm\_09228)

The corresponding configuration container for this API is BswMLinScheduleIndication.

[SWS\_BswM\_00086] [

If the BswMDevErrorDetect switch is enabled, the routine shall check if the BSW Mode Manager is initialized. In case of an error the BswM shall ignore the schedule indication and report the error to the Default Error Tracer with the error code BSWM\_E\_NO\_INIT.] (SRS\_BSW\_00406)

### 8.3.21 BswM\_LinSM\_CurrentState

[SWS\_BswM\_00052] [

<b>Service name:</b>	BswM_LinSM_CurrentState	
<b>Syntax:</b>	<pre>void BswM_LinSM_CurrentState(     NetworkHandleType Network,     LinSM_ModeType CurrentState )</pre>	
<b>Service ID[hex]:</b>	0x09	
<b>Sync/Async:</b>	Synchronous	
<b>Reentrancy:</b>	Reentrant	
<b>Parameters (in):</b>	Network	The LIN channel that the indicated state corresponds to.
	CurrentState	The current state of the LIN channel.
<b>Parameters (inout):</b>	None	
<b>Parameters (out):</b>	None	
<b>Return value:</b>	None	
<b>Description:</b>	Function called by LinSM to indicate its current state.	

] (SRS\_ModeMgm\_09228)

The corresponding configuration container for this API is BswMLinSMIndication.

[SWS\_BswM\_00083] [



If the BswMDevErrorDetect switch is enabled, the routine shall check if the BSW Mode Manager is initialized. In case of an error, the BswM shall ignore the state indication and report the error to the Default Error Tracer with the error code BSWM\_E\_NO\_INIT.] (SRS\_BSW\_00406)

[SWS\_BswM\_00101] [

If the BswMDevErrorDetect switch is enabled, the parameter CurrentState shall be checked for being in the allowed range. In case of an error, the BswM shall ignore the state indication and report the error to the Default Error Tracer with the value BSWM\_E\_REQ\_MODE\_OUT\_OF\_RANGE.] (SRS\_BSW\_00323)

### 8.3.22 BswM\_LinTp\_RequestMode

[SWS\_BswM\_00156] [

<b>Service name:</b>	BswM_LinTp_RequestMode	
<b>Syntax:</b>	<pre>void BswM_LinTp_RequestMode(     NetworkHandleType Network,     LinTp_Mode LinTpRequestedMode )</pre>	
<b>Service ID[hex]:</b>	0x0b	
<b>Sync/Async:</b>	Synchronous	
<b>Reentrancy:</b>	Reentrant	
<b>Parameters (in):</b>	Network	The LIN channel that the LinTp mode request relates to.
	LinTpRequestedMode	The requested LIN TP mode.
<b>Parameters (inout):</b>	None	
<b>Parameters (out):</b>	None	
<b>Return value:</b>	None	
<b>Description:</b>	Function called by LinTP to request a mode for the corresponding LIN channel. The LinTp_Mode correlates to the LIN schedule table that should be used.	

] (SRS\_ModeMgm\_09228)

The corresponding configuration container for this API is BswMLinTpModeRequest.

[SWS\_BswM\_00112] [

If the BswMDevErrorDetect switch is enabled, the routine shall check if the BSW Mode Manager is initialized. In case of an error, the BswM shall ignore the mode request and report the error to the Default Error Tracer with the error code BSWM\_E\_NO\_INIT.] (SRS\_BSW\_00406)

[SWS\_BswM\_00113] [

If the BswMDevErrorDetect switch is enabled, the parameter LinTpRequestedMode shall be checked for being in the allowed range. In case of an error the BswM shall ignore the mode request and report the error, to the Default Error Tracer with the value BSWM\_E\_REQ\_MODE\_OUT\_OF\_RANGE.] (SRS\_BSW\_00323)

### 8.3.23 BswM\_Nmlf\_CarWakeUpIndication

#### [SWS\_BswM\_00235] [

<b>Service name:</b>	BswM_Nmlf_CarWakeUpIndication
<b>Syntax:</b>	void BswM_Nmlf_CarWakeUpIndication( NetworkHandleType Network )
<b>Service ID[hex]:</b>	0x24
<b>Sync/Async:</b>	Synchronous
<b>Reentrancy:</b>	Non Reentrant
<b>Parameters (in):</b>	Network      Identification of the Nm-Channel
<b>Parameters (inout):</b>	None
<b>Parameters (out):</b>	None
<b>Return value:</b>	None
<b>Description:</b>	Function called by Nmlf to indicate a CarWakeUp.

] (SRS\_ModeMgm\_09228)

The corresponding configuration container for this API is BswMNmlfCarWakeUpIndication.

### 8.3.24 BswM\_NvM\_CurrentBlockMode

#### [SWS\_BswM\_00104] [

<b>Service name:</b>	BswM_NvM_CurrentBlockMode
<b>Syntax:</b>	void BswM_NvM_CurrentBlockMode( NvM_BlockIdType Block, NvM_RequestResultType CurrentBlockMode )
<b>Service ID[hex]:</b>	0x16
<b>Sync/Async:</b>	Synchronous
<b>Reentrancy:</b>	Reentrant
<b>Parameters (in):</b>	Block      The Block that the new NvM Mode corresponds to. CurrentBlockMode      The current block mode of the NvM block.
<b>Parameters (inout):</b>	None
<b>Parameters (out):</b>	None
<b>Return value:</b>	None
<b>Description:</b>	Function called by NvM to indicate the current block mode of an NvM block.

] (SRS\_ModeMgm\_09228)

The corresponding configuration container for this API is BswMNvMRequest.

#### [SWS\_BswM\_00109] [

If the BswMDevErrorDetect switch is enabled, the routine shall check if the BSW Mode Manager is initialized. In case of an error, the BswM shall ignore the block mode indication and report the error to the Default Error Tracer with the error code BSWM\_E\_NO\_INIT.] (SRS\_BSW\_00406)

#### [SWS\_BswM\_00110] [

If the BswMDevErrorDetect switch is enabled, the parameter CurrentBlockMode shall be checked for being in the allowed range. In case of an error, the BswM shall ignore

the block mode indication and report the error to the Default Error Tracer with the value BSWM\_E\_REQ\_MODE\_OUT\_OF\_RANGE.] (SRS\_BSW\_00323)

### 8.3.25 BswM\_NvM\_CurrentJobMode

[SWS\_BswM\_00152] [

<b>Service name:</b>	BswM_NvM_CurrentJobMode	
<b>Syntax:</b>	<pre>void BswM_NvM_CurrentJobMode(     uint8 ServiceId,     NvM_RequestResultType CurrentJobMode )</pre>	
<b>Service ID[hex]:</b>	0x17	
<b>Sync/Async:</b>	Synchronous	
<b>Reentrancy:</b>	Reentrant	
<b>Parameters (in):</b>	ServiceId	Indicates which multi block service this callback refers to. The value passed here corresponds to the "Service ID" of the multi block service (e.g. the Service ID of the NvM_WriteAll() API as specified in the SWS NvM).
	CurrentJobMode	Current state of the multi block job indicated by parameter ServiceId.
<b>Parameters (inout):</b>	None	
<b>Parameters (out):</b>	None	
<b>Return value:</b>	None	
<b>Description:</b>	Function called by NvM to inform the BswM about the current state of a multi block job.	

] (SRS\_ModeMgm\_09228)

The corresponding configuration container for this API is BswMNvMJobModeIndication.

[SWS\_BswM\_00153] [

If the BswMDevErrorDetect switch is enabled, the routine shall check if the BSW Mode Manager is initialized. In case of an error, the BswM shall ignore the job mode indication and report the error to the Default Error Tracer with the error code BSWM\_E\_NO\_INIT.] (SRS\_BSW\_00406)

[SWS\_BswM\_00154] [

If the BswMDevErrorDetect switch is enabled, the parameter ServiceId shall be checked for being in the allowed range. In case of an error, the BswM shall ignore the job mode indication and report the error to the Default Error Tracer with the value BSWM\_E\_REQ\_MODE\_OUT\_OF\_RANGE.] (SRS\_BSW\_00323)

### 8.3.26 BswM\_RequestMode

[SWS\_BswM\_00046] [

<b>Service name:</b>	BswM_RequestMode	
<b>Syntax:</b>	<pre>void BswM_RequestMode(     BswM_UserType requesting_user,     BswM_ModeType requested_mode )</pre>	

	)	
<b>Service ID[hex]:</b>	0x02	
<b>Sync/Async:</b>	Synchronous	
<b>Reentrancy:</b>	Reentrant	
<b>Parameters (in):</b>	requesting_user	The user that requests the mode
	requested_mode	The requested mode.
<b>Parameters (inout):</b>	None	
<b>Parameters (out):</b>	None	
<b>Return value:</b>	None	
<b>Description:</b>	Generic function call to request modes. This function shall only be used by other BSW modules that does not have a specific mode request interface.	

] (SRS\_ModeMgm\_09179, SRS\_ModeMgm\_09228)

The corresponding configuration container for this API is BswMGenericRequest.

[SWS\_BswM\_00077] [

If the BswMDevErrorDetect switch is enabled, the routine shall check if the BSW Mode Manager is initialized. In case of an error, the BswM shall ignore the mode request and report the error to the Default Error Tracer with the error code BSWM\_E\_NO\_INIT.] (SRS\_BSW\_00406)

[SWS\_BswM\_00089] [

If the BswMDevErrorDetect switch is enabled, the parameter requested\_mode shall be checked for being in the allowed range. In case of an error, the BswM shall ignore the mode request and report the error to the Default Error Tracer with the value BSWM\_E\_REQ\_MODE\_OUT\_OF\_RANGE.] (SRS\_BSW\_00323)

[SWS\_BswM\_00090] [

If the BswMDevErrorDetect switch is enabled, the parameter requesting\_user shall be checked for being in the allowed range. In case of an error, the BswM shall ignore the mode request and report the error to the Default Error Tracer with the value BSWM\_E\_REQ\_USER\_OUT\_OF\_RANGE.] (SRS\_BSW\_00323)

### 8.3.27 BswM\_Sd\_ClientServiceCurrentState

[SWS\_BswM\_00204] [

<b>Service name:</b>	BswM_Sd_ClientServiceCurrentState	
<b>Syntax:</b>	<pre>void BswM_Sd_ClientServiceCurrentState(     uint16 SdClientServiceHandleId,     Sd_ClientServiceCurrentStateType CurrentClientState )</pre>	
<b>Service ID[hex]:</b>	0x1f	
<b>Sync/Async:</b>	Synchronous	
<b>Reentrancy:</b>	Reentrant	
<b>Parameters (in):</b>	SdClientServiceHandleId	HandleId to identify the ClientService
	CurrentClientState	Current state of the ClientService
<b>Parameters (inout):</b>	None	
<b>Parameters (out):</b>	None	
<b>Return value:</b>	None	

<b>Description:</b>	Function called by Service Discovery to indicate current state of the Client Service (available/down).
---------------------	--

] (SRS\_ModeMgm\_09228)

The corresponding configuration container for this API is BswMSdClientServiceCurrentState.

[SWS\_BswM\_00205] [

If the BswMDevErrorDetect switch is enabled, the routine shall check if the BSW Mode Manager is initialized. In case of an error, the BswM shall ignore the mode request and report the error to the Default Error Tracer with the error code BSWM\_E\_NO\_INIT.] (SRS\_BSW\_00406)

[SWS\_BswM\_00206] [

If the BswMDevErrorDetect switch is enabled, the parameter CurrentClientState shall be checked for being in the allowed range. In case of an error the BswM shall ignore the mode request and report the error, to the Default Error Tracer with the value BSWM\_E\_REQ\_MODE\_OUT\_OF\_RANGE.] (SRS\_BSW\_00323)

### 8.3.28 BswM\_Sd\_ConsumedEventGroupCurrentState

[SWS\_BswM\_00207] [

<b>Service name:</b>	BswM_Sd_ConsumedEventGroupCurrentState	
<b>Syntax:</b>	<pre>void BswM_Sd_ConsumedEventGroupCurrentState(     uint16 SdConsumedEventGroupHandleId,     Sd_ConsumedEventGroupCurrentStateType     ConsumedEventGroupState )</pre>	
<b>Service ID[hex]:</b>	0x21	
<b>Sync/Async:</b>	Synchronous	
<b>Reentrancy:</b>	Reentrant	
<b>Parameters (in):</b>	SdConsumedEventGroupHandleId	HandleId to identify the Consumed Eventgroup
	ConsumedEventGroupState	Status of the Consumed Eventgroup
<b>Parameters (inout):</b>	None	
<b>Parameters (out):</b>	None	
<b>Return value:</b>	None	
<b>Description:</b>	Function called by Service Discovery to indicate current status of the Consumed Eventgroup (available/down).	

] (SRS\_ModeMgm\_09228)

The corresponding configuration container for this API is BswMSdConsumedEventGroupCurrentState.

[SWS\_BswM\_00208] [

If the BswMDevErrorDetect switch is enabled, the routine shall check if the BSW Mode Manager is initialized. In case of an error, the BswM shall ignore the mode request and report the error to the Default Error Tracer with the error code BSWM\_E\_NO\_INIT.] (SRS\_BSW\_00406)

[SWS\_BswM\_00209] [

If the BswMDevErrorDetect switch is enabled, the parameter ConsumedEventGroupState shall be checked for being in the allowed range. In case of an error the BswM shall ignore the mode request and report the error, to the Default Error Tracer with the value BSWM\_E\_REQ\_MODE\_OUT\_OF\_RANGE.] (SRS\_BSW\_00323)

### 8.3.29 BswM\_Sd\_EventHandlerCurrentState

[SWS\_BswM\_00210] [

<b>Service name:</b>	BswM_Sd_EventHandlerCurrentState	
<b>Syntax:</b>	<pre>void BswM_Sd_EventHandlerCurrentState(     uint16 SdEventHandlerHandleId,     Sd_EventHandlerCurrentStateType EventHandlerStatus )</pre>	
<b>Service ID[hex]:</b>	0x20	
<b>Sync/Async:</b>	Synchronous	
<b>Reentrancy:</b>	Reentrant	
<b>Parameters (in):</b>	SdEventHandlerHandleId	HandleId to identify the EventHandler
	EventHandlerStatus	Status of the EventHandler
<b>Parameters (inout):</b>	None	
<b>Parameters (out):</b>	None	
<b>Return value:</b>	None	
<b>Description:</b>	Function called by Service Discovery to indicate current status of the EventHandler (requested/released).	

] (SRS\_ModeMgm\_09228)

The corresponding configuration container for this API is BswMSdEventHandlerCurrentState.

[SWS\_BswM\_00211] [

If the BswMDevErrorDetect switch is enabled, the routine shall check if the BSW Mode Manager is initialized. In case of an error, the BswM shall ignore the mode request and report the error to the Default Error Tracer with the error code BSWM\_E\_NO\_INIT.] (SRS\_BSW\_00406)

[SWS\_BswM\_00212] [

If the BswMDevErrorDetect switch is enabled, the parameter EventHandlerStatus shall be checked for being in the allowed range. In case of an error the BswM shall ignore the mode request and report the error, to the Default Error Tracer with the value BSWM\_E\_REQ\_MODE\_OUT\_OF\_RANGE.] (SRS\_BSW\_00323)

### 8.3.30 BswM\_WdgM\_RequestPartitionReset

[SWS\_BswM\_00157] [

<b>Service name:</b>	BswM_WdgM_RequestPartitionReset	
<b>Syntax:</b>	<pre>void BswM_WdgM_RequestPartitionReset(     ApplicationType Application )</pre>	

<b>Service ID[hex]:</b>	0x11
<b>Sync/Async:</b>	Synchronous
<b>Reentrancy:</b>	Reentrant
<b>Parameters (in):</b>	Application      The identifier of an OS-Application
<b>Parameters (inout):</b>	None
<b>Parameters (out):</b>	None
<b>Return value:</b>	None
<b>Description:</b>	Function called by WdgM to request a partition reset.

] (SRS\_ModeMgm\_09228)

The corresponding configuration container for this API is BswMWdgMRequestPartitionReset.

[SWS\_BswM\_00134] [

If the BswMDevErrorDetect switch is enabled, the routine shall check if the BSW Mode Manager is initialized. In case of an error, the BswM shall ignore the mode request and report the error to the Default Error Tracer with the error code BSWM\_E\_NO\_INIT.] (SRS\_BSW\_00406)

## 8.4 Call-back notifications

There are no call-back notifications in the BswM.

## 8.5 Scheduled functions

These functions are directly called by Basic Software Scheduler. The following functions shall have no return value and no parameter. All functions shall be non-reentrant.

### 8.5.1 BswM\_MainFunction

[SWS\_BswM\_00053] [

<b>Service name:</b>	BswM_MainFunction
<b>Syntax:</b>	void BswM_MainFunction( void )
<b>Service ID[hex]:</b>	0x03
<b>Description:</b>	Main function of the BswM

] (SRS\_BSW\_00425)

[SWS\_BswM\_00075] [

The BswM\_MainFunction shall perform evaluation of all rules that uses at least one mode request with configuration parameter BswMRequestProcessing set to BSWM\_DEFERRED as input.] (SRS\_ModeMgm\_09180)

[SWS\_BswM\_00076] [



If the BswMDevErrorDetect switch is enabled, the routine shall check if the BSW Mode Manager is initialized. If the BswM-mainfunction is uninitialized called from the BSW Scheduler, then it shall return immediately without performing any action and without reporting an error.] (SRS\_BSW\_00406, SRS\_BSW\_00450)

## 8.6 Expected Interfaces

In this chapter all external interfaces required from other modules are listed.

### 8.6.1 Mandatory Interfaces

This chapter defines all interfaces that are required to fulfill the core functionality of the module.

[SWS\_BswM\_00007] [

API function	Description
--------------	-------------

] (SRS\_BSW\_00384)

### 8.6.2 Optional Interfaces

According to SWS\_BswM\_00039, the BswM can call any function in the AUTOSAR BSW. The following table contains a list of specific functions which may be useful in implementing BswM functionality.

[SWS\_BswM\_00008] [

API function	Description
Com_ClearIpduGroupVector	This service sets all bits of the given Com_IpduGroupVector to 0.
Com_IpduGroupControl	This service starts I-PDU groups.
Com_ReceptionDMControl	This service enables or disables I-PDU group Deadline Monitoring.
Com_SetIpduGroup	This service sets the value of a bit in an I-PDU group vector.
Com_SwitchIpduTxMode	The service Com_SwitchIpduTxMode sets the transmission mode of the I-PDU referenced by PduId to Mode. In case the transmission mode changes, the new mode shall immediately be effective (see SWS_Com_00239). In case the requested transmission mode was already active for this I-PDU, the call will have no effect.
ComM_GetCurrentComMode	Function to query the current Communication Mode. ComM shall use the corresponding interfaces of the Bus State Managers to get the current Communication Mode of the network. (Call to Bus State Manager API: XXXSM_GetCurrentComMode(...))
ComM_GetInhibitionStatus	Returns the inhibition status of a ComM channel.
ComM_GetMaxComMode	Function to query the maximum allowed Communication Mode of the corresponding user.
ComM_GetRequestedComMode	Function to query the currently requested Communication Mode of the corresponding user.
ComM_GetStatus	Returns the initialization status of the AUTOSAR Communication Manager. After a call to ComM_DeInit() ComM should have status



	COMM_UNINIT, and a new call to ComM_Init needed to make sure ComM restart internal state machines to default values.
ComM_GetVersionInfo	This function returns the published information (for details refer to table 10.3)
ComM_LimitChannelToNoComMode	Changes the inhibition status for the channel for changing from COMM_NO_COMMUNICATION to a higher Communication Mode. (See also ComM_LimitECUToNoComMode, same functionality but for all channels)
ComM_LimitECUToNoComMode	Changes the inhibition status for the ECU (=all channels) for changing from COMM_NO_COMMUNICATION to a higher Communication Mode. (See also ComM_LimitChannelToNoComMode, same functionality but for a specific channels)
ComM_PreventWakeUp	Changes the inhibition status COMM_NO_WAKEUP for the corresponding channel.
ComM_ReadInhibitCounter	This function returns the amount of rejected COMM_FULL_COMMUNICATION user requests.
ComM_RequestComMode	Requesting of a Communication Mode by a user.  Note: Internally mode COMM_SILENT_COMMUNICATION is not a valid request for a user, mode used for synchronization at shutdown. Valid modes are COMM_NO_COMMUNICATION and COMM_FULL_COMMUNICATION
ComM_ResetInhibitCounter	This function resets the Inhibited COMM_FULL_COMMUNICATION request Counter.
ComM_SetECUGroupClassification	Changes the ECU Group Classification status (see chapter 10.2.2)
ControllIdle	This API allows the caller to select the idle mode action which is performed during idle time of the OS (e.g. if no Task/ISR is active). It can be used to implement energy savings. The real idle modes are hardware dependent and not standardized. The default idle mode on each core is IDLE_NO_HALT.
Det_ReportError	Service to report development errors.
EcuM_AL_DriverInitBswM_<x>	This callback shall provide BSW module initializations to be called by the BSW Mode Manager.
EcuM_GoDown	Instructs the ECU State Manager module to perform a power off or a reset depending on the selected shutdown target.
EcuM_GoHalt	Instructs the ECU State Manager module to go into a sleep mode where the microcontroller is halted, depending on the selected shutdown target.
EcuM_GoPoll	Instructs the ECU State Manager module to go into a polling sleep mode depending on the selected shutdown target.
EcuM_SelectShutdownTarget	EcuM_SelectShutdownTarget selects the shutdown target. EcuM_SelectShutdownTarget is part of the ECU Manager Module port interface.
EcuM_SetState	Function called by BswM to notify about State Switch.
FrSM_AllSlots	This API function can be used to leave the KeySlotOnlyMode.
FrSM_SetEcuPassive	This API function can be used to set all FlexRay clusters of the ECU to a receive only mode.
J1939Dcm_SetState	Changes the communication state of J1939Dcm to offline or online.
J1939Rm_SetState	Changes the communication state of J1939Rm to offline (only Request for AC supported) or online.
LinSM_ScheduleRequest	The upper layer requests a schedule table to be changed on one

	LIN network.
Nm_DisableCommunication	Disables the NM PDU transmission ability. For that purpose <BusNm>_DisableCommunication shall be called (e.g. CanNm_DisableCommunication function is called if channel is configured as CAN).
Nm_EnableCommunication	Enables the NM PDU transmission ability. For that purpose <BusNm>_EnableCommunication shall be called (e.g. CanNm_EnableCommunication function is called if channel is configured as CAN).

] (SRS\_BSW\_00384)

## 8.7 Service Interfaces

### 8.7.1 Scope of this Chapter

This chapter defines the AUTOSAR Interfaces of the Basic Software Mode Manager Service (BswM). The definitions in this section are interpreted to be in ARPackage AUTOSAR/Services/BswM.

### 8.7.2 Ports

#### 8.7.2.1 BswM\_modeNotificationPort

[SWS\_BswM\_00200] [

Name	modeNotificationPort_{ArbName}_{ModeName}
Kind	RequiredPort
Interface-Ref	{ecuc(BswM/BswMConfig/BswMArbitration/BswMModeRequestPort/BswMModeRequestSource/BswMSwcModeNotification.BswMSwcModeNotificationModeDeclarationGroupPrototypeRef)}.parent
Description	--
Variation	ArbName = {ecuc(BswM/BswMConfig/BswMArbitration.SHORT-NAME)} ModeName = {ecuc(BswM/BswMConfig/BswMArbitration/BswMModeRequestPort/BswMModeRequestSource/BswMSwcModeNotification.SHORT-NAME)}

] (SRS\_ModeMgm\_09180)

[SWS\_BswM\_00266] [

If the BswMDevErrorDetect switch is enabled, BswM\_modeNotificationPort shall check if the BSW Mode Manager is initialized. In case of an error, the BswM shall ignore the notification and report the error to the Default Error Tracer with the error code BSWM\_E\_NO\_INIT] (SRS\_BSW\_00406)

#### 8.7.2.2 BswM\_modeRequestPort

[SWS\_BswM\_00201] [

Name	modeRequestPort_{ArbName}_{ReqName}
------	-------------------------------------

Kind	RequiredPort
Interface-Ref	{ecuc(BswM/BswMConfig/BswMArbitration/BswMModeRequestPort. BswMModeRequestSource.BswMSwcModeRequest. BswMSwcModeRequestVariableDataPrototypeRef)}.parent
Description	--
Variation	ArbName = {ecuc(BswM/BswMConfig/BswMArbitration.SHORT-NAME)} ReqName = {ecuc(BswM/BswMConfig/BswMArbitration/BswMModeRequestPort. SHORT-NAME)}

] (SRS\_ModeMgm\_09179)

### 8.7.2.3 BswM\_modeSwitchPort

[SWS\_BswM\_00202] [

Name	modeSwitchPort_{ModConName}_{SwitchName}
Kind	ProvidedPort
Interface-Ref	{ecuc(BswM/BswMConfig/BswMModeControl/BswMSwitchPort. BswMModeSwitchInterfaceRef)}
Description	--
Variation	ModConName = {ecuc(BswM/BswMConfig/BswMModeControl.SHORT-NAME)} SwitchName = {ecuc(BswM/BswMConfig/BswMModeControl/BswMSwitchPort. SHORT-NAME)}

] (SRS\_ModeMgm\_09182)

## 8.8 Callout Definitions

### 8.8.1 <BswMUserCalloutFunction>


[SWS\_BswM\_00270] [

<b>Service name:</b>	<BswMUserCalloutFunction>	
<b>Syntax:</b>	void <BswMUserCalloutFunction>( -- implementation-specific )	
<b>Service ID[hex]:</b>	0x25	
<b>Sync/Async:</b>	configuration dependent	
<b>Reentrancy:</b>	configuration dependent	
<b>Parameters (in):</b>	implementation-specific	--
<b>Parameters (inout):</b>	None	
<b>Parameters (out):</b>	None	
<b>Return value:</b>	None	
<b>Description:</b>	Function called by the BswM when a BswMUserCallout is executed. The function name and all function parameters are defined by the BswMUserCalloutFunction configuration parameter. Any return values are ignored by the BswM.	


] ()

## 9 Sequence diagrams

### 9.1 Deferred operation of BswM

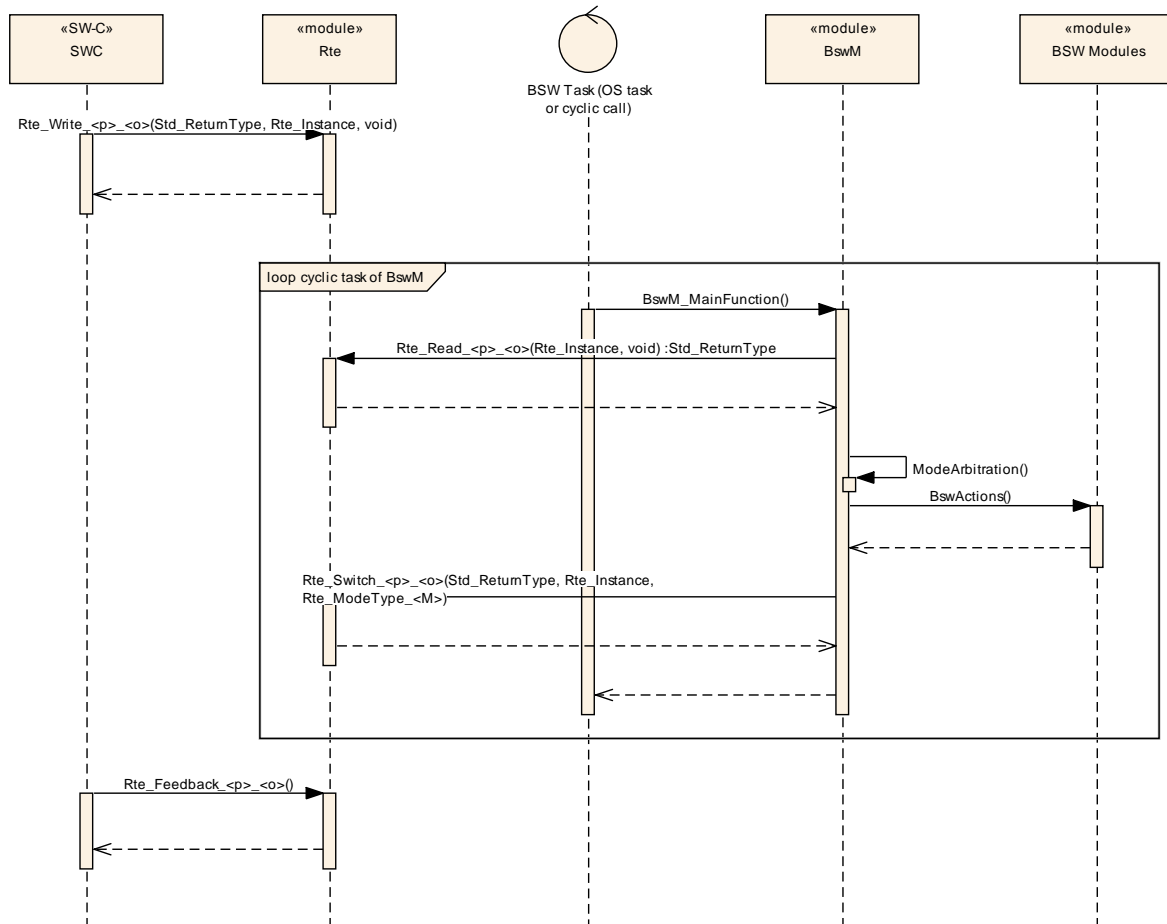

## 9.2 Immediate operation of BswM

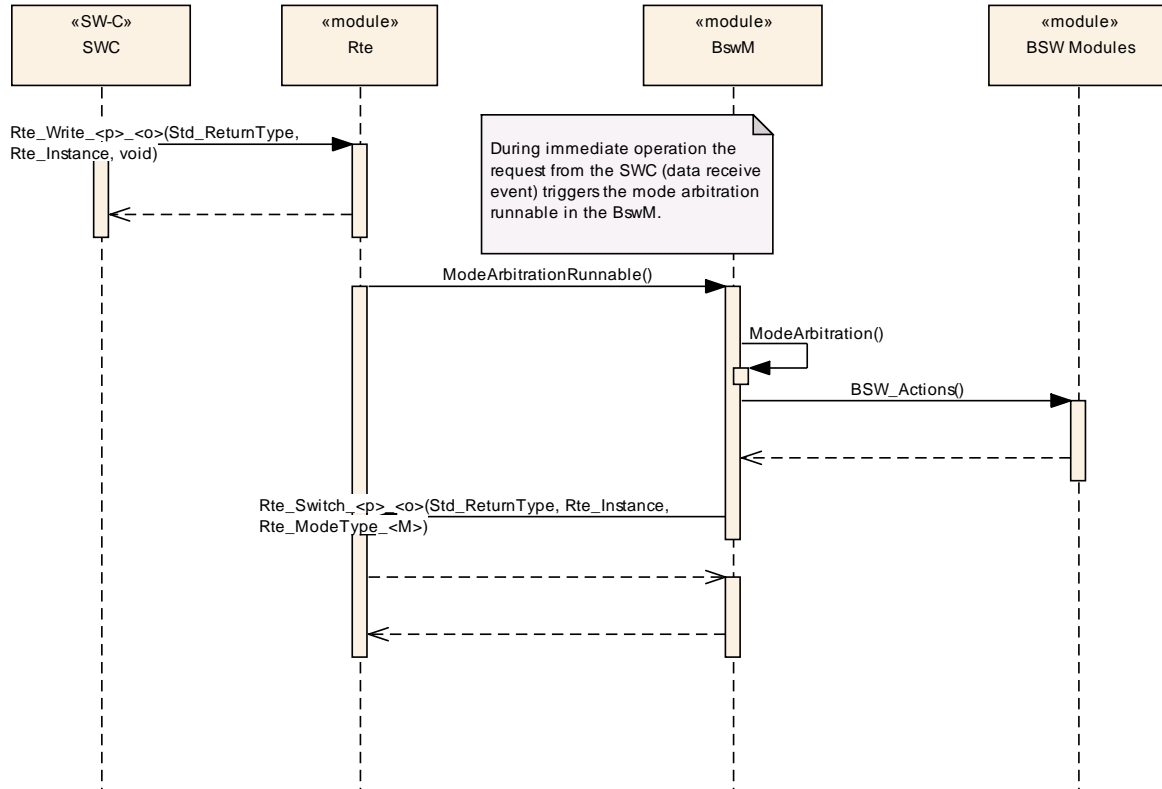

## **10 Configuration specification**

### **10.1 How to read this chapter**

For details, refer to the related chapter in SWS\_BSWGeneral.

## 10.2 Containers and configuration parameters

The following chapters summarize all configuration parameters. More detailed descriptions of the parameters are found in Chapters 7 and Chapter 8.

Note for implementers: For some BswMModeRequestSources and BswMAvailableActions, a naming convention is used to map certain configuration parameter enumeration values with the underlying function parameter value used in the implementation. In this naming convention, the configuration parameter enumeration label is the same as the mapped function parameter enumeration label, but prefixed with "BSWM\_". For example: the BswMEcuMRUNRequestProtocolPort value BSWM\_ECUM\_STATE\_APP\_POST\_RUN corresponds to the value of ECUM\_STATE\_APP\_POST\_RUN for the CurrentStatus parameter of function BswM\_EcuM\_RequestedState().

### 10.2.1 BswM

<b>SWS Item</b>	<b>ECUC_BswM_01063 :</b>
<b>Module Name</b>	BswM
<b>Module Description</b>	Configuration of the BswM (Basic SW Mode Manager) module.
<b>Post-Build Variant Support</b>	true
<b>Supported Config Variants</b>	VARIANT-LINK-TIME, VARIANT-POST-BUILD, VARIANT-PRE-COMPILE

<b>Included Containers</b>		
<b>Container Name</b>	<b>Multiplicity</b>	<b>Scope / Dependency</b>
BswMConfig	1..*	This container contains the configuration parameters and sub containers of the AUTOSAR BswM module. This container exists once per partition.
BswMGeneral	1	General configuration parameters of the Basic SW Mode Manager.

### 10.2.2 BswMConfig

<b>SWS Item</b>	<b>ECUC_BswM_00985 :</b>
<b>Container Name</b>	BswMConfig
<b>Description</b>	This container contains the configuration parameters and sub containers of the AUTOSAR BswM module. This container exists once per partition.
<b>Configuration Parameters</b>	

<b>SWS Item</b>	<b>ECUC_BswM_00984 :</b>
<b>Name</b>	BswMPartitionRef
<b>Description</b>	This references the partition the BswM shall run inside.
<b>Multiplicity</b>	0..1
<b>Type</b>	Reference to [ EcucPartition ]
<b>Post-Build Variant Multiplicity</b>	false
<b>Post-Build Variant Value</b>	false

<b>Multiplicity</b>	<b>Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
		<b>Link time</b>	--	
		<b>Post-build time</b>	--	
<b>Value Configuration Class</b>		<b>Pre-compile time</b>	X	All Variants
		<b>Link time</b>	--	
		<b>Post-build time</b>	--	
<b>Scope / Dependency</b>		scope: local		

<b>Included Containers</b>		
<b>Container Name</b>	<b>Multiplicity</b>	<b>Scope / Dependency</b>
BswMArbitration	1	This container includes all configuration sub-containers and parameters related to the mode arbitration functionality of the BswM.
BswMDataTypeMappingSets	0..1	Collection of references to DataTypeMappingSet.
BswMModeControl	1	This container includes all configuration sub-containers and parameters related to the mode control functionality of the BswM.

### 10.2.3 BswMArbitration

<b>SWS Item</b>	<b>ECUC_BswM_00801 :</b>
<b>Container Name</b>	BswMArbitration
<b>Description</b>	This container includes all configuration sub-containers and parameters related to the mode arbitration functionality of the BswM.
<b>Configuration Parameters</b>	

<b>Included Containers</b>		
<b>Container Name</b>	<b>Multiplicity</b>	<b>Scope / Dependency</b>
BswMEventRequestPort	0..*	Each instance of this container defines an event which can be sent to the BswM. Basic Software Modules may send these events to the BswM by calling the corresponding BswM C-API (for example: BswM_ComM_InitiateReset()).
BswMLogicalExpression	0..*	This container describes the logical expressions that can be used for the mode arbitration. The logical expressions are built of a set of arguments and a logical operator. Each argument can either be a mode condition or a sub-expression to allow definition of more complex logical expressions. There may be an unlimited number of arguments in each logical expression. Note that the order of evaluation of the expressions is not defined.
BswMModeCondition	0..*	This container describes the BswM mode conditions that can be used either by itself to form a rule or as a part of a logical expression.
BswMModeRequestPort	0..*	Each instance of this container defines a mode request interface that is used to requests or indicate modes from/to the BswM. These interfaces are implemented as ports or as ordinary C-functions based upon if the request is made by an SW-C or a BSW module. There are different types of mode requests: 1. Mode requests from the SW-C:s 2. Mode Requests from other BSW modules such as the DCM.



		3. State/mode indications from the RTE or other BSW modules such as the bus specific State Managers.  Note that the BswM treats all request and indications in the exact same way.
BswMRule	0..*	Each instance of this container describes a BswM arbitration rule. The rule either consists of a simple mode condition or a more complex logical expression. This container also references the action lists that shall be invoked when the rule is evaluated to True or False.

#### 10.2.4 BswMLogicalExpression

<b>SWS Item</b>	<b>ECUC_BswM_00808 :</b>		
<b>Container Name</b>	BswMLogicalExpression		
<b>Description</b>	This container describes the logical expressions that can be used for the mode arbitration. The logical expressions are built of a set of arguments and a logical operator. Each argument can either be a mode condition or a sub-expression to allow definition of more complex logical expressions. There may be an unlimited number of arguments in each logical expression. Note that the order of evaluation of the expressions is not defined.		
<b>Post-Build Multiplicity</b>	<b>Variant</b>	false	
<b>Multiplicity Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE, VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Link time</b>	--	
	<b>Post-build time</b>	--	
<b>Configuration Parameters</b>			

<b>SWS Item</b>	<b>ECUC_BswM_00814 :</b>		
<b>Name</b>	BswMLogicalOperator		
<b>Description</b>	This parameter specifies the logical operator to be used in the logical expression. If the logical operator is set to something other than BSWM_NOT, and the expression only consists of a single condition, then this parameter will have no effect.		
<b>Multiplicity</b>	0..1		
<b>Type</b>	EcucEnumerationParamDef		
<b>Range</b>	BSWM_AND	--	
	BSWM_NAND	--	
	BSWM_NOT	--	
	BSWM_OR	--	
	BSWM_XOR	--	
<b>Post-Build Multiplicity</b>	<b>Variant</b>	false	
<b>Post-Build Value</b>	<b>Variant</b>	false	
<b>Multiplicity Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Value</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE

<b>Configuration Class</b>	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope Dependency</b>	scope: local		

<b>SWS Item</b>	<b>ECUC_BswM_00820 :</b>		
<b>Name</b>	BswMArgumentRef		
<b>Description</b>	This is a choice reference either to a mode condition or a sub-expression. In case the BswMLogicalExpression.BswMLogicalOperator equals BSWM_NAND only two operands are supported. In case the BswMLogicalExpression.BswMLogicalOperator equals BSWM_NOT only one operand is supported.		
<b>Multiplicity</b>	1..*		
<b>Type</b>	Choice reference to [ BswMLogicalExpression , BswMModeCondition ]		
<b>Post-Build Variant Multiplicity</b>	false		
<b>Post-Build Variant Value</b>	false		
<b>Multiplicity Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

#### No Included Containers

[SWS\_BswM\_00242] [

The BswM shall reject configurations where a BswMLogicalExpression has a BswMLogicalOperator equal to BSWM\_NAND and its number of BswMArgumentRefs is not two.] (SRS\_BSW\_00167)

[SWS\_BswM\_00243] [

The BswM shall reject configurations where a BswMLogicalExpression has a BswMLogicalOperator equal to BSWM\_NOT and its number of BswMArgumentRefs is not one.] (SRS\_BSW\_00167)

[SWS\_BswM\_00244] [

The BswM shall implement BSWM\_XOR to evaluate to TRUE if an odd number of its arguments is TRUE, and evaluate to FALSE if an even number of its arguments is TRUE.] (SRS\_ModeMgm\_09180)

[SWS\_BswM\_00245] [

The BswM shall implement BSWM\_AND to evaluate to TRUE if all of its arguments are TRUE, and evaluate to FALSE if at least one of its arguments is FALSE.] (SRS\_ModeMgm\_09180)

[SWS\_BswM\_00246] [

The BswM shall implement BSWM\_NAND to evaluate to FALSE if all of its arguments are TRUE, and evaluate to TRUE if at least one of its arguments is FALSE.] (SRS\_ModeMgm\_09180)

[SWS\_BswM\_00247] [

The BswM shall implement BSWM\_OR to evaluate to FALSE if all of its arguments are FALSE, and evaluate to TRUE if at least one of its arguments is TRUE.] (SRS\_ModeMgm\_09180)

[SWS\_BswM\_00248] [

The BswM shall implement BSWM\_NOT to evaluate to FALSE if its argument is TRUE, and evaluate to TRUE if its argument is FALSE.] (SRS\_ModeMgm\_09180)

### 10.2.5 BswMModeCondition

<b>SWS Item</b>	<b>ECUC_BswM_00807 :</b>		
<b>Container Name</b>	BswMModeCondition		
<b>Description</b>	This container describes the BswM mode conditions that can be used either by itself to form a rule or as a part of a logical expression.		
<b>Post-Build Multiplicity</b>	<b>Variant</b>	false	
<b>Multiplicity Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE, VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Link time</b>	--	
	<b>Post-build time</b>	--	
<b>Configuration Parameters</b>			

<b>SWS Item</b>	<b>ECUC_BswM_00815 :</b>		
<b>Name</b>	BswMConditionType		
<b>Description</b>	This parameter specifies what kind of comparison that is made for the evaluation of the mode condition. For BSWM_EQUALS and BSWM_EQUALS_NOT, the BswMModeRequestPort port referenced by BswMConditionMode is compared with the value configured in BswMConditionValue for equality or not-equality.  For BSWM_EVENT_IS_SET and BSWM_EVENT_IS_CLEARED, the BswMEventRequestPort port referenced by BswMConditionMode is checked for being set or cleared (not-set).		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucEnumerationParamDef		
<b>Range</b>	BSWM_EQUALS	--	
	BSWM_EQUALS_NOT	--	
	BSWM_EVENT_IS_CLEARED	--	
	BSWM_EVENT_IS_SET	--	
<b>Post-Build Value</b>	<b>Variant</b>	false	
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope</b>	scope: local		

<b>Dependency</b>			
<b>SWS Item</b>	<b>ECUC_BswM_00821 :</b>		
<b>Name</b>	BswMConditionMode		
<b>Description</b>	This parameter references either a mode request port or an event request port.		
<b>Multiplicity</b>	1		
<b>Type</b>	Choice reference to [ BswMEventRequestPort , BswMModeRequestPort ]		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

<b>Included Containers</b>		
<b>Container Name</b>	<b>Multiplicity</b>	<b>Scope / Dependency</b>
BswMConditionValue	0..1	This container holds the parameters and references necessary to identify the mode type and the value that the mode request is compared to.

[SWS\_BswM\_00256] Configuration constraint for mode request comparisons and event request checking

[ The BswM shall reject configurations where BswMConditionType BSWM\_EQUALS or BSWM\_EQUALS\_NOT are configured in conjunction with a BswMEventRequestPort port referenced by the BswMConditionMode. The BswM shall reject configurations where BswMConditionType BSWM\_EVENT\_IS\_SET or BSWM\_EVENT\_IS\_CLEARED are configured in conjunction with a BswMModeRequestPort port referenced by the BswMConditionMode. ]  
(SRS\_BSW\_00167, SRS\_ModeMgm\_09177)

## 10.2.6 BswMConditionValue

<b>SWS Item</b>	<b>ECUC_BswM_00816 :</b>		
<b>Choice container Name</b>	BswMConditionValue		
<b>Description</b>	This container holds the parameters and references necessary to identify the mode type and the value that the mode request is compared to.		

<b>Container Choices</b>		
<b>Container Name</b>	<b>Multiplicity</b>	<b>Scope / Dependency</b>
BswMBswMode	0..1	This container defines the value and type of a mode in the BSW. The mode value is defined by configuring either BswMBswRequestedMode or BswMCompuScaleModeValue.
BswMModeDeclaration	0..1	When the mode corresponds to a mode request or mode indication interface the mode is defined by a mode declaration. The mode declarations are defined in the SW-C Template and hence a foreign reference to the corresponding Mode Declaration is used.

### 10.2.7 BswMBswMode

<b>SWS Item</b>	<b>ECUC_BswM_00869 :</b>
<b>Container Name</b>	BswMBswMode
<b>Description</b>	This container defines the value and type of a mode in the BSW. The mode value is defined by configuring either BswMBswRequestedMode or BswMCompuScaleModeValue.
<b>Configuration Parameters</b>	

<b>SWS Item</b>	<b>ECUC_BswM_00866 :</b>		
<b>Name</b>	BswMBswRequestedMode		
<b>Description</b>	This parameter contains the symbolic name (as a string) of a certain mode/state that can be requested/indicated by the BSW modules.		
<b>Multiplicity</b>	0..1		
<b>Type</b>	EcucStringParamDef		
<b>Default value</b>	--		
<b>maxLength</b>	--		
<b>minLength</b>	--		
<b>regularExpression</b>	--		
<b>Post-Build Variant Multiplicity</b>	false		
<b>Post-Build Variant Value</b>	false		
<b>Multiplicity Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	--	
	<b>Post-build time</b>	--	
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	--	
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

<b>Included Containers</b>		
<b>Container Name</b>	<b>Multiplicity</b>	<b>Scope / Dependency</b>
BswMCompuScaleModeValue	0..1	This container contains parameters used to define a mode value.

### 10.2.8 BswMModeDeclaration

<b>SWS Item</b>	<b>ECUC_BswM_00868 :</b>
<b>Container Name</b>	BswMModeDeclaration
<b>Description</b>	When the mode corresponds to a mode request or mode indication interface the mode is defined by a mode declaration. The mode declarations are defined in the SW-C Template and hence a foreign reference to the corresponding Mode Declaration is used.
<b>Configuration Parameters</b>	

<b>SWS Item</b>	<b>ECUC_BswM_00864 :</b>		
<b>Name</b>	BswMModeValueRef		
<b>Description</b>	This is a foreign reference to the Mode Declaration used for the mode requests corresponding to this condition.		
<b>Multiplicity</b>	1		
<b>Type</b>	Foreign reference to [ MODE-DECLARATION ]		
<b>Post-Build Variant Value</b>	false		

<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

#### No Included Containers

### 10.2.9 BswMEventRequestPort

<b>SWS Item</b>	<b>ECUC_BswM_01052 :</b>		
<b>Container Name</b>	BswMEventRequestPort		
<b>Description</b>	Each instance of this container defines an event which can be sent to the BswM. Basic Software Modules may send these events to the BswM by calling the corresponding BswM C-API (for example: BswM_ComM_InitiateReset()).		
<b>Post-Build Multiplicity</b>	<b>Variant</b>	false	
<b>Multiplicity Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE, VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Link time</b>	--	
	<b>Post-build time</b>	--	
<b>Configuration Parameters</b>			

<b>SWS Item</b>	<b>ECUC_BswM_01056 :</b>		
<b>Name</b>	BswMEventRequestProcessing		
<b>Description</b>	This parameter defines if the processing of the mode arbitration shall be done immediately when an event request is received or if it shall be deferred to the processing of the main function of BswM.		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucEnumerationParamDef		
<b>Range</b>	BSWM_DEFERRED	--	
	BSWM_IMMEDIATE	--	
<b>Post-Build Value</b>	<b>Variant</b>	false	
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope Dependency</b>	scope: local		

<b>Included Containers</b>		
<b>Container Name</b>	<b>Multiplicity</b>	<b>Scope / Dependency</b>
BswMEventRequestSource	1	This choice container specifies the source of the event request. The sender of the event can be another BSW Module, such as ComM.

### 10.2.10 BswMModeRequestPort

<b>SWS Item</b>	<b>ECUC_BswM_00805 :</b>		
<b>Container Name</b>	BswMModeRequestPort		
<b>Description</b>	<p>Each instance of this container defines a mode request interface that is used to requests or indicate modes from/to the BswM. These interfaces are implemented as ports or as ordinary C-functions based upon if the request is made by an SW-C or a BSW module. There are different types of mode requests:</p> <ol style="list-style-type: none"> <li>1. Mode requests from the SW-C:s</li> <li>2. Mode Requests from other BSW modules such as the DCM.</li> <li>3. State/mode indications from the RTE or other BSW modules such as the bus specific State Managers.</li> </ol> <p>Note that the BswM treats all request and indications in the exact same way.</p>		
<b>Post-Build Multiplicity</b>	<b>Variant</b>	false	
<b>Multiplicity Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE, VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Link time</b>	--	
	<b>Post-build time</b>	--	
<b>Configuration Parameters</b>			

<b>SWS Item</b>	<b>ECUC_BswM_00822 :</b>		
<b>Name</b>	BswMRequestProcessing		
<b>Description</b>	This parameter defines if the processing of the mode arbitration shall be done immediately when a mode request is received or if it shall be deferred to the processing of the main function of BswM.		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucEnumerationParamDef		
<b>Range</b>	BSWM_DEFERRED	--	
	BSWM_IMMEDIATE	--	
<b>Post-Build Value</b>	<b>Variant</b>	false	
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope Dependency</b>	/scope: local		

<b>Included Containers</b>		
<b>Container Name</b>	<b>Multiplicity</b>	<b>Scope / Dependency</b>
BswMModelInitValue	0..1	This container defines the initial mode value that is used by BswM for the corresponding mode request after initialization. The initial mode value is defined by configuring either BswMBswModelInitValue or BswMCompuScaleModeValue. This container is optional.
BswMModeRequestSource	1	This choice container specifies the source of the mode request or state/mode indication. The requester of a mode can be both SW-C:s and other BSW Modules, such as the bus specific State Managers.



### 10.2.11 BswMMModelInitValue

<b>SWS Item</b>	<b>ECUC_BswM_00928 :</b>
<b>Container Name</b>	BswMMModelInitValue
<b>Description</b>	This container defines the initial mode value that is used by BswM for the corresponding mode request after initialization. The initial mode value is defined by configuring either BswMBswModelInitValue or BswMCompuScaleModeValue. This container is optional.
<b>Configuration Parameters</b>	

<b>SWS Item</b>	<b>ECUC_BswM_00932 :</b>		
<b>Name</b>	BswMBswModelInitValue		
<b>Description</b>	This parameter defines the initial mode value that is used by BswM for the corresponding mode request after initialization.		
<b>Multiplicity</b>	0..1		
<b>Type</b>	EcucStringParamDef		
<b>Default value</b>	--		
<b>maxLength</b>	--		
<b>minLength</b>	--		
<b>regularExpression</b>	--		
<b>Post-Build Multiplicity</b>	false		
<b>Post-Build Variant Value</b>	false		
<b>Multiplicity Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	--	
	<b>Post-build time</b>	--	
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	--	
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

<b>Included Containers</b>		
<b>Container Name</b>	<b>Multiplicity</b>	<b>Scope / Dependency</b>
BswMCompuScaleModeValue	0..1	This container contains parameters used to define a mode value.

### 10.2.12 BswMCompuScaleModeValue

<b>SWS Item</b>	<b>ECUC_BswM_01039 :</b>
<b>Container Name</b>	BswMCompuScaleModeValue
<b>Description</b>	This container contains parameters used to define a mode value.
<b>Configuration Parameters</b>	

<b>SWS Item</b>	<b>ECUC_BswM_01041 :</b>		
<b>Name</b>	BswMCompuConstText		
<b>Description</b>	The value of this parameter shall match the VT member of a CompuConst defined within the referenced CompuMethod (BswMCompuMethodRef). The interval value of the corresponding CompuScale shall be used as the mode request value.		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucStringParamDef		
<b>Default value</b>	--		

<b>maxLength</b>	--		
<b>minLength</b>	--		
<b>regularExpression</b>	--		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	--	
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	<b>ECUC_BswM_01040 :</b>		
<b>Name</b>	BswMCompuMethodRef		
<b>Description</b>	This is a foreign reference to the CompuMethod used for mode requests.		
<b>Multiplicity</b>	1		
<b>Type</b>	Foreign reference to [ COMPU-METHOD ]		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	--	
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

**No Included Containers**

[SWS\_BswM\_CONSTR\_00002] [ The value of CompuMethod.category referenced by the foreign reference of BswMCompuMethodRef shall be TEXTTABLE. ] (SRS\_BSW\_00167)

### 10.2.13 BswMEventRequestSource

<b>SWS Item</b>	<b>ECUC_BswM_01053 :</b>
<b>Choice container Name</b>	BswMEventRequestSource
<b>Description</b>	This choice container specifies the source of the event request. The sender of the event can be another BSW Module, such as ComM.

<b>Container Choices</b>		
<b>Container Name</b>	<b>Multiplicity</b>	<b>Scope / Dependency</b>
BswMComMInitiateReset	0..1	This is an indication from the ComM to signal a shutdown.
BswMDcmApplicationUpdatedIndication	0..1	This is a request to update application data from the DCM. This container does not contain any parameters since there are no further configuration needed for this type of request.
BswMModeSwitchErrorEvent	0..1	This is a notification that an error occurred because the partition containing mode users of the referenced PPort was restarted by the RTE. Because the Mode Machine Instance holding the current mode can reside on that terminated partition, the Mode Manager has to be informed about the loss of this partition.
BswMPartitionRestarted	0..1	This is a notification that an error occurred because the partition containing the BswM was restarted by the RTE. The Mode Users may lie in another (still running) partition. So the BswM has to be informed that the start of its partition is no normal startup but

		a restart of a single partition. This information can be used inside the Rules. This notification has to be used by the Restart Task of the particular partition.
BswMWdgMRequestPartitionReset	0..1	This is a Partition Reset request from from the WdgM. This port corresponds to a call of the BswM_WdgM_RequestPartitionReset API.

#### 10.2.14 BswMModeRequestSource

<b>SWS Item</b>	<b>ECUC_BswM_00856 :</b>
<b>Choice container Name</b>	BswMModeRequestSource
<b>Description</b>	This choice container specifies the source of the mode request or state/mode indication. The requester of a mode can be both SW-C:s and other BSW Modules, such as the bus specific State Managers.

<b>Container Choices</b>		
<b>Container Name</b>	<b>Multiplicity</b>	<b>Scope / Dependency</b>
BswMBswModeNotification	0..1	This is a mode request source emanating from another BSW Module.
BswMCanSMIcomIndication	0..1	This is an indication from CanSM of the configuration Id of the Icom configuration
BswMCanSMIndication	0..1	This is an indication of the current state of the CAN State Manager.
BswMComMIndication	0..1	This is an indication of the current communication mode of a channel in the Communication Manager.
BswMComMPncRequest	0..1	This is a request of the current communication mode of a Partial Network Cluster in the Communication Manager.
BswMDcmComModeRequest	0..1	The source of the mode request is the Diagnostic Communication Manager.
BswMEcuMIndication	0..1	This is a notification of the current operation mode of the ECU State Manager. This container does not contain any parameters since there are no further configuration needed for this type of request.
BswMEcuMRUNRequestIndication	0..1	This is an indication of the current State of the RUN Request Protocol.
BswMEcuMWakeupSource	0..1	This is a notification of the current state of an ECU State Manager wakeup source.
BswMEthIfPortGroupLinkStateChg	0..1	This is an indication from the EthIf if the link state of a Ethernet interface switch port group has changed.
BswMEthSMIndication	0..1	This is an indication of the current state of the Ethernet State Manager.
BswMFrSMIndication	0..1	This is an indication of the current state of the FlexRay State Manager.
BswMGenericRequest	0..1	This mode request originates from a requester that is not among the list of standardized mode requesters (i.e. the different resource managers).
BswMJ1939DcmBroadcastStatus	0..1	This is a notification of the desired broadcast status per network, triggered via DM13.
BswMJ1939NmIndication	0..1	This is an indication of the current state of the

		J1939 network management module.
BswMLinSMIndication	0..1	This is an indication of the current state of the LIN State Manager.
BswMLinScheduleIndication	0..1	This is an indication of the currently active LIN Schedule Table for a specific LIN Interface.
BswMLinTpModeRequest	0..1	This is a LinTp mode request from the LinIf. This port corresponds to a call of the BswM_LinTp_RequestMode API.
BswMNmIfCarWakeUpIndication	0..1	This is an indication of a CarWakeup from the NmIf.
BswMNvmJobModeIndication	0..1	Indicates the current status of the multiblock job. The job is identified via BswMNvmService. Possible values for this indication are the possible values of Nvm_RequestResultType.
BswMNvmRequest	0..1	Via this Mode Request Source the Nvm indicates the current status of the specified block. Possible Values are: Nvm_RequestResultType NVM_REQ_OK NVM_REQ_NOT_OK NVM_REQ_PENDING NVM_REQ_INTEGRITY_FAILED NVM_REQ_BLOCK_SKIPPED NVM_REQ_NV_INVALIDATED NVM_REQ_CANCELED NVM_REQ_REDUNDANCY_FAILED NVM_REQ_RESTORED_FROM_ROM
BswMSdClientServiceCurrentState	0..1	Used by Service Discovery module to indicate current state of the Client Service (available/down).
BswMSdConsumedEventGroupCurrentState	0..1	Used by Service Discovery to indicate current status of the EventHandler (requested/released).
BswMSdEventHandlerCurrentState	0..1	Used by Service Discovery to indicate current status of the EventHandler (requested/released).
BswMSwcModeNotification	0..1	This is a mode switch notification associated with a RTE switch interface.
BswMSwcModeRequest	0..1	The source of the mode request is a SW Component.
BswMTimer	0..1	This is a timer which can be used for time dependent rules. This mode request port can be in one of three modes (depending on the state of the timer): <ul style="list-style-type: none"> <li>BSWM_TIMER_STOPPED (initial) (The timer has been stopped by an action)</li> <li>BSWM_TIMER_STARTED (The timer has been started by an action)</li> <li>BSWM_TIMER_EXPIRED (The timer has expired)</li> </ul>

### 10.2.15 BswMBswModeNotification

<b>SWS Item</b>	<b>ECUC_BswM_00926 :</b>
<b>Container Name</b>	BswMBswModeNotification
<b>Description</b>	This is a mode request source emanating from another BSW Module.
<b>Configuration Parameters</b>	

<b>SWS Item</b>	<b>ECUC_BswM_00927 :</b>		
<b>Name</b>	BswMBswModeDeclarationGroupPrototypeRef		
<b>Description</b>	This is a foreign reference to the Mode Declaration Group Prototype.		
<b>Multiplicity</b>	1		
<b>Type</b>	Foreign reference to [ MODE-DECLARATION-GROUP-PROTOTYPE ]		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

**No Included Containers**

### 10.2.16 BswMCanSMIcomIndication

<b>SWS Item</b>	<b>ECUC_BswM_01018 :</b>
<b>Container Name</b>	BswMCanSMIcomIndication
<b>Description</b>	This is an indication from CanSM of the configuration Id of the Icom configuration
<b>Configuration Parameters</b>	

<b>SWS Item</b>	<b>ECUC_BswM_01020 :</b>		
<b>Name</b>	BswMCanSMIcomIndicationSwitchError		
<b>Description</b>	Identifies the type of indications (error or error-free) from the CanSM which this mode request corresponds to.		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucEnumerationParamDef		
<b>Range</b>	BSWM_ICOM_SWITCH_E_FAILED	For error indications	
	BSWM_ICOM_SWITCH_E_OK	For error-free indications	
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope Dependency</b>	scope: local		

<b>SWS Item</b>	<b>ECUC_BswM_01019 :</b>
<b>Name</b>	BswMCanSMChannelRef
<b>Description</b>	This is a reference to the CAN channel handle that the mode request corresponds to.
<b>Multiplicity</b>	1
<b>Type</b>	Symbolic name reference to [ ComMChannel ]

<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

**No Included Containers**

### 10.2.17 BswMCanSMIndication

<b>SWS Item</b>	<b>ECUC_BswM_00857 :</b>		
<b>Container Name</b>	BswMCanSMIndication		
<b>Description</b>	This is an indication of the current state of the CAN State Manager.		
<b>Configuration Parameters</b>			

<b>SWS Item</b>	<b>ECUC_BswM_00870 :</b>		
<b>Name</b>	BswMCanSMChannelRef		
<b>Description</b>	This is a reference to the CAN channel handle that the mode request corresponds to.		
<b>Multiplicity</b>	1		
<b>Type</b>	Symbolic name reference to [ ComMChannel ]		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

**No Included Containers**

### 10.2.18 BswMComMIndication

<b>SWS Item</b>	<b>ECUC_BswM_00880 :</b>		
<b>Container Name</b>	BswMComMIndication		
<b>Description</b>	This is an indication of the current communication mode of a channel in the Communication Manager.		
<b>Configuration Parameters</b>			

<b>SWS Item</b>	<b>ECUC_BswM_00883 :</b>		
<b>Name</b>	BswMComMChannelRef		
<b>Description</b>	This is a reference to the Communication Manager channel handle that the indication corresponds to.		
<b>Multiplicity</b>	1		
<b>Type</b>	Symbolic name reference to [ ComMChannel ]		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE

	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

No Included Containers

### 10.2.19 BswMComMInitiateReset

<b>SWS Item</b>	ECUC_BswM_01014 :
<b>Container Name</b>	BswMComMInitiateReset
<b>Description</b>	This is an indication from the ComM to signal a shutdown.
<b>Configuration Parameters</b>	

No Included Containers

### 10.2.20 BswMComMPncRequest

<b>SWS Item</b>	ECUC_BswM_00922 :
<b>Container Name</b>	BswMComMPncRequest
<b>Description</b>	This is a request of the current communication mode of a Partial Network Cluster in the Communication Manager.
<b>Configuration Parameters</b>	

<b>SWS Item</b>	ECUC_BswM_00924 :		
<b>Name</b>	BswMComMPncRef		
<b>Description</b>	This is a reference to the Communication Manager PNC handle of the Partial Network Cluster that the request corresponds to.		
<b>Multiplicity</b>	1		
<b>Type</b>	Symbolic name reference to [ ComMPnc ]		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

No Included Containers

### 10.2.21 BswMDcmApplicationUpdatedIndication

<b>SWS Item</b>	ECUC_BswM_00925 :
<b>Container Name</b>	BswMDcmApplicationUpdatedIndication



<b>Description</b>	This is a request to update application data from the DCM. This container does not contain any parameters since there are no further configuration needed for this type of request.
<b>Configuration Parameters</b>	

**No Included Containers**

### 10.2.22 BswMDcmComModeRequest

<b>SWS Item</b>	<b>ECUC_BswM_00863 :</b>
<b>Container Name</b>	BswMDcmComModeRequest
<b>Description</b>	The source of the mode request is the Diagnostic Communication Manager.
<b>Configuration Parameters</b>	

<b>SWS Item</b>	<b>ECUC_BswM_00969 :</b>		
<b>Name</b>	BswMDcmComMChannelRef		
<b>Description</b>	This is a reference from DcmModeRequest to the ComM channel that the indication corresponds to.		
<b>Multiplicity</b>	1		
<b>Type</b>	Symbolic name reference to [ ComMChannel ]		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

**No Included Containers**

### 10.2.23 BswMEcuMIndication

<b>SWS Item</b>	<b>ECUC_BswM_00879 :</b>
<b>Container Name</b>	BswMEcuMIndication
<b>Description</b>	This is a notification of the current operation mode of the ECU State Manager. This container does not contain any parameters since there are no further configuration needed for this type of request.
<b>Configuration Parameters</b>	

**No Included Containers**

### 10.2.24 BswMEcuMRUNRequestIndication

<b>SWS Item</b>	<b>ECUC_BswM_01043 :</b>		
-----------------	--------------------------	--	--

<b>Container Name</b>	BswMEcuMRUNRequestIndication
<b>Description</b>	This is an indication of the current State of the RUN Request Protocol.
<b>Configuration Parameters</b>	

<b>SWS Item</b>	<b>ECUC_BswM_01042 :</b>		
<b>Name</b>	BswMEcuMRUNRequestProtocolPort		
<b>Description</b>	Identifies the EcuM State which is related to the mode request.		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucEnumerationParamDef		
<b>Range</b>	BSWM_ECUM_STATE_APP_POST_RUN	Port for POST_RUN State of EcuM.	
	BSWM_ECUM_STATE_APP_RUN	Port for RUN State of EcuM.	
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope Dependency</b>	/scope: local		

**No Included Containers**

### 10.2.25 BswMEcuMWakeupSource

<b>SWS Item</b>	<b>ECUC_BswM_00904 :</b>
<b>Container Name</b>	BswMEcuMWakeupSource
<b>Description</b>	This is a notification of the current state of an ECU State Manager wakeup source.
<b>Configuration Parameters</b>	

<b>SWS Item</b>	<b>ECUC_BswM_00905 :</b>		
<b>Name</b>	BswMEcuMWakeupSrcRef		
<b>Description</b>	This is a reference to the ECU State Manager Wakeup Source that the indication corresponds to.		
<b>Multiplicity</b>	1		
<b>Type</b>	Symbolic name reference to [ EcuMWakeupSource ]		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

**No Included Containers**

## 10.2.26 BswMEthIfPortGroupLinkStateChg

<b>SWS Item</b>	<b>ECUC_BswM_01066 :</b>
<b>Container Name</b>	BswMEthIfPortGroupLinkStateChg
<b>Description</b>	This is an indication from the EthIf if the link state of a Ethernet interface switch port group has changed.
<b>Configuration Parameters</b>	

<b>SWS Item</b>	<b>ECUC_BswM_01067 :</b>		
<b>Name</b>	BswMEthIfSwitchPortGroupRef		
<b>Description</b>	This is a reference to the Ethernet Interface Switch Port Group that the indication corresponds to.		
<b>Multiplicity</b>	1		
<b>Type</b>	Symbolic name reference to [ EthIfSwitchPortGroup ]		
<b>Post-Build Variant Value</b>	true		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

**No Included Containers**

## 10.2.27 BswMEthSMIndication

<b>SWS Item</b>	<b>ECUC_BswM_00860 :</b>
<b>Container Name</b>	BswMEthSMIndication
<b>Description</b>	This is an indication of the current state of the Ethernet State Manager.
<b>Configuration Parameters</b>	

<b>SWS Item</b>	<b>ECUC_BswM_00873 :</b>		
<b>Name</b>	BswMEthSMChannelRef		
<b>Description</b>	This is a reference to the Ethernet channel handle that the mode request corresponds to.		
<b>Multiplicity</b>	1		
<b>Type</b>	Symbolic name reference to [ ComMChannel ]		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

**No Included Containers**

## 10.2.28 BswMFrSMIndication

<b>SWS Item</b>	<b>ECUC_BswM_00858 :</b>
<b>Container Name</b>	BswMFrSMIndication
<b>Description</b>	This is an indication of the current state of the FlexRay State Manager.
<b>Configuration Parameters</b>	

<b>SWS Item</b>	<b>ECUC_BswM_00872 :</b>		
<b>Name</b>	BswMFrSMChannelRef		
<b>Description</b>	This is a reference to the FlexRay Cluster handle that the mode request corresponds to.		
<b>Multiplicity</b>	1		
<b>Type</b>	Symbolic name reference to [ ComMChannel ]		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

**No Included Containers**

## 10.2.29 BswMGenericRequest

<b>SWS Item</b>	<b>ECUC_BswM_00861 :</b>
<b>Container Name</b>	BswMGenericRequest
<b>Description</b>	This mode request originates from a requester that is not among the list of standardized mode requesters (i.e. the different resource managers).
<b>Configuration Parameters</b>	

<b>SWS Item</b>	<b>ECUC_BswM_00874 :</b>		
<b>Name</b>	BswMModeRequesterId		
<b>Description</b>	This parameters identifies the different users of the generic mode request interface. The allowable range of this parameter shall coincide with the range of BswM_UserType (which can be platform-dependent).		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucIntegerParamDef (Symbolic Name generated for this parameter)		
<b>Range</b>	0 .. 65535		
<b>Default value</b>	--		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	--	
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	<b>ECUC_BswM_00875 :</b>		
<b>Name</b>	BswMRequestedModeMax		
<b>Description</b>	This parameter defines the upper limit for the modes requested by this mode requester. The allowable range of this parameter shall coincide with the range of BswM_ModeType (which can be platform-dependent).		

<b>Multiplicity</b>	1		
<b>Type</b>	EcucIntegerParamDef		
<b>Range</b>	0 .. 65535		
<b>Default value</b>	--		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

**No Included Containers**

### 10.2.30 BswMJ1939DcmBroadcastStatus

<b>SWS Item</b>	<b>ECUC_BswM_00985 :</b>		
<b>Container Name</b>	BswMJ1939DcmBroadcastStatus		
<b>Description</b>	This is a notification of the desired broadcast status per network, triggered via DM13.		
<b>Configuration Parameters</b>			

<b>SWS Item</b>	<b>ECUC_BswM_00988 :</b>		
<b>Name</b>	BswMJ1939DcmChannelRef		
<b>Description</b>	Reference to the communication channel which is affected by this mode request.		
<b>Multiplicity</b>	1		
<b>Type</b>	Symbolic name reference to [ ComMChannel ]		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

**No Included Containers**

[SWS\_BswM\_00250] [

Since NetworkMask (in the BswM\_J1939DcmBroadcastStatus API) is 16 bits wide, the BswM shall reject configurations where the ComMChannel.ComMChannelId referenced by a BswMJ1939DcmBroadcastStatus.BswMJ1939DcmChannelRef parameter is greater than 15.] ( SRS\_ModeMgm\_09228)

### 10.2.31 BswMJ1939NmIndication

<b>SWS Item</b>	<b>ECUC_BswM_00966 :</b>		
<b>Container Name</b>	BswMJ1939NmIndication		
<b>Description</b>	This is an indication of the current state of the J1939 network management module.		

**Configuration Parameters**

<b>SWS Item</b>	<b>ECUC_BswM_00967 :</b>		
<b>Name</b>	BswMJ1939NmChannelRef		
<b>Description</b>	This is a reference to the J1939Nm channel handle that the mode request corresponds to.		
<b>Multiplicity</b>	1		
<b>Type</b>	Symbolic name reference to [ ComMChannel ]		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	<b>ECUC_BswM_00997 :</b>		
<b>Name</b>	BswMJ1939NmNodeRef		
<b>Description</b>	This is a reference to the node that the mode request corresponds to.		
<b>Multiplicity</b>	1		
<b>Type</b>	Symbolic name reference to [ J1939NmNode ]		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

**No Included Containers**

### 10.2.32 BswMLinSMIndication

<b>SWS Item</b>	<b>ECUC_BswM_00859 :</b>
<b>Container Name</b>	BswMLinSMIndication
<b>Description</b>	This is an indication of the current state of the LIN State Manager.
<b>Configuration Parameters</b>	

<b>SWS Item</b>	<b>ECUC_BswM_00871 :</b>		
<b>Name</b>	BswMLinSMChannelRef		
<b>Description</b>	This is a reference to the LIN channel handle that the mode request corresponds to.		
<b>Multiplicity</b>	1		
<b>Type</b>	Symbolic name reference to [ ComMChannel ]		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

**No Included Containers**

### 10.2.33 BswMLinScheduleIndication

<b>SWS Item</b>	<b>ECUC_BswM_00885 :</b>
<b>Container Name</b>	BswMLinScheduleIndication
<b>Description</b>	This is an indication of the currently active LIN Schedule Table for a specific LIN Interface.
<b>Configuration Parameters</b>	

<b>SWS Item</b>	<b>ECUC_BswM_00886 :</b>		
<b>Name</b>	BswMLinScheduleRef		
<b>Description</b>	This is a reference to the LIN Schedule Table handle that the mode request corresponds to.		
<b>Multiplicity</b>	1		
<b>Type</b>	Symbolic name reference to [ LinSMSchedule ]		
<b>Post-Build Variant Value</b>	true		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME
	<b>Post-build time</b>	X	VARIANT-POST-BUILD
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	<b>ECUC_BswM_01028 :</b>		
<b>Name</b>	BswMLinSMChannelRef		
<b>Description</b>	This is a reference to the LIN channel handle that the mode request corresponds to.		
<b>Multiplicity</b>	1		
<b>Type</b>	Symbolic name reference to [ ComMChannel ]		
<b>Post-Build Variant Value</b>	true		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME
	<b>Post-build time</b>	X	VARIANT-POST-BUILD
<b>Scope / Dependency</b>	scope: local		

**No Included Containers**

### 10.2.34 BswMLinTpModeRequest

<b>SWS Item</b>	<b>ECUC_BswM_00914 :</b>
<b>Container Name</b>	BswMLinTpModeRequest
<b>Description</b>	This is a LinTp mode request from the LinIf. This port corresponds to a call of the BswM_LinTp_RequestMode API.
<b>Configuration Parameters</b>	

<b>SWS Item</b>	<b>ECUC_BswM_00915 :</b>		
<b>Name</b>	BswMLinTpChannelRef		
<b>Description</b>	This is a reference to the LIN Interface Channel that the mode request corresponds to.		
<b>Multiplicity</b>	1		
<b>Type</b>	Symbolic name reference to [ ComMChannel ]		



<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

**No Included Containers**

### 10.2.35 BswMModeSwitchErrorEvent

<b>SWS Item</b>	<b>ECUC_BswM_00990 :</b>
<b>Container Name</b>	BswMModeSwitchErrorEvent
<b>Description</b>	This is a notification that an error occurred because the partition containing mode users of the referenced PPort was restarted by the RTE. Because the Mode Machine Instance holding the current mode can reside on that terminated partition, the Mode Manager has to be informed about the loss of this partition.
<b>Configuration Parameters</b>	

<b>SWS Item</b>	<b>ECUC_BswM_01030 :</b>		
<b>Name</b>	BswMRteSwitchPortRef		
<b>Description</b>	This is a reference to the BswMSwitchPort.		
<b>Multiplicity</b>	1		
<b>Type</b>	Reference to [ BswMSwitchPort ]		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

**No Included Containers**

[SWS\_BswM\_00259] [

BswMModeSwitchErrorEvent specifies a SwcModeManagerErrorEvent, which the BswM shall create in its SWCD. The ModeDeclarationGroupPrototype which is referenced by the SwcModeManagerErrorEvent.modeGroup shall correspond to the one used by the ModeSwitchInterface which is referenced by the BswMSwitchPort that is configured by the BswMRteSwitchPortRef in BswMModeSwitchErrorEvent. The BswM shall create an associated runnable which will arbitrate the SwcModeManagerErrorEvent.] (SRS\_ModeMgm\_09182)

### 10.2.36 BswMNmlfCarWakeUpIndication

<b>SWS Item</b>	<b>ECUC_BswM_01048 :</b>		
<b>Container Name</b>	BswMNmlfCarWakeUpIndication		

<b>Description</b>	This is an indication of a CarWakeup from the NmIf.
<b>Configuration Parameters</b>	

<b>SWS Item</b>	<b>ECUC_BswM_01049 :</b>		
<b>Name</b>	BswMNmChannelRef		
<b>Description</b>	This is a reference to the channel handle that the indication corresponds to.		
<b>Multiplicity</b>	1		
<b>Type</b>	Symbolic name reference to [ ComMChannel ]		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

**No Included Containers**

### 10.2.37 BswMNvMJobModeIndication

<b>SWS Item</b>	<b>ECUC_BswM_00956 :</b>
<b>Container Name</b>	BswMNVmJobModeIndication
<b>Description</b>	Indicates the current status of the multiblock job. The job is identified via BswMNVmService. Possible values for this indication are the possible values of NvM_RequestResultType.
<b>Configuration Parameters</b>	

<b>SWS Item</b>	<b>ECUC_BswM_00957 :</b>		
<b>Name</b>	BswMNvmService		
<b>Description</b>	Identifies the Nvm job which is related to the mode request.		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucEnumerationParamDef		
<b>Range</b>	NvmFirstInitAll	corresponds to multi block service NvM_FirstInitAll	
	NvmReadAll	corresponds to multi block service Nvm_ReadAll	
	NvmValidateAll	corresponds to multi block service Nvm_ValidateAll	
	NvmWriteAll	corresponds to multi block service Nvm_WriteAll	
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope Dependency</b>	scope: local		

**No Included Containers**

### 10.2.38 BswMNvMRequest

<b>SWS Item</b>	<b>ECUC_BswM_00890 :</b>
<b>Container Name</b>	BswMNvMRequest
<b>Description</b>	<p>Via this Mode Request Source the NvM indicates the current status of the specified block. Possible Values are:</p> <p>NvM_RequestResultType</p> <p>NVM_REQ_OK</p> <p>NVM_REQ_NOT_OK</p> <p>NVM_REQ_PENDING</p> <p>NVM_REQ_INTEGRITY_FAILED</p> <p>NVM_REQ_BLOCK_SKIPPED</p> <p>NVM_REQ_NV_INVALIDATED</p> <p>NVM_REQ_CANCELED</p> <p>NVM_REQ_REDUNDANCY_FAILED</p> <p>NVM_REQ_RESTORED_FROM_ROM</p>
<b>Configuration Parameters</b>	

<b>SWS Item</b>	<b>ECUC_BswM_00891 :</b>		
<b>Name</b>	BswMNvMBlockRef		
<b>Description</b>	This is a reference to the NvM Block Descriptor that the request corresponds to.		
<b>Multiplicity</b>	1		
<b>Type</b>	Symbolic name reference to [ NvMBlockDescriptor ]		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

**No Included Containers**

### 10.2.39 BswMPartitionRestarted

<b>SWS Item</b>	<b>ECUC_BswM_00989 :</b>
<b>Container Name</b>	BswMPartitionRestarted
<b>Description</b>	<p>This is a notification that an error occurred because the partition containing the BswM was restarted by the RTE. The Mode Users may lie in another (still running) partition. So the BswM has to be informed that the start of its partition is no normal startup but a restart of a single partition. This information can be used inside the Rules. This notification has to be used by the Restart Task of the particular partition.</p>
<b>Configuration Parameters</b>	

**No Included Containers**

#### 10.2.40 BswMSdClientServiceCurrentState

<b>SWS Item</b>	<b>ECUC_BswM_01011 :</b>
<b>Container Name</b>	BswMSdClientServiceCurrentState
<b>Description</b>	Used by Service Discovery module to indicate current state of the Client Service (available/down).
<b>Configuration Parameters</b>	

<b>SWS Item</b>	<b>ECUC_BswM_01009 :</b>		
<b>Name</b>	BswMSdClientMethodsRef		
<b>Description</b>	This is a reference to a client service in the Sd module.		
<b>Multiplicity</b>	1		
<b>Type</b>	Symbolic name reference to [ SdClientService ]		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

**No Included Containers**

#### 10.2.41 BswMSdConsumedEventGroupCurrentState

<b>SWS Item</b>	<b>ECUC_BswM_01012 :</b>
<b>Container Name</b>	BswMSdConsumedEventGroupCurrentState
<b>Description</b>	Used by Service Discovery to indicate current status of the EventHandler (requested/released).
<b>Configuration Parameters</b>	

<b>SWS Item</b>	<b>ECUC_BswM_01010 :</b>		
<b>Name</b>	BswMSdConsumedEventGroupRef		
<b>Description</b>	This is a reference to an eventGroup that is defined within a client service in the Sd module.		
<b>Multiplicity</b>	1		
<b>Type</b>	Symbolic name reference to [ SdConsumedEventGroup ]		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

**No Included Containers**

#### 10.2.42 BswMSdEventHandlerCurrentState

<b>SWS Item</b>	<b>ECUC_BswM_01013 :</b>
<b>Container Name</b>	BswMSdEventHandlerCurrentState
<b>Description</b>	Used by Service Discovery to indicate current status of the EventHandler (requested/released).
<b>Configuration Parameters</b>	

<b>SWS Item</b>	<b>ECUC_BswM_01008 :</b>		
<b>Name</b>	BswMSdEventHandlerRef		
<b>Description</b>	This is a reference to an event handler that is defined within a server service in the Sd module.		
<b>Multiplicity</b>	1		
<b>Type</b>	Symbolic name reference to [ SdEventHandler ]		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

**No Included Containers**

#### 10.2.43 BswMSwcModeNotification

<b>SWS Item</b>	<b>ECUC_BswM_00892 :</b>		
<b>Container Name</b>	BswMSwcModeNotification		
<b>Description</b>	This is a mode switch notification associated with a RTE switch interface.		
<b>Configuration Parameters</b>			

<b>SWS Item</b>	<b>ECUC_BswM_00893 :</b>		
<b>Name</b>	BswMSwcModeNotificationModeDeclarationGroupPrototypeRef		
<b>Description</b>	This is a foreign reference to the ModeDeclarationGroupPrototype.		
<b>Multiplicity</b>	1		
<b>Type</b>	Foreign reference to [ MODE-DECLARATION-GROUP-PROTOTYPE ]		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

**No Included Containers**

#### 10.2.44 BswMSwcModeRequest

<b>SWS Item</b>	<b>ECUC_BswM_00862 :</b>		
<b>Container Name</b>	BswMSwcModeRequest		
<b>Description</b>	The source of the mode request is a SW Component.		
<b>Configuration Parameters</b>			

<b>SWS Item</b>	<b>ECUC_BswM_01046 :</b>		
<b>Name</b>	BswMSwcModeRequestVariableDataPrototypeRef		
<b>Description</b>	This is a reference to the VariableDataPrototype.		

<b>Multiplicity</b>	1		
<b>Type</b>	Foreign reference to [ VARIABLE-DATA-PROTOTYPE ]		
<b>Post-Build Variant Value</b>	true		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME
	<b>Post-build time</b>	X	VARIANT-POST-BUILD
<b>Scope / Dependency</b>	scope: local		

#### No Included Containers

[SWS\_BswM\_00236] The BswM shall only accept configurations where the VariableDataPrototype, which is referenced by a BswMSwcModeRequest, belongs to a SenderReceiverInterface. ] (SRS\_ModeMgm\_09179)

### 10.2.45 BswMTimer

<b>SWS Item</b>	<b>ECUC_BswM_01058 :</b>
<b>Container Name</b>	BswMTimer
<b>Description</b>	<p>This is a timer which can be used for time dependent rules. This mode request port can be in one of three modes (depending on the state of the timer):</p> <ul style="list-style-type: none"> <li>* BSWM_TIMER_STOPPED (initial) (The timer has been stopped by an action)</li> <li>* BSWM_TIMER_STARTED (The timer has been started by an action)</li> <li>* BSWM_TIMER_EXPIRED (The timer has expired)</li> </ul>
<b>Configuration Parameters</b>	

#### No Included Containers

### 10.2.46 BswMWdgMRequestPartitionReset

<b>SWS Item</b>	<b>ECUC_BswM_00916 :</b>
<b>Container Name</b>	BswMWdgMRequestPartitionReset
<b>Description</b>	This is a Partition Reset request from from the WdgM. This port corresponds to a call of the BswM_WdgM_RequestPartitionReset API.
<b>Configuration Parameters</b>	

<b>SWS Item</b>	<b>ECUC_BswM_00917 :</b>		
<b>Name</b>	BswMWdgMRequestPartitionResetRef		
<b>Description</b>	This is a reference to the partition that shall be reset.		
<b>Multiplicity</b>	1		
<b>Type</b>	Reference to [ EcucPartition ]		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

**No Included Containers**

## 10.2.47 BswMRule

<b>SWS Item</b>	<b>ECUC_BswM_00806 :</b>		
<b>Container Name</b>	BswMRule		
<b>Description</b>	Each instance of this container describes a BswM arbitration rule. The rule either consists of a simple mode condition or a more complex logical expression. This container also references the action lists that shall be invoked when the rule is evaluated to True or False.		
<b>Post-Build Variant Multiplicity</b>	true		
<b>Multiplicity Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME
	<b>Post-build time</b>	X	VARIANT-POST-BUILD
<b>Configuration Parameters</b>			

<b>SWS Item</b>	<b>ECUC_BswM_00935 :</b>		
<b>Name</b>	BswMNestedExecutionOnly		
<b>Description</b>	This parameter defines for its related Rule if the Rule is an Independent rule or a Subordinate rule; false: an Independent rule, i.e. to be evaluated each time applicable (both as standalone Rule driven by its own BswMModeRequestSource and when referenced by another Rule).  true: a Subordinated rule, to be evaluated ONLY as a result of being referenced in one or more Action Lists.		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucBooleanParamDef		
<b>Default value</b>	false		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	<b>ECUC_BswM_00888 :</b>		
<b>Name</b>	BswMRuleInitState		
<b>Description</b>	This parameter is a part of the reset/initialization behavior of BswM. Action lists are executed when the result of a rule evaluation have changed since the last evaluation. This parameter defines the "previous evaluation result" of a rule to be used after initialization of the BswM.  If this parameter is set to BSWM_UNDEFINED, the evaluation result is always treated as changed at the first evaluation of the rule after initialization.  If this parameter is set to BSWM_TRUE, the evaluation result is treated as changed if the rule is evaluated to false.  If this parameter is set to BSWM_FALSE, the evaluation result is treated as changed if the rule is evaluated to true.		
<b>Multiplicity</b>	1		



Type	EcucEnumerationParamDef		
Range	BSWM_FALSE	--	
	BSWM_TRUE	--	
	BSWM_UNDEFINED	--	
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	Post-build time	--	
Scope Dependency	/scope: local		

<b>SWS Item</b>	<b>ECUC_BswM_00819 :</b>		
<b>Name</b>	BswMRuleExpressionRef		
<b>Description</b>	This is a reference to the logical expression that is evaluated for each rule.		
<b>Multiplicity</b>	1		
<b>Type</b>	Reference to [ BswMLogicalExpression ]		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	<b>ECUC_BswM_00818 :</b>		
<b>Name</b>	BswMRuleFalseActionList		
<b>Description</b>	This is a reference to the action list that shall be executed when the rule is evaluated to False		
<b>Multiplicity</b>	0..1		
<b>Type</b>	Reference to [ BswMActionList ]		
<b>Post-Build Variant Multiplicity</b>	true		
<b>Post-Build Variant Value</b>	true		
<b>Multiplicity Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME
	<b>Post-build time</b>	X	VARIANT-POST-BUILD
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME
	<b>Post-build time</b>	X	VARIANT-POST-BUILD
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	<b>ECUC_BswM_00817 :</b>		
<b>Name</b>	BswMRuleTrueActionList		
<b>Description</b>	This is a reference to the action list that shall be executed when the rule is evaluated to True		
<b>Multiplicity</b>	0..1		
<b>Type</b>	Reference to [ BswMActionList ]		
<b>Post-Build Variant Multiplicity</b>	true		
<b>Post-Build Variant Value</b>	true		
<b>Multiplicity Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME
	<b>Post-build time</b>	X	VARIANT-POST-BUILD
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME

	<b>Post-build time</b>	X	VARIANT-POST-BUILD
<b>Scope / Dependency</b>	scope: local		

**No Included Containers**

#### 10.2.48 BswMDataTypeMappingSets

<b>SWS Item</b>	<b>ECUC_BswM_00936 :</b>		
<b>Container Name</b>	BswMDataTypeMappingSets		
<b>Description</b>	Collection of references to DataTypeMappingSet.		
<b>Configuration Parameters</b>			

<b>SWS Item</b>	<b>ECUC_BswM_00937 :</b>		
<b>Name</b>	BswMDataTypeMappingSetRef		
<b>Description</b>	Reference to DataTypeMappingSet.		
<b>Multiplicity</b>	1..*		
<b>Type</b>	Foreign reference to [ DATA-TYPE-MAPPING-SET ]		
<b>Post-Build Variant Multiplicity</b>	false		
<b>Post-Build Variant Value</b>	false		
<b>Multiplicity Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

**No Included Containers**

#### 10.2.49 BswMModeControl

<b>SWS Item</b>	<b>ECUC_BswM_00802 :</b>		
<b>Container Name</b>	BswMModeControl		
<b>Description</b>	This container includes all configuration sub-containers and parameters related to the mode control functionality of the BswM.		
<b>Configuration Parameters</b>			

<b>Included Containers</b>		
<b>Container Name</b>	<b>Multiplicity</b>	<b>Scope / Dependency</b>
BswMAction	0..*	Each container of this type defines an action. These actions can be part of one or several action lists.
BswMActionList	0..*	Each instance of this container defines an action list that is invoked based on the BswM Rules. An action list contains a list of numbered action items to be processed. An action list can also include other action lists.

BswMRteModeRequestPort	0..*	This container defines a mode request port which the BswM may utilize to send a mode request to a SW-C which is acting as a mode-manager. If this container is referenced by a BswMRteModeRequest, the BswM shall create a corresponding PPort in its service description.
BswMSwitchPort	0..*	This container includes a reference to mode switch interface which the BswM must instantiate for the creation of a PPortPrototype in its SWCD.

### 10.2.50 BswMAction

<b>SWS Item</b>	<b>ECUC_BswM_00810 :</b>		
<b>Container Name</b>	BswMAction		
<b>Description</b>	Each container of this type defines an action. These actions can be part of one or several action lists.		
<b>Post-Build Multiplicity</b>	<b>Variant</b>	false	
<b>Multiplicity Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE, VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Link time</b>	--	
	<b>Post-build time</b>	--	
<b>Configuration Parameters</b>			

<b>Included Containers</b>		
<b>Container Name</b>	<b>Multiplicity</b>	<b>Scope / Dependency</b>
BswMAvailableActions	1	Choice container including the available actions to be used in the action lists.

### 10.2.51 BswMAvailableActions

<b>SWS Item</b>	<b>ECUC_BswM_00826 :</b>	
<b>Choice container Name</b>	BswMAvailableActions	
<b>Description</b>	Choice container including the available actions to be used in the action lists.	

<b>Container Choices</b>		
<b>Container Name</b>	<b>Multiplicity</b>	<b>Scope / Dependency</b>
BswMClearEventRequest	0..1	This container contains a reference to a BswMEventRequestPort which will be cleared (i.e. set to CLEAR state) when this action is executed.
BswMComMAllowCom	0..1	This container includes all parameters for the action to allow or to block communication for a ComM Channel. ComM_CommunicationAllowed is called when this action is configured.
BswMComMModelLimitation	0..1	This container includes all parameters related to a limitation of communication mode for a

		ComM Channel. ComM_LimitChannelToNoComMode is called when this action is configured.
BswMComMModeSwitch	0..1	This container includes all parameters related to a switch of communication mode for a ComM User. ComM_RequestComMode is called when this action is configured.
BswMCoreHaltMode	0..1	This container includes all parameters related to a switch of the activation state of core Halt.
BswMDeadlineMonitoringControl	0..1	This container includes all parameters related to enabling and disabling of deadline monitoring for one or several PDUs in COM. COM_ReceptionDMControl is called when this action is configured.
BswMEcuMDriverInitListBswM	0..1	This container defines the action to trigger an EcuM driver initialization list.
BswMEcuMGoDown	0..1	This container defines the UserId which shall be forwarded to the GoDown request.
BswMEcuMGoHalt	0..1	This container defines the action to trigger the EcuM_GoHalt from BswM.
BswMEcuMGoPoll	0..1	This container defines the action to trigger the EcuM_GoPoll from BswM.
BswMEcuMSelectShutdownTarget	0..1	This container defines the shutdown target.
BswMEcuMStateSwitch	0..1	This container defines the action to switch a State of the ECU State Manager.
BswMEthIfSwitchPortGroupRequestMode	0..1	This container includes all parameters related to requesting a mode for the EthIfSwitPortGroup. The EthIf_SwitchPortGroupRequestMode API is called when this action is executed.
BswMFrSMAllSlots	0..1	This container includes all parameter(s) for the action to request an exit from Flexray KeySlotOnlyMode. FrSM_AllSlots is called when this action is executed.
BswMJ1939DcmStateSwitch	0..1	This container includes all parameters related to a switch of the J1939 Diagnostic Communication Managers network state for a J1939 node. J1939Dcm_SetState is called when this action is configured.
BswMJ1939RmStateSwitch	0..1	This container includes all parameters related to a switch of the J1939 Request Managers network state for a J1939 node. J1939Rm_SetState is called when this action is configured.
BswMLinScheduleSwitch	0..1	This container includes all parameters related to a switch of LIN schedule table. LinSM_ScheduleRequest is called when this action is configured. The configuration for the "network" parameter can be accessed via the reference LinSMComMNetworkHandleRef contained in the parent container LinSMChannel of the container referenced by BswMLinScheduleRef.
BswMNMControl	0..1	This container includes all parameters related to enabling and disabling of Network Management communication. Disabling of NM communication can be requested by DCM. Nm_EnableCommunication or

		Nm_DisableCommunication is called when this action is configured.
BswMPduGroupSwitch	0..1	This container includes references to the PDU groups that shall be enabled and disabled. Com_IpduGroupControl is called when this action is configured.
BswMPduRouterControl	0..1	This container includes all parameters related to enabling and disabling of routing of Routing Path Groups in the PDU Router. PduR_EnableRouting or PduR_DisableRouting is called when this action is configured.
BswMRteModeRequest	0..1	This container defines a mode request that the BswM may send to a SW-C which is acting as a mode-manager. RTE_Write is called when this action is configured.
BswMRteSwitch	0..1	This container defines a mode switch indication that the BswM provides to the SW-C that need to be notified about the mode switch. RTE_Switch is called when this action is configured.
BswMSchMSwitch	0..1	This container defines a mode switch indication that the BswM provides to the SW-C that need to be notified about the mode switch. SchM_Switch is called when this action is configured.
BswMSdClientServiceModeRequest	0..1	This container includes all parameters related to the selection of an client service of Sd. Sd_ClientServiceSetState is called when this action is configured.
BswMSdConsumedEventGroupModeRequest	0..1	This container includes all parameters related to the selection of a consumed EventGroup of Sd. Sd_ConsumedEventGroupSetState is called when this action is configured.
BswMSdServerServiceModeRequest	0..1	This container includes all parameters related to the selection of a server service of Sd. Sd_ServerServiceSetState is called when this action is configured.
BswMSwitchIPduMode	0..1	This container includes all parameters related to the selection of the transmission mode an I-PDU to be sent by COM. Com_SwitchIpduTxMode is called when this action is configured.
BswMTimerControl	0..1	This container includes all parameters for the action to start or to stop a timer.
BswMTriggerIPduSend	0..1	This container includes all parameters related to the triggering of an I-PDU to be sent by COM. Com_TriggerIPDUSend is called when this action is configured.
BswMUserCallout	0..1	This container includes all details needed for a user defined function call.

### 10.2.52 BswMClearEventRequest

<b>SWS Item</b>	<b>ECUC_BswM_01054 :</b>
<b>Container Name</b>	BswMClearEventRequest
<b>Description</b>	This container contains a reference to a BswMEventRequestPort which will be cleared (i.e. set to CLEAR state) when this action is executed.
<b>Configuration Parameters</b>	

<b>SWS Item</b>	<b>ECUC_BswM_01055 :</b>		
<b>Name</b>	BswMClearEventRequestPortRef		
<b>Description</b>	This parameter references the BswMEventRequestPort which will be cleared.		
<b>Multiplicity</b>	1		
<b>Type</b>	Reference to [ BswMEventRequestPort ]		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

**No Included Containers**

### 10.2.53 BswMComMAAllowCom

<b>SWS Item</b>	<b>ECUC_BswM_00909 :</b>
<b>Container Name</b>	BswMComMAAllowCom
<b>Description</b>	This container includes all parameters for the action to allow or to block communication for a ComM Channel. ComM_CommunicationAllowed is called when this action is configured.
<b>Configuration Parameters</b>	

<b>SWS Item</b>	<b>ECUC_BswM_00918 :</b>		
<b>Name</b>	BswMComMAAllow		
<b>Description</b>	The parameter BswMComMAAllowChannelRef refers to a channel which will allow or block communication using the function ComM_CommunicationAllowed(). This parameter corresponds to the parameter "Allowed" of the function ComM_CommunicationAllowed().		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucBooleanParamDef		
<b>Default value</b>	--		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	<b>ECUC_BswM_00912 :</b>
<b>Name</b>	BswMComMAAllowChannelRef
<b>Description</b>	This is a reference to the ComM Channel for which communication shall be allowed or blocked.

	This reference corresponds to the parameter "Channel" of the function ComM_CommunicationAllowed().		
<b>Multiplicity</b>	1		
<b>Type</b>	Symbolic name reference to [ ComMChannel ]		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

No Included Containers

### 10.2.54 BswMComMModelLimitation

<b>SWS Item</b>	<b>ECUC_BswM_00908 :</b>
<b>Container Name</b>	BswMComMModelLimitation
<b>Description</b>	This container includes all parameters related to a limitation of communication mode for a ComM Channel. ComM_LimitChannelToNoComMode is called when this action is configured.
<b>Configuration Parameters</b>	

<b>SWS Item</b>	<b>ECUC_BswM_00910 :</b>		
<b>Name</b>	BswMComMLimitMode		
<b>Description</b>	The function ComM_LimitChannelToNoComMode() takes in this boolean parameter to limit the channel's com mode to no-com mode. This parameter corresponds to the parameter "Status" of the function ComM_LimitChannelToNoComMode.		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucBooleanParamDef		
<b>Default value</b>	--		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	<b>ECUC_BswM_00911 :</b>		
<b>Name</b>	BswMComMLimitChannelRef		
<b>Description</b>	This is a reference to the ComM channel for which the communication mode should be limited. This reference corresponds to the parameter "Channel" of the function ComM_LimitChannelToNoComMode.		
<b>Multiplicity</b>	1		
<b>Type</b>	Symbolic name reference to [ ComMChannel ]		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	



<b>Scope / Dependency</b>	scope: local
---------------------------	--------------

**No Included Containers**

### 10.2.55 BswMComMModeSwitch

<b>SWS Item</b>	<b>ECUC_BswM_00831 :</b>
<b>Container Name</b>	BswMComMModeSwitch
<b>Description</b>	This container includes all parameters related to a switch of communication mode for a ComM User. ComM_RequestComMode is called when this action is configured.
<b>Configuration Parameters</b>	

<b>SWS Item</b>	<b>ECUC_BswM_00840 :</b>		
<b>Name</b>	BswMComMRequestedMode		
<b>Description</b>	This parameter specifies if the requested communication mode. This parameter corresponds to the parameter "ComMode" of the function ComM_RequestComMode.		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucEnumerationParamDef		
<b>Range</b>	BSWM_COMM_FULL_COMMUNICATION	--	
	BSWM_COMM_NO_COMMUNICATION	--	
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope Dependency</b>	/scope: local		

<b>SWS Item</b>	<b>ECUC_BswM_00841 :</b>		
<b>Name</b>	BswMComMUserRef		
<b>Description</b>	This is a reference to the ComM User that is associated to the Communication channel for which the communication mode should be requested. This reference corresponds to the parameter "User" of the function ComM_RequestComMode.		
<b>Multiplicity</b>	1		
<b>Type</b>	Symbolic name reference to [ ComMUser ]		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

**No Included Containers**

## 10.2.56 BswMCoreHaltMode

<b>SWS Item</b>	<b>ECUC_BswM_00970 :</b>
<b>Container Name</b>	BswMCoreHaltMode
<b>Description</b>	This container includes all parameters related to a switch of the activation state of core Halt.
<b>Configuration Parameters</b>	

<b>SWS Item</b>	<b>ECUC_BswM_00972 :</b>		
<b>Name</b>	BswMCoreHaltActivationState		
<b>Description</b>	Different possibilities are offered depending on the OS implementation and the CPU HW. The HALT modes addressed by this parameter are defined as names (strings) in the OS implementation. Different implementation may implement different HALT modes and subsequently different names.		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucStringParamDef		
<b>Default value</b>	--		
<b>maxLength</b>	--		
<b>minLength</b>	--		
<b>regularExpression</b>	--		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	--	
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	<b>ECUC_BswM_00971 :</b>		
<b>Name</b>	BswMTargetCoreRef		
<b>Description</b>	This is a reference to the core on which the Core Halt process must be influenced.		
<b>Multiplicity</b>	1		
<b>Type</b>	Reference to [ EcucCoreDefinition ]		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

### No Included Containers

Implementations of this BswM Action are suggested to utilize the OS API: ControllIdle()

## 10.2.57 BswMDeadlineMonitoringControl

<b>SWS Item</b>	<b>ECUC_BswM_00830 :</b>
<b>Container Name</b>	BswMDeadlineMonitoringControl
<b>Description</b>	This container includes all parameters related to enabling and disabling of deadline monitoring for one or several PDUs in COM. COM_ReceptionDMControl is called when this action is configured.
<b>Configuration Parameters</b>	

<b>SWS Item</b>	<b>ECUC_BswM_00852 :</b>		
<b>Name</b>	BswMDisabledDMPduGroupRef		
<b>Description</b>	This is a reference to a PDU Group for which the Deadline Monitoring should be disabled. Together with the BswMEnabledDMPduGroupRef this reference corresponds to the parameter "ipduGroupVector" of the function COM_ReceptionDMControl.		
<b>Multiplicity</b>	0..*		
<b>Type</b>	Symbolic name reference to [ ComIPduGroup ]		
<b>Post-Build Multiplicity</b>	<b>Variant</b>	true	
<b>Post-Build Variant Value</b>	true		
<b>Multiplicity Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME
	<b>Post-build time</b>	X	VARIANT-POST-BUILD
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME
	<b>Post-build time</b>	X	VARIANT-POST-BUILD
<b>Scope / Dependency</b>	scope: local		

SWS Item	ECUC_BswM_00851 :		
Name	BswMEnabledDMPduGroupRef		
Description	This is a reference to a PDU Group for which the Deadline Monitoring should be enabled. Together with the BswMDisabledDMPduGroupRef this reference corresponds to the parameter "ipduGroupVector" of the function COM_ReceptionDMControl.		
Multiplicity	0..*		
Type	Symbolic name reference to [ ComIPduGroup ]		
Post-Build Multiplicity	Variant	true	
Post-Build Variant Value		true	
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

**No Included Containers**

## 10.2.58 BswMEcuMDriverInitListBswM

<b>SWS Item</b>	<b>ECUC_BswM_01064 :</b>
<b>Container Name</b>	BswMEcuMDriverInitListBswM
<b>Description</b>	This container defines the action to trigger an EcuM driver initialization list.
<b>Configuration Parameters</b>	

<b>SWS Item</b>	<b>ECUC_BswM_01065 :</b>
<b>Name</b>	BswMEcuMDriverInitListBswMRef
<b>Description</b>	This is a reference to the EcuM EcuMDriverInitListBswM container which

	represents the driver init list to be triggered.		
<b>Multiplicity</b>	1		
<b>Type</b>	Reference to [ EcuMDriverInitListBswM ]		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

#### No Included Containers

The EcuM (flex) can be configured with driver initialization lists (EcuMDriverInitListBswM) which may then be called by the BswM.

[SWS\_BswM\_00269] [

When a BswMEcuMDriverInitListBswM action is executed, the BswM shall call the EcuM\_AL\_DriverInitBswM\_<EcuMDriverInitListBswM.shortName>(void) function which is provided by the EcuM.] ( SRS\_ModeMgm\_09180)

### 10.2.59 BswMEcuMGoDown

<b>SWS Item</b>	<b>ECUC_BswM_00963 :</b>
<b>Container Name</b>	BswMEcuMGoDown
<b>Description</b>	This container defines the UserId which shall be forwarded to the GoDown request.
<b>Configuration Parameters</b>	

<b>SWS Item</b>	<b>ECUC_BswM_00964 :</b>		
<b>Name</b>	BswMEcuMUserIdRef		
<b>Description</b>	This is a reference to a EcuM UserId.		
<b>Multiplicity</b>	1		
<b>Type</b>	Symbolic name reference to [ EcuMFlexUserConfig ]		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

#### No Included Containers

### 10.2.60 BswMEcuMGoHalt

<b>SWS Item</b>	<b>ECUC_BswM_00995 :</b>
<b>Container Name</b>	BswMEcuMGoHalt
<b>Description</b>	This container defines the action to trigger the EcuM_GoHalt from BswM.
<b>Configuration Parameters</b>	

#### No Included Containers

### 10.2.61 BswMEcuMGoPoll

<b>SWS Item</b>	<b>ECUC_BswM_00996 :</b>
<b>Container Name</b>	BswMEcuMGoPoll
<b>Description</b>	This container defines the action to trigger the EcuM_GoPoll from BswM.
<b>Configuration Parameters</b>	

**No Included Containers**

### 10.2.62 BswMEcuMSelectShutdownTarget

<b>SWS Item</b>	<b>ECUC_BswM_00961 :</b>
<b>Container Name</b>	BswMEcuMSelectShutdownTarget
<b>Description</b>	This container defines the shutdown target.
<b>Configuration Parameters</b>	

<b>SWS Item</b>	<b>ECUC_BswM_00993 :</b>		
<b>Name</b>	BswMEcuMShutdownTarget		
<b>Description</b>	This parameter contains the shutdown target that the BswM selects at the EcuM.		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucEnumerationParamDef		
<b>Range</b>	BSWM_ECUM_SHUTDOWN_TARGET_OFF	--	
	BSWM_ECUM_SHUTDOWN_TARGET_RESET		In case the configuration parameter BswMEcuMShutdownTarget is set to BSWM_ECUM_SHUTDOWN_TARGET_RESET the configuration parameter BswMEcuMResetModeRef shall exist and contain a valid reference to a EcuM reset mode.
	BSWM_ECUM_SHUTDOWN_TARGET_SLEEP		In case the configuration parameter BswMEcuMShutdownTarget is set to BSWM_ECUM_SHUTDOWN_TARGET_SLEEP the configuration parameter BswMEcuMSleepModeRef shall exist and contain a valid reference to a EcuM sleep mode.
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope Dependency</b>	scope: local		

<b>SWS Item</b>	<b>ECUC_BswM_00994 :</b>
<b>Name</b>	BswMEcuMResetModeRef
<b>Description</b>	This is a reference to a reset mode.
<b>Multiplicity</b>	0..1
<b>Type</b>	Symbolic name reference to [ EcuMResetMode ]
<b>Post-Build Variant</b>	false

<b>Multiplicity</b>			
<b>Post-Build Variant Value</b>	false		
<b>Multiplicity Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	<b>ECUC_BswM_00962 :</b>		
<b>Name</b>	BswMEcuMSleepModeRef		
<b>Description</b>	This is a reference to a sleep mode.		
<b>Multiplicity</b>	0..1		
<b>Type</b>	Symbolic name reference to [ EcuMSleepMode ]		
<b>Post-Build Variant</b>	false		
<b>Post-Build Variant Value</b>	false		
<b>Multiplicity Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

**No Included Containers**

### 10.2.63 BswMEcuMStateSwitch

<b>SWS Item</b>	<b>ECUC_BswM_01045 :</b>		
<b>Container Name</b>	BswMEcuMStateSwitch		
<b>Description</b>	This container defines the action to switch a State of the ECU State Manager.		
<b>Configuration Parameters</b>			

<b>SWS Item</b>	<b>ECUC_BswM_01044 :</b>		
<b>Name</b>	BswMEcuMState		
<b>Description</b>	This parameter corresponds to the parameter "State" of the function EcuM_SetState().		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucEnumerationParamDef		
<b>Range</b>	BSWM_ECUM_STATE_APP_POST_RUN	--	
	BSWM_ECUM_STATE_APP_RUN	--	
	BSWM_ECUM_STATE_SHUTDOWN	--	
	BSWM_ECUM_STATE_SLEEP	--	
	BSWM_ECUM_STATE_STARTUP	--	
<b>Post-Build Variant Value</b>	false		

<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope Dependency</b>	/scope: local		

**No Included Containers**

#### 10.2.64 BswMEthIfSwitchPortGroupRequestMode

<b>SWS Item</b>	<b>ECUC_BswM_01068 :</b>
<b>Container Name</b>	BswMEthIfSwitchPortGroupRequestMode
<b>Description</b>	<p>This container includes all parameters related to requesting a mode for the EthIfSwtPortGroup.</p> <p>The EthIf_SwitchPortGroupRequestMode API is called when this action is executed.</p>
<b>Configuration Parameters</b>	

SWS Item	ECUC_BswM_01070 :		
Name	BswMEthTrcvMode		
Description	This parameter contains the mode which will be requested.		
Multiplicity	1		
Type	EcucEnumerationParamDef		
Range	BSWM_ETHTRCV_MODE_ACTIVE	enable the port group	
	BSWM_ETHTRCV_MODE_DOWN	disable the port group	
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	Post-build time	--	
Scope Dependency	/scope: local		

<b>SWS Item</b>	<b>ECUC_BswM_01069 :</b>		
<b>Name</b>	BswMEthIfSwitchPortGroupRef		
<b>Description</b>	This is a reference to the Ethernet Interface Switch Port Group which will receive the request.		
<b>Multiplicity</b>	1		
<b>Type</b>	Symbolic name reference to [ EthIfSwitchPortGroup ]		
<b>Post-Build Variant Value</b>	true		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

**No Included Containers**



### 10.2.65 BswMFrSMAllSlots

<b>SWS Item</b>	<b>ECUC_BswM_01037 :</b>
<b>Container Name</b>	BswMFrSMAllSlots
<b>Description</b>	This container includes all parameter(s) for the action to request an exit from Flexray KeySlotOnlyMode. FrSM_AllSlots is called when this action is executed.
<b>Configuration Parameters</b>	

<b>SWS Item</b>	<b>ECUC_BswM_01038 :</b>		
<b>Name</b>	BswMFrSMAllSlotsNetworkHandleRef		
<b>Description</b>	This references the FlexRay cluster. The reference corresponds to the parameter "NetworkHandle" of the function FrSM_AllSlots.		
<b>Multiplicity</b>	1		
<b>Type</b>	Symbolic name reference to [ ComMChannel ]		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

**No Included Containers**

### 10.2.66 BswMJ1939DcmStateSwitch

<b>SWS Item</b>	<b>ECUC_BswM_01032 :</b>
<b>Container Name</b>	BswMJ1939DcmStateSwitch
<b>Description</b>	This container includes all parameters related to a switch of the J1939 Diagnostic Communication Managers network state for a J1939 node. J1939Dcm_SetState is called when this action is configured.
<b>Configuration Parameters</b>	

<b>SWS Item</b>	<b>ECUC_BswM_01035 :</b>		
<b>Name</b>	BswMJ1939DcmRequestedState		
<b>Description</b>	This parameter describes the communication state of the J1939 Diagnostic Communication Manager and corresponds to the parameter "newState" of the function J1939Dcm_SetState.		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucEnumerationParamDef		
<b>Range</b>	BSWM_J1939DCM_STATE_OFFLINE	--	
	BSWM_J1939DCM_STATE_ONLINE	--	
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope Dependency</b>	scope: local		

<b>SWS Item</b>	<b>ECUC_BswM_01033 :</b>
<b>Name</b>	BswMJ1939DcmChannelRef
<b>Description</b>	This reference points to the unique channel defined by the ComMChannel

	and provides access to the unique channel index value in ComMChannelId. This reference corresponds to the parameter "channel" of the function J1939Dcm_SetState.		
<b>Multiplicity</b>	1		
<b>Type</b>	Symbolic name reference to [ ComMChannel ]		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	<b>ECUC_BswM_01034 :</b>		
<b>Name</b>	BswMJ1939DcmNodeRef		
<b>Description</b>	This reference points to a J1939NmNode and provides access to the unique J1939NmNodeId. This reference corresponds to the parameter "node" of the function J1939Dcm_SetState.		
<b>Multiplicity</b>	1		
<b>Type</b>	Symbolic name reference to [ J1939NmNode ]		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

No Included Containers

### 10.2.67 BswMJ1939RmStateSwitch

<b>SWS Item</b>	<b>ECUC_BswM_00998 :</b>
<b>Container Name</b>	BswMJ1939RmStateSwitch
<b>Description</b>	This container includes all parameters related to a switch of the J1939 Request Managers network state for a J1939 node. J1939Rm_SetState is called when this action is configured.
<b>Configuration Parameters</b>	

<b>SWS Item</b>	<b>ECUC_BswM_01002 :</b>		
<b>Name</b>	BswMJ1939RmRequestedState		
<b>Description</b>	This parameter describes the communication state of the J1939 Request Manager and corresponds to the parameter "new state" of the function J1939Rm_SetState.		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucEnumerationParamDef		
<b>Range</b>	BSWM_J1939RM_STATE_OFFLINE	--	
	BSWM_J1939RM_STATE_ONLINE	--	
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope Dependency</b>	scope: local		

<b>SWS Item</b>	<b>ECUC_BswM_01000 :</b>		
<b>Name</b>	BswMJ1939RmChannelRef		
<b>Description</b>	<p>This reference points to the unique channel defined by the ComMChannel and provides access to the unique channel index value in ComMChannelId.</p> <p>This reference corresponds to the parameter "channel" of the function J1939Rm_SetState.</p>		
<b>Multiplicity</b>	1		
<b>Type</b>	Symbolic name reference to [ ComMChannel ]		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	<b>ECUC_BswM_01001 :</b>		
<b>Name</b>	BswMJ1939RmNodeRef		
<b>Description</b>	<p>This reference points to a J1939NmNode and provides access to the unique J1939NmNodeId.</p> <p>This reference corresponds to the parameter "node" of the function J1939Rm_SetState.</p>		
<b>Multiplicity</b>	1		
<b>Type</b>	Symbolic name reference to [ J1939NmNode ]		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

**No Included Containers**

## 10.2.68 BswMLinScheduleSwitch

<b>SWS Item</b>	<b>ECUC_BswM_00827 :</b>
<b>Container Name</b>	BswMLinScheduleSwitch
<b>Description</b>	<p>This container includes all parameters related to a switch of LIN schedule table. LinSM_ScheduleRequest is called when this action is configured.</p> <p>The configuration for the "network" parameter can be accessed via the reference LinSMComMNetworkHandleRef contained in the parent container LinSMChannel of the container referenced by BswMLinScheduleRef.</p>
<b>Configuration Parameters</b>	

<b>SWS Item</b>	<b>ECUC_BswM_00842 :</b>		
<b>Name</b>	BswMLinScheduleRef		
<b>Description</b>	<p>This is a reference to the LIN schedule table that the LIN SM shall change to.</p> <p>This reference corresponds to the parameter "schedule" of the function LinSM_ScheduleRequest.</p>		
<b>Multiplicity</b>	1		

<b>Type</b>	Symbolic name reference to [ LinSMSchedule ]		
<b>Post-Build Variant Value</b>	true		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME
	<b>Post-build time</b>	X	VARIANT-POST-BUILD
<b>Scope / Dependency</b>	scope: local		

No Included Containers

## 10.2.69 BswMNMControl

<b>SWS Item</b>	<b>ECUC_BswM_00837 :</b>
<b>Container Name</b>	BswMNMControl
<b>Description</b>	This container includes all parameters related to enabling and disabling of Network Management communication. Disabling of NM communication can be requested by DCM. Nm_EnableCommunication or Nm_DisableCommunication is called when this action is configured.
<b>Configuration Parameters</b>	

<b>SWS Item</b>	<b>ECUC_BswM_00838 :</b>		
<b>Name</b>	BswMNMAction		
<b>Description</b>	This parameter specifies if the communication of the corresponding NM channel should be enabled or disabled.		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucEnumerationParamDef		
<b>Range</b>	BSWM_NM_DISABLE	--	
	BSWM_NM_ENABLE	--	
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope Dependency</b>	/scope: local		

<b>SWS Item</b>	<b>ECUC_BswM_00999 :</b>		
<b>Name</b>	BswMComMNetworkHandleRef		
<b>Description</b>	This reference points to the unique channel defined by the ComMChannel and provides access to the unique channel index value in ComMChannelId. This reference corresponds to the parameter "NetworkHandle" of the function Nm_EnableCommunication and Nm_DisableCommunication.		
<b>Multiplicity</b>	1		
<b>Type</b>	Symbolic name reference to [ ComMChannel ]		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

No Included Containers

## 10.2.70 BswMPduGroupSwitch

<b>SWS Item</b>	<b>ECUC_BswM_00828 :</b>
<b>Container Name</b>	BswMPduGroupSwitch
<b>Description</b>	This container includes references to the PDU groups that shall be enabled and disabled. Com_IpduGroupControl is called when this action is configured.
<b>Configuration Parameters</b>	

<b>SWS Item</b>	<b>ECUC_BswM_00913 :</b>		
<b>Name</b>	BswMPduGroupSwitchReinit		
<b>Description</b>	This parameter defines if the data of the I-PDU, the shadow buffers of included signal groups, etc. are reinitialized during a PDU Group Switch. This parameter corresponds to the parameter "initialize" of the function Com_IpduGroupControl.		
<b>Multiplicity</b>	0..1		
<b>Type</b>	EcucBooleanParamDef		
<b>Default value</b>	false		
<b>Post-Build Variant Multiplicity</b>	true		
<b>Post-Build Variant Value</b>	true		
<b>Multiplicity Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME
	<b>Post-build time</b>	X	VARIANT-POST-BUILD
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME
	<b>Post-build time</b>	X	VARIANT-POST-BUILD
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	<b>ECUC_BswM_00850 :</b>		
<b>Name</b>	BswMDisabledPduGroupRef		
<b>Description</b>	This is a reference to a PDU Group that should be disabled. Together with the BswMEnabledIPduGroupRef this reference corresponds to the parameter "ipduGroupVector" of the function Com_IpduGroupControl.		
<b>Multiplicity</b>	0..*		
<b>Type</b>	Symbolic name reference to [ ComIPduGroup ]		
<b>Post-Build Variant Multiplicity</b>	true		
<b>Post-Build Variant Value</b>	true		
<b>Multiplicity Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME
	<b>Post-build time</b>	X	VARIANT-POST-BUILD
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME
	<b>Post-build time</b>	X	VARIANT-POST-BUILD
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	<b>ECUC_BswM_00849 :</b>
-----------------	--------------------------

<b>Name</b>	BswMEnabledPduGroupRef		
<b>Description</b>	This is a reference to a PDU Group that should be enabled. Together with the BswMDisabledIPduGroupRef this reference corresponds to the parameter "ipduGroupVector" of the function Com_IpduGroupControl.		
<b>Multiplicity</b>	0..*		
<b>Type</b>	Symbolic name reference to [ ComIPduGroup ]		
<b>Post-Build Multiplicity</b>	true		
<b>Post-Build Variant Value</b>	true		
<b>Multiplicity Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME
	<b>Post-build time</b>	X	VARIANT-POST-BUILD
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME
	<b>Post-build time</b>	X	VARIANT-POST-BUILD
<b>Scope / Dependency</b>	scope: local		

No Included Containers

### 10.2.71 BswMPduRouterControl

<b>SWS Item</b>	<b>ECUC_BswM_00853 :</b>
<b>Container Name</b>	BswMPduRouterControl
<b>Description</b>	This container includes all parameters related to enabling and disabling of routing of Routing Path Groups in the PDU Router. PduR_EnableRouting or PduR_DisableRouting is called when this action is configured.
<b>Configuration Parameters</b>	

SWS Item	ECUC_BswM_00854 :		
Name	BswMPduRouterAction		
Description	This parameter specifies if the routing of the corresponding PDU should be enabled or disabled.		
Multiplicity	1		
Type	EcucEnumerationParamDef		
Range	BSWM_PDUR_DISABLE	--	
	BSWM_PDUR_ENABLE	--	
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope Dependency	scope: local		

<b>SWS Item</b>	<b>ECUC_BswM_01036 :</b>		
<b>Name</b>	BswMPduRouterDisableInitBuffer		
<b>Description</b>	When BswPduRouterAction is set to BSWM_PDUR_DISABLE and this parameter is set to true, then the call to PduR_DisableRouting will be invoked with parameter "initialize" set to true, otherwise false.		
<b>Multiplicity</b>	0..1		
<b>Type</b>	EcucBooleanParamDef		

<b>Default value</b>	--		
<b>Post-Build Variant Multiplicity</b>	true		
<b>Post-Build Variant Value</b>	true		
<b>Multiplicity Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME
	<b>Post-build time</b>	X	VARIANT-POST-BUILD
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME
	<b>Post-build time</b>	X	VARIANT-POST-BUILD
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	<b>ECUC_BswM_00855 :</b>		
<b>Name</b>	BswMPduRoutingPathGroupRef		
<b>Description</b>	This is a reference to the PDU Routing Path Group for which the routing in the PDU Router should be enabled or disabled. This reference corresponds to the parameter "id" of the function PduR_EnableRouting and PduR_DisableRouting.		
<b>Multiplicity</b>	1..*		
<b>Type</b>	Symbolic name reference to [ PduRRoutingPathGroup ]		
<b>Post-Build Variant Multiplicity</b>	true		
<b>Post-Build Variant Value</b>	true		
<b>Multiplicity Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME
	<b>Post-build time</b>	X	VARIANT-POST-BUILD
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME
	<b>Post-build time</b>	X	VARIANT-POST-BUILD
<b>Scope / Dependency</b>	scope: local		

**No Included Containers**

## 10.2.72 BswMRteModeRequest

<b>SWS Item</b>	<b>ECUC_BswM_01021 :</b>
<b>Container Name</b>	BswMRteModeRequest
<b>Description</b>	This container defines a mode request that the BswM may send to a SW-C which is acting as a mode-manager. RTE_Write is called when this action is configured.
<b>Configuration Parameters</b>	

<b>SWS Item</b>	<b>ECUC_BswM_01024 :</b>		
<b>Name</b>	BswMRequestedModeRef		
<b>Description</b>	This is a foreign reference to the Mode Declaration used for the mode request		
<b>Multiplicity</b>	1		
<b>Type</b>	Foreign reference to [ MODE-DECLARATION ]		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	



Scope / Dependency	scope: local		
SWS Item	ECUC_BswM_01023 :		
Name	BswMRteModeRequestPortRef		
Description	This is a reference to a BswMRteModeRequestPort.		
Multiplicity	1		
Type	Reference to [ BswMRteModeRequestPort ]		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	Post-build time	--	
Scope / Dependency	scope: local		
No Included Containers			

### 10.2.73 BswMRteSwitch

<b>SWS Item</b>	<b>ECUC_BswM_00803 :</b>		
<b>Container Name</b>	BswMRteSwitch		
<b>Description</b>	This container defines a mode switch indication that the BswM provides to the SW-C that need to be notified about the mode switch. RTE_Switch is called when this action is configured.		
<b>Configuration Parameters</b>			

<b>SWS Item</b>	<b>ECUC_BswM_00952 :</b>		
<b>Name</b>	BswMRteSwitchPortRef		
<b>Description</b>	This is a reference to the BswMSwitchPort.		
<b>Multiplicity</b>	1		
<b>Type</b>	Reference to [ BswMSwitchPort ]		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	<b>ECUC_BswM_00896 :</b>		
<b>Name</b>	BswMSwitchedMode		
<b>Description</b>	This parameter contains the integer value that corresponds to a certain mode in a Mode Declaration Group.		
<b>Multiplicity</b>	1		
<b>Type</b>	Foreign reference to [ MODE-DECLARATION ]		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

<b>No Included Containers</b>			
-------------------------------	--	--	--

#### 10.2.74 BswMSchMSwitch

<b>SWS Item</b>	<b>ECUC_BswM_00899 :</b>
<b>Container Name</b>	BswMSchMSwitch
<b>Description</b>	This container defines a mode switch indication that the BswM provides to the SW-C that need to be notified about the mode switch. SchM_Switch is called when this action is configured.
<b>Configuration Parameters</b>	

<b>SWS Item</b>	<b>ECUC_BswM_01031 :</b>		
<b>Name</b>	BswMSchMModeDeclarationGroupRef		
<b>Description</b>	This is the reference to a ModeDeclarationGroup to define a ModeDeclarationGroupPrototype in the role BswModuleDescription.providedModeGroup.		
<b>Multiplicity</b>	0..1		
<b>Type</b>	Foreign reference to [ MODE-DECLARATION-GROUP ]		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	<b>ECUC_BswM_00901 :</b>		
<b>Name</b>	BswMSchMSwitchedMode		
<b>Description</b>	This parameter contains the integer value that corresponds to a certain mode in a Mode Declaration Group.		
<b>Multiplicity</b>	1		
<b>Type</b>	Foreign reference to [ MODE-DECLARATION ]		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

<b>No Included Containers</b>
-------------------------------

[SWS\_BswM\_00219] If a BswMSchMSwitch is configured, then the BswM shall create the BswModuleDescription.providedModeGroup aggregation in its BSWMD.] (SRS\_ModeMgm\_09182)

#### 10.2.75 BswMSdClientServiceModeRequest

<b>SWS Item</b>	<b>ECUC_BswM_00974 :</b>
<b>Container Name</b>	BswMSdClientServiceModeRequest
<b>Description</b>	This container includes all parameters related to the selection of an client

	service of Sd. Sd_ClientServiceSetState is called when this action is configured.
<b>Configuration Parameters</b>	

SWS Item	ECUC_BswM_01016 :		
Name	BswMSdClientServiceState		
Description	This parameter specifies if the corresponding client service shall be released or requested.		
Multiplicity	1		
Type	EcucEnumerationParamDef		
Range	BSWM_SD_CLIENT_SERVICE_RELEASED	Client service shall be released	
	BSWM_SD_CLIENT_SERVICE_REQUESTED	Client service shall be requested	
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	Post-build time	--	
Scope Dependency	scope: local		

<b>SWS Item</b>	<b>ECUC_BswM_01009 :</b>		
<b>Name</b>	BswMSdClientMethodsRef		
<b>Description</b>	This is a reference to a client service in the Sd module.		
<b>Multiplicity</b>	1		
<b>Type</b>	Symbolic name reference to [ SdClientService ]		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

#### No Included Containers

### 10.2.76 BswMSdConsumedEventGroupModeRequest

<b>SWS Item</b>	<b>ECUC_BswM_01004 :</b>
<b>Container Name</b>	BswMSdConsumedEventGroupModeRequest
<b>Description</b>	This container includes all parameters related to the selection of a consumed EventGroup of Sd. Sd_ConsumedEventGroupSetState is called when this action is configured.
<b>Configuration Parameters</b>	

<b>SWS Item</b>	<b>ECUC_BswM_01017 :</b>		
<b>Name</b>	BswMSdConsumedEventGroupState		
<b>Description</b>	This parameter specifies if the corresponding consumed event group shall be released or requested.		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucEnumerationParamDef		
<b>Range</b>	BSWM_SD_CONSUMED_EVENTGROUP_RELEASED	Event group shall be released.	

	BSWM_SD_CONSUMED_EVENTGROUP_REQUESTED	Event group shall be requested.
<b>Post-Build Variant Value</b>	false	
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X   VARIANT-PRE-COMPILE
	<b>Link time</b>	X   VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--
<b>Scope Dependency</b>	scope: local	

<b>SWS Item</b>	<b>ECUC_BswM_01010 :</b>		
<b>Name</b>	BswMSdConsumedEventGroupRef		
<b>Description</b>	This is a reference to an eventGroup that is defined within a client service in the Sd module.		
<b>Multiplicity</b>	1		
<b>Type</b>	Symbolic name reference to [ SdConsumedEventGroup ]		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

**No Included Containers**

### 10.2.77 BswMSdServerServiceModeRequest

<b>SWS Item</b>	<b>ECUC_BswM_01005 :</b>
<b>Container Name</b>	BswMSdServerServiceModeRequest
<b>Description</b>	This container includes all parameters related to the selection of a server service of Sd. Sd_ServerServiceSetState is called when this action is configured.
<b>Configuration Parameters</b>	

SWS Item	ECUC_BswM_01015 :		
Name	BswMSdServerServiceState		
Description	This parameter specifies if the corresponding server service shall be down or available.		
Multiplicity	1		
Type	EcucEnumerationParamDef		
Range	BSWM_SD_SERVER_SERVICE_AVAILABLE	Server service shall be available.	
	BSWM_SD_SERVER_SERVICE_DOWN	Server service shall be down.	
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	Post-build time	--	
Scope Dependency	/scope: local		

<b>SWS Item</b>	<b>ECUC_BswM_01007 :</b>		
<b>Name</b>	BswMSdServerMethodsRef		
<b>Description</b>	This is a reference to a server service in the Sd module.		
<b>Multiplicity</b>	1		
<b>Type</b>	Symbolic name reference to [ SdServerService ]		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

**No Included Containers**

### 10.2.78 BswMSwitchIPduMode

<b>SWS Item</b>	<b>ECUC_BswM_00958 :</b>
<b>Container Name</b>	BswMSwitchIPduMode
<b>Description</b>	This container includes all parameters related to the selection of the transmission mode an I-PDU to be sent by COM. Com_SwitchIpduTxMode is called when this action is configured.
<b>Configuration Parameters</b>	

<b>SWS Item</b>	<b>ECUC_BswM_00960 :</b>		
<b>Name</b>	BswMSwitchIPduModeValue		
<b>Description</b>	This parameter defines which transmission mode shall be selected during this call. This parameter corresponds to the parameter "Mode" of the function Com_SwitchIpduTxMode.		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucBooleanParamDef		
<b>Default value</b>	--		
<b>Post-Build Variant Value</b>	true		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME
	<b>Post-build time</b>	X	VARIANT-POST-BUILD
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	<b>ECUC_BswM_00959 :</b>		
<b>Name</b>	BswMSwitchIPduModeRef		
<b>Description</b>	This is a reference to an I-PDU for which the transmission mode shall be set. This reference corresponds to the parameter "Pduld" of the function Com_SwitchIpduTxMode.		
<b>Multiplicity</b>	1		
<b>Type</b>	Symbolic name reference to [ ComIPdu ]		
<b>Post-Build Variant Value</b>	true		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME
	<b>Post-build time</b>	X	VARIANT-POST-BUILD
<b>Scope / Dependency</b>	scope: local		

**No Included Containers**

### 10.2.79 BswMTimerControl

<b>SWS Item</b>	<b>ECUC_BswM_01059 :</b>
<b>Container Name</b>	BswMTimerControl
<b>Description</b>	This container includes all parameters for the action to start or to stop a timer.
<b>Configuration Parameters</b>	

<b>SWS Item</b>	<b>ECUC_BswM_01060 :</b>		
<b>Name</b>	BswMTimerAction		
<b>Description</b>	Specify the action for the timer. The timer can be started or stopped.		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucEnumerationParamDef		
<b>Range</b>	BSWM_TIMER_START	--	
	BSWM_TIMER_STOP	--	
<b>Default value</b>	BSWM_TIMER_START		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope Dependency</b>	/scope: local		

<b>SWS Item</b>	<b>ECUC_BswM_01061 :</b>		
<b>Name</b>	BswMTimerValue		
<b>Description</b>	Specify the timer value (in seconds) that is used when the timer is started.		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucFloatParamDef		
<b>Range</b>	]0 .. INF[		
<b>Default value</b>	--		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	<b>ECUC_BswM_01062 :</b>		
<b>Name</b>	BswMTimerRef		
<b>Description</b>	Specify the Timer for which the timer action shall be executed.		
<b>Multiplicity</b>	1		
<b>Type</b>	Reference to [ BswMTimer ]		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

No Included Containers

### 10.2.80 BswMTriggerIPduSend

<b>SWS Item</b>	<b>ECUC_BswM_00906 :</b>
<b>Container Name</b>	BswMTriggerIPduSend
<b>Description</b>	This container includes all parameters related to the triggering of an I-PDU to be sent by COM. Com_TriggerIPDUSend is called when this action is configured.
<b>Configuration Parameters</b>	

<b>SWS Item</b>	<b>ECUC_BswM_00907 :</b>		
<b>Name</b>	BswMTriggeredIPduRef		
<b>Description</b>	This is a reference to an I-PDU that should be triggered for transmission. This reference corresponds to the parameter "PduId" of the function Com_TriggerIPDUSend.		
<b>Multiplicity</b>	1..*		
<b>Type</b>	Symbolic name reference to [ ComIPdu ]		
<b>Post-Build Variant Multiplicity</b>	true		
<b>Post-Build Variant Value</b>	true		
<b>Multiplicity Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME
	<b>Post-build time</b>	X	VARIANT-POST-BUILD
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME
	<b>Post-build time</b>	X	VARIANT-POST-BUILD
<b>Scope / Dependency</b>	scope: local		

No Included Containers

### 10.2.81 BswMUserCallout

<b>SWS Item</b>	<b>ECUC_BswM_00834 :</b>
<b>Container Name</b>	BswMUserCallout
<b>Description</b>	This container includes all details needed for a user defined function call.
<b>Configuration Parameters</b>	

<b>SWS Item</b>	<b>ECUC_BswM_00843 :</b>																												
<b>Name</b>	BswMUserCalloutFunction																												
<b>Description</b>	<p>This parameter specifies the complete function call including all parameters. The parameters are specified during configuration time, and cannot be changed during run time. Any return values passed by the callout will be ignored.</p> <p>Example</p> <table><tr><td>Actions</td><td>to</td><td>initialize</td><td>other</td><td>can</td><td>BSW</td><td>modules</td></tr><tr><td>Action</td><td></td><td>to</td><td></td><td>call</td><td></td><td>Rte_Start()</td></tr><tr><td>Action</td><td></td><td>to</td><td></td><td>call</td><td></td><td>Rte_Stop()</td></tr><tr><td>Action</td><td></td><td>to</td><td></td><td>call</td><td></td><td>NvM_ReadAll()</td></tr></table>	Actions	to	initialize	other	can	BSW	modules	Action		to		call		Rte_Start()	Action		to		call		Rte_Stop()	Action		to		call		NvM_ReadAll()
Actions	to	initialize	other	can	BSW	modules																							
Action		to		call		Rte_Start()																							
Action		to		call		Rte_Stop()																							
Action		to		call		NvM_ReadAll()																							



	Action to call NvM_WriteAll()		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucStringParamDef		
<b>Default value</b>	--		
<b>maxLength</b>	--		
<b>minLength</b>	--		
<b>regularExpression</b>	--		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	--	
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

**No Included Containers**

## 10.2.82 BswMActionList

<b>SWS Item</b>	<b>ECUC_BswM_00809 :</b>		
<b>Container Name</b>	BswMActionList		
<b>Description</b>	Each instance of this container defines an action list that is invoked based on the BswM Rules. An action list contains a list of numbered action items to be processed. An action list can also include other action lists.		
<b>Post-Build Variant Multiplicity</b>	true		
<b>Multiplicity Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME
	<b>Post-build time</b>	X	VARIANT-POST-BUILD
<b>Configuration Parameters</b>			

<b>SWS Item</b>	<b>ECUC_BswM_00894 :</b>		
<b>Name</b>	BswMActionListExecution		
<b>Description</b>	This parameter controls if the corresponding action list shall be executed every time the rule is evaluated or only when the result of the evaluation changes. This parameter does not have an effect when this action list is executed within another action list.		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucEnumerationParamDef		
<b>Range</b>	BSWM_CONDITION	Action list shall be executed every time the rule is evaluated.	
	BSWM_TRIGGER	Action list shall be executed every time the result of the evaluation changes.	
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope Dependency</b>	/scope: local		

**Included Containers**

Container Name	Multiplicity	Scope / Dependency
----------------	--------------	--------------------

BswMActionListItem	1..*	This container defines an item in an action list.
--------------------	------	---

### 10.2.83 BswMActionListItem

<b>SWS Item</b>	<b>ECUC_BswM_00823 :</b>		
<b>Container Name</b>	BswMActionListItem		
<b>Description</b>	This container defines an item in an action list.		
<b>Post-Build Variant Multiplicity</b>	true		
<b>Multiplicity Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME
	<b>Post-build time</b>	X	VARIANT-POST-BUILD
<b>Configuration Parameters</b>			

<b>SWS Item</b>	<b>ECUC_BswM_00902 :</b>		
<b>Name</b>	BswMAbortOnFail		
<b>Description</b>	This parameter defines if the execution of the action list shall be aborted if this specific action returns E_NOT_OK. Note that this is only applicable for actions that have E_NOT_OK as a possible return value.		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucBooleanParamDef		
<b>Default value</b>	false		
<b>Post-Build Variant Value</b>	true		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME
	<b>Post-build time</b>	X	VARIANT-POST-BUILD
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	<b>ECUC_BswM_00824 :</b>		
<b>Name</b>	BswMActionListItemIndex		
<b>Description</b>	This parameter defines the index of the action in the action list. It is used to define in which order the actions shall be performed.		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucIntegerParamDef		
<b>Range</b>	0 .. 255		
<b>Default value</b>	--		
<b>Post-Build Variant Value</b>	true		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME
	<b>Post-build time</b>	X	VARIANT-POST-BUILD
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	<b>ECUC_BswM_01050 :</b>		
<b>Name</b>	BswMReportFailRuntimeErrorId		
<b>Description</b>	If this parameter is configured, and this specific action returns E_NOT_OK, the BswM will report a Det Runtime Error. The ErrorId reported in the Runtime Error is given by the value configured in this parameter.		
<b>Multiplicity</b>	0..1		
<b>Type</b>	EcucIntegerParamDef		
<b>Range</b>	128 .. 255		
<b>Default value</b>	128		
<b>Post-Build Variant</b>	true		

<b>Multiplicity</b>			
<b>Post-Build Variant Value</b>	true		
<b>Multiplicity Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME
	<b>Post-build time</b>	X	VARIANT-POST-BUILD
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME
	<b>Post-build time</b>	X	VARIANT-POST-BUILD
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	<b>ECUC_BswM_00825 :</b>		
<b>Name</b>	BswMActionListItemRef		
<b>Description</b>	The action item can either be an atomic action or a reference to another action list or rule.		
<b>Multiplicity</b>	1		
<b>Type</b>	Choice reference to [ BswMAction , BswMActionList , BswMRule ]		
<b>Post-Build Variant Value</b>	true		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME
	<b>Post-build time</b>	X	VARIANT-POST-BUILD
<b>Scope / Dependency</b>	scope: local		

No Included Containers

## 10.2.84 BswMRteModeRequestPort

<b>SWS Item</b>	<b>ECUC_BswM_01022 :</b>		
<b>Container Name</b>	BswMRteModeRequestPort		
<b>Description</b>	This container defines a mode request port which the BswM may utilize to send a mode request to a SW-C which is acting as a mode-manager. If this container is referenced by a BswMRteModeRequest, the BswM shall create a corresponding PPort in its service description.		
<b>Post-Build Variant Multiplicity</b>	false		
<b>Multiplicity Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE, VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Link time</b>	--	
	<b>Post-build time</b>	--	
<b>Configuration Parameters</b>			

<b>SWS Item</b>	<b>ECUC_BswM_01025 :</b>		
<b>Name</b>	BswMRteModeRequestPortInterfaceRef		
<b>Description</b>	This is an instance reference to the variable data prototype used for the mode request.		
<b>Multiplicity</b>	0..1		
<b>Type</b>	Instance reference to [ VARIABLE-DATA-PROTOTYPE context: SW-COMPONENT-PROTOTYPE*PORT-PROTOTYPE ]		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	--	
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

	dependency: BswMRteModeRequestVariableDataPrototypeSRRef == NULL
--	--

<b>SWS Item</b>	<b>ECUC BswM_01057 :</b>		
<b>Name</b>	BswMRteModeRequestVariableDataPrototypeSRRef		
<b>Description</b>	This is a foreign reference to a VariableDataPrototype used for the mode request.		
<b>Multiplicity</b>	0..1		
<b>Type</b>	Foreign reference to [ VARIABLE-DATA-PROTOTYPE ]		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	--	
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local dependency: BswMRteModeRequestPortInterfaceRef == NULL		

**No Included Containers**

### 10.2.85 BswMSwitchPort

<b>SWS Item</b>	<b>ECUC_BswM_00950 :</b>		
<b>Container Name</b>	BswMSwitchPort		
<b>Description</b>	This container includes a reference to mode switch interface which the BswM must instantiate for the creation of a PPortPrototype in its SWCD.		
<b>Post-Build Variant Multiplicity</b>	false		
<b>Multiplicity Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE, VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Link time</b>	--	
	<b>Post-build time</b>	--	
<b>Configuration Parameters</b>			

<b>SWS Item</b>	<b>ECUC_BswM_00951 :</b>		
<b>Name</b>	BswMModeSwitchInterfaceRef		
<b>Description</b>	Reference to the ModeSwitchInterface of this BswMModeSwitchPort.		
<b>Multiplicity</b>	1		
<b>Type</b>	Foreign reference to [ MODE-SWITCH-INTERFACE ]		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

**No Included Containers**

## 10.2.86 BswMGeneral

<b>SWS Item</b>	<b>ECUC_BswM_00800 :</b>
<b>Container Name</b>	BswMGeneral
<b>Description</b>	General configuration parameters of the Basic SW Mode Manager.
<b>Configuration Parameters</b>	

<b>SWS Item</b>	<b>ECUC_BswM_00938 :</b>		
<b>Name</b>	BswMCanSMEnabled		
<b>Description</b>	enable/disable CanSM module related BswM API: true: Enabled false: Disabled		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucBooleanParamDef		
<b>Default value</b>	false		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	--	
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	<b>ECUC_BswM_01029 :</b>		
<b>Name</b>	BswMCanSMIcomEnabled		
<b>Description</b>	enable/disable CanSM Icom related BswM API: true: Enabled false: Disabled		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucBooleanParamDef		
<b>Default value</b>	false		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	--	
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	<b>ECUC_BswM_00939 :</b>		
<b>Name</b>	BswMComMEnabled		
<b>Description</b>	enable/disable ComM module related BswM API: true: Enabled false: Disabled		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucBooleanParamDef		
<b>Default value</b>	false		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	--	
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	<b>ECUC_BswM_00940 :</b>		
<b>Name</b>	BswMDcmEnabled		
<b>Description</b>	enable/disable Dcm module related BswM API: true: Enabled false: Disabled		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucBooleanParamDef		

Default value	false		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

<b>SWS Item</b>	<b>ECUC_BswM_00811 :</b>		
<b>Name</b>	BswMDevErrorDetect		
<b>Description</b>	Switches the development error detection and notification on or off. <ul style="list-style-type: none"> <li>true: detection and notification is enabled.</li> <li>false: detection and notification is disabled.</li> </ul>		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucBooleanParamDef		
<b>Default value</b>	false		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	--	
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	<b>ECUC_BswM_00941 :</b>		
<b>Name</b>	BswMEcuMEnabled		
<b>Description</b>	enable/disable EcuM module related BswM API: <div style="float: right;">Enabled</div> true: false: Disabled		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucBooleanParamDef		
<b>Default value</b>	false		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	--	
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	<b>ECUC_BswM_00942 :</b>		
<b>Name</b>	BswMEthSMEnabled		
<b>Description</b>	enable/disable EthSM module related BswM API: <div style="float: right;">Enabled</div> true: false: Disabled		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucBooleanParamDef		
<b>Default value</b>	false		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	--	
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	<b>ECUC_BswM_00943 :</b>		
<b>Name</b>	BswMFrSMEnabled		
<b>Description</b>	enable/disable FrSM module related BswM API: <div style="float: right;">Enabled</div> true: false: Disabled		

<b>Multiplicity</b>	1		
<b>Type</b>	EcucBooleanParamDef		
<b>Default value</b>	false		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	--	
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	<b>ECUC_BswM_00949 :</b>		
<b>Name</b>	BswMGenericRequestEnabled		
<b>Description</b>	enable/disable Generic Request related BswM API: true: Enabled false: Disabled		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucBooleanParamDef		
<b>Default value</b>	false		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	--	
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	<b>ECUC_BswM_00987 :</b>		
<b>Name</b>	BswMJ1939DcmEnabled		
<b>Description</b>	Enable/disable J1939Dcm module related BswM API: true: Enabled false: Disabled		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucBooleanParamDef		
<b>Default value</b>	false		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	--	
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	<b>ECUC_BswM_00965 :</b>		
<b>Name</b>	BswMJ1939NmEnabled		
<b>Description</b>	Enable/disable J1939Nm module related BswM API. true: Enabled false: Disabled		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucBooleanParamDef		
<b>Default value</b>	false		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	--	
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	<b>ECUC_BswM_00944 :</b>		
<b>Name</b>	BswMLinSMEnabled		
<b>Description</b>	enable/disable LinSM module related BswM API: true: Enabled false: Disabled		



<b>Multiplicity</b>	1		
<b>Type</b>	EcucBooleanParamDef		
<b>Default value</b>	false		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	--	
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	<b>ECUC_BswM_00945 :</b>		
<b>Name</b>	BswMLinTPEnabled		
<b>Description</b>	enable/disable LinTP module related BswM API: true: Enabled false: Disabled		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucBooleanParamDef		
<b>Default value</b>	false		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	--	
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	<b>ECUC_BswM_00813 :</b>		
<b>Name</b>	BswMMainFunctionPeriod		
<b>Description</b>	The cycle time of the periodic main function of BswM. Defined in seconds .		
<b>Multiplicity</b>	0..1		
<b>Type</b>	EcucFloatParamDef		
<b>Range</b>	]0 .. INF[		
<b>Default value</b>	--		
<b>Post-Build Variant Value</b>	false		
<b>Multiplicity Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	<b>ECUC_BswM_00946 :</b>		
<b>Name</b>	BswMNvMEnabled		
<b>Description</b>	enable/disable NvM module related BswM API: true: Enabled false: Disabled		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucBooleanParamDef		
<b>Default value</b>	false		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	--	
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	<b>ECUC_BswM_00947 :</b>		
<b>Name</b>	BswMSchMEnabled		
<b>Description</b>	enable/disable SchM module related BswM API: true: false: Disabled		Enabled
<b>Multiplicity</b>	1		
<b>Type</b>	EcucBooleanParamDef		
<b>Default value</b>	false		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	--	
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	<b>ECUC_BswM_01047 :</b>		
<b>Name</b>	BswMSdEnabled		
<b>Description</b>	enable/disable Sd module related BswM API. true: false: Disabled		Enabled
<b>Multiplicity</b>	1		
<b>Type</b>	EcucBooleanParamDef		
<b>Default value</b>	false		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	--	
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	<b>ECUC_BswM_00812 :</b>		
<b>Name</b>	BswMVersionInfoApi		
<b>Description</b>	Switches the possibility to read the version information with the service BswM_GetVersionInfo(). true: false: Disabled		Enabled
<b>Multiplicity</b>	1		
<b>Type</b>	EcucBooleanParamDef		
<b>Default value</b>	false		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	--	
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	<b>ECUC_BswM_00948 :</b>		
<b>Name</b>	BswMWdgMEnabled		
<b>Description</b>	enable/disable WdgM module related BswM API: true: false: Disabled		Enabled
<b>Multiplicity</b>	1		
<b>Type</b>	EcucBooleanParamDef		
<b>Default value</b>	false		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	--	
	<b>Post-build time</b>	--	

<b>Scope / Dependency</b>	scope: local
---------------------------	--------------

<b>Included Containers</b>		
<b>Container Name</b>	<b>Multiplicity</b>	<b>Scope / Dependency</b>
BswMUserIncludeFiles	0..1	Collection of header file names which shall be included by the BswM.

### 10.2.87 BswMUserIncludeFiles

<b>SWS Item</b>	<b>ECUC_BswM_00954 :</b>
<b>Container Name</b>	BswMUserIncludeFiles
<b>Description</b>	Collection of header file names which shall be included by the BswM.
<b>Configuration Parameters</b>	

<b>SWS Item</b>	<b>ECUC_BswM_00955 :</b>		
<b>Name</b>	BswMUserIncludeFile		
<b>Description</b>	<p>Header file name which shall be included by the BswM.</p> <p>The value of this parameter shall be used as h-char-sequence or q-char-sequence according to ISO C90 section 6.10.2 "source file inclusion".</p> <p>The parameter value MUST NOT represent a path, since ISO C90 does not specify how such a path is treated (i.e., this is implementation defined (and additionally depends on the operating system and the underlying file system)).</p>		
<b>Multiplicity</b>	1..*		
<b>Type</b>	EcucStringParamDef		
<b>Default value</b>	--		
<b>maxLength</b>	--		
<b>minLength</b>	--		
<b>regularExpression</b>	--		
<b>Post-Build Variant Multiplicity</b>	false		
<b>Post-Build Variant Value</b>	false		
<b>Multiplicity Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	--	
	<b>Post-build time</b>	--	
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	--	
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

**No Included Containers**

## 10.3 Published Information

For details refer to the chapter 10.3 “Published Information” in *SWS\_BSWGeneral*.

## 11 Not applicable requirements

**[SWS\_BswM\_09999]** [ These requirements are not applicable to this specification.  
] (SRS\_BSW\_00405, SRS\_BSW\_00170, SRS\_BSW\_00399, SRS\_BSW\_00400,  
SRS\_BSW\_00336, SRS\_BSW\_00339, SRS\_BSW\_00409)