

| | |
|-----------------------------------|--|
| Document Title | Specification of Module Vehicle-2-X Facilities |
| Document Owner | AUTOSAR |
| Document Responsibility | AUTOSAR |
| Document Identification No | 795 |
| Document Classification | Standard |

| | |
|---------------------------------|------------------|
| Document Status | Final |
| Part of AUTOSAR Standard | Classic Platform |
| Part of Standard Release | 4.3.0 |

| Document Change History | | | |
|-------------------------|---------|----------------------------------|---|
| Date | Release | Changed by | Change Description |
| 2016-11-30 | 4.3.0 | AUTOSAR Release Management | <ul style="list-style-type: none">Initial Release |

Disclaimer

This specification and the material contained in it, as released by AUTOSAR, is for the purpose of information only. AUTOSAR and the companies that have contributed to it shall not be liable for any use of the specification.

The material contained in this specification is protected by copyright and other types of Intellectual Property Rights. The commercial exploitation of the material contained in this specification requires a license to such Intellectual Property Rights.

This specification may be utilized or reproduced without any modification, in any form or by any means, for informational purposes only. For any other purpose, no part of the specification may be utilized or reproduced, in any form or by any means, without permission in writing from the publisher.

The AUTOSAR specifications have been developed for automotive applications only. They have neither been developed, nor tested for non-automotive applications.

The word AUTOSAR and the AUTOSAR logo are registered trademarks.

Advice for users

AUTOSAR specifications may contain exemplary items (exemplary reference models, "use cases", and/or references to exemplary technical solutions, devices, processes or software).

Any such exemplary items are contained in the specifications for illustration purposes only, and they themselves are not part of the AUTOSAR Standard. Neither their presence in such specifications, nor any later documentation of AUTOSAR conformance of products actually implementing such exemplary items, imply that intellectual property rights covering such exemplary items are licensed under the same rules as applicable to the AUTOSAR Standard.

Table of Contents

| | | |
|-------|---|----|
| 1 | Introduction and functional overview | 5 |
| 1.1 | Architectural overview | 5 |
| 1.2 | Functional overview | 6 |
| 1.2.1 | Cooperative Awareness (CA)..... | 6 |
| 1.2.2 | Decentralized Environmental Notification (DEN)..... | 7 |
| 1.2.3 | Vehicle Data Provider (VDP)..... | 8 |
| 1.2.4 | Local Dynamic Map (LDM) | 8 |
| 2 | Acronyms and abbreviations | 9 |
| 3 | Related documentation..... | 10 |
| 3.1 | Input documents | 10 |
| 3.2 | Related standards and norms | 10 |
| 3.3 | Related specification | 11 |
| 4 | Constraints and assumptions | 12 |
| 4.1 | Limitations | 12 |
| 4.2 | Applicability to car domains | 12 |
| 5 | Dependencies to other modules..... | 13 |
| 5.3 | V2x Vehicle Data Provider..... | 13 |
| 5.4 | V2x Proxy | 13 |
| 5.5 | V2x Applications..... | 13 |
| 5.6 | AUTOSAR V2xBtp..... | 14 |
| 5.8 | File structure..... | 14 |
| 6 | Requirements traceability | 15 |
| 7 | Functional specification | 16 |
| 7.1 | Startup behavior | 16 |
| 7.2 | General Format Specification | 16 |
| 7.3 | CA Functional Specification..... | 16 |
| 7.3.1 | CA Initialization, Activation and Deactivation | 16 |
| 7.3.2 | CAM Generation, Sending and Receiving, Frequency Management.... | 17 |
| 7.3.3 | CAM Generation Frequency Management for RSU ITS-Ss..... | 18 |
| 7.3.4 | CAM Time Requirement | 18 |
| 7.3.5 | CAM Format Specification | 19 |
| 7.4 | DEN Functional Specification | 20 |
| 7.4.1 | DEN Initialization..... | 20 |
| 7.4.2 | DENM Transmission Management | 20 |
| 7.4.3 | DENM Reception Management | 20 |
| 7.4.4 | DENM Repetition | 20 |
| 7.4.5 | DENM Keep Alive Forwarding (KAF) | 21 |
| 7.4.6 | DENM Format Specification..... | 21 |
| 7.5 | Path History..... | 23 |
| 7.6 | Error classification | 23 |
| 7.6.1 | Development Errors | 23 |
| 7.6.2 | Runtime Errors..... | 24 |

| | | |
|--------|---|-----|
| 7.6.3 | Transient Faults | 24 |
| 7.6.4 | Production Errors | 24 |
| 7.6.5 | Extended Production Errors | 24 |
| 8 | API specification | 25 |
| 8.1 | Imported types | 25 |
| 8.2 | Type definitions | 25 |
| 8.2.1 | V2xFac_RxParamsType | 25 |
| 8.3 | Function definitions | 26 |
| 8.3.1 | V2xFac_Init | 26 |
| 8.3.2 | V2xFac_GetVersionInfo | 26 |
| 8.3.3 | V2xFac_V2xM_PreparePseudonymChange | 27 |
| 8.3.4 | V2xFac_V2xM_CommitPseudonymChange | 28 |
| 8.3.5 | V2xFac_V2xM_AbortPseudonymChange | 28 |
| 8.3.6 | V2xFac_V2xM_SetTGenCamDcc | 29 |
| 8.3.7 | V2xFac_V2xM_SetCaBsOperation | 29 |
| 8.4 | Call-back notifications | 30 |
| 8.4.1 | V2xFac_TxConfirmation | 30 |
| 8.4.2 | V2xFac_RxIndication | 31 |
| 8.5 | Scheduled functions | 32 |
| 8.5.1 | V2xFac_CaBs_MainFunction | 32 |
| 8.5.2 | V2xFac_DenBs_MainFunction | 32 |
| 8.6 | Expected Interfaces | 32 |
| 8.6.1 | Mandatory Interfaces | 32 |
| 8.6.2 | Optional Interfaces | 33 |
| 8.7 | Service Interfaces | 33 |
| 8.7.1 | Sender-Receiver-Interfaces | 33 |
| 8.7.2 | Client-Server-Interfaces | 34 |
| 8.7.3 | Implementation Data Types | 39 |
| 8.7.4 | Ports | 96 |
| 9 | Sequence diagrams | 98 |
| 9.1 | CAM Generation and Transmission | 98 |
| 9.2 | CAM Reception | 98 |
| 9.3 | DENM Generation and Transmission | 99 |
| 9.4 | DENM Reception | 100 |
| 10 | Configuration specification | 101 |
| 10.1 | Containers and configuration parameters | 101 |
| 10.1.1 | Variants | 101 |
| 10.1.2 | V2xFac | 101 |
| 10.1.3 | V2xFacGeneral | 101 |
| 11 | Not applicable requirements | 104 |

1 Introduction and functional overview


This document specifies the functionality, API and the configuration of the AUTOSAR Basic Software module Vehicle-2-X Facilities (V2xFac). The Vehicle-2-X Facilities layer together with the Vehicle-2-X Basic Transport (V2xBtp), the Vehicle-2-X GeoNetworking (V2xGn), Vehicle-2-X Management (V2xM) and the communication driver layer forms the V2X stack within the AUTOSAR architecture.

The V2xFac module is designed to be hardware independent.

The V2xFac module is dependent on services of V2X entities in the application layer and on lower V2xBtp module.

1.1 Architectural overview

Positioning of the V2xFac module within the AUTOSAR BSW and the Layered Software architecture is shown in below.

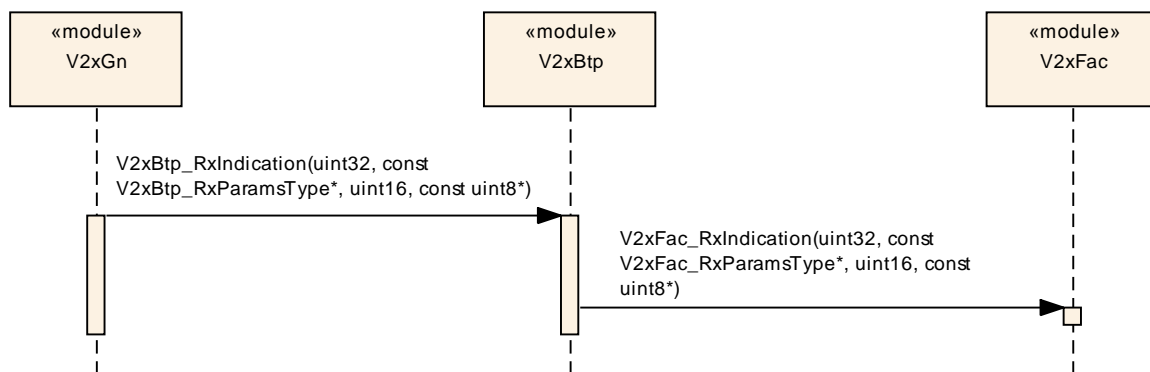

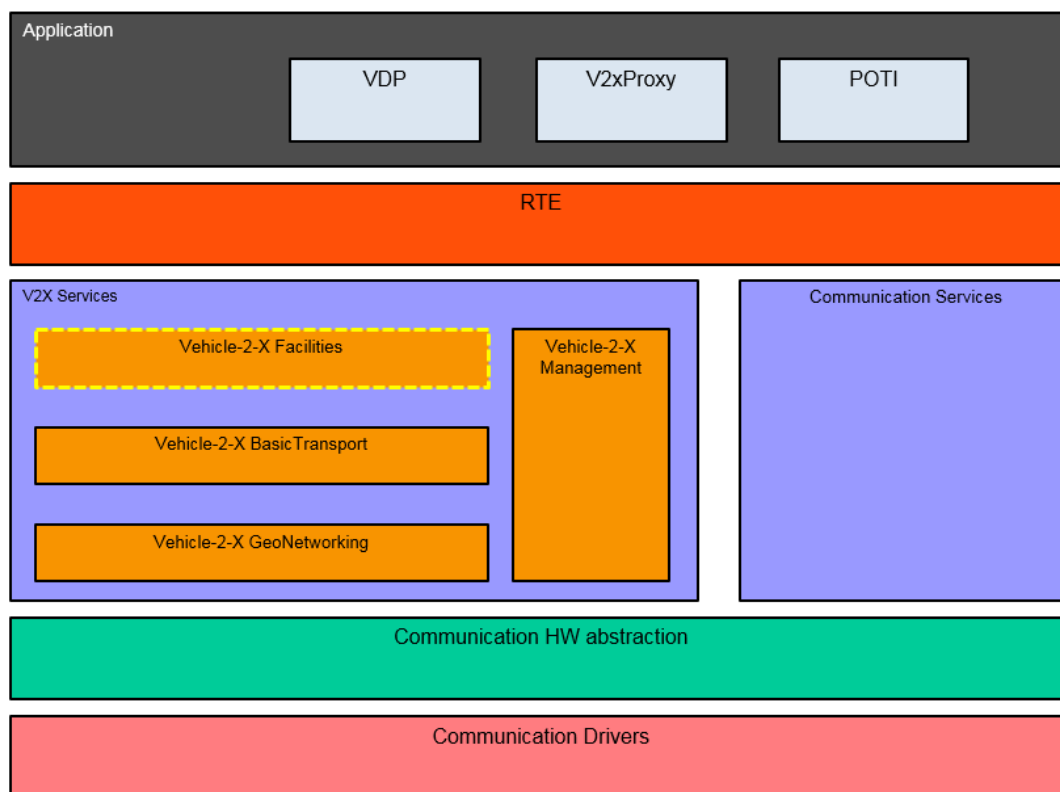


Figure 1 – AUTOSAR BSW software architecture - V2xFac scope

The V2xFac module supports common message management for data exchange between V2X applications.

It provides the basic services (BS) Cooperative Awareness (CA) and Decentralized Environmental Notification (DEN).

1.2 Functional overview

The V2xFac module implements the basic services CA and DEN.

1.2.1 Cooperative Awareness (CA)

1.2.1.1 CA basic service in the AUTOSAR architecture

The CA basic service is a facilities layer entity that operates the CAM protocol. It provides two services: sending and receiving of CAMs.

The CA basic service generates and sends CAMs to other ITS-Ss or it receives CAMs from ITS-Ss and provides them to the V2x-Applications in the application layer (see [10] chapter 4).

The CA basic service uses the services provided by the protocol entities of the lower layers of the V2X stack to disseminate the CAM.

Upon receiving a CAM, the CA basic service makes the content of the CAM available to the V2X Applications.

Received CAMs are given to the upper Application layer via their standardized AUTOSAR service interface V2xApplRxIndicationCam.

It may interface with the AUTOSAR application layer in order to collect relevant information for CAM generation (Vehicle Data Provider - VDP) and to forward the received CAM content for further processing (V2x Receiver).

1.2.1.2 CA basic service functional architecture

“The CA basic service is part of the Application Support domain of the Facilities Layer according to ETSI TS 102 894-1 [12] shows the functional block diagram with the functional blocks of the CA basic service and interfaces to other facilities and layers.”

For sending and receiving CAMs, the CA basic service part of the V2xFac shall provide the following sub-functions

- Encode CAM
- Decode CAM
- CAM transmission management
- CAM reception management

For details see [10] chapter 5.2.

1.2.2 Decentralized Environmental Notification (DEN)

1.2.2.1 DEN basic service in the AUTOSAR architecture

The DEN basic service is a facilities layer entity that operates the DENM protocol. It provides services to entities at the AUTOSAR application layer.(refer to [11] chapter 4.2)

The DEN basic service generates and sends DENMs to other ITS-Ss or it receives DENMs from other ITS-Ss and provides them to the V2x-Applications in the application layer (see [11] chapter 5 and 6).

Upon receiving a DENM, the DEN basic service makes the content of the DENM available to the V2X Applications.

1.2.2.2 DEN basic service functional architecture

For sending and receiving DENMs, the DEN basic service shall provide the following sub-functions

- Encode DEN
- Decode DEN
- DEN transmission management
- DEN reception management
- Keep-Alive forwarding

For Details see [11] chapter 5.3. Position and Time management (POTI)

The POTI, as specified in ETSI TS 102 890-3 [14], provides the position of the ITS-S and time information.

Within the AUTOSAR architecture POTI service is a V2X Application within the Application layer and is not part of V2xFac.
For details See [11] chapter 5.1.

1.2.3 Vehicle Data Provider (VDP)

“The VDP is connected with the vehicle network and provides the vehicle status information.”

Within the AUTOSAR architecture VDP service is a V2X Application within the Application layer and is not part of V2xFac.

The VDP provides an interface to the lower layer (V2X Services).
The facilities basic services CA and DEN get vehicle relevant data from this interface.
The V2xM gets e.g. position and time information from this interface.

1.2.4 Local Dynamic Map (LDM)

The LDM as outlined in [15] is a database in the ITS-S, which may be updated with received CAM or DENM data.

V2x applications may retrieve information from the LDM for further processing.
Within the AUTOSAR architecture LDM service is a V2X Application within the Application layer and is not part of the V2xFac module.

For details see [15] chapter 5.1.

2 Acronyms and abbreviations

| Abbreviation / Acronym: | Description: |
|------------------------------------|--|
| DEM | Diagnostic Event Manager |
| DET | Default Error Tracer |
| API | Application Programming Interface |
| BS | Basic Service |
| BSW | Basic Software |
| BTP | Basic Transport Protocol |
| CA | Cooperative Awareness |
| CAM | Cooperative Awareness Message |
| DCC | Decentralized Congestion Control |
| DE | Data Element |
| DEN | Decentralized Environmental Notification |
| DENM | Decentralized Environmental Notification Messages |
| DF | Data Frame |
| EcuM | Electronic Control Unit Manager |
| ETSI | European Telecommunications Standards Institute |
| IF | Interface |
| ITS | Intelligent Transport System |
| ITS-S | ITS-Station |
| KAF | DENM Keep Alive Forwarding |
| LDM | Local Dynamic Map |
| POTI | Position and Time management |
| RSU | Road Side Unit |
| VDP | Vehicle Data Provider |
| VOD | Verification on Demand |
| V2X | Either vehicle to vehicle (V2V), or vehicle to infrastructure (V2I) and/or infrastructure to vehicle (I2V) |
| V2xM | Vehicle-2-X Management |
| V2xFac | Vehicle-2-X Facilities |
| V2xBtp | Vehicle-2-X Basic Transport |
| V2xGn | Vehicle-2-X Geo Networking |

3 Related documentation

3.1 Input documents

- [1] AUTOSAR Layered Software Architecture
AUTOSAR_EXP_LayeredSoftwareArchitecture.pdf
- [2] AUTOSAR General Requirements on Basic Software Modules
AUTOSAR_SRS_BSWGeneral.pdf
- [3] AUTOSAR General Specification for Basic Software Modules
AUTOSAR_SWS_BSWGeneral.pdf
- [4] Specification of Default Error Tracer
AUTOSAR_SWS_DefaultErrorTracer.pdf
- [5] Specification of ECU State Manager
AUTOSAR_SWS_ECUSTateManager.pdf
- [6] Specification of V2XBasicTransport
AUTOSAR_SWS_Vehicle-2-X BasicTransport.pdf
- [7] Specification of Module V2X Communication Stack Types
AUTOSAR_SWS_V2XComStackTypes.pdf

3.2 Related standards and norms

- [8] IEC 7498-1 The Basic Model, IEC Norm, 1994
- [9] Intelligent Transport Systems (ITS); Communications Architecture
ETSI EN 302 665 V1.1.1 (2010-09)
- [10] Intelligent Transport Systems (ITS); Vehicular Communications;
Basic Set of Applications;
Part 2: Specification of Cooperative Awareness Basic Service
ETSI EN 302 637-2 V1.3.2 (2014-11)
- [11] Intelligent Transport Systems (ITS); Vehicular Communications;
Basic Set of Applications;
Part 3: Specifications of Decentralized Environmental Notification Basic
Service
ETSI EN 302 637-3 V1.2.2 (2014-11)
- [12] Intelligent Transport Systems (ITS); Users and applications requirements;
Part 1: Facility layer structure, functional requirements and specifications
ETSI TS 102 894-1 V1.1.1 (2013-08)
- [13] Intelligent Transport Systems (ITS); Users and applications requirements;
Part 2: Applications and facilities layer common data dictionary
ETSI TS 102 894-2 V1.2.1 (2014-09)

- [14] Intelligent Transport System (ITS); Facilities layer function;
Part 3: Position and time facility specification"
ETSI TS 102 890-3
- [15] Intelligent Transport Systems (ITS); Vehicular Communications; Basic Set of
Applications; Local Dynamic Map (LDM)
ETSI EN 302 895 (V1.1.1) (2014-09)
- [16] Intelligent Transport Systems (ITS); OSI cross-layer topics;
Part 11: Interface between networking and transport layer and facilities layer
ETSI TS 102 723-11 V1.1.1 (2013-11)
- [17] Intelligent Transport Systems (ITS); Vehicular Communications;
GeoNetworking;
Part 5: Transport Protocols;
Sub-part 1: Basic Transport Protocol
ETSI EN 302 636-5-1 V1.2.1 (2014-08)
- [18] Intelligent Transport Systems (ITS); Vehicular Communications;
GeoNetworking Part 4: Geographical addressing and forwarding for point-to-
point and point-to-multipoint communications; Sub-part 1: Media-Independent
Functionality
ETSI EN 302 636-4-1 V1.2.1 (2014-07)
- [19] C2C-CC BSP Requirement
C2CCC_RS_2037_BSP_Requirements.docx

3.3 Related specification

AUTOSAR provides a General Specification on Basic Software (SWS BSW General) [3] which is also valid for V2xFac.

Thus, the specification SWS BSW General [3] shall be considered as additional and required specification for V2xFac.

4 Constraints and assumptions

4.1 Limitations

- Wireless Communication supports IEEE 802.11p only. Other 802.11 standards (e.g. for infrastructure networks and integration with TCP/IP) can be extended in future releases of the AUTOSAR standard.
- The V2X modules follow the guidance regarding the Day-1 scenarios defined by the Basic System Standards Profile from Car-2-Car-Consortium.
- AUTOSAR R4.3.0 only focuses on the European version of car-to-car communication as defined by ETSI. Extension to other regions are planned for future releases of the AUTOSAR standard.

4.2 Applicability to car domains

This specification is applicable to all car domains.

5 Dependencies to other modules

This section describes the relations of the V2xFac module to other modules within the AUTOSAR basic software architecture. It outlines the modules that are required or optional for the realization of the V2xFac module and the V2xFac services that these modules use.

5.1 AUTOSAR DET (Default Error Tracer)

In development mode, the V2xFac module reports errors through the `Det_ReportError` function of the DET Module [4].

5.2 AUTOSAR EcuM (Ecu State Manager)

The EcuM [5] initializes the V2xFac module by calling `V2xFac_Init` specified in 8.3.1.

5.3 V2x Vehicle Data Provider

The V2xFac module retrieves vehicle relevant data from the VDP application by using the Sender-Receiver-Interface `V2xFacVdp` (see [SWS_V2xFac_00094]).

5.4 V2x Proxy

The V2x Proxy is an Application that listens to every CAM and DENM via the Sender-Receiver-Interfaces `V2xApplRxIndicationCam` and `V2xApplRxIndicationDenm` and transmits it to one or more ECU's via in-vehicle networks. The transmission via the in-vehicle network is implementation specific.

5.5 V2x Applications

The V2xFac module delivers received DENM data to the V2x Applications by using the Sender-Receiver-Interface `V2xApplRxIndicationDenm` (see [SWS_V2xFac_00100]).

The V2xFac module delivers received CAM data to the V2x Applications by using the Sender-Receiver-Interface `V2xApplRxIndicationCam` (see [SWS_V2xFac_00100]).

The V2xFac module provides the Client-Server-Interface `V2xFacDenBs` for using the DEN basic service. The operations `TriggerEvent`, `UpdateEvent` or `TerminateEvent` are provided.

5.6 AUTOSAR V2xBtp


The V2xFac module assumes a transmit request primitive (V2xBtp_Transmit [6], see [SWS_V2xFac_00092]) to be provided by the V2xBtp module.

5.7 AUTOSAR V2xM

The V2xFac module assumes a request primitive (see [SWS_V2xFac_00092]) to be provided by the Vehicle-2-X Management (V2xM) module.

5.8 File structure

5.8.1 Header file structure

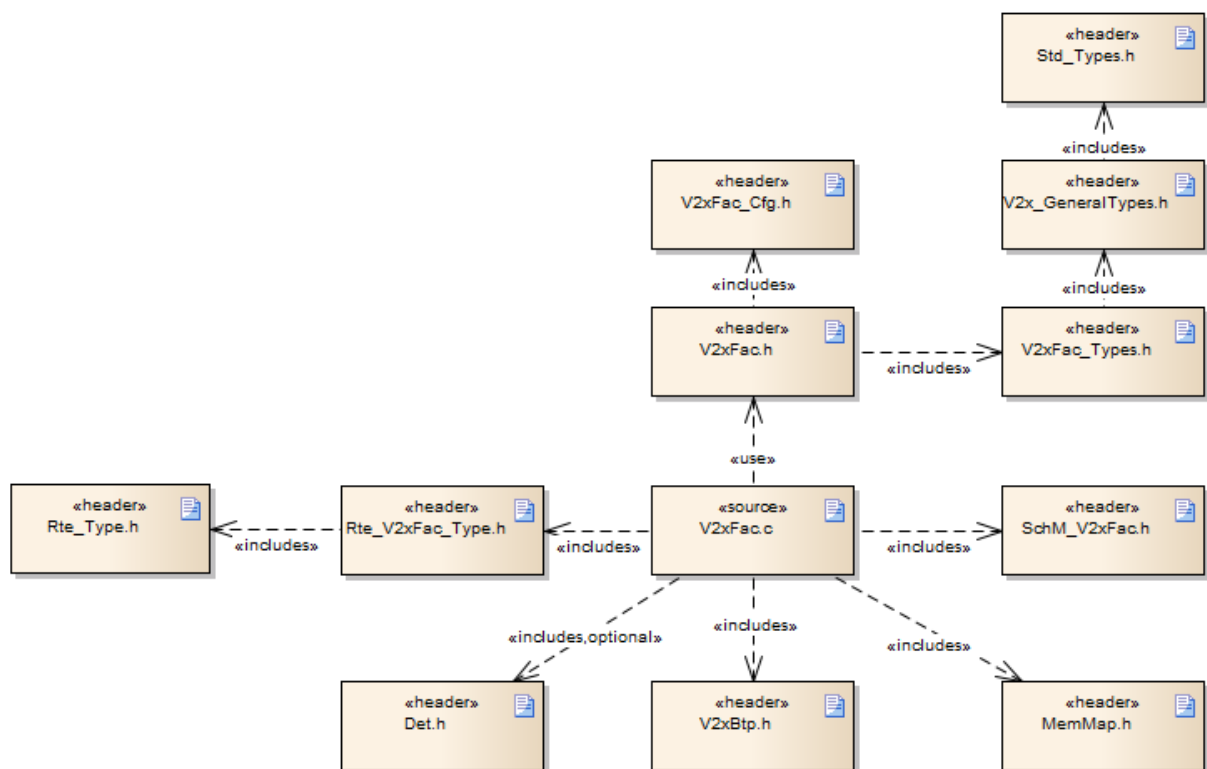

[SWS_V2xFac_00121] [Generic type definitions of the V2xFac module which are described in section 8.2 shall be located in the header file V2xFac_Types.h.] ()

[SWS_V2xFac_00122] [The V2xFac module shall include V2x_GeneralTypes.h] (SRS_BSW_00301, SRS_BSW_00456)

6 Requirements traceability

| Requirement | Description | Satisfied by |
|---------------|--|--|
| SRS_BSW_00301 | All AUTOSAR Basic Software Modules shall only import the necessary information | SWS_V2xFac_00122 |
| SRS_BSW_00345 | BSW Modules shall support pre-compile configuration | SWS_V2xFac_00238 |
| SRS_BSW_00456 | - A Header file shall be defined in order to harmonize BSW Modules | SWS_V2xFac_00122 |
| SRS_V2X_00010 | The implementation of the V2X system shall follow additional guidance given by C2C-CC requirements | SWS_V2xFac_20168, SWS_V2xFac_20185, SWS_V2xFac_20215, SWS_V2xFac_20256, SWS_V2xFac_20257, SWS_V2xFac_20313 |
| SRS_V2X_00214 | The V2X system shall allow applications to deactivate transmission of CAMs | SWS_V2xFac_00006 |
| SRS_V2X_00259 | The V2X system shall manage the life time of all DENM packets | SWS_V2xFac_20259 |
| SRS_V2X_00291 | The V2X system shall only send messages with valid position and time | SWS_V2xFac_20215, SWS_V2xFac_20291 |
| SRS_V2X_00301 | The V2X system's Facility Layer shall handle DENM repetition | SWS_V2xFac_00029 |
| SRS_V2X_00318 | The V2X system's Facility Layer shall generate traces and path histories | SWS_V2xFac_20318 |
| SRS_V2X_00693 | The V2X system shall provide functionality for generating traces and path histories | SWS_V2xFac_20285, SWS_V2xFac_20286, SWS_V2xFac_20287, SWS_V2xFac_20288, SWS_V2xFac_20289, SWS_V2xFac_20302, SWS_V2xFac_20303, SWS_V2xFac_20304, SWS_V2xFac_20305, SWS_V2xFac_20306, SWS_V2xFac_20307, SWS_V2xFac_20308 |
| SRS_V2X_00711 | The V2X system's CA basic service shall be compliant to ETSI Specification of Cooperative Awareness Basic Service | SWS_V2xFac_00231, SWS_V2xFac_20292, SWS_V2xFac_20294, SWS_V2xFac_20295, SWS_V2xFac_20296, SWS_V2xFac_20297 |
| SRS_V2X_00741 | The V2X system's DEN basic service shall be compliant to ETSI Specifications of Decentralized Environmental Notification Basic Service | SWS_V2xFac_00232 |

7 Functional specification

The V2xFac module operates the basic services Cooperative Awareness (CA) and Decentralized Environmental Notification (DEN).

[SWS_V2xFac_00231] [The V2xFac module shall implement the CA Basic Service as specified in [10] unless specified otherwise in this document] (SRS_V2X_00711)

[SWS_V2xFac_00232] [The V2xFac module shall implement the DEN Basic Service as specified in [11] unless specified otherwise in this document] (SRS_V2X_00741)

7.1 Startup behavior

[SWS_V2xFac_00001] [

The function V2xFac_Init (refer to chapter 8.3.2) of the V2xFac shall initialize the internal states of the V2xFac module.

] ()

Note: The function V2xFac_Init shall not be called before the Vehicle-2-X Management (V2xM) is initialized by the Electronic Control Unit Manager (EcuM).

[SWS_V2xFac_00004] [

The function V2xFac_Init shall initialize the basic services CA and DEN.

] ()

7.2 General Format Specification

[SWS_V2xFac_20313] [

The data elements which constitute the content of the CAM and DENM shall be compliant to [13]] (SRS_V2X_00010)

7.3 CA Functional Specification

For details see [10] chapter 6.1.

7.3.1 CA Initialization, Activation and Deactivation

[SWS_V2xFac_00116] [

The path history shall be cleared when the sending functionality is enabled via the V2xFac_V2xM_SetCaBsOperation API.] ()

[SWS_V2xFac_00006] [

CA basic service initialization shall enable the transmission of CAM messages]
(SRS_V2X_00214)

[SWS_V2xFac_00008] [

The function V2xFac_Init shall initialize the parameter T_GenCam_DCC [10] needed for the frequency management for CAMs according to T_GenCamMax [10].

For details see [10] chapter 5.3.5

] ()

[SWS_V2xFac_00009] [

The function V2xFac_Init shall initialize the parameter T_GenCam [10] to the default value T_GenCamMax.

For details see [10] chapter 6.1.3

] ()

[SWS_V2xFac_00010] [

The function V2xFac_Init shall initialize the parameter N_GenCam [10] to the default value 0.

] ()

[SWS_V2xFac_00011] [

The function V2xFac_Init shall initialize the parameter T_CheckCamGen [10] to the default value equal to the configuration parameter T_GenCamMax [10].

For details see [10] chapter 6.1.3

] ()

7.3.2 CAM Generation, Sending and Receiving, Frequency Management**[SWS_V2xFac_00014] [**

The CA basic service shall periodically generate CAMs controlled by a CAM frequency management (For details see [10] chapter 6.1.3.)

] ()

[SWS_V2xFac_00015] [

The generated CAMs shall be transmitted by the V2xBtp using the API function V2xBtp_Transmit (see chapter 8.6.1).

] ()

[SWS_V2xFac_00016] [

The CA basic service shall receive CAMs via the callback function V2xFac_RxIndication (see chapter 8.4).

] ()

[SWS_V2xFac_20294][

The MAX_DANGLE [19] representing the delta angle (in degrees) between two generation rules checks shall use a value of 4°.] (SRS_V2X_00711)

[SWS_V2xFac_20295][

The MAX_DDISTANCE [19] representing the delta distance (in meters) between two generation rules checks shall use a value of 4 meters.] (SRS_V2X_00711)

[SWS_V2xFac_20296][

The MAX_DSPEED [19] representing the delta speed between two generation rules checks shall use a value of 0,5 m/s.] (SRS_V2X_00711)

[SWS_V2xFac_20297][

The adjustable N_GenCam parameter (see [10]) specified in the CAM Generation Frequency Management shall be set to 0 for the V2xFac module.] (SRS_V2X_00711)

[SWS_V2xFac_20291][

The V2xFac module shall transmit CAM messages as long as position and time information are available.] (SRS_V2X_00291)

7.3.3 CAM Generation Frequency Management for RSU ITS-Ss

RSU is out of scope of the document.

7.3.4 CAM Time Requirement

[SWS_V2xFac_00019] [

The CAM generation shall follow time requirements according to [10] chapter 6.1.5.] ()

[SWS_V2xFac_20168] [

The V2xFac module shall check the timestamp in the security envelope compared to the reception time and accept only CAMs in the last time of 2 seconds and other messages within the last time of 10 minutes.

] (SRS_V2X_00010)

7.3.5 CAM Format Specification

For details about CAM data format refer to the following ETSI documents:

See [10] chapter 7

See [10] Annex A: ASN.1 specification of CAM

See [10] Annex B: Description for data elements and data frames

See [13] Annex A, Annex B

[SWS_V2xFac_20285] [

The path history field inside the CAM low frequency (LF) container shall contain a PathHistory data element covering a distance of at least 200 m (K_PHDISTANCE_M parameter [19]).

An exception to the minimum covered distance by PathHistory shall be only made if either of the following conditions is fulfilled:

- the vehicle has not yet physically covered the distance with its current pseudonym (e.g., after vehicle startup or right after pseudonym change when driving)
- the maximum number of PathPoints is used while the overall length covered by the PathHistory still does not reach 200m.

Only in the above two cases the vehicle may send PathHistory information covering a distance below the 200 m lower limit.

] (SRS_V2X_00693)

[SWS_V2xFac_20286] [

The PathHistory in CAMs shall cover at most 500 m.

] (SRS_V2X_00693)

[SWS_V2xFac_20287] [

The V2xFac module shall send PathDeltaTime in every PathPoint of the PathHistory. Therefore, the PathHistory shall describe a time-ordered list of actually travelled geographical locations leading to the current vehicle position.

] (SRS_V2X_00693)

[SWS_V2xFac_20288] [

In cases where the vehicle does not move, i.e. PathPoint position information does not change, the PathDeltaTime of the first PathPoint shall still be updated with every CAM.

] (SRS_V2X_00693)

[SWS_V2xFac_20289] [

When the V2xFac module is stationary for a duration longer than the maximum value of PathDeltaTime (specified in [13]) the PathDeltaTime of the first PathPoint in the CAM shall be fixed to the maximum value..

] (SRS_V2X_00693)

[SWS_V2xFac_20292][

The traffic class value for CAM messages shall be set to 2.] (SRS_V2X_00711)

[SWS_V2xFac_20256]

The V2xFac module shall use a Single Hop Broadcasting (SHB) header on all CAM packets it sends. Therefore, the value of the transportType parameter shall be set to 0x50] (SRS_V2X_00010)

7.4 DEN Functional Specification

As defined in ETSI documents (See [11] chapter 5.2) the DEN basic service is a facilities layer entity that implements the DEN protocol. It interfaces with ITS-S applications in order to receive the application request for DENM transmission and to provide the received DENM content to the ITS-S applications.

7.4.1 DEN Initialization

[SWS_V2xFac_00025]

The function V2xFac_Init shall initialize an empty originating ITS-S message table. For details see [11] chapter 8.2.1.6
] ()

7.4.2 DENM Transmission Management

[SWS_V2xFac_00027]

The DEN basic service is triggered by the V2x-Application via its service operations TriggerEvent, UpdateEvent or TerminateEvent from the service interface V2xFacDenBs (see chapter 8.7.2.1).

The function parameter “EventID” given by the above mentioned operations shall be mapped by the DEN basic service to the actionID generated for DENMs.

For details see [11] chapter 5.3 and 8.2

] ()

7.4.3 DENM Reception Management

[SWS_V2xFac_00028]

Upon receiving a DENM, the DEN basic service makes the content of the DENM available to the V2X Applications.

Received DENMs shall be sent to the upper application layer via their standardized AUTOSAR service interface V2xApplRxIndicationDenm.

For Details see [11] chapter 5.3 and 8.4

] ()

7.4.4 DENM Repetition

[SWS_V2xFac_00029]

In between two consequent DENM updates, a DENM may be repeated by the DEN basic service.

For details see [11] chapter 6.1.2.3

] (SRS_V2X_00301)

7.4.5 DENM Keep Alive Forwarding (KAF)

KAF functionality for the DEN basic service as defined by ETSI is not supported.

See [11] chapter 5.3 and 8.3

7.4.6 DENM Format Specification

For details about DENM data format refer to the following ETSI documents:

See [11] chapter 7,

See [11] Annex A: ASN.1 specification of DENM

See [11] Annex B: Description for data elements and data frames

See [13] Annex A, Annex B

[SWS_V2xFac_20302] [

The path history field inside the DEN messages shall contain Trace data elements covering a distance of at least 600 m (K_PHDISTANCE_M parameter).

An exception to the minimum covered distance by Traces shall be only made if either of the following conditions is fulfilled:

- the vehicle has not yet physically covered the distance with its current pseudonym (e.g., after vehicle startup or right after pseudonym change when driving)
- the maximum number of PathPoints is used while the overall length covered by the PathHistory still does not reach 200m.

Only in the above two cases the vehicle may send Traces information covering a distance below the 600 m lower limit.

] (SRS_V2X_00693)

[SWS_V2xFac_20303] [

The Traces in the DENMs shall cover at most 1000 m.

] (SRS_V2X_00693)

[SWS_V2xFac_20304] [

The V2xFac module shall use the DENM traces as follow: The PathDeltaTime shall be sent in every PathPoint in the first DENM traces element. Therefore, the first element of the traces shall describe a time-ordered list of actually travelled geographical locations leading to the event position. In its simplest form this is the same as the PathHistory at that time instant, which is recommended to be used.

] (SRS_V2X_00693)

[SWS_V2xFac_20305] [

The PathDeltaTime data elements of the PathPoints in the first DENM traces element shall only be updated if the DENM is updated. Furthermore, the cases in which DENM Updates are triggered shall be specified on a case-by-case basis in the corresponding Triggering Conditions [17].

] (SRS_V2X_00693)

[SWS_V2xFac_20306] [

In cases where the event detecting vehicle does not move, i.e. PathPoint position information does not change, the PathDeltaTime of the first PathPoint of the first DENM traces element shall still be updated with every DEN_Update.

] (SRS_V2X_00693)

NOTE: This is only the case for stationary events where the detecting vehicle is identical to the event, e.g. a stationary vehicle warning. For dynamic events, e.g. dangerous situations, or events, where the event is not identical to the vehicle, e.g. adverse weather warning, this is not the case.

[SWS_V2xFac_20307] [

When standing for a long time, the PathDeltaTime of the first PathPoint of the first DENM traces element shall be fixed to the maximum value specified in [8].

Therefore, PathPoints do not “fall out” of the first DENM traces element when standing for a long time.

] (SRS_V2X_00693)

[SWS_V2xFac_20308] [

Additional PathHistory elements may be present in the DENM traces. However, unlike the first element, these shall describe alternative routes to the event location. These routes may or may not be available at the time of detecting the event. In the alternative routes, the PathPoints shall be position-ordered (i.e. shortest-path routes) and they shall not include the PathDeltaTime.

] (SRS_V2X_00693)

[SWS_V2xFac_20318] [

The traces and path histories used by the V2xFac module shall be generated using the Design Method One as specified in the VSC-A Final Report [18]: Appendix B-2. The V2xFac module shall use the generation method with the following settings:

- $K_PHALLOWABLEERROR_M = 0,47\text{ m}$, where
 $PH_ActualError < K_PHALLOWABLEERROR_M$
- Maximum distance between concise path points,
 $K_PH_CHORDLENGTHTHRESHOLD = 22,5\text{ m}$
- $K_PH_MAXESTIMATEDRADIUS = R_{EarthMeridian}$
- $K_PHSMALLDELTA\phi_R = 1\text{ degree}$
- $R_{EarthMeridian} = 6378.137\text{ km}$ (according to IUGG - International Union of Geodesy and Geophysics), used for great-circle or orthodromic distance calculation:

PH_ActualChordLength

$$= REarthMeridian * \cos^{-1}[\cos(lat1)\cos(lat2)\cos(long1 - long2) + \sin(lat1)\sin(lat2)]$$

] (SRS_V2X_00318)

[SWS_V2xFac_20257]

The V2xFac module shall use GeoBroadcast (GBC) headers on all DENM packets it sends. Therefore, the value of the transportType parameter shall be set to 0x40] (SRS_V2X_00010)

[SWS_V2xFac_20259]

The V2xFac module shall set the maxPacketLifetime parameter of the packets transport parameters TxParams of all GBC packets to the minimum of ValidityDuration and RepetitionInterval (LifeTime=min(ValidityDuration, RepetitionInterval)), where ValidityDuration and RepetitionInterval are defined inside C2C-CC White Paper Information quality/event detection] (SRS_V2X_00259)

7.5 Path History

[SWS_V2xFac_20185]

Facilities layer shall clear the own station's path history cache (used to fill into new messages) when the security entity changes its pseudonym identity.] (SRS_V2X_00010)

[SWS_V2xFac_20215]

Traces and path history data shall only be generated when position confidence and ITS time information are available] (SRS_V2X_00010,SRS_V2X_00291)

7.6 Error classification

7.6.1 Development Errors

[SWS_V2xFac_00031]

| Type of error | Related error code | Value [hex] |
|---|------------------------|-------------|
| API service called with wrong parameter | V2XFAC_E_PARAM | 0x01 |
| API service called with invalid pointer | V2XFAC_E_PARAM_POINTER | 0x02 |
| V2xFac initialization failed | V2XFAC_E_INIT_FAILED | 0x03 |
| API function called before the V2xFac module has been fully initialized | V2XFAC_E_UNINIT | 0x04 |

] ()

7.6.2 Runtime Errors

There are no runtime errors.

7.6.3 Transient Faults

There are no transient faults.

7.6.4 Production Errors

There are no production errors.

7.6.5 Extended Production Errors

There are no extended production errors.

8 API specification

8.1 Imported types

In this chapter all types included from the following files are listed:

[SWS_V2xFac_00032] [

| Module | Imported Type |
|------------------|-------------------------------|
| Std_Types | Std_ReturnType |
| | Std_VersionInfoType |
| V2xBtp | V2xBtp_TxParamsType |
| V2x_GeneralTypes | V2x_GnAddressType |
| | V2x_GnDestinationAreaType |
| | V2x_GnDestinationType |
| | V2x_GnLocalPositionVectorType |
| | V2x_GnLongPositionVectorType |
| | V2x_PseudonymType |
| | V2x_SecReportType |
| | V2x_TrafficClassIdType |

] ()

8.2 Type definitions

8.2.1 V2xFac_RxParamsType

[SWS_V2xFac_00034] [

| | | | |
|-----------------|------------------------------|----------------------|--|
| Name: | V2xFac_RxParamsType | | |
| Type: | Structure | | |
| Element: | uint16 | destinationPort | Identifies the protocol entity at the ITS facilities layer at the destination of a BTP packet. |
| | V2x_GnAddressType | destinationAddress | Destination address for GeoUnicast packet |
| | V2x_GnDestinationAreaType | destinationArea | Destination area for GeoBroadcast/GeoAnycast packet. |
| | V2x_GnDestinationType | destinationType | Select which destination type (destinationAddress or destinationArea is used for this packet). |
| | V2x_GnLongPositionVectorType | sourcePositionVector | Geographical position for the source of the received GeoNetworking packet. |
| | V2x_SecReportType | securityReport | Result information from the security operations for decryption and verification. This parameter is supplied by the V2xM module and forwarded up to the ITS |

| | | | |
|--|------------------------|-------------------|---|
| | | | Facilities layer passing through the GeoNetworking and BTP layers. |
| | uint64 | certificateId | Identification of source certificate, for example the certificate hash. This parameter is supplied by the V2xM and forwarded up to the ITS Facilities layer passing through the GeoNetworking and BTP layers. |
| | uint8[4] | SspBits | Sender permissions |
| | uint8 | SspLength | Sender permissions length |
| | V2x_TrafficClassIdType | trafficClass | Traffic class, with which the GeoNetworking packet was generated by the source. |
| | uint16 | remPacketLifetime | Remaining lifetime of the packet in [s]. |
| Description: Wraps GeoNetworking parameters from V2xBtp | | | |

] ()

8.3 Function definitions

8.3.1 V2xFac_Init

[SWS_V2xFac_00082] [

| | |
|----------------------------|--------------------------------|
| Service name: | V2xFac_Init |
| Syntax: | void V2xFac_Init(void) |
| Service ID[hex]: | 0x01 |
| Sync/Async: | Synchronous |
| Reentrancy: | Non Reentrant |
| Parameters (in): | None |
| Parameters (inout): | None |
| Parameters (out): | None |
| Return value: | None |
| Description: | Initializes the V2xFac module. |

] ()

8.3.2 V2xFac_GetVersionInfo

[SWS_V2xFac_00084] [

| | |
|----------------------|---|
| Service name: | V2xFac_GetVersionInfo |
| Syntax: | void V2xFac_GetVersionInfo(Std_VersionInfoType* VersionInfoPtr) |

| | |
|----------------------------|--|
| Service ID[hex]: | 0x02 |
| Sync/Async: | Synchronous |
| Reentrancy: | Reentrant |
| Parameters (in): | None |
| Parameters (inout): | None |
| Parameters (out): | VersionInfoPtr Pointer to where to store the version information of this module. |
| Return value: | None |
| Description: | Returns the version information of this module. |

] ()

[SWS_V2xFac_00085] [

If V2xFacDevErrorDetect is enabled: If the VersionInfoPtr pointer parameter is invalid (e.g. NULL), the error-code V2XFAC_E_PARAM_POINTER shall be reported to the DET module.] ()

8.3.3 V2xFac_V2xM_PreparePseudonymChange

[SWS_V2xFac_00086] [

| | |
|----------------------------|---|
| Service name: | V2xFac_V2xM_PreparePseudonymChange |
| Syntax: | Std_ReturnType V2xFac_V2xM_PreparePseudonymChange(const V2x_PseudonymType* PseudonymPtr) |
| Service ID[hex]: | 0x03 |
| Sync/Async: | Synchronous |
| Reentrancy: | Non Reentrant |
| Parameters (in): | PseudonymPtr The Pseudonym provided by V2xM |
| Parameters (inout): | None |
| Parameters (out): | None |
| Return value: | Std_ReturnType E_OK: operation successful E_NOT_OK: operation failed |
| Description: | By this API primitive the V2xFac module gets an indication that the Pseudonym and hereby the StationId has changed. |

] ()

[SWS_V2xFac_00136] [

The function V2xFac_V2xM_PreparePseudonymChange shall prepare the setting of the pseudonym specific part of the StationId being used for packet transmission.]()

[SWS_V2xFac_00137] [

If development error detection is enabled: the function shall check that the service V2xFac_Init was previously called. If the check fails, the function shall raise the development error V2XFAC_E_UNINIT otherwise (if DET is disabled) return E_NOT_OK.]()

[SWS_V2xFac_00138] [

If development error detection is enabled: the function shall check the parameter PseudonymPtr for being valid. If the check fails, the function shall raise the development error V2XFAC_E_PARAM_POINTER otherwise (if DET is disabled) return E_NOT_OK.]()

8.3.4 V2xFac_V2xM_CommitPseudonymChange

[SWS_V2xFac_00140] [

| | | |
|----------------------------|--|--|
| Service name: | V2xFac_V2xM_CommitPseudonymChange | |
| Syntax: | Std_ReturnType V2xFac_V2xM_CommitPseudonymChange (void) | |
| Service ID[hex]: | 0x04 | |
| Sync/Async: | Synchronous | |
| Reentrancy: | Non Reentrant | |
| Parameters (in): | None | |
| Parameters (inout): | None | |
| Parameters (out): | None | |
| Return value: | Std_ReturnType | E_OK: operation successful E_NOT_OK: operation failed |
| Description: | This function is called by the V2xM when all modules are OK with the pseudonym change and the change is to be committed. | |

] ()

[SWS_V2xFac_00141] [

The function V2xFac_V2xM_CommitPseudonymChange shall set the pseudonym specific part of the GeoNetworking Address being used for packet transmission and clean the path history. V2xFac shall store the access of the GeoNetworking Address for subsequent API calls.]()

[SWS_V2xFac_00142] [

If development error detection is enabled: the function shall check that the service V2xFac_Init was previously called. If the check fails, the function shall raise the development error V2XFAC_E_UNINIT otherwise (if DET is disabled) return E_NOT_OK.]()

Note: The function requires previous preparation of the pseudonym via an API call to V2xFac_V2xM_PreparePseudonymChange.

8.3.5 V2xFac_V2xM_AbortPseudonymChange

[SWS_V2xFac_00144] [

| | | |
|----------------------------|--|--|
| Service name: | V2xFac_V2xM_AbortPseudonymChange | |
| Syntax: | Std_ReturnType V2xFac_V2xM_AbortPseudonymChange (void) | |
| Service ID[hex]: | 0x05 | |
| Sync/Async: | Synchronous | |
| Reentrancy: | Non Reentrant | |
| Parameters (in): | None | |
| Parameters (inout): | None | |
| Parameters (out): | None | |
| Return value: | Std_ReturnType | E_OK: operation successful E_NOT_OK: operation failed |
| Description: | This function is called by the V2xM when not all modules are OK with the | |

| | |
|--|---|
| | pseudonym change and the change is to be rolled back. |
|--|---|

] ()

[SWS_V2xFac_00145] [

The function V2xFac_V2xM_AbortPseudonymChange shall roll back the prepared pseudonym change.]()

[SWS_V2xFac_00146] [

If development error detection is enabled: the function shall check that the service V2xFac_Init was previously called. If the check fails, the function shall raise the development error V2XFAC_E_UNINIT otherwise (if DET is disabled) return E_NOT_OK.]()

Note: The function requires previous preparation of the pseudonym via an API call to V2xFac_V2xM_PreparePseudonymChange.

8.3.6 V2xFac_V2xM_SetTGenCamDcc

[SWS_V2xFac_00148] [

| | | |
|----------------------------|---|--|
| Service name: | V2xFac_V2xM_SetTGenCamDcc | |
| Syntax: | <pre>void V2xFac_V2xM_SetTGenCamDcc (uint16 TGenCamDcc)</pre> | |
| Service ID[hex]: | 0x06 | |
| Sync/Async: | Synchronous | |
| Reentrancy: | Non Reentrant | |
| Parameters (in): | TGenCamDcc | The TGenCamDcc in [ms], provided by V2xM |
| Parameters (inout): | None | |
| Parameters (out): | None | |
| Return value: | None | |
| Description: | By this API primitive the V2xFac module gets an indication of the current TGenCamDcc value. | |

] ()

[SWS_V2xFac_00149] [

The function V2xFac_V2xM_SetTGenCamDcc shall set the TGenCamDcc for subsequent API calls.]()

[SWS_V2xFac_00150] [

If development error detection is enabled: the function shall check that the service V2xFac_Init was previously called. If the check fails, the function shall raise the development error V2XFAC_E_UNINIT otherwise (if DET is disabled) return E_NOT_OK.]()

8.3.7 V2xFac_V2xM_SetCaBsOperation

[SWS_V2xFac_00152] [

| | |
|----------------------|------------------------------|
| Service name: | V2xFac_V2xM_SetCaBsOperation |
|----------------------|------------------------------|

| | | |
|----------------------------|--|--|
| Syntax: | void V2xFac_V2xM_SetCaBsOperation(boolean OperationState) | |
| Service ID[hex]: | 0x07 | |
| Sync/Async: | Synchronous | |
| Reentrancy: | Non Reentrant | |
| Parameters (in): | OperationState | FALSE: CaBs disabled TRUE: CaBs enbaled |
| Parameters (inout): | None | |
| Parameters (out): | None | |
| Return value: | None | |
| Description: | By this API primitive the V2xFac module gets an indication of the current operation state of the CA Basic Service. | |

]()

[SWS_V2xFac_00153] [

The function V2xFac_V2xM_SetCaBsOperation shall enable or disable the CA Basic Service.]()

[SWS_V2xFac_00154] [

If development error detection is enabled: the function shall check that the service V2xFac_Init was previously called. If the check fails, the function shall raise the development error V2XFAC_E_UNINIT otherwise (if DET is disabled) return E_NOT_OK.]()

8.4 Call-back notifications

This is a list of functions provided for other modules. The function prototypes of the callback functions shall be provided in the file V2xFac_Cbk.h

8.4.1 V2xFac_TxConfirmation

[SWS_V2xFac_00087] [

| | | |
|----------------------------|---|---|
| Service name: | V2xFac_TxConfirmation | |
| Syntax: | void V2xFac_TxConfirmation(uint16 TransactionId16) | |
| Service ID[hex]: | 0x08 | |
| Sync/Async: | Synchronous | |
| Reentrancy: | Non Reentrant | |
| Parameters (in): | TransactionId16 | TransactionId of the packet that has been transmitted |
| Parameters (inout): | None | |
| Parameters (out): | None | |
| Return value: | None | |
| Description: | By this API primitive the V2xFac module gets a confirmation that the V2X message with a certain ID was send successfully. | |

]()

[SWS_V2xFac_00156] [

If development error detection is enabled: the function shall check that the service V2xFac_Init was previously called. If the check fails, the function shall raise the development error V2XFAC_E_UNINIT.]()

8.4.2 V2xFac_RxIndication

[SWS_V2xFac_00088] [

| | | |
|----------------------------|--|--|
| Service name: | V2xFac_RxIndication | |
| Syntax: | <pre>void V2xFac_RxIndication(uint32 TransactionId32, const V2xFac_RxParamsType* ReceiveParams, uint16 Length, const uint8* DataPtr)</pre> | |
| Service ID[hex]: | 0x09 | |
| Sync/Async: | Synchronous | |
| Reentrancy: | Non Reentrant | |
| Parameters (in): | TransactionId32 | ID of the received packet. This ID is created in the V2xGn module and handed up in the protocol stack to be used for verification on demand. |
| | ReceiveParams | Wraps RxIndication parameters |
| | Length | Length of the data pointed by DataPtr. |
| | DataPtr | Payload of the received BTP packet. |
| Parameters (inout): | None | |
| Parameters (out): | None | |
| Return value: | None | |
| Description: | This API primitive is called by the V2xBtp module providing the data and the GeoNetworking parameters of a received BTP packet to V2xFac module. | |

]()

[SWS_V2xFac_00158] [

If development error detection is enabled: the function shall check that the service V2xFac_Init was previously called. If the check fails, the function shall raise the development error V2XFAC_E_UNINIT.]()

[SWS_V2xFac_00159] [

If development error detection is enabled: the function shall check the parameter ReceiveParams for being valid. If the check fails, the function shall raise the development error V2XFAC_E_PARAM_POINTER.]()

[SWS_V2xFac_00160] [

If development error detection is enabled: the function shall check the parameter DataPtr for being valid. If the check fails, the function shall raise the development error V2XFAC_E_PARAM_POINTER.]()

8.5 Scheduled functions

8.5.1 V2xFac_CaBs_MainFunction

[SWS_V2xFac_00090] [

| | |
|-------------------------|--|
| Service name: | V2xFac_CaBs_MainFunction |
| Syntax: | void V2xFac_CaBs_MainFunction(void) |
| Service ID[hex]: | 0x0a |
| Description: | This is the main processing function of the CA basic service |

] ()

8.5.2 V2xFac_DenBs_MainFunction

[SWS_V2xFac_00091] [

| | |
|-------------------------|--|
| Service name: | V2xFac_DenBs_MainFunction |
| Syntax: | void V2xFac_DenBs_MainFunction(void) |
| Service ID[hex]: | 0x0b |
| Description: | This is the main processing function of the DEN basic service. |

] ()

8.6 Expected Interfaces

In this chapter all external interfaces required from other modules are listed.

8.6.1 Mandatory Interfaces

This chapter defines all external interfaces which are required to fulfill the core functionality of the module.

[SWS_V2xFac_00092] [

| API function | Description |
|--------------------------------|--|
| V2xBtp_Transmit | This API is called by the V2xFac module to request sending a BTP-PDU to the peer BTP entity. |
| V2xM_CalcDistance | Calculates the distance between two geographical points on earth with the assumption that they are on elevation 0. |
| V2xM_CalcHeadingInTolerance | Calculates if difference of heading values are within a tolerance value |
| V2xM_GetPositionAndTime | Provides the instantaneous position information. |
| V2xM_GetRefTimePtr | Provides a pointer to the time reference of the V2X-Stack. |
| V2xM_SetTollingZoneInformation | Set available tolling zone information. This is done from V2xFac that receives this information via CAM messages. |

] ()

8.6.2 Optional Interfaces

This chapter defines all external interfaces which are required to fulfill an optional functionality of the module.

[SWS_V2xFac_00093] [

| API function | Description |
|-----------------|---------------------------------------|
| Det_ReportError | Service to report development errors. |

] ()

8.7 Service Interfaces

8.7.1 Sender-Receiver-Interfaces

8.7.1.1 V2xFacVdp

[SWS_V2xFac_00094] [

The V2xFac requires an interface V2xFacVdp as defined below to get data from the VDP application.

] ()

[SWS_V2xFac_00095] [

| | | |
|---------------|--|--------------------------|
| Name | V2xFacVdp | |
| Comment | Interface to receive data from VDP application | |
| IsService | false | |
| Variation | -- | |
| Data Elements | vdpData | |
| | Type | V2xFac_CoopAwarenessType |
| | Variation | -- |

] ()

8.7.1.2 V2xApplRxIndicationCam

[SWS_V2xFac_00100] [

For the V2X_Facilities an interface V2xApplRxIndicationCam shall be provided as defined below to provide the capability of delivering received CAMs to applications.

] ()

[SWS_V2xFac_00101] [

| | | |
|-----------|------------------------------------|--|
| Name | V2xApplRxIndicationCam | |
| Comment | Deliver received CAMs Applications | |
| IsService | true | |

| | | |
|---------------|-----------|---------------------------|
| Variation | -- | |
| Data Elements | CamData | |
| | Type | V2xFac_CamMessageRootType |
| | Variation | -- |

] ()

8.7.1.1 V2xApplRxIndicationDenm

[SWS_V2xFac_00234] [

For the V2X_Facilities an interface V2xApplRxIndicationDenm shall be provided as defined below to provide the capability of delivering received DENMs to applications.

] ()

[SWS_V2xFac_00235] [

| | | |
|---------------|--|----------------------------|
| Name | V2xApplRxIndicationDenm | |
| Comment | Deliver received DENMs to Applications | |
| IsService | true | |
| Variation | -- | |
| Data Elements | DenmData | |
| | Type | V2xFac_DenmMessageRootType |
| | Variation | -- |

] ()

8.7.2 Client-Server-Interfaces

8.7.2.1 V2xFacDenBs

The V2xFac module provides the Client-Server service Interface V2xFacDenBs to the application layer. The service Interface V2xFacDenBs shall implement the following operations.

- TriggerEvent
- UpdateEvent
- TerminateEvent

[SWS_V2xFac_00098] [

The V2X_Facilities shall provide an interface V2xFacDenBs as defined below to provide the capability of event handling (triggering, updating and terminating DENMs).

] ()

[SWS_V2xFac_00099] [

| | | |
|-----------------|--|-------------------------|
| Name | V2xFacDenBs | |
| Comment | Service of V2xFac module basic service DEN | |
| IsService | true | |
| Variation | -- | |
| Possible Errors | 0 | E_OK |
| | 1 | E_NOT_OK |
| | 2 | E_ACTION_ID_NONEXISTENT |
| | 3 | E_DENM_UNCONSTRUCTABLE |
| | 4 | E_DENM_TIME_OUT |

Operations

| TerminateEvent | | | |
|----------------|---|-----------|---|
| Comments | Requests termination of an existing DENM (see [11] chapter 4 and 5.4.1.4) | | |
| Variation | -- | | |
| Parameters | EventData | Comment | Pre-filled DENM message structure, including the ActionID from TriggerEvent |
| | | Type | V2xFac_DenMsgType |
| | | Variation | -- |
| | | Direction | IN |
| | RepetitionDuration | Comment | Duration of the DENM repetition in units of milliseconds |
| | | Type | uint32 |
| | | Variation | -- |
| | | Direction | IN |
| | RepetitionInterval | Comment | Interval of DENM repetition in units of milliseconds |
| | | Type | uint16 |
| | | Variation | -- |
| | | Direction | IN |
| | DestinationArea | Comment | Destination area for DENM dissemination as specified in ETSI EN 302 931. |
| | | Type | V2xFac_GnDestinationAreaType |

| | | | | |
|-----------------|--|---|--|--|
| | | Variation | -- | |
| | | Direction | IN | |
| | TrafficClass | Comment | GN traffic class of the DENM as defined in ETSI EN 302 636-4-1 | |
| | | Type | V2xFac_TrafficClassIdType | |
| | | Variation | -- | |
| | | Direction | IN | |
| | ActionID | Comment | The DEN basic service returns the actionID or other applicable identifier created by the DEN basic service to the requesting ITS-S application | |
| | | Type | V2xFac_ActionIdType | |
| | | Variation | -- | |
| | | Direction | OUT | |
| Possible Errors | E_OK | Operation successful | | |
| | E_NOT_OK | -- | | |
| | E_ACTION_ID_NONEXISTENT | ActionID provided for Update/Termination does not exist | | |
| | E_DENM_UNCONSTRUCTABLE | DENM couldn't be constructed | | |
| | E_DENM_TIME_OUT | DENM hasn't been sent before timeout of DENM has been reached | | |
| | | | | |
| TriggerEvent | | | | |
| Comments | Requests creation of a new DENM (see [11] chapter 4 and 5.4.1.2) | | | |
| Variation | -- | | | |
| Parameters | EventData | Comment | Pre-filled DENM message structure | |
| | | Type | V2xFac_DenMsgType | |
| | | Variation | -- | |
| | | Direction | IN | |
| | RepetitionDuration | Comment | Duration of the DENM repetition in units of milliseconds | |
| | | Type | uint32 | |
| | | Variation | -- | |
| | | Direction | IN | |

| | | | |
|-----------------|--|---|--|
| | RepetitionInterval | Comment | Interval of DENM repetition in units of milliseconds |
| | | Type | uint16 |
| | | Variation | -- |
| | | Direction | IN |
| | DestinationArea | Comment | Destination area for DENM dissemination as specified in ETSI EN 302 931. |
| | | Type | V2xFac_GnDestinationAreaType |
| | | Variation | -- |
| | | Direction | IN |
| | TrafficClass | Comment | GN traffic class of the DENM as defined in ETSI EN 302 636-4-1 |
| | | Type | V2xFac_TrafficClassIdType |
| | | Variation | -- |
| | | Direction | IN |
| | ActionID | Comment | The DEN basic service returns the actionID or other applicable identifier created by the DEN basic service to the requesting ITS-S application |
| | | Type | V2xFac_ActionIdType |
| | | Variation | -- |
| | | Direction | OUT |
| Possible Errors | E_OK | Operation successful | |
| | E_NOT_OK | -- | |
| | E_DENM_UNCONSTRUCTABLE | DENM couldn't be constructed | |
| | E_DENM_TIME_OUT | DENM hasn't been sent before timeout of DENM has been reached | |
| | | | |
| UpdateEvent | | | |
| Comments | Requests update of an existing DENM (see [11] chapter 4 and 5.4.1.3) | | |
| Variation | -- | | |
| Parameters | EventData | Comment | Pre-filled DENM message structure, including the ActionID from TriggerEvent |
| | | Type | V2xFac_DenMsgType |

| | | | |
|-----------------|-------------------------|---|--|
| | | Variation | -- |
| | | Direction | IN |
| | RepetitionDuration | Comment | Duration of the DENM repetition in units of milliseconds |
| | | Type | uint32 |
| | | Variation | -- |
| | | Direction | IN |
| | RepetitionInterval | Comment | Interval of DENM repetition in units of milliseconds |
| | | Type | uint16 |
| | | Variation | -- |
| | | Direction | IN |
| | DestinationArea | Comment | Destination area for DENM dissemination as specified in ETSI EN 302 931. |
| | | Type | V2xFac_GnDestinationAreaType |
| | | Variation | -- |
| | | Direction | IN |
| | TrafficClass | Comment | GN traffic class of the DENM as defined in ETSI EN 302 636-4-1 |
| | | Type | V2xFac_TrafficClassIdType |
| | | Variation | -- |
| | | Direction | IN |
| | ActionID | Comment | The DEN basic service returns the actionID or other applicable identifier created by the DEN basic service to the requesting ITS-S application |
| | | Type | V2xFac_ActionIdType |
| | | Variation | -- |
| | | Direction | OUT |
| Possible Errors | E_OK | Operation successful | |
| | E_NOT_OK | -- | |
| | E_ACTION_ID_NONEXISTENT | ActionID provided for Update/Termination does not exist | |
| | E_DENM_UNCONSTRUCTABLE | DENM couldn't be constructed | |

| | | |
|--|-----------------|---|
| | E_DENM_TIME_OUT | DENM hasn't been sent before timeout of DENM has been reached |
|--|-----------------|---|

] ()

8.7.3 Implementation Data Types

8.7.3.1 V2xFac specific Implementation DataTypes

[SWS_V2xFac_00162] [

| | | | |
|--------------|---------------------------------|--|--|
| Name | V2xFac_TrafficClassIdType | | |
| Kind | Type | | |
| Derived from | uint8 | | |
| Description | Traffic class for sending DENMs | | |
| Variation | -- | | |

] ()

[SWS_V2xFac_00163] [

| | | | |
|-------------|--|------------------------|---|
| Name | V2xFac_GnDestinationAreaType | | |
| Kind | Structure | | |
| Elements | latitude | sint32 | Latitude [1/10 microdegree] |
| | longitude | sint32 | Longitude [1/10 microdegree] |
| | distanceA | uint16 | Distance a of the geometric shape [meters] |
| | distanceB | uint16 | Distance b of the geometric shape [meters] |
| | angle | uint16 | Angle of the geometric shape [degrees from North] |
| | shape | V2xFac_GnAreaShapeType | Shape type of the geometric area |
| Description | Destination area for DENM dissemination as specified in ETSI EN 302 931. | | |
| Variation | -- | | |

] ()

[SWS_V2xFac_00164] [

| | | | |
|--------------|---|------|--------|
| Name | V2xFac_GnAreaShapeType | | |
| Kind | Type | | |
| Derived from | uint8 | | |
| Description | Enumeration of a GeoNetworking Area Shape | | |
| Range | V2XFAC_GNAREASHAPE_CIRCLE | 0x00 | Circle |

| | | | |
|-----------|----------------------------|------|-----------|
| | V2XFAC_GNAREASHAPE_RECT | 0x01 | Rectangle |
| | V2XFAC_GNAREASHAPE_ELLIPSE | 0x02 | Ellipsis |
| Variation | -- | | |

] ()

8.7.3.2 CAM/DENM common Implementation DataTypes

[SWS_V2xFac_00036] [

| | | | |
|-------------|---|--------|--|
| Name | V2xFac_ItsPduHeaderType | | |
| Kind | Structure | | |
| Elements | protocolVersion | uint8 | Version of ITS message and/or communication protocol |
| | messageId | uint8 | Type of the ITS message. |
| | stationId | uint32 | Identifier of originating ITS-S |
| Description | DF_ItsPduHeader as defined in ETSI TS 102 894-2 V1.2.1. Values for data elements within this structure shall be used according that document. | | |
| Variation | -- | | |

] ()

[SWS_V2xFac_00224] [

| | | | |
|-------------|---|--------|---|
| Name | V2xFac_DeltaReferencePositionType | | |
| Kind | Structure | | |
| Elements | deltaLatitude | sint32 | Defines offset latitude with regards to a referred latitude value. |
| | deltaLongitude | sint32 | Defines an offset longitude with regards to a referred longitude value. |
| | deltaAltitude | sint16 | Defines an offset altitude with regards to a referred altitude value. |
| Description | DF_DeltaReferencePosition as defined in ETSI TS 102 894-2 V1.2.1. Values for data elements within this structure shall be used according that document. | | |
| Variation | -- | | |

] ()

[SWS_V2xFac_00037] [

| | | | |
|----------|---------------------|--------|--|
| Name | V2xFac_AltitudeType | | |
| Kind | Structure | | |
| Elements | altitudeValue | sint32 | Altitude in a WGS84 co-ordinate system |

| | | | |
|-------------|---|-------------------------------|--|
| | altitudeConfidence | V2xFac_AltitudeConfidenceType | Absolute accuracy of a reported altitude value |
| Description | DF_Altitude as defined in ETSI TS 102 894-2 V1.2.1. Values for data elements within this structure shall be used according that document. | | |
| Variation | -- | | |

] ()

[SWS_V2xFac_00165] [

| | | | |
|--------------|--|------|---|
| Name | V2xFac_AltitudeConfidenceType | | |
| Kind | Type | | |
| Derived from | uint8 | | |
| Description | Enumeration of DE_AltitudeConfidence as defined in ETSI TS 102 894-2 V1.2.1. | | |
| Range | V2XFAC_ALTITUDECONFIDENCE_ALT_000_01 | 0x00 | the altitude accuracy is equal to or less than 0.01 meter |
| | V2XFAC_ALTITUDECONFIDENCE_ALT_000_02 | 0x01 | the altitude accuracy is equal to or less than 0.02 meter |
| | V2XFAC_ALTITUDECONFIDENCE_ALT_000_05 | 0x02 | the altitude accuracy is equal to or less than 0.05 meter |
| | V2XFAC_ALTITUDECONFIDENCE_ALT_000_10 | 0x03 | the altitude accuracy is equal to or less than 0.1 meter |
| | V2XFAC_ALTITUDECONFIDENCE_ALT_000_20 | 0x04 | the altitude accuracy is equal to or less than 0.2 meter |
| | V2XFAC_ALTITUDECONFIDENCE_ALT_000_50 | 0x05 | the altitude accuracy is equal to or less than 0.5 meter |
| | V2XFAC_ALTITUDECONFIDENCE_ALT_001_00 | 0x06 | the altitude accuracy is equal to or less than 1 meter |
| | V2XFAC_ALTITUDECONFIDENCE_ALT_002_00 | 0x07 | the altitude accuracy is equal to or less than 2 meters |

| | | | |
|-----------|---|------|---|
| | V2XFAC_ALTITUDECONFIDENCE_ALT_005_00 | 0x08 | the altitude accuracy is equal to or less than 5 meters |
| | V2XFAC_ALTITUDECONFIDENCE_ALT_010_00 | 0x09 | the altitude accuracy is equal to or less than 10 meters |
| | V2XFAC_ALTITUDECONFIDENCE_ALT_020_00 | 0x0a | the altitude accuracy is equal to or less than 20 meters |
| | V2XFAC_ALTITUDECONFIDENCE_ALT_050_00 | 0x0b | the altitude accuracy is equal to or less than 50 meters |
| | V2XFAC_ALTITUDECONFIDENCE_ALT_100_00 | 0x0c | the altitude accuracy is equal to or less than 100 meters |
| | V2XFAC_ALTITUDECONFIDENCE_ALT_200_00 | 0x0d | the altitude accuracy is equal to or less than 200 meters |
| | V2XFAC_ALTITUDECONFIDENCE_ALT_OUTOFRANGE | 0x0e | the altitude accuracy is out of range, i.e. greater than 200 meters |
| | V2XFAC_ALTITUDECONFIDENCE_ALT_UNAVAILABLE | 0x0f | the altitude accuracy information is unavailable |
| Variation | -- | | |

] ()

[SWS_V2xFac_00038] [

| | | | |
|-------------|---|--------------------|---|
| Name | V2xFac_PosConfidenceEllipseType | | |
| Kind | Structure | | |
| Elements | semiMajorConfidence | uint16 | Half of length of the major axis |
| | semiMinorConfidence | uint16 | Half of length of the minor axis |
| | semiMajorOrientation | V2xFac_HeadingType | Orientation direction of the ellipse major axis |
| Description | DF_PosConfidenceEllipse as defined in ETSI TS 102 894-2 V1.2.1. Values for data elements within this structure shall be used according that document. | | |

| | |
|-----------|----|
| Variation | -- |
|-----------|----|

] ()

[SWS_V2xFac_00039] [

| | | | |
|-------------|--|--------|---|
| Name | V2xFac_HeadingType | | |
| Kind | Structure | | |
| Elements | headingValue | uint16 | Altitude in a WGS84 co-ordinate system |
| | headingConfidence | uint8 | Absolute accuracy of a reported heading value |
| Description | DF_Heading as defined in ETSI TS 102 894-2 V1.2.1. Values for data elements within this structure shall be used according that document. | | |
| Variation | -- | | |

] ()

[SWS_V2xFac_00040] [

| | | | |
|-------------|--|--------|--|
| Name | V2xFac_SpeedType | | |
| Kind | Structure | | |
| Elements | speedValue | uint16 | Speed value |
| | speedConfidence | uint8 | The absolute accuracy of a speed value |
| Description | DF_Speed as defined in ETSI TS 102 894-2 V1.2.1. Values for data elements within this structure shall be used according that document. | | |
| Variation | -- | | |

] ()

[SWS_V2xFac_00047] [

| | | | |
|-------------|--|---------------------------------|--|
| Name | V2xFac_ReferencePositionType | | |
| Kind | Structure | | |
| Elements | latitude | sint32 | Latitude of the geographical point |
| | longitude | sint32 | Longitude of the geographical point |
| | posConfidenceEllipse | V2xFac_PosConfidenceEllipseType | Accuracy of the geographical position |
| | altitude | V2xFac_AltitudeType | Altitude and altitude accuracy of the geographical point |
| Description | DF_ReferencePosition as defined in ETSI TS 102 894-2 V1.2.1. Values for data elements within this structure shall be used according that document. | | |
| Variation | -- | | |

] ()

[SWS_V2xFac_00225] [

| | | | |
|-------------|---|--------|-------------------------|
| Name | V2xFac_ActionIdType | | |
| Kind | Structure | | |
| Elements | originatingStationID | uint32 | Identifier for an ITS-S |
| | sequenceNumber | uint16 | sequenceNumber |
| Description | DF_ActionID as defined in ETSI TS 102 894-2 V1.2.1. Values for data elements within this structure shall be used according that document. | | |
| Variation | -- | | |

] ()

[SWS_V2xFac_00059] [

| | | | |
|-------------|--|-------------------------------|--|
| Name | V2xFac_PathHistoryType | | |
| Kind | Structure | | |
| Elements | count | uint8 | Number of valid elements within array. |
| | values | Array of V2xFac_PathPointType | -- |
| | | Size | 23 |
| Description | DF_PathHistory as defined in ETSI TS 102 894-2 V1.2.1. Size of the Array shall be 23 as defined in ETSI EN 302 637-2 V1.3.2. | | |
| Variation | -- | | |

] ()

[SWS_V2xFac_000226] [

| | | | |
|-------------|--|--------------------------------|--|
| Name | V2xFac_ClosedLanesType | | |
| Kind | Structure | | |
| Elements | presence | V2xFac_ClosedLanesPresenceType | Mark optional children present or not |
| | hardShoulderStatus | V2xFac_HardShoulderStatusType | Indicates the open/closing status of hard shoulder lanes |
| | drivingLaneStatus | V2xFac_DrivingLaneStatusType | Indicates whether a driving lane is open to traffic |
| Description | DF_ClosedLanes as defined in ETSI TS 102 894-2 V1.2.1. Values for data elements within this structure shall be used according that document. | | |
| Variation | -- | | |

] ()

[SWS_V2xFac_00166] [

| | | | | |
|--------------|--|--------------------|------|-------------------------------------|
| Name | V2xFac_ClosedLanesPresenceType | | | |
| Kind | Bitfield | | | |
| Derived from | uint8 | | | |
| Elements | Kind | Name | Mask | Description |
| | bit | hardShoulderStatus | 0x01 | Bit 0 (LSB): Optional child present |
| Description | Presence flags for V2xFac_ClosedLanesTypet | | | |

] ()

[SWS_V2xFac_00167] [

| | | | |
|--------------|--|------|---|
| Name | V2xFac_HardShoulderStatusType | | |
| Kind | Type | | |
| Derived from | uint8 | | |
| Description | Enumeration of DE_HardShoulderStatus as defined in ETSI TS 102 894-2 V1.2.1. | | |
| Range | V2XFAC_HARDSHOULDERSTATUS_AVAILABLE_FOR_STOPPING | 0x00 | Hard shoulder lane available for stopping |
| | V2XFAC_HARDSHOULDERSTATUS_CLOSED | 0x01 | Hard shoulder lane closed |
| | V2XFAC_HARDSHOULDERSTATUS_AVAILABLE_FOR_DRIVING | 0x02 | Hard shoulder lane available for driving |
| Variation | -- | | |

] ()

[SWS_V2xFac_00168] [

| | | | | |
|--------------|------------------------------|---------------------|--------|----------------------------------|
| Name | V2xFac_DrivingLaneStatusType | | | |
| Kind | Bitfield | | | |
| Derived from | uint16 | | | |
| Elements | Kind | Name | Mask | Description |
| | bit | outermostLaneClosed | 0x2000 | Bit 13: Outermost lane is closed |

| | | | | |
|-------------|--|---------------------------------|--------|---|
| | bit | secondLaneFromOutsideClosed | 0x1000 | Bit 12: Second lane from the outside is closed |
| | bit | thirdLaneFromOutsideClosed | 0x800 | Bit 11: Third lane from the outside is closed |
| | bit | fourthLaneFromOutsideClosed | 0x400 | Bit 10: Fourth lane from the outside is closed |
| | bit | fifthLaneFromOutsideClosed | 0x200 | Bit 9: Fifth lane from the outside is closed |
| | bit | sixthLaneFromOutsideClosed | 0x100 | Bit 8: Sixth lane from the outside is closed |
| | bit | seventhLaneFromOutsideClosed | 0x80 | Bit 7: Seventh lane from the outside is closed |
| | bit | eighthLaneFromOutsideClosed | 0x40 | Bit 6: Eighth lane from the outside is closed |
| | bit | ninthLaneFromOutsideClosed | 0x20 | Bit 5: Ninth lane from the outside is closed |
| | bit | tenthLaneFromOutsideClosed | 0x10 | Bit 4: Tenth lane from the outside is closed |
| | bit | eleventhLaneFromOutsideClosed | 0x08 | Bit 3: Eleventh lane from the outside is closed |
| | bit | twelfthLaneFromOutsideClosed | 0x04 | Bit 2: Twelfth lane from the outside is closed |
| | bit | thirteenthLaneFromOutsideClosed | 0x02 | Bit 1: Thirteenth lane from the outside is closed |
| | bit | fourteenthLaneFromOutsideClosed | 0x01 | Bit 0 (LSB): Fourteenth lane from the outside is closed |
| Description | BitString DE_DrivingLaneStatus as defined in ETSI TS 102 894-2 V1.2.1. | | | |

] ()

[SWS_V2xFac_00074] [

| | | | |
|-------------|--|-------|---------------------------------------|
| Name | V2xFac_CauseCodeType | | |
| Kind | Structure | | |
| Elements | causeCode | uint8 | Encoded value of a traffic event type |
| | subCauseCode | uint8 | Type of sub cause of a detected event |
| Description | DF_CauseCode as defined in ETSI TS 102 894-2 V1.2.1. Values for data elements within this structure shall be used according that document. | | |
| Variation | -- | | |

] ()

8.7.3.3 CAM specific Implementation DataTypes

[SWS_V2xFac_00041] [

| | | | |
|-------------|--|--------------------------|-------------------------------------|
| Name | V2xFac_CamMessageRootType | | |
| Kind | Structure | | |
| Elements | itsPduHeader | V2xFac_ItsPduHeaderType | Structure of the ItsPduHeader |
| | coopAwareness | V2xFac_CoopAwarenessType | Structure of the CoopAwareness data |
| | transactionId | uint32 | TransactionId for received CAM |
| Description | CAM root message as defined in ETSI EN 302 637-2 V1.3.2. Values for data elements within this structure shall be used according that document. | | |
| Variation | -- | | |

] ()

[SWS_V2xFac_00042] [

| | | | |
|-------------|---|--------------------------|---|
| Name | V2xFac_CoopAwarenessType | | |
| Kind | Structure | | |
| Elements | generationDeltaTime | uint16 | Time corresponding to the time of the reference position in the CAM |
| | camParameters | V2xFac_CamParametersType | Structure of V2X CAM-Parameters |
| Description | CoopAwareness as defined in ETSI EN 302 637-2 V1.3.2. Values for data elements within this structure shall be used according that document. | | |
| Variation | -- | | |

] ()

[SWS_V2xFac_00045] [

| | | | |
|----------|--------------------------|-----------------------------------|-------------------------------------|
| Name | V2xFac_CamParametersType | | |
| Kind | Structure | | |
| Elements | presence | V2xFac_CamParametersPresenceType | Mark optional childs present or not |
| | basicContainer | V2xFac_BasicContainerType | Basic container of CAM |
| | highFrequencyContainer | V2xFac_HighFrequencyContainerType | High frequency container of CAM |

| | | | |
|-------------|---|------------------------------------|--------------------------------|
| | lowFrequencyContainer | V2xFac_LowFrequencyContainerType | Low frequency container of CAM |
| | specialVehicleContainer | V2xFac_SpecialVehicleContainerType | Special container of the CAM |
| Description | CamParameters as defined in ETSI EN 302 637-2 V1.3.2. Values for data elements within this structure shall be used according that document. | | |
| Variation | -- | | |

] ()

[SWS_V2xFac_00169] [

| | | | | |
|--------------|---|-------------------------|------|-------------------------------------|
| Name | V2xFac_CamParametersPresenceType | | | |
| Kind | Bitfield | | | |
| Derived from | uint8 | | | |
| Elements | Kind | Name | Mask | Description |
| | bit | lowFrequencyContainer | 0x02 | Bit 1: Optional child present |
| | bit | specialVehicleContainer | 0x01 | Bit 0 (LSB): Optional child present |
| Description | Presence flags for V2xFac_CamParametersType | | | |

] ()

[SWS_V2xFac_00170] [

| | | | |
|-------------|---|--|-------------------------------|
| Name | V2xFac_SpecialVehicleContainerType | | |
| Kind | Structure | | |
| Elements | choice | V2xFac_SpecialVehicleContainerChoiceType | Marks which element is filled |
| | publicTransportContainer | V2xFac_PublicTransportContainerType | -- |
| | specialTransportContainer | V2xFac_SpecialTransportContainerType | -- |
| | dangerousGoodsContainer | V2xFac_DangerousGoodsContainerType | -- |
| | roadWorksContainerBasic | V2xFac_RoadWorksContainerBasicType | -- |
| | rescueContainer | V2xFac_RescueContainerType | -- |
| | emergencyContainer | V2xFac_EmergencyContainerType | -- |
| | safetyCarContainer | V2xFac_SafetyCarContainerType | -- |
| Description | SpecialVehicleContainer as defined in ETSI EN 302 637-2 V1.3.2. Values for data elements within this structure shall be used according that document. | | |
| Variation | -- | | |

] ()

[SWS_V2xFac_00171] [

| | | | |
|--------------|---|------|-----------------------------------|
| Name | V2xFac_SpecialVehicleContainerChoiceType | | |
| Kind | Type | | |
| Derived from | uint8 | | |
| Description | Enumeration for Choice V2xFac_SpecialVehicleContainerType | | |
| Range | V2XFAC_SPECIALVEHICLECONTAINER_PUBLIC_TRANSPORT_CONTAINER | 0x01 | Public transport container chosen |
| | V2XFAC_SPECIALVEHICLECONTAINER_DANGEROUS_GOODS_CONTAINER | 0x02 | Dangerous goods container chosen |
| | V2XFAC_SPECIALVEHICLECONTAINER_ROAD_WORKS_CONTAINER_BASIC | 0x03 | Road works container basic chosen |
| | V2XFAC_SPECIALVEHICLECONTAINER_RESCUE_CONTAINER | 0x04 | Rescue container chosen |
| | V2XFAC_SPECIALVEHICLECONTAINER_EMERGENCY_CONTAINER | 0x05 | Emergency container chosen |
| | V2XFAC_SPECIALVEHICLECONTAINER_SAFETY_CAR_CONTAINER | 0x06 | Safety car container chosen |
| Variation | -- | | |

] ()

[SWS_V2xFac_00046] [

| | | | |
|-------------|---|------------------------------|---|
| Name | V2xFac_BasicContainerType | | |
| Kind | Structure | | |
| Elements | stationType | uint8 | Station type of the originating ITS-S |
| | referencePosition | V2xFac_ReferencePositionType | Position and position accuracy measured at the reference point of the originating ITS-S |
| Description | BasicContainer as defined in ETSI EN 302 637-2 V1.3.2. Values for data elements | | |

| | |
|-----------|--|
| | within this structure shall be used according that document. |
| Variation | -- |

] ()

[SWS_V2xFac_00048] [

| | | | |
|-------------|--|---|------------------------------|
| Name | V2xFac_HighFrequencyContainerType | | |
| Kind | Structure | | |
| Elements | choice | V2xFac_HighFrequencyContainerChoiceType | Mark which element is filled |
| | basicVehicleContainerHighFrequency | V2xFac_BasicVehicleContainerHighFrequencyType | -- |
| | rsuContainerHighFrequency | V2xFac_RSUContainerHighFrequencyType | -- |
| Description | HighFrequencyContainer as defined in ETSI EN 302 637-2 V1.3.2. Values for data elements within this structure shall be used according that document. | | |
| Variation | -- | | |

] ()

[SWS_V2xFac_00172] [

| | | | |
|--------------|--|------|---|
| Name | V2xFac_HighFrequencyContainerChoiceType | | |
| Kind | Type | | |
| Derived from | uint8 | | |
| Description | Enumeration for Choice V2xFac_HighFrequencyContainerType | | |
| Range | V2XFAC_HIGHFREQCONTAINER_BASICVEHICLECONTAINER | 0x01 | High Frequency basic vehicle container chosen |
| | V2XFAC_HIGHFREQCONTAINER_RSUCONTAINERHIGHFREQ | 0x02 | High frequency RSU container high freq chosen |
| Variation | -- | | |

] ()

[SWS_V2xFac_00173] [

| | |
|------|---|
| Name | V2xFac_BasicVehicleContainerHighFrequencyType |
|------|---|

| Kind | Structure | | |
|----------|--------------------------|---|--|
| Elements | presence | V2xFac_BasicVehicleContainerHighFrequencyPresenceType | Mark optional childs present or not |
| | heading | V2xFac_HeadingType | Heading and heading accuracy of the vehicle movement |
| | speed | V2xFac_SpeedType | Driving speed and speed accuracy of the originating ITS-S |
| | driveDirection | V2xFac_DriveDirectionType | Vehicle drive direction |
| | vehicleLength | V2xFac_VehicleLengthType | Vehicle length and accuracy of the vehicle that originates the CAM |
| | vehicleWidth | uint8 | Width of a vehicle, including side mirrors |
| | longitudinalAcceleration | V2xFac_LongitudinalAccelerationType | Vehicle longitudinal acceleration and accuracy |
| | curvature | V2xFac_CurvatureType | Actual trajectory curvature and accuracy |
| | curvatureCalculationMode | V2xFac_CurvatureCalculationModeType | Flag indicating whether vehicle yaw-rate is used |

| | | | |
|-------------|--|---------------------------------|--|
| | yawRate | V2xFac_YawRateType | YawRate and accuracy |
| | accelerationControl | V2xFac_AccelerationControlType | Current status of the vehicle mechanisms controlling the longitudinal movement |
| | lanePosition | sint8 | Lane position of the vehicle |
| | steeringWheelAngle | V2xFac_SteeringWheelAngleType | Steering wheel angle and accuracy |
| | lateralAcceleration | V2xFac_LateralAccelerationType | Vehicle lateral acceleration and accuracy |
| | verticalAcceleration | V2xFac_VerticalAccelerationType | Vertical Acceleration of the originating ITS-S |
| | performanceClass | uint8 | Characterizes the maximum age of the CAM data elements |
| | cenDsrcTollingZone | V2xFac_CenDsrcTollingZoneType | Information about the position of a CEN DSRC Tolling Station |
| Description | BasicVehicleContainerHighFrequency as defined in ETSI EN 302 637-2 V1.3.2. Values for data elements within this structure shall be used according that document. | | |
| Variation | -- | | |

] ()

[SWS_V2xFac_00174] [

| | |
|------|---|
| Name | V2xFac_BasicVehicleContainerHighFrequencyPresenceType |
|------|---|

| | | | | |
|--------------|--|----------------------|------|-------------------------------------|
| Kind | Bitfield | | | |
| Derived from | uint8 | | | |
| Elements | Kind | Name | Mask | Description |
| | bit | accelerationControl | 0x40 | Bit 6: Optional child present |
| | bit | lanePosition | 0x20 | Bit 5: Optional child present |
| | bit | steeringWheelAngle | 0x10 | Bit 4: Optional child present |
| | bit | lateralAcceleration | 0x08 | Bit 3: Optional child present |
| | bit | verticalAcceleration | 0x04 | Bit 2: Optional child present |
| | bit | performanceClass | 0x02 | Bit 1: Optional child present |
| | bit | cenDsrcTollingZone | 0x01 | Bit 0 (LSB): Optional child present |
| Description | Presence flags for V2xFac_BasicVehicleContainerHighFrequencyType | | | |

] ()

[SWS_V2xFac_00175] [

| | | | |
|--------------|--|------|-------------------------------|
| Name | V2xFac_DriveDirectionType | | |
| Kind | Type | | |
| Derived from | uint8 | | |
| Description | Enumeration of DE_DrivingDirection as defined in ETSI TS 102 894-2 V1.2.1. | | |
| Range | V2XFAC_DRIVINGDIRECTION_FORWARD | 0x00 | Driving direction forward |
| | V2XFAC_DRIVINGDIRECTION_BACKWARD | 0x01 | Driving direction backward |
| | V2XFAC_DRIVINGDIRECTION_UNAVAILABLE | 0x02 | Driving direction unavailable |
| Variation | -- | | |

] ()

[SWS_V2xFac_00176] [

| | | | |
|--------------|--|------|------------------------|
| Name | V2xFac_CurvatureCalculationModeType | | |
| Kind | Type | | |
| Derived from | uint8 | | |
| Description | Enumeration of DE_CurvatureCalculationMode as defined in ETSI TS 102 894-2 V1.2.1. | | |
| Range | V2XFAC_CURVATURECALCMODE_YAWRATE_USED | 0x00 | Calc mode Yawrate used |
| | V2XFAC_CURVATURECALCMODE_YAWRATE_NOT_USED | 0x01 | Calc mode |

| | | | |
|-----------|--------------------------------------|------|-----------------------|
| | | | Yawrate not used |
| | V2XFAC_CURVATURECALCMODE_UNAVAILABLE | 0x02 | Calc mode unavailable |
| Variation | -- | | |

] ()

[SWS_V2xFac_00177] [

| | | | | |
|--------------|--|-------------------------|------|--|
| Name | V2xFac_AccelerationControlType | | | |
| Kind | Bitfield | | | |
| Derived from | uint8 | | | |
| Elements | Kind | Name | Mask | Description |
| | bit | brakePedalEngaged | 0x40 | Bit 6: Driver is stepping on the brake pedal |
| | bit | gasPedalEngaged | 0x20 | Bit 5: Driver is stepping on the gas pedal |
| | bit | emergencyBrakeEngaged | 0x10 | Bit 4: Emergency brake system is engaged |
| | bit | collisionWarningEngaged | 0x08 | Bit 3: Collision warning system is engaged |
| | bit | accEngaged | 0x04 | Bit 2: ACC is engaged |
| | bit | cruiseControlEngaged | 0x02 | Bit 1: Cruise control is engaged |
| | bit | speedLimiterEngaged | 0x01 | Bit 0 (LSB): Speed limiter is engaged |
| Description | BitString DE_AccelerationControl as defined in ETSI TS 102 894-2 V1.2.1. | | | |

] ()

[SWS_V2xFac_00178] [

| | | | |
|-------------|--|--|---|
| Name | V2xFac_RSUContainerHighFrequencyType | | |
| Kind | Structure | | |
| Elements | presence | V2xFac_RSUContainerHighFrequencyPresenceType | Mark optional childs present or not |
| | protectedCommunicationZonesRSU | V2xFac_ProtectedCommunicationZonesRSUType | Describes a list of protected communication zones by a road side ITS-S (Road Side Unit RSU) |
| Description | DF_VehicleLength as defined in ETSI TS 102 894-2 V1.2.1. Values for data elements within this structure shall be used according that document. | | |

| | |
|-----------|----|
| Variation | -- |
|-----------|----|

] ()

[SWS_V2xFac_00179] [

| | | | | |
|--------------|---|--------------------------------|------|-------------------------------------|
| Name | V2xFac_RSUContainerHighFrequencyPresenceType | | | |
| Kind | Bitfield | | | |
| Derived from | uint8 | | | |
| Elements | Kind | Name | Mask | Description |
| | bit | protectedCommunicationZonesRSU | 0x01 | Bit 0 (LSB): Optional child present |
| Description | Presence flags for V2xFac_RSUContainerHighFrequencyType | | | |

] ()

[SWS_V2xFac_00180] [

| | | | |
|-------------|--|--|--|
| Name | V2xFac_ProtectedCommunicationZonesRSUType | | |
| Kind | Structure | | |
| Elements | count | uint8 | Number of valid elements within array. |
| | values | Array of V2xFac_ProtectedCommunicationZoneType | -- |
| | | Size | 16 |
| Description | DF_ProtectedCommunicationZonesRSU as defined in ETSI TS 102 894-2 V1.2.1. Size of the Array shall be 16. | | |
| Variation | -- | | |

] ()

[SWS_V2xFac_00181] [

| | | | |
|----------|---------------------------------------|---|---|
| Name | V2xFac_ProtectedCommunicationZoneType | | |
| Kind | Structure | | |
| Elements | presence | V2xFac_ProtectedCommunicationZonePresenceType | Mark optional children present or not |
| | protectedZoneType | V2xFac_ProtectedZoneTypeType | type of the protected zone |
| | expiryTime | uint64 | time at which the validity of the protected |

| | | | |
|-------------|--|--------|---|
| | | | communication zone will expire |
| | protectedZoneLatitude | sint16 | latitude of the center point of the protected communication zone. |
| | protectedZoneLongitude | sint16 | longitude of the center point of the protected communication zone |
| | protectedZoneRadius | uint8 | Radius of a protected communication zone in meters |
| | protectedZoneID | uint32 | ID of a protected communication zone |
| Description | DF_VehicleLength as defined in ETSI TS 102 894-2 V1.2.1. Values for data elements within this structure shall be used according that document. | | |
| Variation | -- | | |

] ()

[SWS_V2xFac_00182] [

| | | | | |
|--------------|--|---------------------|------|-------------------------------------|
| Name | V2xFac_ProtectedCommunicationZonePresenceType | | | |
| Kind | Bitfield | | | |
| Derived from | uint8 | | | |
| Elements | Kind | Name | Mask | Description |
| | bit | expiryTime | 0x04 | Bit 2: Optional child present |
| | bit | protectedZoneRadius | 0x02 | Bit 1: Optional child present |
| | bit | protectedZoneID | 0x01 | Bit 0 (LSB): Optional child present |
| Description | Presence flags for V2xFac_ProtectedCommunicationZoneType | | | |

] ()

[SWS_V2xFac_00183] [

| | |
|------|------------------------------|
| Name | V2xFac_ProtectedZoneTypeType |
| Kind | Type |

| | | | |
|--------------|---|------|--------------------|
| Derived from | uint8 | | |
| Description | Enumeration of DE_ProtectedZoneType as defined in ETSI TS 102 894-2 V1.2.1. | | |
| Range | V2XFAC_PROTECTEDZONETYPE_CEN_DSRC_TOLLING | 0x00 | CenDscrTollingZone |
| Variation | -- | | |

] ()

[SWS_V2xFac_00050] [

| | | | |
|-------------|--|--|---|
| Name | V2xFac_VehicleLengthType | | |
| Kind | Structure | | |
| Elements | vehicleLengthValue | uint16 | Length of a vehicle |
| | vehicleLengthConfidenceIndication | V2xFac_VehicleLengthConfidenceIndicationType | Indication of whether trailer is detected to be present and whether the length of the trailer is known. |
| Description | DF_VehicleLength as defined in ETSI TS 102 894-2 V1.2.1. Values for data elements within this structure shall be used according that document. | | |
| Variation | -- | | |

] ()

[SWS_V2xFac_00239] [

| | | | |
|--------------|---|------|--------------------|
| Name | V2xFac_VehicleLengthConfidenceIndicationType | | |
| Kind | Type | | |
| Derived from | uint8 | | |
| Description | Enumeration of DE_VehicleLengthConfidenceIndication as defined in ETSI TS 102 894-2 V1.2.1. | | |
| Range | V2XFAC_VEHICLELENGTHCONFIDENCEINDICATION_NOTTRAILERPRESENT | 0x00 | no trailer present |
| | V2XFAC_VEHICLELENGTHCONFIDENCEINDICATION_TRAILERPRESENT | 0x | trailer |

| | | | |
|-----------|--|------|-------------------------------------|
| | ENTWITHKNOWNLENGTH | 01 | present with known length |
| | V2XFAC_VEHICLELENGTHCONFIDENCEINDICATION_TRAILERPRESENTWITHUNKNOWNLENGTH | 0x02 | trailer present with unknown length |
| | V2XFAC_VEHICLELENGTHCONFIDENCEINDICATION_TRAILERPRESENCEISUNKNOWN | 0x03 | trailer presence is unknown |
| | V2XFAC_VEHICLELENGTHCONFIDENCEINDICATION_UNAVAILABLE | 0x04 | information is not known |
| Variation | -- | | |

] ()

[SWS_V2xFac_00051] [

| | | | |
|-------------|---|--------|--|
| Name | V2xFac_LongitudinalAccelerationType | | |
| Kind | Structure | | |
| Elements | longitudinalAccelerationValue | sint16 | Vehicle acceleration at longitudinal direction |
| | longitudinalAccelerationConfidence | uint8 | The absolute accuracy of a reported vehicle acceleration |
| Description | DF_LongitudinalAcceleration as defined in ETSI TS 102 894-2 V1.2.1. Values for data elements within this structure shall be used according that document. | | |
| Variation | -- | | |

] ()

[SWS_V2xFac_00052] [

| | | | |
|-------------|--|--------------------------------|---|
| Name | V2xFac_CurvatureType | | |
| Kind | Structure | | |
| Elements | curvatureValue | sint16 | Describes the inverse of a detected vehicle turning curve radius |
| | curvatureConfidence | V2xFac_CurvatureConfidenceType | Describes the absolute accuracy range of a reported curvature value |
| Description | DF_Curvature as defined in ETSI TS 102 894-2 V1.2.1. Values for data elements within | | |

| | |
|-----------|---|
| | this structure shall be used according that document. |
| Variation | -- |

] ()

[SWS_V2xFac_00184] [

| | | | |
|--------------|---|-------|---|
| Name | V2xFac_CurvartureConfidenceType | | |
| Kind | Type | | |
| Derived from | uint8 | | |
| Description | Enumeration of DE_CurvatureConfidence as defined in ETSI TS 102 894-2 V1.2.1. | | |
| Range | V2XFAC_CURVATURECONFIDENCE_ONE_PER_METER_0_000 02 | 0x0 0 | The accuracy is less than or equal to 0,00002 m-1 |
| | V2XFAC_CURVATURECONFIDENCE_ONE_PER_METER_0_000 1 | 0x0 1 | The accuracy is less than or equal to 0,0001 m-1 |
| | V2XFAC_CURVATURECONFIDENCE_ONE_PER_METER_0_000 5 | 0x0 2 | The accuracy is less than or equal to 0,0005 m-1 |
| | V2XFAC_CURVATURECONFIDENCE_ONE_PER_METER_0_002 | 0x0 3 | The accuracy is less than or equal to 0,002 m-1 |
| | V2XFAC_CURVATURECONFIDENCE_ONE_PER_METER_0_01 | 0x0 4 | The accuracy is less than or equal to 0,01 m-1 |
| | V2XFAC_CURVATURECONFIDENCE_ONE_PER_METER_0_1 | 0x0 5 | The accuracy is less than or equal to |

| | | | |
|-----------|---|------|---|
| | | | 0,1 m-1 |
| | V2XFAC_CURVATURECONFIDENCE_OUT_OF_RANGE | 0x06 | The accuracy is out of range, i.e. greater than 0,1 m-1 |
| | V2XFAC_CURVATURECONFIDENCE_UNAVAILABLE | 0x07 | The information is not available |
| Variation | -- | | |

] ()

[SWS_V2xFac_00053] [

| | | | |
|-------------|--|------------------------------|---|
| Name | V2xFac_YawRateType | | |
| Kind | Structure | | |
| Elements | yawRateValue | sint16 | Vehicle rotation around z-axis |
| | yawRateConfidence | V2xFac_YawRateConfidenceType | Absolute accuracy range for reported yaw rate value |
| Description | DF_YawRate as defined in ETSI TS 102 894-2 V1.2.1. Values for data elements within this structure shall be used according that document. | | |
| Variation | -- | | |

] ()

[SWS_V2xFac_00245] [

| | | | |
|--------------|---|------|--|
| Name | V2xFac_YawRateConfidenceType | | |
| Kind | Type | | |
| Derived from | uint8 | | |
| Description | Enumeration of DE_YawRateConfidence as defined in ETSI TS 102 894-2 V1.2.1. | | |
| Range | YAWRATECONFIDENCE_DEGSEC_000_01 | 0x00 | 0 if the accuracy is equal to or less than 0,01 degree/second |
| | YAWRATECONFIDENCE_DEGSEC_000_05 | 0x01 | 1 if the accuracy is equal to or less than 0,05 degrees/second |
| | YAWRATECONFIDENCE_DEGSEC_000_10 | 0x02 | 2 if the accuracy is equal to or less than 0,1 degree/second |
| | YAWRATECONFIDENCE_DEGSEC_001_00 | 0x03 | 3 if the accuracy is equal to or less than 1 degree/second |

| | | | |
|-----------|---------------------------------|------|---|
| | YAWRATECONFIDENCE_DEGSEC_005_00 | 0x04 | 4 if the accuracy is equal to or less than 5 degrees/second |
| | YAWRATECONFIDENCE_DEGSEC_010_00 | 0x05 | 5 if the accuracy is equal to or less than 10 degrees/second |
| | YAWRATECONFIDENCE_DEGSEC_100_00 | 0x06 | 6 if the accuracy is equal to or less than 100 degrees/second |
| | YAWRATECONFIDENCE_OUTOFRANGE | 0x07 | 7 if the accuracy is out of range, i.e. greater than 100 degrees/second |
| | YAWRATECONFIDENCE_UNAVAILABLE | 0x08 | 8 if the accuracy information is unavailable |
| Variation | -- | | |

] ()

[SWS_V2xFac_00054] [

| | | | |
|-------------|---|--------|---|
| Name | V2xFac_SteeringWheelAngleType | | |
| Kind | Structure | | |
| Elements | steeringWheelAngleValue | uint16 | Steering wheel angle of the vehicle at certain point in time. |
| | steeringWheelAngleConfidence | uint8 | Absolute accuracy for a reported steering wheel angle value. |
| Description | DF_SteeringWheelAngle as defined in ETSI TS 102 894-2 V1.2.1. Values for data elements within this structure shall be used according that document. | | |
| Variation | -- | | |

] ()

[SWS_V2xFac_00055] [

| | | | |
|-------------|--|--------|--|
| Name | V2xFac_LateralAccelerationType | | |
| Kind | Structure | | |
| Elements | lateralAccelerationValue | sint16 | Vehicle acceleration at lateral direction |
| | lateralAccelerationConfidence | uint8 | The absolute accuracy of a reported vehicle acceleration |
| Description | DF_LateralAcceleration as defined in ETSI TS 102 894-2 V1.2.1. Values for data elements within this structure shall be used according that document. | | |
| Variation | -- | | |

] ()

[SWS_V2xFac_00056] [

| | | | |
|------|---------------------------------|--|--|
| Name | V2xFac_VerticalAccelerationType | | |
| Kind | Structure | | |

| | | | |
|-------------|---|--------|--|
| Elements | verticalAccelerationValue | sint16 | Vehicle acceleration at vertical direction |
| | verticalAccelerationConfidence | uint8 | The absolute accuracy of a reported vehicle acceleration |
| Description | DF_VerticalAcceleration as defined in ETSI TS 102 894-2 V1.2.1. Values for data elements within this structure shall be used according that document. | | |
| Variation | -- | | |

] ()

[SWS_V2xFac_00057] [

| | | | |
|-------------|---|---------------------------------------|---|
| Name | V2xFac_CenDsrcTollingZoneType | | |
| Kind | Structure | | |
| Elements | presence | V2xFac_CenDsrcTollingZonePresenceType | Marks optional children present or not |
| | protectedZoneLatitude | sint32 | The latitude of the CEN DSRC road side equipment |
| | protectedZoneLongitude | sint32 | The longitude of the CEN DSRC road side equipment |
| | cenDsrcTollingZoneID | sint32 | The ID of the CEN DSRC road side equipment |
| Description | DF_CenDsrcTollingZone as defined in ETSI TS 102 894-2 V1.2.1. Values for data elements within this structure shall be used according that document. | | |
| Variation | -- | | |

] ()

[SWS_V2xFac_00185] [

| | | | | |
|--------------|---------------------------------------|----------------------|------|-------------------------------------|
| Name | V2xFac_CenDsrcTollingZonePresenceType | | | |
| Kind | Bitfield | | | |
| Derived from | uint8 | | | |
| Elements | Kind | Name | Mask | Description |
| | bit | cenDsrcTollingZoneID | 0x01 | Bit 0 (LSB): Optional child present |

| | |
|-------------|--|
| Description | Presence flags for V2xFac_CenDsrcTollingZoneType |
|-------------|--|

] ()

[SWS_V2xFac_00058] [

| | | | |
|-------------|---|--|------------------------------|
| Name | V2xFac_LowFrequencyContainerType | | |
| Kind | Structure | | |
| Elements | choice | V2xFac_LowFrequencyContainerChoiceType | Mark which element is filled |
| | basicVehicleContainerLowFrequency | V2xFac_BasicVehicleContainerLowFrequencyType | -- |
| Description | LowFrequencyContainer as defined in ETSI EN 302 637-2 V1.3.2. Values for data elements within this structure shall be used according that document. | | |
| Variation | -- | | |

] ()

[SWS_V2xFac_00186] [

| | | | |
|--------------|--|------|----------------|
| Name | V2xFac_LowFrequencyContainerChoiceType | | |
| Kind | Type | | |
| Derived from | uint8 | | |
| Description | Enumeration of Choice V2xFac_LowFrequencyContainerType | | |
| Range | V2XFAC_LOWFREQCONTAINER_BASIC_VEHICLE_CONTAINER_LOW_FREQ | 0x01 | Element chosen |
| Variation | -- | | |

] ()

[SWS_V2xFac_00187] [

| | | | |
|-------------|---|---------------------------|-----------------|
| Name | V2xFac_BasicVehicleContainerLowFrequencyType | | |
| Kind | Structure | | |
| Elements | vehicleRole | V2xFac_VehicleRoleType | Vehicle role |
| | exteriorLights | V2xFac_ExteriorLightsType | Exterior Lights |
| | pathHistory | V2xFac_PathHistoryType | Path History |
| Description | BasicVehicleLowFrequencyContainer as defined in ETSI EN 302 637-2 V1.3.2. Values for data elements within this structure shall be used according that document. | | |

| | |
|-----------|----|
| Variation | -- |
|-----------|----|

] ()

[SWS_V2xFac_00188] [

| | | | |
|--------------|---|------|---|
| Name | V2xFac_VehicleRoleType | | |
| Kind | Type | | |
| Derived from | uint8 | | |
| Description | Enumeration of DE_VehicleRole as defined in ETSI TS 102 894-2 V1.2.1. | | |
| Range | V2XFAC_VEHICLEROLE_DEFAULT | 0x00 | default vehicle role as indicated by the vehicle type |
| | V2XFAC_VEHICLEROLE_PUBLIC_TRANSPORT | 0x01 | vehicle is used to operate public transport service |
| | V2XFAC_VEHICLEROLE_SPECIAL_TRANSPORT | 0x02 | vehicle is used for special transport purpose, e.g. oversized trucks |
| | V2XFAC_VEHICLEROLE_DANGEROUS_GOODS | 0x03 | vehicle is used for dangerous goods transportation |
| | V2XFAC_VEHICLEROLE_ROAD_WORK | 0x04 | vehicle is used to realize roadwork or road maintenance mission |
| | V2XFAC_VEHICLEROLE_RESCUE | 0x05 | vehicle is used for rescue purpose in case of an accident, e.g. as a towing service |
| | V2XFAC_VEHICLEROLE_EMERGENCY | 0x06 | vehicle is used for emergency mission, e.g. ambulance, fire brigade |
| | V2XFAC_VEHICLEROLE_SAFETY_CAR | 0x07 | vehicle is used for public safety, e.g. patrol |
| | V2XFAC_VEHICLEROLE_AGRICULTURAL | 0x08 | vehicle is used for agriculture, e.g. farm tractor |
| | V2XFAC_VEHICLEROLE_COMMERCIAL | 0x09 | vehicle is used for transportation of commercial goods |
| | V2XFAC_VEHICLEROLE_MILITARY | 0x0a | vehicle is used for military purpose |
| | V2XFAC_VEHICLEROLE_ROAD_OPERATOR | 0x0b | vehicle is used in road operator missions |
| | V2XFAC_VEHICLEROLE_TAXI | 0x0c | vehicle is used to provide |

| | | | |
|-----------|-------------------------------|------|----------------------------|
| | | | an authorized taxi service |
| | V2XFAC_VEHICLEROLE_RESERVED_1 | 0x0d | reserved for future usage |
| | V2XFAC_VEHICLEROLE_RESERVED_2 | 0x0e | reserved for future usage |
| | V2XFAC_VEHICLEROLE_RESERVED_3 | 0x0f | reserved for future usage |
| Variation | -- | | |

] ()

[SWS_V2xFac_00189] [

| | | | | |
|--------------|---|------------------------|------|----------------------------------|
| Name | V2xFac_ExteriorLightsType | | | |
| Kind | Bitfield | | | |
| Derived from | uint8 | | | |
| Elements | Kind | Name | Mask | Description |
| | bit | lowBeamHeadlightsOn | 0x80 | Bit 7: low beam headlights on |
| | bit | highBeamHeadlightsOn | 0x40 | Bit 6: high beam headlights on |
| | bit | leftTurnSignalOn | 0x20 | Bit 5: left turn signal on |
| | bit | rightTurnSignalOn | 0x10 | Bit 4: right turn signal on |
| | bit | daytimeRunningLightsOn | 0x08 | Bit 3: daytime running lights on |
| | bit | reverseLightOn | 0x04 | Bit 2: reverse light on |
| | bit | fogLightOn | 0x02 | Bit 1: fog light on |
| | bit | parkingLightsOn | 0x01 | Bit 0: parking lights on |
| Description | BitString DE_ExteriorLights as defined in ETSI TS 102 894-2 V1.2.1. | | | |

] ()

[SWS_V2xFac_00060] [

| | | | |
|-------------|--|-----------------------------------|---|
| Name | V2xFac_PathPointType | | |
| Kind | Structure | | |
| Elements | presence | V2xFac_PathPointPresenceType | Mark optional children present or not |
| | pathPosition | V2xFac_DeltaReferencePositionType | Defines a geographical point position as offset position to a reference geographical point. |
| | pathDeltaTime | uint16 | Presents the time difference when two consecutive PathPoint values are measured. |
| Description | DF_PathPoint as defined in ETSI TS 102 894-2 V1.2.1. Values for data elements within | | |

| | |
|-----------|---|
| | this structure shall be used according that document. |
| Variation | -- |

] ()

[SWS_V2xFac_00190] [

| | | | | |
|--------------|---|---------------|------|-------------------------------------|
| Name | V2xFac_PathPointPresenceType | | | |
| Kind | Bitfield | | | |
| Derived from | uint8 | | | |
| Elements | Kind | Name | Mask | Description |
| | bit | pathDeltaTime | 0x01 | Bit 0 (LSB): Optional child present |
| Description | Presence flags for V2xFac_PathPointType | | | |

] ()

[SWS_V2xFac_00061] [

| | | | |
|-------------|--|---|--|
| Name | V2xFac_PublicTransportContainerType | | |
| Kind | Structure | | |
| Elements | presence | V2xFac_PublicTransportContainerPresenceType | Mark optional childs present or not |
| | embarkationStatus | boolean | Indicates whether the passenger embarkation is currently ongoing |
| | ptActivation | V2xFac_PtActivationType | Used by public transport vehicles for controlling traffic lights, barriers, bollards, etc. |
| Description | PublicTransportContainer as defined in ETSI EN 302 637-2 V1.3.2. Values for data elements within this structure shall be used according that document. | | |
| Variation | -- | | |

] ()

[SWS_V2xFac_00191] [

| | |
|--------------|---|
| Name | V2xFac_PublicTransportContainerPresenceType |
| Kind | Bitfield |
| Derived from | uint8 |

| Elements | Kind | Name | Mask | Description |
|-------------|--|--------------|------|-------------------------------------|
| | bit | ptActivation | 0x01 | Bit 0 (LSB): Optional child present |
| Description | Presence flags for V2xFac_PublicTransportContainerType | | | |

] ()

[SWS_V2xFac_00229] [

| | | | |
|-------------|---|-----------------------------|---|
| Name | V2xFac_PtActivationType | | |
| Kind | Structure | | |
| Elements | ptActivationType | uint8 | Indicates a certain coding type of the PtActivationData |
| | ptActivationData | V2xFac_PtActivationDataType | Controlling traffic signal systems to prioritize and speed up public transportation |
| Description | DF_PtActivation as defined in ETSI TS 102 894-2 V1.2.1. | | |
| Variation | -- | | |

] ()

[SWS_V2xFac_00237] [

| | | | |
|-------------|---|----------------|--|
| Name | V2xFac_PtActivationDataType | | |
| Kind | Structure | | |
| Elements | count | uint8 | Number of valid elements within array. |
| | values | Array of uint8 | -- |
| | | Size | 20 |
| Description | DF_PtActivationData as defined in ETSI TS 102 894-2 V1.2.1. Values for data elements within this structure shall be used according that document. | | |
| Variation | -- | | |

] ()

[SWS_V2xFac_00062] [

| | | | |
|-------------|---|---------------------------------|---|
| Name | V2xFac_SpecialTransportContainerType | | |
| Kind | Structure | | |
| Elements | specialTransportType | V2xFac_SpecialTransportTypeType | Indicates whether the originating ITS-S is mounted on a special transport vehicle |
| | lightBarSirenInUse | V2xFac_LightBarSirenInUseType | Indicates whether light-bar or a siren is in use |
| Description | SpecialTransportContainer as defined in ETSI EN 302 637-2 V1.3.2. Values for data elements within this structure shall be used according that document. | | |

| | |
|-----------|----|
| Variation | -- |
|-----------|----|

] ()

[SWS_V2xFac_00192] [

| | | | | |
|--------------|---|--------------|------|----------------------------|
| Name | V2xFac_SpecialTransportTypeType | | | |
| Kind | Bitfield | | | |
| Derived from | uint8 | | | |
| Elements | Kind | Name | Mask | Description |
| | bit | heavyLoad | 0x08 | Bit 3: heavy load |
| | bit | excessWidth | 0x04 | Bit 2: excess width |
| | bit | excessLength | 0x02 | Bit 1: excess length |
| | bit | excessHeight | 0x01 | Bit 0 (LSB): excess height |
| Description | BitString DE_SpecialTransportType as defined in ETSI TS 102 894-2 V1.2.1. | | | |

] ()

[SWS_V2xFac_00193] [

| | | | | |
|--------------|---|-------------------|------|------------------------------|
| Name | V2xFac_LightBarSirenInUseType | | | |
| Kind | Bitfield | | | |
| Derived from | uint8 | | | |
| Elements | Kind | Name | Mask | Description |
| | bit | lightBarActivated | 0x02 | Bit 1: light bar activated |
| | bit | sirenActivated | 0x01 | Bit 0 (LSB): siren activated |
| Description | BitString DE_LightBarSirenInUse as defined in ETSI TS 102 894-2 V1.2.1. | | | |

] ()

[SWS_V2xFac_00064] [

| | | | |
|-------------|---|--------------------------------|--|
| Name | V2xFac_DangerousGoodsContainerType | | |
| Kind | Structure | | |
| Elements | dangerousGoodsBasic | V2xFac_DangerousGoodsBasicType | Identifies the type of the dangerous goods transported |
| Description | DangerousGoodsContainer as defined in ETSI EN 302 637-2 V1.3.2. Values for data elements within this structure shall be used according that document. | | |
| Variation | -- | | |

] ()

[SWS_V2xFac_00194] [

| | | | |
|--------------|--|------|---|
| Name | V2xFac_DangerousGoodsBasicType | | |
| Kind | Type | | |
| Derived from | uint8 | | |
| Description | Enumeration of DE_DangerousGoodsBasic as defined in ETSI TS 102 894-2 V1.2.1. | | |
| Range | V2XFAC_DANGEROUSGOODSBASIC_EXPLOSIVES_1 | 0x00 | explosives 1 |
| | V2XFAC_DANGEROUSGOODSBASIC_EXPLOSIVES_2 | 0x01 | explosives 2 |
| | V2XFAC_DANGEROUSGOODSBASIC_EXPLOSIVES_3 | 0x02 | explosives 3 |
| | V2XFAC_DANGEROUSGOODSBASIC_EXPLOSIVES_4 | 0x03 | explosives 4 |
| | V2XFAC_DANGEROUSGOODSBASIC_EXPLOSIVES_5 | 0x04 | explosives 5 |
| | V2XFAC_DANGEROUSGOODSBASIC_EXPLOSIVES_6 | 0x05 | explosives 6 |
| | V2XFAC_DANGEROUSGOODSBASIC_FLAMMABLE_GASES | 0x06 | flammable gases |
| | V2XFAC_DANGEROUSGOODSBASIC_NON_FLAMMABLE_GASES | 0x07 | non flammable gases |
| | V2XFAC_DANGEROUSGOODSBASIC_TOXIC_GASES | 0x08 | toxic gases |
| | V2XFAC_DANGEROUSGOODSBASIC_FLAMMABLE_LIQUIDS | 0x09 | flammable liquids |
| | V2XFAC_DANGEROUSGOODSBASIC_FLAMMABLE_SOLIDS | 0x0a | flammable solids |
| | V2XFAC_DANGEROUSGOODSBASIC_SUBSTANCES_LIBLE_TO_SPONTANEOUS_COMBUSTION | 0x0b | substances liable to spontaneous combustion |
| | V2XFAC_DANGEROUSGOODSBASIC_SUBSTANCES_EMITTING_FLAMMABLE_GASES_UPON_CONTACT_WITH_WATER | 0x0c | substances emitting flammable gases upon contact with water |

| | | | |
|---------------|---|----------|--|
| | | | ble gases upon contact with water |
| | V2XFAC_DANGEROUSGOODSBASIC_OXIDIZING_SUBSTANCES | 0x 0d | oxidizin g substan ces |
| | V2XFAC_DANGEROUSGOODSBASIC_ORGANIC_PEROXIDES | 0x 0e | organic peroxid es |
| | V2XFAC_DANGEROUSGOODSBASIC_TOXIC_SUBSTANCES | 0x 0f | toxic substan ces |
| | V2XFAC_DANGEROUSGOODSBASIC_INFECTIOUS_SUBSTANCES | 0x 10 | infectiou s substan ces |
| | V2XFAC_DANGEROUSGOODSBASIC_RADIOACTIVE_MATERIAL | 0x 11 | radioact ive material |
| | V2XFAC_DANGEROUSGOODSBASIC_CORROSIVE_SUBSTANCES | 0x 12 | corrosiv e substan ces |
| | V2XFAC_DANGEROUSGOODSBASIC_MISCELLANEOUS_DANGEROUS_SUBSTANCES | 0x 13 | miscella neous dangero us substan ces |
| Variati on | -- | | |

] ()

[SWS_V2xFac_00065] [

| | | | |
|----------|------------------------------------|--|---|
| Name | V2xFac_RoadWorksContainerBasicType | | |
| Kind | Structure | | |
| Elements | presence | V2xFac_RoadWorksContainerBasicPresence Type | Mark optional childs present or not |
| | roadworksSubCauseCo de | uint8 | Information on the type of roadwork |
| | lightBarSirenInUse | V2xFac_LightBarSirenInUseType | Indicates |

| | | | |
|-------------|---|------------------------|---|
| | | | whether light-bar or a siren is in use |
| | closedLanes | V2xFac_ClosedLanesType | Information about the opening/closure status of the lanes ahead |
| Description | RoadWorksContainerBasic as defined in ETSI EN 302 637-2 V1.3.2. Values for data elements within this structure shall be used according that document. | | |
| Variation | -- | | |

] ()

[SWS_V2xFac_00195] [

| | | | | |
|--------------|---|-----------------------|------|-------------------------------------|
| Name | V2xFac_RoadWorksContainerBasicPresenceType | | | |
| Kind | Bitfield | | | |
| Derived from | uint8 | | | |
| Elements | Kind | Name | Mask | Description |
| | bit | roadworksSubCauseCode | 0x02 | Bit 1: Optional child present |
| | bit | closedLanes | 0x01 | Bit 0 (LSB): Optional child present |
| Description | Presence flags for V2xFac_RoadWorksContainerBasicType | | | |

] ()

[SWS_V2xFac_00066] [

| | | | |
|-------------|---|-------------------------------|--|
| Name | V2xFac_RescueContainerType | | |
| Kind | Structure | | |
| Elements | lightBarSirenInUse | V2xFac_LightBarSirenInUseType | Indicates whether light-bar or a siren is in use |
| Description | RescueContainer as defined in ETSI EN 302 637-2 V1.3.2. Values for data elements within this structure shall be used according that document. | | |
| Variation | -- | | |

] ()

[SWS_V2xFac_00067] [

| | | | |
|----------|-------------------------------|---------------------------------------|-------------------------------------|
| Name | V2xFac_EmergencyContainerType | | |
| Kind | Structure | | |
| Elements | presence | V2xFac_EmergencyContainerPresenceType | Mark optional childs present or not |

| | | | |
|-------------|--|-------------------------------|---|
| | lightBarSirenInUse | V2xFac_LightBarSirenInUseType | Indicates whether light-bar or a siren is in use |
| | incidentIndication | V2xFac_CauseCodeType | Describes the event type of the emergency or safety mission |
| | emergencyPriority | V2xFac_EmergencyPriorityType | Right of way indicator of the vehicle |
| Description | EmergencyContainer as defined in ETSI EN 302 637-2 V1.3.2. Values for data elements within this structure shall be used according that document. | | |
| Variation | -- | | |

] ()

[SWS_V2xFac_00196] [

| | | | | |
|--------------|--|---------------------------------------|------|---|
| Name | V2xFac_EmergencyPriorityType | | | |
| Kind | Bitfield | | | |
| Derived from | uint8 | | | |
| Elements | Kind | Name | Mask | Description |
| | bit | requestForRightOfWay | 0x02 | Bit 1: request for right of way |
| | bit | requestForFreeCrossingAtATrafficLight | 0x01 | Bit 0 (LSB): request for free crossing at a traffic light |
| Description | BitString DE_EmergencyPriority as defined in ETSI TS 102 894-2 | | | |

] ()

[SWS_V2xFac_00197] [

| | | | | |
|--------------|--|--------------------|------|-------------------------------------|
| Name | V2xFac_EmergencyContainerPresenceType | | | |
| Kind | Bitfield | | | |
| Derived from | uint8 | | | |
| Elements | Kind | Name | Mask | Description |
| | bit | incidentIndication | 0x02 | Bit 1: Optional child present |
| | bit | emergencyPriority | 0x01 | Bit 0 (LSB): Optional child present |
| Description | Presence flags for V2xFac_EmergencyContainerType | | | |

] ()

[SWS_V2xFac_00068] [

| | |
|------|-------------------------------|
| Name | V2xFac_SafetyCarContainerType |
|------|-------------------------------|

| Kind | Structure | | |
|-------------|--|---------------------------------------|---|
| Elements | presence | V2xFac_SafetyCarContainerPresenceType | Mark optional childs present or not |
| | lightBarSirenInUse | V2xFac_LightBarSirenInUseType | Indicates whether light-bar or a siren is in use |
| | incidentIndication | V2xFac_CauseCodeType | Describes the event type of the emergency or safety mission |
| | trafficRule | V2xFac_TrafficRuleType | Indicates whether vehicles are allowed to overtake a safety car |
| | speedLimit | uint8 | Indicates whether a speed limit is applied to vehicles following the safety car |
| Description | SafetyCarContainer as defined in ETSI EN 302 637-2 V1.3.2. Values for data elements within this structure shall be used according that document. | | |
| Variation | -- | | |

] ()

[SWS_V2xFac_00198] [

| Name | V2xFac_SafetyCarContainerPresenceType | | | |
|--------------|--|--------------------|------|-------------------------------------|
| Kind | Bitfield | | | |
| Derived from | uint8 | | | |
| Elements | Kind | Name | Mask | Description |
| | bit | incidentIndication | 0x04 | Bit 2: Optional child present |
| | bit | trafficRule | 0x02 | Bit 1: Optional child present |
| | bit | speedLimit | 0x01 | Bit 0 (LSB): Optional child present |
| Description | Presence flags for V2xFac_SafetyCarContainerType | | | |

] ()

8.7.3.4 DENM specific Implementation DataTypes

[SWS_V2xFac_00069] [

| Name | V2xFac_DenmMessageRootType | | |
|----------|----------------------------|-------------------------|------------------|
| Kind | Structure | | |
| Elements | itsPduHeader | V2xFac_ItsPduHeaderType | Structure of the |

| | | | |
|-------------|---|-------------------|---------------------------------|
| | | | ItsPduHeader |
| | denm | V2xFac_DenMsgType | Structure of the DEN data |
| | transactionId | uint32 | TransactionId for received DENM |
| Description | DENM root message as defined in ETSI EN 302 637-3 V1.2.2. Values for data elements within this structure shall be used according that document. | | |
| Variation | -- | | |

] ()

[SWS_V2xFac_00070] [

| | | | |
|-------------|---|--------------------------------|-------------------------------------|
| Name | V2xFac_DenMsgType | | |
| Kind | Structure | | |
| Elements | presence | V2xFac_DenMsgPresenceType | Mark optional childs present or not |
| | management | V2xFac_ManagementContainerType | management container |
| | situation | V2xFac_SituationContainerType | situation container |
| | location | V2xFac_LocationContainerType | location container |
| | alacarte | V2xFac_AlacarteContainerType | alacarte container |
| Description | DecentralizedEnvironmentalNotificationMessage as defined in ETSI EN 302 637-3 V1.2.2. Values for data elements within this structure shall be used according that document. | | |
| Variation | -- | | |

] ()

[SWS_V2xFac_00199] [

| | | | | |
|--------------|--------------------------------------|-----------|------|-------------------------------------|
| Name | V2xFac_DenMsgPresenceType | | | |
| Kind | Bitfield | | | |
| Derived from | uint8 | | | |
| Elements | Kind | Name | Mask | Description |
| | bit | situation | 0x04 | Bit 2: Optional child present |
| | bit | location | 0x02 | Bit 1: Optional child present |
| | bit | alacarte | 0x01 | Bit 0 (LSB): Optional child present |
| Description | Presence flags for V2xFac_DenMsgType | | | |

] ()

[SWS_V2xFac_00071] [

| | |
|------|--------------------------------|
| Name | V2xFac_ManagementContainerType |
|------|--------------------------------|

| Kind | Structure | | |
|----------|---------------------------|--|--|
| Elements | presence | V2xFac_ManagementContainerPresenceType | Mark optional childs present or not |
| | actionId | V2xFac_ActionIdType | Action identifier |
| | detectionTime | uint64 | Time at which the event is detected |
| | referenceTime | uint64 | Refers to the time at which a new DENM, an update DENM or a cancellation DENM is generated |
| | termination | V2xFac_TerminationType | Indicates if the type of generated DENM is a cancellation DENM or a negation DENM. |
| | eventPosition | V2xFac_ReferencePositionType | Geographical position of the detected event |
| | relevanceDistance | V2xFac_RelevanceDistanceType | The distance in which event information is relevant for the receiving ITS-S |
| | relevanceTrafficDirection | V2xFac_RelevanceTrafficDirectionType | Traffic direction that is relevant to information indicated in a message |
| | validityDuration | uint32 | estimation of how long the event may persist |
| | transmissionInterval | uint16 | Time interval |

| | | | |
|-------------|---|-------|---|
| | | | between two consecutive message transmissions |
| | stationType | uint8 | Station type information of the originating ITS-S |
| Description | ManagementContainer as defined in ETSI EN 302 637-3 V1.2.2. Values for data elements within this structure shall be used according that document. | | |
| Variation | -- | | |

] ()

[SWS_V2xFac_00240] [

| | | | |
|--------------|--|------|--------------|
| Name | V2xFac_TerminationType | | |
| Kind | Type | | |
| Derived from | uint8 | | |
| Description | Enumeration of Termination as defined in ETSI EN 302 637-3 V1.2.2. | | |
| Range | V2XFAC_TERMINATION_ISCANCELLATION | 0x00 | Cancellation |
| | V2XFAC_TERMINATION_ISNEGATION | 0x01 | -- |
| Variation | -- | | |

] ()

[SWS_V2xFac_00200] [

| | | | |
|--------------|---|------|------------------|
| Name | V2xFac_RelevanceDistanceType | | |
| Kind | Type | | |
| Derived from | uint8 | | |
| Description | Enumeration of DE_RelevanceDistance as defined in ETSI TS 102 894-2 V1.2.1. | | |
| Range | V2XFAC_RELEVANCEDISTANCE_LESS_THAN_50_M | 0x00 | less than 50 m |
| | V2XFAC_RELEVANCEDISTANCE_LESS_THAN_100_M | 0x01 | less than 100 m |
| | V2XFAC_RELEVANCEDISTANCE_LESS_THAN_200_M | 0x02 | less than 200 m |
| | V2XFAC_RELEVANCEDISTANCE_LESS_THAN_500_M | 0x03 | less than 500 m |
| | V2XFAC_RELEVANCEDISTANCE_LESS_THAN_1000_M | 0x04 | less than 1000 m |
| | V2XFAC_RELEVANCEDISTANCE_LESS_THAN_5_KM | 0x05 | less than 5 km |
| | V2XFAC_RELEVANCEDISTANCE_LESS_THAN_10_KM | 0x06 | less than 10 km |

| | | | |
|-----------|-------------------------------------|------|------------|
| | V2XFAC_RELEVANCEDISTANCE_OVER_10_KM | 0x07 | over 10 km |
| Variation | -- | | |

] ()

[SWS_V2xFac_00201] [

| | | | |
|--------------|---|------|------------------------|
| Name | V2xFac_RelevanceTrafficDirectionType | | |
| Kind | Type | | |
| Derived from | uint8 | | |
| Description | Enumeration of DE_RelevanceTrafficDirection as defined in ETSI TS 102 894-2 V1.2.1. | | |
| Range | V2XFAC_RELEVANCETRAFFICDIRECTION_ALL_TRAFFIC_DIRECTIONS | 0x00 | all traffic directions |
| | V2XFAC_RELEVANCETRAFFICDIRECTION_UPSTREAM_TRAFFIC | 0x01 | upstream traffic |
| | V2XFAC_RELEVANCETRAFFICDIRECTION_DOWNSTREAM_TRAFFIC | 0x02 | downstream traffic |
| | V2XFAC_RELEVANCETRAFFICDIRECTION_OPPOSITE_TRAFFIC | 0x03 | opposite traffic |
| Variation | -- | | |

] ()

[SWS_V2xFac_00202] [

| | | | | |
|--------------|---|---------------------------|------|-------------------------------------|
| Name | V2xFac_ManagementContainerPresenceType | | | |
| Kind | Bitfield | | | |
| Derived from | uint8 | | | |
| Elements | Kind | Name | Mask | Description |
| | bit | termination | 0x08 | Bit 3: Optional child present |
| | bit | relevanceDistance | 0x04 | Bit 2: Optional child present |
| | bit | relevanceTrafficDirection | 0x02 | Bit 1: Optional child present |
| | bit | transmissionInterval | 0x01 | Bit 0 (LSB): Optional child present |
| Description | Presence flags for V2xFac_ManagementContainerType | | | |

] ()

[SWS_V2xFac_00073] [

| | |
|------|-------------------------------|
| Name | V2xFac_SituationContainerType |
| Kind | Structure |

| | | | |
|-------------|--|---------------------------------------|--|
| Elements | presence | V2xFac_SituationContainerPresenceType | Mark optional childs present or not |
| | informationQuality | uint8 | Quality level of the information provided by the ITS-S application |
| | eventType | V2xFac_CauseCodeType | Encoded value of a traffic event type |
| | linkedCause | V2xFac_CauseCodeType | Encoded value of a traffic event type |
| | eventHistory | V2xFac_EventHistoryType | EventHistory |
| Description | SituationContainer as defined in ETSI EN 302 637-3 V1.2.2. Values for data elements within this structure shall be used according that document. | | |
| Variation | -- | | |

] ()

[SWS_V2xFac_00203] [

| | | | | |
|--------------|--|--------------|------|-------------------------------------|
| Name | V2xFac_SituationContainerPresenceType | | | |
| Kind | Bitfield | | | |
| Derived from | uint8 | | | |
| Elements | Kind | Name | Mask | Description |
| | bit | linkedCause | 0x02 | Bit 1: Optional child present |
| | bit | eventHistory | 0x01 | Bit 0 (LSB): Optional child present |
| Description | Presence flags for V2xFac_SituationContainerType | | | |

] ()

[SWS_V2xFac_00075] [

| | | | |
|-------------|---|--------------------------------|--|
| Name | V2xFac_EventHistoryType | | |
| Kind | Structure | | |
| Elements | count | uint8 | Number of valid elements within array. |
| | values | Array of V2xFac_EventPointType | -- |
| | | Size | 23 |
| Description | DF_EventHistory as defined in ETSI TS 102 894-2 V1.2.1. | | |
| Variation | -- | | |

] ()

[SWS_V2xFac_00076] [

| | |
|------|-----------------------|
| Name | V2xFac_EventPointType |
|------|-----------------------|

| | | | |
|-------------|---|-----------------------------------|--|
| Kind | Structure | | |
| Elements | presence | V2xFac_EventPointPresenceType | Mark optional childs present or not |
| | eventPosition | V2xFac_DeltaReferencePositionType | Offset position of a detected event point. |
| | eventDeltaTime | uint16 | Time travelled by the detecting ITS-S since the previous detected event point. |
| | informationQuality | uint8 | Information quality of the detection for this event point. |
| Description | DF_EventPoint as defined in ETSI TS 102 894-2 V1.2.1. Values for data elements within this structure shall be used according that document. | | |
| Variation | -- | | |

] ()

[SWS_V2xFac_00204] [

| | | | | |
|--------------|--|----------------|------|-------------------------------------|
| Name | V2xFac_EventPointPresenceType | | | |
| Kind | Bitfield | | | |
| Derived from | uint8 | | | |
| Elements | Kind | Name | Mask | Description |
| | bit | eventDeltaTime | 0x01 | Bit 0 (LSB): Optional child present |
| Description | Presence flags for V2xFac_EventPointType | | | |

] ()

[SWS_V2xFac_00077] [

| | | | |
|----------|------------------------------|--------------------------------------|-------------------------------------|
| Name | V2xFac_LocationContainerType | | |
| Kind | Structure | | |
| Elements | presence | V2xFac_LocationContainerPresenceType | Mark optional childs present or not |
| | eventSpeed | V2xFac_SpeedType | Moving speed of a detected event |
| | eventPositionHeading | V2xFac_HeadingType | The heading direction of the event |
| | traces | V2xFac_TracesType | One or more paths |

| | | | |
|-------------|---|---------------------|-------------------------|
| | roadType | V2xFac_RoadTypeType | Type of a road segment. |
| Description | LocationContainer as defined in ETSI EN 302 637-3 V1.2.2. Values for data elements within this structure shall be used according that document. | | |
| Variation | -- | | |

] ()

[SWS_V2xFac_00241] [

| | | | |
|--------------|--|------|---|
| Name | V2xFac_RoadTypeType | | |
| Kind | Type | | |
| Derived from | uint8 | | |
| Description | Enumeration of DE_RoadType as defined in ETSI TS 102 894-2 V1.2.1. | | |
| Range | V2XFAC_ROADTYPE_URBAN_NOSTRUCTURALSEPARATIONTOOPPOSITELANES | 0x00 | Urban road without structural separation to opposite lanes. |
| | V2XFAC_ROADTYPE_URBAN_WITHSTRUCTURALSEPARATIONTOOPPOSITELANES | 0x01 | Urban road with structural separation to opposite lanes. |
| | V2XFAC_ROADTYPE_NONURBAN_NOSTRUCTURALSEPARATIONTOOPPOSITELANES | 0x02 | Non-urban road without structural separation to opposite lanes. |
| | V2XFAC_ROADTYPE_ONURBAN_WITHSTRUCTURALSEPARATIONTOOPPOSITELANES | 0x03 | Non-urban road with structural separation |

| | | | |
|---------------|----|--|------------------------------|
| | | | on to opposit e lanes. |
| Variatio n | -- | | |

] ()

[SWS_V2xFac_00205] [

| | | | |
|-------------|---|---------------------------------|--|
| Name | V2xFac_TracesType | | |
| Kind | Structure | | |
| Elements | count | uint8 | Number of valid elements within array. |
| | values | Array of V2xFac_PathHistoryType | -- |
| | | Size | 7 |
| Description | DF_Traces as defined in ETSI TS 102 894-2 V1.2.1. Size of the Array shall be 7. | | |
| Variation | -- | | |

] ()

[SWS_V2xFac_00206] [

| | | | | |
|--------------|---|----------------------|------|-------------------------------------|
| Name | V2xFac_LocationContainerPresenceType | | | |
| Kind | Bitfield | | | |
| Derived from | uint8 | | | |
| Elements | Kind | Name | Mask | Description |
| | bit | eventSpeed | 0x04 | Bit 2: Optional child present |
| | bit | eventPositionHeading | 0x02 | Bit 1: Optional child present |
| | bit | roadType | 0x01 | Bit 0 (LSB): Optional child present |
| Description | Presence flags for V2xFac_LocationContainerType | | | |

] ()

[SWS_V2xFac_00078] [

| | | | |
|----------|------------------------------|--------------------------------------|---|
| Name | V2xFac_AlacarteContainerType | | |
| Kind | Structure | | |
| Elements | presence | V2xFac_AlacarteContainerPresenceType | Mark optional childs present or not |
| | lanePosition | sint8 | The lane position of the event position |
| | impactReduction | V2xFac_ImpactReductionContainerType | -- |

| | | | |
|-------------|---|---------------------------------------|---|
| | externalTemperature | sint8 | Indicates the ambient temperature at the event position |
| | roadWorks | V2xFac_RoadWorksContainerExtendedType | -- |
| | positioningSolution | V2xFac_PositioningSolutionTypeType | Indicates the positioning technology being used to estimate a geographical position |
| | stationaryVehicle | V2xFac_StationaryVehicleContainerType | -- |
| Description | AlacarteContainer as defined in ETSI EN 302 637-3 V1.2.2. Values for data elements within this structure shall be used according that document. | | |
| Variation | -- | | |

] ()

[SWS_V2xFac_00207] [

| | | | |
|--------------|---|------|--------------------------------------|
| Name | V2xFac_PositioningSolutionTypeType | | |
| Kind | Type | | |
| Derived from | uint8 | | |
| Description | Enumeration of DE_PositioningSolutionType as defined in ETSI TS 102 894-2 V1.2.1. | | |
| Range | V2XFAC_POSITIONINGSOLUTIONTYPE_NO_POSITIONING_SOLUTION | 0x00 | No GNSS |
| | V2XFAC_POSITIONINGSOLUTIONTYPE_SGNSS | 0x01 | Global Navigation Satellite System |
| | V2XFAC_POSITIONINGSOLUTIONTYPE_DGNSS | 0x02 | Differential GNSS |
| | V2XFAC_POSITIONINGSOLUTIONTYPE_SGNSSPLUSDR | 0x03 | GNSS and dead reckoning |
| | V2XFAC_POSITIONINGSOLUTIONTYPE_DGNSSPLUSDR | 0x04 | Differential GNSS and dead reckoning |
| | V2XFAC_POSITIONINGSOLUTIONTYPE_DR | 0x05 | dead reckoning |
| Variation | -- | | |

] ()

[SWS_V2xFac_00208] [

| | | | | |
|--------------|---|---------------------|------|-------------------------------------|
| Name | V2xFac_AlacarteContainerPresenceType | | | |
| Kind | Bitfield | | | |
| Derived from | uint8 | | | |
| Elements | Kind | Name | Mask | Description |
| | bit | lanePosition | 0x20 | Bit 5: Optional child present |
| | bit | impactReduction | 0x10 | Bit 4: Optional child present |
| | bit | externalTemperature | 0x08 | Bit 3: Optional child present |
| | bit | roadWorks | 0x04 | Bit 2: Optional child present |
| | bit | positioningSolution | 0x02 | Bit 1: Optional child present |
| | bit | stationaryVehicle | 0x01 | Bit 0 (LSB): Optional child present |
| Description | Presence flags for V2xFac_AlacarteContainerType | | | |

] ()

[SWS_V2xFac_00079] [

| | | | |
|----------|-------------------------------------|-------|---|
| Name | V2xFac_ImpactReductionContainerType | | |
| Kind | Structure | | |
| Elements | heightLonCarrLeft | uint8 | Height of left longitudinal carrier of the vehicle from base to top |
| | heightLonCarrRight | uint8 | Height of right longitudinal carrier of the vehicle from base to top |
| | posLonCarrLeft | uint8 | Distance from the centre of vehicle front bumper to the front of the left longitudinal carrier of vehicle |
| | posLonCarrRight | uint8 | Distance from the centre of vehicle front bumper to the front of the right longitudinal |

| | | | |
|--|---------------------------|--------------------------------------|--|
| | | | carrier of vehicle |
| | positionOfPillars | V2xFac_PositionOfPillarsType | Indicates the perpendicular inter-distance of neighbouring pillar |
| | posCentMass | uint8 | Indicates the perpendicular distance from the centre of mass of an empty load vehicle |
| | wheelBaseVehicle | uint8 | Perpendicular distance between front and rear axle of the wheel base of vehicle |
| | turningRadius | uint8 | The smallest circular turn (i.e. U-turn) that the vehicle is capable of making |
| | posFrontAx | uint8 | Perpendicular distance between the vehicle front line of the bounding box and the front wheel axle in 10 centimetres |
| | positionOfOccupants | V2xFac_PositionOfOccupantsType | indicates whether a in vehicle seat is occupied at the moment when the impactReduction is generated |
| | vehicleMass | uint16 | Mass of an empty loaded vehicle in multiple of 100 kg |
| | requestResponseIndication | V2xFac_RequestResponseIndicationType | This DE includes whether an ITS message is |

| | | | |
|-------------|--|--|--|
| | | | transmitted as request from ITS-S or a response transmitted from ITS-S after receiving request from other ITS-Ss |
| Description | ImpactReductionContainer as defined in ETSI EN 302 637-3 V1.2.2. Values for data elements within this structure shall be used according that document. | | |
| Variation | -- | | |

] ()

[SWS_V2xFac_00209] [

| | | | |
|-------------|--|----------------|--|
| Name | V2xFac_PositionOfPillarsType | | |
| Kind | Structure | | |
| Elements | count | uint8 | Number of valid elements within array. |
| | values | Array of uint8 | -- |
| | | Size | 3 |
| Description | DF_PositionOfPillars as defined in ETSI TS 102 894-2 V1.2.1. Size of the Array shall be 3. | | |
| Variation | -- | | |

] ()

[SWS_V2xFac_00210] [

| | | | | |
|--------------|--------------------------------|-------------------|---------|------------------------------|
| Name | V2xFac_PositionOfOccupantsType | | | |
| Kind | Bitfield | | | |
| Derived from | uint32 | | | |
| Elements | Kind | Name | Mask | Description |
| | bit | row1LeftOccupied | 0x80000 | Bit 19: row 1 left occupied |
| | bit | row1RightOccupied | 0x40000 | Bit 18: row 1 right occupied |
| | bit | row1MidOccupied | 0x20000 | Bit 17: row 1 mid occupied |
| | bit | row1NotDetectable | 0x10000 | Bit 16: row 1 not detectable |
| | bit | row1NotPresent | 0x8000 | Bit 15: row 1 not present |
| | bit | row2LeftOccupied | 0x4000 | Bit 14: row 2 left occupied |
| | bit | row2RightOccupied | 0x2000 | Bit 13: row 2 right occupied |
| | bit | row2MidOccupied | 0x1000 | Bit 12: row 2 mid occupied |

| | | | | |
|-------------|--|-------------------|-------|--------------------------------|
| | bit | row2NotDetectable | 0x800 | Bit 11: row 2 not detectable |
| | bit | row2NotPresent | 0x400 | Bit 10: row 2 not present |
| | bit | row3LeftOccupied | 0x200 | Bit 9: row 3 left occupied |
| | bit | row3RightOccupied | 0x100 | Bit 8: row 3 right occupied |
| | bit | row3MidOccupied | 0x80 | Bit 7: row 3 mid occupied |
| | bit | row3NotDetectable | 0x40 | Bit 6: row 3 not detectable |
| | bit | row3NotPresent | 0x20 | Bit 5: row 3 not present |
| | bit | row4LeftOccupied | 0x10 | Bit 4: row 4 left occupied |
| | bit | row4RightOccupied | 0x08 | Bit 3: row 4 right occupied |
| | bit | row4MidOccupied | 0x04 | Bit 2: row 4 mid occupied |
| | bit | row4NotDetectable | 0x02 | Bit 1: row 4 not detectable |
| | bit | row4NotPresent | 0x01 | Bit 0 (LSB): row 4 not present |
| Description | BitString DE_PositionOfOccupants as defined in ETSI TS 102 894-2 V1.2.1. | | | |

] ()

[SWS_V2xFac_00242] [

| | | | |
|--------------|---|------|----------|
| Name | V2xFac_RequestResponseIndicationType | | |
| Kind | Type | | |
| Derived from | uint8 | | |
| Description | Enumeration of DE_RequestResponseIndication as defined in ETSI TS 102 894-2 V1.2.1. | | |
| Range | V2XFAC_REQUESTRESPONSEINDICATION_REQUEST | 0x00 | Request |
| | V2XFAC_REQUESTRESPONSEINDICATION_RESPONSE | 0x01 | Response |
| Variation | -- | | |

] ()

[SWS_V2xFac_00080] [

| | | | |
|----------|---------------------------------------|---|--|
| Name | V2xFac_RoadWorksContainerExtendedType | | |
| Kind | Structure | | |
| Elements | presence | V2xFac_RoadWorksContainerExtendedPresenceType | Mark optional childs present or not |
| | lightBarSirenInUse | V2xFac_LightBarSirenInUseType | Indicates whether light-bar or a siren |

| | | | |
|-------------|--|-----------------------------------|--|
| | | | is in use |
| | closedLanes | V2xFac_ClosedLanesType | Indicates the opening/closure status of a lane or a set of lanes |
| | restriction | V2xFac_RestrictedTypesType | List of ITS-S types to which a certain traffic restriction e.g. the speed limit, applies |
| | speedLimit | uint8 | Speed limitation applied to a geographical position, a road section or a geographical region |
| | incidentIndication | V2xFac_CauseCodeType | Describes the event type of the emergency or safety mission |
| | recommendedPath | V2xFac_ItineraryPathType | -- |
| | startingPointSpeedLimit | V2xFac_DeltaReferencePositionType | -- |
| | trafficFlowRule | V2xFac_TrafficRuleType | Indicates traffic rules that apply to vehicles at a certain position |
| | referenceDenms | V2xFac_ReferenceDenmsType | Indicates a sequence of actionIDs for different DENMs that describe the same event |
| Description | RoadWorksContainerExtended as defined in ETSI EN 302 637-3 V1.2.2. Values for data elements within this structure shall be used according that document. | | |
| Variation | -- | | |

] ()

[SWS_V2xFac_00211] [

| | | | |
|-------------|--|----------------|---------------------------------------|
| Name | V2xFac_RestrictedTypesType | | |
| Kind | Structure | | |
| Elements | count | uint8 | Number of valid elements within array |
| | values | Array of uint8 | -- |
| | | Size | 3 |
| Description | DF_RestrictedTypes as defined in ETSI TS 102 894-2 V1.2.1. Size of the Array shall be 3. | | |
| Variation | -- | | |

] ()

[SWS_V2xFac_00212] [

| | | | |
|-------------|---|---------------------------------------|--|
| Name | V2xFac_ItineraryPathType | | |
| Kind | Structure | | |
| Elements | count | uint8 | Number of valid elements within array. |
| | values | Array of V2xFac_ReferencePositionType | -- |
| | | Size | 40 |
| Description | DF_ItineraryPath as defined in ETSI TS 102 894-2 V1.2.1. Size of the Array shall be 40. | | |
| Variation | -- | | |

] ()

[SWS_V2xFac_00213] [

| | | | |
|--------------|---|------|---|
| Name | V2xFac_TrafficRuleType | | |
| Kind | Type | | |
| Derived from | uint8 | | |
| Description | Enumeration of DE_TrafficRule as defined in ETSI TS 102 894-2 V1.2.1. | | |
| Range | V2XFAC_TRAFFICRULE_NO_PASSING | 0x00 | Overtaking is prohibited for all vehicles |
| | V2XFAC_TRAFFICRULE_NO_PASSING_FOR_TRUCKS | 0x01 | Overtaking is prohibited for trucks |
| | V2XFAC_TRAFFICRULE_PASS_TO_RIGHT | 0x02 | Vehicles should pass to the right lane |
| | V2XFAC_TRAFFICRULE_PASS_TO_LEFT | 0x03 | Vehicles should pass to the left lane |

| | |
|-----------|----|
| Variation | -- |
|-----------|----|

] ()

[SWS_V2xFac_00214] [

| | | | |
|-------------|--|------------------------------|--|
| Name | V2xFac_ReferenceDenmsType | | |
| Kind | Structure | | |
| Elements | count | uint8 | Number of valid elements within array. |
| | values | Array of V2xFac_ActionIdType | -- |
| | | Size | 8 |
| Description | ReferenceDenms as defined in ETSI EN 302 637-3 V1.2.2. Size of the Array shall be 8. | | |
| Variation | -- | | |

] ()

[SWS_V2xFac_00215] [

| | | | | |
|--------------|--|-------------------------|-------|-------------------------------------|
| Name | V2xFac_RoadWorksContainerExtendedPresenceType | | | |
| Kind | Bitfield | | | |
| Derived from | uint16 | | | |
| Elements | Kind | Name | Mask | Description |
| | bit | lightBarSirenInUse | 0x100 | Bit 8: Optional child present |
| | bit | closedLanes | 0x80 | Bit 7: Optional child present |
| | bit | restriction | 0x40 | Bit 6: Optional child present |
| | bit | speedLimit | 0x20 | Bit 5: Optional child present |
| | bit | incidentIndication | 0x10 | Bit 4: Optional child present |
| | bit | recommendedPath | 0x08 | Bit 3: Optional child present |
| | bit | startingPointSpeedLimit | 0x04 | Bit 2: Optional child present |
| | bit | trafficFlowRule | 0x02 | Bit 1: Optional child present |
| | bit | referenceDenms | 0x01 | Bit 0 (LSB): Optional child present |
| Description | Presence flags for V2xFac_RoadWorksContainerExtendedType | | | |

] ()

[SWS_V2xFac_00081] [

| | | | |
|----------|---------------------------------------|---|---------------|
| Name | V2xFac_StationaryVehicleContainerType | | |
| Kind | Structure | | |
| Elements | presence | V2xFac_StationaryVehicleContainerPresenceType | Mark optional |

| | | | |
|-------------|--|-----------------------------------|---|
| | | | childs present or not |
| | stationarySince | V2xFac_StationarySinceType | Duration in minutes of a vehicle being stationary |
| | stationaryCause | V2xFac_CauseCodeType | Additional information to describe causes of the stationary vehicle |
| | carryingDangerousGoods | V2xFac_DangerousGoodsExtendedType | In case the stationary vehicle is carrying dangerous goods |
| | numberOfOccupants | uint8 | Number of occupants in a vehicle |
| | vehicleIdentification | V2xFac_VehicleIdentificationType | Provides information related to the identification of a vehicle |
| | energyStorageType | V2xFac_EnergyStorageType | Type of energy being used and stored |
| Description | StationaryVehicleContainer as defined in ETSI EN 302 637-3 V1.2.2. Values for data elements within this structure shall be used according that document. | | |
| Variation | -- | | |

] ()

[SWS_V2xFac_00216] [

| | |
|--------------|---|
| Name | V2xFac_StationarySinceType |
| Kind | Type |
| Derived from | uint8 |
| Description | Enumeration of DE_StationarySince as defined in ETSI TS 102 894-2 V1.2.1. |

| | | | |
|-----------|--|------|-----------------------------|
| Range | V2XFAC_STATIONARYSINCE_LESS_THAN_1_MINUTE | 0x00 | less than 1 minute |
| | V2XFAC_STATIONARYSINCE_LESS_THAN_2_MINUTES | 0x01 | less than 2 minutes |
| | V2XFAC_STATIONARYSINCE_LESS_THAN_15_MINUTES | 0x02 | less than 15 minutes |
| | V2XFAC_STATIONARYSINCE_EQUAL_OR_GREATER_15_MINUTES | 0x03 | equal or greater 15 minutes |
| Variation | -- | | |

] ()

[SWS_V2xFac_00217] [

| | | | | |
|--------------|--|-----------------------|------|--------------------------------|
| Name | V2xFac_EnergyStorageType | | | |
| Kind | Bitfield | | | |
| Derived from | uint8 | | | |
| Elements | Kind | Name | Mask | Description |
| | bit | hydrogenStorage | 0x40 | Bit 6: hydrogen storage |
| | bit | electricEnergyStorage | 0x20 | Bit 5: electric energy storage |
| | bit | liquidPropaneGas | 0x10 | Bit 4: liquid propane gas |
| | bit | compressedNaturalGas | 0x08 | Bit 3: compressed natural gas |
| | bit | diesel | 0x04 | Bit 2: diesel |
| | bit | gasoline | 0x02 | Bit 1: gasoline |
| | bit | ammonia | 0x01 | Bit 0 (LSB): ammonia |
| Description | BitString DE_EnergyStorage as defined in ETSI TS 102 894-2 V1.2.1. | | | |

] ()

[SWS_V2xFac_00218] [

| | |
|--------------|---|
| Name | V2xFac_StationaryVehicleContainerPresenceType |
| Kind | Bitfield |
| Derived from | uint8 |

| Elements | Kind | Name | Mask | Description |
|-------------|--|------------------------|------|-------------------------------------|
| | bit | stationarySince | 0x20 | Bit 5: Optional child present |
| | bit | stationaryCause | 0x10 | Bit 4: Optional child present |
| | bit | carryingDangerousGoods | 0x08 | Bit 3: Optional child present |
| | bit | numberOfOccupants | 0x04 | Bit 2: Optional child present |
| | bit | vehicleIdentification | 0x02 | Bit 1: Optional child present |
| | bit | energyStorageType | 0x01 | Bit 0 (LSB): Optional child present |
| Description | Presence flags for V2xFac_StationaryVehicleContainerType | | | |

] ()

[SWS_V2xFac_00236] [

| Name | V2xFac_DangerousGoodsExtendedType | | |
|----------|-----------------------------------|---|---|
| Kind | Structure | | |
| Elements | presence | V2xFac_DangerousGoodsExtendedPresenceType | Mark optional childs present or not |
| | dangerousGoodsType | V2xFac_DangerousGoodsBasicType | Type of dangerous goods |
| | unNumber | uint16 | 4-digit number that identifies the substance of the dangerous goods |
| | elevatedTemperature | boolean | Whether the carried dangerous goods are transported at high temperature |
| | tunnelsRestricted | boolean | whether the heavy vehicle carrying dangerous goods is restricted to enter tunnels |
| | limitedQuantity | boolean | whether the carried |

| | | | |
|-------------|---|--------------------------------|--|
| | | | dangerous goods are packed with limited quantity |
| | emergencyActionCode | V2xFac_EmergencyActionCodeType | Physical signage placard at the vehicle |
| | phoneNumber | V2xFac_PhoneNumberType | Contact phone number of assistance service in case of incident or accident |
| | companyName | V2xFac_CompanyNameType | Name of company that manages the transportation of the dangerous goods |
| Description | DF_DangerousGoodsExtended as defined in ETSI TS 102 894-2 V1.2.1. Values for data elements within this structure shall be used according that document. | | |
| Variation | -- | | |

] ()

[SWS_V2xFac_00219] [

| | | | |
|-------------|--|----------------|--|
| Name | V2xFac_EmergencyActionCodeType | | |
| Kind | Structure | | |
| Elements | count | uint8 | Number of valid elements within array. |
| | values | Array of uint8 | -- |
| | | Size | 24 |
| Description | emergencyActionCode as defined in DangerousGoodsExtended in ETSI TS 102 894-2 V1.2.1. Size of the Array shall be 24. | | |
| Variation | -- | | |

] ()

[SWS_V2xFac_00220] [

| | | | |
|------|------------------------|--|--|
| Name | V2xFac_PhoneNumberType | | |
| Kind | Structure | | |

| | | | |
|-------------|--|----------------|--|
| Elements | count | uint8 | Number of valid elements within array. |
| | values | Array of uint8 | -- |
| | | Size | 24 |
| Description | phoneNumber as defined in DangerousGoodsExtended in ETSI TS 102 894-2 V1.2.1. Size of the Array shall be 24. | | |
| Variation | -- | | |

] ()

[SWS_V2xFac_00221] [

| | | | |
|-------------|--|----------------|--|
| Name | V2xFac_CompanyNameType | | |
| Kind | Structure | | |
| Elements | count | uint8 | Number of valid elements within array. |
| | values | Array of uint8 | -- |
| | | Size | 24 |
| Description | companyName as defined in DangerousGoodsExtended in ETSI TS 102 894-2 V1.2.1. Size of the Array shall be 24. | | |
| Variation | -- | | |

] ()

[SWS_V2xFac_00222] [

| | | | | |
|--------------|--|---------------------|------|-------------------------------------|
| Name | V2xFac_DangerousGoodsExtendedPresenceType | | | |
| Kind | Bitfield | | | |
| Derived from | uint8 | | | |
| Elements | Kind | Name | Mask | Description |
| | bit | emergencyActionCode | 0x04 | Bit 2: Optional child present |
| | bit | phoneNumber | 0x02 | Bit 1: Optional child present |
| | bit | companyName | 0x01 | Bit 0 (LSB): Optional child present |
| Description | Presence flags for V2xFac_DangerousGoodsExtendedType | | | |

] ()

[SWS_V2xFac_00230] [

| | | | |
|----------|----------------------------------|--|-------------------------------------|
| Name | V2xFac_VehicleIdentificationType | | |
| Kind | Structure | | |
| Elements | presence | V2xFac_VehicleIdentificationPresenceType | Mark optional childs present or not |
| | wmiNumber | V2xFac_WmiNumberType | World Manufacturer |

| | | | |
|-------------|--|----------------|----------------------------------|
| | | | Identifier (WMI) |
| | vds | V2xFac_VdsType | Vehicle Descriptor Section (VDS) |
| Description | DF_VehicleIdentification as defined in ETSI TS 102 894-2 V1.2.1. Values for data elements within this structure shall be used according that document. | | |
| Variation | -- | | |

] ()

[SWS_V2xFac_00223] [

| | | | | |
|--------------|---|-----------|------|-------------------------------------|
| Name | V2xFac_VehicleIdentificationPresenceType | | | |
| Kind | Bitfield | | | |
| Derived from | uint8 | | | |
| Elements | Kind | Name | Mask | Description |
| | bit | wmiNumber | 0x02 | Bit 1: Optional child present |
| | bit | vds | 0x01 | Bit 0 (LSB): Optional child present |
| Description | Presence flags for V2xFac_VehicleIdentificationType | | | |

] ()

[SWS_V2xFac_00243] [

| | | | |
|-------------|--|----------------|--|
| Name | V2xFac_WmiNumberType | | |
| Kind | Structure | | |
| Elements | count | uint8 | Number of valid elements within array. |
| | values | Array of uint8 | -- |
| | | Size | 3 |
| Description | DE_WMInumber as defined in ETSI TS 102 894-2 V1.2.1. Size of the Array shall be 3. | | |
| Variation | -- | | |

] ()

[SWS_V2xFac_00244] [

| | | | |
|-------------|--|----------------|--|
| Name | V2xFac_VdsType | | |
| Kind | Structure | | |
| Elements | count | uint8 | Number of valid elements within array. |
| | values | Array of uint8 | -- |
| | | Size | 6 |
| Description | DE_VDS as defined in ETSI TS 102 894-2 V1.2.1. Size of the Array shall be 6. | | |

| | |
|-----------|----|
| Variation | -- |
|-----------|----|

] ()

8.7.4 Ports

8.7.4.1 V2xFac_V2xFac_DenBs

[SWS_V2xFac_00102] [

| | | | |
|-------------|--|-----------|-------------|
| Name | V2xFac_DenBs | | |
| Kind | ProvidedPort | Interface | V2xFacDenBs |
| Description | Service port for DEN specific service requests | | |
| Variation | -- | | |

] ()

8.7.4.2 V2xFac_V2xFac_V2xApplRxIndication_CAM

[SWS_V2xFac_00104] [

| | | | |
|-------------|--|-----------|------------------------|
| Name | V2xFac_V2xApplRxIndication_CAM | | |
| Kind | ProvidedPort | Interface | V2xApplRxIndicationCam |
| Description | Port for delivering received CAMs to application layer | | |
| Variation | -- | | |

] ()

8.7.4.3 V2xFac_V2xFac_V2xApplRxIndication_DENM

[SWS_V2xFac_00233] [

| | | | |
|-------------|---|-----------|-------------------------|
| Name | V2xFac_V2xApplRxIndication_DENM | | |
| Kind | ProvidedPort | Interface | V2xApplRxIndicationDenm |
| Description | Port for delivering received DENMs to application layer | | |
| Variation | -- | | |

] ()

8.7.4.4 V2xFac_V2xFac_Vdp

[SWS_V2xFac_00105] [

| | | | |
|------|------------|--|--|
| Name | V2xFac_Vdp | | |
|------|------------|--|--|

| | | | |
|-------------|---|-----------|-----------|
| Kind | RequiredPort | Interface | V2xFacVdp |
| Description | Port for retrieving data from VDP application | | |
| Variation | -- | | |

J ()

9 Sequence diagrams

9.1 CAM Generation and Transmission

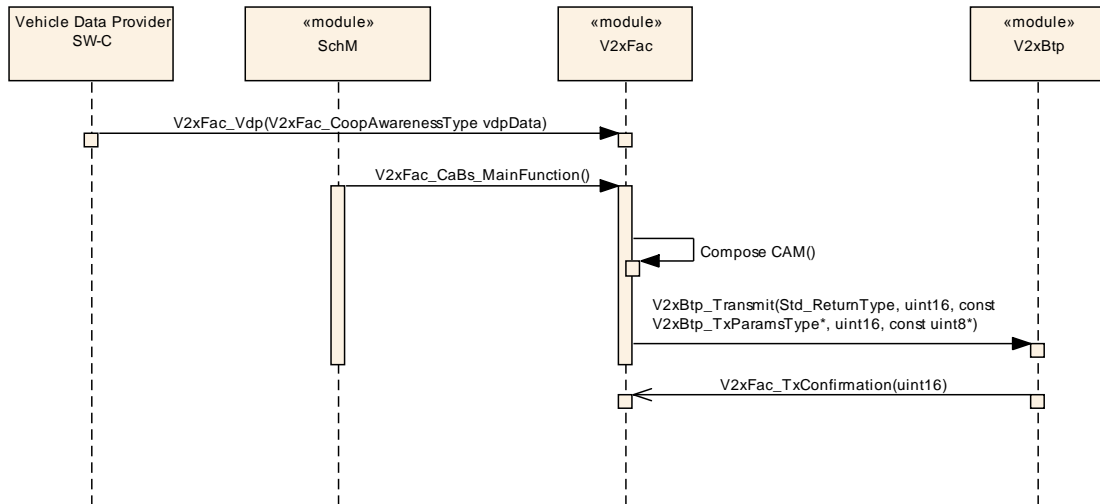


Figure 9.1 CAM Generation and Transmission

9.2 CAM Reception

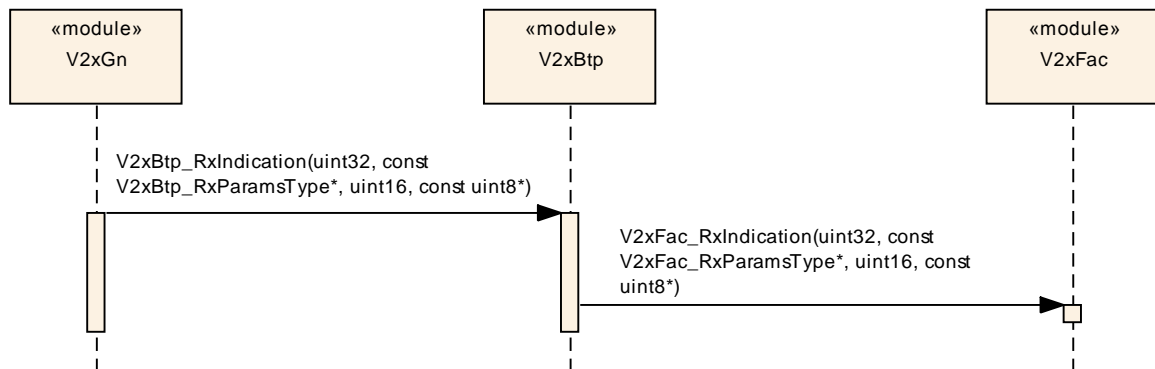


Figure 9.2 CAM Reception

9.3 DENM Generation and Transmission

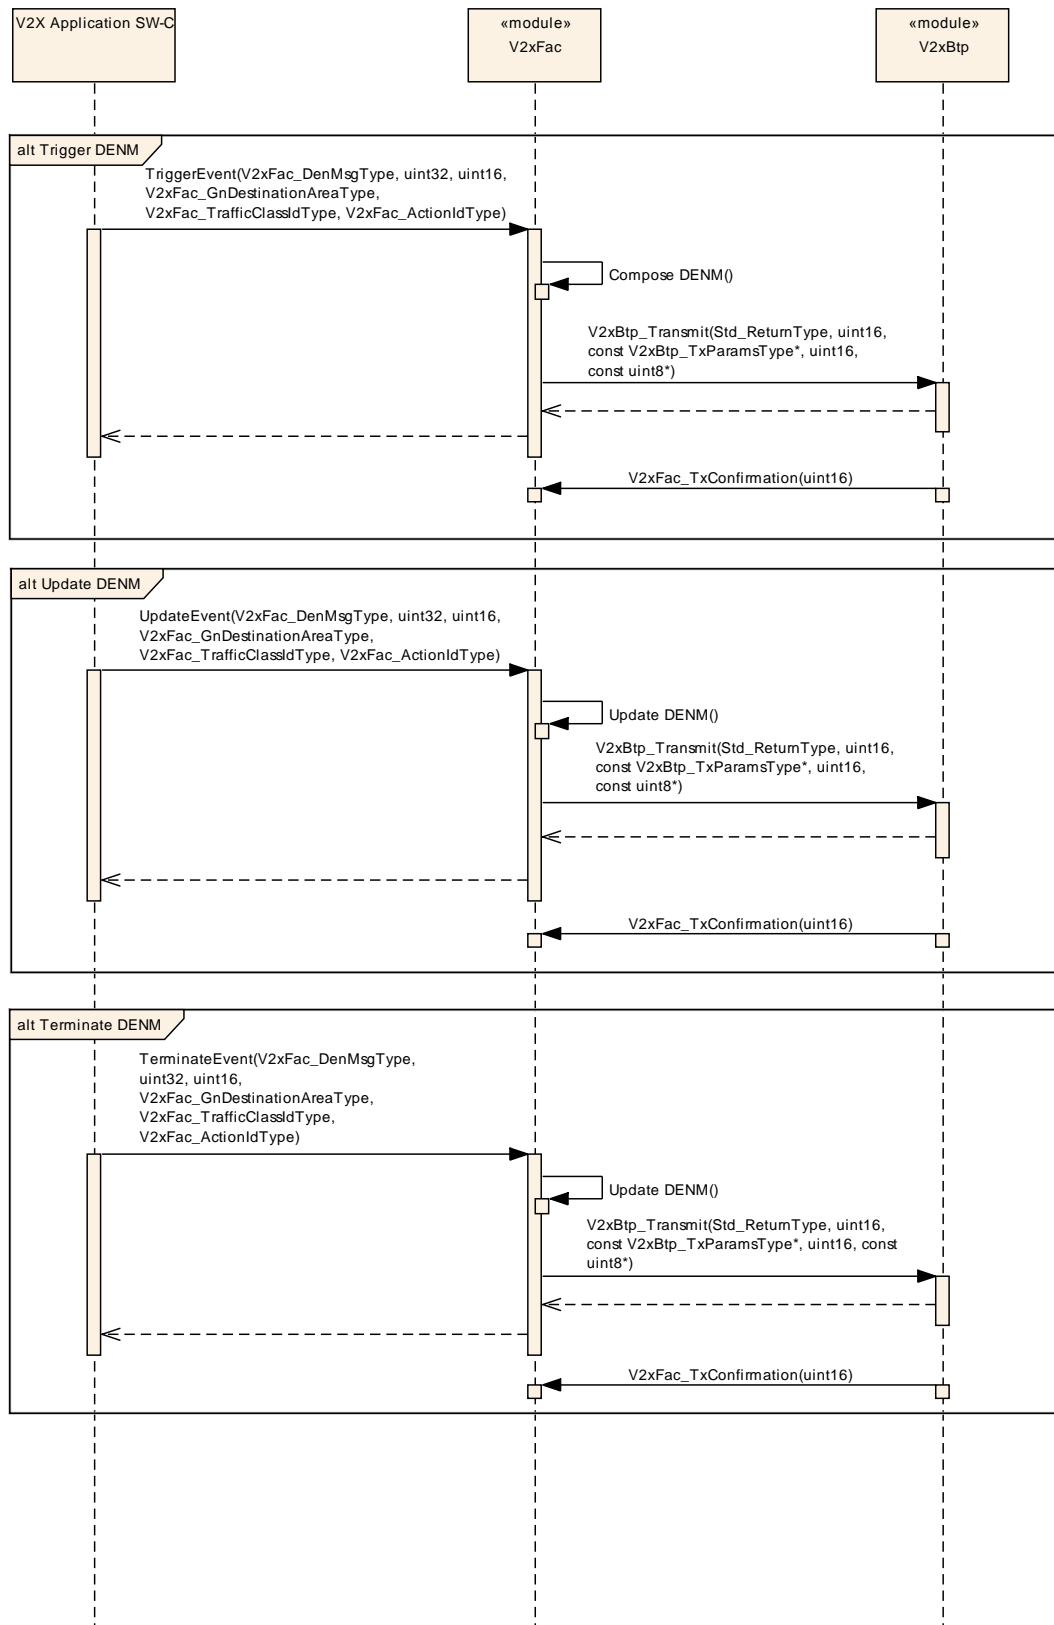


Figure 9.3 DENM Generation and Transmission

9.4 DENM Reception

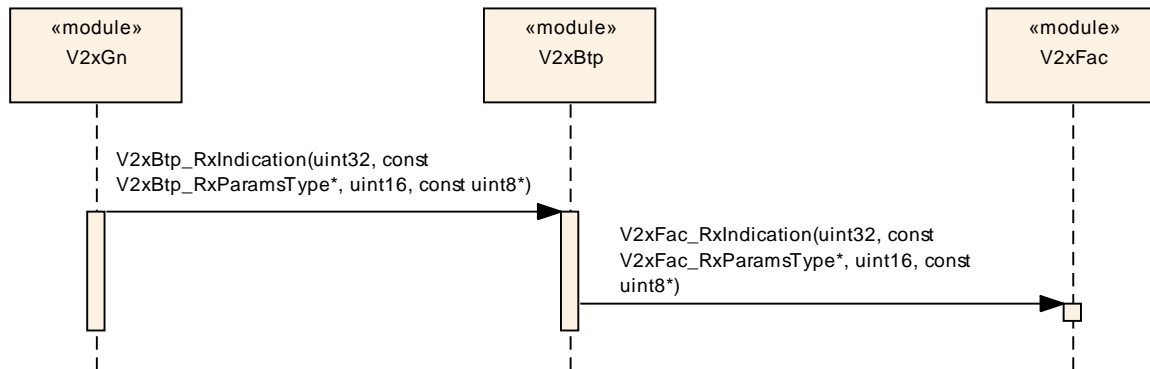


Figure 9.4 DENM Reception

10 Configuration specification

Chapter 10.1 specifies the structure (containers) and the parameters of the module V2xFac.

Chapter 10.2 specifies additionally published information of the module V2xFac.

10.1 Containers and configuration parameters

The following chapters summarize all configuration parameters. The detailed meanings of the parameters describe Chapter 7 and Chapter 8.

10.1.1 Variants

[SWS_V2xFac_00238] [The V2xFac module only supports VARIANT-PRE-COMPILE] (SRS_BSW_00345)

10.1.2 V2xFac

| | |
|-----------------------------------|-------------------------------------|
| SWS Item | ECUC_V2xFac_00001 : |
| Module Name | V2xFac |
| Module Description | Configuration of the V2xFac module. |
| Post-Build Variant Support | false |
| Supported Config Variants | VARIANT-PRE-COMPILE |

| Included Containers | | |
|----------------------------|---------------------|--|
| Container Name | Multiplicity | Scope / Dependency |
| V2xFacGeneral | 1 | This container contains the general configuration parameters of the Vehicle-2-X Basic Transport. |

10.1.3 V2xFacGeneral

| | |
|---------------------------------|--|
| SWS Item | ECUC_V2xFac_00002 : |
| Container Name | V2xFacGeneral |
| Description | This container contains the general configuration parameters of the Vehicle-2-X Basic Transport. |
| Configuration Parameters | |

| | |
|----------------------------------|--|
| SWS Item | ECUC_V2xFac_00006 : |
| Name | V2xFacCaBsMainFunctionPeriod |
| Description | This parameter defines the schedule period of V2xFac_CaBs_MainFunction.Unit: [s] |
| Multiplicity | 1 |
| Type | EcucFloatParamDef |
| Range | [0 .. INF[|
| Default value | 0.1 |
| Post-Build Variant Value | false |
| Value Configuration Class | Pre-compile time X All Variants |

| | | | |
|---------------------------|------------------------|----|--|
| | Link time | -- | |
| | Post-build time | -- | |
| Scope / Dependency | scope: local | | |

| | | | |
|----------------------------------|---|----|--------------|
| SWS Item | ECUC_V2xFac_00005 : | | |
| Name | V2xFacDenBsMainFunctionPeriod | | |
| Description | This parameter defines the schedule period of V2xFac_DenBs_MainFunction.Unit: [s] | | |
| Multiplicity | 1 | | |
| Type | EcucFloatParamDef | | |
| Range |]0 .. INF[| | |
| Default value | 0.1 | | |
| Post-Build Variant Value | false | | |
| Value Configuration Class | Pre-compile time | X | All Variants |
| | Link time | -- | |
| | Post-build time | -- | |
| Scope / Dependency | scope: local | | |

| | | | |
|----------------------------------|--|----|--------------|
| SWS Item | ECUC_V2xFac_00004 : | | |
| Name | V2xFacDevErrorDetect | | |
| Description | Switches the Default Error Tracer (Det) detection and notification ON or OFF. - true: enabled (ON) - false: disabled (OFF) | | |
| Multiplicity | 1 | | |
| Type | EcucBooleanParamDef | | |
| Default value | false | | |
| Post-Build Variant Value | false | | |
| Value Configuration Class | Pre-compile time | X | All Variants |
| | Link time | -- | |
| | Post-build time | -- | |
| Scope / Dependency | scope: local | | |

| | | | |
|---------------------------------|---|----|--------------|
| SWS Item | ECUC_V2xFac_00007 : | | |
| Name | V2xFacStationType | | |
| Description | This configuration value defines the station type information of the originating ITS-S, RoadSideUnit (15) not supported by AUTOSAR. | | |
| Multiplicity | 1 | | |
| Type | EcucEnumerationParamDef | | |
| Range | V2XFAC_ST_BUS | -- | |
| | V2XFAC_ST_CYCLIST | -- | |
| | V2XFAC_ST_HEAVYTRUCK | -- | |
| | V2XFAC_ST_LIGHTTRUCK | -- | |
| | V2XFAC_ST_MOPED | -- | |
| | V2XFAC_ST_MOTORCYCLE | -- | |
| | V2XFAC_ST_PASSENGERCAR | -- | |
| | V2XFAC_ST_PEDESTRIAN | -- | |
| | V2XFAC_ST_SPECIALVEHICLES | -- | |
| | V2XFAC_ST_TRAILER | -- | |
| | V2XFAC_ST_TRAM | -- | |
| | V2XFAC_ST_UNKNOWN | -- | |
| Default value | V2XFAC_ST_UNKNOWN | | |
| Post-Build Variant Value | false | | |
| Value Configuration | Pre-compile time | X | All Variants |
| | Link time | -- | |

| | | | |
|---------------------------|------------------------|----|--|
| Class | Post-build time | -- | |
| Scope / Dependency | scope: local | | |

| | | | |
|----------------------------------|--|----|--------------|
| SWS Item | ECUC_V2xFac_00003 : | | |
| Name | V2xFacVersionInfoApi | | |
| Description | Enable/disables the API for reading the version information of the V2xFac Module. - true: enabled (ON) - false: disabled (OFF) | | |
| Multiplicity | 1 | | |
| Type | EcucBooleanParamDef | | |
| Default value | false | | |
| Post-Build Variant Value | false | | |
| Value Configuration Class | Pre-compile time | X | All Variants |
| | Link time | -- | |
| | Post-build time | -- | |
| Scope / Dependency | scope: local | | |

| |
|-------------------------------|
| No Included Containers |
|-------------------------------|

11 Not applicable requirements