



supla

Simple. Smart. Open Source.

ESP-01-RGBW

User manual

Qb4-dev

Version 1.0

Table of Contents

1. Safety	2
2. Technical Description	3
2.1. General Information	3
2.2. Terminal Description	3
3. Connecting to SUPLA Cloud	5
4. Board Configuration	7
4.1. Information	7
4.2. Parameters	7

1. Safety



ESP-01-RGBW is an amateur DIY device. Installation and use require adherence to electrical safety rules. The device may only be used for private purposes. The author of the device is not responsible for its improper use.




Electrical device under voltage. Before performing any tasks related to power supply (connecting wires, installing the device, etc.), ensure that the device is disconnected from power. Installation should be carried out by a person with appropriate electrical qualifications.

2. Technical Description

2.1. General Information

Power Supply	12V/24V DC
Maximum Load	4x1A
Dimensions	60mm x 16mm x 10mm
WiFi Module ESP8266	802.11 b/g/n standard 2.4GHz
Default Network Address Configuration	DHCP
Ports used for communication	TCP:2015

2.2. Terminal Description

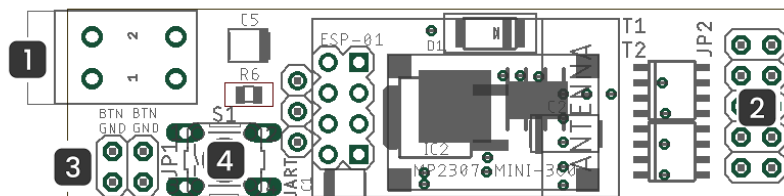

1. Power Supply:

2	12V/24V DC
1	GND

2. LED Output:

+	+	LED Plus
G	+	LED G / LED1
B	+	LED B / LED2
R	+	LED R / LED3
W	+	LED W / LED4



The operating mode (RGBW/4xLED) and the RGBW signals order can be adjusted to match the LED strip being used in the driver settings.

3. Button Inputs:

1	1	BTN
---	---	-----

2	2	GND
---	---	-----

4. Configuration Button:


Event	Effect
click x1	Brightness +25%
hold > 3s	Configuration mode



Default color in manual switching can be adjusted in the driver settings.

3. Connecting to SUPLA Cloud

1. Register at <https://cloud.supla.org> (registration is free)
2. In the **My SUPLA** view, enable the **Device Registration ACTIVE** option

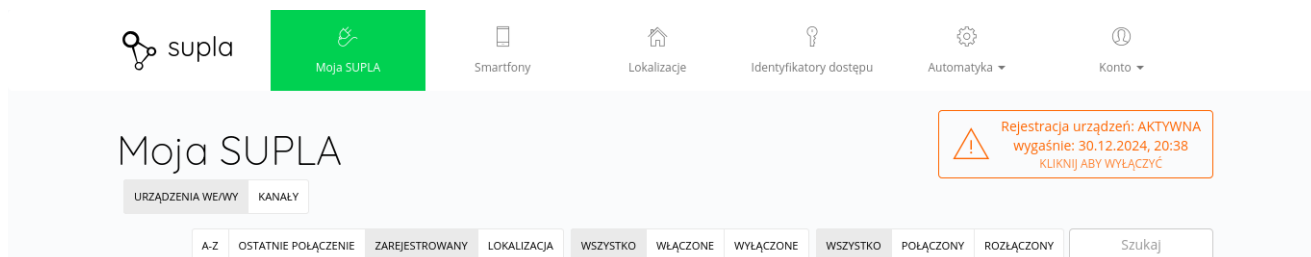

3. Put the device into configuration mode by holding the **CONFIG** button for 3 seconds
4. Connect to the WiFi network named **SUPLA-ESP-01-RGBW-XXXX** using any device with WiFi capability and a web browser
5. Open the device configuration page by navigating to <http://192.168.4.1> in a web browser
6. In the **WiFi** tab, enter the name and password of the WiFi network through which the device will access the Internet

ESP01_DIMMER	WiFi	Supla	Board	Firmware
--------------	------	-------	-------	----------

Status: connected
 Network: Dom
 authmode: WPA_WPA2_PSK
 RSSI: -56 dB
 IP addr: 192.168.100.27
 netmask: 255.255.255.0
 gateway: 192.168.100.1

SSID

Password

SUBMIT



After saving the settings, access passwords are not displayed to prevent unauthorized persons from reading them.

7. In the **SUPLA** tab, enter the SUPLA account email address and the server address

ESP01_DIMMER	WiFi	Supla	Board	Firmware
---------------------	------	--------------	-------	----------

Email

Server

SUBMIT

The server name can be found after logging in to cloud.supla.org









Rozpocznij tutaj

Podłączenie Twojego domu lub biura do SUPLI jest proste. Wszystko co musisz zrobić to przepisać do swoich urządzeń sterujących (wejścia/wyjścia) oraz smartfonów poniższe dane.



supla-dev

Poniższe dane wprowadź w ustawieniach Twojego urządzenia sterującego (urządzenie we/wy).

svr...supla.org

Adres serwera

Identyfikator Lokalizacji

Hasło



supla-client

Poniższe dane wprowadź w aplikacji mobilnej SUPLA zainstalowanej w Twoim smartfonie.

svr...supla.org

Adres serwera

Identyfikator Dostępu

Hasło

Polski

SUPLA Cloud 24.12 www.supla.org

Twoja sesja wygaśnie za 19:21.

4. Board Configuration

4.1. Information

4.2. Parameters

The table below lists the configurable parameters of the board available through the configuration page in the **BOARD** tab.

Group	Identifier	Description
MODE	OUTPUT	Output operating mode: COLOR - color control: RGBW 4xDIMMER - 4 x LED dimmer (single color)
COLOR	COLOR MAP	RGBW signal mapping. Available options: RGBW GBRW GRBW GRWB
	MANUAL COLOR	Color in manual activation mode using a button