

## BSS: Soundweb London

This module controls an "Analog Input Card" object in a Soundweb London program.




### GENERAL INFORMATION

<b>SIMPLWINDOWS NAME:</b>	BSS Soundweb London Analog Input Card v4.0
<b>CATEGORY:</b>	Mixer
<b>VERSION:</b>	V4.0
<b>SUMMARY:</b>	This module controls an "Analog Input Card" object in a Soundweb London program.
<b>GENERAL NOTES:</b>	<p>Each object in a Soundweb London program is given an object number. As "Analog Input Card" objects always have the same object ID, you just have to specify which "Analog Input Card" you want to control. ("card" parameter)</p> <p>The TX and RX of this module should be connected to a "BSS Soundweb London Node v4.0.umc" module.</p> <p>This "Node" module needs to have its "Node" parameter set to the node of the Soundweb London device to control.</p> <p>All analog input and outputs range from 0d to 65535d (0% to 100%)</p> <p>When pulsing the "subscribe" input, all functions (called state variables) of this object which have their corresponding subscribeTo-input set high will be subscribed to. From that point on, the Soundweb London will automatically report any change of these state variables made on the Soundweb London device itself. This module will then take this report and show it on the feedback outputs.</p> <p>At this moment, a change made by Crestron does not generate a feedback update. Pulsing the "subscribe" input will generate a feedback report also when already subscribed.</p> <p>All subscribed stateVariables report their value when changed. The meter stateVariable reports its value a defined times per second. So when subscribing a rate has to be defined for the meter value to be reported. (meterRate parameter)</p> <p>The parameter is set in milliseconds. 1d is "report meter value 1000 times per second)</p> <p>Please keep in mind that setting a value too low, will result in heavy data transmit.</p>
<b>CRESTRON HARDWARE REQUIRED:</b>	X-series or preferable 2-series
<b>SETUP OF CRESTRON HARDWARE:</b>	<p>The demo program was created on a PRO2 with TPS-4000</p> <p>The Soundweb London is to be connected on a com port with a standard crossed cable and the following settings:</p> <p>115200, 8, 1, N</p> <p>Or to use TCP/IP: Port 1023</p>
<b>VENDOR FIRMWARE:</b>	1.04.02
<b>VENDOR SETUP:</b>	Soundweb London Blu-80



## CABLE DIAGRAM:

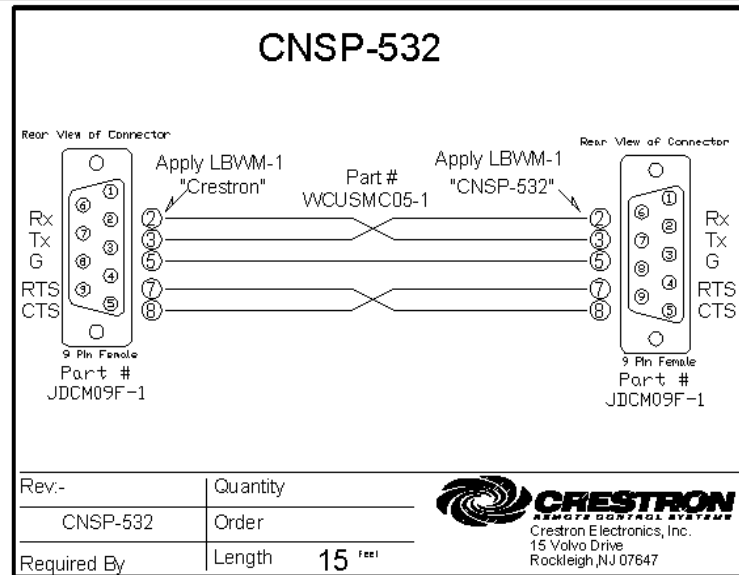

## CONTROL:

channel_x_reference	A	set the reference value (-50 to 20) of channel X
channel_x_attack	A	set the attack value (10µs to 0.2s) of channel X
channel_x_release	A	set the release value (50ms to 5s) of channel X
channel_x_gain	A	set the gain value (0dB to 48dB) of channel X
channel_x_phantomSwitchOn	D	set phantom switch of channel X to on (pulse)
channel_x_phantomSwitchOff	D	set phantom switch of channel X to off (pulse)
subscribeTo_channel_x_meter	D	When this input is high, pulsing the subscribe input will cause the module to subscribe to the meter of channel X
subscribeTo_channel_x_reference	D	When this input is high, pulsing the subscribe input will cause the module to subscribe to the reference of channel X



subscribeTo_channel_x_attack	D	When this input is high, pulsing the subscribe input will cause the module to subscribe to the attack of channel X
subscribeTo_channel_x_release	D	When this input is high, pulsing the subscribe input will cause the module to subscribe to the release of channel X
subscribeTo_channel_x_gain	D	When this input is high, pulsing the subscribe input will cause the module to subscribe to the gain of channel X
subscribeTo_channel_x_phantom	D	When this input is high, pulsing the subscribe input will cause the module to subscribe to the phantom switch of channel X
subscribe	D	subscribe to all functions (state variables) of the object set by the subscribeTo inputs
unsubscribe	D	unsubscribe to all functions (state variables) of the object set by the subscribeTo inputs
rx	S	connected to the "modulesRx" of the correct "BSS Soundweb London Node v4.0.umc" module

## FEEDBACK:

channel_x_meter_fb	A	meter feedback of channel X
channel_x_reference_fb	A	reference feedback of channel X
channel_x_attack_fb	A	attack feedback of channel X
channel_x_release_fb	A	release feedback of channel X
channel_x_gain_fb	A	gain feedback of channel X
channel_x_phantomSwitchOn_fb	D	phantomSwitchOn feedback of channel X
channel_x_phantomSwitchOff_fb	D	phantomSwitchOff feedback of channel X
tx	S	connected to the "modulesTx" of the correct "BSS Soundweb London Node v4.0.umc" module

## PARAMETERS:



card	d	Specifies which card is to be controlled. A, B, C or D
meterParam	d	set the rate in which the Soundweb London has to report back the meter value. Milliseconds: 1000d = once per second

## TESTING:

<b>OPS USED FOR TESTING:</b>	3.155.1240
<b>COMPILER USED FOR TESTING:</b>	2.11.09
<b>SAMPLE PROGRAM:</b>	BSS Soundweb London v4.0 Demo Program
<b>REVISION HISTORY:</b>	V1.0 Creation V3 – BSS made changes to a number of modules. V4.0 – Changed the RX\$ input on the Simpl+ modules to from a STRING_INPUT to a BUFFER_INPUT. Changed the room combine module so it requests the current value when it is done making changes.