

RIT VEXU Core API

Generated by Doxygen 1.12.0

1 Core	1
1.1 Getting Started	1
1.2 Features	2
2 Hierarchical Index	2
2.1 Class Hierarchy	2
3 Class Index	5
3.1 Class List	5
4 Class Documentation	8
4.1 Async Class Reference	8
4.1.1 Detailed Description	8
4.2 AutoChooser Class Reference	8
4.2.1 Detailed Description	9
4.2.2 Constructor & Destructor Documentation	9
4.2.3 Member Function Documentation	9
4.2.4 Member Data Documentation	10
4.3 BasicSolenoidSet Class Reference	10
4.3.1 Detailed Description	10
4.3.2 Constructor & Destructor Documentation	10
4.3.3 Member Function Documentation	11
4.4 BasicSpinCommand Class Reference	11
4.4.1 Detailed Description	11
4.4.2 Constructor & Destructor Documentation	11
4.4.3 Member Function Documentation	12
4.5 BasicStopCommand Class Reference	12
4.5.1 Detailed Description	12
4.5.2 Constructor & Destructor Documentation	13
4.5.3 Member Function Documentation	14
4.6 Branch Class Reference	14
4.6.1 Detailed Description	14
4.7 screen::ButtonWidget Class Reference	15
4.7.1 Detailed Description	15
4.7.2 Constructor & Destructor Documentation	15
4.7.3 Member Function Documentation	16
4.8 CommandController Class Reference	16
4.8.1 Detailed Description	17
4.8.2 Constructor & Destructor Documentation	17
4.8.3 Member Function Documentation	17
4.9 Condition Class Reference	19
4.9.1 Detailed Description	19
4.10 CustomEncoder Class Reference	19

4.10.1 Detailed Description	20
4.10.2 Constructor & Destructor Documentation	20
4.10.3 Member Function Documentation	20
4.11 DelayCommand Class Reference	22
4.11.1 Detailed Description	22
4.11.2 Constructor & Destructor Documentation	22
4.11.3 Member Function Documentation	22
4.12 DriveForwardCommand Class Reference	22
4.12.1 Detailed Description	23
4.12.2 Constructor & Destructor Documentation	23
4.12.3 Member Function Documentation	24
4.13 DriveStopCommand Class Reference	24
4.13.1 Detailed Description	24
4.13.2 Constructor & Destructor Documentation	24
4.13.3 Member Function Documentation	25
4.14 DriveToPointCommand Class Reference	25
4.14.1 Detailed Description	25
4.14.2 Constructor & Destructor Documentation	25
4.14.3 Member Function Documentation	26
4.15 AutoChooser::entry_t Struct Reference	27
4.15.1 Detailed Description	27
4.15.2 Member Data Documentation	27
4.16 ExponentialMovingAverage Class Reference	27
4.16.1 Detailed Description	28
4.16.2 Constructor & Destructor Documentation	28
4.16.3 Member Function Documentation	28
4.17 Feedback Class Reference	29
4.17.1 Detailed Description	30
4.17.2 Member Function Documentation	30
4.18 FeedForward Class Reference	31
4.18.1 Detailed Description	32
4.18.2 Constructor & Destructor Documentation	32
4.18.3 Member Function Documentation	32
4.19 FeedForward::ff_config_t Struct Reference	33
4.19.1 Detailed Description	33
4.19.2 Member Data Documentation	33
4.20 Filter Class Reference	34
4.20.1 Detailed Description	34
4.21 Flywheel Class Reference	34
4.21.1 Detailed Description	35
4.21.2 Constructor & Destructor Documentation	35
4.21.3 Member Function Documentation	36

4.21.4 Friends And Related Symbol Documentation	38
4.22 FlywheelStopCommand Class Reference	38
4.22.1 Detailed Description	38
4.22.2 Constructor & Destructor Documentation	38
4.22.3 Member Function Documentation	39
4.23 FlywheelStopMotorsCommand Class Reference	39
4.23.1 Detailed Description	39
4.23.2 Constructor & Destructor Documentation	39
4.23.3 Member Function Documentation	40
4.24 FlywheelStopNonTasksCommand Class Reference	40
4.24.1 Detailed Description	40
4.25 FunctionCommand Class Reference	40
4.25.1 Detailed Description	40
4.26 FunctionCondition Class Reference	41
4.26.1 Detailed Description	41
4.27 screen::FunctionPage Class Reference	41
4.27.1 Detailed Description	42
4.27.2 Constructor & Destructor Documentation	42
4.27.3 Member Function Documentation	42
4.28 GenericAuto Class Reference	43
4.28.1 Detailed Description	43
4.28.2 Member Function Documentation	43
4.29 PurePursuit::hermite_point Struct Reference	44
4.29.1 Detailed Description	45
4.30 IfTimePassed Class Reference	45
4.30.1 Detailed Description	45
4.31 InOrder Class Reference	45
4.31.1 Detailed Description	45
4.32 Lift< T > Class Template Reference	46
4.32.1 Detailed Description	46
4.32.2 Constructor & Destructor Documentation	46
4.32.3 Member Function Documentation	47
4.33 Lift< T >::lift_cfg_t Struct Reference	50
4.33.1 Detailed Description	50
4.34 Logger Class Reference	50
4.34.1 Detailed Description	51
4.34.2 Constructor & Destructor Documentation	51
4.34.3 Member Function Documentation	51
4.35 MotionController::m_profile_cfg_t Struct Reference	53
4.35.1 Detailed Description	53
4.36 StateMachine< System, IDType, Message, delay_ms, do_log >::MaybeMessage Class Reference .	54
4.36.1 Detailed Description	54

4.36.2 Constructor & Destructor Documentation	54
4.36.3 Member Function Documentation	55
4.37 MecanumDrive Class Reference	55
4.37.1 Detailed Description	56
4.37.2 Constructor & Destructor Documentation	56
4.37.3 Member Function Documentation	56
4.38 MecanumDrive::mecanumdrive_config_t Struct Reference	58
4.38.1 Detailed Description	58
4.39 motion_t Struct Reference	58
4.39.1 Detailed Description	59
4.40 MotionController Class Reference	59
4.40.1 Detailed Description	60
4.40.2 Constructor & Destructor Documentation	60
4.40.3 Member Function Documentation	60
4.41 MovingAverage Class Reference	63
4.41.1 Detailed Description	63
4.41.2 Constructor & Destructor Documentation	63
4.41.3 Member Function Documentation	64
4.42 Odometry3Wheel Class Reference	65
4.42.1 Detailed Description	66
4.42.2 Constructor & Destructor Documentation	66
4.42.3 Member Function Documentation	67
4.43 Odometry3Wheel::odometry3wheel_cfg_t Struct Reference	68
4.43.1 Detailed Description	68
4.43.2 Member Data Documentation	68
4.44 OdometryBase Class Reference	68
4.44.1 Detailed Description	69
4.44.2 Constructor & Destructor Documentation	70
4.44.3 Member Function Documentation	70
4.44.4 Member Data Documentation	73
4.45 screen::OdometryPage Class Reference	75
4.45.1 Detailed Description	75
4.45.2 Constructor & Destructor Documentation	75
4.45.3 Member Function Documentation	76
4.46 OdometryTank Class Reference	76
4.46.1 Detailed Description	78
4.46.2 Constructor & Destructor Documentation	78
4.46.3 Member Function Documentation	79
4.47 OdomSetPosition Class Reference	80
4.47.1 Detailed Description	80
4.47.2 Constructor & Destructor Documentation	80
4.47.3 Member Function Documentation	80

4.48 screen::Page Class Reference	81
4.48.1 Detailed Description	81
4.48.2 Member Function Documentation	81
4.49 Parallel Class Reference	82
4.49.1 Detailed Description	82
4.50 PurePursuit::Path Class Reference	82
4.50.1 Detailed Description	82
4.50.2 Constructor & Destructor Documentation	82
4.50.3 Member Function Documentation	83
4.51 PID Class Reference	83
4.51.1 Detailed Description	84
4.51.2 Member Enumeration Documentation	84
4.51.3 Constructor & Destructor Documentation	84
4.51.4 Member Function Documentation	85
4.51.5 Member Data Documentation	88
4.52 PID::pid_config_t Struct Reference	89
4.52.1 Detailed Description	89
4.52.2 Member Data Documentation	89
4.53 screen::PIDPage Class Reference	90
4.53.1 Detailed Description	90
4.53.2 Constructor & Destructor Documentation	90
4.53.3 Member Function Documentation	91
4.54 point_t Struct Reference	91
4.54.1 Detailed Description	92
4.54.2 Member Function Documentation	92
4.55 pose_t Struct Reference	93
4.55.1 Detailed Description	93
4.56 PurePursuitCommand Class Reference	93
4.56.1 Detailed Description	93
4.56.2 Constructor & Destructor Documentation	93
4.56.3 Member Function Documentation	94
4.57 robot_specs_t Struct Reference	94
4.57.1 Detailed Description	95
4.57.2 Member Data Documentation	95
4.58 screen::ScreenData Struct Reference	95
4.58.1 Detailed Description	95
4.59 Serializer Class Reference	95
4.59.1 Detailed Description	96
4.59.2 Constructor & Destructor Documentation	96
4.59.3 Member Function Documentation	96
4.60 screen::SliderWidget Class Reference	99
4.60.1 Detailed Description	99

4.60.2 Constructor & Destructor Documentation	100
4.60.3 Member Function Documentation	100
4.61 SpinRPMCommand Class Reference	100
4.61.1 Detailed Description	101
4.61.2 Constructor & Destructor Documentation	101
4.61.3 Member Function Documentation	101
4.62 PurePursuit::spline Struct Reference	101
4.62.1 Detailed Description	102
4.63 StateMachine< System, IDType, Message, delay_ms, do_log >::State Struct Reference	102
4.63.1 Detailed Description	102
4.64 StateMachine< System, IDType, Message, delay_ms, do_log > Class Template Reference	102
4.64.1 Detailed Description	103
4.64.2 Constructor & Destructor Documentation	103
4.64.3 Member Function Documentation	103
4.65 screen::StatsPage Class Reference	104
4.65.1 Detailed Description	104
4.65.2 Constructor & Destructor Documentation	104
4.65.3 Member Function Documentation	105
4.66 TakeBackHalf Class Reference	105
4.66.1 Detailed Description	106
4.66.2 Member Function Documentation	106
4.67 TankDrive Class Reference	108
4.67.1 Detailed Description	108
4.67.2 Member Enumeration Documentation	108
4.67.3 Constructor & Destructor Documentation	109
4.67.4 Member Function Documentation	109
4.68 tracking_wheel_cfg_t Struct Reference	118
4.68.1 Detailed Description	118
4.68.2 Member Data Documentation	118
4.69 TrapezoidProfile Class Reference	119
4.69.1 Detailed Description	119
4.69.2 Constructor & Destructor Documentation	120
4.69.3 Member Function Documentation	120
4.70 TurnDegreesCommand Class Reference	121
4.70.1 Detailed Description	122
4.70.2 Constructor & Destructor Documentation	122
4.70.3 Member Function Documentation	122
4.71 TurnToHeadingCommand Class Reference	123
4.71.1 Detailed Description	123
4.71.2 Constructor & Destructor Documentation	123
4.71.3 Member Function Documentation	123
4.72 Vector2D Class Reference	124

4.72.1 Detailed Description	124
4.72.2 Constructor & Destructor Documentation	124
4.72.3 Member Function Documentation	125
4.73 WaitUntilCondition Class Reference	127
4.73.1 Detailed Description	128
4.74 WaitUntilUpToSpeedCommand Class Reference	128
4.74.1 Detailed Description	128
4.74.2 Constructor & Destructor Documentation	128
4.74.3 Member Function Documentation	128
Index	129

1 Core

This is the host repository for the custom VEX libraries used by the RIT VEXU team

Automatically updated documentation is available at [here](#). There is also a downloadable [reference manual](#).

1.1 Getting Started

If you just want to start a project with Core, make a fork of the [Fork Template](#) and follow it's instructions.

To setup core for an existing project:

1. Create a new vex project (using the VSCode extension or other methods)
2. Initialize a git repository for the project
3. Execute

```
git subtree add --prefix=core git@github.com:RIT-VEX-U/Core.git main
```
4. Update the vex Makefile (or any other build system) to know about the core files (`core/src` for source files, `core/include` for headers) (See [here](#) for an example)
5. Enable [Eigen](#) (Latest supported version is 3.4.0):
 - `mkdir vendor`
 - `git submodule add https://gitlab.com/libeigen/eigen.git vendor/eigen`
 - `cd vendor/eigen`
 - `git checkout 3.4.0`
 - Add the following to the makefile to give Core access to the library: `INC += -Ivendor/eigen` (See [here](#) for an example)

If you only wish to use a single version of Core, you can simply clone `core/` into your project and add the core source and header files to your makefile.

1.2 Features

Here is the current feature list this repo provides:

Subsystems (See [Wiki/Subsystems](#)):

- Tank drivetrain (user control / autonomous)
- Mecanum drivetrain (user control / autonomous)
- Odometry
 - Tank (Differential)
 - [N-Pod](#)
- [Flywheel](#)
- [Lift](#)
- Custom encoders

Utilities (See [Wiki/Utilites](#)):

- [PID](#) controller
- [FeedForward](#) controller
- Trapezoidal motion profile controller
- Pure Pursuit
- Generic auto program builder
- Auto program UI selector
- Mathematical classes ([Vector2D](#), Moving Average)

2 Hierarchical Index

2.1 Class Hierarchy

This inheritance list is sorted roughly, but not completely, alphabetically:

Async	8
BasicSolenoidSet	10
BasicSpinCommand	11
BasicStopCommand	12
Branch	14
screen::ButtonWidget	15

CommandController	16
Condition	19
FunctionCondition	41
IfTimePassed	45
CustomEncoder	19
DelayCommand	22
DriveForwardCommand	22
DriveStopCommand	24
DriveToPointCommand	25
AutoChooser::entry_t	27
Feedback	29
MotionController	59
PID	83
TakeBackHalf	105
FeedForward	31
FeedForward::ff_config_t	33
Filter	34
ExponentialMovingAverage	27
MovingAverage	63
Flywheel	34
FlywheelStopCommand	38
FlywheelStopMotorsCommand	39
FlywheelStopNonTasksCommand	40
FunctionCommand	40
GenericAuto	43
PurePursuit::hermite_point	44
InOrder	45
Lift< T >	46
Lift< T >::lift_cfg_t	50
Logger	50
MotionController::m_profile_cfg_t	53
StateMachine< System, IDType, Message, delay_ms, do_log >::MaybeMessage	54

MecanumDrive	55
MecanumDrive::mecanumdrive_config_t	58
motion_t	58
Odometry3Wheel::odometry3wheel_cfg_t	68
OdometryBase	68
Odometry3Wheel	65
OdometryTank	76
OdomSetPosition	80
screen::Page	81
AutoChooser	8
screen::FunctionPage	41
screen::OdometryPage	75
screen::PIDPage	90
screen::StatsPage	104
Parallel	82
PurePursuit::Path	82
PID::pid_config_t	89
point_t	91
pose_t	93
PurePursuitCommand	93
robot_specs_t	94
screen::ScreenData	95
Serializer	95
screen::SliderWidget	99
SpinRPMCommand	100
PurePursuit::spline	101
StateMachine< System, IDType, Message, delay_ms, do_log >::State	102
StateMachine< System, IDType, Message, delay_ms, do_log >	102
TankDrive	108
tracking_wheel_cfg_t	118
TrapezoidProfile	119
TurnDegreesCommand	121

TurnToHeadingCommand	123
Vector2D	124
WaitUntilCondition	127
WaitUntilUpToSpeedCommand	128

3 Class Index

3.1 Class List

Here are the classes, structs, unions and interfaces with brief descriptions:

Async	
Async runs a command asynchronously will simply let it go and never look back THIS HAS A VERY NICHE USE CASE. THINK ABOUT IF YOU REALLY NEED IT	8
AutoChooser	8
BasicSolenoidSet	10
BasicSpinCommand	11
BasicStopCommand	12
Branch	
Branch chooses from multiple options at runtime. the function decider returns an index into the choices vector If you wish to make no choice and skip this section, return NO_CHOICE; any choice that is out of bounds set to NO_CHOICE	14
screen::ButtonWidget	
Widget that does something when you tap it. The function is only called once when you first tap it	15
CommandController	16
Condition	19
CustomEncoder	19
DelayCommand	22
DriveForwardCommand	22
DriveStopCommand	24
DriveToPointCommand	25
AutoChooser::entry_t	27
ExponentialMovingAverage	27
Feedback	29
FeedForward	31
FeedForward::ff_config_t	33

Filter	34
Flywheel	34
FlywheelStopCommand	38
FlywheelStopMotorsCommand	39
FlywheelStopNonTasksCommand	40
FunctionCommand	40
FunctionCondition	
FunctionCondition is a quick and dirty Condition to wrap some expression that should be evaluated at runtime	41
screen::FunctionPage	
Simple page that stores no internal data. the draw and update functions use only global data rather than storing anything	41
GenericAuto	43
PurePursuit::hermite_point	44
IfTimePassed	
IfTimePassed tests based on time since the command controller was constructed. Returns true if elapsed time > time_s	45
InOrder	
InOrder runs its commands sequentially then continues. How to handle timeout in this case. Automatically set it to sum of commands timeouts?	45
Lift< T >	46
Lift< T >::lift_cfg_t	50
Logger	
Class to simplify writing to files	50
MotionController::m_profile_cfg_t	53
StateMachine< System, IDType, Message, delay_ms, do_log >::MaybeMessage	
MaybeMessage a message of Message type or nothing MaybeMessage m = {}; // empty	
MaybeMessage m = Message::EnumField1	54
MecanumDrive	55
MecanumDrive::mecanumdrive_config_t	58
motion_t	58
MotionController	59
MovingAverage	63
Odometry3Wheel	65
Odometry3Wheel::odometry3wheel_cfg_t	68
OdometryBase	68

screen::OdometryPage	
Page that shows odometry position and rotation and a map (if an sd card with the file is on)	75
OdometryTank	76
OdomSetPosition	80
screen::Page	
Page describes one part of the screen slideshow	81
Parallel	
Parallel runs multiple commands in parallel and waits for all to finish before continuing. if none finish before this command's timeout, it will call on_timeout on all children continue	82
PurePursuit::Path	82
PID	83
PID::pid_config_t	89
screen::PIDPage	
PIDPage provides a way to tune a pid controller on the screen	90
point_t	91
pose_t	93
PurePursuitCommand	93
robot_specs_t	94
screen::ScreenData	
Holds the data that will be passed to the screen thread you probably shouldnt have to use it	95
Serializer	
Serializes Arbitrary data to a file on the SD Card	95
screen::SliderWidget	
Widget that updates a double value. Updates by reference so watch out for race conditions cuz the screen stuff lives on another thread	99
SpinRPMCommand	100
PurePursuit::spline	101
StateMachine< System, IDType, Message, delay_ms, do_log >::State	102
StateMachine< System, IDType, Message, delay_ms, do_log >	
State Machine :)))))) A fun fun way of controlling stateful subsystems - used in the 2023-2024 Over Under game for our overly complex intake-cata subsystem (see there for an example)	
The statemachine runs in a background thread and a user thread can interact with it through current_state and send_message	102
screen::StatsPage	
Draws motor stats and battery stats to the screen	104
TakeBackHalf	
A velocity controller	105
TankDrive	108
tracking_wheel_cfg_t	118

TrapezoidProfile	119
TurnDegreesCommand	121
TurnToHeadingCommand	123
Vector2D	124
WaitUntilCondition	
Waits until the condition is true	127
WaitUntilUpToSpeedCommand	128

4 Class Documentation

4.1 Async Class Reference

[Async](#) runs a command asynchronously will simply let it go and never look back THIS HAS A VERY NICHE USE CASE. THINK ABOUT IF YOU REALLY NEED IT.

```
#include <auto_command.h>
```

4.1.1 Detailed Description

[Async](#) runs a command asynchronously will simply let it go and never look back THIS HAS A VERY NICHE USE CASE. THINK ABOUT IF YOU REALLY NEED IT.


The documentation for this class was generated from the following files:

- [auto_command.h](#)
- [auto_command.cpp](#)

4.2 AutoChooser Class Reference

```
#include <auto_chooser.h>
```

Inheritance diagram for AutoChooser:

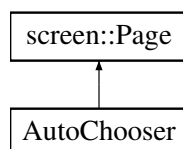

Classes

- struct [entry_t](#)

Public Member Functions

- [AutoChooser](#) (std::vector< std::string > paths, size_t def=0)
- size_t [get_choice](#) ()

Public Member Functions inherited from [screen::Page](#)

Protected Attributes

- size_t [choice](#)
- std::vector< [entry_t](#) > [list](#)

4.2.1 Detailed Description

Autochooser is a utility to make selecting robot autonomous programs easier source: RIT VexU Wiki During a season, we usually code between 4 and 6 autonomous programs. Most teams will change their entire robot program as a way of choosing autonomi but this may cause issues if you have an emergency patch to upload during a competition. This class was built as a way of using the robot screen to list autonomous programs, and the touchscreen to select them.

4.2.2 Constructor & Destructor Documentation

AutoChooser()

```
AutoChooser::AutoChooser (
    std::vector< std::string > paths,
    size_t def = 0)
```

Initialize the auto-chooser. This class places a choice menu on the brain screen, so the driver can choose which autonomous to run.

Parameters

<i>brain</i>	the brain on which to draw the selection boxes
--------------	--

4.2.3 Member Function Documentation

get_choice()

```
size_t AutoChooser::get_choice ()
```

Get the currently selected auto choice

Returns

the identifier to the auto path

Return the selected autonomous

4.2.4 Member Data Documentation

choice

```
size_t AutoChooser::choice [protected]
```

the current choice of auto

list

```
std::vector<entry_t> AutoChooser::list [protected]
```

< a list of all possible auto choices

The documentation for this class was generated from the following files:

- auto_chooser.h
- auto_chooser.cpp

4.3 BasicSolenoidSet Class Reference

```
#include <basic_command.h>
```

Public Member Functions

- [BasicSolenoidSet](#) (vex::pneumatics &solenoid, bool setting)
Construct a new [BasicSolenoidSet](#) Command.
- bool [run](#) () override
Runs the [BasicSolenoidSet](#) Overrides run command from AutoCommand.

4.3.1 Detailed Description

AutoCommand wrapper class for [BasicSolenoidSet](#) Using the Vex hardware functions

4.3.2 Constructor & Destructor Documentation

BasicSolenoidSet()

```
BasicSolenoidSet::BasicSolenoidSet (  
    vex::pneumatics & solenoid,  
    bool setting)
```

Construct a new [BasicSolenoidSet](#) Command.

Parameters

<i>solenoid</i>	Solenoid being set
<i>setting</i>	Setting of the solenoid in boolean (true,false)

4.3.3 Member Function Documentation

run()

```
bool BasicSolenoidSet::run () [override]
```

Runs the [BasicSolenoidSet](#) Overrides run command from AutoCommand.

Returns

True Command runs once

The documentation for this class was generated from the following files:

- basic_command.h
- basic_command.cpp

4.4 BasicSpinCommand Class Reference

```
#include <basic_command.h>
```

Public Member Functions

- [BasicSpinCommand](#) (vex::motor &motor, vex::directionType dir, BasicSpinCommand::type setting, double power)
Construct a new [BasicSpinCommand](#).
- bool [run](#) () override
Runs the [BasicSpinCommand](#) Overrides run from Auto Command.

4.4.1 Detailed Description

AutoCommand wrapper class for [BasicSpinCommand](#) using the vex hardware functions

4.4.2 Constructor & Destructor Documentation

BasicSpinCommand()

```
BasicSpinCommand::BasicSpinCommand (
    vex::motor & motor,
    vex::directionType dir,
    BasicSpinCommand::type setting,
    double power)
```

Construct a new [BasicSpinCommand](#).

a BasicMotorSpin Command

Parameters

<i>motor</i>	Motor to spin
<i>direc</i>	Direction of motor spin
<i>setting</i>	Power setting in volts,percentage,velocity
<i>power</i>	Value of desired power
<i>motor</i>	Motor port to spin
<i>dir</i>	Direction for spinning
<i>setting</i>	Power setting in volts,percentage,velocity
<i>power</i>	Value of desired power

4.4.3 Member Function Documentation**run()**

```
bool BasicSpinCommand::run () [override]
```

Runs the [BasicSpinCommand](#) Overrides run from Auto Command.

Run the [BasicSpinCommand](#) Overrides run from Auto Command.

Returns

- True [Async](#) running command
- True Command runs once

The documentation for this class was generated from the following files:

- [basic_command.h](#)
- [basic_command.cpp](#)

4.5 BasicStopCommand Class Reference

```
#include <basic_command.h>
```

Public Member Functions

- [BasicStopCommand](#) (vex::motor &motor, vex::brakeType setting)
Construct a new BasicMotorStop Command.
- bool [run](#) () override
Runs the BasicMotorStop Command Overrides run command from AutoCommand.

4.5.1 Detailed Description

AutoCommand wrapper class for [BasicStopCommand](#) Using the Vex hardware functions

4.5.2 Constructor & Destructor Documentation

BasicStopCommand()

```
BasicStopCommand::BasicStopCommand (
    vex::motor & motor,
    vex::brakeType setting)
```

Construct a new BasicMotorStop Command.

Construct a BasicMotorStop Command.

Parameters

<i>motor</i>	The motor to stop
<i>setting</i>	The brake setting for the motor
<i>motor</i>	Motor to stop
<i>setting</i>	Braketype setting brake,coast,hold

4.5.3 Member Function Documentation**run()**

```
bool BasicStopCommand::run () [override]
```

Runs the BasicMotorStop Command Overrides run command from AutoCommand.

Runs the BasicMotorStop command Ovverides run command from AutoCommand.

Returns

True Command runs once

The documentation for this class was generated from the following files:

- basic_command.h
- basic_command.cpp

4.6 Branch Class Reference

[Branch](#) chooses from multiple options at runtime. the function decider returns an index into the choices vector If you wish to make no choice and skip this section, return NO_CHOICE; any choice that is out of bounds set to NO_CHOICE.

```
#include <auto_command.h>
```

4.6.1 Detailed Description

[Branch](#) chooses from multiple options at runtime. the function decider returns an index into the choices vector If you wish to make no choice and skip this section, return NO_CHOICE; any choice that is out of bounds set to NO_CHOICE.

The documentation for this class was generated from the following files:

- auto_command.h
- auto_command.cpp

4.7 screen::ButtonWidget Class Reference

Widget that does something when you tap it. The function is only called once when you first tap it.

```
#include <screen.h>
```

Public Member Functions

- [ButtonWidget](#) (std::function< void(void)> onpress, Rect rect, std::string name)
Create a Button widget.
- [ButtonWidget](#) (void(*onpress)(), Rect rect, std::string name)
Create a Button widget.
- bool [update](#) (bool was_pressed, int x, int y)
responds to user input
- void [draw](#) (vex::brain::lcd &, bool first_draw, unsigned int frame_number)
draws the button to the screen

4.7.1 Detailed Description

Widget that does something when you tap it. The function is only called once when you first tap it.

4.7.2 Constructor & Destructor Documentation

ButtonWidget() [1/2]

```
screen::ButtonWidget::ButtonWidget (
    std::function< void(void)> onpress,
    Rect rect,
    std::string name) [inline]
```

Create a Button widget.

Parameters

<i>onpress</i>	the function to be called when the button is tapped
<i>rect</i>	the area the button should take up on the screen
<i>name</i>	the label put on the button

ButtonWidget() [2/2]

```
screen::ButtonWidget::ButtonWidget (
    void(* onpress )(),
    Rect rect,
    std::string name) [inline]
```

Create a Button widget.

Parameters

<i>onpress</i>	the function to be called when the button is tapped
<i>rect</i>	the area the button should take up on the screen
<i>name</i>	the label put on the button

4.7.3 Member Function Documentation

update()

```
bool screen::ButtonWidget::update (
    bool was_pressed,
    int x,
    int y)
```

responds to user input

Parameters

<i>was_pressed</i>	if the screen is pressed
<i>x</i>	x position if the screen was pressed
<i>y</i>	y position if the screen was pressed

Returns

true if the button was pressed

The documentation for this class was generated from the following files:

- screen.h
- screen.cpp

4.8 CommandController Class Reference

```
#include <command_controller.h>
```

Public Member Functions

- **CommandController ()**
Create an empty [CommandController](#). Add Command with [CommandController::add\(\)](#)
- **CommandController (std::initializer_list< AutoCommand * > cmds)**
Create a [CommandController](#) with commands pre added. More can be added with [CommandController::add\(\)](#)
- void **add** (std::vector< AutoCommand * > cmds)
- void **add** (AutoCommand *cmd, double timeout_seconds=10.0)
- void **add** (std::vector< AutoCommand * > cmds, double timeout_sec)
- void **add_delay** (int ms)
- void **add_cancel_func** (std::function< bool(void)> true_if_cancel)
add_cancel_func specifies that when this func evaluates to true, to cancel the command controller
- void **run** ()
- bool **last_command_timed_out** ()

4.8.1 Detailed Description

File: [command_controller.h](#) Desc: A [CommandController](#) manages the AutoCommands that make up an autonomous route. The AutoCommands are kept in a queue and get executed and removed from the queue in FIFO order.

4.8.2 Constructor & Destructor Documentation

CommandController()

```
CommandController::CommandController (
    std::initializer_list< AutoCommand * > cmds) [inline]
```

Create a [CommandController](#) with commands pre added. More can be added with [CommandController::add\(\)](#)

Parameters

<i>cmds</i>	
-------------	--

4.8.3 Member Function Documentation

add() [1/3]

```
void CommandController::add (
    AutoCommand * cmd,
    double timeout_seconds = 10.0)
```

File: [command_controller.cpp](#) Desc: A [CommandController](#) manages the AutoCommands that make up an autonomous route. The AutoCommands are kept in a queue and get executed and removed from the queue in FIFO order. Adds a command to the queue

Parameters

<i>cmd</i>	the AutoCommand we want to add to our list
<i>timeout_seconds</i>	the number of seconds we will let the command run for. If it exceeds this, we cancel it and run on <code>_timeout</code>

add() [2/3]

```
void CommandController::add (
    std::vector< AutoCommand * > cmds)
```

Adds a command to the queue

Parameters

<i>cmd</i>	the AutoCommand we want to add to our list
<i>timeout_seconds</i>	the number of seconds we will let the command run for. If it exceeds this, we cancel it and run on <code>_timeout</code> . if it is ≤ 0 no time out will be applied

Add multiple commands to the queue. No timeout here.

Parameters

<i>cmds</i>	the AutoCommands we want to add to our list
-------------	---

add() [3/3]

```
void CommandController::add (
    std::vector< AutoCommand * > cmds,
    double timeout_sec)
```

Add multiple commands to the queue. No timeout here.

Parameters

<i>cmds</i>	the AutoCommands we want to add to our list Add multiple commands to the queue. No timeout here.
<i>cmds</i>	the AutoCommands we want to add to our list
<i>timeout_sec</i>	timeout in seconds to apply to all commands if they are still the default

Add multiple commands to the queue. No timeout here.

Parameters

<i>cmds</i>	the AutoCommands we want to add to our list
<i>timeout</i>	timeout in seconds to apply to all commands if they are still the default

add_cancel_func()

```
void CommandController::add_cancel_func (
    std::function< bool(void)> true_if_cancel)
```

add_cancel_func specifies that when this func evaluates to true, to cancel the command controller

Parameters

<i>true_if_cancel</i>	a function that returns true when we want to cancel the command controller
-----------------------	--

add_delay()

```
void CommandController::add_delay (
    int ms)
```

Adds a command that will delay progression of the queue

Parameters

<i>ms</i>	- number of milliseconds to wait before continuing execution of autonomous
-----------	--

last_command_timed_out()

```
bool CommandController::last_command_timed_out ()
```

last_command_timed_out tells how the last command ended Use this if you want to make decisions based on the end of the last command

Returns

true if the last command timed out. false if it finished regularly

run()

```
void CommandController::run ()
```

Begin execution of the queue Execute and remove commands in FIFO order


The documentation for this class was generated from the following files:

- command_controller.h
- command_controller.cpp

4.9 Condition Class Reference

```
#include <auto_command.h>
```

Inheritance diagram for Condition:

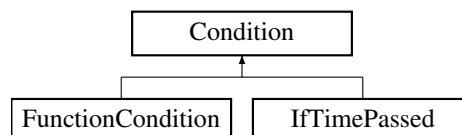**4.9.1 Detailed Description**

File: [auto_command.h](#) Desc: Interface for module-specific commands A [Condition](#) is a function that returns true or false is_even is a predicate that would return true if a number is even For our purposes, a [Condition](#) is a choice to be made at runtime drive_sys.reached_point(10, 30) is a predicate time.has_elapsed(10, vex::seconds) is a predicate extend this class for different choices you wish to make

The documentation for this class was generated from the following files:

- auto_command.h
- auto_command.cpp

4.10 CustomEncoder Class Reference

```
#include <custom_encoder.h>
```

Public Member Functions

- [CustomEncoder](#) (vex::triport::port &port, double ticks_per_rev)
- void [setRotation](#) (double val, vex::rotationUnits units)
- void [setPosition](#) (double val, vex::rotationUnits units)
- double [rotation](#) (vex::rotationUnits units)
- double [position](#) (vex::rotationUnits units)
- double [velocity](#) (vex::velocityUnits units)

4.10.1 Detailed Description

A wrapper class for the vex encoder that allows the use of 3rd party encoders with different tick-per-revolution values.

4.10.2 Constructor & Destructor Documentation

CustomEncoder()

```
CustomEncoder::CustomEncoder (
    vex::triport::port & port,
    double ticks_per_rev)
```

Construct an encoder with a custom number of ticks

Parameters

<i>port</i>	the triport port on the brain the encoder is plugged into
<i>ticks_per_rev</i>	the number of ticks the encoder will report for one revolution

4.10.3 Member Function Documentation

position()

```
double CustomEncoder::position (
    vex::rotationUnits units)
```

get the position that the encoder is at

Parameters

<i>units</i>	the unit we want the return value to be in
--------------	--

Returns

the position of the encoder in the units specified

rotation()

```
double CustomEncoder::rotation (
    vex::rotationUnits units)
```

get the rotation that the encoder is at

Parameters

<i>units</i>	the unit we want the return value to be in
--------------	--

Returns

the rotation of the encoder in the units specified

setPosition()

```
void CustomEncoder::setPosition (
    double val,
    vex::rotationUnits units)
```

sets the stored position of the encoder. Any further movements will be from this value

Parameters

<i>val</i>	the numerical value of the position we are setting to
<i>units</i>	the unit of val

setRotation()

```
void CustomEncoder::setRotation (
    double val,
    vex::rotationUnits units)
```

sets the stored rotation of the encoder. Any further movements will be from this value

Parameters

<i>val</i>	the numerical value of the angle we are setting to
<i>units</i>	the unit of val

velocity()

```
double CustomEncoder::velocity (
    vex::velocityUnits units)
```

get the velocity that the encoder is moving at

Parameters

<i>units</i>	the unit we want the return value to be in
--------------	--

Returns

the velocity of the encoder in the units specified

The documentation for this class was generated from the following files:

- custom_encoder.h
- custom_encoder.cpp

4.11 DelayCommand Class Reference

```
#include <delay_command.h>
```

Public Member Functions

- [DelayCommand](#) (int ms)
- bool [run](#) () override

4.11.1 Detailed Description

File: [delay_command.h](#) Desc: A [DelayCommand](#) will make the robot wait the set amount of milliseconds before continuing execution of the autonomous route

4.11.2 Constructor & Destructor Documentation

DelayCommand()

```
DelayCommand::DelayCommand (  
    int ms) [inline]
```

Construct a delay command

Parameters

<i>ms</i>	the number of milliseconds to delay for
-----------	---

4.11.3 Member Function Documentation

run()

```
bool DelayCommand::run () [inline], [override]
```

Delays for the amount of milliseconds stored in the command Overrides run from AutoCommand

Returns

true when complete

The documentation for this class was generated from the following file:

- [delay_command.h](#)

4.12 DriveForwardCommand Class Reference

```
#include <drive_commands.h>
```

Public Member Functions

- [DriveForwardCommand](#) ([TankDrive](#) &drive_sys, [Feedback](#) &feedback, double inches, directionType dir, double max_speed=1, double end_speed=0)
- bool [run](#) () override
- void [on_timeout](#) () override

4.12.1 Detailed Description

AutoCommand wrapper class for the drive_forward function in the [TankDrive](#) class

4.12.2 Constructor & Destructor Documentation

DriveForwardCommand()

```
DriveForwardCommand::DriveForwardCommand (
    TankDrive & drive_sys,
    Feedback & feedback,
    double inches,
    directionType dir,
    double max_speed = 1,
    double end_speed = 0)
```

File: [drive_commands.h](#) Desc: Holds all the AutoCommand subclasses that wrap (currently) [TankDrive](#) functions

Currently includes:

- drive_forward
- turn_degrees
- drive_to_point
- turn_to_heading
- stop

Also holds AutoCommand subclasses that wrap [OdometryBase](#) functions

Currently includes:

- set_position Construct a DriveForward Command

Parameters

<i>drive_sys</i>	the drive system we are commanding
<i>feedback</i>	the feedback controller we are using to execute the drive
<i>inches</i>	how far forward to drive
<i>dir</i>	the direction to drive
<i>max_speed</i>	0 -> 1 percentage of the drive systems speed to drive at

4.12.3 Member Function Documentation

on_timeout()

```
void DriveForwardCommand::on_timeout () [override]
```

Cleans up drive system if we time out before finishing

reset the drive system if we timeout

run()

```
bool DriveForwardCommand::run () [override]
```

Run drive_forward Overrides run from AutoCommand

Returns

true when execution is complete, false otherwise

The documentation for this class was generated from the following files:

- drive_commands.h
- drive_commands.cpp

4.13 DriveStopCommand Class Reference

```
#include <drive_commands.h>
```

Public Member Functions

- [DriveStopCommand](#) ([TankDrive](#) &drive_sys)
- bool [run](#) () override

4.13.1 Detailed Description

AutoCommand wrapper class for the stop() function in the [TankDrive](#) class

4.13.2 Constructor & Destructor Documentation

DriveStopCommand()

```
DriveStopCommand::DriveStopCommand (  
    TankDrive & drive_sys)
```

Construct a DriveStop Command

Parameters

<code>drive_sys</code>	the drive system we are commanding
------------------------	------------------------------------

4.13.3 Member Function Documentation

run()

```
bool DriveStopCommand::run () [override]
```

Stop the drive system Overrides run from AutoCommand

Returns

true when execution is complete, false otherwise

Stop the drive train Overrides run from AutoCommand

Returns

true when execution is complete, false otherwise

The documentation for this class was generated from the following files:

- `drive_commands.h`
- `drive_commands.cpp`

4.14 DriveToPointCommand Class Reference

```
#include <drive_commands.h>
```

Public Member Functions

- [DriveToPointCommand](#) ([TankDrive](#) &drive_sys, [Feedback](#) &feedback, double x, double y, directionType dir, double max_speed=1, double end_speed=0)
- [DriveToPointCommand](#) ([TankDrive](#) &drive_sys, [Feedback](#) &feedback, [point_t](#) point, directionType dir, double max_speed=1, double end_speed=0)
- bool [run](#) () override

4.14.1 Detailed Description

AutoCommand wrapper class for the `drive_to_point` function in the [TankDrive](#) class

4.14.2 Constructor & Destructor Documentation

DriveToPointCommand() [1/2]

```
DriveToPointCommand::DriveToPointCommand (
    TankDrive & drive_sys,
    Feedback & feedback,
    double x,
    double y,
    directionType dir,
    double max_speed = 1,
    double end_speed = 0)
```

Construct a DriveForward Command

Parameters

<i>drive_sys</i>	the drive system we are commanding
<i>feedback</i>	the feedback controller we are using to execute the drive
<i>x</i>	where to drive in the x dimension
<i>y</i>	where to drive in the y dimension
<i>dir</i>	the direction to drive
<i>max_speed</i>	0 -> 1 percentage of the drive systems speed to drive at

DriveToPointCommand() [2/2]

```
DriveToPointCommand::DriveToPointCommand (
    TankDrive & drive_sys,
    Feedback & feedback,
    point_t point,
    directionType dir,
    double max_speed = 1,
    double end_speed = 0)
```

Construct a DriveForward Command

Parameters

<i>drive_sys</i>	the drive system we are commanding
<i>feedback</i>	the feedback controller we are using to execute the drive
<i>point</i>	the point to drive to
<i>dir</i>	the direction to drive
<i>max_speed</i>	0 -> 1 percentage of the drive systems speed to drive at

4.14.3 Member Function Documentation**run()**

```
bool DriveToPointCommand::run () [override]
```

Run drive_to_point Overrides run from AutoCommand

Returns

true when execution is complete, false otherwise

The documentation for this class was generated from the following files:

- drive_commands.h
- drive_commands.cpp

4.15 AutoChooser::entry_t Struct Reference

```
#include <auto_chooser.h>
```

Public Attributes

- `std::string` [name](#)

4.15.1 Detailed Description

[entry_t](#) is a datatype used to store information that the chooser knows about an auto selection button

4.15.2 Member Data Documentation

name

```
std::string AutoChooser::entry_t::name
```

name of the auto represented by the block


The documentation for this struct was generated from the following file:

- `auto_chooser.h`

4.16 ExponentialMovingAverage Class Reference

```
#include <moving_average.h>
```

Inheritance diagram for ExponentialMovingAverage:

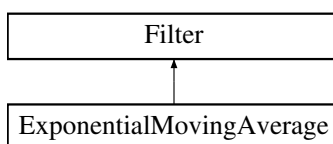

Public Member Functions

- [ExponentialMovingAverage](#) (int buffer_size)
- [ExponentialMovingAverage](#) (int buffer_size, double starting_value)
- void [add_entry](#) (double n) override
- double [get_value](#) () const override
- int [get_size](#) ()

Public Member Functions inherited from [Filter](#)

4.16.1 Detailed Description

[ExponentialMovingAverage](#)

An exponential moving average is a way of smoothing out noisy data. For many sensor readings, the noise is roughly symmetric around the actual value. This means that if you collect enough samples those that are too high are cancelled out by the samples that are too low leaving the real value.

A simple moving average lags significantly with time as it has to counteract old samples. An exponential moving average keeps more up to date by weighting newer readings higher than older readings so it is more up to date while also still smoothed.

The [ExponentialMovingAverage](#) class provides an simple interface to do this smoothing from our noisy sensor values.

4.16.2 Constructor & Destructor Documentation

ExponentialMovingAverage() [1/2]

```
ExponentialMovingAverage::ExponentialMovingAverage (
    int buffer_size)
```

Create a moving average calculator with 0 as the default value

Parameters

<i>buffer_size</i>	The size of the buffer. The number of samples that constitute a valid reading
--------------------	---

ExponentialMovingAverage() [2/2]

```
ExponentialMovingAverage::ExponentialMovingAverage (
    int buffer_size,
    double starting_value)
```

Create a moving average calculator with a specified default value

Parameters

<i>buffer_size</i>	The size of the buffer. The number of samples that constitute a valid reading
<i>starting_value</i>	The value that the average will be before any data is added

4.16.3 Member Function Documentation

add_entry()

```
void ExponentialMovingAverage::add_entry (
    double n) [override], [virtual]
```

Add a reading to the buffer Before: [1 1 2 2 3 3] => 2 ^ After: [2 1 2 2 3 3] => 2.16 ^

Parameters

n	the sample that will be added to the moving average.
-----	--

Implements [Filter](#).

get_size()

```
int ExponentialMovingAverage::get_size ()
```

How many samples the average is made from

Returns

the number of samples used to calculate this average

get_value()

```
double ExponentialMovingAverage::get_value () const [override], [virtual]
```

Returns the average based off of all the samples collected so far

Returns

the calculated average. $\text{sum}(\text{samples})/\text{numsamples}$

How many samples the average is made from

Returns

the number of samples used to calculate this average

Implements [Filter](#).


The documentation for this class was generated from the following files:

- moving_average.h
- moving_average.cpp

4.17 Feedback Class Reference

```
#include <feedback_base.h>
```

Inheritance diagram for Feedback:

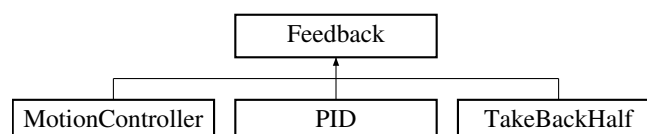

Public Member Functions

- virtual void [init](#) (double start_pt, double set_pt)=0
- virtual double [update](#) (double val)=0
- virtual double [get](#) ()=0
- virtual void [set_limits](#) (double lower, double upper)=0
- virtual bool [is_on_target](#) ()=0

4.17.1 Detailed Description

Interface so that subsystems can easily switch between feedback loops

Author

Ryan McGee

Date

9/25/2022

4.17.2 Member Function Documentation

get()

```
virtual double Feedback::get () [pure virtual]
```

Returns

the last saved result from the feedback controller

Implemented in [MotionController](#), [PID](#), and [TakeBackHalf](#).

init()

```
virtual void Feedback::init (  
    double start_pt,  
    double set_pt) [pure virtual]
```

Initialize the feedback controller for a movement

Parameters

<i>start_pt</i>	the current sensor value
<i>set_pt</i>	where the sensor value should be
<i>start_vel</i>	Movement starting velocity
<i>end_vel</i>	Movement ending velocity

Implemented in [MotionController](#), [PID](#), and [TakeBackHalf](#).

is_on_target()

```
virtual bool Feedback::is_on_target () [pure virtual]
```

Returns

true if the feedback controller has reached it's setpoint

Implemented in [MotionController](#), [PID](#), and [TakeBackHalf](#).

set_limits()

```
virtual void Feedback::set_limits (  
    double lower,  
    double upper) [pure virtual]
```

Clamp the upper and lower limits of the output. If both are 0, no limits should be applied.

Parameters

<i>lower</i>	Upper limit
<i>upper</i>	Lower limit

Implemented in [MotionController](#), [PID](#), and [TakeBackHalf](#).

update()

```
virtual double Feedback::update (  
    double val) [pure virtual]
```

Iterate the feedback loop once with an updated sensor value

Parameters

<i>val</i>	value from the sensor
------------	-----------------------

Returns

feedback loop result

Implemented in [MotionController](#), [PID](#), and [TakeBackHalf](#).

The documentation for this class was generated from the following file:

- `feedback_base.h`

4.18 FeedForward Class Reference

```
#include <feedforward.h>
```

Classes

- struct [ff_config_t](#)

Public Member Functions

- [FeedForward](#) ([ff_config_t](#) &cfg)
- double [calculate](#) (double v, double a, double pid_ref=0.0)
Perform the feedforward calculation.

4.18.1 Detailed Description

[FeedForward](#)

Stores the feedforward constants, and allows for quick computation. Feedforward should be used in systems that require smooth precise movements and have high inertia, such as drivetrains and lifts.

This is best used alongside a [PID](#) loop, with the form: `output = pid.get() + feedforward.calculate(v, a);`

In this case, the feedforward does the majority of the heavy lifting, and the pid loop only corrects for inconsistencies

For information about tuning feedforward, I recommend looking at this post: <https://www.chiefdelphi.com/t/paper-frc-drivetrain-characterization/160915> (yes I know it's for FRC but trust me, it's useful)

Author

Ryan McGee

Date

6/13/2022

4.18.2 Constructor & Destructor Documentation

FeedForward()

```
FeedForward::FeedForward (  
    ff\_config\_t & cfg) [inline]
```

Creates a [FeedForward](#) object.

Parameters

cfg	Configuration Struct for tuning
---------------------	---------------------------------

4.18.3 Member Function Documentation

calculate()

```
double FeedForward::calculate (  
    double v,  
    double a,  
    double pid_ref = 0.0) [inline]
```

Perform the feedforward calculation.

This calculation is the equation: $F = kG + kS*\text{sgn}(v) + kV*v + kA*a$

Parameters

<i>v</i>	Requested velocity of system
<i>a</i>	Requested acceleration of system

Returns

A feedforward that should closely represent the system if tuned correctly

The documentation for this class was generated from the following file:

- feedforward.h

4.19 FeedForward::ff_config_t Struct Reference

```
#include <feedforward.h>
```

Public Attributes

- double [kS](#)
- double [kV](#)
- double [kA](#)
- double [kG](#)

4.19.1 Detailed Description

[ff_config_t](#) holds the parameters to make the theoretical model of a real world system equation is of the form kS if the system is not stopped, 0 otherwise

- $kV * \text{desired velocity}$
- $kA * \text{desired acceleration}$
- kG

4.19.2 Member Data Documentation

kA

```
double FeedForward::ff_config_t::kA
```

kA - Acceleration coefficient: the power required to change the mechanism's speed. Multiplied by the requested acceleration.

kG

```
double FeedForward::ff_config_t::kG
```

kG - Gravity coefficient: only needed for lifts. The power required to overcome gravity and stay at steady state.

kS

```
double FeedForward::ff_config_t::kS
```

Coefficient to overcome static friction: the point at which the motor *starts* to move.

kV

```
double FeedForward::ff_config_t::kV
```

Veclocity coefficient: the power required to keep the mechanism in motion. Multiplied by the requested velocity.


The documentation for this struct was generated from the following file:

- feedforward.h

4.20 Filter Class Reference

```
#include <moving_average.h>
```

Inheritance diagram for Filter:

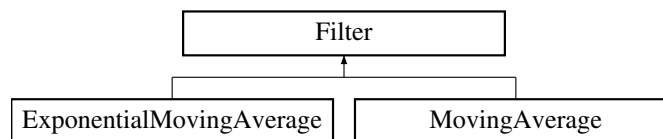

4.20.1 Detailed Description

Interface for filters Use `add_entry` to supply data and `get_value` to retrieve the filtered value

The documentation for this class was generated from the following file:

- moving_average.h

4.21 Flywheel Class Reference

```
#include <flywheel.h>
```

Public Member Functions

- [Flywheel](#) ([vex::motor_group](#) &motors, [Feedback](#) &feedback, [FeedForward](#) &helper, const double ratio, [Filter](#) &filt)
- double [get_target](#) () const
- double [getRPM](#) () const
- [vex::motor_group](#) & [get_motors](#) () const
- void [spin_manual](#) (double speed, directionType dir=fwd)
- void [spin_rpm](#) (double rpm)
- void [stop](#) ()
- bool [is_on_target](#) ()
check if the feedback controller thinks the flywheel is on target
- [screen::Page](#) * [Page](#) () const
Creates a page displaying info about the flywheel.
- AutoCommand * [SpinRpmCmd](#) (int rpm)
Creates a new auto command to spin the flywheel at the desired velocity.
- AutoCommand * [WaitUntilUpToSpeedCmd](#) ()
Creates a new auto command that will hold until the flywheel has its target as defined by its feedback controller.

Friends

- int [spinRPMTask](#) (void *wheelPointer)

4.21.1 Detailed Description

a [Flywheel](#) class that handles all control of a high inertia spinning disk. It gives multiple options for what control system to use in order to control wheel velocity and functions alerting the user when the flywheel is up to speed. [Flywheel](#) is a set and forget class. Once you create it you can call [spin_rpm](#) or [stop](#) on it at any time and it will take all necessary steps to accomplish this.

4.21.2 Constructor & Destructor Documentation

Flywheel()

```
Flywheel::Flywheel (
    vex::motor_group & motors,
    Feedback & feedback,
    FeedForward & helper,
    const double ratio,
    Filter & filt)
```

Create the [Flywheel](#) object using [PID](#) + feedforward for control.

Parameters

<i>motors</i>	pointer to the motors on the fly wheel
<i>feedback</i>	a feedback controller
<i>helper</i>	a feedforward config (only kV is used) to help the feedback controller along
<i>ratio</i>	ratio of the gears from the motor to the flywheel just multiplies the velocity
<i>filter</i>	the filter to use to smooth noisy motor readings

4.21.3 Member Function Documentation

get_motors()

```
motor_group & Flywheel::get_motors () const
```

Returns the motors

Returns

the motors used to run the flywheel

get_target()

```
double Flywheel::get_target () const
```

Return the target_rpm that the flywheel is currently trying to achieve

Returns

target_rpm the target rpm

Return the current value that the target_rpm should be set to

getRPM()

```
double Flywheel::getRPM () const
```

return the velocity of the flywheel

is_on_target()

```
bool Flywheel::is_on_target () [inline]
```

check if the feedback controller thinks the flywheel is on target

Returns

true if on target

Page()

```
screen::Page * Flywheel::Page () const
```

Creates a page displaying info about the flywheel.

Returns

the page should be used for `screen::start_screen(screen, {fw.Page()});`

spin_manual()

```
void Flywheel::spin_manual (  
    double speed,  
    directionType dir = fwd)
```

Spin motors using voltage; defaults forward at 12 volts FOR USE BY OPCONTROL AND AUTONOMOUS - this only applies if the target_rpm thread is not running

Parameters

<i>speed</i>	- speed (between -1 and 1) to set the motor
<i>dir</i>	- direction that the motor moves in; defaults to forward

Spin motors using voltage; defaults forward at 12 volts FOR USE BY OPCONTROL AND AUTONOMOUS - this only applies if the RPM thread is not running

Parameters

<i>speed</i>	- speed (between -1 and 1) to set the motor
<i>dir</i>	- direction that the motor moves in; defaults to forward

spin_rpm()

```
void Flywheel::spin_rpm (  
    double input_rpm)
```

starts or sets the target_rpm thread at new value what control scheme is dependent on control_style

Parameters

<i>rpm</i>	- the target_rpm we want to spin at
------------	-------------------------------------

starts or sets the RPM thread at new value what control scheme is dependent on control_style

Parameters

<i>input_rpm</i>	- set the current RPM
------------------	-----------------------

SpinRpmCmd()

```
AutoCommand * Flywheel::SpinRpmCmd (  
    int rpm) [inline]
```

Creates a new auto command to spin the flywheel at the desired velocity.

Parameters

<i>rpm</i>	the rpm to spin at
------------	--------------------

Returns

an auto command to add to a command controller

stop()

```
void Flywheel::stop ()
```

Stops the motors. If manually spinning, this will do nothing just call `spin_manual(0.0)` to send 0 volts
stop the RPM thread and the wheel

WaitUntilUpToSpeedCmd()

```
AutoCommand * Flywheel::WaitUntilUpToSpeedCmd () [inline]
```

Creates a new auto command that will hold until the flywheel has its target as defined by its feedback controller.

Returns

an auto command to add to a command controller

4.21.4 Friends And Related Symbol Documentation

spinRPMTask

```
int spinRPMTask (  
    void * wheelPointer) [friend]
```

Runs a thread that keeps track of updating flywheel RPM and controlling it accordingly

The documentation for this class was generated from the following files:

- flywheel.h
- flywheel.cpp

4.22 FlywheelStopCommand Class Reference

```
#include <flywheel_commands.h>
```

Public Member Functions

- [FlywheelStopCommand](#) ([Flywheel](#) &flywheel)
- bool [run](#) () override

4.22.1 Detailed Description

AutoCommand wrapper class for the stop function in the [Flywheel](#) class

4.22.2 Constructor & Destructor Documentation

FlywheelStopCommand()

```
FlywheelStopCommand::FlywheelStopCommand (  
    Flywheel & flywheel)
```

Construct a [FlywheelStopCommand](#)

Parameters

<i>flywheel</i>	the flywheel system we are commanding
-----------------	---------------------------------------

4.22.3 Member Function Documentation

run()

```
bool FlywheelStopCommand::run () [override]
```

Run stop Overrides run from AutoCommand

Returns

true when execution is complete, false otherwise

The documentation for this class was generated from the following files:

- flywheel_commands.h
- flywheel_commands.cpp

4.23 FlywheelStopMotorsCommand Class Reference

```
#include <flywheel_commands.h>
```

Public Member Functions

- [FlywheelStopMotorsCommand](#) ([Flywheel](#) &flywheel)
- bool [run](#) () override

4.23.1 Detailed Description

AutoCommand wrapper class for the stopMotors function in the [Flywheel](#) class

4.23.2 Constructor & Destructor Documentation

FlywheelStopMotorsCommand()

```
FlywheelStopMotorsCommand::FlywheelStopMotorsCommand (
    Flywheel & flywheel)
```

Construct a FlywheeStopMotors Command

Parameters

<i>flywheel</i>	the flywheel system we are commanding
-----------------	---------------------------------------

4.23.3 Member Function Documentation**run()**

```
bool FlywheelStopMotorsCommand::run () [override]
```

Run stop Overrides run from AutoCommand

Returns

true when execution is complete, false otherwise

The documentation for this class was generated from the following files:

- flywheel_commands.h
- flywheel_commands.cpp

4.24 FlywheelStopNonTasksCommand Class Reference

```
#include <flywheel_commands.h>
```

4.24.1 Detailed Description

AutoCommand wrapper class for the stopNonTasks function in the [Flywheel](#) class

The documentation for this class was generated from the following files:

- flywheel_commands.h
- flywheel_commands.cpp

4.25 FunctionCommand Class Reference

```
#include <auto_command.h>
```

4.25.1 Detailed Description

[FunctionCommand](#) is fun and good way to do simple things Printing, launching nukes, and other quick and dirty one time things

The documentation for this class was generated from the following file:


- auto_command.h

4.26 FunctionCondition Class Reference

[FunctionCondition](#) is a quick and dirty [Condition](#) to wrap some expression that should be evaluated at runtime.

```
#include <auto_command.h>
```

Inheritance diagram for FunctionCondition:

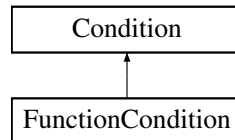

4.26.1 Detailed Description

[FunctionCondition](#) is a quick and dirty [Condition](#) to wrap some expression that should be evaluated at runtime.

The documentation for this class was generated from the following files:


- `auto_command.h`
- `auto_command.cpp`

4.27 screen::FunctionPage Class Reference

Simple page that stores no internal data. the draw and update functions use only global data rather than storing anything.

```
#include <screen.h>
```

Inheritance diagram for `screen::FunctionPage`:

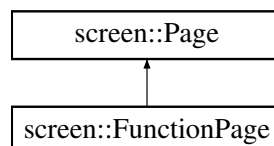

Public Member Functions

- [FunctionPage](#) (`update_func_t` update_f, `draw_func_t` draw_t)
Creates a function page.
- void [update](#) (`bool` was_pressed, `int` x, `int` y) override
update uses the supplied update function to update this page
- void [draw](#) (`vex::brain::lcd` &, `bool` first_draw, `unsigned int` frame_number) override
draw uses the supplied draw function to draw to the screen

Public Member Functions inherited from [screen::Page](#)

4.27.1 Detailed Description

Simple page that stores no internal data. the draw and update functions use only global data rather than storing anything.

4.27.2 Constructor & Destructor Documentation

FunctionPage()

```
screen::FunctionPage::FunctionPage (  
    update_func_t update_f,  
    draw_func_t draw_f)
```

Creates a function page.

[FunctionPage](#).

Parameters

update_f	the function called every tick to respond to user input or do data collection
draw_t	the function called to draw to the screen
update_f	drawing function
draw_f	drawing function

4.27.3 Member Function Documentation

draw()

```
void screen::FunctionPage::draw (  
    vex::brain::lcd & screen,  
    bool first_draw,  
    unsigned int frame_number) [override], [virtual]
```

draw uses the supplied draw function to draw to the screen

See also

[Page::draw](#)

Reimplemented from [screen::Page](#).

update()

```
void screen::FunctionPage::update (
    bool was_pressed,
    int x,
    int y) [override], [virtual]
```

update uses the supplied update function to update this page

See also

[Page::update](#)

Reimplemented from [screen::Page](#).

The documentation for this class was generated from the following files:

- screen.h
- screen.cpp

4.28 GenericAuto Class Reference

```
#include <generic_auto.h>
```

Public Member Functions

- bool [run](#) (bool blocking)
- void [add](#) (state_ptr new_state)
- void [add_async](#) (state_ptr async_state)
- void [add_delay](#) (int ms)

4.28.1 Detailed Description

[GenericAuto](#) provides a pleasant interface for organizing an auto path steps of the path can be added with [add\(\)](#) and when ready, calling [run\(\)](#) will begin executing the path

4.28.2 Member Function Documentation**add()**

```
void GenericAuto::add (
    state_ptr new_state)
```

Add a new state to the autonomous via function point of type "bool (ptr*)()"

Parameters

<i>new_state</i>	the function to run
------------------	---------------------

add_async()

```
void GenericAuto::add_async (
    state_ptr async_state)
```

Add a new state to the autonomous via function point of type "bool (ptr*)()" that will run asynchronously

Parameters

<i>async_state</i>	the function to run
--------------------	---------------------

add_delay()

```
void GenericAuto::add_delay (  
    int ms)
```

`add_delay` adds a period where the auto system will simply wait for the specified time

Parameters

<i>ms</i>	how long to wait in milliseconds
-----------	----------------------------------

run()

```
bool GenericAuto::run (  
    bool blocking)
```

The method that runs the autonomous. If 'blocking' is true, then this method will run through every state until it finished.

If blocking is false, then assuming every state is also non-blocking, the method will run through the current state in the list and return immediately.

Parameters

<i>blocking</i>	Whether or not to block the thread until all states have run
-----------------	--

Returns

true after all states have finished.

The documentation for this class was generated from the following files:

- generic_auto.h
- generic_auto.cpp

4.29 PurePursuit::hermite_point Struct Reference

```
#include <pure_pursuit.h>
```

4.29.1 Detailed Description

a position along the hermite path contains a position and orientation information that the robot would be at at this point

The documentation for this struct was generated from the following file:


- pure_pursuit.h

4.30 IfTimePassed Class Reference

[IfTimePassed](#) tests based on time since the command controller was constructed. Returns true if elapsed time > time_s.

```
#include <auto_command.h>
```

Inheritance diagram for IfTimePassed:

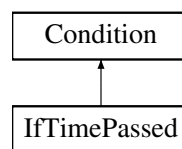

4.30.1 Detailed Description

[IfTimePassed](#) tests based on time since the command controller was constructed. Returns true if elapsed time > time_s.

The documentation for this class was generated from the following files:

- auto_command.h
- auto_command.cpp

4.31 InOrder Class Reference

[InOrder](#) runs its commands sequentially then continues. How to handle timeout in this case. Automatically set it to sum of commands timeouts?

```
#include <auto_command.h>
```

4.31.1 Detailed Description

[InOrder](#) runs its commands sequentially then continues. How to handle timeout in this case. Automatically set it to sum of commands timeouts?

[InOrder](#) runs its commands sequentially then continues. How to handle timeout in this case. Automatically set it to sum of commands timeouts?

The documentation for this class was generated from the following files:

- auto_command.h
- auto_command.cpp

4.32 Lift< T > Class Template Reference

```
#include <lift.h>
```

Classes

- struct [lift_cfg_t](#)

Public Member Functions

- [Lift](#) (motor_group &lift_motors, [lift_cfg_t](#) &lift_cfg, map< T, double > &setpoint_map, limit *homing_switch=NULL)
- void [control_continuous](#) (bool up_ctrl, bool down_ctrl)
- void [control_manual](#) (bool up_btn, bool down_btn, int volt_up, int volt_down)
- void [control_setpoints](#) (bool up_step, bool down_step, vector< T > pos_list)
- bool [set_position](#) (T pos)
- bool [set_setpoint](#) (double val)
- double [get_setpoint](#) ()
- void [hold](#) ()
- void [home](#) ()
- bool [get_async](#) ()
- void [set_async](#) (bool val)
- void [set_sensor_function](#) (double(*fn_ptr)(void))
- void [set_sensor_reset](#) (void(*fn_ptr)(void))

4.32.1 Detailed Description

```
template<typename T>
class Lift< T >
```

LIFT A general class for lifts (e.g. 4bar, dr4bar, linear, etc) Uses a [PID](#) to hold the lift at a certain height under load, and to move the lift to different heights

Author

Ryan McGee

4.32.2 Constructor & Destructor Documentation

Lift()

```
template<typename T >
Lift< T >::Lift (
    motor_group & lift_motors,
    lift_cfg_t & lift_cfg,
    map< T, double > & setpoint_map,
    limit * homing_switch = NULL) [inline]
```

Construct the [Lift](#) object and begin the background task that controls the lift.

Usage example:

```
/code{.cpp} enum Positions {UP, MID, DOWN}; map<Positions, double> setpt_map { {DOWN, 0.0}, {MID, 0.5}, {UP, 1.0} }; Lift<Positions> my_lift(motors, lift_cfg, setpt_map); /endcode
```

Parameters

<i>lift_motors</i>	A set of motors, all set that positive rotation correlates with the lift going up
<i>lift_cfg</i>	Lift characterization information; PID tunings and movement speeds
<i>setpoint_map</i>	A map of enum type T, in which each enum entry corresponds to a different lift height

4.32.3 Member Function Documentation

control_continuous()

```
template<typename T >
void Lift< T >::control_continuous (
    bool up_ctrl,
    bool down_ctrl) [inline]
```

Control the lift with an "up" button and a "down" button. Use PID to hold the lift when letting go.

Parameters

<i>up_ctrl</i>	Button controlling the "UP" motion
<i>down_ctrl</i>	Button controlling the "DOWN" motion

control_manual()

```
template<typename T >
void Lift< T >::control_manual (
    bool up_btn,
    bool down_btn,
    int volt_up,
    int volt_down) [inline]
```

Control the lift with manual controls (no holding voltage)

Parameters

<i>up_btn</i>	Raise the lift when true
<i>down_btn</i>	Lower the lift when true
<i>volt_up</i>	Motor voltage when raising the lift
<i>volt_down</i>	Motor voltage when lowering the lift

control_setpoints()

```
template<typename T >
void Lift< T >::control_setpoints (
    bool up_step,
    bool down_step,
    vector< T > pos_list) [inline]
```

Control the lift in "steps". When the "up" button is pressed, the lift will go to the next position as defined by pos_list. Order matters!

Parameters

<i>up_step</i>	A button that increments the position of the lift.
<i>down_step</i>	A button that decrements the position of the lift.
<i>pos_list</i>	A list of positions for the lift to go through. The higher the index, the higher the lift should be (generally).

get_async()

```
template<typename T >
bool Lift< T >::get_async () [inline]
```

Returns

whether or not the background thread is running the lift

get_setpoint()

```
template<typename T >
double Lift< T >::get_setpoint () [inline]
```

Returns

The current setpoint for the lift

hold()

```
template<typename T >
void Lift< T >::hold () [inline]
```

Target the class's setpoint. Calculate the [PID](#) output and set the lift motors accordingly.

home()

```
template<typename T >
void Lift< T >::home () [inline]
```

A blocking function that automatically homes the lift based on a sensor or hard stop, and sets the position to 0. A watchdog times out after 3 seconds, to avoid damage.

set_async()

```
template<typename T >
void Lift< T >::set_async (
    bool val) [inline]
```

Enables or disables the background task. Note that running the control functions, or `set_position` functions will immediately re-enable the task for autonomous use.

Parameters

<i>val</i>	Whether or not the background thread should run the lift
------------	--

set_position()

```
template<typename T >
bool Lift< T >::set_position (
    T pos) [inline]
```

Enable the background task, and send the lift to a position, specified by the setpoint map from the constructor.

Parameters

<i>pos</i>	A lift position enum type
------------	---------------------------

Returns

True if the pid has reached the setpoint

set_sensor_function()

```
template<typename T >
void Lift< T >::set_sensor_function (
    double(* fn_ptr ) (void)) [inline]
```

Creates a custom hook for any other type of sensor to be used on the lift. Example: `/code{.cpp} my_lift.set_sensor_function([](){return my_sensor.position();}); /endcode`

Parameters

<i>fn_ptr</i>	Pointer to custom sensor function
---------------	-----------------------------------

set_sensor_reset()

```
template<typename T >
void Lift< T >::set_sensor_reset (
    void(* fn_ptr ) (void)) [inline]
```

Creates a custom hook to reset the sensor used in [set_sensor_function\(\)](#). Example: `/code{.cpp} my_lift.set_sensor_reset(my_sensor.resetPosition); /endcode`

set_setpoint()

```
template<typename T >
bool Lift< T >::set_setpoint (
    double val) [inline]
```

Manually set a setpoint value for the lift [PID](#) to go to.

Parameters

<i>val</i>	Lift setpoint, in motor revolutions or sensor units defined by <code>get_sensor</code> . Cannot be outside the softstops.
------------	---

Returns

True if the pid has reached the setpoint

The documentation for this class was generated from the following file:

- `lift.h`

4.33 `Lift< T >::lift_cfg_t` Struct Reference

```
#include <lift.h>
```

4.33.1 Detailed Description

```
template<typename T>
struct Lift< T >::lift_cfg_t
```

[lift_cfg_t](#) holds the physical parameter specifications of a lify system. includes:

- maximum speeds for the system
- softstops to stop the lift from hitting the hard stops too hard

The documentation for this struct was generated from the following file:

- `lift.h`

4.34 `Logger` Class Reference

Class to simplify writing to files.

```
#include <logger.h>
```

Public Member Functions

- [Logger](#) (const std::string &filename)
Create a logger that will save to a file.
- **Logger** (const [Logger](#) &l)=delete
copying not allowed
- [Logger](#) & **operator=** (const [Logger](#) &l)=delete
copying not allowed
- void [Log](#) (const std::string &s)
Write a string to the log.
- void [Log](#) (LogLevel level, const std::string &s)
Write a string to the log with a loglevel.
- void [Logln](#) (const std::string &s)
Write a string and newline to the log.
- void [Logln](#) (LogLevel level, const std::string &s)
Write a string and a newline to the log with a loglevel.
- void [Logf](#) (const char *fmt,...)
Write a formatted string to the log.
- void [Logf](#) (LogLevel level, const char *fmt,...)
Write a formatted string to the log with a loglevel.

Static Public Attributes

- static constexpr int **MAX_FORMAT_LEN** = 512
maximum size for a string to be before it's written

4.34.1 Detailed Description

Class to simplify writing to files.

4.34.2 Constructor & Destructor Documentation

Logger()

```
Logger::Logger (
    const std::string & filename) [explicit]
```

Create a logger that will save to a file.

Parameters

<i>filename</i>	the file to save to
-----------------	---------------------

4.34.3 Member Function Documentation

Log() [1/2]

```
void Logger::Log (
    const std::string & s)
```

Write a string to the log.

Parameters

<i>s</i>	the string to write
----------	---------------------

Log() [2/2]

```
void Logger::Log (  
    LogLevel level,  
    const std::string & s)
```

Write a string to the log with a loglevel.

Parameters

<i>level</i>	the level to write. DEBUG, NOTICE, WARNING, ERROR, CRITICAL, TIME
<i>s</i>	the string to write

Logf() [1/2]

```
void Logger::Logf (  
    const char * fmt,  
    ...)
```

Write a formatted string to the log.

Parameters

<i>fmt</i>	the format string (like printf)
...	the args

Logf() [2/2]

```
void Logger::Logf (  
    LogLevel level,  
    const char * fmt,  
    ...)
```

Write a formatted string to the log with a loglevel.

Parameters

<i>level</i>	the level to write. DEBUG, NOTICE, WARNING, ERROR, CRITICAL, TIME
<i>fmt</i>	the format string (like printf)
...	the args

Logln() [1/2]

```
void Logger::Logln (  
    const std::string & s)
```

Write a string and newline to the log.

Parameters

<code>s</code>	the string to write
----------------	---------------------

LogIn() [2/2]

```
void Logger::LogIn (
    LogLevel level,
    const std::string & s)
```

Write a string and a newline to the log with a loglevel.

Parameters

<i>level</i>	the level to write. DEBUG, NOTICE, WARNING, ERROR, CRITICAL, TIME
<code>s</code>	the string to write

The documentation for this class was generated from the following files:

- logger.h
- logger.cpp

4.35 MotionController::m_profile_cfg_t Struct Reference

```
#include <motion_controller.h>
```

Public Attributes

- double **max_v**
the maximum velocity the robot can drive
- double **accel**
the most acceleration the robot can do
- [PID::pid_config_t](#) **pid_cfg**
configuration parameters for the internal [PID](#) controller
- [FeedForward::ff_config_t](#) **ff_cfg**
configuration parameters for the internal

4.35.1 Detailed Description

`m_profile_config` holds all data the motion controller uses to plan paths When motion profile is given a target to drive to, `max_v` and `accel` are used to make the trapezoid profile instructing the controller how to drive `pid_cfg`, `ff_cfg` are used to find the motor outputs necessary to execute this path

The documentation for this struct was generated from the following file:

- motion_controller.h

4.36 StateMachine< System, IDType, Message, delay_ms, do_log >::MaybeMessage Class Reference

[MaybeMessage](#) a message of Message type or nothing [MaybeMessage](#) m = {}; // empty [MaybeMessage](#) m = Message::EnumField1.

```
#include <state_machine.h>
```

Public Member Functions

- [MaybeMessage](#) ()
Empty message - when theres no message.
- [MaybeMessage](#) (Message msg)
Create a maybemessage with a message.
- bool [has_message](#) ()
check if the message is here
- Message [message](#) ()
Get the message stored. The return value is invalid unless has_message returned true.

4.36.1 Detailed Description

```
template<typename System, typename IDType, typename Message, int32_t delay_ms, bool do_log = false>
class StateMachine< System, IDType, Message, delay_ms, do_log >::MaybeMessage
```

[MaybeMessage](#) a message of Message type or nothing [MaybeMessage](#) m = {}; // empty [MaybeMessage](#) m = Message::EnumField1.

4.36.2 Constructor & Destructor Documentation

MaybeMessage()

```
template<typename System , typename IDType , typename Message , int32_t delay_ms, bool do_log
= false>
```

```
StateMachine< System, IDType, Message, delay_ms, do_log >::MaybeMessage::MaybeMessage (
    Message msg) [inline]
```

Create a maybemessage with a message.

Parameters

<i>msg</i>	the message to hold on to
------------	---------------------------

4.36.3 Member Function Documentation

has_message()

```
template<typename System , typename IDType , typename Message , int32_t delay_ms, bool do_log
= false>
bool StateMachine< System, IDType, Message, delay_ms, do_log >::MaybeMessage::has_message ()
[inline]
```

check if the message is here

Returns

true if there is a message

message()

```
template<typename System , typename IDType , typename Message , int32_t delay_ms, bool do_log
= false>
Message StateMachine< System, IDType, Message, delay_ms, do_log >::MaybeMessage::message ()
[inline]
```

Get the message stored. The return value is invalid unless has_message returned true.

Returns

The message if it exists. Undefined otherwise

The documentation for this class was generated from the following file:

- state_machine.h

4.37 MecanumDrive Class Reference

```
#include <mecanum_drive.h>
```

Classes

- struct [mecanumdrive_config_t](#)

Public Member Functions

- [MecanumDrive](#) (vex::motor &left_front, vex::motor &right_front, vex::motor &left_rear, vex::motor &right_rear, vex::rotation *lateral_wheel=NULL, vex::inertial *imu=NULL, [mecanumdrive_config_t](#) *config=NULL)
- void [drive_raw](#) (double direction_deg, double magnitude, double rotation)
- void [drive](#) (double left_y, double left_x, double right_x, int power=2)
- bool [auto_drive](#) (double inches, double direction, double speed, bool gyro_correction=true)
- bool [auto_turn](#) (double degrees, double speed, bool ignore_imu=false)

4.37.1 Detailed Description

A class representing the Mecanum drivetrain. Contains 4 motors, a possible IMU (intertial), and a possible undriven perpendicular wheel.

4.37.2 Constructor & Destructor Documentation

MecanumDrive()

```
MecanumDrive::MecanumDrive (
    vex::motor & left_front,
    vex::motor & right_front,
    vex::motor & left_rear,
    vex::motor & right_rear,
    vex::rotation * lateral_wheel = NULL,
    vex::inertial * imu = NULL,
    mecanumdrive_config_t * config = NULL)
```

Create the Mecanum drivetrain object

4.37.3 Member Function Documentation

auto_drive()

```
bool MecanumDrive::auto_drive (
    double inches,
    double direction,
    double speed,
    bool gyro_correction = true)
```

Drive the robot in a straight line automatically. If the inertial was declared in the constructor, use it to correct while driving. If the lateral wheel was declared in the constructor, use it for more accurate positioning while strafing.

Parameters

<i>inches</i>	How far the robot should drive, in inches
<i>direction</i>	What direction the robot should travel in, in degrees. 0 is forward, +/-180 is reverse, clockwise is positive.
<i>speed</i>	The maximum speed the robot should travel, in percent: -1.0->+1.0
<i>gyro_correction</i>	=true Whether or not to use the gyro to help correct while driving. Will always be false if no gyro was declared in the constructor.

Drive the robot in a straight line automatically. If the inertial was declared in the constructor, use it to correct while driving. If the lateral wheel was declared in the constructor, use it for more accurate positioning while strafing.

Parameters

<i>inches</i>	How far the robot should drive, in inches
<i>direction</i>	What direction the robot should travel in, in degrees. 0 is forward, +/-180 is reverse, clockwise is positive.
<i>speed</i>	The maximum speed the robot should travel, in percent: -1.0->+1.0
<i>gyro_correction</i>	= true Whether or not to use the gyro to help correct while driving. Will always be false if no gyro was declared in the constructor.

Returns

Whether or not the maneuver is complete.

auto_turn()

```
bool MecanumDrive::auto_turn (
    double degrees,
    double speed,
    bool ignore_imu = false)
```

Autonomously turn the robot X degrees over it's center point. Uses a closed loop for control.

Parameters

<i>degrees</i>	How many degrees to rotate the robot. Clockwise postive.
<i>speed</i>	What percentage to run the motors at: 0.0 -> 1.0
<i>ignore_imu</i>	=false Whether or not to use the Inertial for determining angle. Will instead use circumference formula + robot's wheelbase + encoders to determine.

Returns

whether or not the robot has finished the maneuver

Autonomously turn the robot X degrees over it's center point. Uses a closed loop for control.

Parameters

<i>degrees</i>	How many degrees to rotate the robot. Clockwise postive.
<i>speed</i>	What percentage to run the motors at: 0.0 -> 1.0
<i>ignore_imu</i>	= false Whether or not to use the Inertial for determining angle. Will instead use circumference formula + robot's wheelbase + encoders to determine.

Returns

whether or not the robot has finished the maneuver

drive()

```
void MecanumDrive::drive (
    double left_y,
    double left_x,
    double right_x,
    int power = 2)
```

Drive the robot with a mecanum-style / arcade drive. Inputs are in percent (-100.0 -> 100.0) straight from the controller. Controls are mixed, so the robot can drive forward / strafe / rotate all at the same time.

Parameters

<i>left_y</i>	left joystick, Y axis (forward / backwards)
<i>left_x</i>	left joystick, X axis (strafe left / right)
<i>right_x</i>	right joystick, X axis (rotation left / right)
<i>power</i>	=2 how much of a "curve" there should be on drive controls; better for low speed maneuvers. Leave blank for a default curve of 2 (higher means more fidelity)

Drive the robot with a mecanum-style / arcade drive. Inputs are in percent (-100.0 -> 100.0) straight from the controller. Controls are mixed, so the robot can drive forward / strafe / rotate all at the same time.

Parameters

<i>left_y</i>	left joystick, Y axis (forward / backwards)
<i>left_x</i>	left joystick, X axis (strafe left / right)
<i>right_x</i>	right joystick, X axis (rotation left / right)
<i>power</i>	= 2 how much of a "curve" there should be on drive controls; better for low speed maneuvers. Leave blank for a default curve of 2 (higher means more fidelity)

drive_raw()

```
void MecanumDrive::drive_raw (
    double direction_deg,
    double magnitude,
    double rotation)
```

Drive the robot using vectors. This handles all the math required for mecanum control.

Parameters

<i>direction_deg</i>	the direction to drive the robot, in degrees. 0 is forward, 180 is back, clockwise is positive, counterclockwise is negative.
<i>magnitude</i>	How fast the robot should drive, in percent: 0.0->1.0
<i>rotation</i>	How fast the robot should rotate, in percent: -1.0->+1.0

The documentation for this class was generated from the following files:

- mecanum_drive.h
- mecanum_drive.cpp

4.38 MecanumDrive::mecanumdrive_config_t Struct Reference

```
#include <mecanum_drive.h>
```

4.38.1 Detailed Description

Configure the Mecanum drive [PID](#) tunings and robot configurations

The documentation for this struct was generated from the following file:

- mecanum_drive.h

4.39 motion_t Struct Reference

```
#include <trapezoid_profile.h>
```

Public Attributes

- double **pos**
1d position at this point in time
- double **vel**
1d velocity at this point in time
- double **accel**
1d acceleration at this point in time

4.39.1 Detailed Description

`motion_t` is a description of 1 dimensional motion at a point in time.


The documentation for this struct was generated from the following file:

- `trapezoid_profile.h`

4.40 MotionController Class Reference

```
#include <motion_controller.h>
```

Inheritance diagram for MotionController:

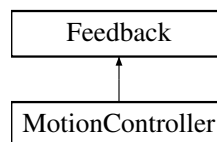**Classes**

- struct `m_profile_cfg_t`

Public Member Functions

- `MotionController` (`m_profile_cfg_t` &config)
Construct a new Motion Controller object.
- void `init` (double start_pt, double end_pt) override
Initialize the motion profile for a new movement This will also reset the `PID` and profile timers.
- double `update` (double sensor_val) override
Update the motion profile with a new sensor value.
- double `get` () override
- void `set_limits` (double lower, double upper) override
- bool `is_on_target` () override
- `motion_t get_motion` () const

Public Member Functions inherited from [Feedback](#)

Static Public Member Functions

- static [FeedForward::ff_config_t](#) [tune_feedforward](#) ([TankDrive](#) &drive, [OdometryTank](#) &odometry, double pct=0.6, double duration=2)

4.40.1 Detailed Description

Motion Controller class

This class defines a top-level motion profile, which can act as an intermediate between a subsystem class and the motors themselves

This takes the constants kS, kV, kA, kP, kI, kD, max_v and acceleration and wraps around a feedforward, [PID](#) and trapezoid profile. It does so with the following formula:

```
out = feedforward.calculate(motion_profile.get(time_s)) + pid.get(motion_profile.get(time_s))
```

For [PID](#) and Feedforward specific formulae, see [pid.h](#), [feedforward.h](#), and [trapezoid_profile.h](#)

Author

Ryan McGee

Date

7/13/2022

4.40.2 Constructor & Destructor Documentation

MotionController()

```
MotionController::MotionController (
    m_profile_cfg_t & config)
```

Construct a new Motion Controller object.

Parameters

<i>config</i>	The definition of how the robot is able to move max_v Maximum velocity the movement is capable of accel Acceleration / deceleration of the movement pid_cfg Definitions of kP, kI, and kD ff_cfg Definitions of kS, kV, and kA
---------------	--

4.40.3 Member Function Documentation

get()

```
double MotionController::get () [override], [virtual]
```

Returns

the last saved result from the feedback controller

Implements [Feedback](#).

get_motion()

```
motion_t MotionController::get_motion () const
```

Returns

The current position, velocity and acceleration setpoints

init()

```
void MotionController::init (
    double start_pt,
    double end_pt) [override], [virtual]
```

Initialize the motion profile for a new movement This will also reset the [PID](#) and profile timers.

Parameters

<i>start_pt</i>	Movement starting position
<i>end_pt</i>	Movement ending position

Implements [Feedback](#).

is_on_target()

```
bool MotionController::is_on_target () [override], [virtual]
```

Returns

Whether or not the movement has finished, and the [PID](#) confirms it is on target

Implements [Feedback](#).

set_limits()

```
void MotionController::set_limits (
    double lower,
    double upper) [override], [virtual]
```

Clamp the upper and lower limits of the output. If both are 0, no limits should be applied. If limits are applied, the controller will not target any value below lower or above upper

Parameters

<i>lower</i>	upper limit
<i>upper</i>	lower limit

Clamp the upper and lower limits of the output. If both are 0, no limits should be applied.

Parameters

<i>lower</i>	Upper limit
<i>upper</i>	Lower limit

Implements [Feedback](#).

tune_feedforward()

```
FeedForward::ff_config_t MotionController::tune_feedforward (
    TankDrive & drive,
    OdometryTank & odometry,
    double pct = 0.6,
    double duration = 2) [static]
```

This method attempts to characterize the robot's drivetrain and automatically tune the feedforward. It does this by first calculating the kS (voltage to overcome static friction) by slowly increasing the voltage until it moves.

Next is kV (voltage to sustain a certain velocity), where the robot will record it's steady-state velocity at 'pct' speed.

Finally, kA (voltage needed to accelerate by a certain rate), where the robot will record the entire movement's velocity and acceleration, record a plot of $[X=(pct-kV*V-kS), Y=(Acceleration)]$ along the movement, and since $kA*Accel = pct-kV*V-kS$, the reciprocal of the linear regression is the kA value.

Parameters

<i>drive</i>	The tankdrive to operate on
<i>odometry</i>	The robot's odometry subsystem
<i>pct</i>	Maximum velocity in percent (0->1.0)
<i>duration</i>	Amount of time the robot should be moving for the test

Returns

A tuned feedforward object

update()

```
double MotionController::update (
    double sensor_val) [override], [virtual]
```

Update the motion profile with a new sensor value.

Parameters

<i>sensor_val</i>	Value from the sensor
-------------------	-----------------------

Returns

the motor input generated from the motion profile

Implements [Feedback](#).


The documentation for this class was generated from the following files:

- motion_controller.h
- motion_controller.cpp

4.41 MovingAverage Class Reference

```
#include <moving_average.h>
```

Inheritance diagram for MovingAverage:

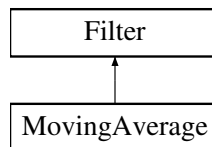

Public Member Functions

- [MovingAverage](#) (int buffer_size)
- [MovingAverage](#) (int buffer_size, double starting_value)
- void [add_entry](#) (double n) override
- double [get_value](#) () const override
- int [get_size](#) () const

Public Member Functions inherited from [Filter](#)

4.41.1 Detailed Description

[MovingAverage](#)

A moving average is a way of smoothing out noisy data. For many sensor readings, the noise is roughly symmetric around the actual value. This means that if you collect enough samples those that are too high are cancelled out by the samples that are too low leaving the real value.

The [MovingAverage](#) class provides a simple interface to do this smoothing from our noisy sensor values.

WARNING: because we need a lot of samples to get the actual value, the value given by the [MovingAverage](#) will 'lag' behind the actual value that the sensor is reading. Using a [MovingAverage](#) is thus a tradeoff between accuracy and lag time (more samples) vs. less accuracy and faster updating (less samples).

4.41.2 Constructor & Destructor Documentation

[MovingAverage\(\)](#) [1/2]

```
MovingAverage::MovingAverage (
    int buffer_size)
```

Create a moving average calculator with 0 as the default value

Parameters

<i>buffer_size</i>	The size of the buffer. The number of samples that constitute a valid reading
--------------------	---

[MovingAverage\(\)](#) [2/2]

```
MovingAverage::MovingAverage (
    int buffer_size,
    double starting_value)
```

Create a moving average calculator with a specified default value

Parameters

<i>buffer_size</i>	The size of the buffer. The number of samples that constitute a valid reading
<i>starting_value</i>	The value that the average will be before any data is added

4.41.3 Member Function Documentation**add_entry()**

```
void MovingAverage::add_entry (  
    double n) [override], [virtual]
```

Add a reading to the buffer Before: [1 1 2 2 3 3] => 2 ^ After: [2 1 2 2 3 3] => 2.16 ^

Parameters

<i>n</i>	the sample that will be added to the moving average.
----------	--

Implements [Filter](#).

get_size()

```
int MovingAverage::get_size () const
```

How many samples the average is made from

Returns

the number of samples used to calculate this average

get_value()

```
double MovingAverage::get_value () const [override], [virtual]
```

Returns the average based off of all the samples collected so far

Returns

the calculated average. `sum(samples)/numsamples`

How many samples the average is made from

Returns

the number of samples used to calculate this average

Implements [Filter](#).


The documentation for this class was generated from the following files:

- `moving_average.h`
- `moving_average.cpp`

4.42 Odometry3Wheel Class Reference

```
#include <odometry_3wheel.h>
```

Inheritance diagram for Odometry3Wheel:

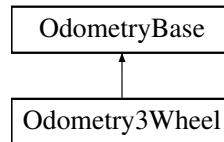

Classes

- struct [odometry3wheel_cfg_t](#)

Public Member Functions

- [Odometry3Wheel](#) ([CustomEncoder](#) &lside_fwd, [CustomEncoder](#) &rside_fwd, [CustomEncoder](#) &off_axis, [odometry3wheel_cfg_t](#) &cfg, bool is_async=true)
- [pose_t update](#) () override
- void [tune](#) (vex::controller &con, [TankDrive](#) &drive)

Public Member Functions inherited from [OdometryBase](#)

- [OdometryBase](#) (bool is_async)
- [pose_t get_position](#) (void)
- virtual void [set_position](#) (const [pose_t](#) &newpos=[zero_pos](#))
- void [end_async](#) ()
- double [get_speed](#) ()
- double [get_accel](#) ()
- double [get_angular_speed_deg](#) ()
- double [get_angular_accel_deg](#) ()

Additional Inherited Members

Static Public Member Functions inherited from [OdometryBase](#)

- static int [background_task](#) (void *ptr)
- static double [pos_diff](#) ([pose_t](#) start_pos, [pose_t](#) end_pos)
- static double [rot_diff](#) ([pose_t](#) pos1, [pose_t](#) pos2)
- static double [smallest_angle](#) (double start_deg, double end_deg)
- static [pose_t pose_exponential](#) (const Eigen::Vector3d old_pose, const Eigen::Vector3d twist)

Public Attributes inherited from [OdometryBase](#)

- bool **end_task** = false
end_task is true if we instruct the odometry thread to shut down

Static Public Attributes inherited from [OdometryBase](#)

- static constexpr [pose_t](#) [zero_pos](#) = {.x = 0.0L, .y = 0.0L, .rot = 90.0L}

Protected Attributes inherited from [OdometryBase](#)

- vex::task * [handle](#)
- vex::mutex [mut](#)
- [pose_t](#) [current_pos](#)
- double [speed](#)
- double [accel](#)
- double [ang_speed_deg](#)
- double [ang_accel_deg](#)

4.42.1 Detailed Description

[Odometry3Wheel](#)

This class handles the code for a standard 3-pod odometry setup, where there are 3 "pods" made up of undriven (dead) wheels connected to encoders in the following configuration:

```
+Y ----- ^ ||||| O ||||| == || ----- | +-----> + X
```

Where O is the center of rotation. The robot will monitor the changes in rotation of these wheels and calculate the robot's X, Y and rotation on the field.

This is a "set and forget" class, meaning once the object is created, the robot will immediately begin tracking it's movement in the background.

Author

Ryan McGee

Date

Oct 31 2022

4.42.2 Constructor & Destructor Documentation

[Odometry3Wheel\(\)](#)

```
Odometry3Wheel::Odometry3Wheel (
    CustomEncoder & lside_fwd,
    CustomEncoder & rside_fwd,
    CustomEncoder & off_axis,
    odometry3wheel_cfg_t & cfg,
    bool is_async = true)
```

Construct a new Odometry 3 Wheel object

Parameters

<i>lside_fwd</i>	left-side encoder reference
<i>rside_fwd</i>	right-side encoder reference
<i>off_axis</i>	off-axis (perpendicular) encoder reference
<i>cfg</i>	robot odometry configuration
<i>is_async</i>	true to constantly run in the background

4.42.3 Member Function Documentation

tune()

```
void Odometry3Wheel::tune (
    vex::controller & con,
    TankDrive & drive)
```

A guided tuning process to automatically find tuning parameters. This method is blocking, and returns when tuning has finished. Follow the instructions on the controller to complete the tuning process

Parameters

<i>con</i>	Controller reference, for screen and button control
<i>drive</i>	Drivetrain reference for robot control

A guided tuning process to automatically find tuning parameters. This method is blocking, and returns when tuning has finished. Follow the instructions on the controller to complete the tuning process

It is assumed the gear ratio and encoder PPR have been set correctly

update()

```
pose_t Odometry3Wheel::update () [override], [virtual]
```

Update the current position of the robot once, using the current state of the encoders and the previous known location

Returns

the robot's updated position

Implements [OdometryBase](#).

The documentation for this class was generated from the following files:

- `odometry_3wheel.h`
- `odometry_3wheel.cpp`

4.43 Odometry3Wheel::odometry3wheel_cfg_t Struct Reference

```
#include <odometry_3wheel.h>
```

Public Attributes

- double [wheelbase_dist](#)
- double [off_axis_center_dist](#)
- double [wheel_diam](#)

4.43.1 Detailed Description

[odometry3wheel_cfg_t](#) holds all the specifications for how to calculate position with 3 encoders See the core wiki for what exactly each of these parameters measures

4.43.2 Member Data Documentation

off_axis_center_dist

```
double Odometry3Wheel::odometry3wheel_cfg_t::off_axis_center_dist
```

distance from the center of the robot to the center off axis wheel

wheel_diam

```
double Odometry3Wheel::odometry3wheel_cfg_t::wheel_diam
```

the diameter of the tracking wheel

wheelbase_dist

```
double Odometry3Wheel::odometry3wheel_cfg_t::wheelbase_dist
```

distance from the center of the left wheel to the center of the right wheel


The documentation for this struct was generated from the following file:

- [odometry_3wheel.h](#)

4.44 OdometryBase Class Reference

```
#include <odometry_base.h>
```

Inheritance diagram for OdometryBase:

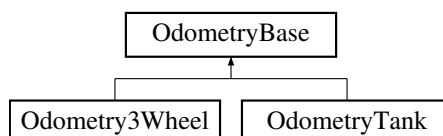

Public Member Functions

- [OdometryBase](#) (bool is_async)
- [pose_t get_position](#) (void)
- virtual void [set_position](#) (const [pose_t](#) &newpos=[zero_pos](#))
- virtual [pose_t update](#) ()=0
- void [end_async](#) ()
- double [get_speed](#) ()
- double [get_accel](#) ()
- double [get_angular_speed_deg](#) ()
- double [get_angular_accel_deg](#) ()

Static Public Member Functions

- static int [background_task](#) (void *ptr)
- static double [pos_diff](#) ([pose_t](#) start_pos, [pose_t](#) end_pos)
- static double [rot_diff](#) ([pose_t](#) pos1, [pose_t](#) pos2)
- static double [smallest_angle](#) (double start_deg, double end_deg)
- static [pose_t pose_exponential](#) (const Eigen::Vector3d old_pose, const Eigen::Vector3d twist)

Public Attributes

- bool **end_task** = false
end_task is true if we instruct the odometry thread to shut down

Static Public Attributes

- static constexpr [pose_t zero_pos](#) = {.x = 0.0L, .y = 0.0L, .rot = 90.0L}

Protected Attributes

- vex::task * [handle](#)
- vex::mutex [mut](#)
- [pose_t current_pos](#)
- double [speed](#)
- double [accel](#)
- double [ang_speed_deg](#)
- double [ang_accel_deg](#)

4.44.1 Detailed Description

[OdometryBase](#)

This base class contains all the shared code between different implementations of odometry. It handles the asynchronous management, position input/output and basic math functions, and holds positional types specific to field orientation.

All future odometry implementations should extend this file and redefine [update\(\)](#) function.

Author

Ryan McGee

Date

Aug 11 2021

4.44.2 Constructor & Destructor Documentation

OdometryBase()

```
OdometryBase::OdometryBase (
    bool is_async)
```

Construct a new Odometry Base object

Parameters

<i>is_async</i>	True to run constantly in the background, false to call update() manually
-----------------	---

4.44.3 Member Function Documentation

background_task()

```
int OdometryBase::background_task (
    void * ptr) [static]
```

Function that runs in the background task. This function pointer is passed to the vex::task constructor.

Parameters

<i>ptr</i>	Pointer to OdometryBase object
------------	--

Returns

Required integer return code. Unused.

end_async()

```
void OdometryBase::end_async ()
```

End the background task. Cannot be restarted. If the user wants to end the thread but keep the data up to date, they must run the [update\(\)](#) function manually from then on.

get_accel()

```
double OdometryBase::get_accel ()
```

Get the current acceleration

Returns

the acceleration rate of the robot (inch/s²)

get_angular_accel_deg()

```
double OdometryBase::get_angular_accel_deg ()
```

Get the current angular acceleration in degrees

Returns

the angular acceleration at which we are turning (deg/s²)

get_angular_speed_deg()

```
double OdometryBase::get_angular_speed_deg ()
```

Get the current angular speed in degrees

Returns

the angular velocity at which we are turning (deg/s)

get_position()

```
pose_t OdometryBase::get_position (
    void )
```

Gets the current position and rotation

Returns

the position that the odometry believes the robot is at

Gets the current position and rotation

get_speed()

```
double OdometryBase::get_speed ()
```

Get the current speed

Returns

the speed at which the robot is moving and grooving (inch/s)

pos_diff()

```
double OdometryBase::pos_diff (
    pose_t start_pos,
    pose_t end_pos) [static]
```

Get the distance between two points

Parameters

<i>start_pos</i>	distance from this point
<i>end_pos</i>	to this point

Returns

the euclidean distance between start_pos and end_pos

pose_exponential()

```
pose_t OdometryBase::pose_exponential (  
    const Eigen::Vector3d old_pose,  
    const Eigen::Vector3d twist) [static]
```

Applies a twist (pose delta) to a pose by including first order dynamics of heading. Can be thought of as applying a twist as following an arc rather than a straight line.

<https://file.tavsys.net/control/controls-engineering-in-frc.pdf#section.10.2>

Parameters

<i>old_pose</i>	The pose to which the twist will be applied
<i>twist</i>	The twist, represents a pose delta

rot_diff()

```
double OdometryBase::rot_diff (  
    pose_t pos1,  
    pose_t pos2) [static]
```

Get the change in rotation between two points

Parameters

<i>pos1</i>	position with initial rotation
<i>pos2</i>	position with final rotation

Returns

change in rotation between pos1 and pos2

Get the change in rotation between two points

set_position()

```
void OdometryBase::set_position (  
    const pose_t & newpos = zero_pos) [virtual]
```

Sets the current position of the robot

Parameters

<i>newpos</i>	the new position that the odometry will believe it is at
---------------	--

Sets the current position of the robot

Reimplemented in [OdometryTank](#).

smallest_angle()

```
double OdometryBase::smallest_angle (
    double start_deg,
    double end_deg) [static]
```

Get the smallest difference in angle between a start heading and end heading. Returns the difference between -180 degrees and +180 degrees, representing the robot turning left or right, respectively.

Parameters

<i>start_deg</i>	initial angle (degrees)
<i>end_deg</i>	final angle (degrees)

Returns

the smallest angle from the initial to the final angle. This takes into account the wrapping of rotations around 360 degrees

Get the smallest difference in angle between a start heading and end heading. Returns the difference between -180 degrees and +180 degrees, representing the robot turning left or right, respectively.

update()

```
virtual pose_t OdometryBase::update () [pure virtual]
```

Update the current position on the field based on the sensors

Returns

the location that the robot is at after the odometry does its calculations

Implemented in [Odometry3Wheel](#), and [OdometryTank](#).

4.44.4 Member Data Documentation**accel**

```
double OdometryBase::accel [protected]
```

the rate at which we are accelerating (inch/s²)

ang_accel_deg

```
double OdometryBase::ang_accel_deg [protected]
```

the rate at which we are accelerating our turn (deg/s^2)

ang_speed_deg

```
double OdometryBase::ang_speed_deg [protected]
```

the speed at which we are turning (deg/s)

current_pos

```
pose_t OdometryBase::current_pos [protected]
```

Current position of the robot in terms of x,y,rotation

handle

```
vex::task* OdometryBase::handle [protected]
```

handle to the vex task that is running the odometry code

mut

```
vex::mutex OdometryBase::mut [protected]
```

Mutex to control multithreading

speed

```
double OdometryBase::speed [protected]
```

the speed at which we are travelling (inch/s)

zero_pos

```
pose_t OdometryBase::zero_pos = {.x = 0.0L, .y = 0.0L, .rot = 90.0L} [inline], [static],  
[constexpr]
```

Zeroed position. X=0, Y=0, Rotation= 90 degrees

The documentation for this class was generated from the following files:


- odometry_base.h
- odometry_base.cpp

4.45 screen::OdometryPage Class Reference

a page that shows odometry position and rotation and a map (if an sd card with the file is on)

```
#include <screen.h>
```

Inheritance diagram for screen::OdometryPage:

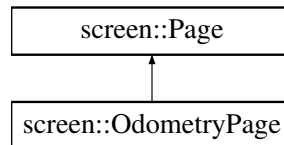

Public Member Functions

- [OdometryPage](#) ([OdometryBase](#) &odom, double robot_width, double robot_height, bool do_trail)
Create an odometry trail. Make sure odometry is initilized before now.
- void [update](#) (bool was_pressed, int x, int y) override
- void [draw](#) (vex::brain::lcd &, bool first_draw, unsigned int frame_number) override

Public Member Functions inherited from [screen::Page](#)

4.45.1 Detailed Description

a page that shows odometry position and rotation and a map (if an sd card with the file is on)

4.45.2 Constructor & Destructor Documentation

OdometryPage()

```
screen::OdometryPage::OdometryPage (
    OdometryBase & odom,
    double robot_width,
    double robot_height,
    bool do_trail)
```

Create an odometry trail. Make sure odometry is initilized before now.

Parameters

<i>odom</i>	the odometry system to monitor
<i>robot_width</i>	the width (side to side) of the robot in inches. Used for visualization
<i>robot_height</i>	the robot_height (front to back) of the robot in inches. Used for visualization
<i>do_trail</i>	whether or not to calculate and draw the trail. Drawing and storing takes a very <i>slight</i> extra amount of processing power

4.45.3 Member Function Documentation

draw()

```
void screen::OdometryPage::draw (
    vex::brain::lcd & scr,
    bool first_draw,
    unsigned int frame_number)  [override], [virtual]
```

See also

[Page::draw](#)

Reimplemented from [screen::Page](#).

update()

```
void screen::OdometryPage::update (
    bool was_pressed,
    int x,
    int y)  [override], [virtual]
```

See also

[Page::update](#)

Reimplemented from [screen::Page](#).


The documentation for this class was generated from the following files:

- screen.h
- screen.cpp

4.46 OdometryTank Class Reference

```
#include <odometry_tank.h>
```

Inheritance diagram for OdometryTank:

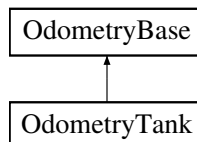

Public Member Functions

- [OdometryTank](#) (vex::motor_group &left_side, vex::motor_group &right_side, [robot_specs_t](#) &config, vex::inertial *imu=NULL, bool is_async=true)
- [OdometryTank](#) ([CustomEncoder](#) &left_custom_enc, [CustomEncoder](#) &right_custom_enc, [robot_specs_t](#) &config, vex::inertial *imu=NULL, bool is_async=true)
- [OdometryTank](#) (vex::encoder &left_vex_enc, vex::encoder &right_vex_enc, [robot_specs_t](#) &config, vex::inertial *imu=NULL, bool is_async=true)
- [pose_t update](#) () override
- void [set_position](#) (const [pose_t](#) &newpos=[zero_pos](#)) override

Public Member Functions inherited from [OdometryBase](#)

- [OdometryBase](#) (bool is_async)
- [pose_t get_position](#) (void)
- void [end_async](#) ()
- double [get_speed](#) ()
- double [get_accel](#) ()
- double [get_angular_speed_deg](#) ()
- double [get_angular_accel_deg](#) ()

Additional Inherited Members

Static Public Member Functions inherited from [OdometryBase](#)

- static int [background_task](#) (void *ptr)
- static double [pos_diff](#) ([pose_t](#) start_pos, [pose_t](#) end_pos)
- static double [rot_diff](#) ([pose_t](#) pos1, [pose_t](#) pos2)
- static double [smallest_angle](#) (double start_deg, double end_deg)
- static [pose_t pose_exponential](#) (const Eigen::Vector3d old_pose, const Eigen::Vector3d twist)

Public Attributes inherited from [OdometryBase](#)

- bool [end_task](#) = false
end_task is true if we instruct the odometry thread to shut down

Static Public Attributes inherited from [OdometryBase](#)

- static constexpr [pose_t zero_pos](#) = {.x = 0.0L, .y = 0.0L, .rot = 90.0L}

Protected Attributes inherited from [OdometryBase](#)

- vex::task * [handle](#)
- vex::mutex [mut](#)
- [pose_t current_pos](#)
- double [speed](#)
- double [accel](#)
- double [ang_speed_deg](#)
- double [ang_accel_deg](#)

4.46.1 Detailed Description

[OdometryTank](#) defines an odometry system for a tank drivetrain. This requires encoders in the same orientation as the drive wheels. Odometry is a "start and forget" subsystem, which means once it's created and configured, it will constantly run in the background and track the robot's X, Y and rotation coordinates.

4.46.2 Constructor & Destructor Documentation

OdometryTank() [1/3]

```
OdometryTank::OdometryTank (
    vex::motor_group & left_side,
    vex::motor_group & right_side,
    robot_specs_t & config,
    vex::inertial * imu = NULL,
    bool is_async = true)
```

Initialize the Odometry module, calculating position from the drive motors.

Parameters

<i>left_side</i>	The left motors
<i>right_side</i>	The right motors
<i>config</i>	the specifications that supply the odometry with descriptions of the robot. See robot_specs_t for what is contained
<i>imu</i>	The robot's inertial sensor. If not included, rotation is calculated from the encoders.
<i>is_async</i>	If true, position will be updated in the background continuously. If false, the programmer will have to manually call update() .

OdometryTank() [2/3]

```
OdometryTank::OdometryTank (
    CustomEncoder & left_custom_enc,
    CustomEncoder & right_custom_enc,
    robot_specs_t & config,
    vex::inertial * imu = NULL,
    bool is_async = true)
```

Initialize the Odometry module, calculating position from the drive motors.

Parameters

<i>left_custom_enc</i>	The left custom encoder
<i>right_custom_enc</i>	The right custom encoder
<i>config</i>	the specifications that supply the odometry with descriptions of the robot. See robot_specs_t for what is contained
<i>imu</i>	The robot's inertial sensor. If not included, rotation is calculated from the encoders.
<i>is_async</i>	If true, position will be updated in the background continuously. If false, the programmer will have to manually call update() .

OdometryTank() [3/3]

```
OdometryTank::OdometryTank (
    vex::encoder & left_vex_enc,
    vex::encoder & right_vex_enc,
    robot_specs_t & config,
    vex::inertial * imu = NULL,
    bool is_async = true)
```

Initialize the Odometry module, calculating position from the drive motors.

Parameters

<i>left_vex_enc</i>	The left vex encoder
<i>right_vex_enc</i>	The right vex encoder
<i>config</i>	the specifications that supply the odometry with descriptions of the robot. See robot_specs_t for what is contained
<i>imu</i>	The robot's inertial sensor. If not included, rotation is calculated from the encoders.
<i>is_async</i>	If true, position will be updated in the background continuously. If false, the programmer will have to manually call update() .

4.46.3 Member Function Documentation**set_position()**

```
void OdometryTank::set_position (
    const pose_t & newpos = zero_pos) [override], [virtual]
```

`set_position` tells the odometry to place itself at a position

Parameters

<i>newpos</i>	the position the odometry will take
---------------	-------------------------------------

Resets the position and rotational data to the input.

Reimplemented from [OdometryBase](#).

update()

```
pose_t OdometryTank::update () [override], [virtual]
```

Update the current position on the field based on the sensors

Returns

the position that odometry has calculated itself to be at

Update, store and return the current position of the robot. Only use if not initializing with a separate thread.

Implements [OdometryBase](#).

The documentation for this class was generated from the following files:

- `odometry_tank.h`
- `odometry_tank.cpp`

4.47 OdomSetPosition Class Reference

```
#include <drive_commands.h>
```

Public Member Functions

- [OdomSetPosition](#) ([OdometryBase](#) &odom, const [pose_t](#) &newpos=[OdometryBase::zero_pos](#))
- bool [run](#) () override

4.47.1 Detailed Description

AutoCommand wrapper class for the set_position function in the Odometry class

4.47.2 Constructor & Destructor Documentation

OdomSetPosition()

```
OdomSetPosition::OdomSetPosition (
    OdometryBase & odom,
    const pose\_t & newpos = OdometryBase::zero\_pos)
```

constructs a new [OdomSetPosition](#) command

Parameters

<i>odom</i>	the odometry system we are setting
<i>newpos</i>	the position we are telling the odometry to take. defaults to (0, 0), angle = 90

Construct an Odometry set pos

Parameters

<i>odom</i>	the odometry system we are setting
<i>newpos</i>	the now position to set the odometry to

4.47.3 Member Function Documentation

run()

```
bool OdomSetPosition::run () [override]
```

Run set_position Overrides run from AutoCommand

Returns

true when execution is complete, false otherwise

The documentation for this class was generated from the following files:


- drive_commands.h
- drive_commands.cpp

4.48 screen::Page Class Reference

[Page](#) describes one part of the screen slideshow.

```
#include <screen.h>
```

Inheritance diagram for screen::Page:



Public Member Functions

- virtual void [update](#) (bool was_pressed, int x, int y)
collect data, respond to screen input, do fast things (runs at 50hz even if you're not focused on this [Page](#) (only drawn page gets touch updates))
- virtual void [draw](#) (vex::brain::lcd &screen, bool first_draw, unsigned int frame_number)
draw stored data to the screen (runs at 10 hz and only runs if this page is in front)

4.48.1 Detailed Description

[Page](#) describes one part of the screen slideshow.

4.48.2 Member Function Documentation

draw()

```
virtual void screen::Page::draw (
    vex::brain::lcd & screen,
    bool first_draw,
    unsigned int frame_number) [virtual]
```

draw stored data to the screen (runs at 10 hz and only runs if this page is in front)

Parameters

<i>first_draw</i>	true if we just switched to this page
<i>frame_number</i>	frame of drawing we are on (basically an animation tick)

Reimplemented in [screen::FunctionPage](#), [screen::OdometryPage](#), [screen::PIDPage](#), and [screen::StatsPage](#).

update()

```
virtual void screen::Page::update (
    bool was_pressed,
    int x,
    int y) [virtual]
```

collect data, respond to screen input, do fast things (runs at 50hz even if you're not focused on this [Page](#) (only drawn page gets touch updates))

Parameters

<i>was_pressed</i>	true if the screen has been pressed
<i>x</i>	x position of screen press (if the screen was pressed)
<i>y</i>	y position of screen press (if the screen was pressed)

Reimplemented in [screen::FunctionPage](#), [screen::OdometryPage](#), [screen::PIDPage](#), and [screen::StatsPage](#).

The documentation for this class was generated from the following file:

- [screen.h](#)

4.49 Parallel Class Reference

[Parallel](#) runs multiple commands in parallel and waits for all to finish before continuing. if none finish before this command's timeout, it will call `on_timeout` on all children continue.

```
#include <auto_command.h>
```

4.49.1 Detailed Description

[Parallel](#) runs multiple commands in parallel and waits for all to finish before continuing. if none finish before this command's timeout, it will call `on_timeout` on all children continue.

The documentation for this class was generated from the following files:

- [auto_command.h](#)
- [auto_command.cpp](#)

4.50 PurePursuit::Path Class Reference

```
#include <pure_pursuit.h>
```

Public Member Functions

- [Path](#) (std::vector< [point_t](#) > points, double radius)
- std::vector< [point_t](#) > [get_points](#) ()
- double [get_radius](#) ()
- bool [is_valid](#) ()

4.50.1 Detailed Description

Wrapper for a vector of points, checking if any of the points are too close for pure pursuit

4.50.2 Constructor & Destructor Documentation**Path()**

```
PurePursuit::Path::Path (
    std::vector< point\_t > points,
    double radius)
```

Create a [Path](#)

Parameters

<i>points</i>	the points that make up the path
<i>radius</i>	the lookahead radius for pure pursuit

4.50.3 Member Function Documentation

get_points()

```
std::vector< point_t > PurePursuit::Path::get_points ()
```

Get the points associated with this [Path](#)

get_radius()

```
double PurePursuit::Path::get_radius ()
```

Get the radius associated with this [Path](#)

is_valid()

```
bool PurePursuit::Path::is_valid ()
```

Get whether this path will behave as expected


The documentation for this class was generated from the following files:

- pure_pursuit.h
- pure_pursuit.cpp

4.51 PID Class Reference

```
#include <pid.h>
```

Inheritance diagram for PID:

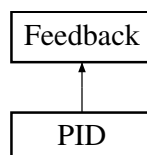

Classes

- struct [pid_config_t](#)

Public Types

- enum [ERROR_TYPE](#)

Public Member Functions

- [PID](#) ([pid_config_t](#) &[config](#))
- void [init](#) (double start_pt, double set_pt) override
- double [update](#) (double sensor_val) override
- double [update](#) (double sensor_val, double v_setpt)
- double [get_sensor_val](#) () const
gets the sensor value that we were last updated with
- double [get](#) () override
- void [set_limits](#) (double lower, double upper) override
- bool [is_on_target](#) () override
- void [reset](#) ()
- double [get_error](#) ()
- double [get_target](#) () const
- void [set_target](#) (double target)

Public Member Functions inherited from [Feedback](#)

Public Attributes

- [pid_config_t](#) & [config](#)

4.51.1 Detailed Description

[PID](#) Class

Defines a standard feedback loop using the constants kP, kI, kD, deadband, and on_target_time. The formula is:

$$\text{out} = kP * \text{error} + kI * \text{integral}(\text{d Error}) + kD * (\text{dError}/\text{dt})$$

The [PID](#) object will determine it is "on target" when the error is within the deadband, for a duration of on_target_time

Author

Ryan McGee

Date

4/3/2020

4.51.2 Member Enumeration Documentation

[ERROR_TYPE](#)

enum [PID::ERROR_TYPE](#)

An enum to distinguish between a linear and angular calculation of [PID](#) error.

4.51.3 Constructor & Destructor Documentation

[PID](#)()

```
PID::PID (
    pid_config_t & config)
```

Create the [PID](#) object

Parameters

<code>config</code>	the configuration data for this controller
---------------------	--

Create the [PID](#) object

4.51.4 Member Function Documentation

get()

```
double PID::get () [override], [virtual]
```

Gets the current [PID](#) out value, from when [update\(\)](#) was last run

Returns

the Out value of the controller (voltage, RPM, whatever the [PID](#) controller is controlling)

Gets the current [PID](#) out value, from when [update\(\)](#) was last run

Implements [Feedback](#).

get_error()

```
double PID::get_error ()
```

Get the delta between the current sensor data and the target

Returns

the error calculated. how it is calculated depends on `error_method` specified in [pid_config_t](#)

Get the delta between the current sensor data and the target

get_sensor_val()

```
double PID::get_sensor_val () const
```

gets the sensor value that we were last updated with

Returns

`sensor_val`

get_target()

```
double PID::get_target () const
```

Get the [PID](#)'s target

Returns

the target the [PID](#) controller is trying to achieve

init()

```
void PID::init (  
    double start_pt,  
    double set_pt) [override], [virtual]
```

Inherited from [Feedback](#) for interoperability. Update the setpoint and reset integral accumulation

start_pt can be safely ignored in this feedback controller

Parameters

<i>start_pt</i>	completely ignored for PID . necessary to satisfy Feedback base
<i>set_pt</i>	sets the target of the PID controller
<i>start_vel</i>	completely ignored for PID . necessary to satisfy Feedback base
<i>end_vel</i>	sets the target end velocity of the PID controller

Implements [Feedback](#).

is_on_target()

```
bool PID::is_on_target () [override], [virtual]
```

Checks if the [PID](#) controller is on target.

Returns

true if the loop is within [deadband] for [on_target_time] seconds

Returns true if the loop is within [deadband] for [on_target_time] seconds

Implements [Feedback](#).

reset()

```
void PID::reset ()
```

Reset the [PID](#) loop by resetting time since 0 and accumulated error.

set_limits()

```
void PID::set_limits (
    double lower,
    double upper) [override], [virtual]
```

Set the limits on the [PID](#) out. The [PID](#) out will "clip" itself to be between the limits.

Parameters

<i>lower</i>	the lower limit. the PID controller will never command the output go below <i>lower</i>
<i>upper</i>	the upper limit. the PID controller will never command the output go higher than <i>upper</i>

Set the limits on the [PID](#) out. The [PID](#) out will "clip" itself to be between the limits.

Implements [Feedback](#).

set_target()

```
void PID::set_target (
    double target)
```

Set the target for the [PID](#) loop, where the robot is trying to end up

Parameters

<code>target</code>	the sensor reading we would like to achieve
---------------------	---

Set the target for the [PID](#) loop, where the robot is trying to end up

update() [1/2]

```
double PID::update (
    double sensor_val) [override], [virtual]
```

Update the [PID](#) loop by taking the time difference from last update, and running the [PID](#) formula with the new sensor data

Parameters

<code>sensor_val</code>	the distance, angle, encoder position or whatever it is we are measuring
-------------------------	--

Returns

the new output. What would be returned by [PID::get\(\)](#)

Implements [Feedback](#).

update() [2/2]

```
double PID::update (
    double sensor_val,
    double v_setpt)
```

Update the [PID](#) loop by taking the time difference from last update, and running the [PID](#) formula with the new sensor data

Parameters

<code>sensor_val</code>	the distance, angle, encoder position or whatever it is we are measuring
<code>v_setpt</code>	Expected velocity setpoint, to subtract from the D term (for velocity control)

Returns

the new output. What would be returned by [PID::get\(\)](#)

4.51.5 Member Data Documentation**config**

`pid_config_t& PID::config`

configuration struct for this controller. see [pid_config_t](#) for information about what this contains

The documentation for this class was generated from the following files:

- `pid.h`
- `pid.cpp`

4.52 PID::pid_config_t Struct Reference

```
#include <pid.h>
```

Public Attributes

- double **p**
*proportional coefficient $p * error()$*
- double **i**
*integral coefficient $i * integral(error)$*
- double **d**
*derivitave coefficient $d * derivative(error)$*
- double **deadband**
at what threshold are we close enough to be finished
- double [on_target_time](#)
- [ERROR_TYPE](#) [error_method](#)

4.52.1 Detailed Description

[pid_config_t](#) holds the configuration parameters for a pid controller In addition to the constant of proportional, integral and derivative, these parameters include:

- deadband -
- on_target_time - for how long do we have to be at the target to stop As well, [pid_config_t](#) holds an error type which determines whether errors should be calculated as if the sensor position is a measure of distance or an angle

4.52.2 Member Data Documentation

error_method

[ERROR_TYPE](#) PID::pid_config_t::error_method

Linear or angular. wheter to do error as a simple subtraction or to wrap

on_target_time

double PID::pid_config_t::on_target_time

the time in seconds that we have to be on target for to say we are officially at the target

The documentation for this struct was generated from the following file:


- [pid.h](#)

4.53 screen::PIDPage Class Reference

[PIDPage](#) provides a way to tune a pid controller on the screen.

```
#include <screen.h>
```

Inheritance diagram for screen::PIDPage:

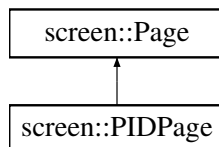

Public Member Functions

- [PIDPage](#) ([PID](#) &pid, std::string name, std::function< void(void)> onchange=[]() {})
Create a [PIDPage](#).
- void [update](#) (bool was_pressed, int x, int y) override
- void [draw](#) (vex::brain::lcd &, bool first_draw, unsigned int frame_number) override

Public Member Functions inherited from [screen::Page](#)

4.53.1 Detailed Description

[PIDPage](#) provides a way to tune a pid controller on the screen.

4.53.2 Constructor & Destructor Documentation

PIDPage()

```
screen::PIDPage::PIDPage (
    PID & pid,
    std::string name,
    std::function< void(void)> onchange = []() {})
```

Create a [PIDPage](#).

Parameters

<i>pid</i>	the pid controller we're changing
<i>name</i>	a name to recognize this pid controller if we've got multiple pid screens
<i>onchange</i>	a function that is called when a tuning parameter is changed. If you need to update stuff on that change register a handler here

4.53.3 Member Function Documentation

`draw()`

```
void screen::PIDPage::draw (
    vex::brain::lcd & scr,
    bool first_draw,
    unsigned int frame_number) [override], [virtual]
```

See also

[Page::draw](#)

Reimplemented from [screen::Page](#).

`update()`

```
void screen::PIDPage::update (
    bool was_pressed,
    int x,
    int y) [override], [virtual]
```

See also

[Page::update](#)

Reimplemented from [screen::Page](#).

The documentation for this class was generated from the following files:

- `screen.h`
- `screen.cpp`

4.54 `point_t` Struct Reference

```
#include <geometry.h>
```

Public Member Functions

- double `dist` (const [point_t](#) other) const
- [point_t](#) `operator+` (const [point_t](#) &other) const
- [point_t](#) `operator-` (const [point_t](#) &other) const

Public Attributes

- double `x`
the x position in space
- double `y`
the y position in space

4.54.1 Detailed Description

Data structure representing an X,Y coordinate

4.54.2 Member Function Documentation

dist()

```
double point_t::dist (
    const point_t other) const [inline]
```

dist calculates the euclidian distance between this point and another point using the pythagorean theorem

Parameters

<i>other</i>	the point to measure the distance from
--------------	--

Returns

the euclidian distance between this and other

operator+()

```
point_t point_t::operator+ (
    const point_t & other) const [inline]
```

[Vector2D](#) addition operation on points

Parameters

<i>other</i>	the point to add on to this
--------------	-----------------------------

Returns

this + other (this.x + other.x, this.y + other.y)

operator-()

```
point_t point_t::operator- (
    const point_t & other) const [inline]
```

[Vector2D](#) subtraction operation on points

Parameters

<i>other</i>	the point_t to subtract from this
--------------	---

Returns

this - other (this.x - other.x, this.y - other.y)

The documentation for this struct was generated from the following file:

- geometry.h

4.55 `pose_t` Struct Reference

```
#include <geometry.h>
```

Public Attributes

- double **x**
x position in the world
- double **y**
y position in the world
- double **rot**
rotation in the world

4.55.1 Detailed Description

Describes a single position and rotation

The documentation for this struct was generated from the following file:

- `geometry.h`

4.56 `PurePursuitCommand` Class Reference

```
#include <drive_commands.h>
```

Public Member Functions

- `PurePursuitCommand` (`TankDrive` &`drive_sys`, `Feedback` &`feedback`, `PurePursuit::Path` `path`, `directionType` `dir`, `double` `max_speed`=1, `double` `end_speed`=0)
- `bool` `run` () override
- `void` `on_timeout` () override

4.56.1 Detailed Description

Autocommand wrapper class for pure pursuit function in the `TankDrive` class

4.56.2 Constructor & Destructor Documentation

`PurePursuitCommand()`

```
PurePursuitCommand::PurePursuitCommand (  
    TankDrive & drive_sys,  
    Feedback & feedback,  
    PurePursuit::Path path,  
    directionType dir,  
    double max_speed = 1,  
    double end_speed = 0)
```

Construct a Pure Pursuit AutoCommand

Parameters

<i>path</i>	The list of coordinates to follow, in order
<i>dir</i>	Run the bot forwards or backwards
<i>feedback</i>	The feedback controller determining speed
<i>max_speed</i>	Limit the speed of the robot (for pid / pidff feedbacks)

4.56.3 Member Function Documentation

on_timeout()

```
void PurePursuitCommand::on_timeout () [override]
```

Reset the drive system when it times out

run()

```
bool PurePursuitCommand::run () [override]
```

Direct call to [TankDrive::pure_pursuit](#)

The documentation for this class was generated from the following files:

- drive_commands.h
- drive_commands.cpp

4.57 robot_specs_t Struct Reference

```
#include <robot_specs.h>
```

Public Attributes

- double **robot_radius**
if you were to draw a circle with this radius, the robot would be entirely contained within it
- double **odom_wheel_diam**
the diameter of the wheels used for
- double **odom_gear_ratio**
the ratio of the odometry wheel to the encoder reading odometry data
- double **dist_between_wheels**
the distance between centers of the central drive wheels
- double [drive_correction_cutoff](#)
- [Feedback](#) * **drive_feedback**
the default feedback for autonomous driving
- [Feedback](#) * **turn_feedback**
the default feedback for autonomous turning
- [PID::pid_config_t](#) **correction_pid**
the pid controller to keep the robot driving in as straight a line as possible

4.57.1 Detailed Description

Main robot characterization struct. This will be passed to all the major subsystems that require info about the robot. All distance measurements are in inches.

4.57.2 Member Data Documentation

drive_correction_cutoff

```
double robot_specs_t::drive_correction_cutoff
```

the distance at which to stop trying to turn towards the target. If we are less than this value, we can continue driving forward to minimize our distance but will not try to spin around to point directly at the target

The documentation for this struct was generated from the following file:

- robot_specs.h

4.58 screen::ScreenData Struct Reference

The [ScreenData](#) class holds the data that will be passed to the screen thread you probably shouldnt have to use it.

4.58.1 Detailed Description

The [ScreenData](#) class holds the data that will be passed to the screen thread you probably shouldnt have to use it.

The documentation for this struct was generated from the following file:

- screen.cpp

4.59 Serializer Class Reference

Serializes Arbitrary data to a file on the SD Card.

```
#include <serializer.h>
```

Public Member Functions

- `~Serializer ()`
Save and close upon destruction (bc of vex, this doesnt always get called when the program ends. To be sure, call `save_to_disk`)
- `Serializer (const std::string &filename, bool flush_always=true)`
create a [Serializer](#)
- `void save_to_disk () const`
saves current [Serializer](#) state to disk
- `void set_int (const std::string &name, int i)`
Setters - not saved until `save_to_disk` is called.
- `void set_bool (const std::string &name, bool b)`
sets a bool by the name of name to b. If `flush_always == true`, this will save to the sd card
- `void set_double (const std::string &name, double d)`
sets a double by the name of name to d. If `flush_always == true`, this will save to the sd card
- `void set_string (const std::string &name, std::string str)`
sets a string by the name of name to s. If `flush_always == true`, this will save to the sd card
- `int int_or (const std::string &name, int otherwise)`
gets a value stored in the serializer. If not found, sets the value to otherwise
- `bool bool_or (const std::string &name, bool otherwise)`
gets a value stored in the serializer. If not, sets the value to otherwise
- `double double_or (const std::string &name, double otherwise)`
gets a value stored in the serializer. If not, sets the value to otherwise
- `std::string string_or (const std::string &name, std::string otherwise)`
gets a value stored in the serializer. If not, sets the value to otherwise

4.59.1 Detailed Description

Serializes Arbitrary data to a file on the SD Card.

4.59.2 Constructor & Destructor Documentation

Serializer()

```
Serializer::Serializer (
    const std::string & filename,
    bool flush_always = true) [inline], [explicit]
```

create a [Serializer](#)

Parameters

<i>filename</i>	the file to read from. If filename does not exist we will create that file
<i>flush_always</i>	If true, after every write flush to a file. If false, you are responsible for calling <code>save_to_disk</code>

4.59.3 Member Function Documentation

bool_or()

```
bool Serializer::bool_or (
    const std::string & name,
    bool otherwise)
```

gets a value stored in the serializer. If not, sets the value to otherwise

Parameters

<i>name</i>	name of value
<i>otherwise</i>	value if the name is not specified

Returns

the value if found or otherwise

double_or()

```
double Serializer::double_or (  
    const std::string & name,  
    double otherwise)
```

gets a value stored in the serializer. If not, sets the value to otherwise

Parameters

<i>name</i>	name of value
<i>otherwise</i>	value if the name is not specified

Returns

the value if found or otherwise

int_or()

```
int Serializer::int_or (  
    const std::string & name,  
    int otherwise)
```

gets a value stored in the serializer. If not found, sets the value to otherwise

Getters Return value if it exists in the serializer

Parameters

<i>name</i>	name of value
<i>otherwise</i>	value if the name is not specified

Returns

the value if found or otherwise

save_to_disk()

```
void Serializer::save_to_disk () const
```

saves current [Serializer](#) state to disk

forms data bytes then saves to filename this was opened with

set_bool()

```
void Serializer::set_bool (
    const std::string & name,
    bool b)
```

sets a bool by the name of name to b. If flush_always == true, this will save to the sd card

Parameters

<i>name</i>	name of bool
<i>b</i>	value of bool

set_double()

```
void Serializer::set_double (
    const std::string & name,
    double d)
```

sets a double by the name of name to d. If flush_always == true, this will save to the sd card

Parameters

<i>name</i>	name of double
<i>d</i>	value of double

set_int()

```
void Serializer::set_int (
    const std::string & name,
    int i)
```

Setters - not saved until save_to_disk is called.

sets an integer by the name of name to i. If flush_always == true, this will save to the sd card

Parameters

<i>name</i>	name of integer
<i>i</i>	value of integer

set_string()

```
void Serializer::set_string (
    const std::string & name,
    std::string str)
```

sets a string by the name of name to s. If flush_always == true, this will save to the sd card

Parameters

<i>name</i>	name of string
<i>i</i>	value of string

string_or()

```
std::string Serializer::string_or (
    const std::string & name,
    std::string otherwise)
```

gets a value stored in the serializer. If not, sets the value to otherwise

Parameters

<i>name</i>	name of value
<i>otherwise</i>	value if the name is not specified

Returns

the value if found or otherwise

The documentation for this class was generated from the following files:

- serializer.h
- serializer.cpp

4.60 screen::SliderWidget Class Reference

Widget that updates a double value. Updates by reference so watch out for race conditions cuz the screen stuff lives on another thread.

```
#include <screen.h>
```

Public Member Functions

- [SliderWidget](#) (double &val, double low, double high, Rect rect, std::string name)
Creates a slider widget.
- bool [update](#) (bool was_pressed, int x, int y)
responds to user input
- void [draw](#) (vex::brain::lcd &, bool first_draw, unsigned int frame_number)
Page::draws the slide to the screen

4.60.1 Detailed Description

Widget that updates a double value. Updates by reference so watch out for race conditions cuz the screen stuff lives on another thread.

4.60.2 Constructor & Destructor Documentation

SliderWidget()

```
screen::SliderWidget::SliderWidget (
    double & val,
    double low,
    double high,
    Rect rect,
    std::string name) [inline]
```

Creates a slider widget.

Parameters

<i>val</i>	reference to the value to modify
<i>low</i>	minimum value to go to
<i>high</i>	maximum value to go to
<i>rect</i>	rect to draw it
<i>name</i>	name of the value

4.60.3 Member Function Documentation

update()

```
bool screen::SliderWidget::update (
    bool was_pressed,
    int x,
    int y)
```

responds to user input

Parameters

<i>was_pressed</i>	if the screen is pressed
<i>x</i>	x position if the screen was pressed
<i>y</i>	y position if the screen was pressed

Returns

true if the value updated

The documentation for this class was generated from the following files:

- screen.h
- screen.cpp

4.61 SpinRPMCommand Class Reference

```
#include <flywheel_commands.h>
```

Public Member Functions

- [SpinRPMCommand](#) ([Flywheel](#) &flywheel, int rpm)
- bool [run](#) () override

4.61.1 Detailed Description

File: [flywheel_commands.h](#) Desc: [insert meaningful desc] AutoCommand wrapper class for the spin_rpm function in the [Flywheel](#) class

4.61.2 Constructor & Destructor Documentation

SpinRPMCommand()

```
SpinRPMCommand::SpinRPMCommand (
    Flywheel & flywheel,
    int rpm)
```

Construct a SpinRPM Command

Parameters

<i>flywheel</i>	the flywheel sys to command
<i>rpm</i>	the rpm that we should spin at

File: [flywheel_commands.cpp](#) Desc: [insert meaningful desc]

4.61.3 Member Function Documentation

run()

```
bool SpinRPMCommand::run () [override]
```

Run spin_manual Overrides run from AutoCommand

Returns

true when execution is complete, false otherwise

The documentation for this class was generated from the following files:

- [flywheel_commands.h](#)
- [flywheel_commands.cpp](#)

4.62 PurePursuit::spline Struct Reference

```
#include <pure_pursuit.h>
```

4.62.1 Detailed Description

Represents a piece of a cubic spline with $s(x) = a(x-x_i)^3 + b(x-x_i)^2 + c(x-x_i) + d$. The `x_start` and `x_end` shows where the equation is valid.

The documentation for this struct was generated from the following file:

- `pure_pursuit.h`

4.63 StateMachine< System, IDType, Message, delay_ms, do_log >::State Struct Reference

```
#include <state_machine.h>
```

4.63.1 Detailed Description

```
template<typename System, typename IDType, typename Message, int32_t delay_ms, bool do_log = false>
struct StateMachine< System, IDType, Message, delay_ms, do_log >::State
```

Abstract class that all states for this machine must inherit from. States MUST override `respond()` and `id()` in order to function correctly (the compiler won't have it any other way).

The documentation for this struct was generated from the following file:

- `state_machine.h`

4.64 StateMachine< System, IDType, Message, delay_ms, do_log > Class Template Reference

[State Machine](#) :))))) A fun fun way of controlling stateful subsystems - used in the 2023-2024 Over Under game for our overly complex intake-cata subsystem (see there for an example). The statemachine runs in a background thread and a user thread can interact with it through `current_state` and `send_message`.

```
#include <state_machine.h>
```

Classes

- class [MaybeMessage](#)
MaybeMessage a message of Message type or nothing `MaybeMessage m = {};` // empty `MaybeMessage m = Message::EnumField1.`
- struct [State](#)

Public Member Functions

- [StateMachine](#) ([State](#) *initial)
Construct a state machine and immediately start running it.
- IDType [current_state](#) () const
retrieve the current state of the state machine. This is safe to call from external threads
- void [send_message](#) (Message msg)
send a message to the state machine from outside

4.64.1 Detailed Description

template<typename System, typename IDType, typename Message, int32_t delay_ms, bool do_log = false>
class StateMachine< System, IDType, Message, delay_ms, do_log >

[State Machine](#) :)))))) A fun fun way of controlling stateful subsystems - used in the 2023-2024 Over Under game for our overly complex intake-cata subsystem (see there for an example) The statemachine runs in a background thread and a user thread can interact with it through `current_state` and `send_message`.

Designwise: the System class should hold onto any motors, feedback controllers, etc that are persistent in the system States themselves should hold any data that *only* that state needs. For example if a state should be exited after a certain amount of time, it should hold a timer rather than the System holding that timer. (see Junder from 2024 for an example of this design)

Template Parameters

<i>System</i>	The system that this is the base class of <code>class Thing : public StateMachine<Thing> @tparam IDType The ID enum that recognizes states. Hint hint, use an enum class`</code>
<i>Message</i>	the message enum that a state or an outside can send and that states respond to
<i>delay_ms</i>	the delay to wait between each state processing to allow other threads to work
<i>do_log</i>	true if you want print statements describing incoming messages and current states. If true, it is expected that IDType and Message have a function called <code>to_string</code> that takes them as its only parameter and returns a <code>std::string</code>

4.64.2 Constructor & Destructor Documentation

StateMachine()

```
template<typename System , typename IDType , typename Message , int32_t delay_ms, bool do_log
= false>
StateMachine< System, IDType, Message, delay_ms, do_log >::StateMachine (
    State * initial) [inline]
```

Construct a state machine and immediatly start running it.

Parameters

<i>initial</i>	the state that the machine will begin in
----------------	--

4.64.3 Member Function Documentation

current_state()

```
template<typename System , typename IDType , typename Message , int32_t delay_ms, bool do_log
= false>
IDType StateMachine< System, IDType, Message, delay_ms, do_log >::current_state () const
[inline]
```

retrieve the current state of the state machine. This is safe to call from external threads

Returns

the current state

send_message()

```
template<typename System , typename IDType , typename Message , int32_t delay_ms, bool do_log
= false>
void StateMachine< System, IDType, Message, delay_ms, do_log >::send_message (
    Message msg) [inline]
```

send a message to the state machine from outside

Parameters

<i>msg</i>	the message to send This is safe to call from external threads
------------	--

The documentation for this class was generated from the following file:


- state_machine.h

4.65 screen::StatsPage Class Reference

Draws motor stats and battery stats to the screen.

```
#include <screen.h>
```

Inheritance diagram for screen::StatsPage:

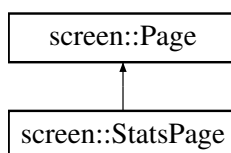**Public Member Functions**

- [StatsPage](#) (std::map< std::string, vex::motor & > motors)
Creates a stats page.
- void [update](#) (bool was_pressed, int x, int y) override
- void [draw](#) (vex::brain::lcd &, bool first_draw, unsigned int frame_number) override

Public Member Functions inherited from [screen::Page](#)**4.65.1 Detailed Description**

Draws motor stats and battery stats to the screen.

4.65.2 Constructor & Destructor Documentation**StatsPage()**

```
screen::StatsPage::StatsPage (
    std::map< std::string, vex::motor & > motors)
```

Creates a stats page.

Parameters

<i>motors</i>	a map of string to motor that we want to draw on this page
---------------	--

4.65.3 Member Function Documentation

draw()

```
void screen::StatsPage::draw (  
    vex::brain::lcd & scr,  
    bool first_draw,  
    unsigned int frame_number) [override], [virtual]
```

See also

[Page::draw](#)Reimplemented from [screen::Page](#).**update()**

```
void screen::StatsPage::update (  
    bool was_pressed,  
    int x,  
    int y) [override], [virtual]
```

See also

[Page::update](#)Reimplemented from [screen::Page](#).

The documentation for this class was generated from the following files:


- screen.h
- screen.cpp

4.66 TakeBackHalf Class Reference

A velocity controller.

```
#include <take_back_half.h>
```

Inheritance diagram for TakeBackHalf:

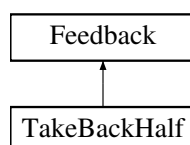

Public Member Functions

- void [init](#) (double start_pt, double set_pt)
- double [update](#) (double val) override
- double [get](#) () override
- void [set_limits](#) (double lower, double upper) override
- bool [is_on_target](#) () override

Public Member Functions inherited from [Feedback](#)

Public Attributes

- double **TBH_gain**
tuned parameter

4.66.1 Detailed Description

A velocity controller.

Warning

If you try to use this as a position controller, it will fail.

4.66.2 Member Function Documentation

get()

```
double TakeBackHalf::get () [override], [virtual]
```

Returns

the last saved result from the feedback controller

Implements [Feedback](#).

init()

```
void TakeBackHalf::init (  
    double start_pt,  
    double set_pt) [virtual]
```

Initialize the feedback controller for a movement

Parameters

<i>start_pt</i>	the current sensor value
<i>set_pt</i>	where the sensor value should be
<i>start_vel</i>	Movement starting velocity (IGNORED)
<i>end_vel</i>	Movement ending velocity (IGNORED)

Implements [Feedback](#).

is_on_target()

```
bool TakeBackHalf::is_on_target () [override], [virtual]
```

Returns

true if the feedback controller has reached it's setpoint

Implements [Feedback](#).

set_limits()

```
void TakeBackHalf::set_limits (
    double lower,
    double upper) [override], [virtual]
```

Clamp the upper and lower limits of the output. If both are 0, no limits should be applied.

Parameters

<i>lower</i>	Upper limit
<i>upper</i>	Lower limit

Implements [Feedback](#).

update()

```
double TakeBackHalf::update (
    double val) [override], [virtual]
```

Iterate the feedback loop once with an updated sensor value

Parameters

<i>val</i>	value from the sensor
------------	-----------------------

Returns

feedback loop result

Implements [Feedback](#).

The documentation for this class was generated from the following files:

- take_back_half.h
- take_back_half.cpp

4.67 TankDrive Class Reference

```
#include <tank_drive.h>
```

Public Types

- enum class [BrakeType](#) { [None](#) , [ZeroVelocity](#) , [Smart](#) }

Public Member Functions

- [TankDrive](#) (motor_group &left_motors, motor_group &right_motors, [robot_specs_t](#) &config, [OdometryBase](#) *odom=NULL)
- void [stop](#) ()
- void [drive_tank](#) (double left, double right, int power=1, [BrakeType](#) bt=[BrakeType::None](#))
- void [drive_tank_raw](#) (double left, double right)
- void [drive_arcade](#) (double forward_back, double left_right, int power=1, [BrakeType](#) bt=[BrakeType::None](#))
- bool [drive_forward](#) (double inches, directionType dir, [Feedback](#) &feedback, double max_speed=1, double end_speed=0)
- bool [drive_forward](#) (double inches, directionType dir, double max_speed=1, double end_speed=0)
- bool [turn_degrees](#) (double degrees, [Feedback](#) &feedback, double max_speed=1, double end_speed=0)
- bool [turn_degrees](#) (double degrees, double max_speed=1, double end_speed=0)
- bool [drive_to_point](#) (double x, double y, vex::directionType dir, [Feedback](#) &feedback, double max_speed=1, double end_speed=0)
- bool [drive_to_point](#) (double x, double y, vex::directionType dir, double max_speed=1, double end_speed=0)
- bool [turn_to_heading](#) (double heading_deg, [Feedback](#) &feedback, double max_speed=1, double end_speed=0)
- bool [turn_to_heading](#) (double heading_deg, double max_speed=1, double end_speed=0)
- void [reset_auto](#) ()
- bool [pure_pursuit](#) ([PurePursuit::Path](#) path, directionType dir, [Feedback](#) &feedback, double max_speed=1, double end_speed=0)
- bool [pure_pursuit](#) ([PurePursuit::Path](#) path, directionType dir, double max_speed=1, double end_speed=0)

Static Public Member Functions

- static double [modify_inputs](#) (double input, int power=2)

4.67.1 Detailed Description

[TankDrive](#) is a class to run a tank drive system. A tank drive system, sometimes called differential drive, has a motor (or group of synchronized motors) on the left and right side

4.67.2 Member Enumeration Documentation

BrakeType

```
enum class TankDrive::BrakeType [strong]
```

Enumerator

None	just send 0 volts to the motors
ZeroVelocity	try to bring the robot to rest. But don't try to hold position
Smart	bring the robot to rest and once it's stopped, try to hold that position

4.67.3 Constructor & Destructor Documentation

TankDrive()

```
TankDrive::TankDrive (
    motor_group & left_motors,
    motor_group & right_motors,
    robot_specs_t & config,
    OdometryBase * odom = NULL)
```

Create the [TankDrive](#) object

Parameters

<i>left_motors</i>	left side drive motors
<i>right_motors</i>	right side drive motors
<i>config</i>	the configuration specification defining physical dimensions about the robot. See robot_specs_t for more info
<i>odom</i>	an odometry system to track position and rotation. this is necessary to execute autonomous paths

4.67.4 Member Function Documentation

drive_arcade()

```
void TankDrive::drive_arcade (
    double forward_back,
    double left_right,
    int power = 1,
    BrakeType bt = BrakeType::None)
```

Drive the robot using arcade style controls. *forward_back* controls the linear motion, *left_right* controls the turning.

forward_back and *left_right* are in "percent": -1.0 -> 1.0

Parameters

<i>forward_back</i>	the percent to move forward or backward
<i>left_right</i>	the percent to turn left or right
<i>power</i>	modifies the input velocities $\text{left}^{\text{power}}$, $\text{right}^{\text{power}}$
<i>bt</i>	breaktype. What to do if the driver lets go of the sticks

Drive the robot using arcade style controls. *forward_back* controls the linear motion, *left_right* controls the turning.

left_motors and *right_motors* are in "percent": -1.0 -> 1.0

drive_forward() [1/2]

```
bool TankDrive::drive_forward (
    double inches,
    directionType dir,
    double max_speed = 1,
    double end_speed = 0)
```

Autonomously drive the robot forward a certain distance

Parameters

<i>inches</i>	degrees by which we will turn relative to the robot (+) turns ccw, (-) turns cw
<i>dir</i>	the direction we want to travel forward and backward
<i>max_speed</i>	the maximum percentage of robot speed at which the robot will travel. 1 = full power
<i>end_speed</i>	the movement profile will attempt to reach this velocity by its completion

Autonomously drive the robot forward a certain distance

Parameters

<i>inches</i>	degrees by which we will turn relative to the robot (+) turns ccw, (-) turns cw
<i>dir</i>	the direction we want to travel forward and backward
<i>max_speed</i>	the maximum percentage of robot speed at which the robot will travel. 1 = full power
<i>end_speed</i>	the movement profile will attempt to reach this velocity by its completion

Returns

true if we have finished driving to our point

drive_forward() [2/2]

```
bool TankDrive::drive_forward (
    double inches,
    directionType dir,
    Feedback & feedback,
    double max_speed = 1,
    double end_speed = 0)
```

Use odometry to drive forward a certain distance using a custom feedback controller

Returns whether or not the robot has reached it's destination.

Parameters

<i>inches</i>	the distance to drive forward
<i>dir</i>	the direction we want to travel forward and backward
<i>feedback</i>	the custom feedback controller we will use to travel. controls the rate at which we accelerate and drive.
<i>max_speed</i>	the maximum percentage of robot speed at which the robot will travel. 1 = full power
<i>end_speed</i>	the movement profile will attempt to reach this velocity by its completion

Returns

true when we have reached our target distance

Use odometry to drive forward a certain distance using a custom feedback controller

Returns whether or not the robot has reached it's destination.

Parameters

<i>inches</i>	the distance to drive forward
<i>dir</i>	the direction we want to travel forward and backward
<i>feedback</i>	the custom feedback controller we will use to travel. controls the rate at which we accelerate and drive.
<i>max_speed</i>	the maximum percentage of robot speed at which the robot will travel. 1 = full power
<i>end_speed</i>	the movement profile will attempt to reach this velocity by its completion

drive_tank()

```
void TankDrive::drive_tank (
    double left,
    double right,
    int power = 1,
    BrakeType bt = BrakeType::None)
```

Drive the robot using differential style controls. left_motors controls the left motors, right_motors controls the right motors.

left_motors and right_motors are in "percent": -1.0 -> 1.0

Parameters

<i>left</i>	the percent to run the left motors
<i>right</i>	the percent to run the right motors
<i>power</i>	modifies the input velocities $\text{left}^{\text{power}}$, $\text{right}^{\text{power}}$
<i>bt</i>	breaktype. What to do if the driver lets go of the sticks

drive_tank_raw()

```
void TankDrive::drive_tank_raw (
    double left,
    double right)
```

Drive the robot raw-ly

Parameters

<i>left</i>	the percent to run the left motors (-1, 1)
<i>right</i>	the percent to run the right motors (-1, 1)

drive_to_point() [1/2]

```
bool TankDrive::drive_to_point (
    double x,
    double y,
    vex::directionType dir,
    double max_speed = 1,
    double end_speed = 0)
```

Use odometry to automatically drive the robot to a point on the field. X and Y is the final point we want the robot. Here we use the default feedback controller from the drive_sys

Returns whether or not the robot has reached it's destination.

Parameters

<i>x</i>	the x position of the target
<i>y</i>	the y position of the target
<i>dir</i>	the direction we want to travel forward and backward
<i>max_speed</i>	the maximum percentage of robot speed at which the robot will travel. 1 = full power
<i>end_speed</i>	the movement profile will attempt to reach this velocity by its completion

Use odometry to automatically drive the robot to a point on the field. X and Y is the final point we want the robot. Here we use the default feedback controller from the drive_sys

Returns whether or not the robot has reached it's destination.

Parameters

<i>x</i>	the x position of the target
<i>y</i>	the y position of the target
<i>dir</i>	the direction we want to travel forward and backward
<i>max_speed</i>	the maximum percentage of robot speed at which the robot will travel. 1 = full power
<i>end_speed</i>	the movement profile will attempt to reach this velocity by its completion

Returns

true if we have reached our target point

drive_to_point() [2/2]

```
bool TankDrive::drive_to_point (
    double x,
    double y,
    vex::directionType dir,
    Feedback & feedback,
    double max_speed = 1,
    double end_speed = 0)
```

Use odometry to automatically drive the robot to a point on the field. X and Y is the final point we want the robot.

Returns whether or not the robot has reached it's destination.

Parameters

<i>x</i>	the x position of the target
<i>y</i>	the y position of the target
<i>dir</i>	the direction we want to travel forward and backward
<i>feedback</i>	the feedback controller we will use to travel. controls the rate at which we accelerate and drive.
<i>max_speed</i>	the maximum percentage of robot speed at which the robot will travel. 1 = full power
<i>end_speed</i>	the movement profile will attempt to reach this velocity by its completion

Use odometry to automatically drive the robot to a point on the field. X and Y is the final point we want the robot.

Returns whether or not the robot has reached it's destination.

Parameters

<i>x</i>	the x position of the target
<i>y</i>	the y position of the target
<i>dir</i>	the direction we want to travel forward and backward
<i>feedback</i>	the feedback controller we will use to travel. controls the rate at which we accelerate and drive.
<i>max_speed</i>	the maximum percentage of robot speed at which the robot will travel. 1 = full power
<i>end_speed</i>	the movement profile will attempt to reach this velocity by its completion

Returns

true if we have reached our target point

modify_inputs()

```
double TankDrive::modify_inputs (
    double input,
    int power = 2) [static]
```

Create a curve for the inputs, so that drivers have more control at lower speeds. Curves are exponential, with the default being squaring the inputs.

Parameters

<i>input</i>	the input before modification
<i>power</i>	the power to raise input to

Returns

$\text{input}^{\text{power}}$ (accounts for negative inputs and odd numbered powers)

Modify the inputs from the controller by squaring / cubing, etc Allows for better control of the robot at slower speeds

Parameters

<i>input</i>	the input signal -1 -> 1
<i>power</i>	the power to raise the signal to

Returns

$\text{input}^{\text{power}}$ accounting for any sign issues that would arise with this naive solution

pure_pursuit() [1/2]

```
bool TankDrive::pure_pursuit (
    PurePursuit::Path path,
    directionType dir,
    double max_speed = 1,
    double end_speed = 0)
```

Drive the robot autonomously using a pure-pursuit algorithm - Input path with a set of waypoints - the robot will attempt to follow the points while cutting corners (radius) to save time (compared to stop / turn / start)

Use the default drive feedback

Parameters

<i>path</i>	The list of coordinates to follow, in order
<i>dir</i>	Run the bot forwards or backwards
<i>max_speed</i>	Limit the speed of the robot (for pid / pidff feedbacks)
<i>end_speed</i>	the movement profile will attempt to reach this velocity by its completion

Returns

True when the path is complete

Drive the robot autonomously using a pure-pursuit algorithm - Input path with a set of waypoints - the robot will attempt to follow the points while cutting corners (radius) to save time (compared to stop / turn / start)

Use the default drive feedback

Parameters

<i>path</i>	The list of coordinates to follow, in order
<i>dir</i>	Run the bot forwards or backwards
<i>max_speed</i>	Limit the speed of the robot (for pid / pidff feedbacks)

Returns

True when the path is complete

pure_pursuit() [2/2]

```
bool TankDrive::pure_pursuit (
    PurePursuit::Path path,
    directionType dir,
    Feedback & feedback,
    double max_speed = 1,
    double end_speed = 0)
```

Drive the robot autonomously using a pure-pursuit algorithm - Input path with a set of waypoints - the robot will attempt to follow the points while cutting corners (radius) to save time (compared to stop / turn / start)

Parameters

<i>path</i>	The list of coordinates to follow, in order
<i>dir</i>	Run the bot forwards or backwards
<i>feedback</i>	The feedback controller determining speed
<i>max_speed</i>	Limit the speed of the robot (for pid / pidff feedbacks)
<i>end_speed</i>	the movement profile will attempt to reach this velocity by its completion

Returns

True when the path is complete

Drive the robot autonomously using a pure-pursuit algorithm - Input path with a set of waypoints - the robot will attempt to follow the points while cutting corners (radius) to save time (compared to stop / turn / start)

Parameters

<i>path</i>	The list of coordinates to follow, in order
<i>dir</i>	Run the bot forwards or backwards
<i>feedback</i>	The feedback controller determining speed
<i>max_speed</i>	Limit the speed of the robot (for pid / pidff feedbacks)

Returns

True when the path is complete

reset_auto()

```
void TankDrive::reset_auto ()
```

Reset the initialization for autonomous drive functions

stop()

```
void TankDrive::stop ()
```

Stops rotation of all the motors using their "brake mode"

turn_degrees() [1/2]

```
bool TankDrive::turn_degrees (
    double degrees,
    double max_speed = 1,
    double end_speed = 0)
```

Autonomously turn the robot X degrees to counterclockwise (negative for clockwise), with a maximum motor speed of percent_speed (-1.0 -> 1.0)

Uses the default turning feedback of the drive system.

Parameters

<i>degrees</i>	degrees by which we will turn relative to the robot (+) turns ccw, (-) turns cw
<i>max_speed</i>	the maximum percentage of robot speed at which the robot will travel. 1 = full power
<i>end_speed</i>	the movement profile will attempt to reach this velocity by its completion

Autonomously turn the robot X degrees to counterclockwise (negative for clockwise), with a maximum motor speed of percent_speed (-1.0 -> 1.0)

Uses the default turning feedback of the drive system.

Parameters

<i>degrees</i>	degrees by which we will turn relative to the robot (+) turns ccw, (-) turns cw
<i>max_speed</i>	the maximum percentage of robot speed at which the robot will travel. 1 = full power
<i>end_speed</i>	the movement profile will attempt to reach this velocity by its completion

Returns

true if we turned te target number of degrees

turn_degrees() [2/2]

```
bool TankDrive::turn_degrees (
    double degrees,
    Feedback & feedback,
    double max_speed = 1,
    double end_speed = 0)
```

Autonomously turn the robot X degrees counterclockwise (negative for clockwise), with a maximum motor speed of percent_speed (-1.0 -> 1.0)

Uses PID + Feedforward for it's control.

Parameters

<i>degrees</i>	degrees by which we will turn relative to the robot (+) turns ccw, (-) turns cw
<i>feedback</i>	the feedback controller we will use to travel. controls the rate at which we accelerate and drive.
<i>max_speed</i>	the maximum percentage of robot speed at which the robot will travel. 1 = full power

Autonomously turn the robot X degrees to counterclockwise (negative for clockwise), with a maximum motor speed of percent_speed (-1.0 -> 1.0)

Uses the specified feedback for it's control.

Parameters

<i>degrees</i>	degrees by which we will turn relative to the robot (+) turns ccw, (-) turns cw
<i>feedback</i>	the feedback controller we will use to travel. controls the rate at which we accelerate and drive.
<i>max_speed</i>	the maximum percentage of robot speed at which the robot will travel. 1 = full power
<i>end_speed</i>	the movement profile will attempt to reach this velocity by its completion

Returns

true if we have turned our target number of degrees

turn_to_heading() [1/2]

```
bool TankDrive::turn_to_heading (
    double heading_deg,
    double max_speed = 1,
    double end_speed = 0)
```

Turn the robot in place to an exact heading relative to the field. 0 is forward. Uses the default turn feedback of the drive system

Parameters

<i>heading_deg</i>	the heading to which we will turn
<i>max_speed</i>	the maximum percentage of robot speed at which the robot will travel. 1 = full power
<i>end_speed</i>	the movement profile will attempt to reach this velocity by its completion

Turn the robot in place to an exact heading relative to the field. 0 is forward. Uses the default turn feedback of the drive system

Parameters

<i>heading_deg</i>	the heading to which we will turn
<i>max_speed</i>	the maximum percentage of robot speed at which the robot will travel. 1 = full power
<i>end_speed</i>	the movement profile will attempt to reach this velocity by its completion

Returns

true if we have reached our target heading

turn_to_heading() [2/2]

```
bool TankDrive::turn_to_heading (
    double heading_deg,
    Feedback & feedback,
    double max_speed = 1,
    double end_speed = 0)
```

Turn the robot in place to an exact heading relative to the field. 0 is forward.

Parameters

<i>heading_deg</i>	the heading to which we will turn
<i>feedback</i>	the feedback controller we will use to travel. controls the rate at which we accelerate and drive.
<i>max_speed</i>	the maximum percentage of robot speed at which the robot will travel. 1 = full power
<i>end_speed</i>	the movement profile will attempt to reach this velocity by its completion

Turn the robot in place to an exact heading relative to the field. 0 is forward.

Parameters

<i>heading_deg</i>	the heading to which we will turn
<i>feedback</i>	the feedback controller we will use to travel. controls the rate at which we accelerate and drive.
<i>max_speed</i>	the maximum percentage of robot speed at which the robot will travel. 1 = full power
<i>end_speed</i>	the movement profile will attempt to reach this velocity by its completion

Returns

true if we have reached our target heading

The documentation for this class was generated from the following files:

- tank_drive.h
- tank_drive.cpp

4.68 tracking_wheel_cfg_t Struct Reference

```
#include <odometry_nwheel.h>
```

Public Attributes

- double `x`
- double `y`
- double `theta_rad`
- double `radius`

4.68.1 Detailed Description

OdometryNWheel

This class handles the code for an N-pod odometry setup, where there are N <WHEELS> free spinning omni wheels (dead wheels) placed in any known configuration on the robot.

Example of a possible wheel configuration:

```
+Y ----- ^ | === ||||| O ||||| === || ----- | +-----> + X
```

Where O is the center of rotation. The robot will monitor the changes in rotation of these wheels, use this to calculate a pose delta, then integrate the deltas over time to determine the robot's position.

This is a "set and forget" class, meaning once the object is created, the robot will immediately begin tracking it's movement in the background.

<https://rit.enterprise.slack.com/files/U04112Y5RB6/F080M01KPA5/predictperpindiculars2.pdf>
2024-2025 Notebook: Entries/Software Entries/Localization/N-Pod Odometry

Author

Jack Cammarata, Richie Sommers

Date

Nov 14 2024 `tracking_wheel_cfg_t` holds all the specifications for a single tracking wheel The units for x, y, and radius will determine the units of the position estimate

4.68.2 Member Data Documentation

radius

```
double tracking_wheel_cfg_t::radius
```

radius of the wheel

theta_rad

```
double tracking_wheel_cfg_t::theta_rad
```

angle between wheel direction and x axis in the robot frame

x

```
double tracking_wheel_cfg_t::x
```

x position of the center of the wheel

y

```
double tracking_wheel_cfg_t::y
```

y position of the center of the wheel

The documentation for this struct was generated from the following file:

- odometry_nwheel.h

4.69 TrapezoidProfile Class Reference

```
#include <trapezoid_profile.h>
```

Public Member Functions

- [TrapezoidProfile](#) (double max_v, double accel)
Construct a new Trapezoid Profile object.
- [motion_t calculate](#) (double time_s)
Run the trapezoidal profile based on the time that's elapsed.
- void [set_endpts](#) (double start, double end)
- void [set_accel](#) (double accel)
- void [set_max_v](#) (double max_v)
- double [get_movement_time](#) ()

4.69.1 Detailed Description**Trapezoid Profile**

This is a motion profile defined by an acceleration, maximum velocity, start point and end point. Using this information, a parametric function is generated, with a period of acceleration, constant velocity, and deceleration. The velocity graph looks like a trapezoid, giving it its name.

If the maximum velocity is set high enough, this will become a S-curve profile, with only acceleration and deceleration.

This class is designed for use in properly modelling the motion of the robots to create a feedforward and target for [PID](#). Acceleration and Maximum velocity should be measured on the robot and tuned down slightly to account for battery drop.

Here are the equations graphed for ease of understanding: <https://www.desmos.com/calculator/rkm3ivulyk>

Author

Ryan McGee

Date

7/12/2022

4.69.2 Constructor & Destructor Documentation

TrapezoidProfile()

```
TrapezoidProfile::TrapezoidProfile (
    double max_v,
    double accel)
```

Construct a new Trapezoid Profile object.

Parameters

<i>max_v</i>	Maximum velocity the robot can run at
<i>accel</i>	Maximum acceleration of the robot

4.69.3 Member Function Documentation

calculate()

```
motion_t TrapezoidProfile::calculate (
    double time_s)
```

Run the trapezoidal profile based on the time that's elapsed.

Parameters

<i>time_s</i>	Time since start of movement
---------------	------------------------------

Returns

motion_t Position, velocity and acceleration

get_movement_time()

```
double TrapezoidProfile::get_movement_time ()
```

uses the kinematic equations to and specified accel and max_v to figure out how long moving along the profile would take

Returns

the time the path will take to travel

set_accel()

```
void TrapezoidProfile::set_accel (
    double accel)
```

set_accel sets the acceleration this profile will use (the left and right legs of the trapezoid)

Parameters

<i>accel</i>	the acceleration amount to use
--------------	--------------------------------

set_endpts()

```
void TrapezoidProfile::set_endpts (
    double start,
    double end)
```

set_endpts defines a start and end position

Parameters

<i>start</i>	the starting position of the path
<i>end</i>	the ending position of the path

set_max_v()

```
void TrapezoidProfile::set_max_v (
    double max_v)
```

sets the maximum velocity for the profile (the height of the top of the trapezoid)

Parameters

<i>max_v</i>	the maximum velocity the robot can travel at
--------------	--

The documentation for this class was generated from the following files:

- trapezoid_profile.h
- trapezoid_profile.cpp

4.70 TurnDegreesCommand Class Reference

```
#include <drive_commands.h>
```

Public Member Functions

- [TurnDegreesCommand](#) ([TankDrive](#) &drive_sys, [Feedback](#) &feedback, double degrees, double max_speed=1, double end_speed=0)
- bool [run](#) () override
- void [on_timeout](#) () override

4.70.1 Detailed Description

AutoCommand wrapper class for the turn_degrees function in the [TankDrive](#) class

4.70.2 Constructor & Destructor Documentation

TurnDegreesCommand()

```
TurnDegreesCommand::TurnDegreesCommand (
    TankDrive & drive_sys,
    Feedback & feedback,
    double degrees,
    double max_speed = 1,
    double end_speed = 0)
```

Construct a [TurnDegreesCommand](#) Command

Parameters

<i>drive_sys</i>	the drive system we are commanding
<i>feedback</i>	the feedback controller we are using to execute the turn
<i>degrees</i>	how many degrees to rotate
<i>max_speed</i>	0 -> 1 percentage of the drive systems speed to drive at

4.70.3 Member Function Documentation

on_timeout()

```
void TurnDegreesCommand::on_timeout () [override]
```

Cleans up drive system if we time out before finishing

reset the drive system if we timeout

run()

```
bool TurnDegreesCommand::run () [override]
```

Run turn_degrees Overrides run from AutoCommand

Returns

true when execution is complete, false otherwise

The documentation for this class was generated from the following files:

- drive_commands.h
- drive_commands.cpp

4.71 TurnToHeadingCommand Class Reference

```
#include <drive_commands.h>
```

Public Member Functions

- [TurnToHeadingCommand](#) ([TankDrive](#) &drive_sys, [Feedback](#) &feedback, double heading_deg, double speed=1, double end_speed=0)
- bool [run](#) () override
- void [on_timeout](#) () override

4.71.1 Detailed Description

AutoCommand wrapper class for the turn_to_heading() function in the [TankDrive](#) class

4.71.2 Constructor & Destructor Documentation

TurnToHeadingCommand()

```
TurnToHeadingCommand::TurnToHeadingCommand (
    TankDrive & drive_sys,
    Feedback & feedback,
    double heading_deg,
    double max_speed = 1,
    double end_speed = 0)
```

Construct a [TurnToHeadingCommand](#) Command

Parameters

<i>drive_sys</i>	the drive system we are commanding
<i>feedback</i>	the feedback controller we are using to execute the drive
<i>heading_deg</i>	the heading to turn to in degrees
<i>max_speed</i>	0 -> 1 percentage of the drive systems speed to drive at

4.71.3 Member Function Documentation

on_timeout()

```
void TurnToHeadingCommand::on_timeout () [override]
```

Cleans up drive system if we time out before finishing

reset the drive system if we don't hit our target

run()

```
bool TurnToHeadingCommand::run () [override]
```

Run turn_to_heading Overrides run from AutoCommand

Returns

true when execution is complete, false otherwise

The documentation for this class was generated from the following files:

- drive_commands.h
- drive_commands.cpp

4.72 Vector2D Class Reference

```
#include <vector2d.h>
```

Public Member Functions

- [Vector2D](#) (double dir, double mag)
- [Vector2D](#) ([point_t](#) p)
- double [get_dir](#) () const
- double [get_mag](#) () const
- double [get_x](#) () const
- double [get_y](#) () const
- [Vector2D](#) [normalize](#) ()
- [point_t](#) [point](#) ()
- [Vector2D](#) [operator*](#) (const double &x)
- [Vector2D](#) [operator+](#) (const [Vector2D](#) &other)
- [Vector2D](#) [operator-](#) (const [Vector2D](#) &other)

4.72.1 Detailed Description

[Vector2D](#) is an x,y pair Used to represent 2D locations on the field. It can also be treated as a direction and magnitude

4.72.2 Constructor & Destructor Documentation

[Vector2D\(\)](#) [1/2]

```
Vector2D::Vector2D (  
    double dir,  
    double mag)
```

Construct a vector object.

Parameters

<i>dir</i>	Direction, in radians. 'foward' is 0, clockwise positive when viewed from the top.
<i>mag</i>	Magnitude.

Vector2D() [2/2]

```
Vector2D::Vector2D (
    point_t p)
```

Construct a vector object from a cartesian point.

Parameters

<i>p</i>	<code>point_t.x</code> , <code>point_t.y</code>
----------	---

4.72.3 Member Function Documentation**get_dir()**

```
double Vector2D::get_dir () const
```

Get the direction of the vector, in radians. '0' is forward, clockwise positive when viewed from the top.

Use `r2d()` to convert.

Returns

the direction of the vetctor in radians

Get the direction of the vector, in radians. '0' is forward, clockwise positive when viewed from the top.

Use `r2d()` to convert.

get_mag()

```
double Vector2D::get_mag () const
```

Returns

the magnitude of the vector

Get the magnitude of the vector

get_x()

```
double Vector2D::get_x () const
```

Returns

the X component of the vector; positive to the right.

Get the X component of the vector; positive to the right.

get_y()

```
double Vector2D::get_y () const
```

Returns

the Y component of the vector, positive forward.

Get the Y component of the vector, positive forward.

normalize()

```
Vector2D Vector2D::normalize ()
```

Changes the magnitude of the vector to 1

Returns

the normalized vector

Changes the magnetude of the vector to 1

operator*()

```
Vector2D Vector2D::operator* (  
    const double & x)
```

Scales a [Vector2D](#) by a scalar with the * operator

Parameters

x	the value to scale the vector by
---	----------------------------------

Returns

the this [Vector2D](#) scaled by x

operator+()

```
Vector2D Vector2D::operator+ (  
    const Vector2D & other)
```

Add the components of two vectors together [Vector2D](#) + [Vector2D](#) = (this.x + other.x, this.y + other.y)

Parameters

<i>other</i>	the vector to add to this
--------------	---------------------------

Returns

the sum of the vectors

operator-()

```
Vector2D Vector2D::operator- (
    const Vector2D & other)
```

Subtract the components of two vectors together `Vector2D - Vector2D = (this.x - other.x, this.y - other.y)`

Parameters

<i>other</i>	the vector to subtract from this
--------------	----------------------------------

Returns

the difference of the vectors

point()

```
point_t Vector2D::point ()
```

Returns a point from the vector

Returns

the point represented by the vector

Convert a direction and magnitude representation to an x, y representation

Returns

the x, y representation of the vector

The documentation for this class was generated from the following files:

- vector2d.h
- vector2d.cpp

4.73 WaitUntilCondition Class Reference

Waits until the condition is true.

```
#include <auto_command.h>
```

4.73.1 Detailed Description

Waits until the condition is true.

The documentation for this class was generated from the following file:

- `auto_command.h`

4.74 WaitUntilUpToSpeedCommand Class Reference

```
#include <flywheel_commands.h>
```

Public Member Functions

- [WaitUntilUpToSpeedCommand](#) ([Flywheel](#) &flywheel, int threshold_rpm)
- bool [run](#) () override

4.74.1 Detailed Description

AutoCommand that listens to the [Flywheel](#) and waits until it is at its target speed +/- the specified threshold

4.74.2 Constructor & Destructor Documentation

WaitUntilUpToSpeedCommand()

```
WaitUntilUpToSpeedCommand::WaitUntilUpToSpeedCommand (
    Flywheel & flywheel,
    int threshold_rpm)
```

Creates a [WaitUntilUpToSpeedCommand](#)

Parameters

<i>flywheel</i>	the flywheel system we are commanding
<i>threshold_rpm</i>	the threshold over and under the flywheel target RPM that we define to be acceptable

4.74.3 Member Function Documentation

run()

```
bool WaitUntilUpToSpeedCommand::run () [override]
```

Run spin_manual Overrides run from AutoCommand

Returns

true when execution is complete, false otherwise

The documentation for this class was generated from the following files:

- `flywheel_commands.h`
- `flywheel_commands.cpp`

Index

- accel
 - OdometryBase, [73](#)
- add
 - CommandController, [17](#), [18](#)
 - GenericAuto, [43](#)
- add_async
 - GenericAuto, [43](#)
- add_cancel_func
 - CommandController, [18](#)
- add_delay
 - CommandController, [18](#)
 - GenericAuto, [44](#)
- add_entry
 - ExponentialMovingAverage, [28](#)
 - MovingAverage, [64](#)
- ang_accel_deg
 - OdometryBase, [73](#)
- ang_speed_deg
 - OdometryBase, [74](#)
- Async, [8](#)
- auto_drive
 - MecanumDrive, [56](#)
- auto_turn
 - MecanumDrive, [56](#)
- AutoChooser, [8](#)
 - AutoChooser, [9](#)
 - choice, [10](#)
 - get_choice, [9](#)
 - list, [10](#)
- AutoChooser::entry_t, [27](#)
 - name, [27](#)
- background_task
 - OdometryBase, [70](#)
- BasicSolenoidSet, [10](#)
 - BasicSolenoidSet, [10](#)
 - run, [11](#)
- BasicSpinCommand, [11](#)
 - BasicSpinCommand, [11](#)
 - run, [12](#)
- BasicStopCommand, [12](#)
 - BasicStopCommand, [13](#)
 - run, [14](#)
- bool_or
 - Serializer, [96](#)
- BrakeType
 - TankDrive, [108](#)
- Branch, [14](#)
- ButtonWidget
 - screen::ButtonWidget, [15](#)
- calculate
 - FeedForward, [32](#)
 - TrapezoidProfile, [120](#)
- choice
 - AutoChooser, [10](#)
- CommandController, [16](#)
 - add, [17](#), [18](#)
 - add_cancel_func, [18](#)
 - add_delay, [18](#)
 - CommandController, [17](#)
 - last_command_timed_out, [18](#)
 - run, [19](#)
- Condition, [19](#)
- config
 - PID, [88](#)
- control_continuous
 - Lift< T >, [47](#)
- control_manual
 - Lift< T >, [47](#)
- control_setpoints
 - Lift< T >, [47](#)
- Core, [1](#)
- current_pos
 - OdometryBase, [74](#)
- current_state
 - StateMachine< System, IDType, Message, delay_ms, do_log >, [103](#)
- CustomEncoder, [19](#)
 - CustomEncoder, [20](#)
 - position, [20](#)
 - rotation, [20](#)
 - setPosition, [21](#)
 - setRotation, [21](#)
 - velocity, [21](#)
- DelayCommand, [22](#)
 - DelayCommand, [22](#)
 - run, [22](#)
- dist
 - point_t, [92](#)
- double_or
 - Serializer, [97](#)
- draw
 - screen::FunctionPage, [42](#)
 - screen::OdometryPage, [76](#)
 - screen::Page, [81](#)
 - screen::PIDPage, [91](#)
 - screen::StatsPage, [105](#)
- drive
 - MecanumDrive, [57](#)
- drive_arcade
 - TankDrive, [109](#)
- drive_correction_cutoff
 - robot_specs_t, [95](#)
- drive_forward
 - TankDrive, [109](#), [110](#)
- drive_raw
 - MecanumDrive, [58](#)
- drive_tank
 - TankDrive, [111](#)

- drive_tank_raw
 - TankDrive, 111
- drive_to_point
 - TankDrive, 111, 112
- DriveForwardCommand, 22
 - DriveForwardCommand, 23
 - on_timeout, 24
 - run, 24
- DriveStopCommand, 24
 - DriveStopCommand, 24
 - run, 25
- DriveToPointCommand, 25
 - DriveToPointCommand, 25, 26
 - run, 26
- end_async
 - OdometryBase, 70
- error_method
 - PID::pid_config_t, 89
- ERROR_TYPE
 - PID, 84
- ExponentialMovingAverage, 27
 - add_entry, 28
 - ExponentialMovingAverage, 28
 - get_size, 29
 - get_value, 29
- Feedback, 29
 - get, 30
 - init, 30
 - is_on_target, 30
 - set_limits, 31
 - update, 31
- FeedForward, 31
 - calculate, 32
 - FeedForward, 32
- FeedForward::ff_config_t, 33
 - kA, 33
 - kG, 33
 - kS, 33
 - kV, 34
- Filter, 34
- Flywheel, 34
 - Flywheel, 35
 - get_motors, 36
 - get_target, 36
 - getRPM, 36
 - is_on_target, 36
 - Page, 36
 - spin_manual, 36
 - spin_rpm, 37
 - SpinRpmCmd, 37
 - spinRPMTask, 38
 - stop, 37
 - WaitUntilUpToSpeedCmd, 38
- FlywheelStopCommand, 38
 - FlywheelStopCommand, 38
 - run, 39
- FlywheelStopMotorsCommand, 39
 - FlywheelStopMotorsCommand, 39
 - run, 40
- FlywheelStopNonTasksCommand, 40
- FunctionCommand, 40
- FunctionCondition, 41
- FunctionPage
 - screen::FunctionPage, 42
- GenericAuto, 43
 - add, 43
 - add_async, 43
 - add_delay, 44
 - run, 44
- get
 - Feedback, 30
 - MotionController, 60
 - PID, 85
 - TakeBackHalf, 106
- get_accel
 - OdometryBase, 70
- get_angular_accel_deg
 - OdometryBase, 70
- get_angular_speed_deg
 - OdometryBase, 71
- get_async
 - Lift< T >, 48
- get_choice
 - AutoChooser, 9
- get_dir
 - Vector2D, 125
- get_error
 - PID, 85
- get_mag
 - Vector2D, 125
- get_motion
 - MotionController, 60
- get_motors
 - Flywheel, 36
- get_movement_time
 - TrapezoidProfile, 120
- get_points
 - PurePursuit::Path, 83
- get_position
 - OdometryBase, 71
- get_radius
 - PurePursuit::Path, 83
- get_sensor_val
 - PID, 85
- get_setpoint
 - Lift< T >, 48
- get_size
 - ExponentialMovingAverage, 29
 - MovingAverage, 64
- get_speed
 - OdometryBase, 71
- get_target
 - Flywheel, 36
 - PID, 85
- get_value

- ExponentialMovingAverage, 29
- MovingAverage, 64
- get_x
 - Vector2D, 125
- get_y
 - Vector2D, 126
- getRPM
 - Flywheel, 36
- handle
 - OdometryBase, 74
- has_message
 - StateMachine< System, IDType, Message, delay_ms, do_log >::MaybeMessage, 55
- hold
 - Lift< T >, 48
- home
 - Lift< T >, 48
- IfTimePassed, 45
- init
 - Feedback, 30
 - MotionController, 61
 - PID, 86
 - TakeBackHalf, 106
- InOrder, 45
- int_or
 - Serializer, 97
- is_on_target
 - Feedback, 30
 - Flywheel, 36
 - MotionController, 61
 - PID, 87
 - TakeBackHalf, 106
- is_valid
 - PurePursuit::Path, 83
- kA
 - FeedForward::ff_config_t, 33
- kG
 - FeedForward::ff_config_t, 33
- kS
 - FeedForward::ff_config_t, 33
- kV
 - FeedForward::ff_config_t, 34
- last_command_timed_out
 - CommandController, 18
- Lift
 - Lift< T >, 46
- Lift< T >, 46
 - control_continuous, 47
 - control_manual, 47
 - control_setpoints, 47
 - get_async, 48
 - get_setpoint, 48
 - hold, 48
 - home, 48
 - Lift, 46
 - set_async, 48
 - set_position, 49
 - set_sensor_function, 49
 - set_sensor_reset, 49
 - set_setpoint, 49
- Lift< T >::lift_cfg_t, 50
- list
 - AutoChooser, 10
- Log
 - Logger, 51, 52
- Logf
 - Logger, 52
- Logger, 50
 - Log, 51, 52
 - Logf, 52
 - Logger, 51
 - LogIn, 52, 53
- LogIn
 - Logger, 52, 53
- MaybeMessage
 - StateMachine< System, IDType, Message, delay_ms, do_log >::MaybeMessage, 54
- MecanumDrive, 55
 - auto_drive, 56
 - auto_turn, 56
 - drive, 57
 - drive_raw, 58
 - MecanumDrive, 56
- MecanumDrive::mecanumdrive_config_t, 58
- message
 - StateMachine< System, IDType, Message, delay_ms, do_log >::MaybeMessage, 55
- modify_inputs
 - TankDrive, 113
- motion_t, 58
- MotionController, 59
 - get, 60
 - get_motion, 60
 - init, 61
 - is_on_target, 61
 - MotionController, 60
 - set_limits, 61
 - tune_feedforward, 62
 - update, 62
- MotionController::m_profile_cfg_t, 53
- MovingAverage, 63
 - add_entry, 64
 - get_size, 64
 - get_value, 64
 - MovingAverage, 63
- mut
 - OdometryBase, 74
- name
 - AutoChooser::entry_t, 27
- None
 - TankDrive, 109
- normalize

- Vector2D, 126
- Odometry3Wheel, 65
 - Odometry3Wheel, 66
 - tune, 67
 - update, 67
- Odometry3Wheel::odometry3wheel_cfg_t, 68
 - off_axis_center_dist, 68
 - wheel_diam, 68
 - wheelbase_dist, 68
- OdometryBase, 68
 - accel, 73
 - ang_accel_deg, 73
 - ang_speed_deg, 74
 - background_task, 70
 - current_pos, 74
 - end_async, 70
 - get_accel, 70
 - get_angular_accel_deg, 70
 - get_angular_speed_deg, 71
 - get_position, 71
 - get_speed, 71
 - handle, 74
 - mut, 74
 - OdometryBase, 70
 - pos_diff, 71
 - pose_exponential, 72
 - rot_diff, 72
 - set_position, 72
 - smallest_angle, 73
 - speed, 74
 - update, 73
 - zero_pos, 74
- OdometryPage
 - screen::OdometryPage, 75
- OdometryTank, 76
 - OdometryTank, 78
 - set_position, 79
 - update, 79
- OdomSetPosition, 80
 - OdomSetPosition, 80
 - run, 80
- off_axis_center_dist
 - Odometry3Wheel::odometry3wheel_cfg_t, 68
- on_target_time
 - PID::pid_config_t, 89
- on_timeout
 - DriveForwardCommand, 24
 - PurePursuitCommand, 94
 - TurnDegreesCommand, 122
 - TurnToHeadingCommand, 123
- operator+
 - point_t, 92
 - Vector2D, 126
- operator-
 - point_t, 92
 - Vector2D, 127
- operator*
 - Vector2D, 126
- Page
 - Flywheel, 36
- Parallel, 82
- Path
 - PurePursuit::Path, 82
- PID, 83
 - config, 88
 - ERROR_TYPE, 84
 - get, 85
 - get_error, 85
 - get_sensor_val, 85
 - get_target, 85
 - init, 86
 - is_on_target, 87
 - PID, 84
 - reset, 87
 - set_limits, 87
 - set_target, 87
 - update, 88
- PID::pid_config_t, 89
 - error_method, 89
 - on_target_time, 89
- PIDPage
 - screen::PIDPage, 90
- point
 - Vector2D, 127
- point_t, 91
 - dist, 92
 - operator+, 92
 - operator-, 92
- pos_diff
 - OdometryBase, 71
- pose_exponential
 - OdometryBase, 72
- pose_t, 93
- position
 - CustomEncoder, 20
- pure_pursuit
 - TankDrive, 113, 114
- PurePursuit::hermite_point, 44
- PurePursuit::Path, 82
 - get_points, 83
 - get_radius, 83
 - is_valid, 83
 - Path, 82
- PurePursuit::spline, 101
- PurePursuitCommand, 93
 - on_timeout, 94
 - PurePursuitCommand, 93
 - run, 94
- radius
 - tracking_wheel_cfg_t, 118
- reset
 - PID, 87
- reset_auto
 - TankDrive, 115
- robot_specs_t, 94
 - drive_correction_cutoff, 95

- rot_diff
 - OdometryBase, 72
- rotation
 - CustomEncoder, 20
- run
 - BasicSolenoidSet, 11
 - BasicSpinCommand, 12
 - BasicStopCommand, 14
 - CommandController, 19
 - DelayCommand, 22
 - DriveForwardCommand, 24
 - DriveStopCommand, 25
 - DriveToPointCommand, 26
 - FlywheelStopCommand, 39
 - FlywheelStopMotorsCommand, 40
 - GenericAuto, 44
 - OdomSetPosition, 80
 - PurePursuitCommand, 94
 - SpinRPMCommand, 101
 - TurnDegreesCommand, 122
 - TurnToHeadingCommand, 123
 - WaitUntilUpToSpeedCommand, 128
- save_to_disk
 - Serializer, 97
- screen::ButtonWidget, 15
 - ButtonWidget, 15
 - update, 16
- screen::FunctionPage, 41
 - draw, 42
 - FunctionPage, 42
 - update, 42
- screen::OdometryPage, 75
 - draw, 76
 - OdometryPage, 75
 - update, 76
- screen::Page, 81
 - draw, 81
 - update, 81
- screen::PIDPage, 90
 - draw, 91
 - PIDPage, 90
 - update, 91
- screen::ScreenData, 95
- screen::SliderWidget, 99
 - SliderWidget, 100
 - update, 100
- screen::StatsPage, 104
 - draw, 105
 - StatsPage, 104
 - update, 105
- send_message
 - StateMachine< System, IDType, Message, delay_ms, do_log >, 103
- Serializer, 95
 - bool_or, 96
 - double_or, 97
 - int_or, 97
 - save_to_disk, 97
 - Serializer, 96
 - set_bool, 98
 - set_double, 98
 - set_int, 98
 - set_string, 98
 - string_or, 99
- set_accel
 - TrapezoidProfile, 120
- set_async
 - Lift< T >, 48
- set_bool
 - Serializer, 98
- set_double
 - Serializer, 98
- set_endpts
 - TrapezoidProfile, 121
- set_int
 - Serializer, 98
- set_limits
 - Feedback, 31
 - MotionController, 61
 - PID, 87
 - TakeBackHalf, 107
- set_max_v
 - TrapezoidProfile, 121
- set_position
 - Lift< T >, 49
 - OdometryBase, 72
 - OdometryTank, 79
- set_sensor_function
 - Lift< T >, 49
- set_sensor_reset
 - Lift< T >, 49
- set_setpoint
 - Lift< T >, 49
- set_string
 - Serializer, 98
- set_target
 - PID, 87
- setPosition
 - CustomEncoder, 21
- setRotation
 - CustomEncoder, 21
- SliderWidget
 - screen::SliderWidget, 100
- smallest_angle
 - OdometryBase, 73
- Smart
 - TankDrive, 109
- speed
 - OdometryBase, 74
- spin_manual
 - Flywheel, 36
- spin_rpm
 - Flywheel, 37
- SpinRpmCmd
 - Flywheel, 37
- SpinRPMCommand, 100

- run, [101](#)
- SpinRPMCommand, [101](#)
- spinRPMTask
 - Flywheel, [38](#)
- StateMachine
 - StateMachine< System, IDType, Message, delay_ms, do_log >, [103](#)
- StateMachine< System, IDType, Message, delay_ms, do_log >, [102](#)
 - current_state, [103](#)
 - send_message, [103](#)
 - StateMachine, [103](#)
- StateMachine< System, IDType, Message, delay_ms, do_log >::MaybeMessage, [54](#)
 - has_message, [55](#)
 - MaybeMessage, [54](#)
 - message, [55](#)
- StateMachine< System, IDType, Message, delay_ms, do_log >::State, [102](#)
- StatsPage
 - screen::StatsPage, [104](#)
- stop
 - Flywheel, [37](#)
 - TankDrive, [115](#)
- string_or
 - Serializer, [99](#)
- TakeBackHalf, [105](#)
 - get, [106](#)
 - init, [106](#)
 - is_on_target, [106](#)
 - set_limits, [107](#)
 - update, [107](#)
- TankDrive, [108](#)
 - BrakeType, [108](#)
 - drive_arcade, [109](#)
 - drive_forward, [109](#), [110](#)
 - drive_tank, [111](#)
 - drive_tank_raw, [111](#)
 - drive_to_point, [111](#), [112](#)
 - modify_inputs, [113](#)
 - None, [109](#)
 - pure_pursuit, [113](#), [114](#)
 - reset_auto, [115](#)
 - Smart, [109](#)
 - stop, [115](#)
 - TankDrive, [109](#)
 - turn_degrees, [115](#), [116](#)
 - turn_to_heading, [116](#), [117](#)
 - ZeroVelocity, [109](#)
- theta_rad
 - tracking_wheel_cfg_t, [118](#)
- tracking_wheel_cfg_t, [118](#)
 - radius, [118](#)
 - theta_rad, [118](#)
 - x, [119](#)
 - y, [119](#)
- TrapezoidProfile, [119](#)
 - calculate, [120](#)
 - get_movement_time, [120](#)
 - set_accel, [120](#)
 - set_endpts, [121](#)
 - set_max_v, [121](#)
 - TrapezoidProfile, [120](#)
- tune
 - Odometry3Wheel, [67](#)
- tune_feedforward
 - MotionController, [62](#)
- turn_degrees
 - TankDrive, [115](#), [116](#)
- turn_to_heading
 - TankDrive, [116](#), [117](#)
- TurnDegreesCommand, [121](#)
 - on_timeout, [122](#)
 - run, [122](#)
 - TurnDegreesCommand, [122](#)
- TurnToHeadingCommand, [123](#)
 - on_timeout, [123](#)
 - run, [123](#)
 - TurnToHeadingCommand, [123](#)
- update
 - Feedback, [31](#)
 - MotionController, [62](#)
 - Odometry3Wheel, [67](#)
 - OdometryBase, [73](#)
 - OdometryTank, [79](#)
 - PID, [88](#)
 - screen::ButtonWidget, [16](#)
 - screen::FunctionPage, [42](#)
 - screen::OdometryPage, [76](#)
 - screen::Page, [81](#)
 - screen::PIDPage, [91](#)
 - screen::SliderWidget, [100](#)
 - screen::StatsPage, [105](#)
 - TakeBackHalf, [107](#)
- Vector2D, [124](#)
 - get_dir, [125](#)
 - get_mag, [125](#)
 - get_x, [125](#)
 - get_y, [126](#)
 - normalize, [126](#)
 - operator+, [126](#)
 - operator-, [127](#)
 - operator*, [126](#)
 - point, [127](#)
 - Vector2D, [124](#), [125](#)
- velocity
 - CustomEncoder, [21](#)
- WaitUntilCondition, [127](#)
- WaitUntilUpToSpeedCmd
 - Flywheel, [38](#)
- WaitUntilUpToSpeedCommand, [128](#)
 - run, [128](#)
 - WaitUntilUpToSpeedCommand, [128](#)
- wheel_diam

Generated by Doxygen