

SIEMENS
Ingenuity for life

Setting up the IOT2050

SIMATIC IOT2050 Basic - 6ES7647-0BA00-0YA2
SIMATIC IOT2050 Advanced - 6ES7647-0BA00-1YA2



Legal information

Use of application examples

Application examples illustrate the solution of automation tasks through an interaction of several components in the form of text, graphics and/or software modules. The application examples are a free service by Siemens AG and/or a subsidiary of Siemens AG ("Siemens"). They are non-binding and make no claim to completeness or functionality regarding configuration and equipment. The application examples merely offer help with typical tasks; they do not constitute customer-specific solutions. You yourself are responsible for the proper and safe operation of the products in accordance with applicable regulations and must also check the function of the respective application example and customize it for your system.

Siemens grants you the non-exclusive, non-sublicensable and non-transferable right to have the application examples used by technically trained personnel. Any change to the application examples is your responsibility. Sharing the application examples with third parties or copying the application examples or excerpts thereof is permitted only in combination with your own products. The application examples are not required to undergo the customary tests and quality inspections of a chargeable product; they may have functional and performance defects as well as errors. It is your responsibility to use them in such a manner that any malfunctions that may occur do not result in property damage or injury to persons.

Disclaimer of liability

Siemens shall not assume any liability, for any legal reason whatsoever, including, without limitation, liability for the usability, availability, completeness and freedom from defects of the application examples as well as for related information, configuration and performance data and any damage caused thereby. This shall not apply in cases of mandatory liability, for example under the German Product Liability Act, or in cases of intent, gross negligence, or culpable loss of life, bodily injury or damage to health, non-compliance with a guarantee, fraudulent non-disclosure of a defect, or culpable breach of material contractual obligations. Claims for damages arising from a breach of material contractual obligations shall however be limited to the foreseeable damage typical of the type of agreement, unless liability arises from intent or gross negligence or is based on loss of life, bodily injury or damage to health. The foregoing provisions do not imply any change in the burden of proof to your detriment. You shall indemnify Siemens against existing or future claims of third parties in this connection except where Siemens is mandatorily liable.

By using the application examples you acknowledge that Siemens cannot be held liable for any damage beyond the liability provisions described.

Other information

Siemens reserves the right to make changes to the application examples at any time without notice. In case of discrepancies between the suggestions in the application examples and other Siemens publications such as catalogs, the content of the other documentation shall have precedence.

The Siemens terms of use (<https://support.industry.siemens.com>) shall also apply.

Security information

Siemens provides products and solutions with industrial security functions that support the secure operation of plants, systems, machines and networks.

In order to protect plants, systems, machines and networks against cyber threats, it is necessary to implement – and continuously maintain – a holistic, state-of-the-art industrial security concept. Siemens' products and solutions constitute one element of such a concept.

Customers are responsible for preventing unauthorized access to their plants, systems, machines and networks. Such systems, machines and components should only be connected to an enterprise network or the Internet if and to the extent such a connection is necessary and only when appropriate security measures (e.g. firewalls and/or network segmentation) are in place. For additional information on industrial security measures that may be implemented, please visit <https://www.siemens.com/industrialsecurity>.

Siemens' products and solutions undergo continuous development to make them more secure. Siemens strongly recommends that product updates are applied as soon as they are available and that the latest product versions are used. Use of product versions that are no longer supported, and failure to apply the latest updates may increase customer's exposure to cyber threats.

To stay informed about product updates, subscribe to the Siemens Industrial Security RSS Feed at: <https://www.siemens.com/industrialsecurity>.

Table of contents

Legal information	2
1 Task.....	4
1.1 Overview.....	4
2 Requirements	5
2.1 Required Hardware	5
2.2 Required Software.....	8
3 Operating	9
3.1 Installing the SD-Card Example Image	9
3.2 First commissioning of the SIMATIC IOT2050	13
3.2.1 Local access.....	13
3.2.2 Remote access with Putty SSH Connection	14
3.2.3 Setting up network interfaces.....	20
3.2.4 Install new software packages on the SIMATIC IOT2050	23
4 Checklist.....	24
5 Related links.....	25
6 History.....	25

1 Task

1.1 Overview

Introduction

This Setting Up shows how to set up the SIMATIC IOT2050 with a SD-Card image provided through the Siemens Industry Online Support.

Goals

After working through this document, you know how to

- Locally access to the SIMATIC IOT2050
- Get remote access to the SIMATIC IOT2050
- Change the IP-Address of the SIMATIC IOT2050
- Install software on the SIMATIC IOT2050

2 Requirements

2.1 Required Hardware

This chapter contains the hardware required for this Setting up.

SIMATIC IOT2050

Two different versions of the SIMATIC IOT2050 are available. However, this Setting Up will only use the SIMATIC IOT2050 Basic (6ES7647-0BA00-0YA2) as basis for all examples, but it is valid for SIMATIC IOT2050 Advanced (6ES7647-0BA00-1YA2) as well.

SIMATIC IOT2050 (6ES7647-0BA00-0YA2)

Hardware Overview:

- TI SOC AM6528 GP Dual Core
- 1 GB RAM (DDR4)
- 2 Ethernet interfaces 100/1000 Mbps
- 2 USB Type A
- 1 COM interface (RS232/422/485)
- 1 DisplayPort 1.1 A

2 Requirements

Figure 2-1

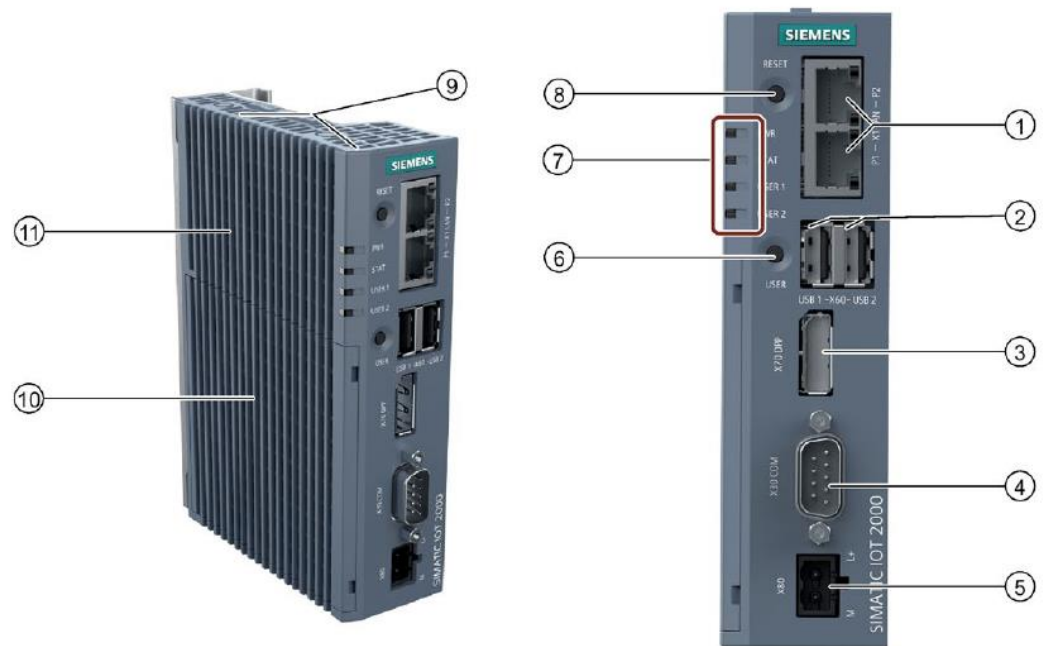


Table 2-1

No.	Description
1	Ethernet interfaces 100/1000 Mbps
2	USB Type A
3	DisplayPort 1.1 A
4	COM interface (RS232/422/485)
5	Power supply connector
6	USER button, programmable
7	LED display
8	RESET button for the CPU
9	Markings for mini PCIe installation accessory
10	Shield cover
11	Top housing

Micro-SD Card

SIMATIC IOT2050 can be operated with a Debian based Linux Operating System, which requires the use of a Micro-SD Card.

The requirement for using SIMATIC IOT2050 with Debian based Linux Operating System is a Micro-SD Card with storage capacity from 8GB up to 32GB.

Engineering Station

To work with the SIMATIC IOT2050 an Engineering Station is required. In this Setting Up a PC with Windows 10 Enterprise is used.

The Engineering Station has to include the following Interfaces:

- SD Card Slot
- Ethernet Port

Ethernet cable

For an Ethernet Connection between the Engineering Station and the SIMATIC IOT2050 in order to establish a SSH connection and to download the Eclipse projects an Ethernet cable is required.

DisplayPort Cable (Male-Male) and Monitor

If you would like to have local connection to the SIMATIC IOT2050, you need to have DisplayPort Cable, a monitor that supports DisplayPort.

Keyboard

If you would like to have local connection to the SIMATIC IOT2050, you need to have a keyboard connected to IOT2050.

Power supply

In order to run the SIMATIC IOT2050 a power supply is required.

This power supply has to provide between 12 and 24V DC.

2.2 Required Software

This chapter contains the software required for this Setting up.

Micro-SD Card Example Image

To use the full functionality of the SIMATIC IOT2050 a SD-Card Example Image with a Debian based Linux Operating System is necessary to be installed. This Image is provided through the Siemens Industry Online Support.

It can be downloaded [here](#).

ssh Client

To get remote access to the SIMATIC IOT2050 software is required.

In this document “PuTTY” is used. With this software it is possible to establish a connection to different devices for example via Serial, SSH or Telnet.

The “PuTTY” software can be downloaded [here](#).

NOTE

Instead of PuTTY you also can use Windows 10 or Linux built-in ssh client.

Win32 Disk Imager

In order to put the SD Card image to the μ SD Card, software is needed.

In this Setting Up the Win32 Disk Imager is used.

The “Win32 Disk Imager” can be downloaded [here](#).

NOTE

All existing data on the SD Card will be removed!

3 Operating

This chapter describes the steps necessary to install and start up the SIMATIC IOT2050 using the hard- and software listed above.

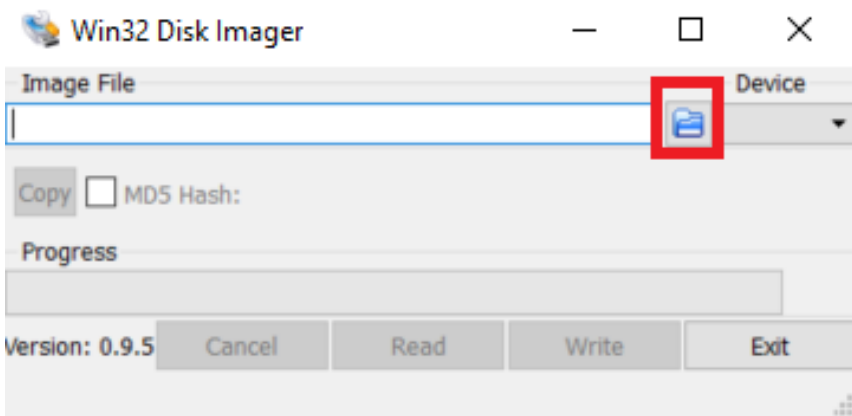
For the necessary software components please refer to the download links in [Chapter 2.2](#)

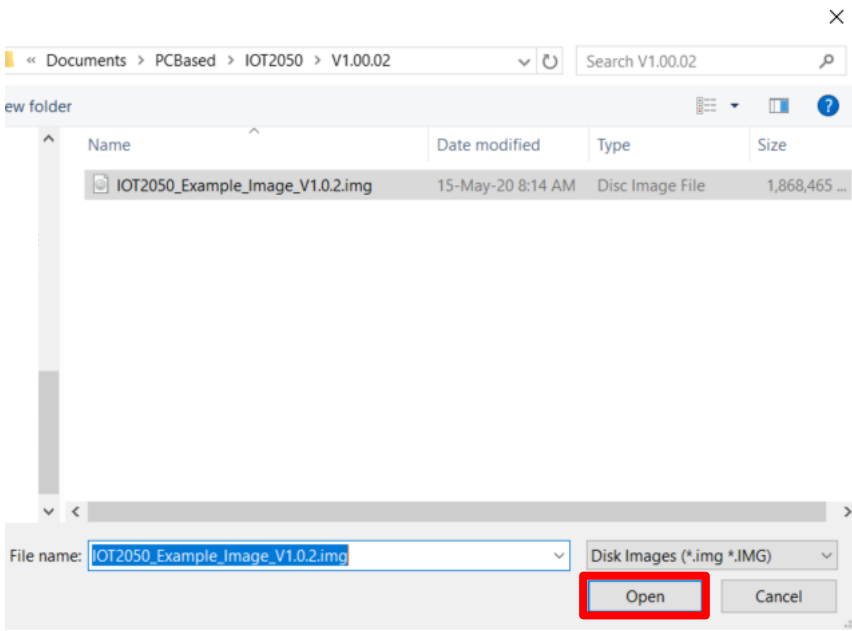
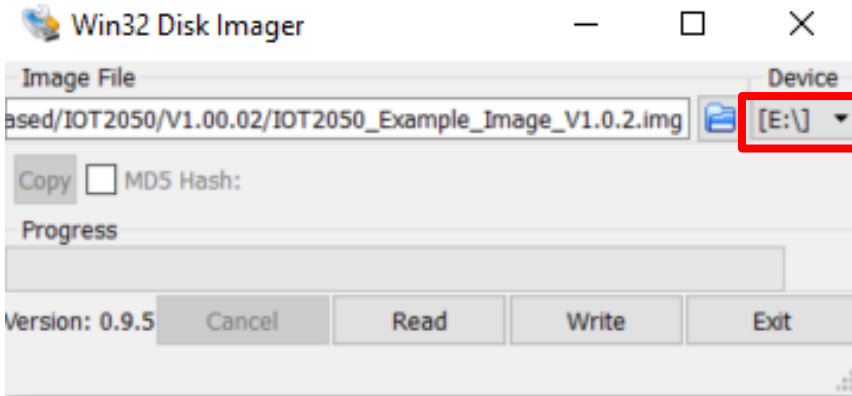
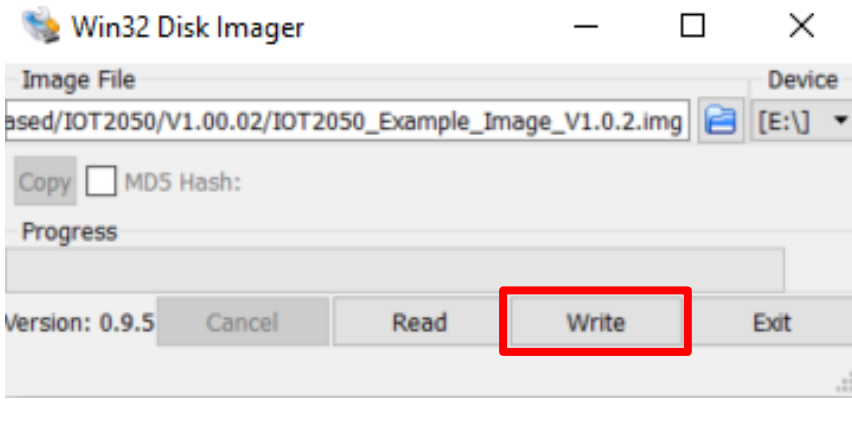
3.1 Installing the SD-Card Example Image

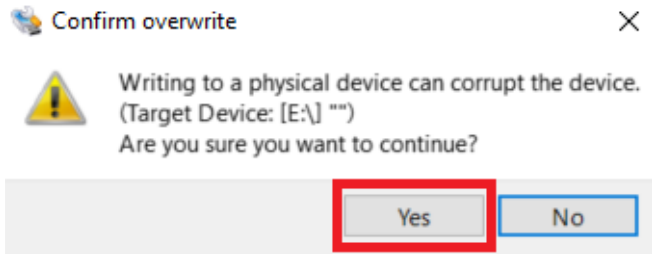
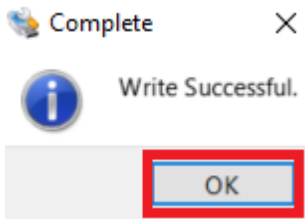
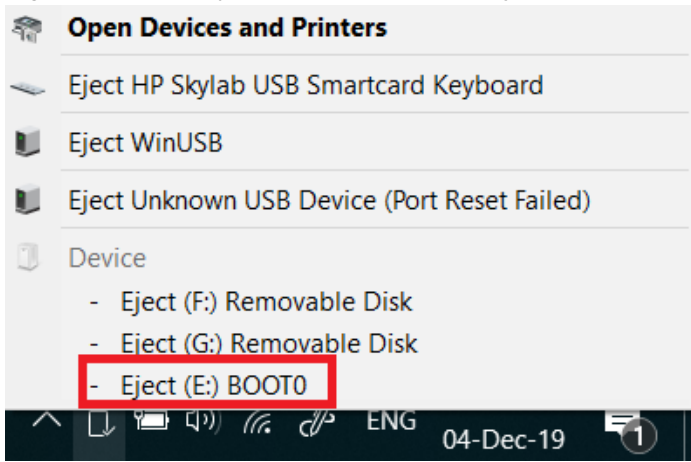
The first step to work with the SIMATIC IOT2050 is to set up a Micro-SD Card with the Image provided through the [Siemens Industry Online Support](#).

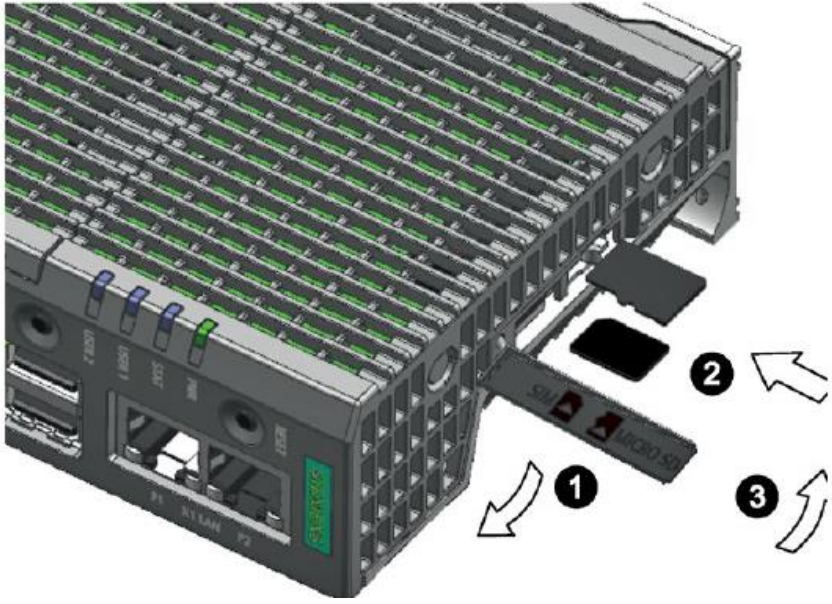
The following table shows the required steps to transfer the SD-Card Image to a Micro-SD Card.

Table 3-1

No.	Action
1.	Insert the μ SD-Card via SD-Card Adapter in the SD-Card Slot of your Engineering Station
2.	Retrieve the downloaded SD Card image .zip-file
3.	Install the downloaded "Win32DiskImager-x.x.x-install.exe"
4.	Start the Win32 Disk Imager
5.	Click on the folder 

No.	Action
6.	<p>Then select the "IOT2050_Example_Image_V1.0.2.img" file in the retrieved SD Card Image folder</p> 
7.	<p>Select the drive letter of your SD Card</p> 
8.	<p>Click the "Write" button</p> 

No.	Action
9.	<p>Confirm the warning message</p> <p>NOTE: All data will be deleted</p>  <p>The dialog box shows a warning icon and the text: "Writing to a physical device can corrupt the device. (Target Device: [E:] '') Are you sure you want to continue?". The "Yes" button is highlighted with a red rectangle.</p>
10.	<p>You will receive a success message if the transfer is done</p>  <p>The dialog box shows an information icon and the text: "Write Successful.". The "OK" button is highlighted with a red rectangle.</p>
11.	<p>Right click on "Safely Remove Hardware and Eject Media"</p>  <p>The context menu shows options to eject various devices. The option "Eject (E:) BOOT0" is highlighted with a red rectangle.</p> <p>Choose the SD Card</p>

No.	Action
12.	<p>Insert the μSD-Card into the μSD-Card Slot of the SIMATIC IOT2050 as follows:</p> <ol style="list-style-type: none"> 1. Open the card cover on the bottom. 2. Push the Micro SD card/Nano SIM card correctly into the supporting frame. The contacts of the Micro SD card/NanoSIM card must point in the direction of the motherboard. 3. Push the card cover back. 

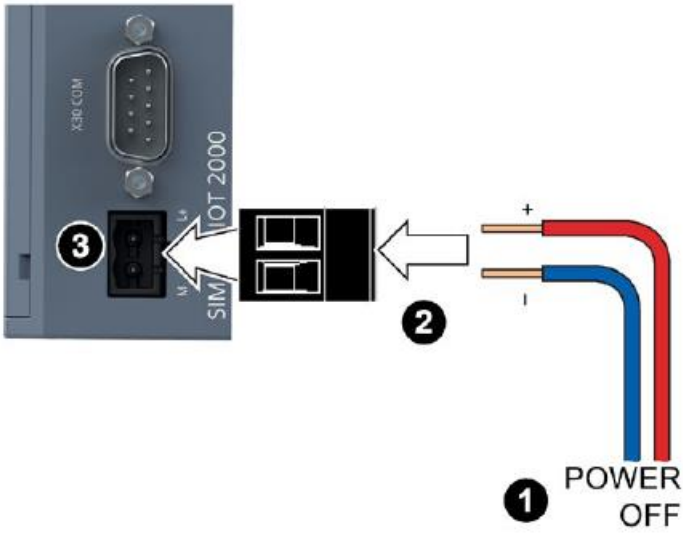
3.2 First commissioning of the SIMATIC IOT2050

Power supply

The following table shows how to connect the SIMATIC IOT2050 to a power supply.

Table 3-2

No.	Action
1.	Power off the power supply
2.	Connect the cable to the connecting terminal
3.	Connect the connecting terminal to the SIMATIC IOT2050
4.	Power on the power supply



CAUTION Only use a DC 12...24V power supply!

3.2.1 Local access

The following table shows how to connect the SIMATIC IOT2050 using a DisplayPort supported monitor via DisplayPort cable and a keyboard.

Table 3-3

No.	Action
1.	Connect one end of the DisplayPort cable to a Display-Port of the monitor
2.	Connect the other end of the DisplayPort cable to the Display-Port of the SIMATIC IOT2050.
3.	Connect a keyboard to USB port of SIMATIC IOT2050

3.2.2 Remote access with Putty SSH Connection

Ethernet cable

The following table shows how to connect the SIMATIC IOT2050 and the engineering station with an Ethernet cable.

Table 3-4

No.	Action
1.	Connect one end of the Ethernet cable to an Ethernet-Port of the Engineering Station
2.	Connect the other end of the Ethernet cable to the Ethernet-Port <i>X1P2</i> of the SIMATIC IOT2050.

The Software “Putty” can be used to get remote access from the Engineering Station to the SIMATIC IOT2050 via Serial, SSH or Telnet.

In this Example the SSH connection is used.

NOTE The SIMATIC IOT2050 has a static IP address by default.

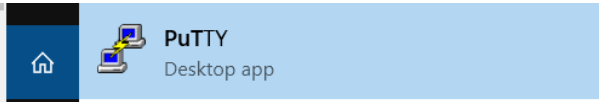
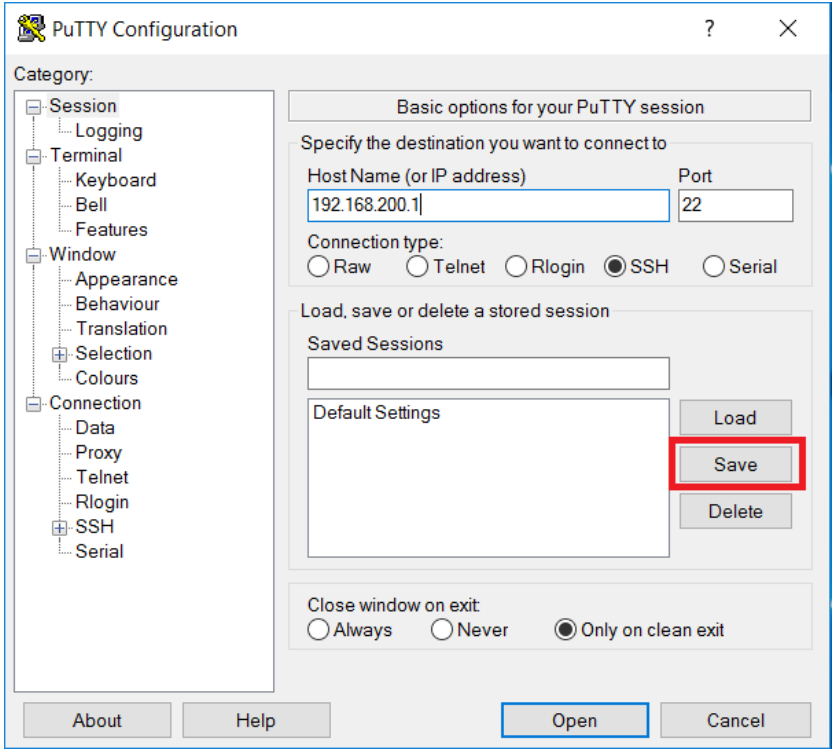
This address is **192.168.200.1**.

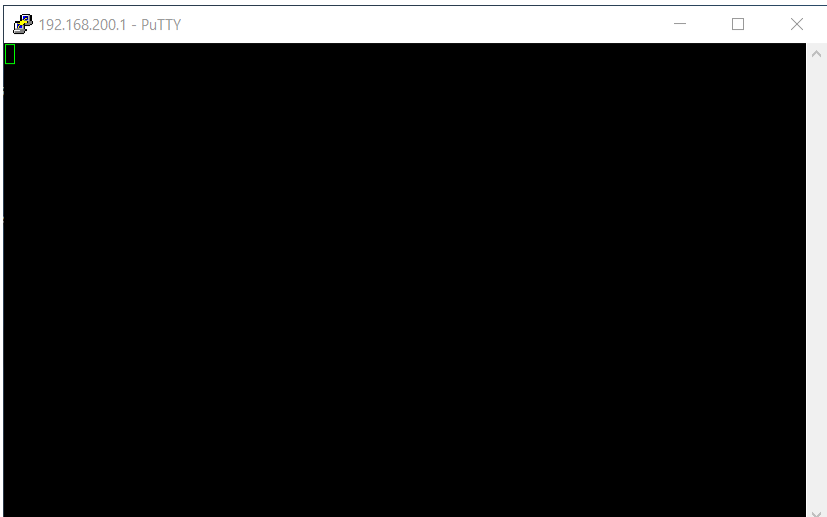
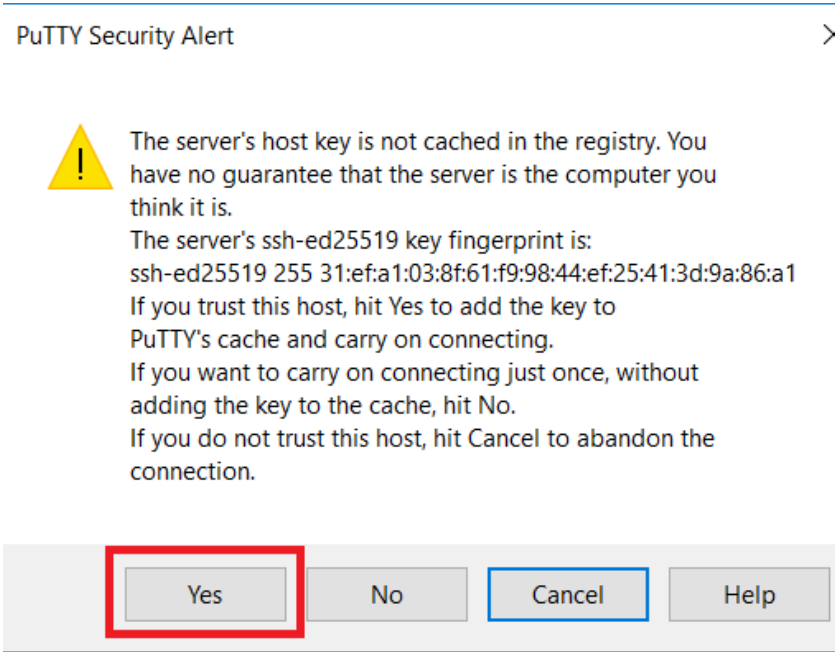
The Engineering Station has to be in the same subnet as the SIMATIC IOT2050 to establish a SSH connection!

NOTE The first boot may last a few minutes –up to 2 – because the filesystem is resized automatically. The time is depending on the SD card you are using.

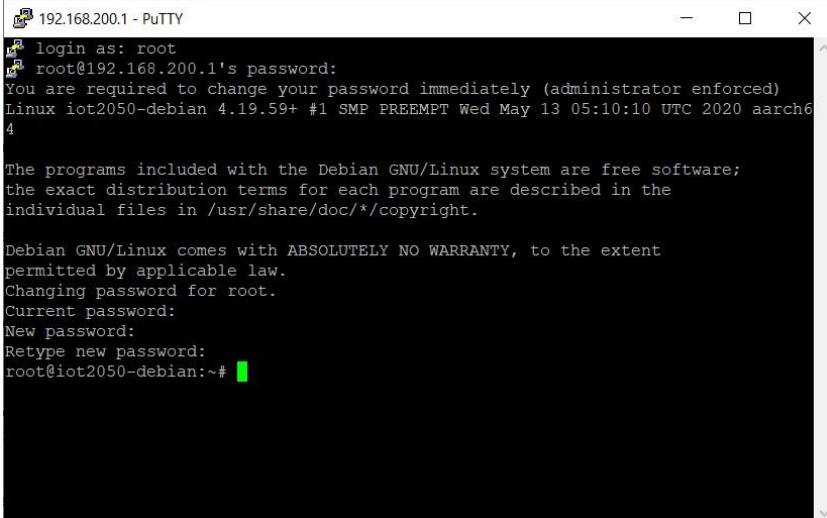
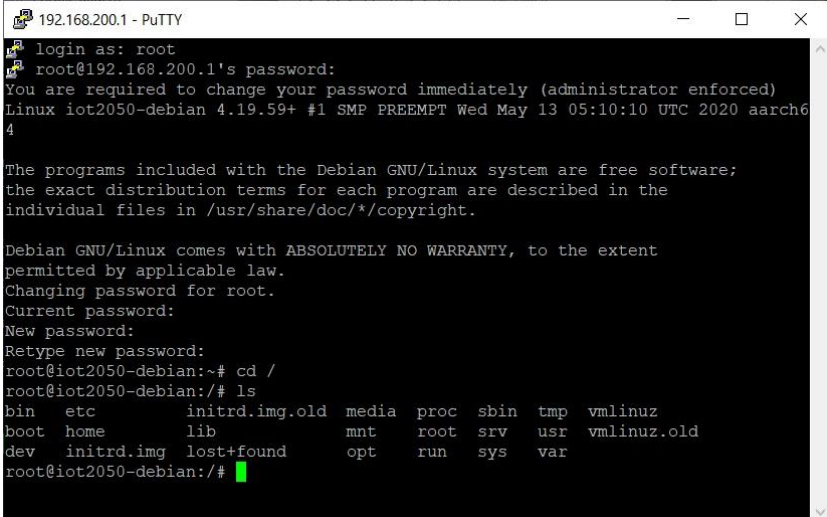
The following table shows how to use Putty.


Table 3-5

No.	Action
1.	Open downloaded Putty.exe with double-click 
2.	Configure the connection as follows: <ol style="list-style-type: none"> 1. Choose the Connection Type "SSH" 2. Enter the IP address 192.168.200.1 3. The port is 22 by default 4. This configuration can be saved as Default Settings (Mark Default Settings and press the "Save" Button) 

No.	Action
3.	<p>Click on "Open" button for opening the communication to the SIMATIC IOT2050 via SSH.</p> 
4.	<p>Connecting the first time via SSH a Warning dialog will appear. It is necessary to update the SSH key. Press the "Yes" button.</p> 

No.	Action
5.	<p data-bbox="518 306 949 336">If once confirmed a login dialog appears</p>  <p>The screenshot shows a PuTTY terminal window titled '192.168.200.1 - PuTTY'. The terminal displays the prompt 'login as: ' followed by a green cursor. The background is black, and the text is white.</p>
6.	<p data-bbox="518 960 1197 1043">Type "root" and press the Enter key Type "root" for the password and Enter key You are prompted to change the root password at the first login</p>  <p>The screenshot shows a PuTTY terminal window titled '192.168.200.1 - PuTTY'. The terminal displays the following text: login as: root root@192.168.200.1's password: You are required to change your password immediately (administrator enforced) Linux iot2050-debian 4.19.59+ #1 SMP PREEMPT Wed May 13 05:10:10 UTC 2020 aarch64 The programs included with the Debian GNU/Linux system are free software; the exact distribution terms for each program are described in the individual files in /usr/share/doc/*/copyright. Debian GNU/Linux comes with ABSOLUTELY NO WARRANTY, to the extent permitted by applicable law. Changing password for root. Current password: The terminal shows a green cursor after the 'Current password:' prompt.</p>

No.	Action
7.	<p>Change the password for the login "root":</p> <ol style="list-style-type: none"> 1. Type in the current password ("root") 2. Set a new password (input is hidden) 3. Confirm the password (input is hidden) 
8.	<p>Now a few Linux commands can be tested.</p> <p>For example, "cd /" to get in the root file system and "ls" to list the folders in the current directory</p> 

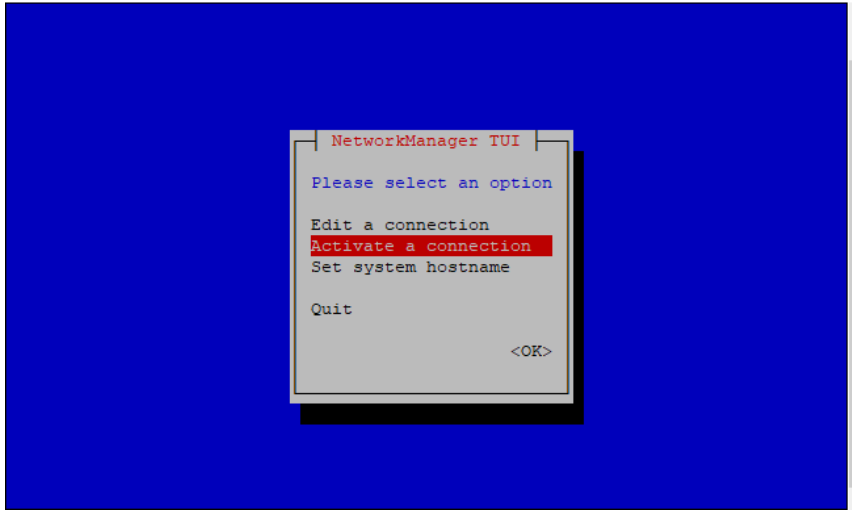
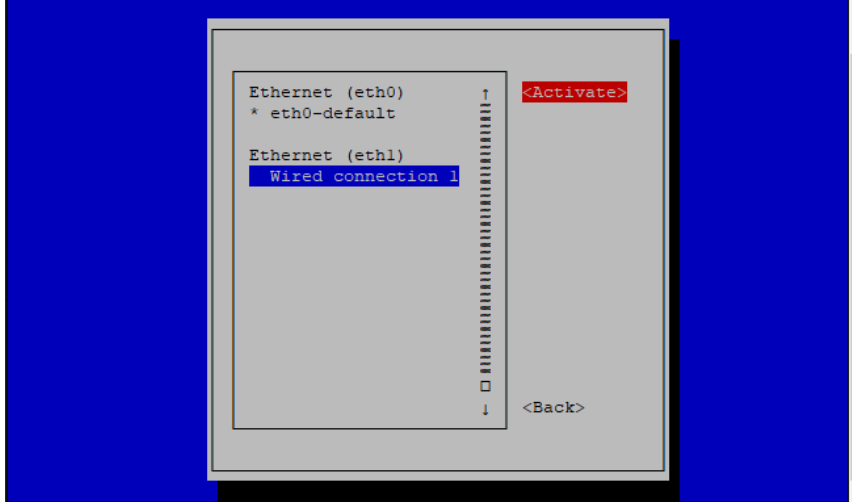
No.	Action
9.	<p>To create another user type “adduser” and the name of the user you want to add Enter password for the user.</p>  <pre> root@iot2050-debian:~# adduser siemens Adding user `siemens' ... Adding new group `siemens' (1000) ... Adding new user `siemens' (1000) with group `siemens' ... Creating home directory `/home/siemens' ... Copying files from `/etc/skel' ... New password: Retype new password: passwd: password updated successfully Changing the user information for siemens Enter the new value, or press ENTER for the default Full Name []: Siemens Room Number []: Work Phone []: Home Phone []: Other []: Is the information correct? [Y/n] Y root@iot2050-debian:~# </pre> <p>You can add the user to sudo group by typing “adduser siemens sudo”</p>  <pre> root@iot2050-debian:~# adduser siemens sudo Adding user `siemens' to group `sudo' ... Adding user siemens to group sudo Done. root@iot2050-debian:~# </pre>

3.2.3 Setting up network interfaces

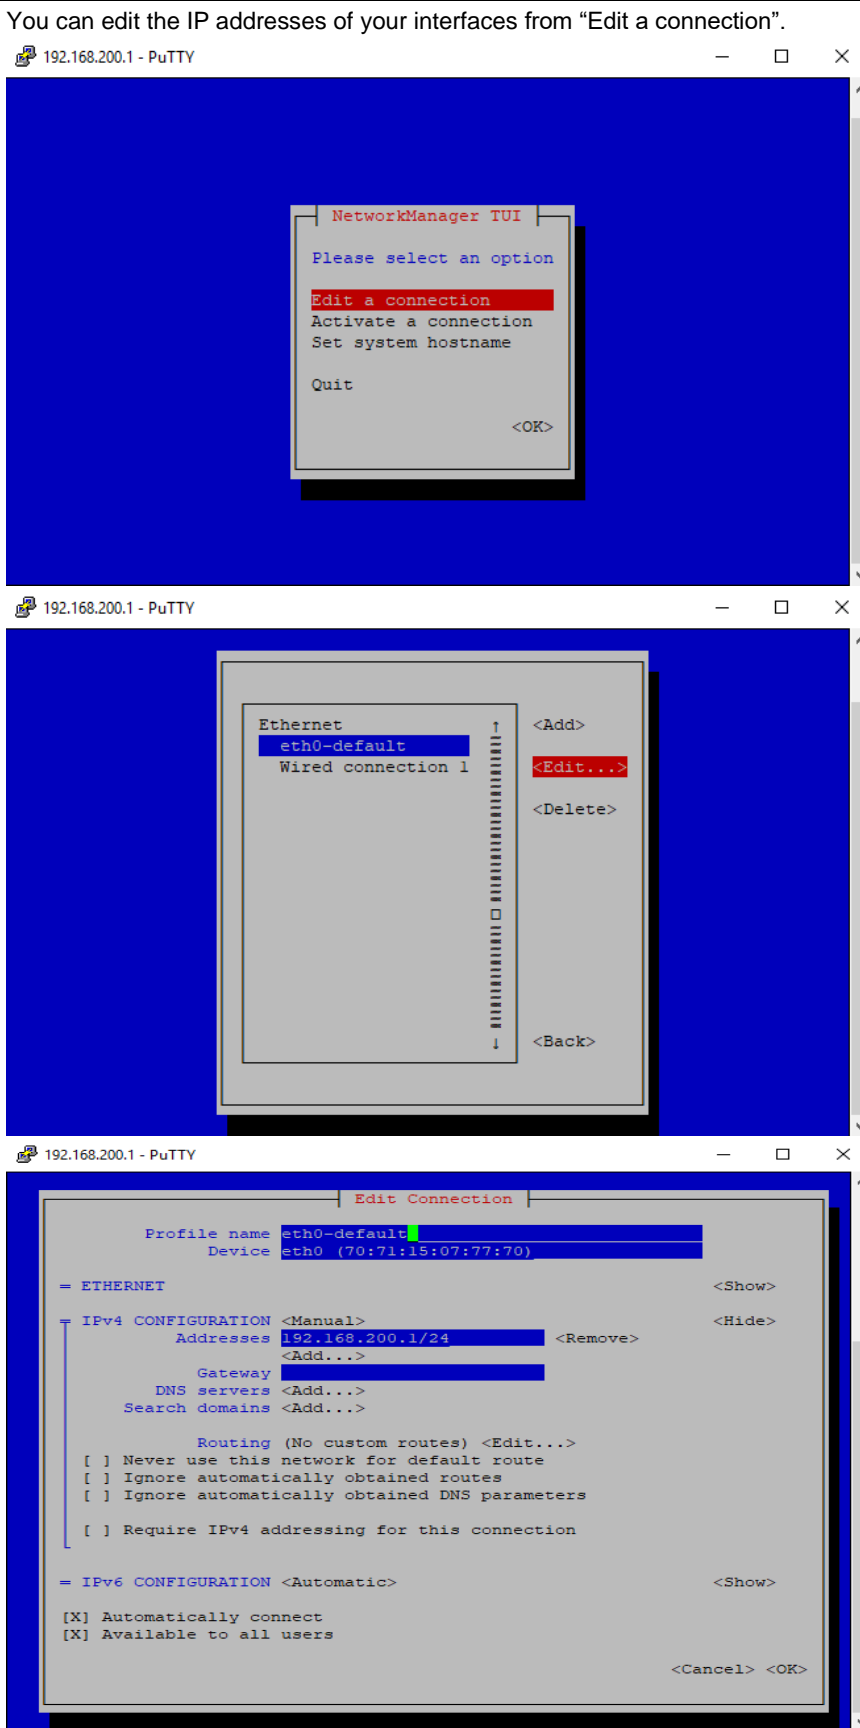
In the default settings of the SIMATIC IOT2050's Image, the IP address is set to **192.168.200.1**. Thus, if another static IP address or a DHCP address is required, this can be set with the **nmtui** tool

The following table displays the procedure for configuring the IP address settings.

Table 3-6

No.	Action
1.	Open a valid serial Putty connection and login as root
2.	<p>Type in "nmtui" to open the network manager tool, navigate to "Activate a connection" and press "Enter"</p> 
3.	<p>Select the interfaces to active. eth0 is activated as default eth1 is deactivated as default</p> 

4. You can edit the IP addresses of your interfaces from "Edit a connection".

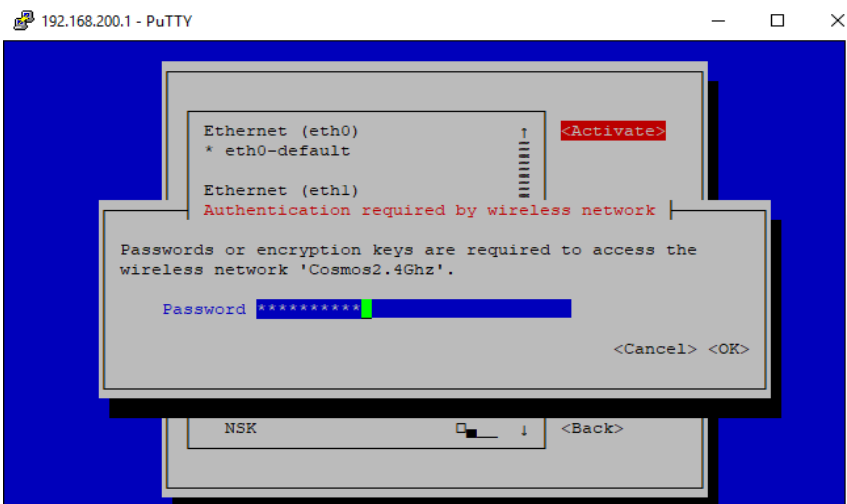
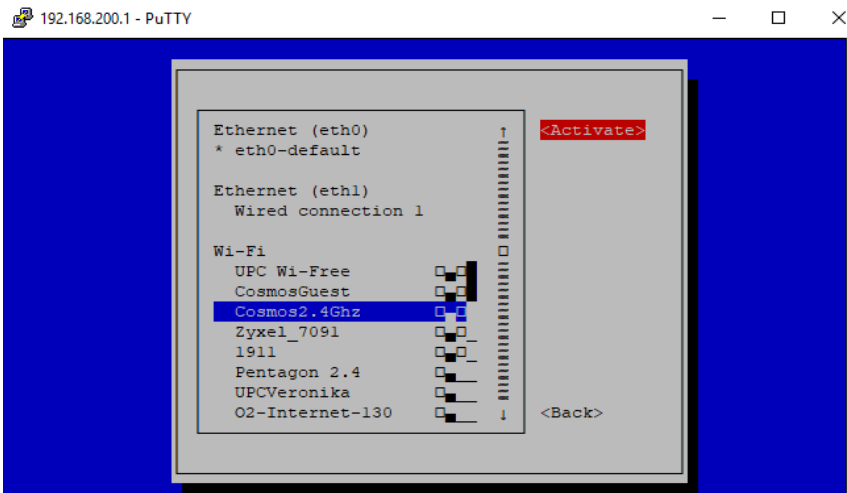


The screenshots show the NetworkManager TUI interface in a PuTTY window. The first screenshot shows the main menu with the following options: "Edit a connection", "Activate a connection", "Set system hostname", and "Quit". The second screenshot shows the list of connections with "eth0-default" selected and the "Edit..." button highlighted. The third screenshot shows the "Edit Connection" dialog box with the following configuration options:

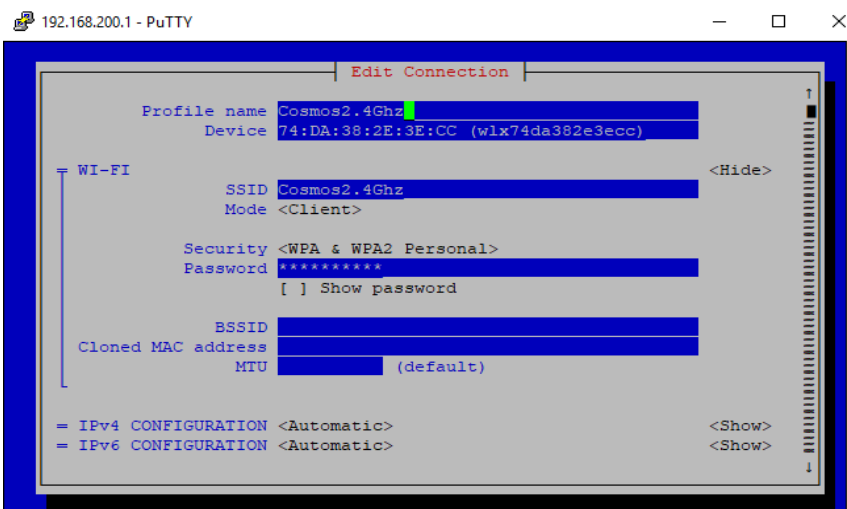
- Profile name: eth0-default
- Device: eth0 (70:71:15:07:77:70)
- ETHERNET configuration:
 - IPv4 CONFIGURATION: Manual
 - Addresses: 192.168.200.1/24
 - Gateway:
 - DNS servers:
 - Search domains:
 - Routing (No custom routes):
 - [] Never use this network for default route
 - [] Ignore automatically obtained routes
 - [] Ignore automatically obtained DNS parameters
 - [] Require IPv4 addressing for this connection
 - IPv6 CONFIGURATION: Automatic
 - [X] Automatically connect
 - [X] Available to all users

5.

You can connect the IOT2050 to Wireless Access Point via USB Wifi Dongle. Insert your USB wifi dongle to IOT2050 and go to "Activate a connection" and select the Wireless AP to connect and provide the password.



To make changes in your Wireless Connection, go to "Edit a connection". Here you can make all the changes you needed.

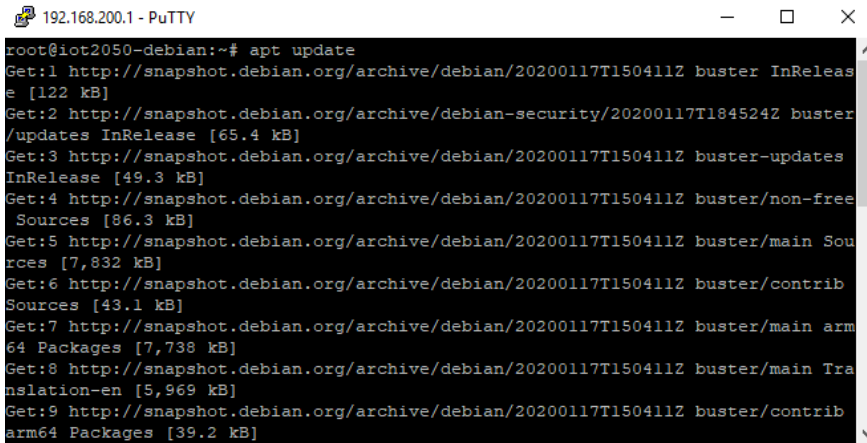
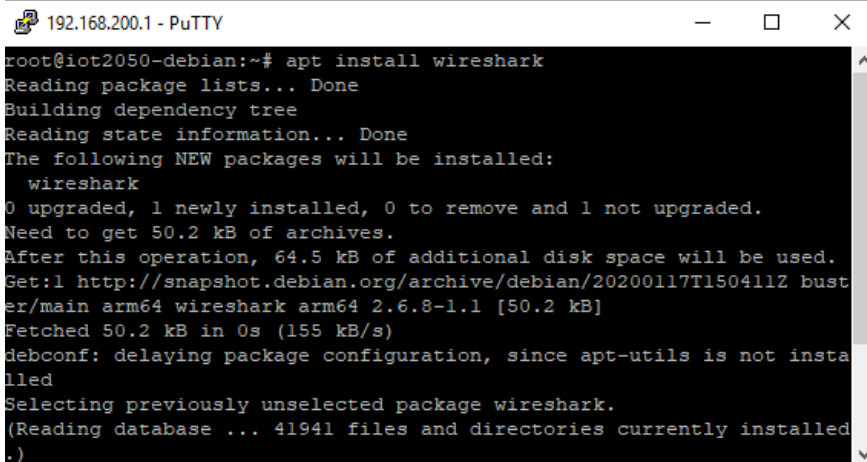


3.2.4 Install new software packages on the SIMATIC IOT2050

Provided example image includes apt package manager so that by using apt package manager new software can be installed on SIMATIC IOT2050.

The following table shows how to install new software packages on the SIMATIC IOT2050.

Table 3-7

No.	Action
1.	Open a valid serial Putty connection and login as root
2.	<p>Before installing any software package, update repositories by typing “apt update”</p> 
3.	<p>Type “apt install <nameofsoftware>” For example: install wireshark – it is a software to track network packages. Accept the licenses during installation.</p> 
4.	Type “apt purge <nameofsoftware>” to completely remove the software with its configuration file.

4 Checklist

This chapter contains a Checklist which summarizes all important steps in this Setting up.

Table 4-1

No.	Action
1.	Download the software listed
2.	Write the image to the µSD Card
3.	Insert the µSD-Card to the SIMATIC IOT2050
4.	Connect the Power Supply
5.	Establish a SSH with PuTTY
6.	Setting up network interfaces
7.	Install new software package on the SIMATIC IOT2050

5 Related links

Table 5-1

	Topic
\1\	SIMATIC IOT2050 forum https://support.industry.siemens.com/tf/ww/en/threads/309w
\2\	Download SD-Card Example Image https://support.industry.siemens.com/cs/ww/en/view/109780231
\3\	Operating Instructions https://support.industry.siemens.com/cs/ww/en/view/109779016

6 History

Table 6-1

Version	Date	Modifications
V1.0	06/2020	First version