

Small OS Design

By Mahmoud Sarhan

GitHub Repo: <https://github.com/MahmoudMatarawy/small-os>

PDF:

<https://github.com/MahmoudMatarawy/small-os/blob/main/design%20doc/Small%20OS%20Design.pdf>

Table of content:

1. Detailed Requirements
2. Layered architecture
3. System module
 1. Module architecture
 2. MCAL APIs
 - 3.2.1 : DIO API
 - 3.2.1.1 : Flowchart
 - 3.2.1.2 : Type definitions
 - 3.2.1.3 : Services
 - 3.2.2 : TIMER API
 - 3.2.2.1 : Flowchart
 - 3.2.2.2 : Type definitions
 - 3.2.2.3 : Services
 - 3.2.3 : External interrupt API
 - 3.2.3.1 : Flowchart
 - 3.2.3.2 : Type definitions
 - 3.2.3.3 : Services
 3. HAL APIs
 - 3.3.1 : LED API
 - 3.3.1.1 : Flowchart
 - 3.3.1.2 : Type definitions
 - 3.3.1.3 : Services
 - 3.3.2 : Button API
 - 3.3.2.1 : Flowchart
 - 3.3.2.2 : Type definitions
 - 3.3.2.3 : Services
 - 3.3.3 : External interrupt manager API
 - 3.3.3.1 : Flowchart
 - 3.3.3.2 : Type definitions
 - 3.3.3.3 : Services
 - 3.3.4 : Timer manager API
 - 3.3.4.1 : Flowchart

3.3.4.2 : Type definitions
3.3.4.3 : Services

4. SERV APIs

3.4.1 : SOS API

3.4.1.1 : Flowchart

3.4.1.2: Type definitions

3.4.1.3: Services

5. APP APIs

3.5.1 : APP API

3.4.1.1 : Flowchart


3.4.1.2: Type definitions

3.4.1.3: Services

1 : Detailed Requirements


1. Implement an application that calls the SOS module and use 2 tasks
 1. Task 1: Toggle LED_0 (Every 300 Milliseconds)
 2. Task 2: Toggle LED_1 (Every 500 Milliseconds)
2. Make sure that these tasks occur periodically and forever
3. When pressing PBUTTON0, the SOS will stop
4. When Pressing PBUTTON1, the SOS will run

2 : Layered architecture

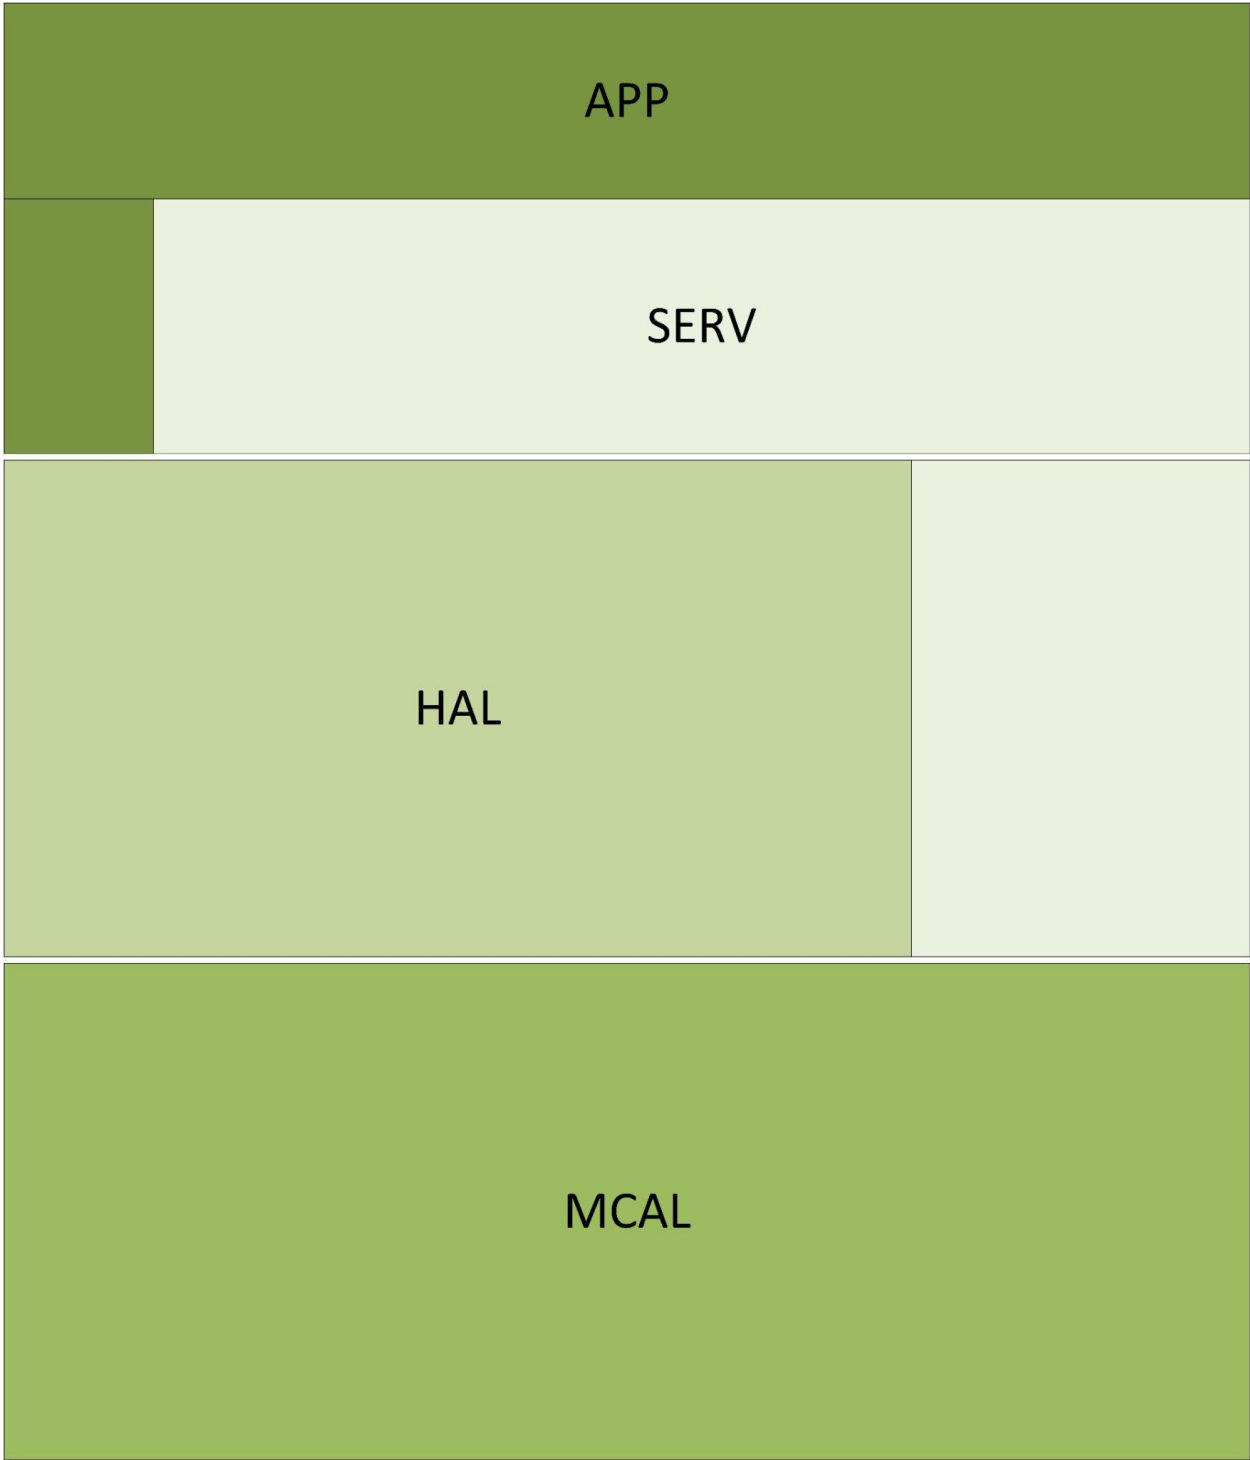

3 : System modules




3.1: Module architecture

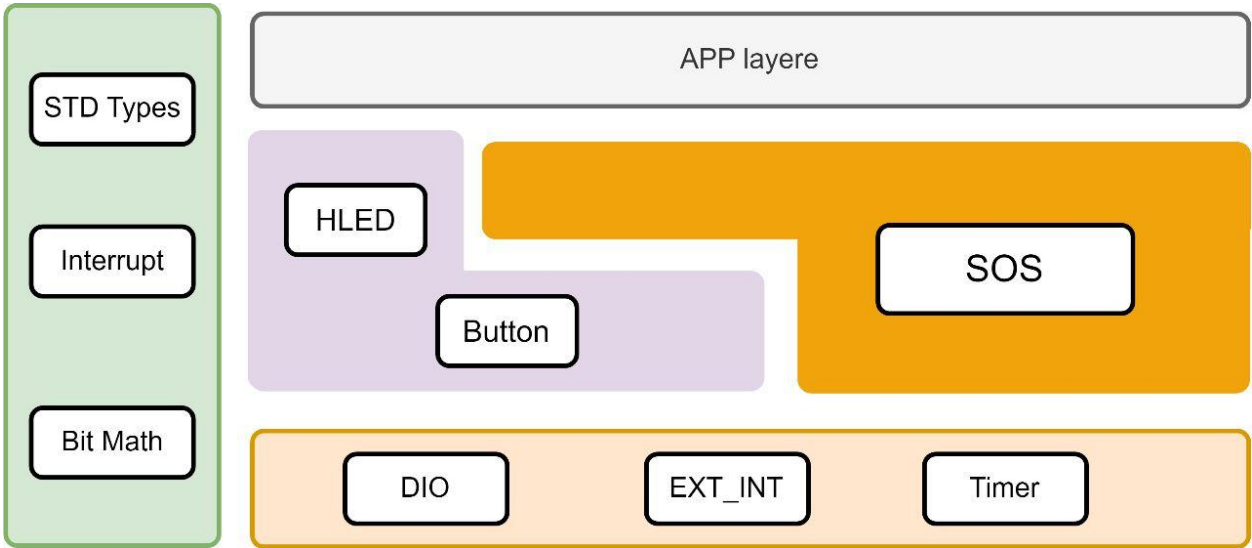

3.2: MCAL APIs

3.2.1: DIO API:

3.2.1.1 :Flowcharts:

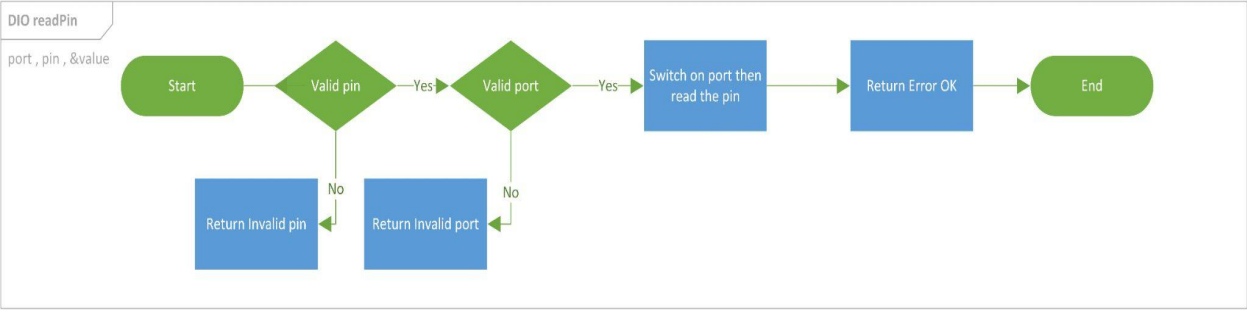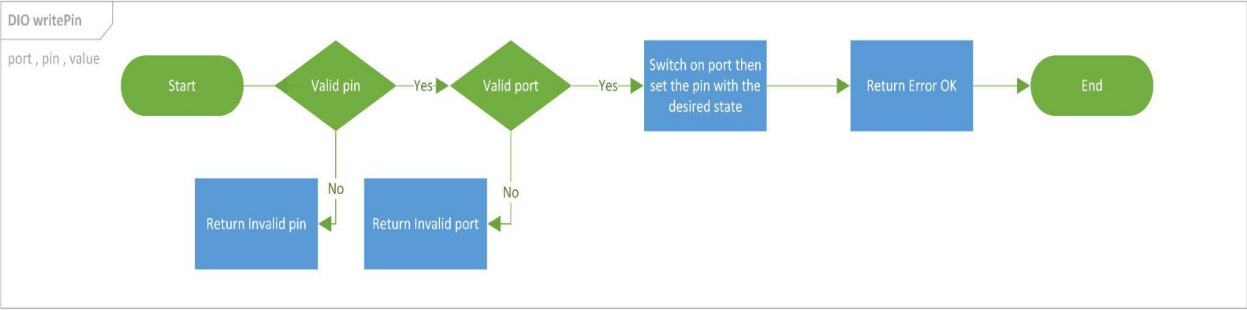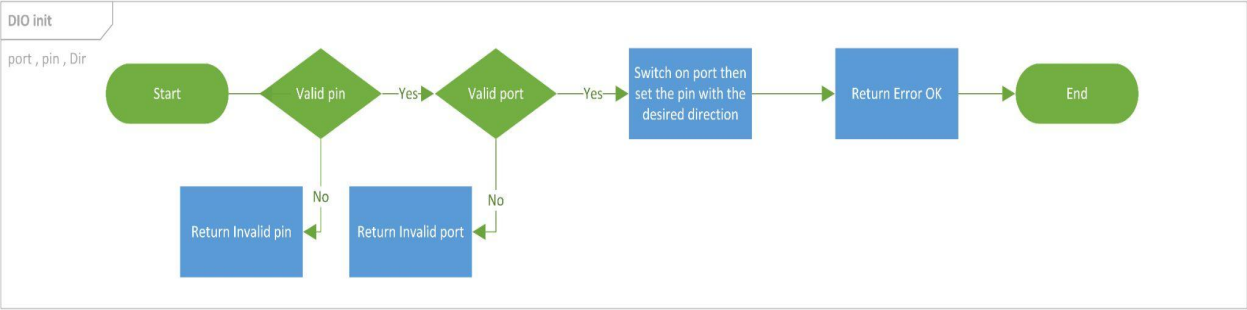

3.2.1.2 : Type definitions:

- en_dioPinsType

Name	en_dioPinsType
------	----------------

Type	Enumeration
Range	Shall contain all pins ID
Description	en_dioPinsType
Available via	dio.h

- en_dioPortsType

Name	en_dioPortsType
Type	Enumeration
Range	Shall contain all ports ID
Description	en_dioPortsType
Available via	dio.h

- u8_en_dioErrors

Name	u8_en_dioErrorsType		
Type	Enumeration		
Range	DIO_E_OK	0x00	DIO error OK
	DIO_InvalidPin	0x01	DIO error, invalid pin number.
	DIO_InvalidPort	0x02	DIO error, invalid port number.
Description	u8_en_dioErrors		
Available via	dio.h		

- u8_en_dioLevelType

Name	u8_en_dioLevelType
------	--------------------

Type	Enumeration		
Range	STD_LOW	0x00	Physical state 0V
	STD_HIGH	0x01	Physical state 5V or 3.3V.
Description	u8_en_dioLevelType		
Available via	dio.h		

- u8_en_dioDirType

Name	u8_en_dioDirType		
Type	Enumeration		
Range	STD_INPUT	0x00	Set pin as input pin
	STD_OUTPUT	0x01	Set pin as output pin
Description	u8_en_dioDirType		
Available via	dio.h		

3.2.1.3 : Services affecting the hardware unit:

- DIO_readPIN

Service name	DIO_readPIN		
Syntax	<pre>u8_en_dioErrors DIO_readPIN (en_dioPortsType port, en_dioPinsType pin, uint8_t* value);</pre>		
Parameters (in)	Port, pin	Channel ID	
	value	Pointer to store the level	STD_HIGH
			STD_LOW

Return	u8_en_dioErrors	DIO_E_OK
		DIO_InvalidPin
		DIO_InvalidPort
Description	This Function gets the level of the pin	

- This function shall return DIO_InvalidPin if pin number is invalid.
- This function shall return DIO_InvalidPort if port number is invalid.

- DIO_writePIN

Service name	DIO_writePIN		
Syntax	u8_en_dioErrors DIO_writePIN (en_dioPortsType port, en_dioPinsType pin, u8_en_dioLevelType state);		
Parameters (in)	Port, pin	Channel ID	
	state	Value to be set	STD_HIGH
			STD_LOW
Return	u8_en_dioErrors	DIO_E_OK	
		DIO_InvalidPin	
		DIO_InvalidPort	
Description	This Function sets the level of the pin		

- This function shall return DIO_InvalidPin if pin number is invalid.
- This function shall return DIO_InvalidPort if port number is invalid.

- DIO_init





Service name	DIO_init		
Syntax	u8_en_dioErrors DIO_init (en_dioPortsType port, en_dioPinsType pin, u8_en_dioDirType direction);		

);						
Parameters (in)	Port, pin	Channel ID					
	direction	Value to be set	STD_INPUT				
			STD_OUTPUT				
Return	<table><tr><td rowspan="3">DIO_Errors</td><td>DIO_E_OK</td></tr><tr><td>DIO_InvalidPin</td></tr><tr><td>DIO_InvalidPort</td></tr></table>			DIO_Errors	DIO_E_OK	DIO_InvalidPin	DIO_InvalidPort
					DIO_Errors	DIO_E_OK	
						DIO_InvalidPin	
				DIO_InvalidPort			
Description	This Function sets the Direction of the pin						

- This function shall return DIO_InvalidPin if pin number is invalid
- This function shall return DIO_InvalidPort if port number is invalid.

3.2.2: TIMER API:

3.2.2.1 :Flowcharts:

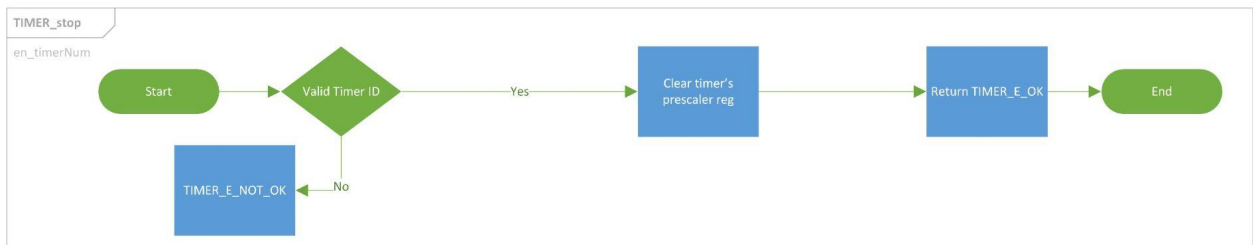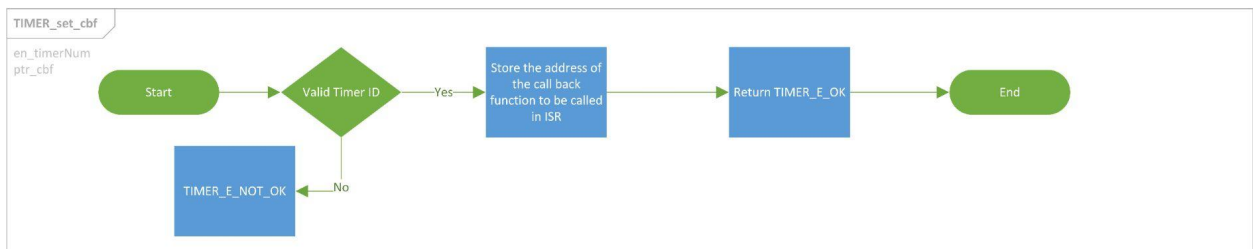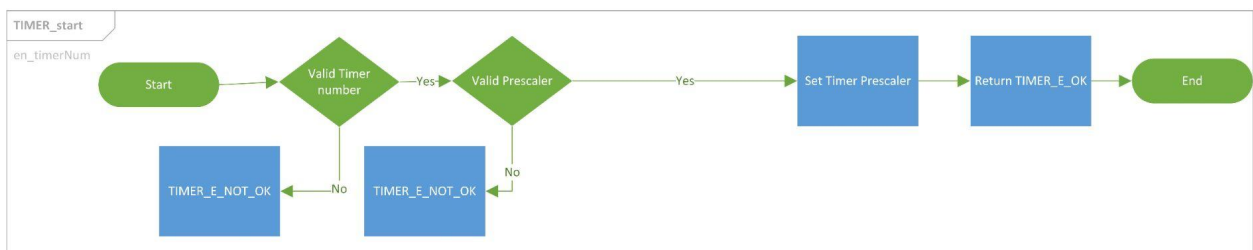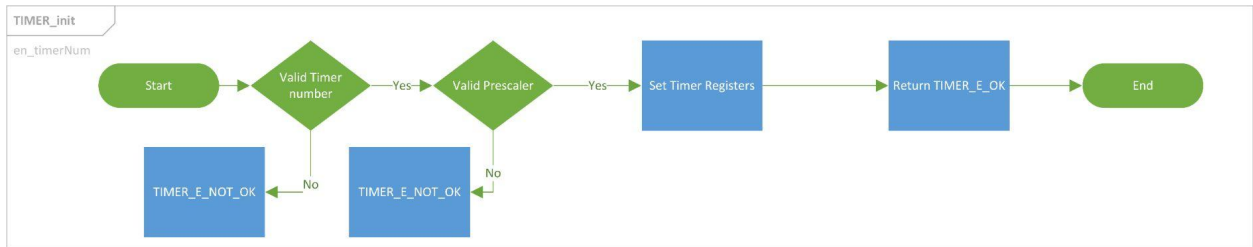

3.2.2.2 : Type definitions:

- st_timer_config_t

Name	st_timer_config_t
Type	Structure
Range	Shall contain required Timers configuration
Description	st_timer_config_t
Available via	timer_cfg.h

- u8_timerErrors_t

Name	u8_timerErrors_t		
Type	Enumeration		
Range	TIMER_E_OK	0x00	Timer error OK
	TIMER_E_NOT_OK	0x03	Timer error
Description	u8_timerErrors_t		
Available via	timer_types.h		

- en_timer_num_t

Name	en_timer_num_t
Type	Enumeration
Range	Shall contain all timers IDs
Description	en_timer_num_t
Available via	timer_types.h

- en_timer_clock_t

Name	en_timer_clock_t
------	------------------

Type	Enumeration
Range	Shall contain all timers prescalers
Description	en_timer_clock_t
Available via	timer_types.h

- en_timer_interrupt_feature_t

Name	en_timer_interrupt_feature_t
Type	Enumeration
Range	Shall contain enable and disable interrupt feature
Description	en_timer_interrupt_feature_t
Available via	timer_types.h

3.2.2.3 : Services affecting the hardware unit

- TIMER_init

Service name	TIMER_init					
Syntax	u8_timerErrors_t TIMER_init(en_timer_num_t en_timerNum);					
Parameters (in)	en_timerNum	Timer number				
Return	<table><tr><td rowspan="2">u8_timerErrors_t</td><td>TIMER_E_OK</td></tr><tr><td>TIMER_E_NOT_OK</td></tr></table>			u8_timerErrors_t	TIMER_E_OK	TIMER_E_NOT_OK
u8_timerErrors_t	TIMER_E_OK					
	TIMER_E_NOT_OK					
Description	This Function Initialize timer module					

- TIMER_start

Service name	TIMER_start					
Syntax	u8_timerErrors_t TIMER_start(en_timer_num_t en_timerNum);					
Parameters (in)	en_timerNum	Timer number				
Return	<table><tr><td rowspan="2">u8_timerErrors_t</td><td>TIMER_E_OK</td></tr><tr><td>TIMER_E_NOT_OK</td></tr></table>			u8_timerErrors_t	TIMER_E_OK	TIMER_E_NOT_OK
u8_timerErrors_t	TIMER_E_OK					
	TIMER_E_NOT_OK					
Description	This Function starts the timer					

- TIMER_stop

Service name	TIMER_stop					
Syntax	u8_timerErrors_t TIMER_stop(en_timer_num_t en_timerNum);					
Parameters (in)	en_timerNum	Timer number				
Return	<table><tr><td rowspan="2">u8_timerErrors_t</td><td>TIMER_E_OK</td></tr><tr><td>TIMER_E_NOT_OK</td></tr></table>			u8_timerErrors_t	TIMER_E_OK	TIMER_E_NOT_OK
u8_timerErrors_t	TIMER_E_OK					
	TIMER_E_NOT_OK					
Description	This Function stops the timer					





- TIMER_set_cbf

Service name	TIMER_set_cbf	
Syntax	u8_timerErrors_t TIMER_set_cbf(en_timer_num_t en_timerNum, timerCallBack callBackFunction_ptr);	
Parameters (in)	en_timerNum	Timer number
	callBackFunction_ptr	Pointer to the call back function

Return	u8_timerErrors_t	TIMER_E_OK
		TIMER_E_NOT_OK
Description	This Function starts the timer	

3.2.2: External interrupt API:

3.2.2.1 :Flowcharts:

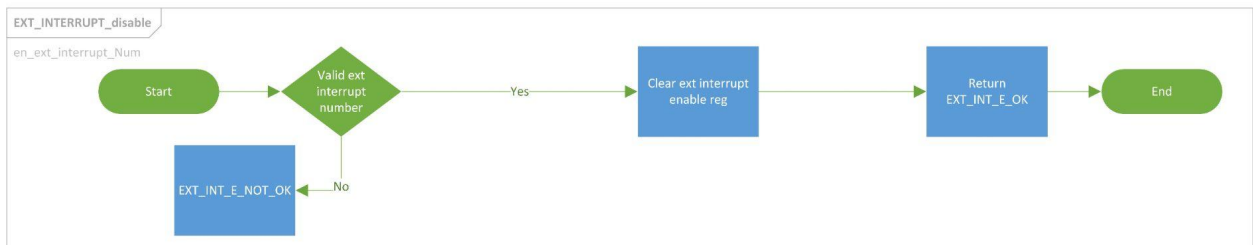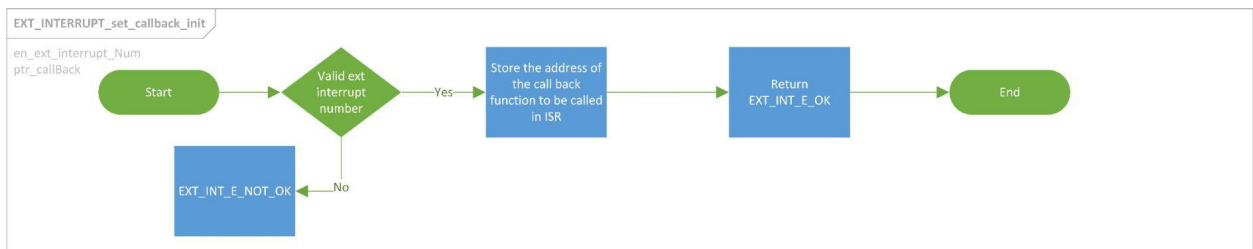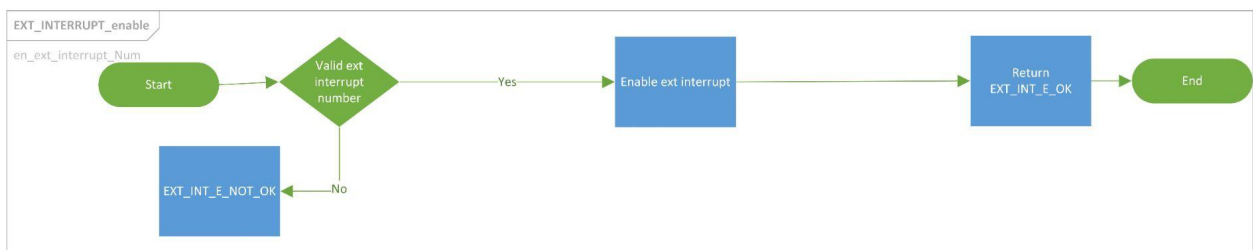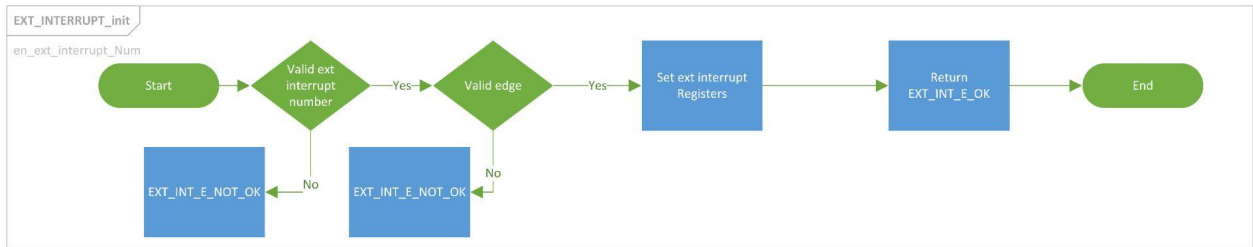

3.2.2.2 : Type definitions:

- `u8_interruptError_t`

Name	u8_interruptError_t		
Type	Enumeration		
Range	EXT_INT_E_OK	0x00	Ext Interrupt error OK
	EXT_INT_E_NOK	0x04	Ext Interrupt error
Description	u8_interruptError_t		
Available via	ext_interrupt_types.h		

- en_ext_interrupt_num_t

Name	en_ext_interrupt_num_t		
Type	Enumeration		
Range	Shall contain all external interrupts IDs		
Description	en_ext_interrupt_num_t		
Available via	ext_interrupt_types.h		

- en_edge_detection_t

Name	en_edge_detection_t		
Type	Enumeration		
Range	Shall contain all external interrupts edge detection cases		
Description	en_edge_detection_t		
Available via	ext_interrupt_types.h		

3.2.2.3 : Services affecting the hardware unit

- EXT_INTERRUPT_init

Service name	EXT_INTERRUPT_init				
Syntax	u8_interruptError_t EXT_INTERRUPT_init(en_ext_interrupt_num_t en_ext_interrupt_num);				
Parameters (in)	en_timerNum	Ext interrupt number			
Return	u8_interruptError_t	<table><tr><td>EXT_INT_E_OK</td></tr><tr><td>EXT_INT_E_NOK</td></tr></table>		EXT_INT_E_OK	EXT_INT_E_NOK
EXT_INT_E_OK					
EXT_INT_E_NOK					
Description	This Function Initialize external interrupt module				

- EXT_INTERRUPT_enable

Service name	EXT_INTERRUPT_enable				
Syntax	u8_interruptError_t EXT_INTERRUPT_enable(en_ext_interrupt_num_t en_ext_interrupt_num);				
Parameters (in)	en_timerNum	Ext interrupt number			
Return	u8_interruptError_t	<table><tr><td>EXT_INT_E_OK</td></tr><tr><td>EXT_INT_E_NOK</td></tr></table>		EXT_INT_E_OK	EXT_INT_E_NOK
EXT_INT_E_OK					
EXT_INT_E_NOK					
Description	This Function enables external interrupt				

- EXT_INTERRUPT_disable

Service name	EXT_INTERRUPT_disable				
Syntax	u8_interruptError_t EXT_INTERRUPT_disable(en_ext_interrupt_num_t en_ext_interrupt_num);				
Parameters (in)	en_timerNum	Ext interrupt number			
Return	u8_interruptError_t	<table><tr><td>EXT_INT_E_OK</td></tr><tr><td>EXT_INT_E_NOK</td></tr></table>		EXT_INT_E_OK	EXT_INT_E_NOK
EXT_INT_E_OK					
EXT_INT_E_NOK					

Description	This Function disables external interrupt
-------------	---


- EXT_INTERRUPT_set_callback_init

Service name	EXT_INTERRUPT_set_callback_init				
Syntax	u8_interruptError_t EXT_INTERRUPT_set_callback_init(en_ext_interrupt_num_t en_ext_interrupt_num, void(*callback)(void));				
Parameters (in)	en_timerNum	Ext interrupt number			
	callback	Pointer to the call back function			
Return	u8_interruptError_t	<table><tr><td>EXT_INT_E_OK</td></tr><tr><td>EXT_INT_E_NOK</td></tr></table>		EXT_INT_E_OK	EXT_INT_E_NOK
EXT_INT_E_OK					
EXT_INT_E_NOK					
Description	This Function saves call back pointer to call it in ISR				

3.3: HAL APIs

3.3.1: LED API:

3.3.1.1 :Flowcharts:

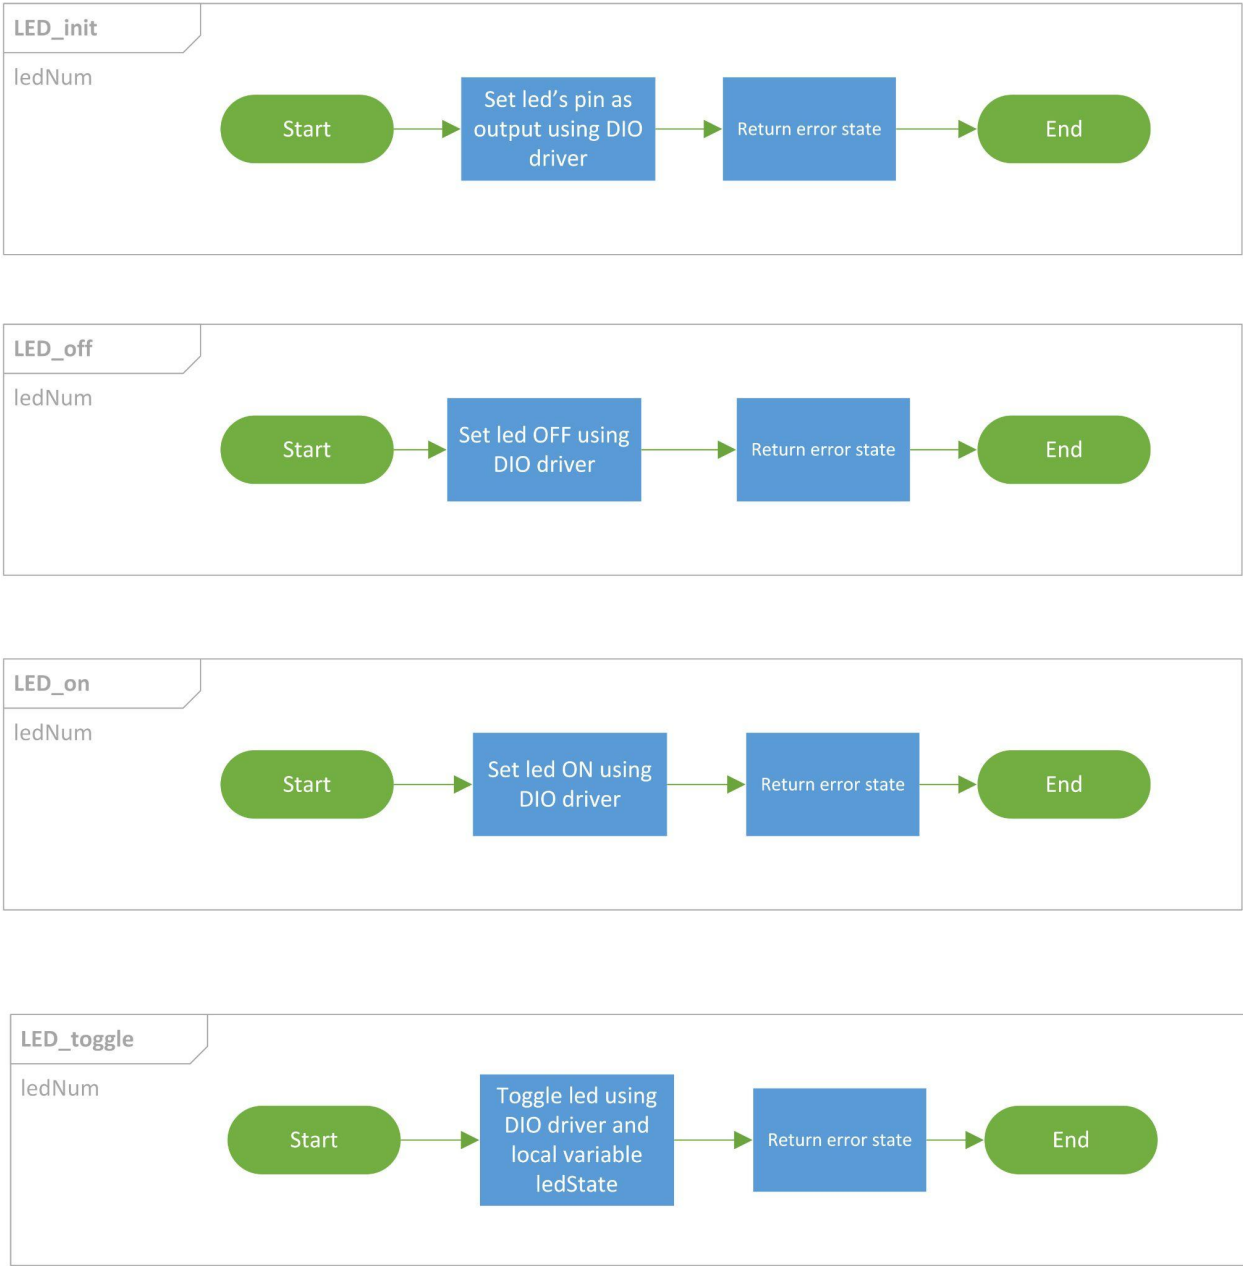

3.3.1.2 : Type definitions:

- st_ledConfig_t

Name	st_ledConfig_t
Type	Structure
Range	Shall contain required LED configuration
Description	st_ledConfig_t
Available via	led_cfg.h

- u8_ledError_t

Name	u8_ledError_t		
Type	Enumeration		
Range	LED_ERROR_OK	0x00	LED error OK
	LED_ERROR_NOT_OK	0x05	LED error
Description	u8_ledError_t		
Available via	led.h		

- en_ledNum_t

Name	en_ledNum_t		
Type	Enumeration		
Range	LED_0	0x00	LED_0
	LED_1	0x01	LED_1
Description	en_ledNum_t		
Available via	led.h		

3.3.1.3 : Services affecting the hardware unit

- LED_init

Service name	LED_init	
Syntax	u8_ledError_t LED_init(en_ledNum_t ledNum);	
Parameters (in)	ledNum	Led number
Return	u8_ledError_t	<div>LED_ERROR_OK</div> <div>LED_ERROR_NOT_OK</div>
Description	This Function Initialize LED module	

- LED_on

Service name	LED_on	
Syntax	u8_ledError_t LED_on(en_ledNum_t ledNum);	
Parameters (in)	ledNum	Led number
Return	u8_ledError_t	<div>LED_ERROR_OK</div> <div>LED_ERROR_NOT_OK</div>
Description	This Function turn on LED	

- LED_off

Service name	LED_off	
Syntax	u8_ledError_t LED_off(en_ledNum_t ledNum);	
Parameters (in)	ledNum	Led number
Return	u8_ledError_t	<div>LED_ERROR_OK</div> <div>LED_ERROR_NOT_OK</div>

Description	This Function turn off LED
-------------	----------------------------

- LED_toggle

Service name	LED_toggle		
Syntax	u8_ledError_t LED_toggle(en_ledNum_t ledNum);		
Parameters (in)	ledNum	Led number	
Return	u8_ledError_t	LED_ERROR_OK	LED_ERROR_NOT_OK
Description	This Function toggles LED		

3.3.2: Button API:

3.3.2.1 :Flowcharts:

3.3.2.2 : Type definitions:

- str_button_t

Name	str_button_t
Type	Structure
Description	This is the type of the external data structure containing the overall configuration data for the Button API
Available via	button.h

- en_btnLevel_t

Name	en_btnLevel_t
Type	Enumeration

Range	BT_PUSH_LEVEL	0x00	Push Level
	BT_RELEASE_LEVEL	0x01	Release Level
Description	Button Level Enum		
Available via	button.h		

- en_btnState_t

Name	en_btnState_t		
Type	Enumeration		
Range	BT_PUSHED	0x00	Pushed Level
	BT_RELEASED	0x01	Released Level
Description	Button state Enum		
Available via	button.h		

3.3.2.3 : Services affecting the hardware unit

- BUTTON_get_state

Service name	BUTTON_get_state	
Syntax	Enu_button_return_state_t button_get_state(str_button_t *ptr_str_btn ,button_state_t *ptr_enu_btn_state);	
Parameters (in)	ptr_str_btn	Pointer to the configuration structure
	ptr_enu_btn_state	Pointer where to store the state
Return	Enu_button_return_state_t	BUTTON_E_OK
		BUTTON_E_NOK
Description	This Function init a button without an external interrupt	

- BUTTON_init

Service name	BUTTON_init				
Syntax	Enu_button_return_state_t button_init(str_button_t *ptr_str_btn);				
Parameters (in)	ptr_str_btn	Pointer to the configuration structure			
Return	Enu_button_return_state_t	<table><tr><td>BUTTON_E_OK</td></tr><tr><td>BUTTON_E_NOK</td></tr></table>		BUTTON_E_OK	BUTTON_E_NOK
BUTTON_E_OK					
BUTTON_E_NOK					
Description	This Function init a button without an external interrupt				

- BUTTON_with_int

Service name	BUTTON_with_int		
Syntax	Enu_button_return_state_t button_with_INT(str_button_t *ptr_str_btn , void (*func)(void));		
Parameters (in)	ptr_str_btn	Pointer to the configuration structure	
	func	Pointer to the callback function	
Return	Enu_button_return_state_t	BUTTON_E_OK	
		BUTTON_E_NOK	
Description	This Function init a button with an external interrupt		

- BUTTON_enable_INT

Service name	Button_enable_INT		
Syntax	Enu_button_return_state_t button_enable_INT(str_button_t *ptr_str_btn);		
Parameters (in)	ptr_str_btn	Pointer to the configuration structure	
Return	Enu_button_return_state_t	BUTTON_E_OK	
		BUTTON_E_NOK	

Description	This Function enable a button with an external interrupt
-------------	--


- BUTTON_disable_INT





Service name	Button_disable_INT				
Syntax	Enu_button_return_state_t button_disable_INT(str_button_t *ptr_str_btn);				
Parameters (in)	ptr_str_btn	Pointer to the configuration structure			
Return	Enu_button_return_state_t	<table><tr><td>BUTTON_E_OK</td></tr><tr><td>BUTTON_E_NOK</td></tr></table>		BUTTON_E_OK	BUTTON_E_NOK
BUTTON_E_OK					
BUTTON_E_NOK					
Description	This Function disable a button with an external interrupt				

3.4: SERV APIs

3.4.1: SOS API:

3.4.1.1 :Flowcharts:

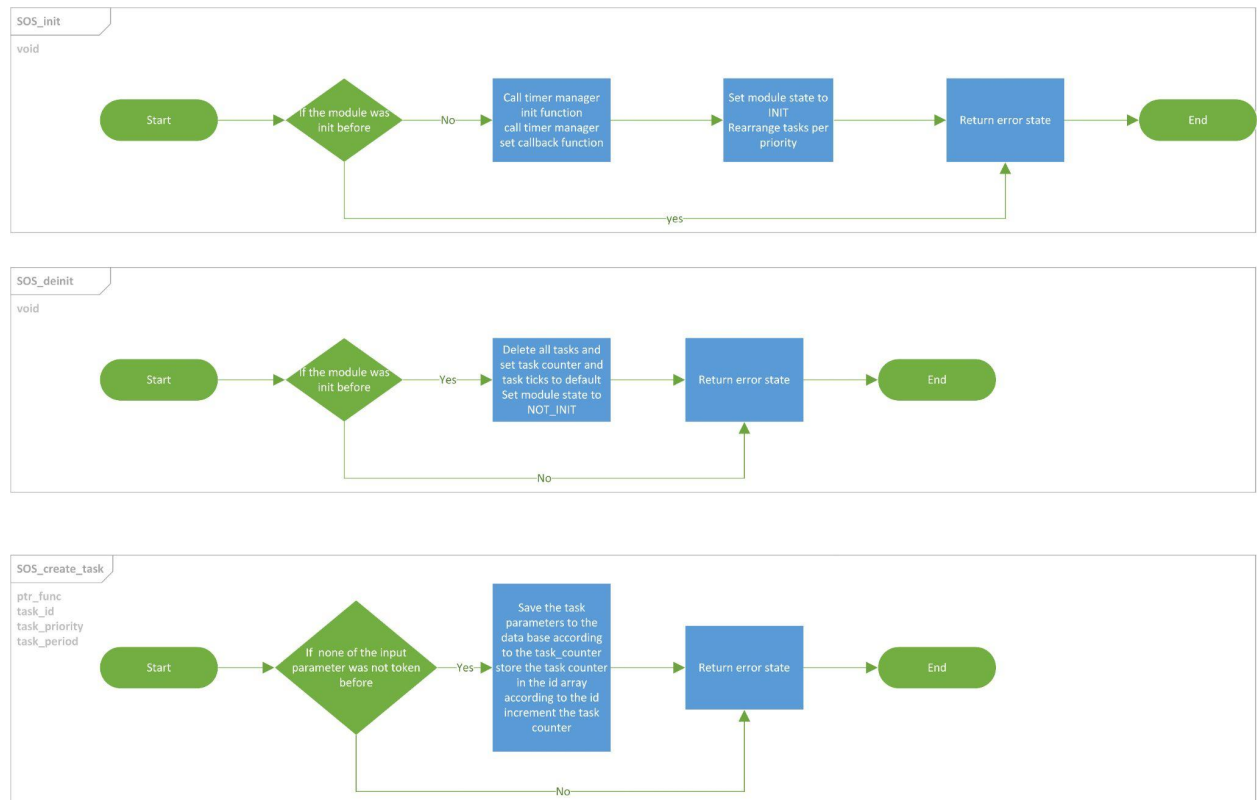

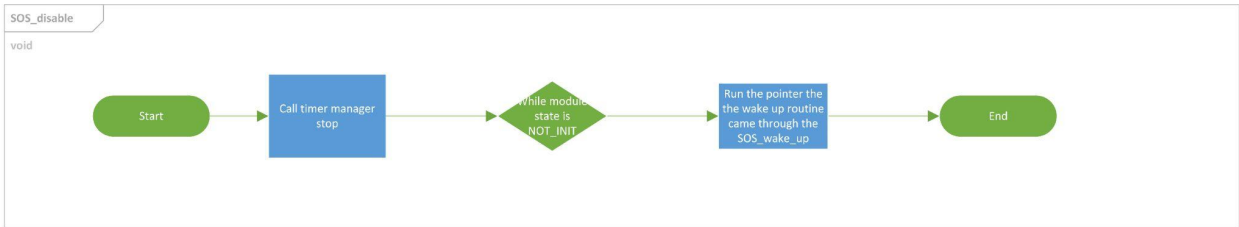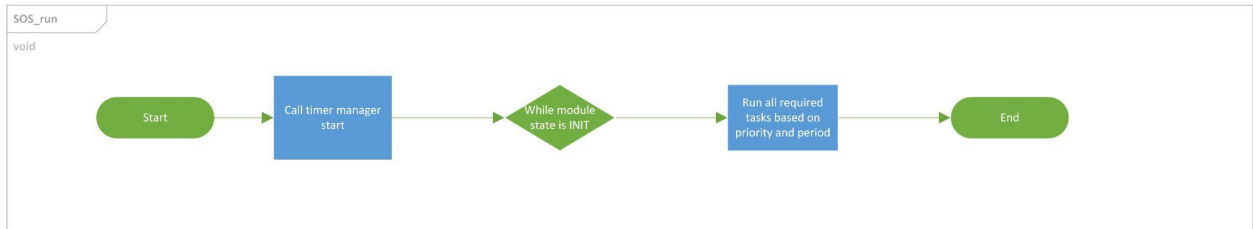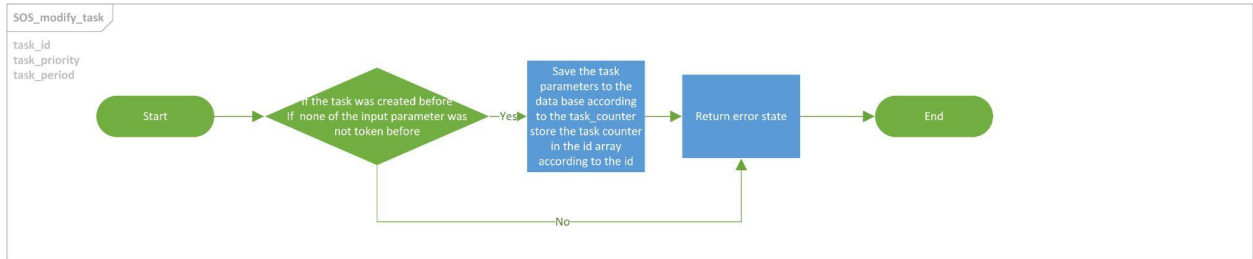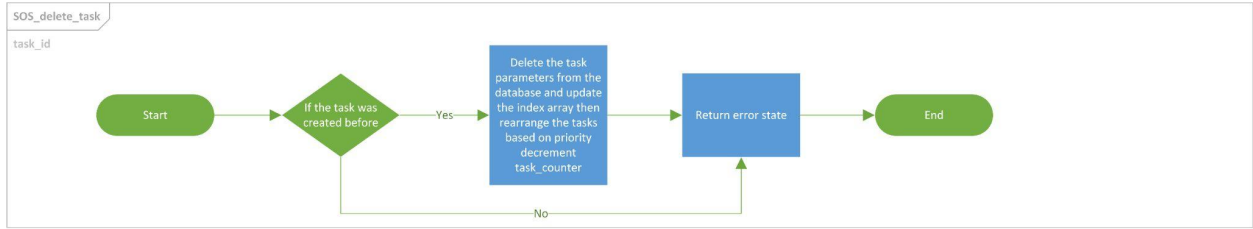

3.4.1.2 : Type definitions:

- st_task_config_t

Name	st_task_config_t
Type	Structure
Description	This is the type of the data structure containing the overall configuration data for the SOS API
Available via	sos_types.h

- arr_st_gs_task_config

Name	arr_st_gs_task_config
Type	Array of Structures
Description	This is the type of the data structure containing the overall configuration data for the application tasks
Available via	sos.c

- u8_gs_arr_index_id

Name	u8_gs_arr_index_id
Type	Array
Description	This is the type of the data containing the overall IDs indexes data for the application tasks
Available via	sos.c

- enu_system_status_t

Name	enu_system_status_t					
Type	Enumeration					
Range	<table><tr><td>SOS_STATUS_SUCCESS</td><td>0x00</td><td>SOS error OK</td></tr></table>			SOS_STATUS_SUCCESS	0x00	SOS error OK
SOS_STATUS_SUCCESS	0x00	SOS error OK				

	<table><tr><td>SOS_STATUS_INVALID_STATE</td><td>0x07</td><td>SOS error</td></tr></table>	SOS_STATUS_INVALID_STATE	0x07	SOS error
SOS_STATUS_INVALID_STATE	0x07	SOS error		
Description	enu_system_status_t			
Available via	sos_types.h			

3.4.1.3 : Services affecting the hardware unit

- SOS_init

Service name	SOS_init			
Syntax	enu_system_status_t SOS_init(void);			
Parameters (in)	void			
Return	<table> <tr> <td rowspan="2">enu_system_status_t</td><td>SOS_STATUS_SUCCESS</td></tr> <tr> <td>SOS_STATUS_INVALID_STATE</td></tr> </table>	enu_system_status_t	SOS_STATUS_SUCCESS	SOS_STATUS_INVALID_STATE
enu_system_status_t	SOS_STATUS_SUCCESS			
	SOS_STATUS_INVALID_STATE			
Description	This Function Initialize SOS module			

- SOS_deinit

Service name	SOS_deinit			
Syntax	enu_system_status_t SOS_deinit(void);			
Parameters (in)	void			
Return	<table> <tr> <td rowspan="2">enu_system_status_t</td><td>SOS_STATUS_SUCCESS</td></tr> <tr> <td>SOS_STATUS_INVALID_STATE</td></tr> </table>	enu_system_status_t	SOS_STATUS_SUCCESS	SOS_STATUS_INVALID_STATE
enu_system_status_t	SOS_STATUS_SUCCESS			
	SOS_STATUS_INVALID_STATE			
Description	This Function DeInitialize SOS module			

- SOS_run

Service name	SOS_run
--------------	---------

Syntax	enu_system_status_t SOS_run(void);
Parameters (in)	void
Return	void
Description	This Function Runs SOS module

- SOS_disable

Service name	SOS_disable
Syntax	enu_system_status_t SOS_disable(void);
Parameters (in)	void
Return	void
Description	This Function Disable SOS module

- SOS_change_state

Service name	SOS_change_state
Syntax	enu_system_status_t SOS_change_state(uint8_t u8_state);
Parameters (in)	State which to store in the SOS module state
Return	void
Description	This Function Change the state of the SOS module to switch between sos_run and sos_disable

- SOS_wake_up

Service name	SOS_wake_up
Syntax	enu_system_status_t SOS_wake_up(ptr_function_name_t ptr_function_name);
Parameters (in)	Ptr_function_name pointer to the wake-up routine
Return	void
Description	This Function to switch from sos_disable to sos_run

- SOS_delete_task

Service name	SOS_delete_task	
Syntax	enu_system_status_t SOS_delete_task(uint8_t u8_task_id);	
Parameters (in)	U8_task_id the task id to be deleted	
Return	enu_system_status_t	<div>SOS_STATUS_SUCCESS</div> <div>SOS_STATUS_INVALID_STATE</div>
Description	This Function deletes a task from SOS module	

- SOS_modify_task

Service name	SOS_modify_task	
Syntax	enu_system_status_t SOS_modify_task(uint8_t u8_task_id , uint8_t u8_task_periority,uint16_t u16_task_period);	
Parameters (in)	U8_task_id the task ID to be modified	
	U8_task_periority the new task priority	
	U16_task_period the new task period	
Return	enu_system_status_t	<div>SOS_STATUS_SUCCESS</div> <div>SOS_STATUS_INVALID_STATE</div>
Description	This Function modify a task in SOS module	

- SOS_create_task


Service name	SOS_create_task	
Syntax	enu_system_status_t SOS_create_task(ptr_function_name_t ptr_function_name , uint8_t u8_task_id , uint8_t u8_task_periority,uint16_t u16_task_period);	
Parameters (in)	ptr_function_name, Pointer to the task	

	U8_task_id, the task ID to be created	
	U8_task_periority, the task priority	
	U16_task_period, the task period	
Return	enu_system_status_t	<div>SOS_STATUS_SUCCESS</div> <div>SOS_STATUS_INVALID_STATE</div>
Description	This Function creates a task in SOS module	

3.5: APP APIs

3.5.1: APP API:

3.5.1.1 :seq diagram:

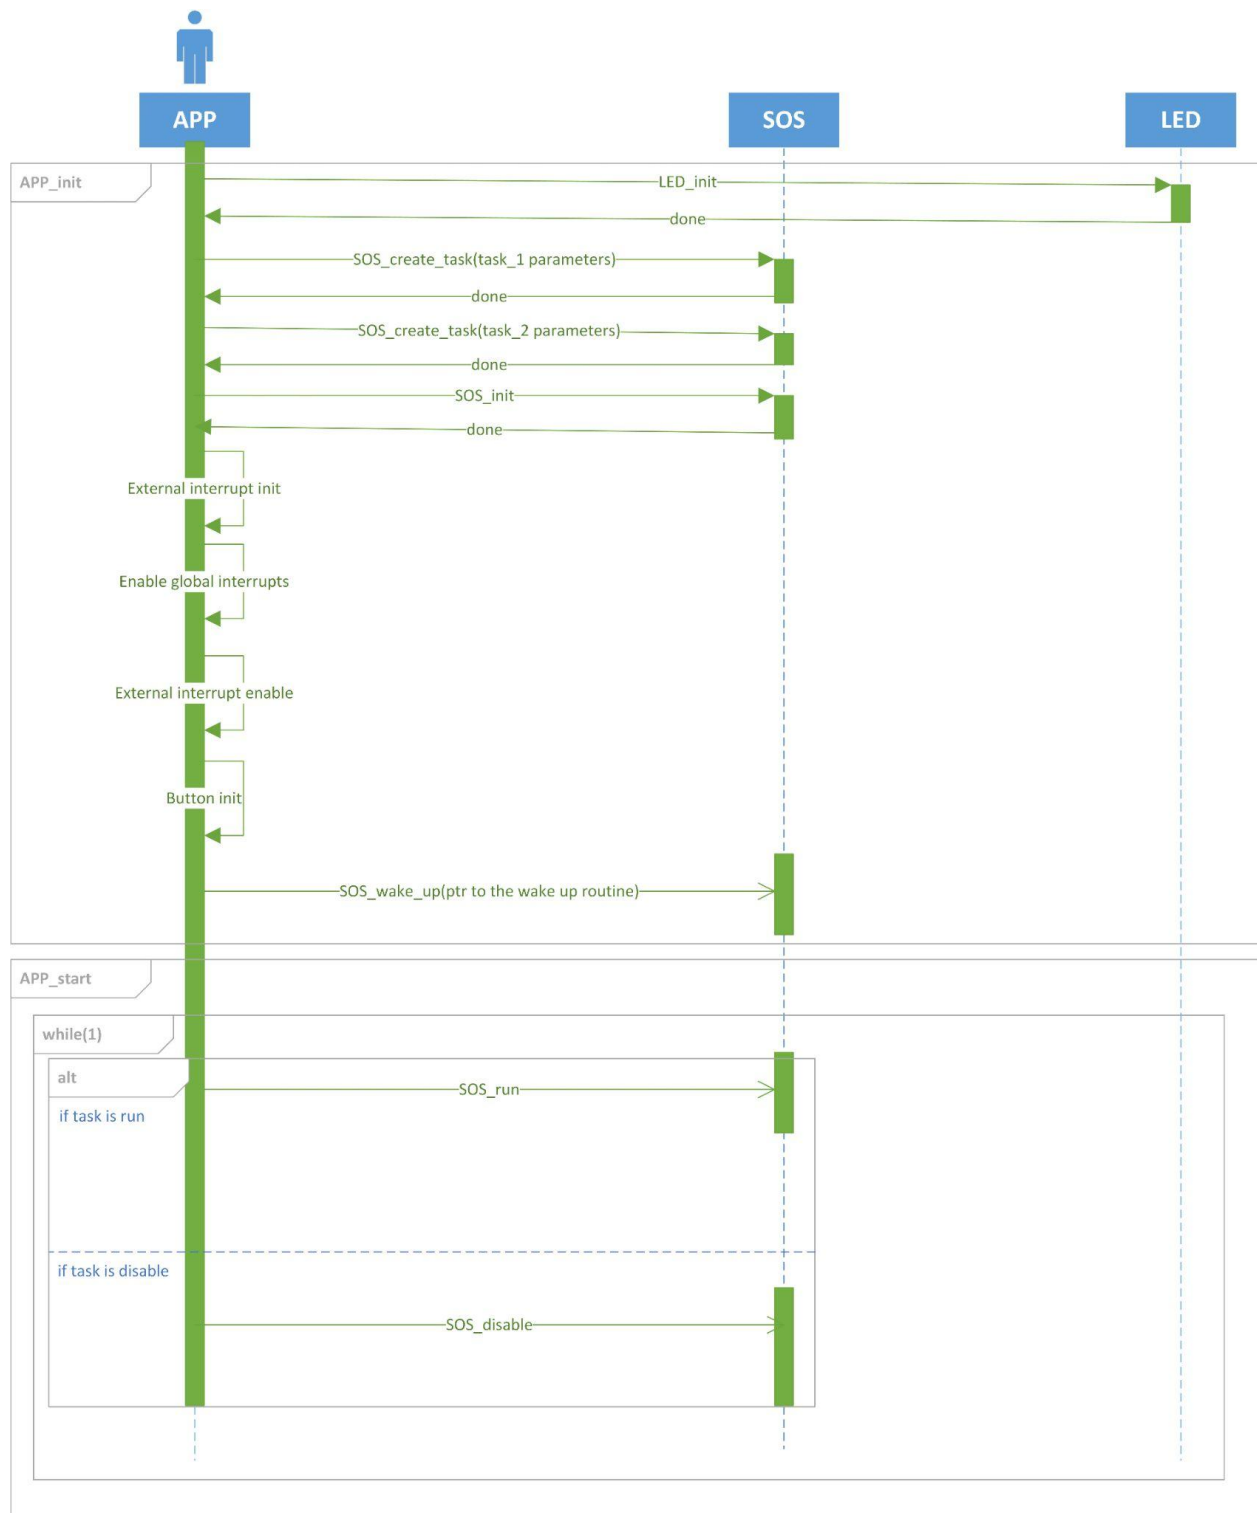

3.5.1.2 : Services affecting the hardware unit

- APP_start

Service name	APP_start
Syntax	void APP_start(void);
Description	This Function Start the Application.
Available via	app.h

- APP_init

Service name	APP_init
Syntax	void APP_init(void);
Description	This function initialize all drivers used in the application.
Available via	app.c