



**Application Note**

# **AS72xx**

## **How to Program AS72xx Firmware with FlashCatUSB**



# Application Note

## Content Guide

1	Components and installations.....	3
2	Program the firmware into the onboard memory.....	4
3	Program the firmware into an off board memory.....	7
4	Program the firmware .....	7
5	Contact Information .....	9
6	Copyrights & Disclaimer .....	11
7	Revision Information .....	11

## 1 Components and installations

AS72xx devices (including Smart Lighting Manager AS722x/AS721x devices and Spectral Sensing AS726x devices) require a flash memory<sup>1</sup> to work with and the memory holds AS72xx firmware. This file briefly discusses how to program the firmware with FlashCatUSB programmer.

**EmbeddedComputers**

Main Products Software Production Contact Us

**FlashcatUSB Classic Memory Programmer**  
The most popular SPI, I2C and JTAG programming device in use today. Compatible with thousands of Flash memory devices. Connects directly via SPI, I2C or JTAG hardware headers. Specific hardware support can be added using a easy to use device script feature.

SPI socket adapters (SO8, SO16, DIP8, WSON8) are [available here](#)  
Parallel sockets (PLCC-32, TSOP-48, TSOP-56) are [available here](#)

**Features:**

- Open-source (Microsoft .NET 4.0) software for Windows PC
- Multi-language: English, French, German, Portuguese, and Spanish.
- Supported protocols: JTAG, SPI, SQI, I2C, MPF, NAND
- Fast 16MHz RISC processor with 32KB internal memory
- Upgradeable firmware over USB
- On board reset button (for device reset or bootloader mode)
- Universal CFI Flash programming support
- SPI Mode 0, 1, 2 compatible (32-bit addressing supported)
- USB 2.0 / 3.0 / 3.1 compatible
- Dual voltage 3.3v or 5v output via selectable switch
- Over 10 low-cost socket adapters available for purchase
- Supports both NOR and NAND Flash memory types
- Designed for programming in-circuit

**MADE IN USA**

**FLASH-CAT**

Part number	Description	Price
FCUSB2X	A standard FlashcatUSB Classic (PCB 2.2), USB 2.0 cable, and your choice of connection jumper cable/wires (see below for visual description).	<p><b>Ships in 24 hours</b></p> <p><b>Includes IDC cable</b></p> <p><b>Add to Cart</b></p> <p><b>\$29.99</b></p>

Figure 1: <http://www.embeddedcomputers.net/products/FlashcatUSB/>

The FlashCatUSB systems exists from a programmer board, adapter(s) depending on the connectors on board, USB cable and an optional IDC cable. The standard system FlashCatUSB Classic (Part number FCUSB2X) is available from Embedded Computer<sup>2</sup>, must be ordered with IDC cable and be completed by the adaptation system(s) to connect the customer test board<sup>3</sup> to the FlashCat.

<sup>1</sup> See application note „AS72xx Flash program and update“

<sup>2</sup> <http://www.embeddedcomputers.net/products/FlashcatUSB/>

## 2 Program the firmware into the onboard memory

There alternative setups for firmware uploads depend on the used sensor test boards. Please check the data sheets for the programming interface to use. Alternative variants are described in the following.

### 8 Pin programmer connector

Depending on the version the AS72xxx boards have a 8-pin programmer connector onboard which connect the sensor device to the FlashCatUSB programmer via ams adapter board<sup>3</sup> and flat band cable<sup>3</sup> (see Figure 2). This variant is named programming memory with the FlashCatUSB utility.

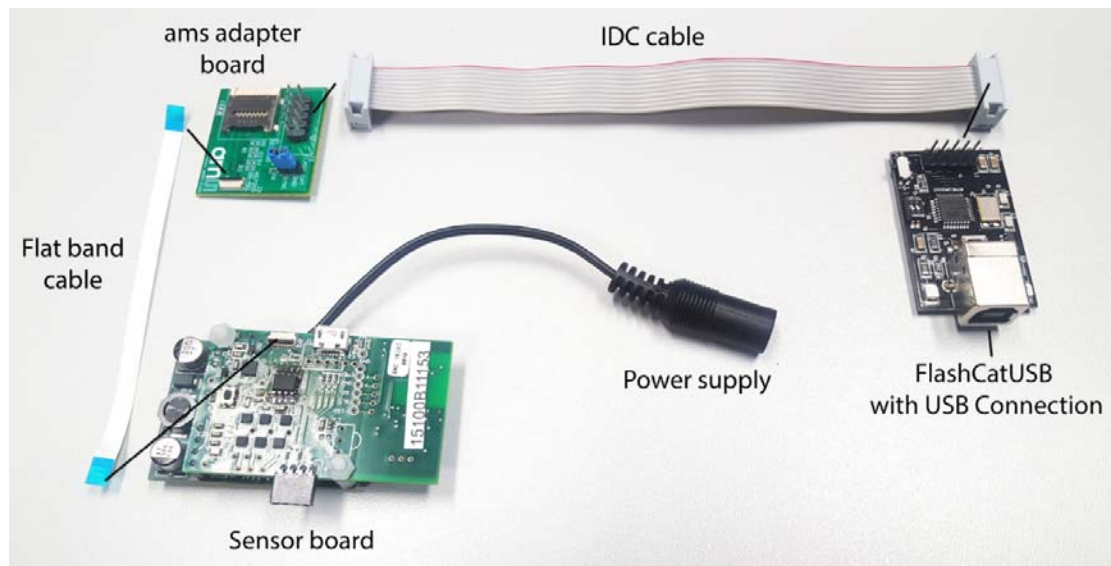


Figure 2: Sensor board with FlashCatUSB and ams adapter board for 8 Pin programmer connector

### Tag-Connect

New test boards have a 6 pole tag interface on board which can be connected with the TC2030-clip (for more details see [www.tag-connect.com](http://www.tag-connect.com)). Figure 3 shows all necessary components of the Tag-connect programmer tool with sensor and adapters. In Figure 4 is the full system assembled, ready for use.

All adapters are available in conventional shops, exclude the ams FlashCat adapter board X1X2 which is available from ams. Ask the FAE or als team from ams to order it.

---

<sup>3</sup> ams FlashCatAdapter (RD-MDL programmer) - this is an optional purchase unit whose availability is not always guaranteed. Please ask ams sales for delivery time, price and alternatives.

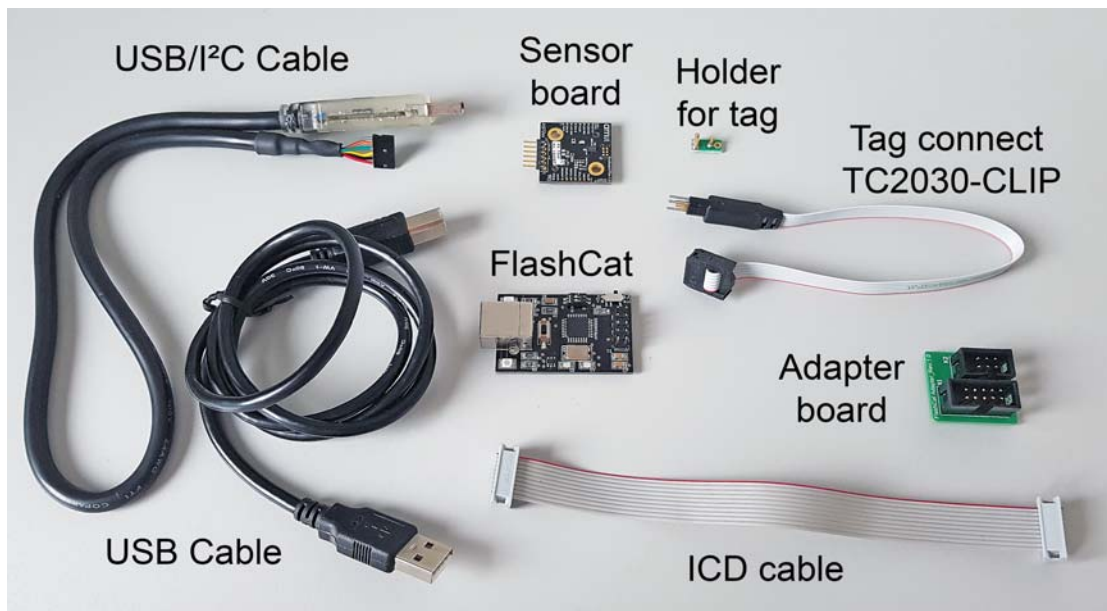


Figure 3: Parts of sensor demo board with FlashCatUSB programmer, adapters and Tag-connector

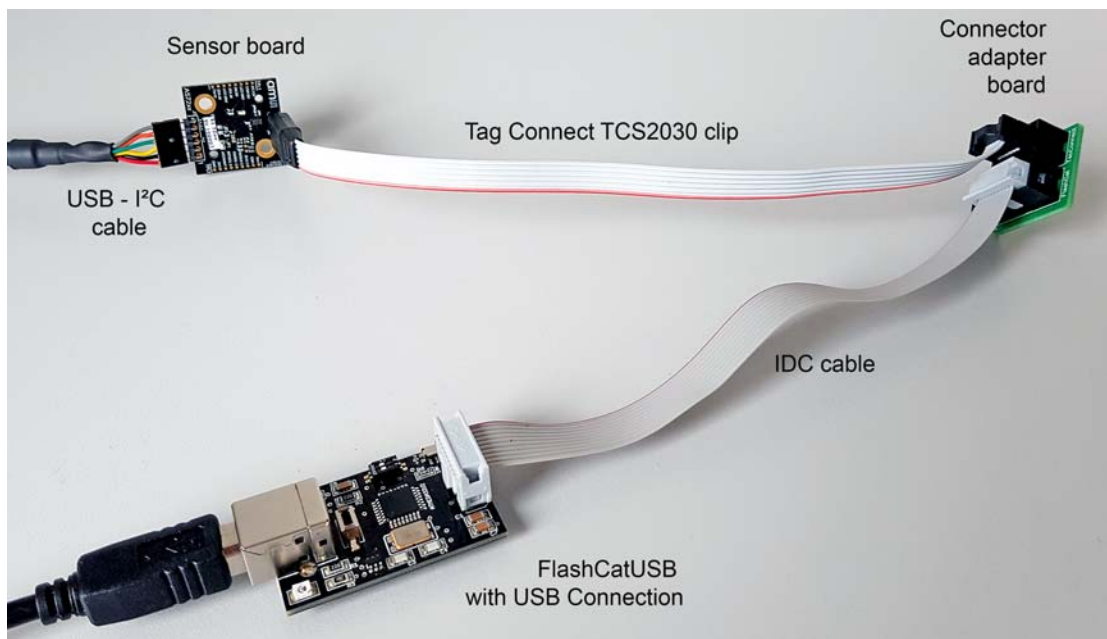


Figure 4: Assembled sensor demo board with FlashCatUSB programmer, adapters and Tag-connector

Connect all parts as shown in the Figure 4. Then Connect USB cable and/or if necessary the power supply. Note, there are some board specific requirements possible, e.g. you must connect also RESET and GND pins by wire in case of firmware upload at the iSPI evaluation board version 1.0. Therefore, please ask our FAE team for system specific conditions.

### Using the FlashCat programmer

When you connect FlashCatUSB programmer to your computer for the first time, you may need to redirect the OS to the driver folder from FlashCatUSB utility package to install the driver<sup>4</sup>. After the driver installation, please check FlashCatUSB firmware by double clicking “FlashCatUSB.exe” to bring the screen up as below. The firmware version of the FlashCatUSB board should be the version 4.12 or later with SPI interface.

After the software installation please make the following steps to initialize the programming system<sup>5</sup>:

- SLIK and FlashCat both powered off, no USB connected
- Connect the FlashCat and adapter to the SLIK
- Connect power to the sensor test boards
- Plug the FlashCat into the USB port directly on the PC (not a docking station)
- Start the FlashCatUSB software

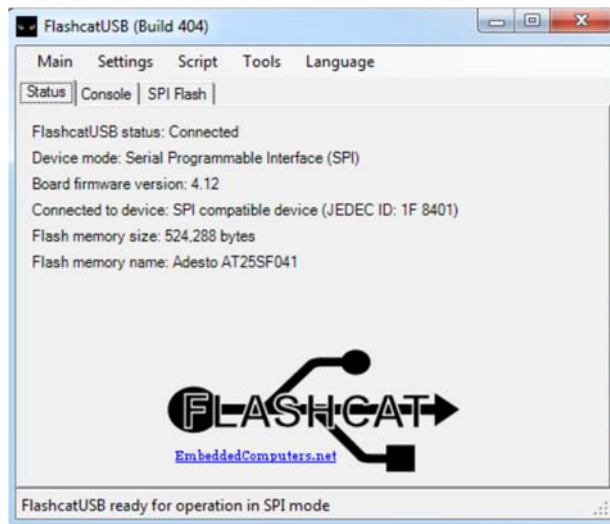


Figure 5: Start window FlashCatUSB

In case of the error “not connected FlashCat” after a successful driver installation, please re-install FlashCatUSB software and the FlashCatUSB firmware FCUSB.CLASSIC.x.xx.SPI.I2C.EXT.hex<sup>6</sup>. For more details see the FlashCatUSB manual<sup>7</sup>.

---

<sup>4</sup> Download the installation files from <http://www.embeddedcomputers.net/software/> and follow the instructions in the FlashCatUSB manual to install the driver and software

<sup>5</sup> An other sequence or reversing steps can result errors

<sup>6</sup> x.xx means, use the newest firmware

<sup>7</sup> Note the details in the data sheet to use the firmware update switch on the board before and after the update.

### 3 Program the firmware

The FlashCatUSB programming utility works with either connection. Double click FlashCatUSB.exe to see the screen as shown below. (The version Build 404 as the example. Newer version of the utility should work as well). The utility automatically detected the flash memory with the name Adesto AT25SF041 or comparable types<sup>8</sup>.

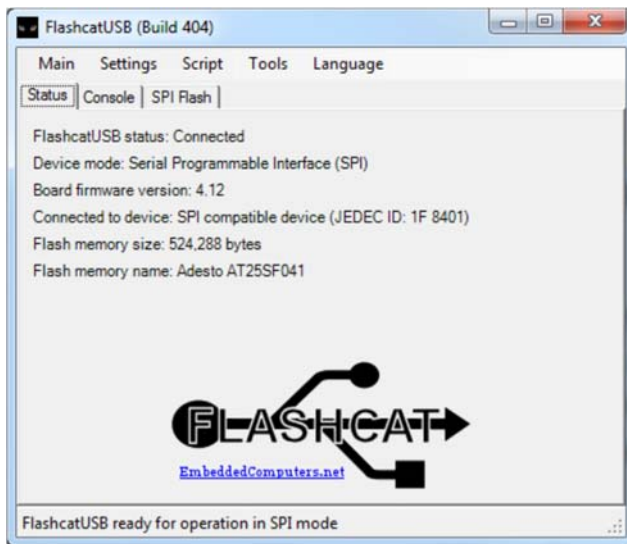


Figure 6: Start Window

Click “SPI Flash” tab, you will see the interface as below.

<sup>8</sup> See the application note “AS72xx Flash program and update”



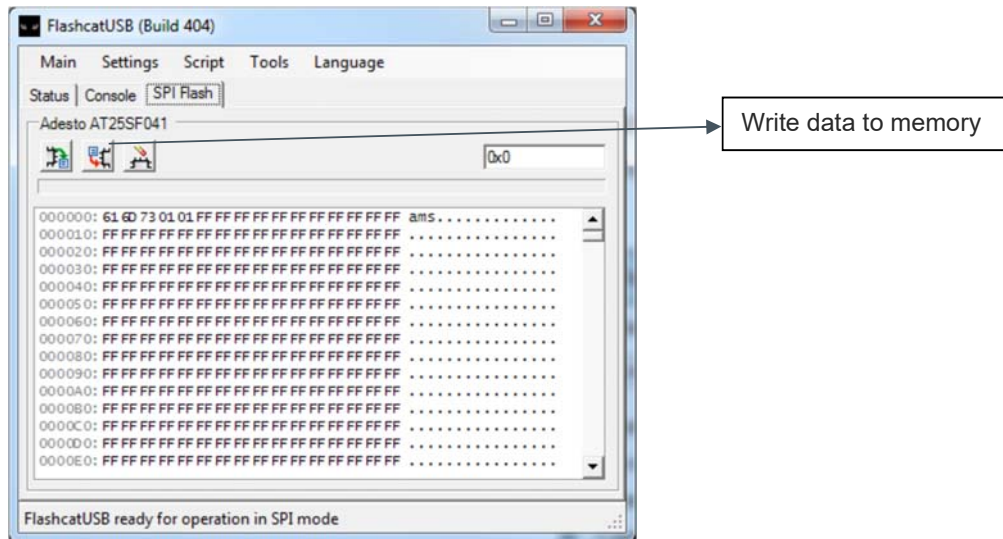


Figure 7: SPI Flash Window

Then click the button for write data to memory for programming the device. The file selection window will show up and please select the firmware you would like to program into the device and click 'OK'. In case of a full update (e.g. 256k for Scotty) then click "OK" on the small window, which allows you to set Base Address and Length. Use the default value as shown in the window or ask the support team in case of lower updates (base address 0x12000 for 56kbyte update) to prevent an overwrite of the signature.

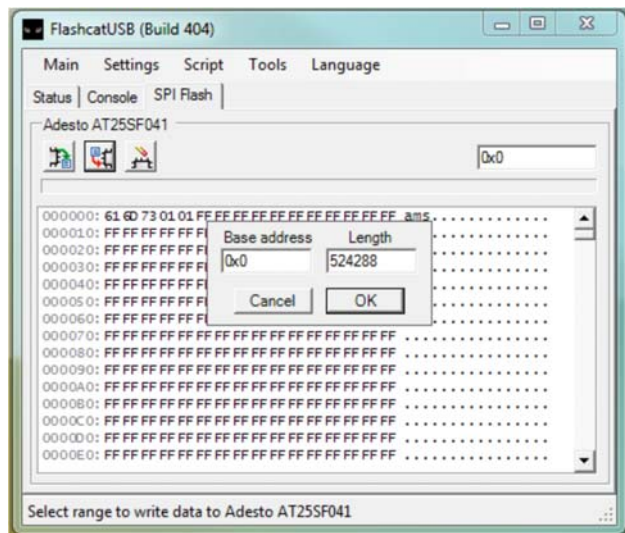


Figure 8: Recommend default values

After clicking on "OK", the programming starts and it will take several seconds to complete.



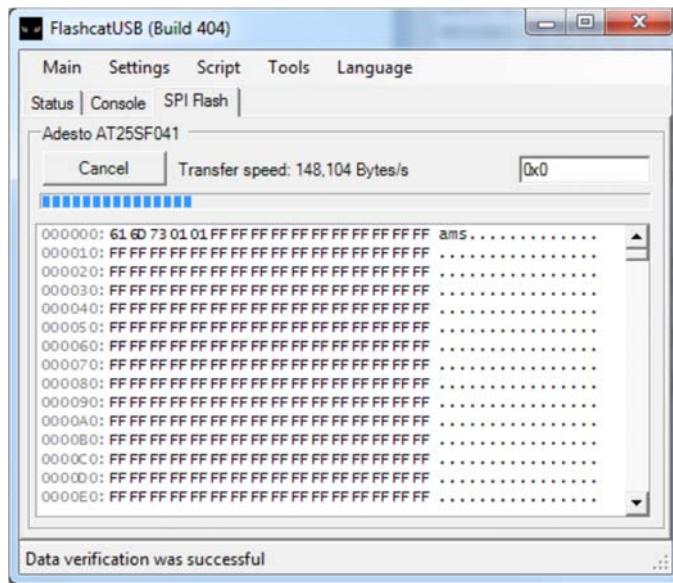


Figure 9: Window after process is completed

Programming is completed.

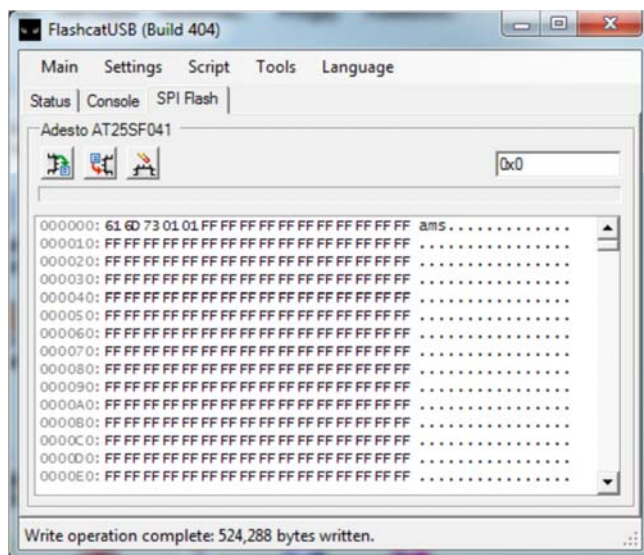


Figure 10: Window after processing

After the successful programming please stop the FlashCatUSB software and disconnect all components. The sensor board now includes the new firmware.

## 4 Contact Information

For further information and requests, e-mail us at:

[ams\\_sales@ams.com](mailto:ams_sales@ams.com)

**For sales offices, distributors and representatives, please visit:**

[www.ams.com/contact](http://www.ams.com/contact)

**Headquarters**

ams AG

Tobelbader Strasse 30

8141 Premstaetten

Austria, Europe

Tel: +43 (0) 3136 500 0

Website: [www.ams.com](http://www.ams.com)

## 5 Copyrights & Disclaimer

Copyright ams AG, Tobelbader Strasse 30, 8141 Premstaetten, Austria-Europe. Trademarks Registered. All rights reserved. The material herein may not be reproduced, adapted, merged, translated, stored, or used without the prior written consent of the copyright owner.

Information in this document is believed to be accurate and reliable. However, ams AG does not give any representations or warranties, expressed or implied, as to the accuracy or completeness of such information and shall have no liability for the consequences of use of such information.

Applications that are described herein are for illustrative purposes only. ams AG makes no representation or warranty that such applications will be appropriate for the specified use without further testing or modification. ams AG takes no responsibility for the design, operation and testing of the applications and end-products as well as assistance with the applications or end-product designs when using ams AG products. ams AG is not liable for the suitability and fit of ams AG products in applications and end-products planned.

ams AG shall not be liable to recipient or any third party for any damages, including but not limited to personal injury, property damage, loss of profits, loss of use, interruption of business or indirect, special, incidental or consequential damages, of any kind, in connection with or arising out of the furnishing, performance or use of the technical data or applications described herein. No obligation or liability to recipient or any third party shall arise or flow out of ams AG rendering of technical or other services.

ams AG reserves the right to change information in this document at any time and without notice.

## 6 Revision Information

Initial Version

Note: Page numbers for the previous version may differ from page numbers in the current revision. Correction of typographical errors is not explicitly mentioned.