


Grove - Step Counter(BMA456) SKU: 101020583

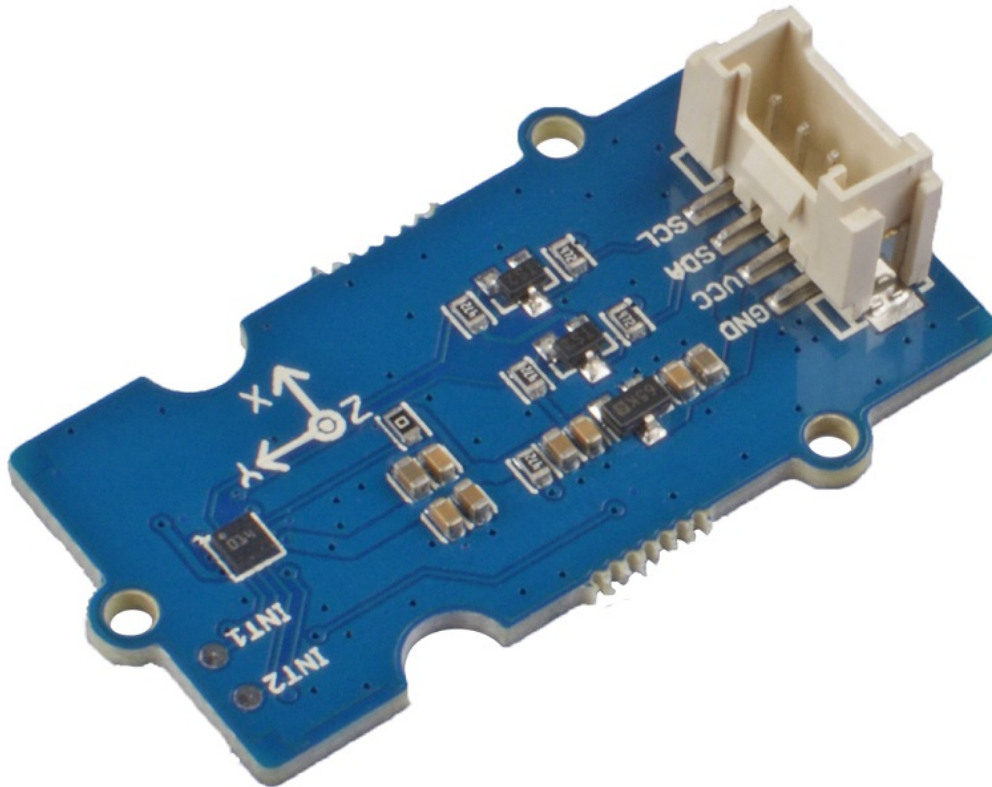

The Grove - Step Counter(BMA456) is based on BMA456, which is an extremely small, triaxial, low-g high performance accelerations module. Thanks to the special algorithm of BOSCH, we made this module a portable pedometer.

Reliable, cost-effective, on top of that, it's very easy to use, you can easily add this plug and play module on your wearable devices.

Version

Product Version	Changes	Released Date
Grove - Step Counter(BMA456)	Initial	Oct 2018

Features

- On chip FIFO
- Ultra-low power
- On-chip interrupt
- Programable functionality

Specification


Item	Value
Operating Voltage	3.3V / 5V
Acceleration Range	±2g, ±4g, ±8g, ±16g
Sensitivity	16384 @±2g 8192 @±4g 4096 @±8g 2048 @±16g
Interface	I ² C
I ² C Address	0x19(default) / 0x18(optional)
Size	L: 40mm W: 20mm H: 10mm
Weight	3.2g
Package size	L: 140mm W: 90mm H: 10mm
Gross Weight	9g

Typical applications


- Applications with height constrains
- Plug and Play Step-Counter solution with watermark functionality
- Fitness applications / Activity Tracking
- Power management for wearable applications
- Display on/off and profile switching
- User interface without hardware buttons
- E-compass tilt compensation and data synchronization
- High performance angle measurements

Hardware Overview

Pin Out

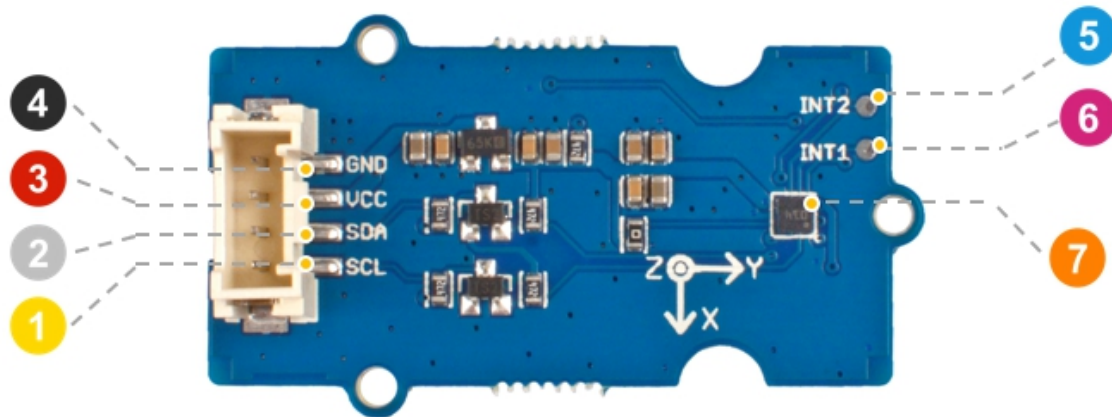


- 4 GND: connect this module to the system GND
- 3 VCC: you can use 5V or 3.3V for this module
- 2 SDA: I²C serial data
- 1 SCL: I²C serial clock
- 5 INT2: interrupt output 1(Input for external FIFO sync)
- 6 INT1: interrupt output 1(Input for external FIFO sync)
- 7 The BMA456 module

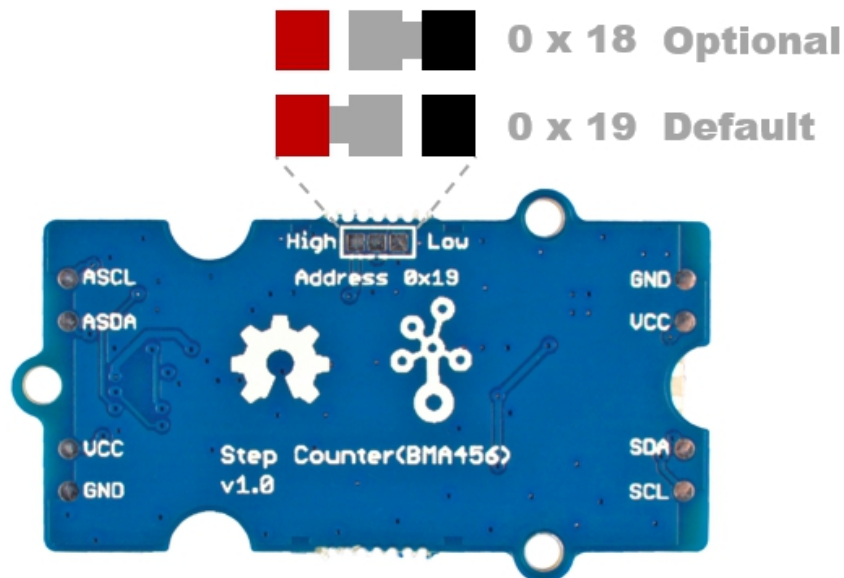


Schemaitc

Power

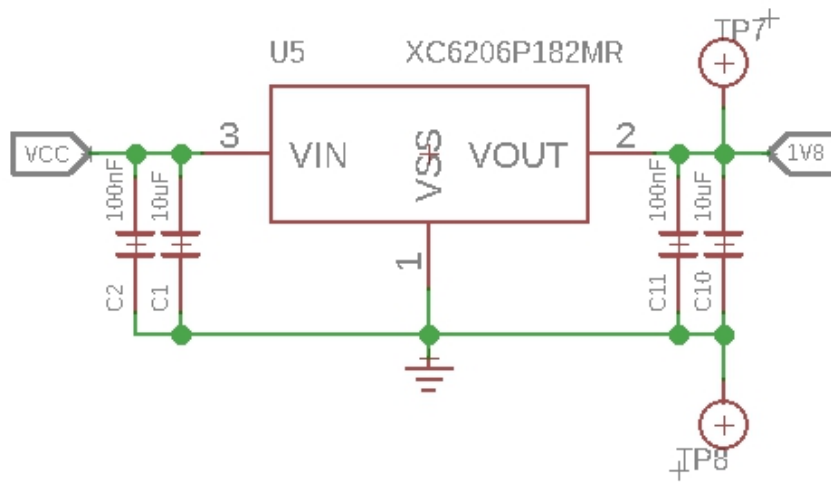

The typical voltage of BMA456 is 1.8V, so we use the [XC6206P182MR](#) chip to provide a stable 1.8V. The input of XC6206P33 ranges from 1.8V to 6.0V, so you can use this module with your Arduino both in 3.3V and 5V.



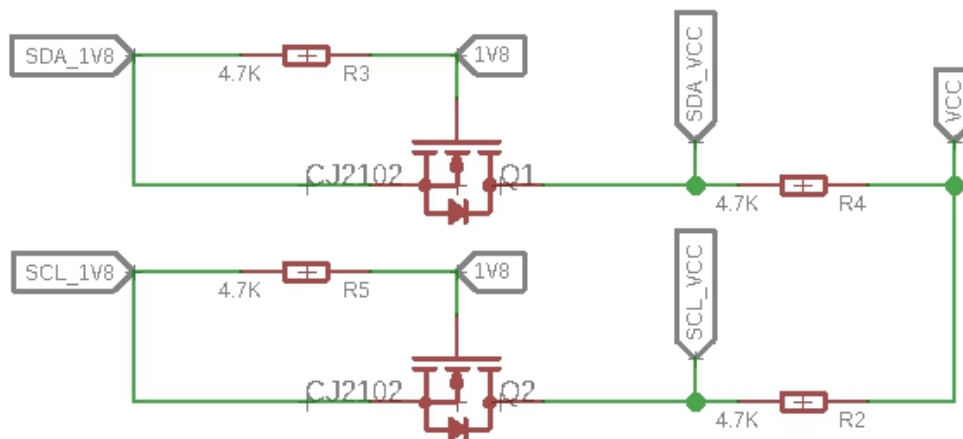


Bi-directional level shifter circuit



This is a typical Bi-directional level shifter circuit to connect two different voltage section of an I²C bus. The I²C bus of this sensor use 3.3V, if the I²C bus of the Arduino use 5V, this circuit will be needed. In the schematic above, **Q6** and **Q5** are N-Channel MOSFET [2N7002A](#), which act as a bidirectional switch. In order to better understand this part, you can refer to the [AN10441](#)

Platforms Supported

Arduino	Raspberry Pi	BeagleBone	Wio	LinkIt ONE
---------	--------------	------------	-----	------------

Arduino	Raspberry Pi	BeagleBone	Wio	LinkIt ONE
				




!!!Caution The platforms mentioned above as supported is/are an indication of the module's software or theoretical compatibility. We only provide software library or code examples for Arduino platform in most cases. It is not possible to provide software library / demo code for all possible MCU platforms. Hence, users have to write their own software library.

Getting Started

Play With Arduino


Hardware

Materials required

Seeeduino V4.2	Base Shield	Grove - Step Counter(BMA456)
		

!!!note **1** Please plug the USB cable gently, otherwise you may damage the port. Please use the USB cable with 4 wires inside, the 2 wires cable can't transfer data. If you are not sure about the wire you have, you can click [here](#) to buy. **2** Each Grove module comes with a Grove cable when you buy. In case you lose the Grove cable, you can click [here](#) to buy.

- **Step 1.** Connect the Grove - Step Counter(BMA456) to port **I²C** of Grove-Base Shield.
- **Step 2.** Plug Grove - Base Shield into Seeeduino.
- **Step 3.** Connect Seeeduino to PC via a USB cable.

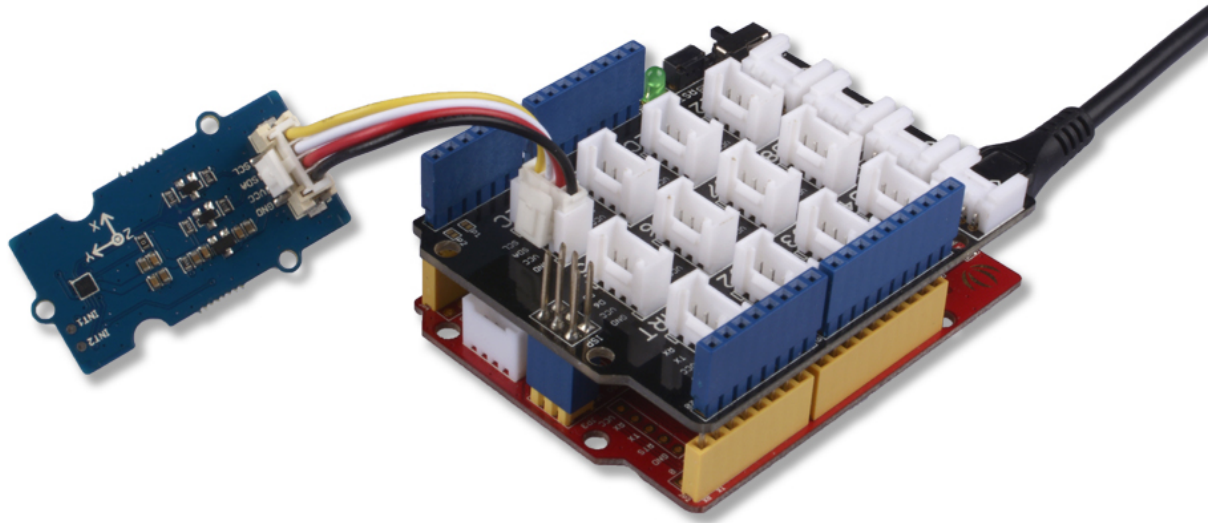


!!!Note If we don't have Grove Base Shield, We also can directly connect this module to Seeeduino as below.

Seeeduino	Grove Cable	Grove - Step Counter(BMA456)
GND	Black	GND
5V or 3.3V	Red	VCC
SDA	White	SDA
SCL	Yellow	SCL


Software


!!!Attention If this is the first time you work with Arduino, we strongly recommend you to see [Getting Started with Arduino](#) before the start.

- **Step 1.** Download the [Seeed_BMA456](#) Library from Github.
- **Step 2.** Refer to [How to install library](#) to install library for Arduino.
- **Step 3.** Restart the Arduino IDE. Open the example, you can open it in the following three ways :
 1. Open it directly in the Arduino IDE via the path: **File --> Examples --> Grove -Step Counter(BMA456) --> step_counter.**

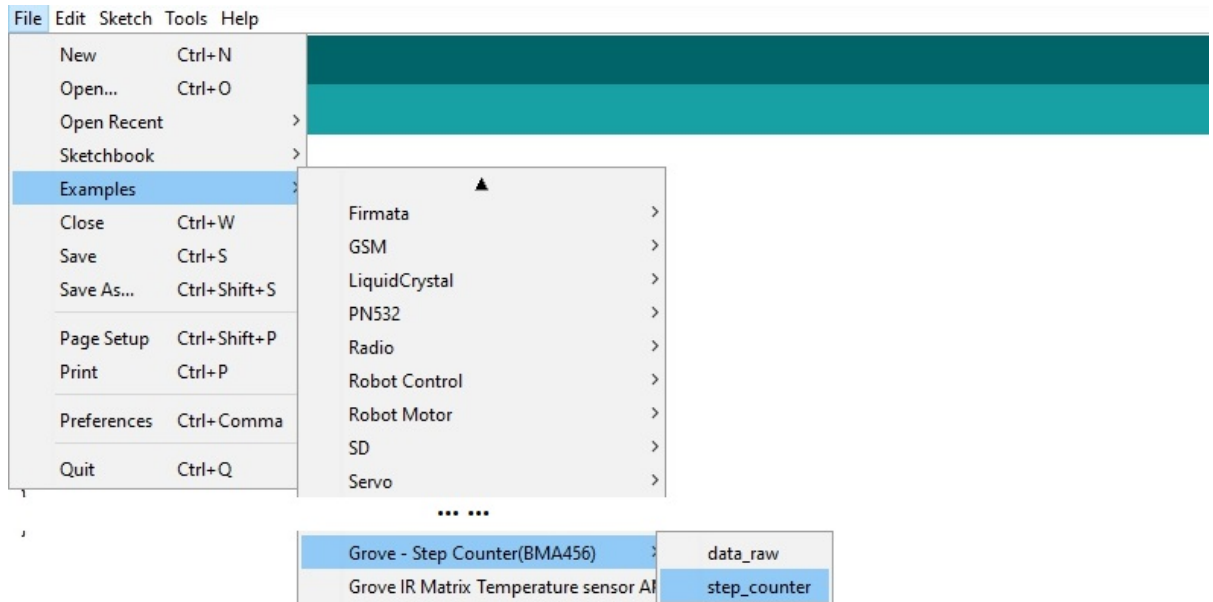

2. Open it in your computer by click the **step_counter.ino** which you can find in the folder **XXXX\Arduino\libraries\Seeed_BMA456-master\examples\step_counter**, XXXX is the location you installed the Arduino IDE.

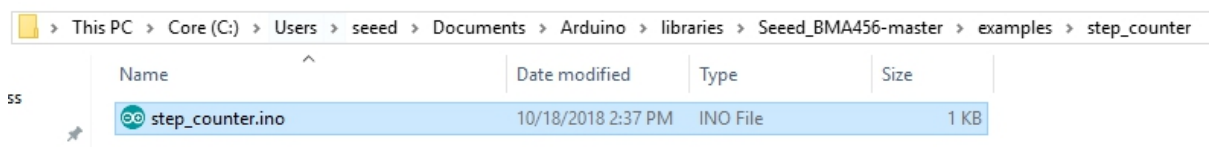

3. Or, you can just click the icon  in upper right corner of the code block to copy the following code into a new sketch in the Arduino IDE.

```
#include "arduino_bma456.h"

uint32_t step = 0;

void setup(void)
{
  Serial.begin(115200);
  Serial.println("BMA456 Step Counter");

  bma456.initialize(RANGE_4G, ODR_1600_HZ, NORMAL_AVG4, CONTINUOUS);
  bma456.stepCounterEnable();
}

void loop(void)
{
  step = bma456.getStepCounterOutput();

  Serial.print("Step: ");
  Serial.println(step);

  delay(1000);
}
```

!!!Attention The library file may be updated. This code may not be applicable to the updated library file, so we recommend that you use the first two methods.

- **Step 4.** Upload the demo. If you do not know how to upload the code, please check [How to upload code](#).
- **Step 5.** Open the **Serial Monitor** of Arduino IDE by click **Tool-> Serial Monitor**. Or tap the ++ctrl+shift+m++ key at the same time. Set the baud rate to **115200**.

!!!success If every thing goes well, when you open the Serial Monitor and walk with this sensor on or move it to simulated walking posture , it may show as below:

```
BM
Step: 0
BMA456 Step Counter
Step: 0
Step: 0
...
...
Step: 18
Step: 20
Step: 22
Step: 24
Step: 26
Step: 28
Step: 30
Step: 32
Step: 34
Step: 36
Step: 38
```

Resources

- **[Zip]** [Grove - Step Counter\(BMA456\) Eagle Files](#)
- **[Zip]** [Seeed BMA456 Library](#)
- **[PDF]** [Datasheet BMA456](#)
- **[PDF]** [XC6206 DATASHEET](#)

Project

This is the introduction Video of this product, simple demos, you can have a try.

<https://www.youtube.com/embed/gPi4EWuAGtg?rel=0>

Tech Support

Please do not hesitate to submit the issue into our [forum](#)