



HUANANZHI®

SZ HUANAN SANXIAN TECHNOLOGY CO.,LTD.

WWW.HUANANZHI.COM

HUANANZHI®

X99-TF

GAMING MOTHERBOARD



User Manual

DIRECTORY

Safety Precautions	2
Packing	3
Brief Introduction	4
Motherboard Diagram	5
Rear I/O panel	6
Installation and Settings	7
Installation of Drivers	11
BIOS Settings	13

SAFETY PRECAUTIONS

- Products could probably be damaged due to electrostatic discharge(ESD). Please follow these steps below for a successful computer assembly.
- Make sure all parts are firmly connected; otherwise, it might lead to the failure of recognizing components or starting the computer.
- In order to prevent products from being damaged by ESD, please make sure to discharge your body static by touching other metal objects before taking the motherboard out of box.
- Hold the border of motherboard when taking it out. Do not touch the sensitive parts of motherboard.
- Please put the motherboard in an anti-static container or on anti-static pad if not needed.
- Before turning on the computer, make sure all parts inside the case are firmly connected without any loose screws or metal components.
- Do not start the computer before installation finished, otherwise it might result in permanent damage to the computer parts or even injury to the user.
- If you need any assistance in the process of installation, please contact our after-sales customer service or reach us on HUANANZHI official WeChat for professional technical support.
- Prior to installation or disassembly, please switch off the power and unplug the computer.

- Keep the motherboard away from moisture.
- Keep the user manual for future reference.
- Before plugging the power supply, please make sure the socket provides the corresponding voltage.
- In any of the following situations, please keep the motherboard and power cable in a safe place. Do not put anything onto the power cable.
- In the event of any of the following conditions, have the board checked by a service technician:
Liquid penetrated into the computer.
Motherboard is exposed to moisture.
Motherboard does not work even if you follow the instructions on user manual.
Motherboard fell off to the ground and got damaged.
Motherboard has clear signs of damage.

PACKING

- Please confirm that the motherboard is properly packaged upon purchase of the product. If there is any damage to packaging or lack of accessories, contact us as soon as possible.
- 1.1*HUANANZHI X99 -TF GAMING motherboard
 - 2.2*SATA data cable
 - 3.1*Driver disk
 - 4.1*I/O shield back plat
 - 5.1*User manual
 - 6.1*Warranty Card

BRIEF INTRODUCTION

Features

CPUs supported: Standard LGA2011-3 socket

RAM supported: Supporting four channels of DDR3 1866/1600/1333/1066 MHz, DDR4 2400/2133/1866 MHz, with standard and ECC memory

I/O attributes: 8*SATA3.0(Max data transmission rate of 6GB/s)
4*USB2.0 ports
4*USB3.0 ports(Front extensible
2*USB2.0 interface)
2*M.2 PCI-E protocol interface
1*M.2 WIFI interface
1*RJ45 Gigabit Ethernet ports
1*Audio interface

HD AUDIO sound effect:


Supporting 7.1 soundtrack HI-FI audio input/output (ALC892)
Providing audio input/microphone/front speaker/rear speaker and side speaker output port

Audio output: this is the front speaker output port that stereo speakers or earphones can be plugged into

Onboard NIC: Motherboard has internal RTL8111E network interface card


Expansion slots: 2*PCI Express x16 Accelerated Graphics Port
1*PCI Express x4
2*PCI Express x1

MOTHER BOARD IMAGE

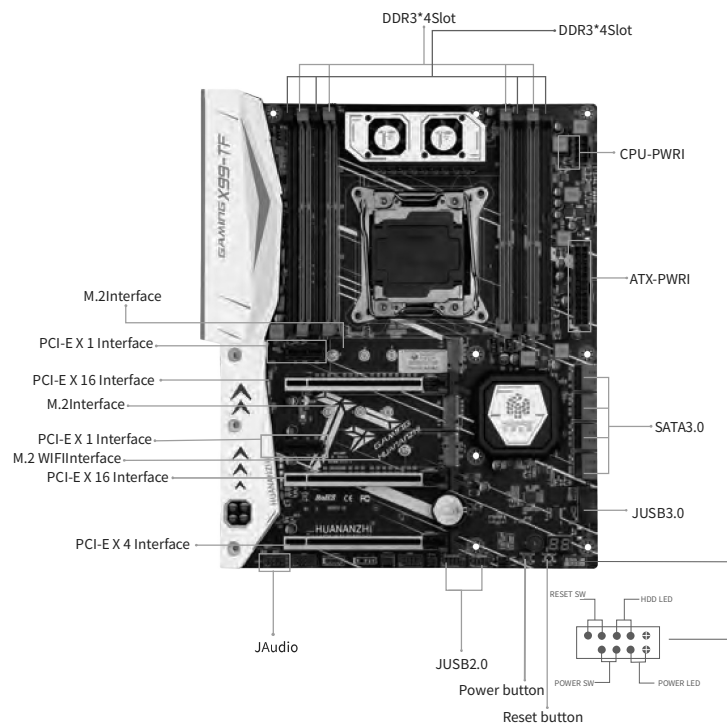

1-1 X99-TF GAMING Motherboard Illustration

Rear I/O Panel

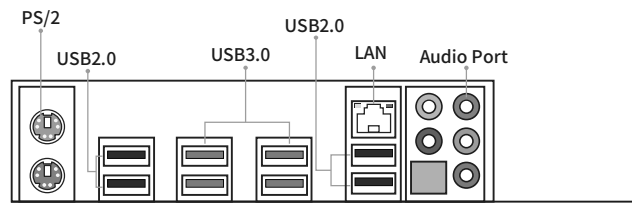

1-2 Overall Rear I/O Panel Display

Connection/Work Light		Speed Signal	
Status	Description	Status	Description
Turn Off	Network Not Connected	Turn Off	Transmission rate 10 Mbps
Yellow	Network Connected	Green	Transmission rate 100 Mbps
Flicker	Network In Use	Orange	Transmission rate 1 Gbps

1-3 LAN Port Status Table


Audio Port	Aisle			
	2	4	6	8
Audio Input				
Audio output/Front speaker output	●	●	●	●
Rear speaker output		●	●	●
Center/subwoofer output			●	●
Microphone input				●
Side speaker output				

1-4 Audio Port Configuration


Installation And Settings

NOTICE


please check the motherboard where all pins marked with number "1" or white bold line are position "1".

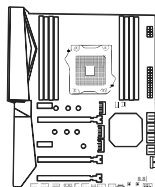


2-1 Clear CMOS Jumper CLR-CMOS

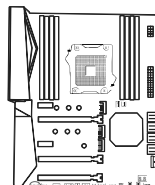


2-2 Front Audio Output Ports

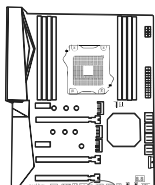


2-3 Expansion Ports

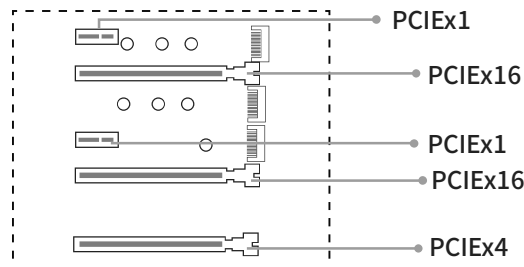



2-4 PCI Expansion Slot

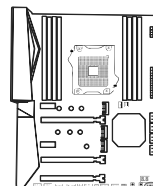

2-5 F_PANEL1 Boot Interface

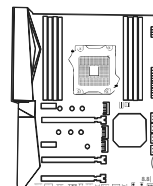


2-6 USB3.0 Interface

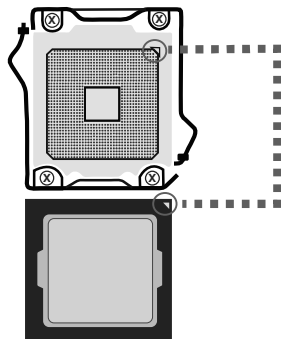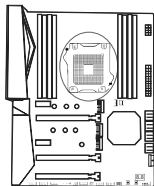


- In order to properly place the CPU in the motherboard, the surface of the LGA2011-3 CPU has two pairs of starting points and a golden triangle. Golden triangle indicates Pin1


2-7 CPU Installation

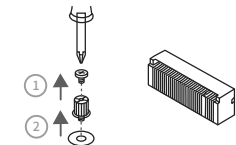


1. Remove the screw from the screw base
2. Remove the screw base

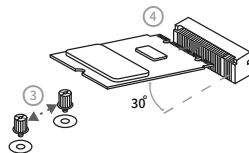

3. Tighten the screw base screwed into the length M.2 module to the M.2 interface distance hole
4. Insert your M.2 module into the M.2 interface at a 30 degree angle

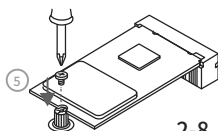


2-8 M.2 Interface Installation

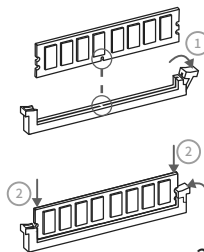


1. Pull the clips on both ends of the memory slot outward, and the memory strip corresponds to the protruding position of the slot to determine the direction of installation.
2. Align the memory module into the slot and press
3. Let the snaps on both ends of the slot automatically bounce


2-9 Memory Installation

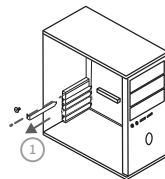

1. Use a screwdriver to remove the bezel and screws on the main unit

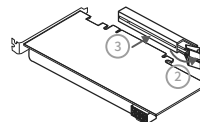


2. Need to pick up the card slot of the card slot when installing the graphics card
3. Insert the graphics card into the card slot of the graphics card

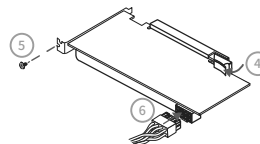

4. After the installation is in place, the chuck will automatically return to its position.
5. Secure the graphics card to the chassis with screws
6. Install the power cord

2-10 Graphics Card Installation

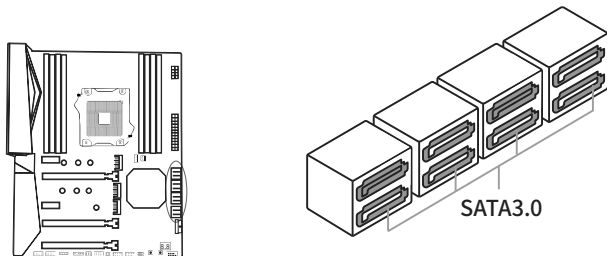

2 -11 SATA Interface

Drivers installation

1.Drivers listing:

Driver Directory	Driver Description	Operating System
X99 Chipset Driver	Intel chip information installation	INF_X99
Tools/DirectX 11	DirectX 11 installation	DXSETUP
X99 Suond Card Driver	Realtek series sound card driver installation	Vista-win7-r267wdw
X99 LAN Driver	Intel chip NIC installation	Win7 XP

2.Intel Chip Information Installation

Run driver disk: X99 chipset driver/INF-X99, click on " yes" and then "next" to continue. Click on "finished" and restart the

computer. The system will automatically search for devices. Installation finished.

3.Directx11 driver installation

Run driver disk: /Tools/Driverx11/DXSETUP, click on "I accept"and then "next" to continue. Click on "finished" and restart computer. The system will automatically search for devices. Installation finished.

4.Audio driver installation

Before this installation, please check the model of the audio chip on the motherboard first(you may refer to this manual), Select the proper driver accordingly for installation.

4.1Audio driver installation (take HD Audio series for example)

Run "driver disk": /X99 SOUND CARD DRIVER/VISTA-WIN7-R267, take WDW-267 if OS is XP

Click on "next"to continue,and then"finished"

The system will automatically restart itself to finish the installation

4.2 Uninstallation of audio driver(take HD Audio series for example)

etting into Windows desktop, choose "setting"/ "control",and then "add/remove programs". Later, choose "Realtek High Definition Audio Driver" in the menu and click on "

add/remove"so thatthe driver will be automatically removed..

5.Driver installation of external video card

Run "driver disk", take Setup.exe,

Click on "next"- "yes"

-"next"

-"next"and"finished"h

The system will automatically search for devices
to complete the installation

6.Driver installation of network

Run "driver disk": X99 LAN DRIVER/WIN7 XP

click on "next"-

"installation"- "finished"and restart the computer,

and restart the computer, The system will automatically
search for devices to complete the installation.

BIOS Settings

In order to enable the computer to work well or execute specific functions, CMOS SETUP normally stores all kinds of data in CMOS SRAM of the motherboard. When the computer is shut down, motherboard' s battery will supply power to CMOS SRAM. When the computer is turned on and starts POST(Power On Self Test), press "Delete/Del" key to enter into AMI BIOS CMOS SETUP main page. Motherboard warm boot key is "F11" .

Menu: please pay attention to every option in the settings menu. When there is a triangle shaped symbol on the left side of menu, it means that you choose this sub-menu,so a pop-up sub-menu will be available.

1.Main Menu Function

Main	Advanced	Chipset	Boot	Security	Save	Exit
------	----------	---------	------	----------	------	------

- ☆ Main
- ☆ System Overview
Date/Time settings, HDD specs/Monitor type settings.
- ☆ Advanced
Advanced Settings
BIOS special function settings, such as virus alert, booting disk priority etc.
- ☆ Chipest
Advanced Chipest Settings
- ☆ Boot
Boot Settings
- ☆ Security
Security Settings
- ☆ Save
Save Setting
- ☆ Exit
Exit Options
Exit settings include loading of optimized defaults value/ loading of fail-safe defaults / discarding changes/ exiting without saving.Exit settings include loading of optimized defaults value/ loading of fail-safe defaults / discarding changes/ exiting without saving.