

MJ Long Range Signaling and Control

MJ LoRaWAN Modem
(Low Power Node)

Version 1.0
8 - February - 2018

MJ LoRaWAN Modem Product Information

LoRaWAN Modem is developed and marketed by the MJ Smart Technology. For additional information please contact: +86-18672371835

© 2018 MJ Corporation

Copyright International Business Machines Corporation, 2018. All Rights Reserved.

The following are trademarks or registered trademarks of International Business Machines Corporation in the United States, or other countries, or both: MJ, the MJ Logo, Ready for MJ Technology.

Other company, product and service names may be trademarks or service marks of others.

All information contained in this document is subject to change without notice. The information contained in this document does not affect or change MJ product specifications or warranties. Nothing in this document shall operate as an express or implied license or indemnity under the intellectual property rights of MJ or third parties. All information contained in this document was obtained in specific environments, and is presented as an illustration. The results obtained in other operating environments may vary. THE INFORMATION CONTAINED IN THIS DOCUMENT IS PROVIDED ON AN "AS IS" BASIS. In no event will MJ be liable for damages arising directly or indirectly from any use of the information contained in this document.

Table of Contents

1. Introduction	4
2. Modem Interface	5
2.1 Connection	5
2.2 LED Indicators	5
2.3 Messages	5
3. Modem State	7
3.1 Activation	7
3.2 Firmware Personalization	8
4. AT Command Set	9
4.1 NOP Command	9
4.2 Version Command	9
4.3 Reset Command	9
4.4 Factory Reset Command	10
4.5 Session Parameter Commands	10
4.6 Join Parameter Commands	11
4.7 Join Command	11
4.8 Transmit Command	12
4.9 Global Parameters(Channel & Session flag)	13
4.10 Alarm Timer Command	13
4.11 Events	14
5. Release History	15

1. Introduction

The MJ LoRaWAN Modem provides access to LoRaWAN networks via high-level commands exchanged over a serial interface. All kinds of devices can be easily enabled to participate in LoRaWAN networks just by connecting the modem via a serial link and sending a few commands. The modem offers full functionality over a simple interface and handles all details of the LoRaWAN protocol internally. It can be personalized and configured with the specific network parameters.

The modem firmware is based on the MJ LoRaWAN C-library (LMMJ). This edition is running on the MJ LoRaWAN Node module, featuring a LPC824 Cortex-M0 MCU and the Semtech SX1278 LoRa™ radio. The firmware is shipped as Intel HEX file.

Figure 1. MJ LoRaWAN Node Modem v1.0



Directly supported by the MJ LoRaWAN Modem firmware (MJ LoRaWAN Node).

2. Modem Interface

2.1 Connection

The modem is connected to the end device via a standard serial USART interface with the communication settings 115200bps, 8/N/1, using half-duplex mode. Only four digital lines are needed to connect the modem to the end device:

- 3.3V
- GND
- RX
- TX

2.2 LED Indicators

Two LEDs are used to indicate internal modem states:

State	IMST WiMOD SK-iM880A	
Power:	N/A	
Session:	LED (red)	

The power LED is lit at startup of the modem firmware and is kept continuously on. It is switched off and on again for a very short moment whenever an event is generated to indicate activity. The session LED is driven depending on the activation state of the modem.

Activation State	Session LED
Not activated	Off
Joined	Off
Joining	Blinking

2.3 Messages


The modem processes all radio messages and LoRaWAN protocol states internally and can be driven by the end device over the serial link. It recognizes a set of commands to configure and query parameters and to initiate and report data exchanges with the network.

All commands are answered by the modem with a corresponding response message. The end device must not issue a new command before it has received the response to the previous command.

In addition to the response messages the modem can generate event messages. These event messages can inform the end device about certain state changes inside the modem triggered by the protocol. Given the nature of the LoRaWAN protocol these state changes and corresponding events can occur at any time. I.e. the end device application must be always prepared to accept event messages. This is even the case when a command/response exchange is in progress. If the generation of the event overlaps with the sending of a command, the event message could be received by the end device **before** the expected response message!

Currently the modem supports an ASCII AT command set (see section 4), inspired by the command set of Hayes data modems. A binary command set is planned.

Figure 1. Modem Message Flow

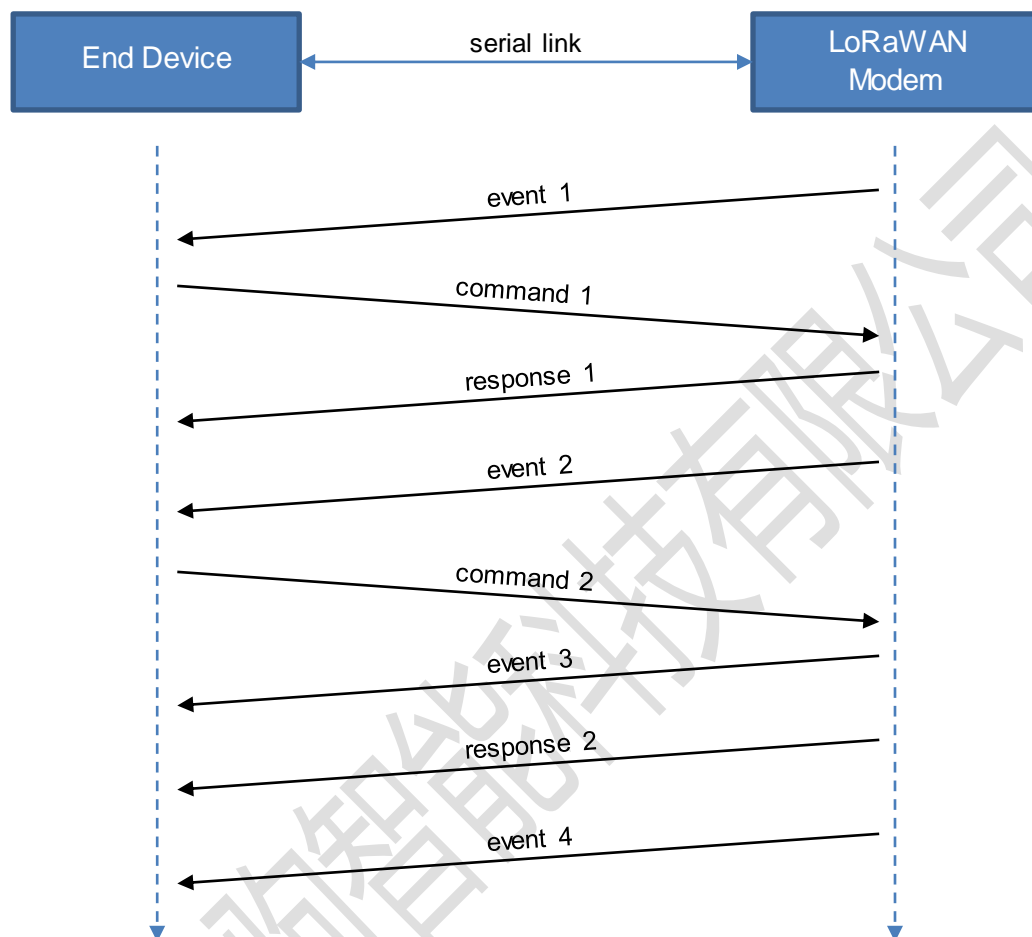

Exchange of command, response, and event messages.

3. Modem State

The modem has a persistent memory to store its internal state. The stored state is continuously updated, so the modem can continue operation after a power cycle without reconfiguration. Most importantly the activation state (session state) is stored and updated. This includes session keys and frame sequence counters.

3.1 Activation

To be able to exchange data with the network server the modem needs to be activated. A valid activation state requires session parameters.

3.1.1 Session Parameters

The session parameters consist of:

- Network ID (32 bit)
- Short device address (32 bit)
- Network session key (128 bit)
- Application session key (128 bit)

These parameters can be obtained by three ways:

1. embedded in the modem firmware (personalized activation, see section 3.2.1)
2. configured by a modem command (personalized activation, see section 4.5.1)
3. established via the JOIN command (over-the-air activation, see sections 3.1.2 and 4.7)

Once obtained the session parameters are stored and updated in the persistent storage. Whenever new session parameters are set, the upstream and downstream sequence counters are reset to zero.

3.1.2 Join Parameters

If the modem is to be activated via over-the-air-activation (JOIN), the following join parameters are required:

- Device EUI (64 bit)
- Application EUI (64 bit)
- Device Key (128 bit)

The join parameters can be obtained by two ways:

1. embedded in the modem firmware (see section 3.2.2)
2. configured by a modem command (see section 4.6.1)

Using the join command (see section 4.7) a new session is established over-the-air and the obtained session parameters are stored and updated in the persistent storage.

3.2 Firmware Personalization

In some cases it is desirable to have the modem firmware preconfigured with the specific network parameters, so the modem is operational without any configuration commands. Therefore the parameters can be patched into the HEX file containing the firmware. Special patterns have been embedded in the firmware to identify the locations of the parameter blocks to be patched.

3.2.1 Session Parameters

The block of session parameters can be patched into the firmware file where the following 40-byte HEX-pattern is found:

```
000000000000000000000000000000000000000000000000000000000000000000000000000000000000000
```

The layout of the patched session parameters is as follows:

Parameter	Size in bytes	Remark
Network ID	4	least-significant-byte-first
Short device address	4	least-significant-byte-first
Network session key	16	
Application session key	16	

3.2.2 Join Parameters

The block of join parameters can be patched into the firmware file where the following 32-byte HEX-pattern is found:

The layout of the patched join parameters is as follows:

Parameter	Size in bytes	Remark	Default by factory
Device EUI	8	least-significant-byte-first	Unique IEEE address
Application EUI	8	least-significant-byte-first	4D4A2D4D6F64656D
Device Key	16		2B7E151628AED2A6 ABF7158809CF4F3C

4. AT Command Set

Modem commands, responses and events are encoded as ASCII strings terminated by a carriage-return character <CR><LF>(it is ‘\r’, ‘\n’ in ascii). This way the modem can be directly accessed with the terminal application of your choice and the commands can be typed and read in a human-readable form.

All commands are prefixed with the characters “AT”, followed by comma-separated parameters, and terminated by <CR><LF>. The interpretation of the commands is case-insensitive. All commands will be answered by the modem with “OK” and optional parameters and <CR><LF>, or “ERROR<CR><LF>”. As mentioned in section 2.3, intermittent events can be generated by the modem before the response is sent. Event names are prefixed with “EV_” and are followed by optional comma-separated parameters and a trailing <CR><LF>.

All available commands with their responses and possible events are described in detail in the following sub sections.

4.1 NOP Command

An empty command can be used to test the communication between the modem and the end device. It performs no operation.

Command	AT
Response	OK

Example:

```
→ AT
← OK
```

4.2 Version Command

This command can be used to query the firmware version of the modem. It will return a fixed-length string containing the major and minor version number and the compile time of the modem firmware.

Command	ATV?
Response	OK, <version string>

Example:

```
→ ATV?
← OK, VERSION 1.0 (February 8 2018 16:32:38)
```

4.3 Reset Command

This command resets the internal state engine and reloads session state from persistent memory.

Command	ATZ
Response	OK

Example:

```
→ ATZ
← OK
```

4.4 Factory Reset Command

This command resets the persistent memory to factory state. All parameters will be reverted to the values built into the firmware or cleared. Manually configured parameters and progressed session state will be discarded.

Command	AT&F
Response	OK

Example:

```
→ AT&F
← OK
```

4.5 Session Parameter Commands

The following two commands allow to set and query the session parameters.

4.5.1 Set Session Parameter Command

This command allows to directly set the session parameters. The new session parameters will be written to persistent memory and sequence counters will be reset to zero.

Command	ATS=<network id>,<device address>,<network session key>,<application session key>
Response	OK

Example:

```
→ ATS=00000002,05A49FEC,00112233445566778899AABBCCDDEEFF,00112233445566778899AABBCCDDEEFF
← OK
```

4.5.2 Query Session Parameter Command

This command returns the current session parameters. If the modem is not activated, i.e. no session exists, ERROR will be returned. **Note:** The session keys are not returned by the modem!

Command	ATS?
Response	OK, <network id>,<device address>,<up sequence counter>,<down sequence counter>

Example:

```
→ ATS?
← OK,00000002,05A49FEC,00000004,00000003
```

4.6 Join Parameter Commands

The following commands allow to set and query the join parameters which will be used by the JOIN command (section 4.7) for over-the-air activation.

4.6.1 Set Join Parameter Command

This command allows to directly set the join parameters.

Command	ATJ=<application EUI>,<device key>
Response	OK

Example:

```
→ ATJ=DEDEAAAA0000001A,AA5555555555555555AAAAAAAAAAAAAA
← OK
```

4.6.2 Query Join Parameter Command

This command returns the join parameters. If no join parameters are set, ERROR will be returned.

Note: The device key is not returned by the modem!

Command	ATJ?
Response	OK, <device EUI>,<application EUI>

Example:

```
→ ATJ?
← OK,FFFFFFFFFFFFFFFF00,DEDEAAAA0000001A
```

4.7 Join Command

This command triggers the over-the-air(OTAA) activation using the configured join parameters to establish a new session. If no join parameters are configured the command will return ERROR.

Command	ATJ
Response	OK
Events	EV_JOINING EV_JOINED

The command immediately triggers the JOINING event and the session LED starts blinking. When the join procedure succeeded a JOINED event is generated and the session LED is turned on. The newly established session parameters will be stored persistently and the sequence counters will be reset to zero.

Example:

```
→ ATJ
← OK
← EV_JOINING
← EV_JOINED
```

4.8 Transmit Command

This command is used to send upstream data to the network server. If the modem is not activated and join parameters are set, the modem will implicitly join and establish a new session. If the modem is not activated and no join parameters are set, ERROR will be returned.

Command	ATT<confirmed>,<port>[,<data>]
Response	OK
Events	EV_TXCOMPLETE, <flags>[, <port>[, <data>]]

The data is addressed to a specific port (01-FF) and can be requested to be confirmed (0 or 1). After the data is sent by the modem it will check for downstream frames sent by the server. These frames could contain protocol information (like ACK or NACK), or application data. In any case an EV_TXCOMPLETE event will be generated to signal transmission and optional reception (see section 4.11 for description of event messages). **Note:** The data will only be sent at the point in time allowed by the modem's duty cycle.

Example:

```
→ ATT0,FF,1122334455      (send data unconfirmed to port 255)
← OK
← EV_TXCOMPLETE,00        (data sent, nothing received)

→ ATT1,03,112233          (send data confirmed to port 3)
← OK
← EV_RXCOMPLETE,A2        (data sent, ACK received in second window)

→ ATT0,04,112233          (send data unconfirmed to port 4)
← OK
← EV_RXCOMPLETE,02,0A,C0FFEE (data sent, data received in second window on port 10)
```

4.9 Global Parameters(Channel & Session flag)

This command config work channel lists and session flag.

4.9.1 Query Global Parameters Command

This command returns the current parameters. By default it's 00,00,03.

Command	ATG?
Response	OK, <session flag>,<node type>,<channel mask>

Session flag can be "00"(OTAA default in factory parameters), or "01"(ABP)

Node type can be 0x00(Class A)、0x02(Class C)

Channel mask can be 0x070000000000, it must be 6 bytes, every bit with value of 1 to indication this channel is active. In this example, channel 0,1,2 is active

Example:

```
→ ATG?
← OK,00,070000000000 (Class A, work on channel 0,1,2)
```

4.9.2 Set Global Parameters Command

This command config channel list and session flag.

Command	ATG=<node type>,<channel mask>
Response	OK

Example:

```
→ ATG=00,070000000000 (Class A, work on channel 0,1,2)
← OK

→ ATG?
← OK,00,070000000000
```

4.10 Alarm Timer Command

This command sets an alarm timer to the specified number of seconds (variable-length HEX). When the timer expires an EV_ALARM event is generated. It can be used by the end device to periodically wake up or schedule actions at a specified time.

Command	ATA<seconds>
Response	OK
Events	EV_ALARM

Example:

```
→ ATA1E (request ALARM event in 30 seconds)
```

← OK

4.11 Events

The following events can be generated by the modem.

- **EV_JOINING**
The modem has started joining the network.
- **EV_JOINED**
The modem has successfully joined the network and is now ready for data exchanges.
- **EV_JOIN_FAILED**
The modem could not join the network (after retrying).
- **EV_TXCOMPLETE**
The data has been sent, and eventually downstream data has been received in return. If confirmation was requested, the acknowledgement has been received.
- **EV_RXCOMPLETE**
Downstream data has been received.

Most events don't have return parameters and will be reported only with the event name. Only the two events **EV_TXCOMPLETE** and **EV_RXCOMPLETE** do have return parameters:

- **EV_TXCOMPLETE**,<recv flags>]
- **EV_RXCOMPLETE**,<recv flags>[,<port>[,<data>]]

Both event messages are always followed by flags to indicate the reception state. Optionally these events are appended with port information and the received application data.

The reception flags are coded as two ASCII digits <X><Y> with the following meaning:

Digit Value	Description
<X> = 0	No information
<X> = A	Frame acknowledged, ACK
<X> = N	Frame not acknowledged, NACK
<Y> = 0	No frame received
<Y> = 1	Frame received in down window 1
<Y> = 2	Frame received in down window 2

5. Release History

Version and date	Description
V 1.0 February 2018	Initial version.