

OpenCPI FPGA Reference Platform, PCIe Memory Address Map

Shepard Siegel, Atomic Rules LLC (Shepard.Siegel@atomicrules.com)

Revision	Date	By	Notes
0.01	2009-03-27	ssiegel	Draft
0.02	2009-04-01	ssiegel	Worker Status Register Added
0.03	2009-04-03	ssiegel	Worker Attention Register Added
0.04	2009-04-22	ssiegel	WCI "Last Access" Added, Details Added, GCD Worker Added
0.05	2009-04-24	ssiegel	Minor Refinements
0.06	2009-06-03	ssiegel	Remove Mixed Registers
0.07	2009-06-24	ssiegel	Add Data-Plane Registers
0.08	2009-06-30	ssiegel	Data Plane Evolution, Parametric Runtime Buffers, Size, Bases
0.09	2009-07-02	ssiegel	Data Plane Functional Change
0.10	2009-07-06	ssiegel	Data Plane DMA Registers
0.11	2009-07-10	ssiegel	Inserted BiasWorker into example application container
0.12	2009-08-14	ssiegel	Rework Control-Plane memory map to 16 MB BAR0
0.13	2009-08-21	ssiegel	Refine Data Plane DMA Registers
0.14	2009-09-08	ssiegel	Allow Data Plane programmable Producer/Consumer Roles
0.15	2009-10-13	ssiegel	Change Data Plane Control Options
0.16	2009-10-30	ssiegel	OCCP changes to enhance function of PPS.NS clock
0.17	2009-11-24	ssiegel	Begin to add RPL Time Services
0.18	2009-12-10	ssiegel	Add Data-Plane buffer size at DPCP+0x4C
0.19	2009-12-11	ssiegel	Add fabFlowSize, fabFlowBase, flowDiagCount
0.20	2010-01-06	ssiegel	Add Data-Plane info structures, FTop' workers
0.21	2010-01-25	ssiegel	Introduce SMAAdapter
0.22	2010-02-04	ssiegel	More Time Service Details, Diagram
0.23	2010-02-18	ssiegel	Added Time Set and Delta Measure
0.24	2010-03-03	ssiegel	Refine Time, ADC Capture
0.25	2010-06-01	ssiegel	WIP Interface Debug Registers Added
0.26	2010-06-08	ssiegel	Manipulate FrameGate Registers
0.27	2010-06-27	ssiegel	Correct SMAAdapter Extended Properties
0.28	2010-06-29	ssiegel	New Worker features and modes captured
0.29	2010-07-23	ssiegel	Add Power Spectral Density (PSD) Worker description

This document describes the PCIe memory address map of the OpenCPI Reference Platform.

PCIe Block Plus Endpoint (BPEP) Configuration v1.13 (ISE11.4)

The table below lists the changes from default for the BPEP not related to the BARs.

Table 1 – Virtex5 PCIe Gen1 Parameters

Parameter	Value	Value
lane_width [1]	x8, x4, x1	x8, x4, x1
interface_freq	125 MHz	250 MHz
device_id	16'h_4243	16'h_4243
revision_id	02	03

Table 2 – Virtex6 PCIe Gen2 Parameters

Parameter	Value
lane_width	x4
interface_freq	250 MHz
device_id	16'h_4243
revision_id	02

Table 3 –Spartan6 PCIe Gen2 Parameters

Parameter	Value
lane_width	X1
interface_freq	250 MHz
device_id	16'h_4243
revision_id	02

[1] lane width set per board target.

BAR0 and BAR1 are set to the following parameters; the other BARs are disabled.

BAR0	BAR1
bar0_64bit=false bar0_enabled=true bar0_prefetchable=false bar0_scale=Megabytes bar0_size=16 bar0_type=Memory bar0_value=FF00_0000	bar1_64bit=false bar1_enabled=true bar1_prefetchable=false bar1_scale=Kilobytes bar1_size=64 bar1_type=Memory bar1_value=FFFF_0000

BAR0 – 16 MB Memory for Administration and Workers

BAR0 is a 16MB space that is used for accessing a 1 MB Administrative area, as well as fifteen identical 1MB Worker Configuration Property areas. The table below shows how the top four Byte-address bits[23:20] of the 24b Byte address are used to select one of the sixteen 1MB regions.

The 1MB Administrative (“Admin”) region contains a 64KB area that can affect the entire FPGA; along with fifteen identical 64KB worker control regions, which provide Control (and Status) of individual workers. Each of the 15 Worker Configuration Property regions provides a full, contiguous 1MB memory map to each worker’s configuration property space.

BAR0 Offset	Size	Region	In oc1001	In ocXXXX
+0x00_0000	64KB	Administrative (“Admin”)	admin	admin
+0x01_0000	64KB	Control, Worker 0	Gcd	
+0x02_0000	64KB	Control, Worker 1	Gcd	
+0x03_0000	64KB	Control, Worker 2	FCAdapter	
+0x04_0000	64KB	Control, Worker 3	Bias	
+0x05_0000	64KB	Control, Worker 4	FPAdapter	
+0x06_0000	64KB	Control, Worker 5		
+0x07_0000	64KB	Control, Worker 6		
+0x08_0000	64KB	Control, Worker 7		
+0x09_0000	64KB	Control, Worker 8		
+0x0A_0000	64KB	Control, Worker 9		
+0x0B_0000	64KB	Control, Worker 10	ADC	
+0x0C_0000	64KB	Control, Worker 11	DAC	
+0x0D_0000	64KB	Control, Worker 12	FtpUtil	
+0x0E_0000	64KB	Control, Worker 13	DP0	
+0x0F_0000	64KB	Control, Worker 14	DP1	
+0x10_0000	1MB	Configuration, Worker 0	Gcd	
+0x20_0000	1MB	Configuration, Worker 1	Gcd	
+0x30_0000	1MB	Configuration, Worker 2	FCAdapter	
+0x40_0000	1MB	Configuration, Worker 3	Bias	
+0x50_0000	1MB	Configuration, Worker 4	FPAdapter	
+0x60_0000	1MB	Configuration, Worker 5		
+0x70_0000	1MB	Configuration, Worker 6		
+0x80_0000	1MB	Configuration, Worker 7		
+0x90_0000	1MB	Configuration, Worker 8		
+0xA0_0000	1MB	Configuration, Worker 9		
+0xB0_0000	1MB	Configuration, Worker 10	ADC	
+0xC0_0000	1MB	Configuration, Worker 11	DAC	
+0xD0_0000	1MB	Configuration, Worker 12	FtpUtil	
+0xE0_0000	1MB	Configuration, Worker 13	DP0	
+0xF0_0000	1MB	Configuration, Worker 14	DP1	

In addition to 32b DWORD access, the hardware respects multi-DWORD transactions (e.g. 64b 2-DW, or DMA N-DW) to this BAR.

Not all Workers need be populated in the application container.

BAR0 – Administrative “Admin” Region Registers

This section describes the administrative region registers, the 64KB space at the base of BAR0.

Admin Region Offset	Name	Access	Description
+0x0000	ByteSwap(0x4F70656E)	RO	0x4F70656E = ASCII “Open”
+0x0004	ByteSwap(0x43504900)	RO	0x43504900 = ASCII “CPI” [1]
+0x0008	cpRevision	RO	Control Plane Revision
+0x000C	cpBirthday	RO	Control Plane Birthday
+0x0010	cpConfig	RO	Control Plane Configuration
+0x0014	pciDevice	RO	PCIe Device ID
+0x0018	wrkAttn	RO	Worker Attention Register
+0x001C	cpStatus	RO	Control Plane Status
+0x0020	scratch20	Read/Write	GP Scratch Register 0x20
+0x0024	scratch24	Read/Write	GP Scratch Register 0x24
+0x0028	cpControl	RW	Control Plane Control
+0x002C		RO	Reserved
+0x0030	rplTimeStatus	RO	Time Status Register
+0x0034	rplTimeControl	RW	Time Control Register
+0x0038	rplTimeMS	[2] RW (stage)	RPL Time Integer Seconds
+0x003C	rplTimeLS	[2] RW (commit)	RPL Time Fractional Seconds
+0x0040	rplTimeCompareMS	[2] RW (stage)	Time Compare Argument MS
+0x0044	rplTimeCompareLS	[2] RW (commit)	Time Compare Argument LS
+0x0048	rplTimeRefPerPps	RO	Number of Ref Clocks Per PPS
+0x4C~78			Reserved
+0x007C	numDPMemRegions	Read-Only	Number of DP Mem Regions
+0x0080- +0x00BC	dpMemRegion 0-15	Read-Only	DP MemRegion 0-15 Info

1. Note that the ASCII characters “CPI” are followed by a NULL, not a Space.
2. Locations 0x38, 0x40, and 0x48 are 8B stores where the LS DWORD must first be staged, and the MS DWORD performs the commit. On a little-endian (e.g. x86) platform, this will happen automatically for a 64b store over PCIe, where the first DWORD of the 8B write goes to the lower address; and the second DWORD of the 8B write goes to the higher address.

cpRevision (Admin Base +0x0008)

This register indicates control plane revision number.

cpBirthday (Admin Base +0x000C)

This register indicates when the bitstream was built. (32b POSIX time)

cpConfig (Admin Base +0x0010)

This register indicates in bits [14:0] which of 15 possible WCI interfaces have been connected in the application. A logic '1' in a particular bitfield means that a worker is connected to that interface; a logic '0' means that there is no WCI interface present, and thus no worker. The Hamming Weight, the number of logic '1's in this register, is the number of workers connected. Bit 0 corresponds to Worker 0.

pciDevice (Admin Base +0x0014)

This register indicates PCI device ID in bits [15:0]

wrkAttn (Admin Base +0x0018)

This register indicates in bits [14:0] which, if any, worker has a non-zero sticky bit status. There is a one-to-one correspondence between worker number and bitfield. If a particular bit is set, further details may be found by reading that worker's Worker Status Register. This register provides the utility of a single read which can indicate if any worker has a sticky bit set. Bit 0 corresponds to Worker 0.

cpStatus (Admin Base +0x001C)

Control plane admin register. Bits [3:0] hold the number of "rogue" TLP packets received since reset.

scratch20/24 (Admin Base +0x0020/24)

These registers may be used for DWORD R/W tests with no side effect.

cpControl(Admin Base +0x0028)

The bitfields in this register control the functions described in the table below:

Bits	Name	Access	Description
31:24		Reserved	0
23:16		Reserved	0
15:8		Reserved	0
7:0		Reserved	0

rplTimeStatus (Admin Base +0x0030)

The bitfields in this register provide the status described in the table below:

Bits	Name	Access	Description
31	ppsLostSticky	RO	1 = An active PPS fell outside the 0.1% (1000 PPM) window
30	gpsInSticky	RO	1 = At least one valid GPS time has updated rplTime
29	ppsInSticky	RO	1 = At least one valid PPS input has aligned rplTime
28	timeSetSticky	RO	1 = At least one valid CP set has been issued to rplTime
27	ppsOK	RO	1 = PPS fell within the valid window in the last second
26	ppsLost	RO	1 = PPS went missing from the valid window in the last second
25:8		RO	0
7:0	rollingPPSIn	RO	8b rolling count of (external) PPS Events

rplTimeControl (Admin Base +0x0034)

The bitfields in this register control the functions described in the table below.

Bits	Name	Access	Description
31	clearStickyBits	WO	Writing a 1 to this location clears time sticky bits
30:5		Reserved	
4	disableServo	RW	0 = Use CP, PPS, or GPS to discipline local XO timebase 1 = Disable servo, local XO runs w/o compensation
3	disableGPS	RW	0 = Acquire GPS Time from (external) GPS 1 = Disable (external) GPS dialog attempts
2	disablePPSIn	RW	0 = Observe and Synchronize to (external) PPS Input 1 = Disable observation of (external) PPS Input
1:0	drivePPSOut	RW	2'h0 = Time Server Integer Seconds (1 Hz) 2'h1 = PPS Input Loop-through (PPS Hz) 2'h2 = Local XO Reference / 2 (100 MHz) 2'h3 = Mute (output disabled)

rplTime MS, LS (Admin Base +0x0038, 3C)

This 8B location provides a method for the control plane (CP) fabric to set and observe the FPGA master chip clock. Time is represented in unsigned fixed-point 32.32 format where the radix point is immediately to the right of integer seconds. Writes set the time; reads provide the time.

rplTimeCompare MS, LS (Admin Base +0x0040, 44)

This 8B location is a diagnostic instrument that measures the difference between the time written and the value of the time server's clock at this instant this register is written. There is no side-effect to the use of this instrument. The 8B signed 32.32 delta value is read from this location at any time after the measurement was made.

rplTimeRefPerPPS (Admin Base +0x0048)

This 4B RO location is a diagnostic instrument, literally a frequency counter, that measures the number of uncompensated local XO cycles that occur between successive (external) PPS events. It is updated after each PPS event. If the PPS signal is considered "exact"; then this count may be used to observe the second-to-second behavior of the local 200 MHz XO. Given a +/- 50 PPM XO, this count may be 200e6 +/- 10e3

Dataplane Memory Region Provisioning

The value conveyed in numDPMemRegions in conjunction with the subsequent data structure in dpMemRegion[] advertises the provisioned capabilities of this bitstream's dataplane memory regions.

numDPMemRegions (Admin Base +0x007C)

The bitfields in this register control the functions described in the table below:

Bits	Name	Access	Description
31:4		Reserved	0
3:0	numDPMemRegions	RO	The number of dataplane memory regions

dpMemRegion[x] Structure (Admin Base +0x0080, 84, ...)

Each 32b DW starting at AdminBase+0x80 describes a dataplane memory region. Only numDPMemRegions are populated. For example, if numDPMemRegions==2, then only the region structure members at 0x80 (for member 0) and 0x84 (for member 1) will be valid.

Bits	Name	Description
31:28	PCIe BAR	The PCIe BAR is this memory region belongs to
27:14	Offset, 4KB pages	Offset into this is PCIe BAR, in 4KB pages
13:0	Size, 4KB pages	Size of this memory region, in 4KB pages

The PCIe BAR says in which BAR (never 0), this memory region is decoded.

The Offset, specifies the offset from the base of the BAR, in 4KB pages.

The Size, specifies the size of the memory region, in 4KB pages.

BAR0 – Worker Control Operation Space

Every worker has a fixed set of **Control Operations**. The worker control aspect is a common model which allows all workers to be managed without having to customize the management software for each individual worker. (Do not confuse with **Configuration Properties**, described next, which allow components to be specialized at runtime.)

This section describes the worker control region registers, the 64KB space allocated to each worker, where the base address is $0x0W_A_0000$.

Where the hex nibble $W_A = (W_N + 1)$ is one of the 15 worker ordinal numbers, $W_N = \{0, 1, \dots, 14\}$.

For example, the first worker, worker W0, has its control region based at BAR0 offset 0x01_0000. The second worker, worker W1, at offset 0x02_0000, and so on.

Worker Control Offset	Access	Description
+0x00	Read-Only	Control-Op: Initialize
+0x04	Read-Only	Control-Op: Start
+0x08	Read-Only	Control-Op: Stop
+0x0C	Read-Only	Control-Op: Release
+0x10	Read-Only	Control-Op: Test
+0x14	Read-Only	Control-Op: BeforeQuery
+0x18	Read-Only	Control-Op: AfterConfig
+0x1C	Read-Only	Control-Op: Rsvd7
+0x20	Read-Only	Worker Status Register
+0x24	Read/Write	Worker Control Register
+0x28	Read-Only	lastConfigAddress
+0x2C	Write-Only	Worker Sticky Clear
+0x30	Reserved	-
+0x34	Reserved	-
+0x38	Reserved	-
+0x3C	Reserved	-

There are four possible responses to Control-Op Reads, they are

Value	Description
0xCODE_4201	OK
0xCODE_4202	ERROR
0xCODE_4203	TIMEOUT
0xCODE_4204	WORKER IS RESET

Worker Status Register (Worker Control Offset +0x20)

Each worker has its own worker status register located 32B before the end of each worker's control space. The worker status register is located at an offset of 0xFFE0. If *N* is a hex nibble specifying the **worker ordinal plus one**, then that worker's status register is located at BAR0 address of 0x0N_FFE0.

The worker status register contains both status bits with diagnostic information of the last access and sticky bits which capture events and require a specific action to clear. The worker status register collection of sticky bits are initially set to zero at power up reset and set and held if a specific exception event occurs. The sticky bit remains set until the register is cleared.

- Clearing the sfCap bit: Write a '1' to bit location 9 (0x0000_0200) at the worker sticky clear address.
- Clearing the other sticky bits: Write a '1' to bit location 8 (0x0000_0100) at worker sticky clear address.

The sFlag Captured bit signals that the worker asserted sFlag for one or more control clock cycles. The nine other sticky bits serve to capture the cause(s) of error, should the worker not respond normally to a sequence of one or more requests. The sticky bits capture what kind of exception (timeout, fail, err) as well as what was the pending request when the exception occurred (cfgWt, cfgRd, ctlOp). Since these nine bits are sticky, they accumulate all exceptions that may have occurred since the status was reset.

Bit	Name	Access	Description
31-28		Reserved	0
27	lastOpWrite	RO	1=last op was write
26-24	lastControlOp	RO	Last control Op
23-20	lastConfigBE	RO	Last BE used
19		RO	lastOpWrite is Valid
18		RO	lastControlOp is Valid
17		RO	lastConfigBE is Valid
16		RO	lastConfigAddr is Valid
15-10		Reserved	0
9	sfCap	RO (Sticky)	sFlag Captured
8	reqTO.cfgWt	RO (Sticky)	Time-Out of a Config-Write
7	reqTO.cfgRd	RO (Sticky)	Time-Out of a Config-Read
6	reqTO.ctlOp	RO (Sticky)	Time-Out of a Control-OP
5	reqFAIL.cfgWt	RO (Sticky)	Resp-Fail of a Config-Write
4	reqFAIL.cfgRd	RO (Sticky)	Resp-Fail of a Config-Read
3	reqFAIL.ctlOp	RO (Sticky)	Resp-Fail of a Control-OP
2	reqERR.cfgWt	RO (Sticky)	Resp-Err of a Config-Write
1	reqERR.cfgRd	RO (Sticky)	Resp-Err of a Config-Read
0	reqERR.ctlOp	RO (Sticky)	Resp-Err of a Control-OP

Worker Control Register (Worker Control Offset +0x24)

Each worker has its own worker control register located 28B before the end of each worker's control space. The worker status register is located at an offset of 0xFFE4. If *N* is a hex nibble specifying the **worker ordinal plus one**, then that worker's status register is located at BAR0 address of 0x0N_FFE4.

The worker reset_n bit [bit 31] drives the reset_n signal to each worker. When clear, the worker is reset. At power on reset, this bit is clear for all workers. This bit must be set to disable reset before interacting with the worker.

The worker timeout bitfield [4:0] sets the number of 8 nS cycles to wait after a command before a timeout condition is declared. This field is the log2 of that threshold. A setting of 4 (the power on default) results in $2^4 = 16$ cycle timeout (128 nS). The maximum setting of 31 corresponds to about 17 seconds. ($2^{31} \times 8 \text{ nS/cy}$). The default timeout setting of 16 cycles (128 nS) may be inadequate for workers requiring more time than that to service their requests. Workers will return the "0xC0DE_4203" TIMEOUT indication if access timer expires before the worker completes the control operation, or acknowledges the configuration property access. In such cases, it is recommended that default timeout for that worker be increased, only as much as needed. Higher timeout values add to the upper bound on the maximum latency that can be expected for a response from the system.

The power-on reset value of this register is 0x0000_0004. This means the worker is reset.

To take a worker out of reset, retaining the default 16 cycle timeout, write 0x8000_0004 to this register.

Bit	Name	Access	Description
31	wrkReset_n	RW	Worker Reset_n
30-5		RW	Spare
4-0	wrkTimeOut	RW	Log ₂ control cycles for Timeout

BAR0 – Worker Configuration Properties Space

Worker **Configuration Properties** are named storage locations of a worker that may be read or written. Their values indicate or control aspects of the worker's operation. Reading and writing configuration property values may or may not have side effects on the operation of the worker. Configuration properties with side effects can be used for custom worker control. Each worker may have its own, possibly unique, set of configuration properties. They may include hardware resource such registers, memory, and state.

This section describes the worker configuration properties, the contiguous 1 MB space allocated to each worker, where the base address is $0xW_A0_0000$. Where the hex nibble $W_A = (W_N + 1)$ is one of the 15 worker ordinal numbers, $W_N = \{0, 1, \dots, 14\}$.

For example, the first worker, worker W0, has its configuration properties based at BAR0 offset $0x10_0000$. The second worker, worker W1, at offset $0x20_0000$, and so on.

Each worker has a contiguous 1MB address space which maps directly to 2^{20} Bytes of configuration properties.


About the RPL Time Service (RTS)

RTS maintains a local time clock on an RPL device. It keeps time through a phase-accumulator whose increment is closely related to the frequency of a local crystal oscillator (XO). This XO is typically a timebase from a local, stable “brick”; distinct from other clocks that may have been recovered from a transport (such as a PCIe or Ethernet PHY), whose absolute stability is often less constrained.

The time on the RTS may be set (or observed) by writing (or reading) a configuration property. Select implementations of the RTS employ logic to assist in the IEEE1588 Precision Time Protocol (PTP).

The accuracy of the stable, uncompensated XO (typically ± 50 PPM)¹ can be dramatically improved by connecting a GPS device with a 1 PPS output. Select implementations of RTS logic may automatically detect the presence or absence of the 1 PPS signal and, when available, digitally compensate for the local timebase frequency/phase error. The 1 PPS signal allows the stable, but not necessarily precise, local XO to deliver the long-term precision a GPS reference can provide.


How the RTS is used with Workers that desire Time

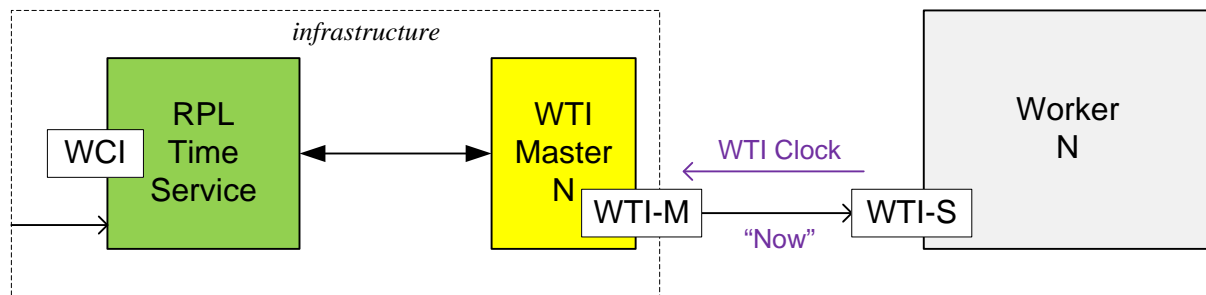

Any worker that desires time can use the Worker Time Interface (WTI) defined in the WIP specification. The worker implementer chooses in which clock domain they want to observe time, and how many bits to the left and right of the “1 second” radix point they wish to observe. The infrastructure then provides each worker with pure-binary, continuous, monotonic, GPS time, in the clock domain and format specified.

The RTS clock supports multiple workers each asking for time in a different clock domain by instantiating as many WTI Masters as are required. Baseline implementations of WTI masters are area-efficient synchronizers that bring the RPL time into the WTI clock domain. Higher-accuracy implementations shadow the RPL time with a phase-accumulator in the WTI clock domain.

¹ Local XO frequency tolerance is board dependent. Contemporary platforms (e.g. Xilinx ML605) use a 200 MHz SAW XO with ± 50 PPM (Epson EG-2121CA)

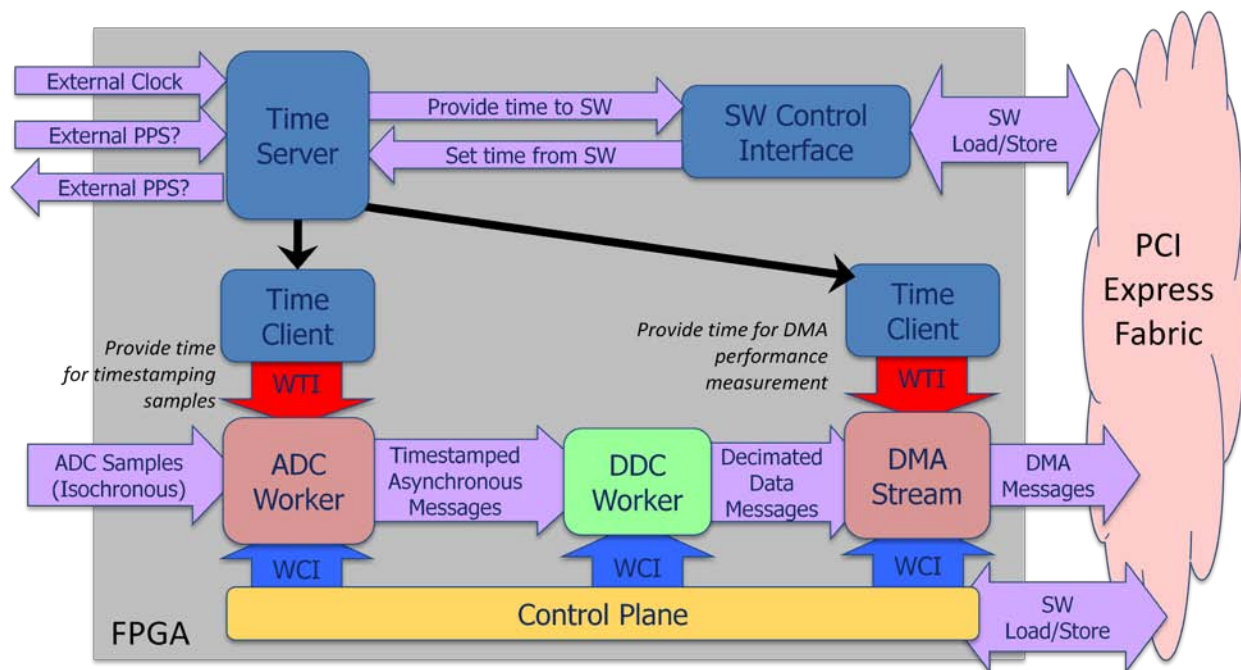

RPL Time Server Properties

This section describes the properties of the RPL Time Service (RTS) from the

Admin Offset	Name	Access	Description
+0x0030	rplTimeStatus	RO	Time Status Register
+0x0034	rplTimeControl	RW	Time Control Register
+0x0038	rplTimeMS	[2] RW (stage)	RPL Time Integer Seconds
+0x003C	rplTimeLS	[2] RW (commit)	RPL Time Fractional Seconds
+0x0040	rplTimeCompareMS	[2] RW (stage)	Time Compare Argument MS
+0x0044	rplTimeCompareLS	[2] RW (commit)	Time Compare Argument LS
+0x0048	rplTimeRefPerPPS	RO	Reference Clocks per PPS

Using the RPL Time Server

Requires re-write for host-based time control.

~~Take the worker out of reset. Set the configuration properties. Send the INITIALIZE and START control-ops. (Optionally) Update the clock by writing the time in seconds.~~

~~At any time other than the interval between INITIALIZE and START, the RTS clock may be set by writing setSeconds. At the instant of writing setSeconds, the RTS time is transferred to a "WhenSet" holding register.~~

~~Clock time may be observed as a 64b (32.32) value at offset 0x10. This format of time is "binary coherent" across all 64 bits.~~

~~Clock time may also be read 32b Seconds and 32b Nanoseconds (IEEE-1588) at location 0x14. This form of time "count nanoseconds" in the 32 lsbs, which never exceed 10^9 .~~

GCD Worker Configuration Properties

This section describes the configuration properties of the GCD worker.

Worker Base Offset	Access	Description
+0x0000	RW	GCD Argument “r0”
+0x0004	RW	GCD Argument “r4”
+0x0008	RO	GCD Result
+0x000C	RO	GCD Result Ready (bit0)
+0x0010	RO	Worker Ordinal Number
+0x0014	RO	Counter
+0x0018	RW	B18
+0x0018	RW	B19
+0x0018	RW	B1A
+0x0018	RW	B1B
+0x001C	RW	<No Response Generated>
+0x0020	RW	Bit[31:1] - Reserved Bit[0] - sFlagState

Using the GCD Worker

Take the worker out of reset. Send the INITIALIZE and START control-ops.

Write GCD arguments to r0 and r4 registers. A write to either property r0 or r4 will initiate GCD calculation when in the Operating state. The GCD Result Ready register will indicate with b0 True when the result is ready. When result is ready, read the GCD Result register. The GCD Result register will return the code 0xBADBADBA if there is not a valid GCD result ready.

Other Features

The counter at location 0x14 will count when the control state is “Operating” and will reset when the control state is “Initialized”.

Four discrete byte-sized registers with the power-on reset value equal to their address are packed at the DWORD 0x0018. Individual byte or word writes may be tested by writing these locations.

The location 0x001C will (on purpose) never generate a response and may be used to test the timeout handling.

The location 0x0020 allows SFlag to be set or cleared at Bit-0

Stream-Message Adapter (SMAadapter) Worker Configuration Properties


This section describes the configuration properties of the SMAadapter

Worker Base Offset	Property Name	Access	Description
+0x0000	smaCtrl	RW	Control Register (see text)
+0x0004	mesgCount	RO	WMI Rolling 32b message count
+0x0008	abortCount	RO	WMI Rolling 32b abort count (imprecise)
+0x000C		RO	Reserved
+0x0010	thisMesg	RO	WSI-S {opcode[7:0], mesgLength[23:0]}
+0x0014	lastmesg	RO	WSI-S {opcode[7:0], mesgLength[23:0]}
+0x0018	portStatus	RO	Port Status: WSI-S[15:8], WSI-M[7:0]
+0x001C	0	RO	
+0x0020	pMesgCount	RO	WSI-S
+0x0024	iMesgCount	RO	WSI-S
+0x0028	tBusyCount	RO	WSI-S
+0x002C	pMesgCount	RO	WSI-M
+0x0030	iMesgCount	RO	WSI-M
+0x0034	tBusyCount	RO	WSI-M


Using SMAadapter

The Stream-Message Adapter (SMAadapter) implements one of the five adapter topologies shown at right. A control register set prior to START determines the module's function. Six RO diagnostic registers measure the flow of messages past each port.


Bits	Name	Description
31:6		Reserved
5	impWsiM	0=Normal; 1=Force Imprecise on WSI-M egress
4	nixWsiM	0=Normal; 1=No Put to WSI-M port (/dev/null)
3:0	mode	0 = Pass WSI-S to WSI-M 1 = WMI to WSI-M 2 = WSI-S to WMI 3 = Fork WSI-S to both WSI-M and WMI 4 = Merge WSI-S and WMI to WSI-M 5:15 = Reserved




WSI Pass




WMI to WSI Adapter



WSI to WMI Adapter



WSI Monitor/Split/Fork



WSI-WMI Merge/Join

To start each worker, de-assert reset, and then issue the INITIALIZE and START control operations in sequence.

The following read-only (instrumentation) properties are initialized to zero at reset and on an INITIALIZE control-op. They are available for each of the three ports WMI, WSI-S, and WMI-M individually

The _MCnt registers maintain a 32b unsigned rolling message count (MCnt). This count is updated at message completion and indicate "how many messages have moved through this port".

The `_MLast` registers sample the opcode and `msgLength` of the last message processed. This data is updated as soon as new information is available; but cannot be relied on to determine if a particular message has completed ingress or egress from any port. The `msgLength` is given in Bytes.

DelayWorker Configuration Properties

This section describes the configuration properties of the DelayWorker

Worker Base Offset	Property Name	Access	Description
+0x0000	dlyCtrl	RW	Bits[3:0] 4'h0=Bypass (no delay); 4'h7=Delay
+0x0004	dlyHoldoffBytes	RW	Number of bytesWritten to holdoff before read
+0x0008	dlyHoldoffCycles	RW	Number of cyclesPassed to holdoff before read
+0x000C	mesgWtCount	RO	Incremented by Message Finalize (WSI-S)
+0x0010	mesgRdCount	RO	Incremented by Message Body Response (WSI-M)
+0x0014	bytesWritten	RO	Saturating WSI-S Monitor
+0x0018	portStatus	RO	0[31:24], WMEMI-M[23:16], WSI-S[15:8], WSI-M[7:0]
+0x001C	0	RO	
+0x0020	WSI-S: pMesgCount	RO	
+0x0024	WSI-S: iMesgCount	RO	
+0x0028	WSI-S: tBusyCount	RO	
+0x002C	WSI-M: pMesgCount	RO	
+0x0030	WSI-M: iMesgCount	RO	
+0x0034	WSI-M: tBusyCount	RO	
+0x0038	wmemiWrReq	RO	WMemI Write Requests Issued (LSB=16B)
+0x003C	wmemiRdReq	RO	WMemI Read Requests Issued (LSB=16B)
+0x0040	wmemiRdResp	RO	WMemI Read Responses Received (LSB=16B)
+0x0044	dlyWordsStored	RO	Accumulator Tracking Words Stored (LSB=16B)
+0x0048	dlyReadCredit	RO	Number of outstanding Read Credits (LSB=16B)
+0x004C	dlyWAG	RO	Write Address Generator (LSB = 16B)
+0x0050	dlyRAG	RO	Read Address Generator (LSB= 16B)
+0x0054	dlyMaxReadCredit	RW	4=Default (design debug use only)
+0x0058	dlyRdOpZero	RO	Rolling 32b count of Read Side Meta opcode==0
+0x005C	dlyRdOpOther	RO	Rolling 32b count of Read Side Meta opcode!=0

Using the DelayWorker

The DelayWorker delays messages by storing them in a DRAM-based circular buffer. Incoming messages are stored as they arrive. Outgoing messages do not begin until both the dlyHoldoffBytes and dlyHoldoffCycles constraints have been satisfied. The cycle counter, (nominally counting 125 MHz / 8nS cycles), begins counting when the first message arrives.

For example, to delay a message stream by 1 second, set the delayHoldoffCycles to 125E6; and leave dlyHoldoffBytes at its default of 0. To use the DelayWorker, de-assert reset, and then issue the INITIALIZE and START control operations in sequence.

The DelayWorker delay function **requires** the WMemI interface, typically provided by an FTop' DramServer. It is essential to the message delay function that the WMemI service provider be initialized and started with an observed successful DRAM PHY training **before** using the DelayWorker for delay.

The yellow-lined, read-only instrumentation properties provide details of the internal state. These include: Multiplexing the metadata and message streams into a sequence of 16B words and write these words to DRAM memory. When the read criterion has been satisfied, begin reading these 16B words from DRAM memory and splitting them back into metadata and message streams.

PSD Configuration Properties

This section describes the configuration properties of the PSD

Worker Base Offset	Property Name	Access	Description
+0x0000	psdStatus	RO	Bit0=hasDebugLogic
+0x0004	psdCtrl	RW	Bits[1:0]={0=PsdPass;1=PsdPrecise;2=PsdFFT;3=PSDSpare}
+0x0008			
+0x000C			
+0x0010		RO	WSI-S[15:8], WSI-M[7:0]
+0x0014	WSI-S: pMesgCount	RO	
+0x0018	WSI-S: iMesgCount	RO	
+0x001C	WSI-S: tBusyCount	RO	
+0x0020	WSI-M: pMesgCount	RO	
+0x0024	WSI-M: iMesgCount	RO	
+0x0028	WSI-M: tBusyCount	RO	
+0x002C	fftFrameCounts	RO	Bits[31:16]=framesLoaded, Bits[15:0]=framesUnloaded

Using the PSD

The PSD worker calculates an approximation of the Power Spectral Density function of 4K input sample frames. Only the PsdPass, PsdPrecise, and PsdFFT modes are supported. Setting PsdFFT yields the desired PSD function by approximately the steps described here:

1. Precise Frame Formatting, WsiToPrecise
Format an imprecise-burst of time-domain samples from a prior stage into a precisely-sized message buffer.
2. Windowing of Time-Domain Data
Prior to the forward FFT, the real input data is windowed with a raised-cosine (Hamming) function to balance spectral leakage against sensitivity in the finite length transform to follow.
3. Gear Shift 125MHz to 250 MHz
Two samples per cycle at 125 MHz are converted to One sample per cycle at 250 MHz
4. 8K Streaming, Pipelined, Forward FFT, Natural Ordered Output
Implemented by wrapping a FPGA Vendor Core (eg fft-v5-4k-stream-natural) Core operates at 250 MHz nominal.
The output of the FFT core is a naturally ordered (F-bin 0, 1, 2, ..., 4095) vector of fixed-point complex numbers.
5. Magnitude Approximation
The magnitude of each complex number is approximated by folding all data into the first-quadrant $|i|+|q|$ and then using a technique described by Lyons to estimate magnitude to within 1 dB. The input to this stage are 250 MSPS complex numbers; the output are 250 MSPS unsigned magnitudes. Each vector of 4096 magnitudes is termed a "Power Vector Frame".
6. Power Vector Frame Averaging
Each Power Vector Frame is added into a power vector frame accumulator until the four frames have been accumulated. Then the result is shifted down by two to yield a N=4 Power Vector Frame Average. This is implemented at 250 MHz.
7. Output Formatting
The PSD Output is then a 8KB message containing the 4096 16b unsigned entries of the N=4 averaged power vector frame.
This step includes the Gear Shift from 16b 250 MHz (250 MSPS) to 32b 125 MHz (250 MSPS)

The yellow-lined, read-only instrumentation properties provide details of the internal state. These include the usual monitor and extended-monitor functions for WSI ports. The fftFrameCounts expose two 16b rolling counts the reconcile the loading and unloading of complete frames to the FFT

WsiSplitter2x2 Configuration Properties

This section describes the configuration properties of the PSD

Worker Base Offset	Property Name	Access	Description
+0x0000			
+0x0004	splitCtrl	RW	
+0x0008			
+0x000C			
+0x0010			
+0x0014			
+0x0018			
+0x001C		RO	WSI-S0[31:24], WSI-S1[23:16], WSI-M0[15:8], WSI-M1[7:0]
+0x0020	WSI-S0: pMesgCount	RO	
+0x0024	WSI-S0: iMesgCount	RO	
+0x0028	WSI-S1: pMesgCount	RO	
+0x002C	WSI-S1: iMesgCount	RO	
+0x0030	WSI-M0: pMesgCount	RO	
+0x0034	WSI-M0: iMesgCount	RO	
+0x0038	WSI-M1: pMesgCount	RO	
+0x003C	WSI-M1: iMesgCount	RO	

Using the WsiSplitter2x2

The WsiSplitter2x2 is a 2x2 crossbar bar. There are two WSI Slave inputs S0 and S1; and two WSI Slave outputs. Prior to starting the splitter, it must be programmed by setting bits in the splitCtrl register.

Bit	Function
15	Disable M1 output
8	Select M1 Source 0=S0, 1=S1
7	Disable M0 output
0	Select M0 Source 0=S0, 1=S1

The yellow-lined, read-only instrumentation properties provide details of the internal state. These include the usual monitor and extended-monitor functions for WSI ports.

FrameGate Configuration Properties

This section describes the configuration properties of the FrameGate

Worker Base Offset	Property Name	Access	Description
+0x0000	frameGateStatus	RO	
+0x0004	frameGateCtrl	RW	Bits[3:0] {0=wsiParam, 1=FrameGate}
+0x0008	frameSize	RW	See text
+0x000C	gateSize	RW	See text
+0x0010		RO	WSI-S[15:8], WSI-M[7:0]
+0x0014	WSI-S: pMesgCount	RO	
+0x0018	WSI-S: iMesgCount	RO	
+0x001C	WSI-S: tBusyCount	RO	
+0x0020	WSI-M: pMesgCount	RO	
+0x0024	WSI-M: iMesgCount	RO	
+0x0028	WSI-M: tBusyCount	RO	
+0x002C	Op0MesgCnt	RO	
+0x0030	otherMesgCnt	RO	

Using the FrameGate

The FrameGate worker *frames* and *gates* an incoming stream of messages. FrameSize and GateSize must be integer multiples of the incoming message length.

It first *frames* the data by counting frameSize words of opcode-0 as moves them from WSI-S to WSI-M. Then it *gates* off the input by discarding gateSize opcode-0 words on the WSI-S input. Messages that are not opcode 0 are passed directly from input to output.

When bypassed in wsiPass mode, data flows from WSI-S to WSI-M without change.

The yellow-lined, read-only instrumentation properties provide details of the internal state. These include the usual monitor and extended-monitor functions for WSI ports; as well as rolling counts of the number of opcode 0 and other (non opcode 0) opcodes counted.

DramServer Configuration Properties

This section describes the configuration properties of the DramServer

Worker Base Offset	Property Name	Access	Description
+0x0000	dramStatus	RO	
+0x0004	drmCtrl	RW	
+0x0008	dbg_calib_done	RO	
+0x000C	dbg_calib_err	RO	
+0x0010	dbg_calib_dq_tap_cnt	RO	
+0x0014	dbg_calib_dqs_tap_cnt	RO	
+0x0018	dbg_calib_gate_tap_cnt	RO	
+0x001C	dbg_calib_rd_data_sel	RO	
+0x0020	dbg_calib_ren_delay	RO	
+0x0024	dbg_calib_gate_delay	RO	
+0x0028	32'hCODE_BABE	RO	
+0x002C	wmemiWrReq	RO	
+0x0030	wmemiRdReq	RO	
+0x0034	wmemiRdResp	RO	
+0x0038	wmemi.status	RO	
+0x003C	Wmemi.ReadInFlight	RO	
+0x0040	0	RO	
+0x0044	0	RO	
+0x0048	requestCount	RO	
+0x004C	0	RO	
+0x0050	pReg	RW	
+0x0054	4B WRITE PIO	WO	
+0x0058	4B READ PIO	WO	
+0x005C	mReg	RW	
+0x0060	wdReg[0]	RO	
+0x0064	wdReg[1]	RO	
+0x0068	wdReg[2]	RO	
+0x006C	wdReg[3]	RO	
+0x0080	rdReg[0]	RO	
+0x0084	rdReg[1]	RO	
+0x0088	rdReg[2]	RO	
+0x008C	rdReg[3]	RO	

Using the DramServer

The DramServer provides a DRAM controller allowing a paged, flat-map as well as WMemI port for the user application.

To use the DramServer, de-assert reset, and then issue the INITIALIZE and START control operations in sequence.

The yellow-lined, read-only instrumentation properties provide details of the internal state

Fabric Consumer (FC) and Fabric Producer (FP) Worker Configuration Properties

This section describes the configuration properties of both the FCWorker and FPWorker

Worker Base Offset	Property Name	Access	Description
+0x0000	r0	RW	4B GP Test Register “r0”
+0x0004	mesgCount	RO	32b message count
+0x0008	zeroCount	RO	32b count of zero-sized messages
+0x000C	mesgSum	RO	Rolling 32b sum of message data
+0x0010	lastMesg	RO	{opcode[7:0], mesgLength[23:0]}

Using the FCWorker and FPWorker

The FCWorker is a “Fabric Consumer”; it consumes data from the infrastructure WMI interface by reading and produces a WSI message. The FPWorker is a “Fabric Producer”; it consumes data from its WSI interface and produces and writes a WMI message.

To start each worker, de-assert reset, and then issue the INITIALIZE and START control operations in sequence.

The “r0” register is available to test WCI access. It has no side-effect.

The following read-only properties are initialized to zero at reset and on an INITIALIZE control-op.

The “mesgCount” register maintains a 32b unsigned rolling message count. This count is updated at message egress and thus indicated “how many messages have fully left this worker”.

The “zeroCount” register maintains a 32b unsigned rolling count of zero-sized messages. (The number of non-zero-sized messages may be derived by subtracting the zeroCount from the mesgCount, so long as the counters have not rolled over).

The “mesgSum” register maintains a 32b checksum of each valid 4B word that has advanced.

The “lastMesg” register samples the opcode and mesgLength of the last message processed. This data is updated as soon as new information is available; but cannot be relied on to determine if a particular message has completed ingress or egress from any port. The mesgLength is given in Bytes.

Note: The FabricConsumer (FC) and FabricProducer (FP) IPs use has been depreciated. Use the Stream-Message Adapter (SMAAdapter) instead.

BiasWorker Configuration Properties

This section describes the configuration properties of the BiasWorker

Worker Base Offset	Property Name	Access	Description
+0x0000	biasValue	RW	Bias (offset) to add to each 4B message element. 32b UInt
+0x0004	controlReg	RW	
+0x0008	messagePush	RO	Rolling 32b count of doMessagePush firing
+0x000C	lastOpcode0	RO	Data associated with last Opcode 0
+0x0018	portStatus	RO	Unused[31:16]; Port Status: WSI-S[15:8], WSI-M[7:0]
+0x0020	pMesgCount	RO	WSI-S
+0x0024	iMesgCount	RO	WSI-S
+0x0020	pMesgCount	RO	WSI-M
+0x0024	iMesgCount	RO	WSI-M

Using the BiasWorker

The BiasWorker accepts a message from its WSI Slave input and passes it to its WSI Master output. It transforms all message data by adding the 32b UInt “biasValue” to each 4B element received. Both the message data and the biasValue are handled as 32b unsigned integers (unsigned 32.0 format). A biasValue of zero (the default) lets the message pass unaltered.

To start the BiasWorker, de-assert reset, and then issue the INITIALIZE and START control operations in sequence.

OpenCPI RPL A/D and D/A Worker Control (General Topic)

OpenCPI has generalized analog-to-digital (A/D) collection and digital-to-analog (D/A) emission capabilities that can be specialized for specific board and devices. Control of these ADC and DAC “device workers” are performed with a first-class notion of actual time, as provided by the RPL time service. Both the ADC and DAC workers share a similar control paradigm for gating the ingress or egress of sample data to or from a latency-insensitive message domain. Described below are the methods and properties for controlling ingress (collection) and egress (emission) across the sample/message barrier:

Use of the Worker Control Operations “Start” and “Stop”: No samples shall cross the sample/message barrier, under any condition, unless the worker is in the “Operating” state. The movement of data is initiated across the barrier by a **Trigger Event**, which may be any combination of:

Software Trigger: A configuration property write

Trigger Time Condition: An absolute time that specifies when to trigger

External Trigger In: An input event to the system used as a trigger

A **Trigger Output** is provided to synchronize other devices to the trigger event.

“dwell”: A non-zero dwell specifies a duration over which data will cross the sample/message barrier. It can be thought of as “how long” to be collecting or emitting active signal samples before pausing. A zero dwell duration is a special case that describes infinite dwell.

“start”: A duration that specifies the delay from trigger to the start of the sample/message movement.

“periodic”: From the trigger, a non-zero periodic repeat duration is an interval that will pass before the repeat of the start/dwell pattern. A zero periodic repeat duration is a special case that describes no repeat at all. The end a non-zero periodic interval generates a trigger output.

To minimize latency, and latency-uncertainty (jitter); the effective sample/message bounds has been placed as close to the actual converter circuitry as possible.

The sample/message bounds are strict, transactional barriers. Failure to satisfy the ability to successfully ingress a sample to message (in an ADC Worker); or egress a message to sample (in a DAC Worker), will be recorded and will raise a WCI attention. Conversely, successful status indication at these device workers memorializes the messages and samples that have been processed.

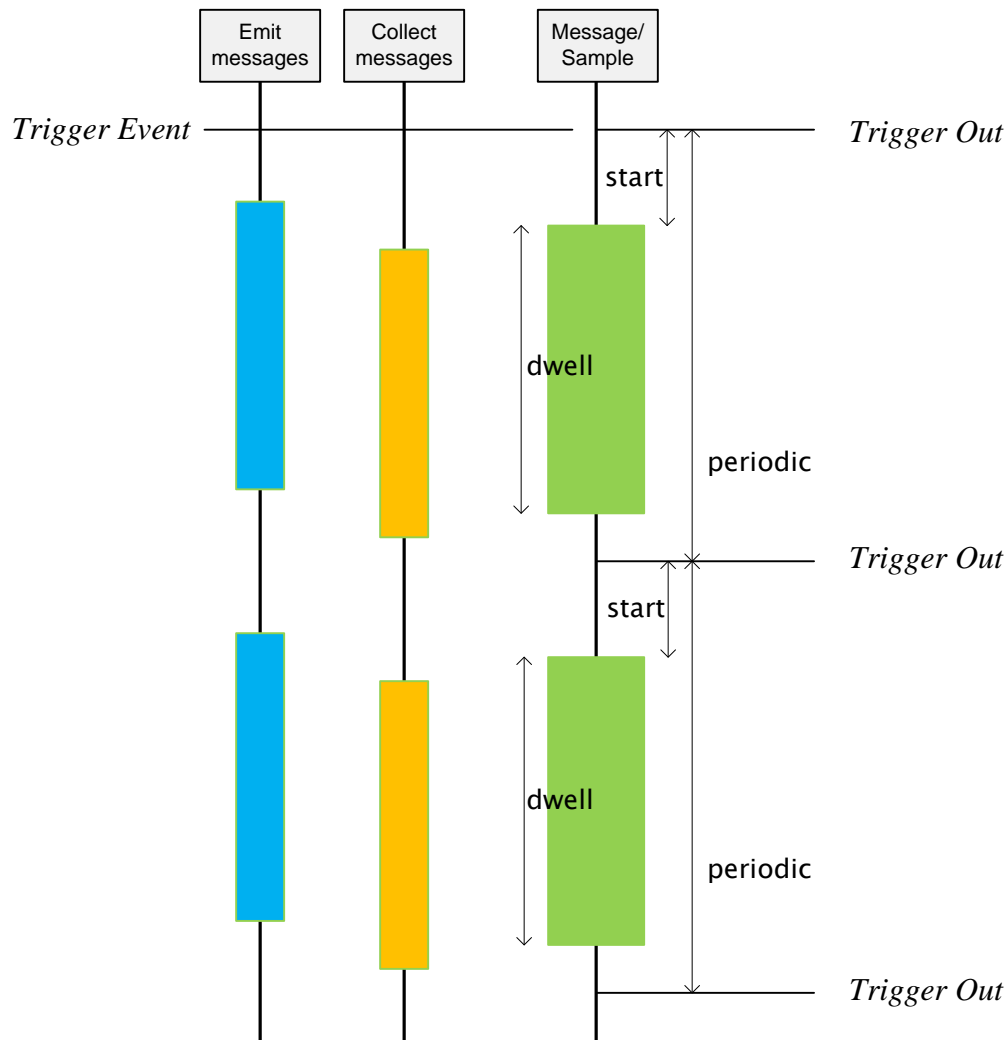


Figure 1 - Sequence Diagram of Message/Sample Barrier

The sequence diagram above shows the following key relationships:

- A trigger event causes a trigger output and establishes a start line
- A non-zero **periodic** creates an endless repetition of the start line
- An offset of **start** is inserted before data is allowed to cross the sample/message barrier
- Data crosses the sample/message barrier for the duration of **dwell** (Green)
- Messages arriving for emission need to arrive in time (Light Blue)
- Messages departing from collection leave as soon as possible (Orange)

ADCWorker “Device Worker”

The ADCWorker is a type of worker known as a “device-worker”, as it is instanced outside the OpenCPI application container in FTop’. Like any other OpenCPI worker, ADCWorker is controlled by its WCI interface (INITIALIZE, START, etc); and its operation is configured by configuration properties. It accepts clock and data from an ADC (or ADCs); and produces one or more WSI-Master message stream outputs.

Following initialization and configuration, the ADCWorker produces several types of messages, identified by opcode. The types of messages produced, and how often they are emitted, are controlled by WCI. The amount of data produced by the WSI-Master is deterministic based on WCI settings and the frequency of the ADC clock (which can be observed by reading a configuration property). A finite-sized FIFO buffers the short-term rate differences and clock domain crossing. This FIFO will overflow if the connected WSI-Slave cannot sustain consumption of the produced ADCWorker messages. When that error condition occurs, it is recorded.

The ADCworker is a client of the RPL Time Service. As such the ADCWorker may be programmed by configuration properties to optionally insert Time information at the start of ADC sample data. Independently, the ADCWorker may be set to send discrete, periodic “beacon” Time messages.

The ADCworker may be triggered, or re-triggered, by several means, including setting specific configuration properties, or the arrival of enabled synchronization (“sync”) signals. Each time the ADC worker is triggered to acquire, it will produce a capture frame of data. A capture frame of data is comprised of **numMesgPerFrame** messages, each of **fixedMesgSize**. The product of these two configuration properties are the number of Bytes in the capture frame. This is directly related to the number of ADC samples. And to the so-called “dwell time” of continuous acquisition through the ADC sample clock. While the ADCWorker exposes the fixedMesgSize through every message sent, the count of numMesgPerFrame is not exported. It is used locally to simply count off how many messages to send in a frame of dwell.

Opcode	Message Type	Length	Description
0	Sample	Varies	<p>On a 4B (32b) WSI link, two 16b ADC samples (N+1) and N are packed little-endian into a DWORD. Sample_{N+1} is in bits [31:16], Sample_N is in [15:0]. When the converter data is less than 16b, the data from the converter is MSB justified, with zeros in the LSBs.</p> <p>These are (typically) imprecise messages whose length will not exceed the configuration property "maxMesgLength".</p> <p>Transmission of this message is enabled by default; it may be inhibited by setting the control bit disableSample.</p>
1	Sync	0B	<p>A Zero-Length message that is used to indicate a synchronization event. These events may be context and application specific. They typically include sampling discontinuities, such as at the start of acquisition.</p> <p>Transmission of this message is disabled by default; it may be enabled by setting the control bit enableSync.</p>
2	Timestamp	24B	<p>A 24B message that conveys the timestamp and supporting information.</p> <pre>typedef struct { Bit#(32) iSeconds; // "now": integer Seconds Bit#(32) fSeconds; // "now": fractional Seconds Bit#(32) dropCount; // Rolling count of dropped samples Bit#(32) sampCnt; // Rolling count of captured samples Bit#(32) dwellStarts; // Rolling count of dwell starts Bit#(32) dwellFails; // Rolling count of dwell failures } SampMessage</pre> <p>Transmission of this message is disabled by default; it may be enabled by setting the control bit enableTimestamp.</p>

ADCWorker Configuration Properties

This section describes the configuration properties of the ADCWorker.

Configuration Property Offset (B)	Property Name	Access	Description
+0x0_0000	wsiM Status	RO	WSI-M Port status in bits[7:0]
+0x0_0004	adcStatusLS	RO	See ADC Status Bits[31:0] Table TBD
+0x0_0008	maxMesgLength	RW	ADC Data maximum message length (in Bytes), multiples of 4B, $4 \leq \text{maxMesgLength} \leq 65532$
+0x0_000C	adcControl	RW	See ADC Control Bits
+0x0_0010		RO	rsvd
+0x0_0014	fcAdc	RO	Measured Frequency of ADC Sample Clock (in KHz, updated at 1KHz)
+0x0_0018	adcSampleEnq	RO	Rolling 32b count of ADC Samples ENQ in capture domain
+0x0_001C	sampleSpy0	RO	Last two samples from ADC0 (little endian) {second:first}
+0x0_0020	sampleSpy1	RO	Last two samples from ADC1 (little endian) {second:first}
+0x0_0024	spiClock	WO	Issue indirect-IO SPI command to Clock
+0x0_0028	spiAdc0	WO	Issue indirect-IO SPI command to ADC0
+0x0_002C	spiAdc1	WO	Issue indirect-IO SPI command to ADC1
+0x0_0030	spiResponse	RO	Last Response from an SPI Read Command
+0x0_0034	mesgCount	RO	Rolling 32b count of WSI messages sent (all opcodes)
+0x0_0038		RO	
+0x0_003C	Stats.dwellStarts	RO	Number of Dwell intervals Started
+0x0_0040	Stats.dwellFails	RO	Number of Dwell intervals Failed
+0x0_0044	lastOverflowMesg	RO	Value of mesgCount when buffer overflow last occurred
+0x0_0048	phaseCmdAdc0	WO	ADC0 Phase Shift (b1=ENA, b0=INC)
+0x0_004C	phaseCmdAdc1	WO	ADC1 Phase Shift (b1=ENA, b0=INC)
+0x0_0050	extStatus.pMesgCount	RO	Precise Messages Generated
+0x0_0054	extStatus.iMesgCount	RO	Imprecise Messages Generated
+0x0_0058	Stats.dropCount	RO	Samples Dropped
+0x0_005C	dwellFails	RO	Dwell intervals where samples were dropped
+0x0_0400 – 0x0_04FC	ADC0 SPI	RW	Memory Map of 1KB ADC0 device control space
+0x0_0800 – 0x0_08FC	ADC1 SPI	RW	Memory Map of 1KB ADC1 device control space
+0x0_0C00 – 0x0_0CFC	Clock SPI	RW	Memory Map of 1KB Clock device control space

adcControl (ADCWorker +0x0_000C)

This register controls the overall behavior of the ADC device worker.

Bits	Name	Access	Description
31:5		Reserved	0
4	average4	RW	0=Normal operation 1=The ADC outputs one averaged sample for every four digitized
3	inhibitOnDrop	RW	0=Continue acquire if samples dropped 1=Inhibit acquire if samples are dropped
2	enableTimestamp	RW	0=Inhibit Transmission of Timestamp messages 1=Allow Transmission of Timestamp messages (Opcode 2)
1	enableSync	RW	0=Inhibit Transmission of Sync messages 1=Allow Transmission of Sync messages (Opcode 1)
0	disableSample	RW	0=Allow Transmission of ADC data messages 1=Inhibit Transmission of ADC data messages (Opcode 0)

fcAdc (ADCWorker +0x0_0014)

The measured frequency (in KHz) of the ADC sample clock.

adcSampleCount (ADCWorker +0x0_0018)

A rolling 32b count of ADC Sample clocks observed.

DACWorker Configuration Properties

This section describes the configuration properties of the DACWorker.

Configuration Property Offset (B)	Property Name	Access	Description
+0x0_0000	dacStatusMS	RO	See DAC Status Bits[63:32] [7:0] WSI-S port status
+0x0_0004	dacStatusLS	RO	See DAC Status Bits[31:0]
+0x0_0008		RO	
+0x0_000C	dacControl	RW	See DAC Control Bits
+0x0_0010	fcDac	RO	Measured Frequency of DAC Sample Clock ($1/16 F_{DAC}$) (in KHz, updated at 1KHz)
+0x0_0014	dacSampleDeq	RO	Rolling 32b count of DAC Samples DEQ in emitter domain
+0x0_0018		RO	
+0x0_001C		RO	
+0x0_0020		RO	
+0x0_0024	firstUnderflowMesg	RO	mesgStart where underflowCount first became non-zero
+0x0_0028		RO	
+0x0_002C		RO	
+0x0_0030	syncCount	RO	Rolling 32b count of "Opcode 3" Sync Messages Received
+0x0_0034	mesgStart	RO	Rolling 32b count WSI message Starts Received
+0x0_0038	underflowCount	RO	Rolling 32b count of underflows (16-samples per LSB)
+0x0_003C	stageCount	RO	Rolling 32b count of staged enqueues (16-samples per LSB)
+0x0_0040		RO	
+0x0_0044		RO	
+0x0_0048	extStatus.pMesgCount	RO	WSI-S Precise Messages Received
+0x0_004C	extStatus.iMesgCount	RO	WSI-S Imprecise Messages Received
+0x0_0050	extStatus.tBusyCount	RO	WSI-S Rolling Count of SThreadBusy backpressure

dacControl (DACWorker +0x0_000C)


This register controls the overall behavior of the DAC device worker.

Bits	Name	Access	Description
31:8		Reserved	0
7	toneEn	RW	0=Disable; 1= $F_{DAC}/16$ CW Tone (Write 0x88 to dacControl)
6	invertMSBs	RW	0=NOP; 1= Invert MSBs (dual-sample b31 and b15)
5	replicate16x	RW	0=replicate2x; 1=replicate16x
4	emitEnable	RW	0=emit Disabled; 1=emit Enabled
3	dacClkDiv	RW	0=Not Supported; 1=DAC outputs $F_{SAMP}/8$ (normal) (this bit always set)
2	dacDelay	RW	0 = Normal
1	dacRz	RW	0 = Normal
0	dacRf	RW	0 = Normal

Following START and emitEnable==1; the DACWorker will not begin emission until 128 4B words (256 samples) are received at the WSI-S port.

Data-Plane Control Registers

This section describes the control registers used by the data plane. As an example, an application “OC1001” as shown in the following diagram has been constructed.

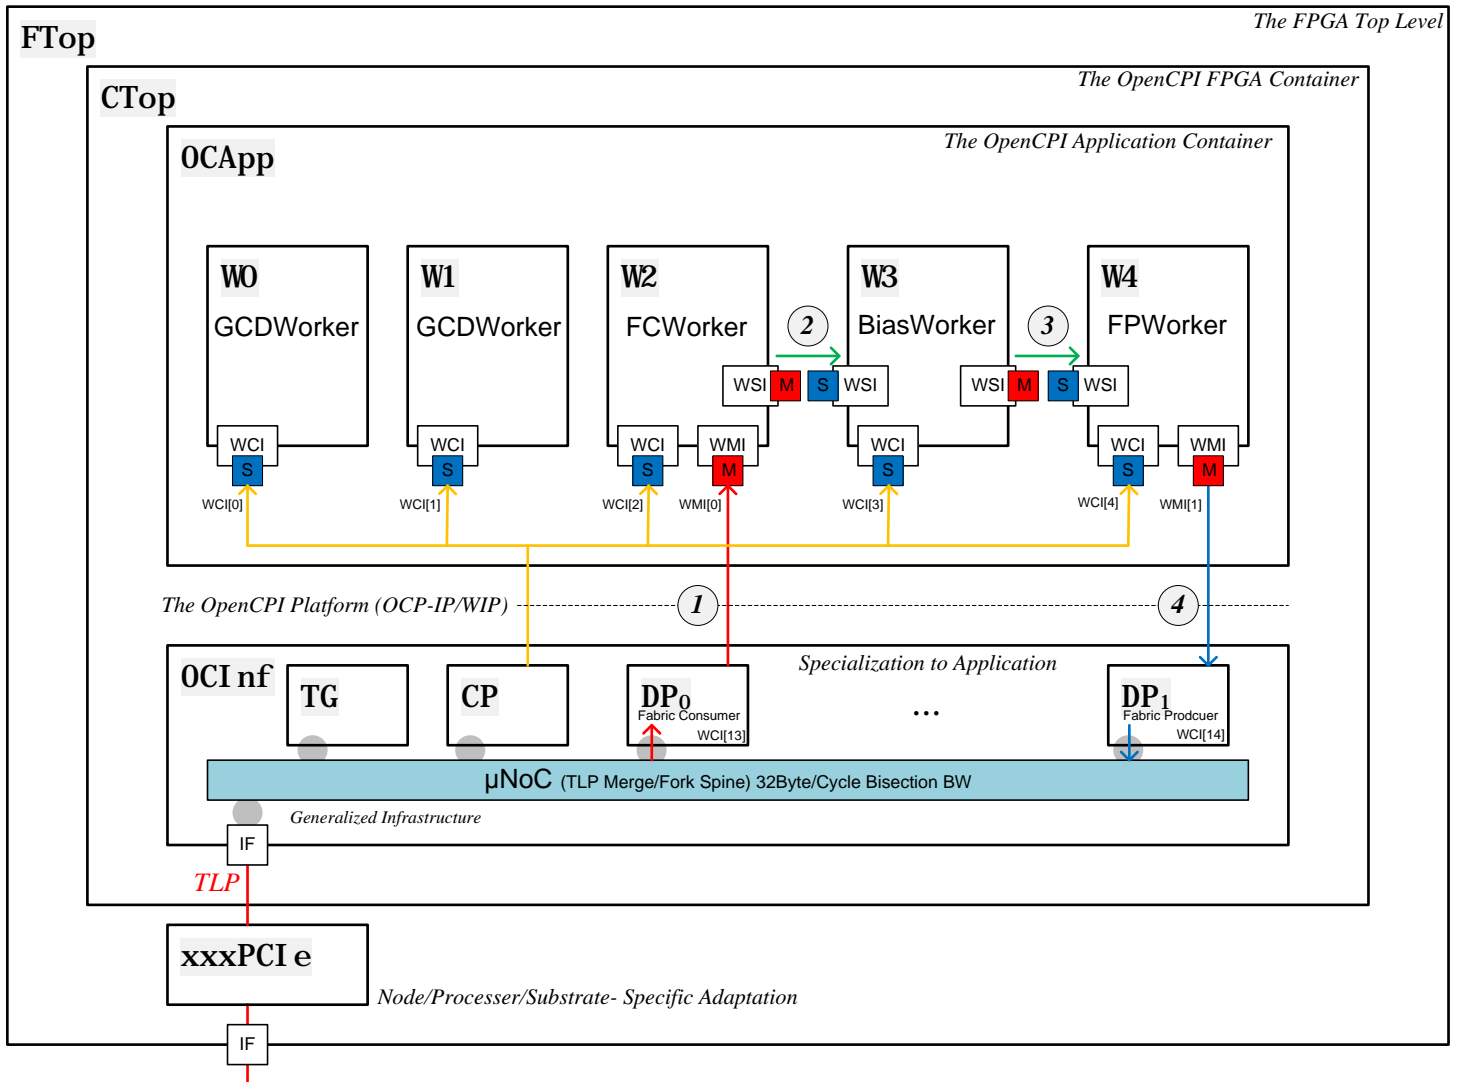

We describe the registers and memory used in the infrastructure DPx blocks. Note that in this application DP0 feeds the “fabric consumer” worker (by WMI path 1) and DP1 is fed from the “fabric producer” worker (by WMI path 4).

The following table shows the BAR0 worker assignments in the OC1001 application:

BAR0 Offset	Region	OC1001 Assignment
+0x0_0000	Admin	Admin
+0x1_0000	Worker 0	GCD Worker 0
+0x2_0000	Worker 1	GCD Worker 1
+0x3_0000	Worker 2	FC Worker 2
+0x4_0000	Worker 3	Bias Worker 3
+0x5_0000	Worker 4	FP Worker 4
+0x6_0000	Worker 5	Unused
+0x7_0000	Worker 6	Unused
+0x8_0000	Worker 7	Unused
+0x9_0000	Worker 8	Unused
+0xA_0000	Worker 9	Unused
+0xB_0000	Worker 10	Unused
+0xC_0000	Worker 11	Unused
+0xD_0000	Worker 12	Unused
+0xE_0000	Worker 13	Data Plane 0 (FC)
+0xF_0000	Worker 14	Data Plane 1 (FP)

BAR1 – 64KB Memory Space for Data Movement

BAR1 is a 64KB memory space used by the data plane. Only 32b DWORD access to BAR1 is allowed. Each data plane adapter occupies 32KB. This 32KB space may be partially- or fully populated- with BRAM buffer memory. The 64KB space is suitable to hold two data plane adapters.

BAR1 Offset	Region
+0x0000	Data Plane 0 Buffer Memory (16KB)
+0x4000	Data Plane 0 Buffer Memory Expansion (16KB)
+0x8000	Data Plane 1 Buffer Memory (16KB)
+0xC000	Data Plane 1 Buffer Memory Expansion (16KB)

We show an example of a 16KB data plane memory-mapped BRAM used to hold messages and metadata. The infrastructure can be programmed the following organization for a 7-buffered storage in each BRAM. There are seven 2KB message buffers and seven 16B metadata buffers.

BRAM Offset	Region
+0x0000	Message Buffer 0 (2KB)
+0x0800	Message Buffer 1 (2KB)
+0x1000	Message Buffer 2 (2KB)
+0x1800	Message Buffer 3 (2KB)
+0x2000	Message Buffer 4 (2KB)
+0x2800	Message Buffer 5 (2KB)
+0x3000	Message Buffer 6 (2KB)
+0x3800	Metadata 0 (16B)
+0x3810	Metadata 1 (16B)
+0x3820	Metadata 2 (16B)
+0x3830	Metadata 3 (16B)
+0x3840	Metadata 4 (16B)
+0x3850	Metadata 5 (16B)
+0x3860	Metadata 6 (16B)
+0x3870~3FFF	Unused (16KB – 14KB – 112B)

The 16B data structure for the metadata is

```
typedef struct {  
    Bit#(32) length;    // Message Length in Bytes  
    Bit#(32) opcode;    // Opcode in bits [7:0]  
    Bit#(32) tag;  
    Bit#(32) interval;  
} MesgMeta deriving (Bits, Eq)
```

Data Plane Configuration Properties (DPCP)

The data plane configuration properties (DPCP) allow specialization of the data plane infrastructure IP behavior at runtime. Each data plane attachment has its own DPCP register set.

The color coding of the rows in the table below delimits the initialization properties, from the message-advancing events, from the buffer status, from the side-effect-free status and debugging probes, from the registers directly used in active message and doorbell movement.

DPCP Base Offset	Property Name	Mode	Default	When Used	Description
+0x0000	lclNumBufs	RW	1	initialize	Number of Local Buffers (This Node)
+0x0004	fabNumBufs	RW	1	Initialize	Number of Fabric Buffers (Far Node)
+0x0008	lclMesgBase	RW	0x0000	initialize	Local Message Buffer Base Address
+0x000C	lclMetaBase	RW	0x3800	initialize	Local Metadata Buffer Base Address
+0x0010	lclMesgBufSize	RW	0x0800	initialize	Local Message Buffer Size
+0x0014	lclMetaBufSize	RW	0x0010	initialize	Local Metadata Buffer Size
+0x0018	fabDoneAvail	WO	-	MesgAdv	Fabric Done Available Scalar (See Table Following Describing Usage)
+0x001C	regionNum	RO		initialize	To which memory region this DP belongs
+0x0020	bufReady	RO	-	Poll	Lcl Buffers Committed/Freed (Number of buffers available for remote)
+0x0024	rsvd	RO	-	Debug	32'hF00D_FACE
+0x0028	bmlAccu	RO	-	Debug	{ lcl Buffers Available/Ready[31:16], RemoteBuffersAvailable[15:0]}
+0x002C	bufIndex	RO	-	Debug	{remIndex [31:16] , lclIndex [15:0]}
+0x0030	lclCounts	RO	-	Debug	{lclStart [31:16] , lclDone [15:0]}
+0x0034	remCounts	RO	-	Debug	{remStart [31:16] , remDone [15:0]}
+0x0038	thisMesg	RO	-	Debug	{opcode [31:24] , length [23:0]}
+0x003C	lastMesg	RO	-	Debug	{opcode [31:24] , length [23:0]}
+0x0040	v[1]	RO	-	Debug	req/wrt Count
+0x0044	v[0]	RO	-	Debug	wrtData
+0x0048	rsvd	RO	-	Debug	32'hDADE_BABE
+0x004C	bufferExtent	RO	-	Debug	Size of Local Memory Buffer
+0x0050	fabMesgBase	RW	FFFF_0000	DMA	Fabric DMA Message Base Address
+0x0054	fabMetaBase	RW	FFFF_3800	DMA	Fabric DMA Metadata Base Address
+0x0058	fabMesgSize	RW	0000_0800	DMA	Fabric DMA Message Buffer Size
+0x005C	fabMetaSize	RW	0000_0010	DMA	Fabric DMA Metadata Buffer Size
+0x0060	fabFlowBase	RW	FFFF_0018	DMA	Fabric DMA Flow Control Base Address
+0x0064	fabFlowSize	RW	0000_0004	DMA	Fabric DMA Flow Control Base Size
+0x0068	dpControl	RW	0	DMA	Data Plane Control (See Text)
+0x006C	flowDiagCount	RO	0	Debug	Number of Flow Control Events Sent

Notes: All “sizes” and “addresses” in Bytes unless otherwise stated.

fabDoneAvail (DPCP +0x0018)

This write-only DWORD location treats each write as signaling either a “done” or “avail” event. Depending upon the data plane dpDirection and dpRole set in the dpControl register (DPCP+0x68), the event signaled here will cause a specific internal action within the DPCP, as described in the table below:

Local Role	Fabric Producer (FP)	Fabric Consumer (FC)
Passive	(source) done – near buffer empty	(sink) done – near buffer full
Active Message	(pusher) avail – far buffer empty	(puller) avail – far buffer full
Active Flowcontrol	(pullee) done – near buffer empty	(pushee) done – near buffer full

This single-location for all inbound data plane event signaling can reduce the complexity of control software.

Internally to the DPCP, “done” events generate a “remoteDone” signal which is used to

- Increment LBAR
- Decrement LBCF
- Increment remBuf
- Increment fabBuf

Internally to the DPCP, “avail” events generate a “fabBufAvail” signal which is used to

- Increment FBA

regionNum (DPCP +0x001C)

This read-only location identifies to which dataplane memory region this DP belongs



Bits	Name	Description
31:4	rsvd	‘0
3:0	regionNum	DP memory region

dpControl (DPCP +0x0068)

This register controls the behavior of the Data Plane. For each DP adapter in the infrastructure that is to be actively used, a choice of data flow *direction* and *role* must be made.

The dpDirection field requires a specific selection of Producer vs. Consumer, if the module is to act at all. The dpRole field refines that behavior into a Passive, Active Message, or Active Doorbell role.

Bits	Name	Access	Description
31:3		Reserved	0
7	dpMoveData	RW	0=Inhibit Active Message Movement 1=Enable Active Message Movement
6	dpMoveMeta	RW	0=Inhibit Active Metadata Movement 1=Enable Active Metadata Movement
5	dpSendTail	RW	0=Inhibit Transmission of Active Message Tail Event 1=Enable Transmission of Active Message Tail Event
4	dpSendInterrupt	RW	0=Inhibit Interrupt at end of Message Movement 1=Enable Interrupt at end of Message Movement
3:2	dpDirection	RW	00=Disabled DP Module 01= <u>Fabric Producer (FP)</u> 10= <u>Fabric Consumer (FC)</u> 11=Reserved
1:0	dpRole	RW	00= <u>Passive</u> 01= <u>Active Message</u> 10= <u>Active Flowcontrol</u> 11=Reserved

Local Role	 Fabric-Producer (FP)	 Fabric-Consumer (FC)
<u>Passive</u>	1. Partner polls status and reads message data by any means	2. Partner polls status and writes message data by any means
<u>Active Message</u> Movement	3. We receive fabric Flowcontrol for far-side “partner-buffer-free”; we produce message data by <u>Active-Push</u> DMA	4. We receive fabric Flowcontrol for far-side “partner-buffer-full”; we consume message data by <u>Active-Pull</u> DMA
<u>Active Flowcontrol</u> Transmission	5. We Transmit DMA “local-full” Flowcontrol to our partner; Partner reads message data by any means	6. We Transmit DMA “local-free” Flowcontrol to our partner; Partner sends message data by any means

These settings are applied to each DP component in accordance with the generic control proxy on incidence of a control operation START event while in the INITIALIZED state.

Unused DP adapters in the infrastructure will remain disabled due both to the default “disabled” in the dpDirection field; as well as control system not initializing and then starting that component.

Multi-buffer Initial Conditions

The initial conditions of the multi-buffer accumulators has been chosen so that no precharge or priming is required to start data movement.

```
if (dpControl.dir==FProducer) begin
  lclBufsAR  <= lclNumBufs; // Producer starts all Available (for egress from FPGA)
  lclBufsCF  <= 0;         // Producer starts none Committed (for egress to Fabric)
  fabBufsAvail <= fabNumBufs; // Producer starts knowing all fabric buffers are Available
end else begin
  lclBufsAR  <= 0;         // Consumer starts none Ready (for ingress to FPGA)
  lclBufsCF  <= lclNumBufs; // Consumer start all Freed (for ingress from Fabric)
  fabBufsAvail <= 0;       // Consumer starts knowing no fabric buffers are Available
end
```


Multi-Buffer Logical Block Diagram

The diagram below shows a simplified version of the logic connecting the various produce/consume events to the accumulators which track buffer availability and position.

