


PIC18F4550

Bootloader Installation

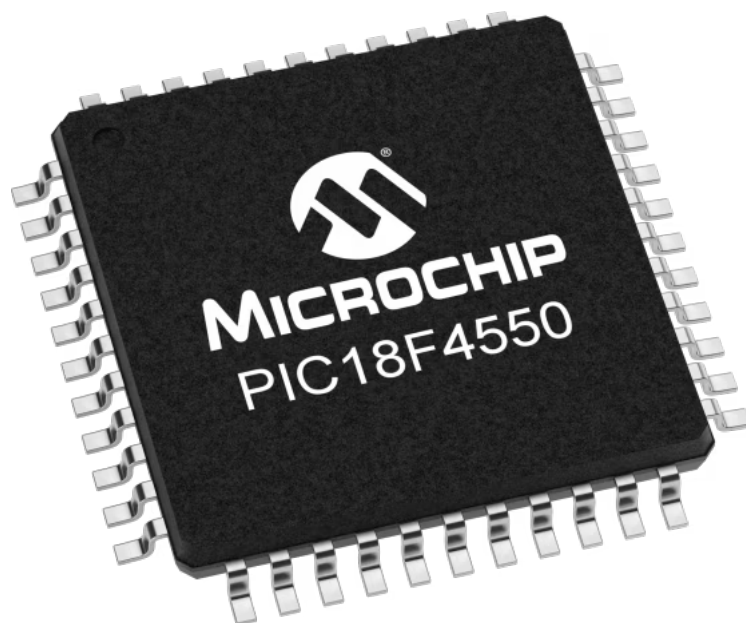

By:
Shreyas Deshpande

Contents

1	Getting Started...	1
1.1	Pre-requisites	1
1.2	Brief Procedure	1
2	Installing PICKIT-3 Application	3
2.1	Installation Procedure	3
2.2	Uploading Bootloader	5
3	Installing MCHPFSUSB v2.2 USB Framework	11
4	Installing Driver	16
5	Uploading firmware hex file	17
A	Schematic	18

Chapter 1

Getting Started...

1.1 Pre-requisites

Before we start, its always better to collect the tools and other necessary stuff required to achive end result.

- PIC18F4550 Developement Board
- PICKIT-3
- PICKIT-3 PC Application
- Bootloader Hex file
- Bootloader device driver
- PDFSUSB Application [For hex file upload]
- LED blink demo hex file [Optional]

1.2 Brief Procedure

We have provided you the folder with all the *installation* files, *Hex* files and *drivers*. Please Navigate to that folder and then follow the procedure given bellow.

1. Install the *PICKIT-3 PC Application*
2. Connect the *PICKIT-3* with *PIC18F4550* micro-controller.
3. Open the *PICKIT-3 PC Application* installed in Step 1.
4. Upload the *Bootloader hex file* into PIC18F4550 micro-controller.
5. Remove the *PICKIT-3* Programmer from micro-controller.
6. Install the *Bootloader Device Drivers* on the Windows.
7. Put the PIC18F4550 Microcontroller in the program mode.

8. Open the PDFSUSB Application
9. Select the microcontroller
10. Select the LED blink demo hex file or any other hex file you want to upload on the micro-controller.
11. Click on the Program button, and wait for the hex file to get upload in the micro-controller.
12. Reset the micro-controller to observe the output.

This is the brief procedure for power users who are used to the *Microchip's* and *PIC microcontroller's* eco-system.

If you are not familiar with this eco-system or you find the above procedure hard, don't worry, I have given the detailed and stepwise procedure in later part of this document, which will guide you making your PIC bootloader experience buttery smooth.

Chapter 2

Installing PICKIT-3 Application

This chapter guides you step-by-step to install the *PICKIT-3 Application*. Follow the procedure as mentioned below and at the end you will end up with *PICKIT-3 Application* installed in your PC successfully.

2.1 Installation Procedure

1. Navigate to the *PICKIT-3 Application's* setup file location and double click on the exe file. After opening the exe file, a new window will appear as shown in figure 2.1.

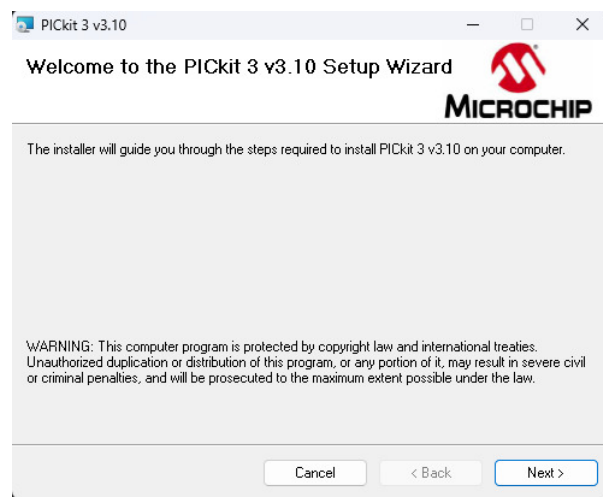


Figure 2.1: Welcome Page

2. On this window, click on the *Next* button.

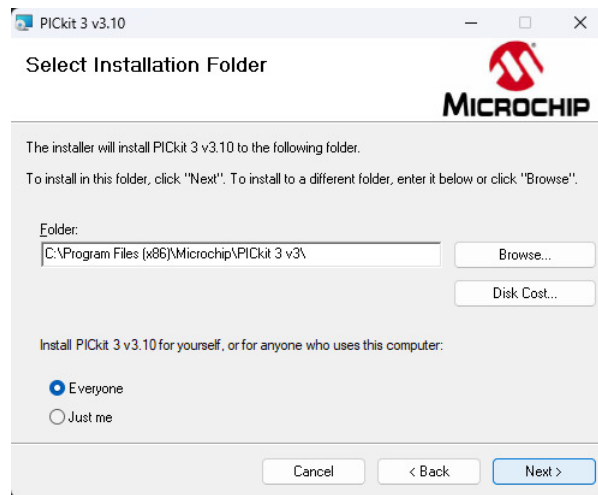


Figure 2.2: Select Installation Location

3. As we don't need to change the default location, just click on the *Next* button, without changing any option shown in figure 2.2.

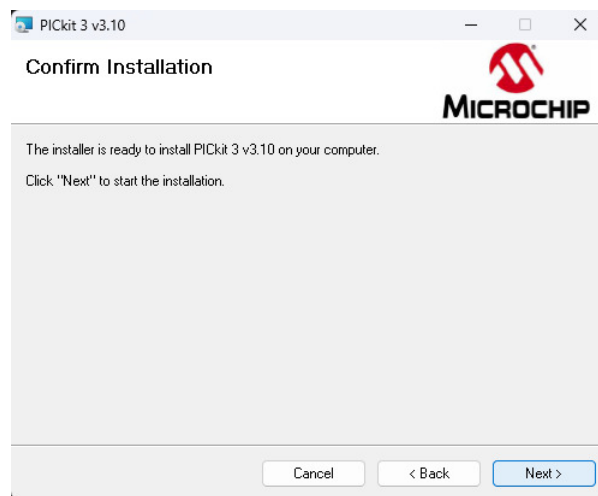


Figure 2.3: Confirm Installtion

4. Here, the installer is all set to install the application on the PC, click on the *Next* button.

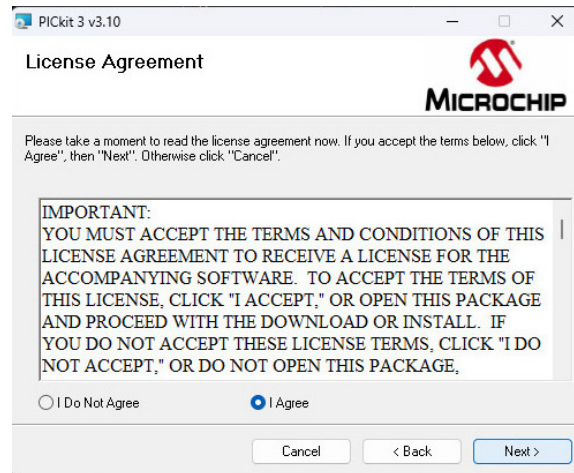


Figure 2.4: License Agreement

5. Next window appeared is of *License Agreement*, Select the *I Agree* radio button and then click on *Next*. [Refer Figure 2.4.]

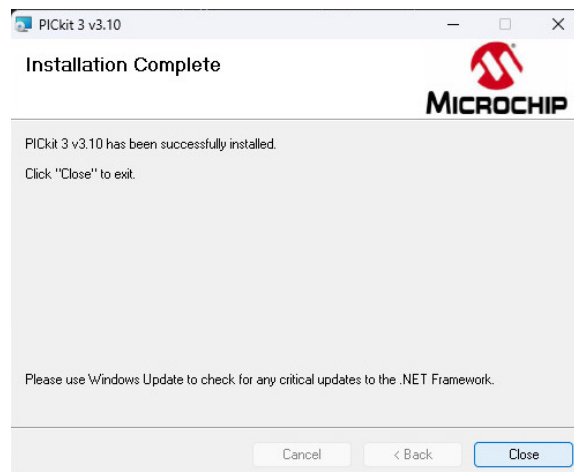


Figure 2.5: Installation Complete

6. We are now at last stage of our installation. At the end of the installation, the installer present you the window as shown in the figure 2.5. Click on the *Close* button to close the installer.

Congratulations !!! ... You have successfully installed the *PICKIT-3 Application* on your PC.

2.2 Uploading Bootloader

Now you have installed the application, it's time to use that application to upload the PIC USB bootloader in to the *PIC18F4550* micro-controller.

Follow the steps given bellow to upload the USB bootloader.

1. If PIC18F4550 micro-controller is powerd ON, turn it OFF.
2. Connect the PICKIT-3 to micro-controller.
3. Now turn ON the micro-controller.
4. Connect the *PICKIT-3* to PC using USB Cable.
5. Open the *PICKIT-3 Application* we have installed in section 2.1. A new Window will appear as shown in Figure 2.6.

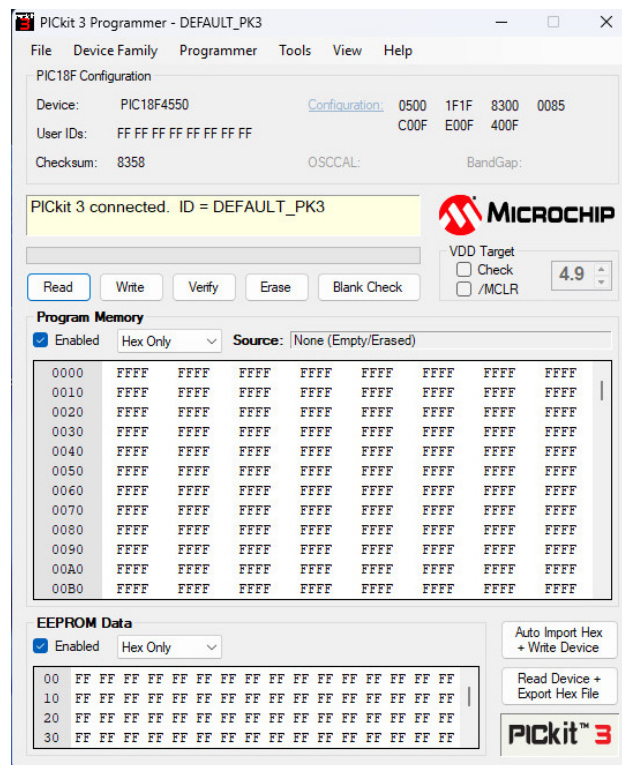


Figure 2.6: PICkit-3 Application

6. Now Navigate to Tools -> Check Communication as shown in the Figure 2.7.

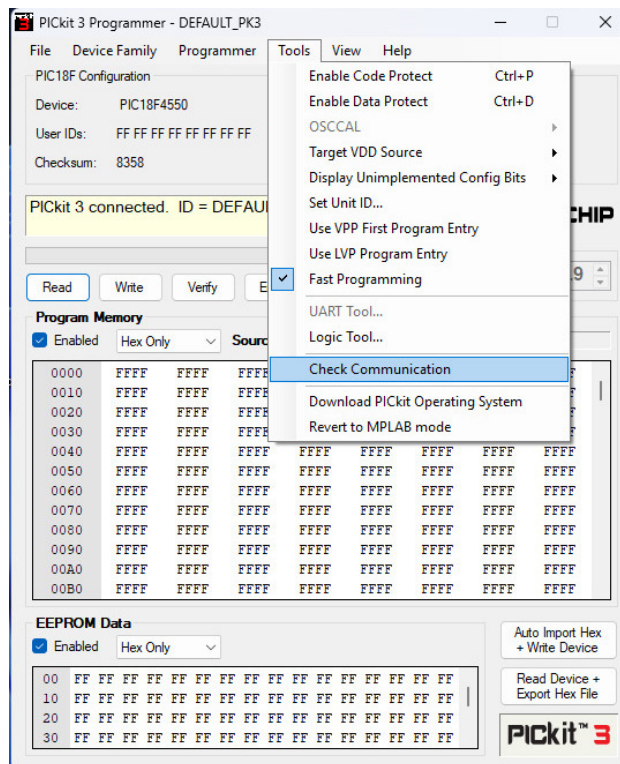


Figure 2.7: Check Connected Devices

7. The application will detect the PICKIT-3 and the micro-controller connected through it as shown in the Figure 2.8.

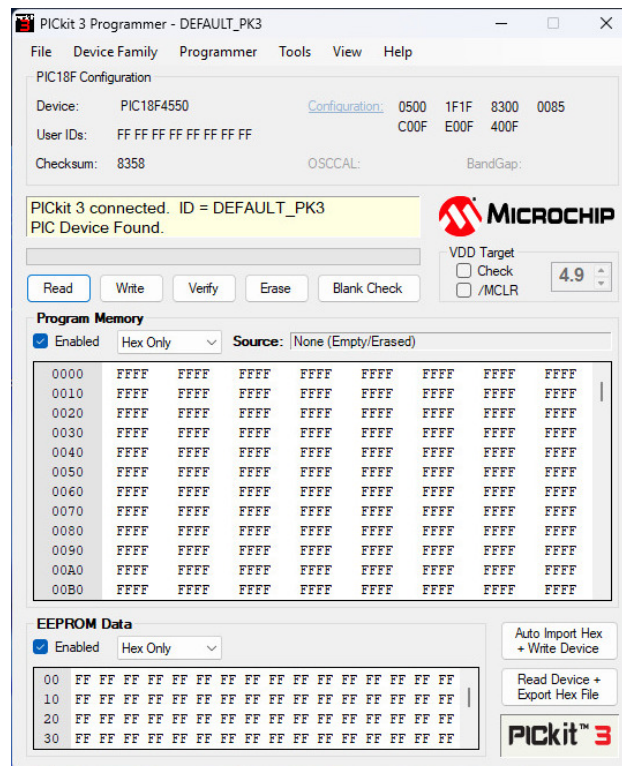


Figure 2.8: Device Detected

8. Now We need to select the hex file of the bootloader. To do so, navigate to File -> Import File Add image here(Pending)
9. Now navigate to the location where you have stored the bootloader's hex file and select the hex file as shown in the Figure 2.9. Here the filename of the hex file is PIC-USB-4550-BOOT.hex

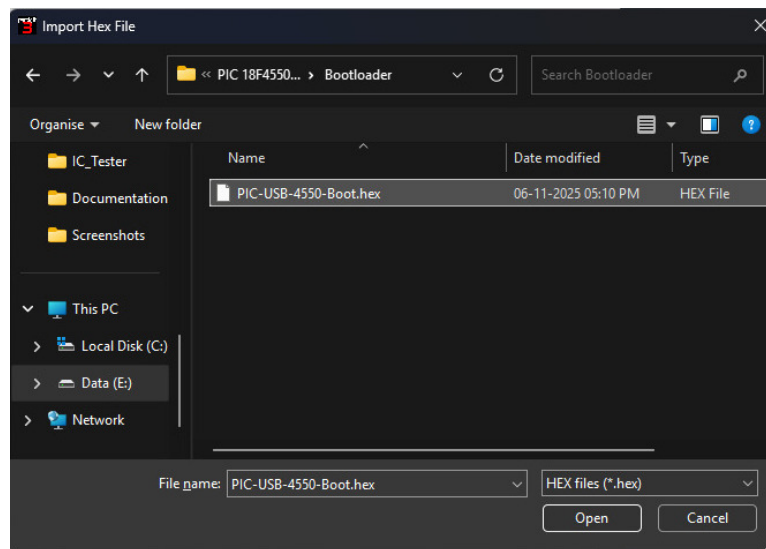


Figure 2.9: Select bootloader hex file

10. Now Click on the *Write* button as shown in the figure 2.10.

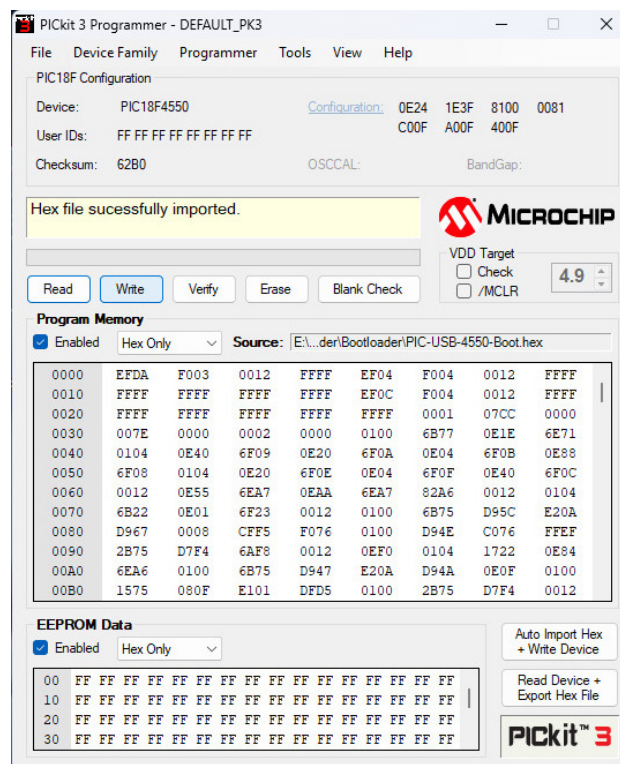


Figure 2.10: Write Hex File

11. Once hex file gets written on the microcontroller successfully, the success message gets displayed on the application's message window as shown in figure 2.11.

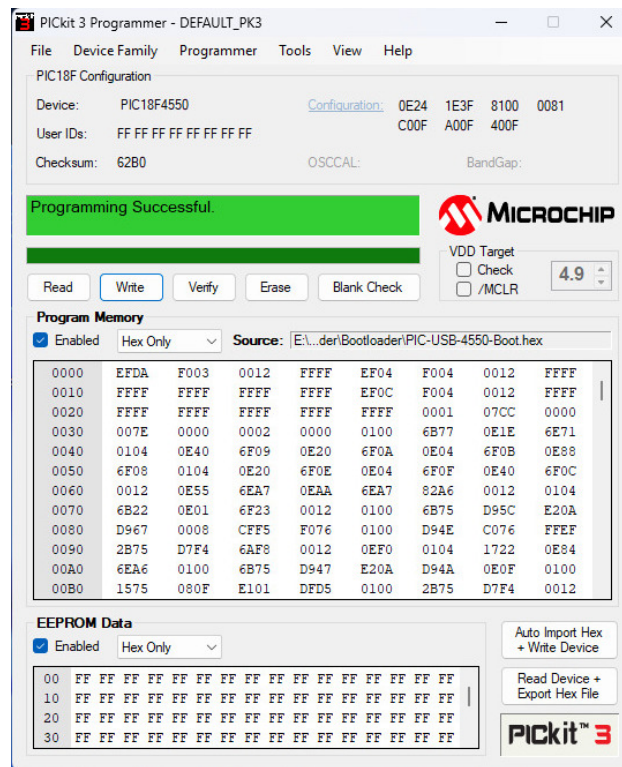


Figure 2.11: Hex File Uploaded Successfully

12. Done !!! The bootloader is successfully get uploaded into the microcontroller. Now close the Application
13. Remove the *PICKIT-3* from PC as well as from micro-controller.

Chapter 3

Installing MCHPFSUSB v2.2 USB Framework

In this chapter we are going to install the MCHPFSUSB USB Framework of version 2.2. This Framework provides USB bootloader drivers as well as firmware hex file upload tool.

Following steps guide you to install the MCHPFSUSB USB Framework on your PC.

1. Navigate to the MCHPFSUSB installer folder and run the setup file as shown in the Figure .

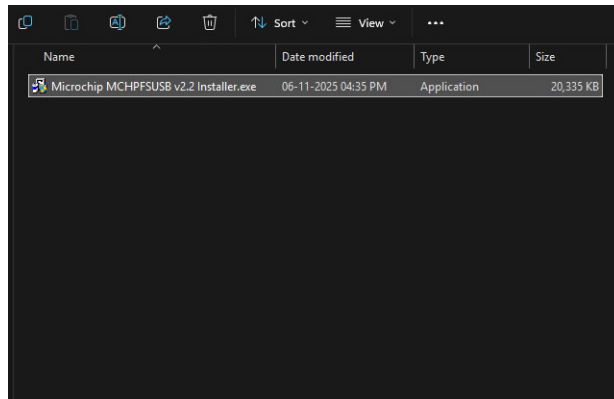


Figure 3.1: Select Setup File

2. Installer will invoke and ask you for the License Agreement as shown in the Figure 3.2. Click on '*I Accept*'.

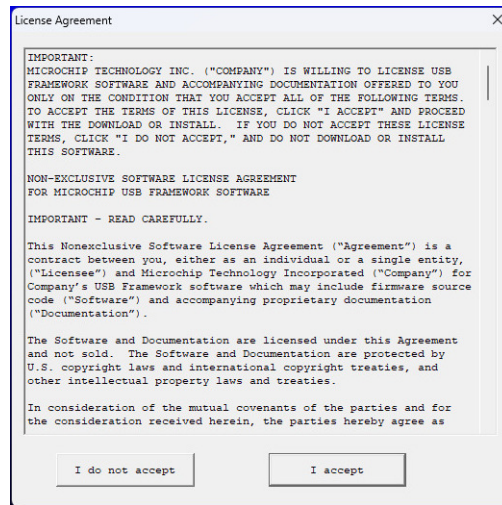


Figure 3.2: License Agreement

[Note]: There are two different license agreement and similar window appears for two times and every time you have to Accept the Agreement

3. Then the installer presents you the welcome window as shown in Figure 3.3. Which warns you to close any other open window before proceeding in installation. So close all other windows as instructed in the installer and then click on *Next* button.

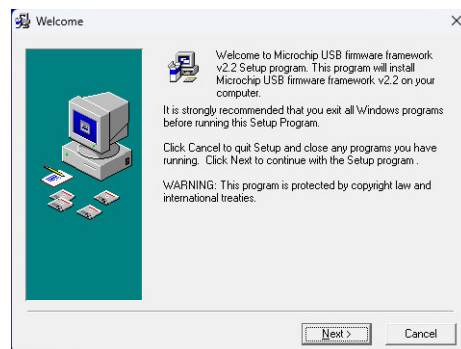


Figure 3.3: Welcome Window

4. In the next window of the installer you have to choose the destination location. Don't change anything and click on the *Next* button. [Ref. Figure 3.4.

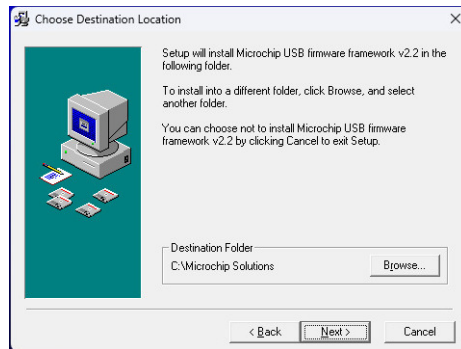


Figure 3.4: Choose Installtion Location

5. It's good practice to keep the backup of the files which are already present on the computer and will get replace in further installation process. The setup is asking whether to take backup or not. By default *Yes* option is selected, which is a good choice so we will not change anything on this page and click on *Next* to move ahead. [Ref. Figure 3.5]

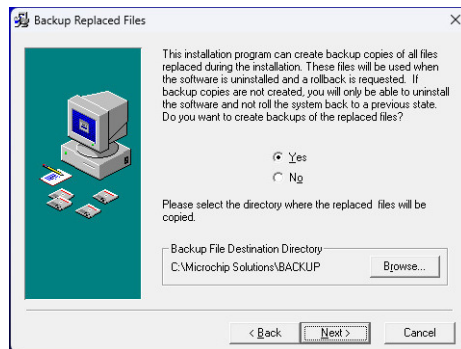


Figure 3.5: Take a Backup

6. At this point installer is ready to install the **MCHPFSUSB Framework** on your PC. In this window it will take confirmation from you as shown in the Figure 3.6. Click on *Next* button.

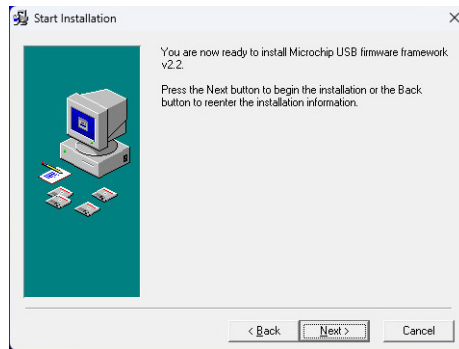


Figure 3.6: Setup Confirmation

7. The installation is now started and will install the all necessary files and tools on your PC. [Ref. Figure 3.7]

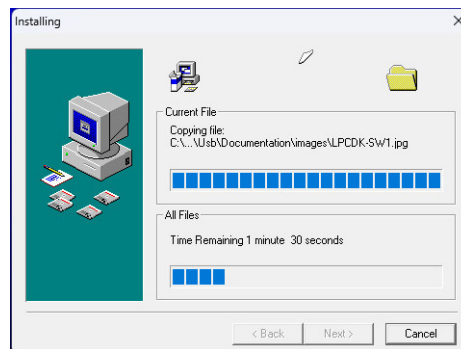


Figure 3.7: Installation in Progress

8. After installation process gets completed, the installer will present you the finishing window as shown in the Figure 3.8.

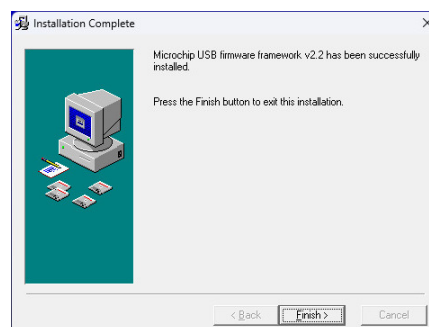


Figure 3.8: Installation Complete

Click on the *Finish* button to close the installer.

Chapter 4

Installing Driver

Chapter 5

Uploading firmware hex file

Appendix A

Schematic