


EPOMAKER SPLIT 65



65% Split Hot Swappable 2.4Ghz/Bluetooth 5.0/ Wired RGB Mechanical Keyboard

Should you require more assistance, email us at support@epomaker.com

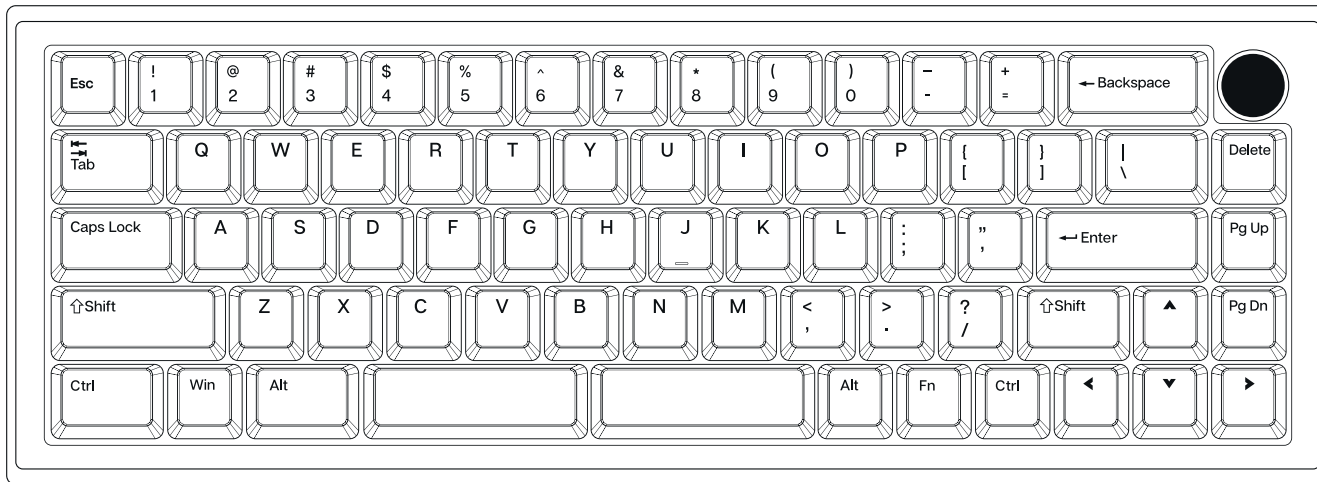

Made in China

Manufacturer: Shenzhen Changyun Technology Co., Ltd.
Address: Seventh Floor, Kai Daer Building, No.168 Tongsha Road,
 Xili Street, Nanshan District, Shenzhen, Guangdong, CN
Email: support@epomaker.com
Web: www.epomaker.com

EC REP

APEX CE SPECIALISTS GMBH
 Habichtweg 1 41468 Neuss Germany
 Contact: Wells Yan E-mail: info@apex-ce.com

UK REP

APEX CE SPECIALISTS LIMITED
 89 Princess Street, Manchestre, M1 4HT, UK
 Contact: Wells Yan E-mail: info@apex-ce.com



WARNING

**Choking Hazard
Small Parts**
 Keep away from children
and pets

FUNCTION KEY COMBINATIONS

FN + BACKSPACE <small>(HOLD 3S)</small>	Reset the Keyboard to the Factory Setting	FN + A	Windows Mode
FN + Q	Hold to pair Bluetooth Device 1; Tap to toggle to Device BT1	FN + S	Mac Mode
FN + W	Hold to pair Bluetooth Device 2; Tap to toggle to Device BT2	FN + B	Battery Check under Wireless mode
FN + E	Hold to pair Bluetooth Device 3; Tap to toggle to Device BT3	FN+ WIN <small>(ONLY FOR WINDOWS)</small>	Lock/unlock Win key
FN + R	Hold to connect via 2.4G wireless	FN + DEL	INSERT
FN + PGDN	END	FN + PGUP	HOME
FN + L_SPACE	Check current charging status. If the spacebar lights up red, it means charging and lights up green means it is fully charged.		

LIGHT EFFECTS

FN + TAB	Toggle Backlight Effects
FN + X	Turn off/on Backlight
FN + ↑	Backlight Brightness +
FN + ↓	Backlight Brightness -
FN + ←	Backlight Speed -
FN + →	Backlight Speed +
FN + [(Backlight Hue -
FN +)]	Backlight Hue +
FN + ::	Backlight Sat -
FN + !"	Backlight Sat +

FUNCTION KEYS FOR WINDOWS/MAC

	WINDOWS		MAC	
	WINDOWS	MAC	WINDOWS	MAC
FN + 1	F1	Screen Brightness -	FN + F1	My Computer
FN + 2	F2	Screen Brightness +	FN + F2	Browser
FN + 3	F3	Task	FN + F3	Mail
FN + 4	F4	Search	FN + F4	Calculator
FN + 5	F5		FN + F5	Media Player
FN + 6	F6		FN + F6	Stop
FN + 7	F7	Previous track	FN + F7	Previous track
FN + 8	F8	Play/Pause	FN + F8	Play/Pause
FN + 9	F9	Next track	FN + F9	Next track
FN + 0	F10	Mute	FN + F10	Mute
FN + -_	F11	Volume -	FN + F11	Volume -
FN + +=	F12	Volume +	FN + F12	Volume +

Press Fn + Left Ctrl to Swap F-row and Num row

(Left Ctrl stays at red light when the F-row is on)

PAIRING BLUETOOTH

Toggle the switch to the left side, make sure that the keyboard is under the wireless mode:

1. Hold Fn+Q/W/E for 3-5 seconds till the indicator light blinks fast, the keyboard is ready to pair.
2. Turn on your Bluetooth device and find “Split65-1/ Split65-2/ Split65-3”, then connect. When the keyboard is connected to the Bluetooth device, the indicator stops flashing and the connection is done.
3. Press Fn+Q/W/E to toggle between the Bluetooth devices 1/2/3.

PAIRING WIRELESS 2.4GHZ

1. Toggle the switch to the right side and R key lights up and flash, the keyboard is under 2.4G mode and ready to pair
2. Insert the 2.4G dongle to your device. When the indicator light stops flash, the connection is done.

*Note: Hold Fn+R for 3-5 seconds till the indicator lights blinks fast, the keyboard is ready to rematch.

WIRELESS SLEEP MODE

1. Deep Sleep Mode: The keyboard will go into deep sleep after 30 minutes of no key pressing. It will interrupt Bluetooth connectivity and sleep. Press any key to wake up the keyboard and connect back to Bluetooth.
2. Battery Saving Mode: The keyboard backlight turns off after 5 minutes of no key pressing. Press any key to wake up the keyboard.

INDICATOR

Ctrl Key

Left Ctrl key stays at red light when the F-row is on.

Win Key

Win key stays at red light when Windows key is locked.

Fn key

Red light blinks: Low battery


Backlight on: Fully charged*

BATTERY CHECK

Hold Fn + B, the keys from 1 to 0 lights up to show the battery percentage; for example, if the keys from 1 to 6 light up when holding Fn + B, it means that the battery life is currently 60%; if keys of 1-0 light up, battery life is 100%.

HOW TO CONNECT TO VIA

1. Please visit: “ <https://github.com/WestBerryVIA/via-releases/releases> ” to download the latest VIA application for your computer’s OS. Turn Off the button of “Use V2 definitions (deprecated)”

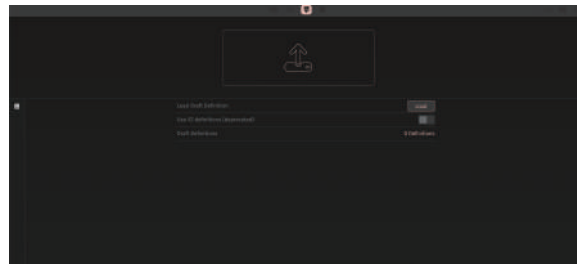

2. Download the Epomaker Split65 JSON file at: “ <https://epomaker.com/blogs/via-json/epomaker-split65-via-json-file> ” and load the file



3. When the loading is completed the “ Configure ” tab displays the layout and programmable functions




SPECS	
BRAND:	Epomaker
MODEL:	Split65
KEY AMOUNTS:	68 Keys + 1 knob
MOUNTING TYPE:	Top
STABILIZER TYPE:	Plate-mounted
CASE MATERIAL:	ABS Plastic
PLATE MATERIAL:	PC
PCB TYPE:	3/5-pin Hotswap PCB
CONNECTIVITY:	Type-C Wired, Bluetooth, 2.4G Bluetooth
ANTI-GHOST KEY:	NKRO in all modes
POLLING RATE:	1000hz in USB & 2.4G mode; 125hz in Bluetooth mode
BATTERY CAPACITY:	3000mAh
BACKLIGHT:	RGB, South-facing LEDs
OS COMPATIBILITY:	Windows & Mac
DIMENSION:	317 x 121 x 29 mm
WEIGHT:	Around 0.96kg




REPLACING KEYCAPS AND SWITCHES

For a full guide on how to remove keycaps and switches scan the QR Code or type in your browser:
<https://epomaker.com/blogs/guides/diy-guide-how-to-remove-and-replace-your-mechanical-keyboard-switches>

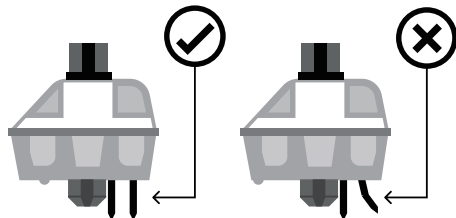


Before installing switches, be sure the pins are clean and straight.

Included Tools

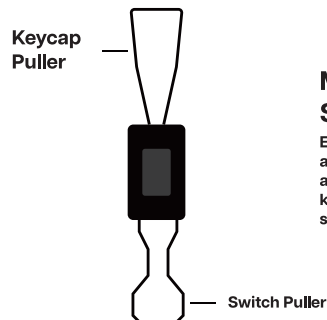

Mechanical Switch

Example of a switch as seen from top after you remove the keycap to prepare for switch removal.

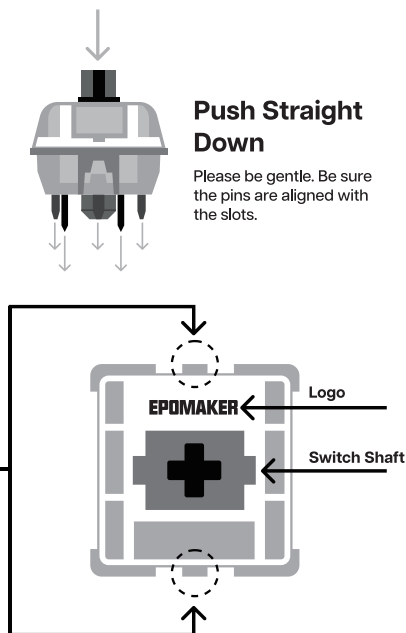

The Switch Puller tool aligns Vertically to the Switch to unclip the plastic securing the switch to the plate.

Push Straight Down

Please be gentle. Be sure the pins are aligned with the slots.

Remove Switches

1. Grab your Switch Removal Tool and align the gripping teeth vertically (on the Y-Axis) at the center of the switch, as shown in the example graphic above.
2. Grab the switch with the Switch Puller and apply pressure until the switch releases itself from the plate.
3. Using firm but gentle force pull the switch away from the keyboard using a vertical motion.

Install Switches

1. Check that all the switch metallic pins are perfectly straight and clean.
2. Align the switch vertically to have the Gateron logo facing north. The pins should align themselves to the keyboard PCB.
3. Press the switch down until you hear a click. This means your switch clips have attached themselves to the keyboard plate.
4. Inspect the switch to ensure it's properly attached to your keyboard, and test it.



Note: If the key doesn't work its possible you may have bent one of the switches while installing it. Pull the switch out and repeat the process.

Pins may be damaged beyond repair and need replacement if this process is not done correctly. Never apply excessive force when replacing keycaps or switches. If you cannot remove or install keycaps or switches please contact customer service as soon as possible to avoid damage to the keyboard due to operating errors.

TECHNICAL ASSISTANCE

For technical assistance, please email to support@epomaker.com with your purchase order number and a detailed description of your issue.

We normally respond to enquiries within 24 hours. If you purchased your keyboard from a distributor or not from any official store of Epomaker, please contact them directly for any additional help.

COMMUNITY FORUMS

Join our community and learn together with other keyboard enthusiasts.



<https://discord.gg/2q3Z7C2>



<https://www.reddit.com/r/EpomakerKeyboard/>

WARRANTY

EPOMAKER'S Warranty covers any factory defects that might affect the proper functionality of your purchase. It doesn't cover any damage that may occur from normal wear and tear. If your product is defective we will send you a replacement unit. Replacement units might require you to send the defective unit back to Epomaker.

We provide a 1 year warranty for our products when bought from our website (EPOMAKER.com). Your item will not be covered by your 1 year warranty if the inspection shows any sign of modification or changes unsupported by the original product, these include: Changing internal components, Assembling and reassembling the product, Replacing Batteries, etc.

We will ONLY cover the item if it is bought from our official stores. You do not have a warranty with us if you bought the item from another reseller or likewise. Please contact the store that you bought your product from to resolve issues.