



Manual

HIMatrix[®]F

Combustion Safeguard
HIMatrix CSG 01



All HIMA products mentioned in this manual are protected by the HIMA trademark. Unless noted otherwise, this also applies to other manufacturers and their respective products referred to herein.

HIMax[®], HIMatrix[®], SILworX[®], XMR[®], HICore[®] and FlexSILon[®] are registered trademarks of HIMA Paul Hildebrandt GmbH.

All technical specifications and notes in this manual have been written with great care and effective quality assurance measures have been implemented to ensure their validity. For questions, please contact HIMA directly. HIMA appreciates any suggestion on which information should be included in the manual.

Equipment subject to change without notice. HIMA also reserves the right to modify the written material without prior notice.

All the current manuals can be obtained upon request by sending an e-mail to: documentation@hima.com.

© Copyright 2018, HIMA Paul Hildebrandt GmbH

All rights reserved.

Contact

HIMA contact details:

HIMA Paul Hildebrandt GmbH

P.O. Box 1261

68777 Brühl, Germany

Phone: +49 6202 709-0

Fax: +49 6202 709-107

E-mail: info@hima.com

Document designation	Description
HI 800 741 E, Rev. 1.00 (1812)	German original document
HI 800 742 E, Rev. 1.00.00 (1812)	English translation of the German original document

Table of Contents

1	Introduction	7
1.1	Target Audience	7
1.2	Product-Dependent Requirements	7
1.3	Writing Conventions	7
1.3.1	Safety Notices	7
1.3.1.1	Meaning of Signal Words	7
1.3.1.2	Structure of Warnings	8
1.3.2	Operating Tips	8
1.3.2.1	Structure of Additional Information	8
1.3.2.2	Structure of Tips	8
2	Safety	9
2.1	Calculating the PFD and the PFH Values	9
2.2	Intended Use	9
2.2.1	Environmental Conditions	9
2.2.2	ESD Protective Measures	10
2.3	Residual Risk	10
2.4	Safety Precautions	10
2.5	Emergency Information	10
2.6	Certification	10
2.6.1	EU Type Approval Test	11
2.6.2	Current Standards	11
2.6.3	Test Conditions	11
2.6.3.1	Climatic Conditions	12
2.6.3.2	Mechanical Conditions	12
2.6.3.3	EMC Conditions	13
2.6.3.4	Supply Voltage	13
3	Product Description	14
3.1	Function	14
3.2	Structure of the HIMatrix Combustion Safeguard CSG 01	17
3.2.1	LED Indicators	18
3.2.2	Operating Voltage LED	18
3.2.3	System LEDs	19
3.2.3.1	Communication LEDs	19
3.2.3.2	I/O LEDs	20
3.3	Product Data	20
3.3.1	General	20
3.3.2	Digital Inputs	20
3.3.3	Digital Outputs	21
4	Process Signals	22
4.1	Digital Inputs	22
4.2	Digital Outputs	22
4.3	Cable Plugs	23
5	Parameters	24

5.1	Process Adjustments	24
5.2	Settings for HIMatrix CSG 01	25
6	R&I Diagram	26
7	Functional Description	27
7.1	Safety Shutdowns	27
7.2	Lock-Out	27
7.3	Start Pre-Conditions	28
7.3.1	Inputs	28
7.3.2	Outputs	28
7.4	Burner Start	29
7.4.1	Tightness Test with Pressure Switches	29
7.4.1.1	Sample Calculation for Pressure Switch	29
7.4.1.2	Tightness Test Sequence	30
7.4.2	Pre-Purging	30
7.4.3	Igniter and Main Burner	30
7.5	Burner Shutdown	32
7.6	Burner Operation	32
7.7	Special Operations	33
7.7.1	Control Bits	33
8	Operation and Supervision	34
8.1	Monitoring Functions	34
8.2	Control Panel	34
8.2.1	Standard Operating Graph Displayed in a Control Panel	35
8.2.1.1	Pre-Purging	35
8.2.1.2	Igniter	35
8.2.1.3	Main Burner	36
8.2.2	HIMatrix CSG 01 Indicators	36
8.2.3	Step Number/Error Number	36
8.2.3.1	Pre-Purging	37
8.2.3.2	Igniter	38
8.2.3.3	Main Burner	39
8.3	Diagnostics	40
8.4	Changing the Parameters	41
8.4.1	Changing the Parameters via the Control Panel	42
8.4.2	Password	43
8.4.2.1	Activating the Password	44
8.4.2.2	Modifying the Parameters for Changing the Password in the Control Panel	44
8.4.2.3	Changing the Password	44
8.4.2.4	Resetting the Password to the Factory Settings	45
9	Communications Information	46
9.1	Controller Commands from Control Panel (HIMatrix CSG 01 Reading)	46
9.1.1	Modbus TCP Register Address 0	46
9.1.2	Modbus TCP Register Address 1	47
9.1.3	Modbus TCP Register Address 2	47
9.1.4	Modbus TCP Register Address 3	48
9.1.5	Modbus TCP Register Address 4	48

9.2	Control Command from Higher Automation Level	49
9.2.1	Modbus TCP Register Address 40	49
9.3	Feedback to the Control Panel (HIMatrix CSG 01 Writing)	49
9.3.1	Modbus TCP Register Address 0	49
9.3.2	Modbus TCP Register Address 1	50
9.3.3	Modbus TCP Register Address 2	50
9.3.4	Modbus TCP Register Address 3	51
9.3.5	Modbus TCP Register Address 4	51
9.4	Feedbacks to the Higher Automation Level (HIMatrix CSG 01 Writing)	52
9.4.1	Modbus TCP Register Address 147	52
9.4.2	Modbus TCP Register Address 148	52
9.4.3	Modbus TCP Register Address 149	53
9.4.4	Modbus TCP Register Address 150	53
9.4.5	Modbus TCP Register Address 151	54
9.4.6	Modbus TCP Register Address 152	54
9.4.7	Modbus TCP Register Address 153	55
10	Mounting and Electrical Installation	56
10.1	Mounting and Removing HIMatrix CSG 01 Systems	56
10.1.1	Mounting the Device on the DIN Rail	57
10.1.2	Remove the Device from the DIN Rail	58
10.1.3	Routing Cables	58
10.1.4	Air Circulation	59
10.1.5	Connecting the Input and Output Circuits	61
10.1.6	Grounding and Shielding	61
10.1.6.1	Grounding the 24 VDC System Voltage	61
10.1.6.2	Grounding Connectors	61
10.1.6.3	EMC Protection	62
10.2	Considerations about Heat	62
10.2.1	Heat Dissipation	62
10.2.1.1	Definitions	63
10.2.1.2	Installation Type	63
10.2.1.3	Natural Convection	63
11	Maintenance	64
11.1	Faults	64
11.2	Maintenance Measures	64
11.2.1	Proof Test (in Accordance with IEC 61508)	64
12	Decommissioning	65
13	Transport and Storage	66
14	Disposal	67
15	Appendix	68
15.1	List of Abbreviations	68

1 Introduction

This manual describes the technical characteristics of the HIMatrix Combustion Safeguard CSG 01 and its use. It provides information on how to install, start up and configure the HIMatrix CSG 01.

The components of the HIMatrix CSG are used for simplified control of individual burners for gaseous and liquid fuels. Due to the unalterable implementation of a burner control system function, the safety-related PES becomes a hard-wired functional unit with process-related parameters that are adjusted to the combustion process by means of a control panel (HMI).

1.1 Target Audience

This document is aimed at the engineers and developers of automation systems as well as the persons qualified and authorized to start up, operate and maintain the devices and systems concerned.

1.2 Product-Dependent Requirements

- Only devices that are safely separated from the power supply may be connected to the system.
- The safe electrical power supply separation must be guaranteed within the 24 V system supply. Only power supply units of type PELV or SELV may be used.

1.3 Writing Conventions

To ensure improved readability and comprehensibility, the following writing conventions are used in this document:

Bold	To highlight important parts.
<i>Italics</i>	Names of buttons, menu functions and tabs that can be clicked.
<i>Courier</i>	For parameters and system variables.
RUN	Literal user inputs.
(→ Chapter 1.3, page 7)	Operating states are designated by capitals.
	Cross-references are hyperlinks even if they are not particularly marked. When the cursor hovers over a hyperlink, it changes its shape. Click the hyperlink to jump to the corresponding position.

1.3.1 Safety Notices

Safety notices must be strictly observed to ensure the lowest possible risk.

1.3.1.1 Meaning of Signal Words

- Warning: Hazard which could result in death or serious injury.
- Caution: Hazard which could result in minor or moderate injury.
- Notice: Information to avoid damage to property.

1.3.1.2 Structure of Warnings

⚠ SIGNAL WORD

Type and source of risk!
Consequences arising from non-observance.
Risk prevention.

NOTICE

Type and source of damage!
Damage prevention.

1.3.2 Operating Tips

1.3.2.1 Structure of Additional Information



The text giving additional information is located here.

1.3.2.2 Structure of Tips

TIP

The tip text is located here.

2 Safety

All safety information, notes and instructions specified in this document must be strictly observed. The product may only be used if all guidelines and safety instructions are adhered to.

The product is operated with SELV or PELV. No imminent risk results from the product itself.

The following requirements must be met to safely install and start up the HIMatrix CSG 01 systems and ensure safety during their operation and maintenance:

- Knowledge of regulations.
- Proper technical implementation of the safety instructions detailed in this manual performed by qualified personnel.

HIMA will not be held liable for severe personal injuries, damage to property or the environment caused by any of the following:

- Unqualified intervention in the devices.
- De-activation or bypassing of safety functions.
- Failure to comply with the instructions detailed in this manual.

HIMA develops, manufactures and tests the HIMatrix CSG 01 systems in compliance with the pertinent safety standards and regulations. The use of the devices is only allowed if the following requirements are met:

- They are only used for the intended applications.
- They are only operated under the specified environmental conditions.
- They are only operated in connection with the approved external devices.

2.1 Calculating the PFD and the PFH Values

The PFD and the PFH values for the HIMatrix systems have been calculated in accordance with IEC 61508.

For SIL 3, IEC 61508-1 defines a PFD value of $10^{-4} \dots 10^{-3}$ and a PFH value of $10^{-8} \dots 10^{-7}$ per hour.

15 % of the limit for PFD and PFH specified in the standard is assumed for the HIMatrix CSG 01 systems.

The limits resulting for the controller portion are thus:

PFD = 1.5×10^{-4} and PFH = 1.5×10^{-8} per hour.

A proof test interval (→ IEC 61508-4, Offline Proof Test, Paragraph 3.8.5) of 10 years has been defined for the HIMatrix controllers, remote I/Os and modules (→ Chapter 11.2, page 64).

2.2 Intended Use

The HIMatrix CSG 01 is a safety-related controller system for burners with gaseous fuels. The controller may only be used for this purpose. All other applications are prohibited.

The HIMatrix CSG 01 system can be used up to safety integrity level SIL 3 in accordance with IEC 61508.

When using the HIMatrix CSG 01 system, comply with the following general requirements.

2.2.1 Environmental Conditions

All the environmental conditions specified in this manual must be observed when operating the HIMatrix CSG 01 system. The environmental conditions are listed in the product data.

2.2.2 ESD Protective Measures

Only personnel with knowledge of ESD protective measures may modify or extend the system or replace components.

NOTICE



Damage to the HIMatrix CSG 01 system due to electrostatic discharge!

- When performing the work, make sure that the workspace is free of static, and wear a grounding strap.
- If not used, ensure that the components are protected from electrostatic discharge, e.g., by storing them in their packaging.

2.3 Residual Risk

Causes for damage to the HIMatrix CSG 01:

- Faults related to engineering.
- Faults related to the wiring.

2.4 Safety Precautions

Observe all local safety requirements and use the protective equipment required on site.

2.5 Emergency Information

The HIMatrix CSG 01 system is a part of the safety equipment of an automatic burner control system. If the controller fails, the burner enters the safe state.

In case of emergency, no action that may prevent the HIMatrix CSG 01 system from operating safely is permitted.

2.6 Certification

The safety-related HIMatrix CSG 01 system has been tested and is certified by TÜV for functional safety in accordance with **CE** and the standards listed below.

This manual represents the "Original instructions" as of Machinery Directive (Directive 2006/42/EC).

The "Original documentation" for the HIMatrix CSG 01 system is written in German language. The statements made in the German documentation shall apply.

2.6.1 EU Type Approval Test



TÜV Rheinland Industrie Service GmbH
Automation, Software and Information Technology
Am Grauen Stein
51105 Köln

EC Type Test Certificate Safety PES System Family HIMatrix CSG

2.6.2 Current Standards

International standards:	Safety level
EN/IEC 61508, Parts 1-7:2010	SIL 3
IEC 61511:2016 + Corr. 1:2016	SIL 3
EN ISO 13849-1:2015	Performance Level e
EN 62061:2005 +AC:2010 +A1:2013 + A2:2015	SIL CL 3
EN 50156-1:2015	SIL 3
EN 12067-2:2004	
EN 298:2012	
NFPA 85:2015	
NFPA 86:2015	
EN 61131-2:2007	
EN 61131-6:2012	
EN 61326-3-1:2008	
EN 61326-3-2:2008	
EU directives (according to declarations of conformity)	

Table 1: International Standards and Safety Levels

2.6.3 Test Conditions

The HIMatrix CSG 01 systems have been tested for compliance with the EMC, climatic and environmental requirements of the following standards:

Test standards	Content
IEC/EN 61131-2:2007	Programmable controllers, Part 2 Equipment requirements and tests
IEC/EN 61131-6:2012	Programmable controllers, Part 6 Functional safety
IEC/EN 61000-6-2:2005	Electromagnetic Compatibility (EMC) Part 6-2: Generic standards. Immunity for industrial environments
IEC/EN 61000-6-4:2007 + A1:2011	Electromagnetic Compatibility (EMC) Part 6-4: Generic standards. Emission standard for industrial environments

Table 2: Standards for EMC, Climatic and Environmental Requirements

2.6.3.1 Climatic Conditions

The following table lists the most important tests and limits for climatic conditions:

Test standard	Climatic tests
IEC/EN 61131-2	Ambient temperature: 0...+60 °C (Test limits: -10...+70 °C)
	Storage temperature: -40...+85 °C
	Dry heat and cold; withstand tests: +70 °C/-40 °C, 16 h, +85 °C, 1 h, power supply not connected
	Temperature changes, withstand test: Fast temperature changes: -40 °C/+70 °C, power supply not connected
	Immunity test Slow temperature changes: -10 °C/+70 °C, power supply not connected
	Cyclic damp-heat; withstand tests: +25 °C/+55 °C, 95 % relative humidity, power supply not connected

Table 3: Climatic Conditions

2.6.3.2 Mechanical Conditions

The following table lists the most important tests and limits for mechanical requirements:

Test standard	Mechanical tests
IEC/EN 61131-2	Vibration immunity test: 5...8.4 Hz, 3.5 mm 8.4...150 Hz, 1 g, EUT in operation, 10 cycles per axis
	Shock immunity test: 15 g, 11 ms, EUT in operation, 3 shocks per axis and direction (18 shocks)

Table 4: Mechanical Tests

2.6.3.3 EMC Conditions

In accordance with IEC 61131-2, the interference levels specified in Table 5 are required for programmable controllers used in zone C. HIMatrix CSG 01 systems meet those requirements.

Test standards	Interference immunity tests
IEC/EN 61000-4-2	ESD test: 4 kV contact discharge, 8 kV air discharge
IEC/EN 61000-4-3	RFI test (10 V/m): 80 MHz...1 GHz, 80 % AM RFI test (3 V/m): 1.4 GHz...2 GHz, 80 % AM RFI test (1 V/m): 2.0 GHz...2.7 GHz, 80 % AM
IEC/EN 61000-4-4	Burst test Supply voltage: 2 kV Signal lines: 2 kV Shielded communication lines: 1 kV
IEC/EN 61000-4-5	Surge: Supply voltage: 2 kV CM, 1 kV DM Signal lines (AC): 2 kV CM, 1 kV DM Shielded lines: 2 kV CM Other: 1 kV CM
IEC/EN 61000-4-6	High frequency, asymmetrical 10 V, 150 kHz...80 MHz, 80 % AM
IEC/EN 61000-4-18	Damped oscillatory wave test 2.5 kV L-, L+/PE 1 kV L+/L- Signal lines (AC): 2.5 kV CM, 1 kV DM Shielded lines: 0.5 kV CM Other: 1 kV CM, 0.5 kV DM

Table 5: Interference Immunity Tests in Accordance with IEC 61131-2, Zone C

Test standards	Noise emission tests
IEC/EN 61000-6-4, EN 55011 Class A, Group 1	Emission test: radiated, conducted

Table 6: Noise Emission Tests

HIMatrix CSG 01 systems meet the EMC requirements in accordance with the following standards:

- EN 298
- EN 61000-6-2

2.6.3.4 Supply Voltage

The following table lists the most important tests and limits for the supply voltage of the HIMatrix CSG 01 systems:

Test standard	Supply voltage failures immunity test
IEC/EN 61131-2	Voltage range test: 24 VDC, -15...+20 %, $r_p \leq 5\%$
	Momentary external current interruption immunity test: DC, PS 2: 10 ms
	Reversal of DC power supply polarity test: Tested for 10 s

Table 7: Supply Voltage Failures Immunity Test

3 Product Description

The safety-related controller HIMatrix CSG 01 includes sequential controls that ensure the safe start-up, shutdown and operation of a main burner. The main burner is started using an igniter. Prior to starting the igniter and the main burners, pre-purging of the combustion chamber is monitored.

A detailed flow chart in tabular form can be found in the manual's appendix. (→ Applicable document: HIMatrix CSG 01 Sequence CSG HI 800 625 E).

3.1 Function

The HIMatrix CSG 01 controller includes the following functions:

- Start-up of the main burner.
- Shutdown of the main burner.
- Operation of the main burner.

The start-up process of the main burner consists of three phases:

1. Monitoring of the main burner pre-purging.
2. Starting of the igniter.
3. Starting of the main burner through the igniter.

These sequences are based on the interaction of three individual sequence chains in three function macros:

1. X_BMS_Purge
2. X_BMS_Gasigniter
3. X_BMS_Gasburner

The sequence description (→ Table 8, page 16) shows an example of the overall progression of the sequence chains. The sequence chains or error codes are displayed on the control panel of the HIMatrix CSG 01 (→ Chapter 8.2, page 34).

The resulting overall sequence is shown in the following simplified flow chart and can be tracked in the operating graphs:

Action	Description	Purge	Igniter	Burner
1	Start igniter and main burner (E17)			1
2	Main burner, position of SSV1 and SSV2			2
3	Main burner, position of pressure relief valve			3
4	Main burner, flame simulation test			4
5	Main burner, ignition power test			5
6	Main burner, pressure relief valve closed			6
7	Main burner, tightness test			7
8	Main burner, tightness test			8
9	Main burner, tightness test			9
10	Main burner, tightness test			10
11	Main burner, tightness test			11
12	Main burner, tightness test			12
13	Main burner, tightness test			13
14	Main burner, tightness test			14
15	Main burner, operational readiness 1 hour	1		15
16	Pre-purging, preparations	2		
17	Pre-purging, air pressure check	3		
18	Pre-purging, air pressure check	4		
19	Pre-purging, pre-processing time 5 min.	5		
20	Pre-purging	6		
21	Pre-purging	7		
22	Pre-purging	8		
23	Pre-purging, post-processing time 5 min.	9		
24	Pre-purging, ready for ignition (seq. no 5)	10	1	
25	Igniter, position of SSV1 and SSV2		2	
26	Igniter, flame simulation test		3	
27	Igniter, preparing for ignition		4	
28	Igniter, spark transformer		5	
29	Igniter, 1st ignition		6	
30	Igniter re-ignition delay time (seq. no. 9)		7	
31	Igniter, re-ignition time (seq. no. 10)		8	
32	Igniter, spark transformer		9	
33	Igniter, 2nd ignition		10	
34	Igniter re-ignition delay time (seq. no. 9)		11	
35	Igniter, re-ignition time (seq. no. 10)		12	
36	Igniter, spark transformer		13	
37	Igniter, 3rd ignition		14	
38	Main burner, 1st ignition		15	16
39	Main burner, re-ignition delay time (seq. no. 16)			17
40	Main burner, re-ignition time (seq. no. 17)			18
41	Main burner, 2nd ignition			19
42	Main burner, ignited			23
43	Main burner, flame stabilization			24
44	Main burner, FARC delay (seq. no. 18)			25
45	Main burner, in operation	11	16	26
46	Igniter, overlapping time (seq.no. 11)		17	
47	Igniter, not in operation		18	

Action	Description	Purge	Igniter	Burner
48	Main burner, manual stop (E19)			27
49	Main burner, not in operation	12		28
50	Main burner, tightness test	17		29
51	Main burner, tightness test			30
52	Main burner, tightness test			31
53	Main burner, tightness test			32
54	Main burner, not in operation			33
55	CSG restart delay time (seq. no. 3)			

Table 8: Sequence Description

The sequences can change depending on the configuration (→ Chapter 5.2, page 25).

Steps 12 and 17 of the sequence description (pre-purging) do not run synchronously with steps 28 through 33 of the sequence description (main burner). This seeming relation is the result of the chosen representation of the sequences.

The time required to achieve the pre-purge conditions in action 20 and return to the pre-purge conditions in action 24 is 5 minutes. The time of 5 minutes cannot be changed.

Further details on the functions performed by **HIMatrix CSG 01** are provided in the functional description (→ Chapter 7, page 27) and the detailed flow chart (→ Applicable document: HIMatrix CSG 01 Sequence CSG HI 800 625 E).

3.2 Structure of the HIMatrix Combustion Safeguard CSG 01

This chapter describes the layout and function of the controller and the connections for communication.

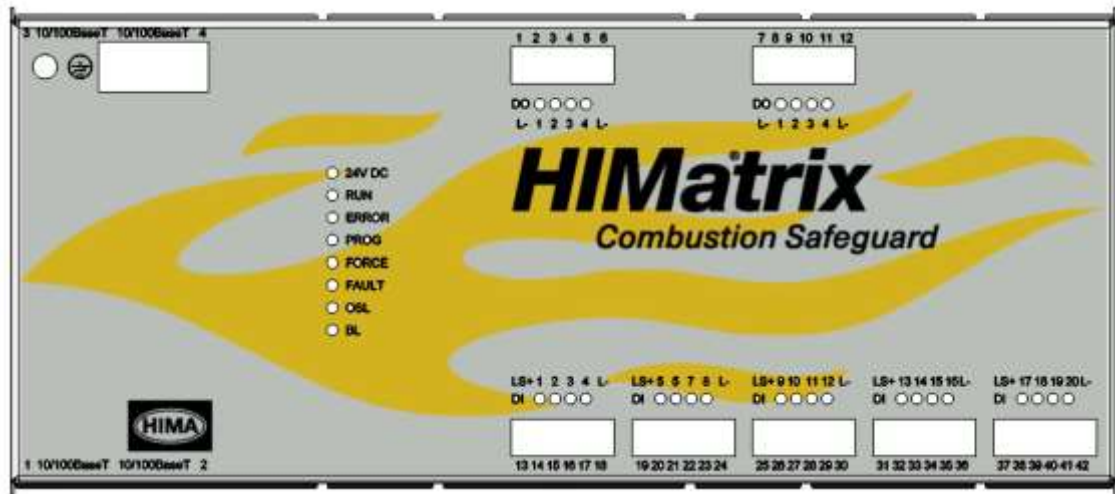


Figure 1: Front View

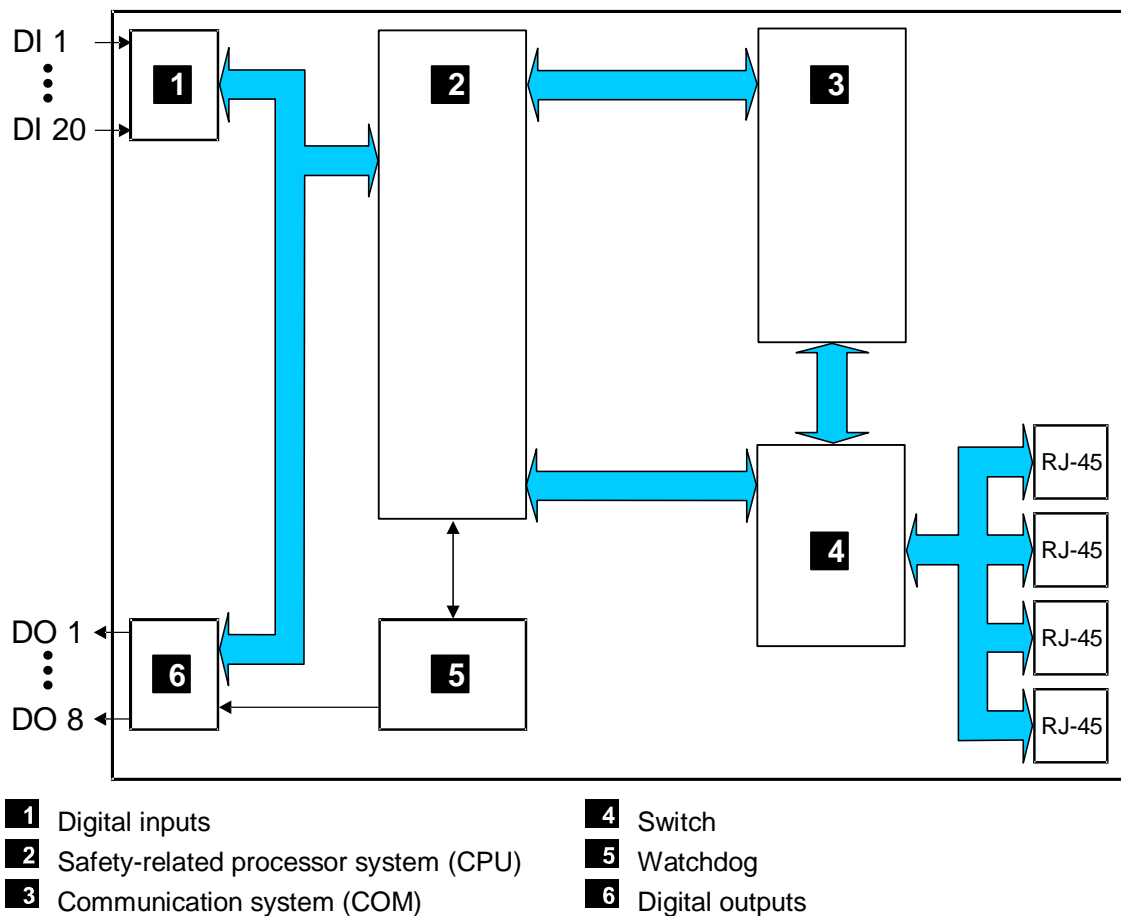


Figure 2: Block Diagram

3.2.1 LED Indicators

The light-emitting diodes (LEDs) indicate the operating state of the controller. The LEDs are classified as follows:

- Operating voltage LED
- System LEDs
- Communication LEDs
- I/O LEDs

When the supply voltage is connected, an LED test is performed and all LEDs are briefly lit.

Definition of blinking frequencies

The following table defines the blinking frequencies of the LEDs:

Definition	Blinking frequencies
Blinking 1	Long (approx. 600 ms) on, long (approx. 600 ms) off.
Blinking-x	Ethernet communication: Blinking synchronously with data transfer

Table 9: Blinking Frequencies of LEDs

3.2.2 Operating Voltage LED

The LED signals the following states:

LED	Color	Status	Description
24 VDC	Green	On	24 VDC operating voltage present.
		Off	No operating voltage.

Table 10: Operating Voltage LED

3.2.3 System LEDs

While the device is being booted, all LEDs are lit simultaneously.

LED	Color	Status	Description
RUN	Green	On	<ul style="list-style-type: none"> The device is in RUN, normal operation. Emergency loader active
		Blinking 1	Device in STOP
		Off	The device is not in the RUN or STOP state.
ERR	Red	On	System warning, for example: Temperature warning.
		Blinking 1	System error, for example: <ul style="list-style-type: none"> The device is in the ERROR STOP state. The self-test has detected internal faults, e.g., hardware or voltage supply faults. Emergency loader active
		Off	No faults detected
PROG	Yellow	On	<ul style="list-style-type: none"> Emergency loader active Duplicate IP address check
		Blinking 1	Duplicate IP address detected 1)
		Off	None of the described events occurred
FORCE	Yellow	On	Emergency loader active
		Blinking 1	Duplicate IP address detected 1)
		Off	No event occurred
FAULT	Yellow	On	<ul style="list-style-type: none"> Emergency loader active Warning related to the field zone
		Blinking 1	Duplicate IP address detected 1)
		Off	None of the described faults occurred
OSL	Yellow	Blinking 1	<ul style="list-style-type: none"> Operating system emergency loader active Duplicate IP address detected ¹⁾
		Off	No event occurred
BL	Yellow	On	Warning related to external process data communication
		Blinking 1	<ul style="list-style-type: none"> Errors related to external process data communication Duplicate IP address detected 1)
		Off	No event occurred

1) If all the LEDs PROG, FORCE, FAULT, OSL and BL are blinking simultaneously.

Table 11: System LEDs

3.2.3.1 Communication LEDs

All RJ-45 connectors are provided with a green and a yellow LEDs. The LEDs signal the following states:

Color	Status	Description
Green	On	Full duplex operation.
	Blinking 1	IP address conflict, all communication LEDs are blinking.
	Blinking-x	Collision.
	Off	Half duplex operation, no collision.
Yellow	On	Connection available.
	Blinking 1	IP address conflict, all communication LEDs are blinking.
	Blinking-x	Interface activity.
	Off	No connection available.

Table 12: Ethernet Indicators

3.2.3.2 I/O LEDs

The LEDs signal the following states:

LED	Color	Status	Description
DI 1...20	Yellow	On	The related channel is active (energized).
		Off	The related channel is inactive (de-energized).
DO 1...8	Yellow	On	The related channel is active (energized).
		Off	The related channel is inactive (de-energized).

Table 13: I/O LEDs

3.3 Product Data

3.3.1 General

Supply voltage L+	24 VDC, $-15...+20\%$, $r_P \leq 5\%$, from a power supply unit with safe insulation, in accordance with IEC 61131-2
Maximum supply voltage	30 V
Current consumption	Max. 8 A (with maximum load) Idle: 0.5 A at 24 V
Microprocessor	PowerPC
Response time	< 250 ms
Ethernet interfaces	4 x RJ-45, 10BASE-T/100BASE-Tx with integrated switch
Protection class	Protection class III in accordance with IEC/EN 61131-2.
Ambient temperature	0...+60 °C
Storage temperature	-40...+85 °C
Pollution	Pollution degree II in accordance with IEC/EN 61131-2
Altitude	< 2000 m
Degree of protection	IP20
Maximum dimensions HIMatrix CSG 01 (without plug)	Width: 257 mm (with housing screws) Height: 114 mm (with fixing bolt) Depth: 66 mm (with grounding screw)
Weight	Approx. 1.2 kg

Table 14: General Product Data of HIMatrix CSG 01

3.3.2 Digital Inputs

Number of inputs	20 (not galvanically separated)
High level:	
▪ Voltage	15...30 VDC
▪ Current consumption	≥ 2 mA at 15 V
Low level:	
▪ Voltage	Maximum 5 VDC
▪ Current consumption	Maximum 1.5 mA (1 mA at 5 V)
Switching point	typ. 7.5 V
Supply	5 x 20 V/100 mA (at 24 V), short-circuit-proof

Table 15: Specifications for Digital Inputs

3.3.3 Digital Outputs

Number of outputs	8 (not galvanically separated)	
Output voltage	$\geq L+$ minus 2 V	
Output current	Channels 1...3 and 5...7: 0.5 A at $\leq 60^\circ\text{C}$ The output current of channels 4 and 8 depends on the ambient temperature.	
	Ambient temperature	Output current
	$< 50^\circ\text{C}$	2 A
	50...60 $^\circ\text{C}$	1 A
Minimum load	2 mA for each channel	
Internal voltage drop	Maximum 2 V at 2 A	
Leakage current (with low level)	Maximum 1 mA at 2 V	
Behavior upon overload	The affected output is switched off and cyclically switched on again.	
Total output current	Maximum 7 A Exceeding the maximum output current causes all outputs to be switched off, and then cyclically switched on again.	

Table 16: Specifications for the Digital Outputs

4 Process Signals

4.1 Digital Inputs

Input	Function	Terminal	Low	High
1	Main interlock fulfilled	X:14	0...5 VDC	15...30 VDC
2	Start enable fulfilled	X:15	0...5 VDC	15...30 VDC
3	Pre-purging/no pre-purging	X:16	0...5 VDC	15...30 VDC
4	Combustion air pressure > MIN	X:17	0...5 VDC	15...30 VDC
5	Pre-purge conditions fulfilled	X:20	0...5 VDC	15...30 VDC
6	Igniter flame available	X:21	0...5 VDC	15...30 VDC
7	Igniter SSV1 closed	X:22	0...5 VDC	15...30 VDC
8	Igniter SSV2 closed	X:23	0...5 VDC	15...30 VDC
9	Main burner flame available	X:26	0...5 VDC	15...30 VDC
10	Tightness pressure > MAX (optional)	X:27	0...5 VDC	15...30 VDC
11	Tightness pressure < MIN (optional)	X:28	0...5 VDC	15...30 VDC
12	Main burner ignition power position	X:29	0...5 VDC	15...30 VDC
13	Main burner SSV1 closed	X:32	0...5 VDC	15...30 VDC
14	Main burner SSV2 closed	X:33	0...5 VDC	15...30 VDC
15	Main burner pressure relief valve closed	X:34	0...5 VDC	15...30 VDC
16	Main burner fuel air ratio	X:35	0...5 VDC	15...30 VDC
17	Push-button Start igniter and main burner	X:38	0...5 VDC	15...30 VDC
18	Push-button Do not stop igniter	X:39	0...5 VDC	15...30 VDC
19	Push-button Do not stop main burner	X:40	0...5 VDC	15...30 VDC
20	Error reset	X:41	0...5 VDC	15...30 VDC

Table 17: Process Signals of Digital Inputs

The behavior described in the Function column corresponds to the active input (high level).

-
- i** To filter out the contact bounce and the test pulses of other safety-related controllers in the internal signal processing of the HiMatrix CSG 01, the inputs are delayed by 50 ms for the signal changes 0 to 1 and 1 to 0.
-

4.2 Digital Outputs

Output	Function	Terminal	High level	Load
1	HiMatrix CSG 01 is ready to operate	X:2	L+ (- 2 VDC)	2...500 mA
2	Start pre-purging	X:3	L+ (- 2 VDC)	2...500 mA
3	Check of combustion air pressure	X:4	L+ (- 2 VDC)	2...500 mA
4	Igniter ignition system/transformer	X:5	L+ (- 2 VDC)	2...1000 mA
5	Igniter SSV1 and SSV2	X:8	L+ (- 2 VDC)	2...500 mA
6	Main burner SSV1	X:9	L+ (- 2 VDC)	2...500 mA
7	Main burner SSV2	X:10	L+ (- 2 VDC)	2...500 mA
8	Main burner pressure relief valve	X:11	L+ (- 2 VDC)	2...1000 mA

Table 18: Process Signals of Digital Outputs

4.3 Cable Plugs

Cable plugs attached to the pin headers of the devices are used to connect to the HIMatrix CSG 01 system and the field zone. The cable plugs are included within the scope of delivery of the HIMatrix CSG 01 devices and modules.

The power supply connections of the HIMatrix CSG 01 system feature the following properties:

Connection to the power supply	
Cable plugs	4 poles, screw terminals
Wire cross-section	<ul style="list-style-type: none"> ▪ 0.2...2.5 mm² (single-wire) ▪ 0.2...2.5 mm² (finely stranded) ▪ 0.2...2.5 mm² (with wire end ferrule)
Stripping length	10 mm
Screwdriver	Slotted 0.6 x 3.5 mm
Tightening torque	0.4...0.5 Nm

Table 19: Power Supply Cable Plugs

Connection to the field zone	
Number of cable plugs	7 items, 6 poles, screw terminals
Wire cross-section	<ul style="list-style-type: none"> ▪ 0.2...1.5 mm² (single-wire) ▪ 0.2...1.5 mm² (finely stranded) ▪ 0.2...1.5 mm² (with wire end ferrule)
Stripping length	6 mm
Screwdriver	Slotted 0.4 x 2.5 mm
Tightening torque	0.2...0.25 Nm

Table 20: Input and Output Cable Plugs

5 Parameters

5.1 Process Adjustments

Seq. no.	Function	Low	Default	High
1	Password	10000	11111	65535
2	HIMatrix CSG 01 configuration	0	0	65535
3	Restart delay time for HIMatrix CSG 01	1 s	10 s	900 s
4	Pre-purge time	20 s	180 s	900 s
5	Ready for ignition time after pre-purging	0 s	300 s	900 s
6	Igniter pre-ignition time	0 s	1 s	10 s
7	Igniter trials for ignition	1	1	3
8	Igniter safety time	0 s	3 s	5 s
9	Igniter re-ignition delay time (pre-purge)	0 s	10 s	60 s
10	Igniter re-ignition time	0 s	30 s	60 s
11	Igniter and main burner overlapping time	0 s	2 s	10 s
12	Main burner tightness test time	0 s	20 s	60 s
13	Main burner de-pressurizing time	2 s	3 s	10 s
14	Main burner trials for ignition	1	1	2
15	Main burner safety time	0 s	2 s	10 s
16	Main burner re-ignition delay time (pre-purging)	0 s	10 s	60 s
17	Main burner re-ignition time	0 s	30 s	60 s
18	Release delay time of fuel air ratio control	0 s	5 s	60 s

Table 21: Safety-Relevant Parameters

i

The safety-related parameter values must be defined separately (risk analysis). They must be tested and enabled accordingly!

5.2 Settings for HIMatrix CSG 01

Bit	HIMatrix CSG 01 configuration (seq. no. 2)	Signal	Default	Value
0 LSB	Stop of igniter: ▪ Automatic, after ignition of main burner ▪ Manual	0/1 0 1	0	1
1	Tightness test: ▪ Activated ▪ Deactivated	0/1 0 1	0	2
2	Number of main burner safety valves: ▪ SSV1, SSV2 and pressure relief valve ▪ SSV1 and SSV2	0/1 0 1	0	4
3	Pressure relief valve: ▪ Active closed ▪ Active open	0/1 0 1	0	8
4	Test valve for no air false alarm ▪ Test valve available ▪ Test valve not available	0/1 0 1	0	16
5	Remote control ▪ Deactivated ▪ Activated	0/1 0 1	0	32
6	Igniter SSV1 and SSV2 end position closed ▪ Switch available ▪ Switch not available	0/1 0 1	0	64
7	Main burner SSV1 and SSV2 end position closed: ▪ Switch available ▪ Switch not available	0/1 0 1	0	128
8	Main burner pressure relief valve end position closed ▪ Switch available ▪ Switch not available	0/1 0 1	0	256
9 to 15	Not used			

Table 22: Configuration of CSG Settings

Sample Configuration

i

The value of the HIMatrix CSG 01 configuration parameter is the sum of the individual values contained in the Value column of the individual functions with activated 1-signal.


Bit	HIMatrix CSG 01 configuration (seq. no. 2)	Signal	Value
0	Stop igniter: Automatic, after main burner ignition	0	0
1	Tightness test: Activated	0	0
2	Number of main burner safety valves: SSV1 and SSV2	1	4
3	Pressure relief valve: Not relevant	0	0
4	Test valve for no air false alarm: Test valve not available	1	16
5	Remote control: Deactivated	0	0
6	Igniter SSV1 and SSV2 end position closed: Not available	1	64
7	Main burner SSV1 and SSV2 end position closed: Available	0	0
8	Main burner pressure relief valve end position closed: Not relevant	0	0
	Value in the CSG configuration parameter		84

Table 23: Example of a HIMatrix CSG 01 Configuration

6 R&I Diagram

Combustion chamber

Safety valve trains for igniter and gas burner

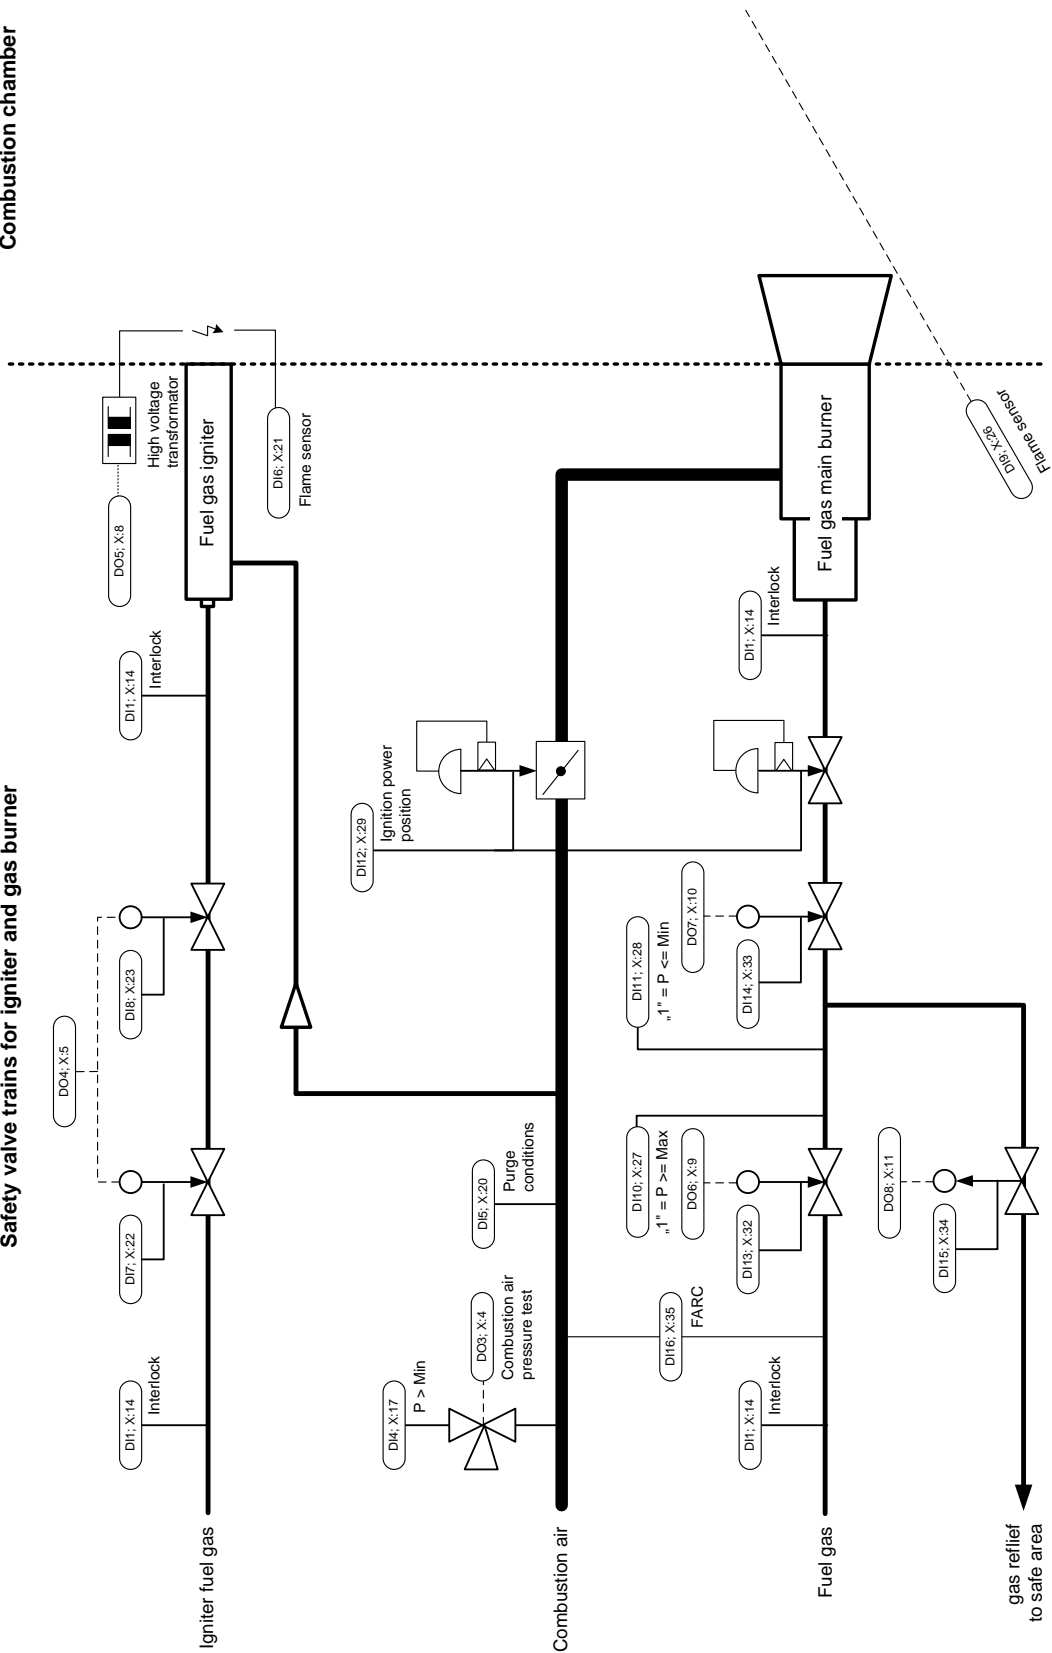

7 Functional Description

7.1 Safety Shutdowns

Input 1 shows the sum of all safety shutdowns in the plant, e.g., serial disconnection of disabling contacts.

The following shutdown signals must be integrated in the safety shutdown:

- Fuel pressure (flow) > minimum
- Fuel pressure (flow) < maximum
- Combustion air supply is operating without faults
- Combustion air pressure (flow) > minimum
- Combustion air pressure (flow) < maximum
- Current supplies and auxiliary energies are ready for use
- Heat medium pressure (flow) > minimum
- Heat medium pressure (flow) < maximum
- Heat medium is fault-free
- Exhaust system is operating without faults
- Fuel air ratio > minimum and < maximum
- Combustion chamber pressure > minimum
- Combustion chamber pressure < maximum
- Combustion chamber temperature < maximum
- Operating temperatures of heat exchangers < maximum
- Boiler (firetube boiler, watertube boiler, etc.) is failure-free

i

The list is not exhaustive since it can only be completed based on the specific plant. To complete the list, suitable measures must be implemented such as the creation of a hazard and risk analysis.

7.2 Lock-Out

To initiate a new burner start after a lock-out, implement the following measures:

To remove the lock-out

1. Remove the cause of the lock-out.
2. The HIMatrix CSG 01 is unlocked by activating input 20 *Error reset*.
 - The lock-out is removed.

For details on the burner start, see Chapter Burner Start (→ Chapter 7.4, page 29).

7.3 Start Pre-Conditions

After connecting the signals described in section Process Signals (→ Chapter 4, page 22), the following signals must be present at the inputs and outputs before starting the burner:

7.3.1 Inputs

Input	Function	Signal	Volt
1	Main interlock fulfilled	1	24 VDC
2	Start enable fulfilled	1	24 VDC
3	Pre-purging/no pre-purging	1 ¹⁾	0 VDC
4	Combustion air pressure > MIN	1	24 VDC
5	Pre-purge conditions fulfilled	0	0 VDC
6	Igniter flame available	0	0 VDC
7	Igniter SSV1 closed	1 ¹⁾	24 VDC
8	Igniter SSV2 closed	1 ¹⁾	24 VDC
9	Main burner flame available	0	0 VDC
10	Tightness pressure > MAX	0 ¹⁾	0 VDC
11	Tightness pressure < MIN	1 ¹⁾	24 VDC
12	Main burner ignition power position	1	24 VDC
13	Main burner SSV1 closed	1 ¹⁾	24 VDC
14	Main burner SSV2 closed	1 ¹⁾	24 VDC
15	Main burner pressure relief valve closed	0	0 VDC
16	Main burner fuel air ratio	0	0 VDC
17	Push-button Start igniter and main burner	0	0 VDC
18	Push-button Do not stop igniter	1	24 VDC
19	Push-button Do not stop main burner	1	24 VDC
20	Error reset	0	0 VDC
¹⁾ Alternative operation is possible			

Table 24: Start Pre-Conditions at the Inputs

7.3.2 Outputs

Output	Function	Signal	Volt
1	HiMatrix CSG 01 is ready to operate	1	L+ (- 2 VDC)
2	Start pre-purging	0	0 VDC
3	Check of combustion air pressure	0	0 VDC
4	Igniter ignition system/transformer	0	0 VDC
5	Igniter SSV1 and SSV2	0	0 VDC
6	Main burner SSV1	0	0 VDC
7	Main burner SSV2	0	0 VDC
8	Main burner pressure relief valve	0	0 VDC

Table 25: Start Pre-Conditions at the Outputs

Additionally, the following start conditions must be ensured:

- The displayed step numbers must be < 128 (→ Chapter 8.2.3, page 36).
- The parameter setting time must have expired.
- The igniter must be ready for ignition (→ Chapter 8.2.3.2, page 38).
- The main burner must be ready for ignition (→ Chapter 8.2.3.3, page 39).

7.4 Burner Start

The burner can only start if the signal layer at the HIMatrix CSG 01 matches the signals described in section Start Pre-Conditions (→ Chapter 7.3, page 28).

7.4.1 Tightness Test with Pressure Switches

For the tightness test of the safety shutoff valves (EN 746/1643), two pressure switches can be installed between the safety shutoff valves SSV1 and SSV2.

To activate the pressure switch test, bit 9 of the HIMatrix CSG 01 configuration parameter must be activated (→ Chapter 5.2, page 25).

The maximum pressure switch activates input 10 if the measured pressure is **above** the maximum limit configured for the switch.

The minimum pressure switch activates input 11 if the measured pressure is **below** the minimum limit configured for the switch.

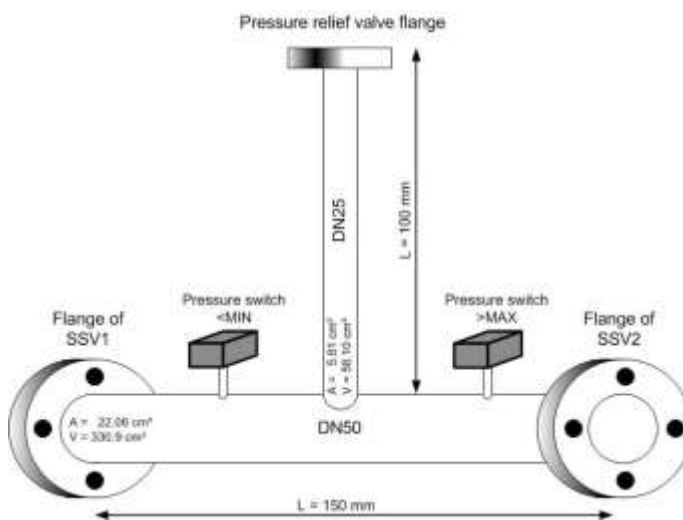


Figure 3: Pressure Switches between SSV1, SSV2 and Pressure Relief Valve

7.4.1.1 Sample Calculation for Pressure Switch

At a normative leakage rate E of $0.1 \times 50 \text{ dm}^3/\text{h} = 5000 \text{ cm}^3/\text{h}$ (in accordance with EN 1643), the leakage in the previous example with a test duration of 20 s is calculated as follows:

$$0.1 \times 50 \text{ dm}^3/\text{h} = 5000 \text{ cm}^3/\text{h} \times (20 \text{ s} / 3,600 \text{ s}) = 27.778 \text{ cm}^3.$$

According to the ideal gas law $[V_1 \times p_1 = (V_1 + E) \times p_2]$ the resulting minimum pressure limit **$dp_{(min)} = 67.5 \text{ mbar}$** , at a total tube volume of 389 cm^3 (→ Figure 3, page 29) and an absolute pressure $p_1 = 101325 \text{ Pa}$, is as follows:

- $p_{2(min)} = (389 \text{ cm}^3 \times 101325 \text{ Pa}) / (389 \text{ cm}^3 + 27.778 \text{ cm}^3)$
- $dp_{(min)} = |p_{2(min)} - 101325| \times (1 \text{ mbar} / 100 \text{ Pa}) = 67.5 \text{ mbar}$

At an operating pressure of 500 mbar (50000 Pa), the resulting maximum pressure limit of **$dp_{(max)} = 399.14 \text{ mbar}$** is as follows:

- $p_{2(max)} = (389 \text{ cm}^3 \times (101325 \text{ Pa} + 50000 \text{ Pa})) / (389 \text{ cm}^3 + 27.778 \text{ cm}^3)$
- $dp_{(max)} = |p_{2(max)} - 101325| \times (1 \text{ mbar} / 100 \text{ Pa}) = 399.14 \text{ mbar}$

The pressures p_1 and p_2 are absolute pressures (e.g., $p_{Rel} + 101325 \text{ [Pa]}$).

7.4.1.2 Tightness Test Sequence

After activating input 17 *Start igniter and main burner*, the position feedbacks of the main burner safety valves are checked for plausibility. Subsequently, flame simulation monitoring is carried out (active input 9 *Main burner flame available*). After a successful valve and flame simulation test, a tightness test with pressure switches is performed in the following sequence:

1. Close the pressure relief valve (activate output 8).
2. Check whether input 10 > MAX is deactivated and input 11 < MIN is activated.
3. Start the tightness test time, parameter seq. no. 12.
4. After the tightness test time has expired, check whether input 10 has retained the status < MAX deactivated.
5. After the tightness test time has expired, check whether input 11 has retained the status < MIN activated.
6. Open safety valve SSV1 (activation of output 6) for 3 seconds.
7. Make sure that input 10 > MAX is activated after SSV1 has closed.
8. Make sure that input 11 < MIN is deactivated after SSV1 has closed.
9. Start the tightness test time time, parameter seq. no. 12.
10. After the tightness test time has expired, check whether input 10 has retained the status > MAX activated.
11. After the tightness test time has expired, check whether input 11 has retained the status < MIN deactivated.

The pressure relief valve (output 8) remains energized (closed) over the operating time of the main burner.

The main burner is now ready to operate and must be started by the igniter within a time window (310 seconds + seq. no. 4 *Pre-purge time* + seq. no. 5 *Ready for ignition time*).

7.4.2 Pre-Purging

Before starting up the main burner, the position acknowledgments of the main burner safety shutoff valves are checked for plausibility. The tightness test of the main burner safety shutoff valves is carried out (position 7.4.1) after flame simulation monitoring (active input 9 *Main burner flame available*).

Before pre-purge is started, proper operation of the no air pressure switch, for which the signal is present at input 4 *Combustion air pressure > MIN*, is tested. To this end, output 3 *Testing of combustion air pressure* is activated. The assumption is made that the corresponding safety pressure switch is de-pressurized in the system. Input 4 must be deactivated! After deactivation of the mentioned test output 3, input 4 must be re-activated.

Pre-purging is now automatically triggered through activation of output 2 *Start pre-purging*. Inputs 4 *Combustion air pressure > MIN* (start condition) and 5 *Pre-purge conditions fulfilled* must be activated within 5 minutes. The pre-purge time (parameter seq. no. 4) runs as long as the mentioned inputs are activated. The ignition release time (parameter seq. no. 5) is started after the pre-purge time has expired.

7.4.3 Igniter and Main Burner

If pre-purge was completed without faults, the position acknowledgments of the igniter safety shutoff valves are checked for plausibility.

After flame simulation monitoring (active input 6 *Igniter flame available*), the igniter ignition is initiated by activating output 4 *Igniter ignition system/transformer*. After expiration of the pre-ignition time (parameter seq. no 6), safety shutoff valves SSV1 and SSV2 are opened through activation of output 5 *Igniter SSV1 and SSV2*. Within the igniter safety time (parameter seq. no. 8) a flame must be detected through activation of the input 6 *Igniter flame available*.

If the first trial for ignition fails and the permissible number of trials for ignition (parameter seq. no. 7) is limited to one attempt, a lock-out is initiated. If two or no more than three trials for

ignition are permitted, a re-ignition delay time (parameter seq. no. 9) is started, which makes it possible to purge the igniter. The re-ignition time (parameter seq. no. 10) is started after the re-ignition delay time is started. A new igniter start must be triggered within this time. If the trigger is not given within the re-ignition time, a lock-out is performed.

The started igniter now initiates the automatic start of the main burner by activating output 6 *Main burner SSV1* and 7 *Main burner SSV2*. Within the main burner safety time (parameter seq. no. 15) a flame must be detected through activation of input 9 *Main burner flame available*.

If the first trial for ignition fails and the permissible number of trials for ignition (parameter seq. no. 14) is limited to one attempt, a lock-out is performed. If a second trial for ignition is permitted, a re-ignition delay time (parameter seq. no. 16) is started, which makes it possible to purge the main burner. The re-ignition time (parameter seq. no. 17) is started after the re-ignition delay time is started. A new main burner start must be triggered within this time. If the trigger is not given within the re-ignition time, a lock-out is performed.

After ignition of the main burner, depending on the configured operating mode (parameter seq. no. 2 bit 0), the igniter can be stopped as follows:

Mode of operation	Decommissioning
Bit 0 deactivated	Only by deactivating input 18 <i>Do not stop igniter</i> . Overlapping time (parameter seq. no. 11) has no function.
Bit 0 activated	Deactivation of input 18 <i>Do not stop igniter</i> or automatically after ignition of the main burner. Overlapping time (parameter seq. no. 11) has the value 0 seconds.
Bit 0 activated	Immediately after deactivation of the input 18 <i>Do not stop igniter</i> or automatically after the ignition of the main burner and expiration of the overlapping time. Overlapping time (parameter seq. no. 11) must be set to a value between 0 and 10 seconds.

Table 26: Decommissioning of the Igniter

After ignition of the main burner, the release delay time for fuel air ratio monitoring is started (parameter seq. no. 18). The input 16 *Main burner fuel air ratio* must be activated after this time has expired. The mentioned inputs must be now active for the entire operating time of the main burner. If this inputs is deactivated, an immediate lock-out occurs.

The ignition process described for the main burner, including all re-ignition events occurred for igniter and main burner, must be completed within the ready for ignition time (parameter seq. no. 5), which is started after successful completion of pre-purging. If this is not the case, a lock-out is carried out.

i

The main burner operation deactivates the time limitation of the "ready for ignition" function through the ready for ignition time (parameter seq. no. 5).

This relation must match the system situation!

After igniting the burner by activating input 17 *Start igniter and main burner*, the igniter can be additionally ignited as ancillary combustion source. The igniter is stopped as described above.

7.5 Burner Shutdown

Deactivating input 19 *Do not stop main burner*, the main burner can be stopped by closing safety shutoff valves SSV1 and SSV2 (deactivation of inputs 6 and 7).

After SSV1 and SSV2 are closed, a pressurized tightness test is carried out (→ Chapter 7.4.1.2, page 30).

After shutting down the main burner without faults, a re-ignition delay time is started (parameter seq. no. 3). The burner may only be started again after expiration of this time (→ Chapter 7.4, page 29).

After deactivation of input 18 *Do not stop igniter* or input 19 *Do not stop main burner* outside operating steps 15 and 26, sequence aborts are generated. The sequence abort corresponds to a lock-out and must be reset as such (→ Chapter 7.2, page 27).

7.6 Burner Operation

After a fault-free start-up of the the main burner and possibly of the igniter, combustion operation is ensured through the following information at the inputs:

Input	Function	Signal	Volt
1	Main interlock fulfilled	1	24 VDC
4	Combustion air pressure > MIN	1	24 VDC
6	Igniter flame available	1*	24 VDC
9	Main burner flame available	1	24 VDC
15	Main burner pressure relief valve closed	1	24 VDC
16	Main burner fuel air ratio	1	24 VDC
*If the igniter continued operation together with the main burner.			

Table 27: Statuses at the Inputs

If one of the mentioned signals is deactivated, a lock-out is immediately generated.

7.7 Special Operations

Configuration of the HIMatrix CSG 01 can be adapted to different operating modes of gas burners. Configuration variable *HIMatrix CSG 01 Configuration* (parameter seq. no. 2) must be used to adjust the configuration.

7.7.1 Control Bits

Control bit	Control bit function
0	Decommissioning of the igniter (→ Chapter 7.4.3, page 30).
1	Activate and/or deactivate the tightness test.
2	<p>The igniter and the main burner must be equipped with two safety shutoff valves each. Additionally, the main burner can be provided with a pressure relief valve between the safety shutoff valves.</p> <p>Selection of the valve configuration for the main burner must be performed with control bit 2. The following operating settings are possible:</p> <ul style="list-style-type: none"> ▪ 3 valves without tightness test (bit 1 = 1, bit 2 = 0). ▪ 3 valves with tightness test, passive de-pressurizing (bit 1 = 0, bit 2 = 0, bit 3 = 0). ▪ 3 valves with tightness test, active de-pressurizing (bit 1 = 0, bit 2 = 0, bit 3 = 1). ▪ 2 valves without tightness test (bit 1 = 1, bit 2 = 1). ▪ 2 valves with tightness test (bit 1 = 0 and bit 2 = 1). <p>The de-pressurizing time (parameter seq. no. 13) defines the opening time of the pressure relief valve. The de-pressurizing time is normatively between 0 and 3 seconds.</p>
3	<p>Response to different behaviors of the pressure relief valves.</p> <p>Control bit 3 can be activated or deactivated in accordance with the characteristics of the lack of energy, e.g., open or closed.</p>
4	If the test of input 4 <i>Combustion air pressure > MIN</i> is dispensable in the system thanks to corresponding instrumentation, control bit 4 can be used to deactivate the function (→ Chapter 7.4.2, page 30).
5	<p>Control bit 5 must be activated to allow a higher-level system to start and stop the igniter and main burner.</p> <p>Caution: This function is an option. It must be agreed upon with the responsible approval authorities.</p>
6	<p>Depending on the equipment of the igniter's safety shutoff valves, the end position signal "closed" must be activated or deactivated.</p> <p>HIMA recommends installing the end position switch "closed".</p>
7	<p>Depending on the equipment of the main burner's safety shutoff valves, the end position signal "closed" must be activated or deactivated.</p> <p>HIMA recommends installing the end position switch "closed".</p>
8	<p>Depending on the equipment of the main burner's relief valve, the end position signal "closed" must be activated or deactivated.</p> <p>HIMA recommends installing the end position switch "closed".</p>

Table 28: Control Bits for Special Operations

8 Operation and Supervision

The control panel (HMI) can be used to monitor the operating functions of the HIMatrix CSG 01 and set the project-specific parameters (→ Chapter 5.2, page 25).

The HIMatrix CSG 01 is configured as Modbus TCP slave.

The fixed IP address of the HIMatrix CSG 01 is 192.168.0.117 (SRS117).

Four RJ-45 interfaces are available, which are internally connected through a 100-Mbit switch.

8.1 Monitoring Functions

For monitoring functions, different signals are stored in the import and export area of the Modbus TCP protocol (→ Applicable document: HIMatrix CSG 01 COM List HI 800 600 E).

By accessing the import and export data of the HIMatrix CSG 01 via Modbus TCP, various control panels can be used to monitor the HIMatrix CSG 01.

8.2 Control Panel

A standard control panel for the HIMatrix CSG 01 should include the following indicators and operating fields:

- Pre-purging
- Igniter
- Main burner
- Step number
- Error number
- Lock-out
- Ready for ignition
- Re-ignition time
- Parameter seq. no.
- Configuration
- Password
- Diagnostics

8.2.1 Standard Operating Graph Displayed in a Control Panel

The contents of the various indicators are described in the following sections under Pre-purging, Igniter and Main Burner.

The structure of a standard control panel could look like this:

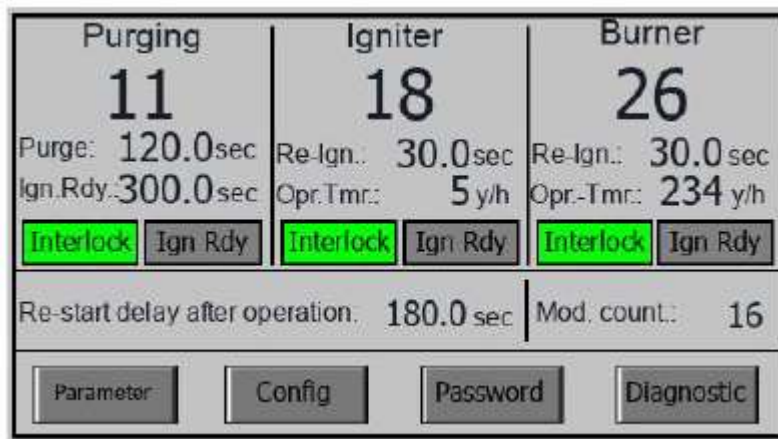


Figure 4: Example of a Standard Control Panel

8.2.1.1 Pre-Purging

Pre-purging includes the following indicators:

Indicators	Description
Purging	Current step or error number during pre-purging.
Purge	Pre-purge time (parameter seq. no. 4).
Ign.Rdy	Ready for ignition time (parameter seq. no.5)
Ign_Rdy	After successful pre-purging, this indicates that the igniter is ready for ignition.
Interlock	Indicates that a severe switch-off (lock-out) has occurred in the pre-purge area. Refer to the error numbers for details on the lock-out (→ Chapter 8.2.3.1, page 37).

Table 29: Pre-Purge Indicators

8.2.1.2 Igniter

The igniter includes the following indicators:

Indicators	Description
Igniter	Current step or error number of the igniter.
Re-Ign.	Re-ignition time (parameter seq. no. 10).
Opr.-Tmr.	Cumulated igniter operating time, expressed in hours.
Ign_Rdy	Indicates that the igniter is ready for ignition. For a re-ignition, the indicator indicates that the igniter can be ignited again by pressing the start push-button.
Interlock	Indicates that a severe switch-off (lock-out) has occurred in the igniter area. Refer to the error number for details on the lock-out (→ Chapter 8.2.3.2, page 38).

Table 30: Igniter Indicators

8.2.1.3 Main Burner

The main burner includes the following indicators:

Indicators	Description
Burner	Current step or error number of the main burner.
Re-Ign.	Re-ignition time (parameter seq. no. 17).
Opr.-Tmr.	Cumulated main burner operating time, expressed in hours.
Ign_Rdy	Indicates that the main burner is ready for ignition. For a re-ignition, the indicator indicates that the main burner can be ignited again by pressing the start push-button.
Interlock	Indicates that a severe switch-off (lock-out) has occurred in the igniter area. Refer to the error number for details on the lock-out (→ Chapter 8.2.3.3, page 39).

Table 31: Main Burner Indicators

8.2.2 HIMatrix CSG 01 Indicators

The HIMatrix CSG 01 restart is delayed due to the lock-out of the main burner. The current delay value is shown in the **Re-start delay** indicator.

The operating times of the igniter and main burner are displayed with the indicators **Opr.-Tmr.** The display value changes every 2 seconds between the number of operating years and the operating hours.

The number of parameter changes is displayed by the indicator **Mod.Count**.

If an error is present, the control field **Diagnostic** changes from green to red. To call the diagnostic panel, use the operating field **Diagnostic**.

The following tables contain the operating and diagnostic indicators of the function macros.

8.2.3 Step Number/Error Number

To increase the reliability of the HIMatrix CSG 01, function blocks tested and approved by the TÜV were used for programming.

The following macros have been used:

- Pre-purge macro X_BMS_Purge
- Igniter macro X_BMS_Gasigniter
- Main burner macro X_BMS_Gasburner

The integrated operating and error information of these function macros is available in the operating graphs.

Further information on the function macros is provided in section Function (→ Chapter 3.1, page 14).

8.2.3.1 Pre-Purging

Operation Indicators

Step number	Description
Step_No 0	Initial step
Step_No 3	No combustion air error message test
Step_No 4	No combustion air error message test
Step_No 6	Pre-purging without recirculation
Step_No 9	Preparing for ignition
Step_No 10	Ignition release
Step_No 11	Burner in operation
Step_No 12	Burner not in operation
Step_No 16	Monitor acknowledgments
Step_No 17	Wait for restart

Table 32: Operation Indicators for Pre-Purging

Error Indicators

Error number	Description
Step_No 256	Initial interlock "Intlck" not fulfilled or burner error "Brn_Err" present
Step_No 512	Re-start of HIMatrix CSG 01 (after voltage return)
Step_No 1024	Flame fault "Flm_On" during pre-purging phases
Step_No 8192	Purge conditions "Prge_On" fault during pre-purging, or fault in flue gas system "Flue_On"

Table 33: Pre-Purge Error Indicators

For details on the sequence-dependent error indicators, refer to the detailed chart (→ Applicable document: HIMatrix CSG 01 Sequence CSG HI 800 625 E).

8.2.3.2 Igniter

Operation Indicators

Step number	Description
Step_No 0	Initial step
Step_No 1	Position test of SSV1 and SSV2
Step_No 2	Flame simulation test
Step_No 4	Ignition position
Step_No 5	1st ignition, triggering of ignition system
Step_No 6	1st ignition, triggering of SSV1 and SSV2
Step_No 7	1st ignition aborted, re-ignition delay time
Step_No 8	2nd ignition, ready for re-ignition
Step_No 9	2nd ignition, triggering of ignition system
Step_No 10	2nd ignition, triggering of SSV1 and SSV2
Step_No 11	2nd ignition aborted, re-ignition delay time
Step_No 12	3rd ignition, ready for re-ignition
Step_No 13	3rd ignition, triggering of ignition system
Step_No 14	3rd ignition, triggering of SSV1 and SSV2
Step_No 15	Igniter in operation
Step_No 16	Main burner in operation
Step_No 17	Igniter stopped
Step_No 18	Wait for restart

Table 34: Igniter Operation Indicators

Error Indicators

Error number	Description
Step_No 256	Initial interlock "Intlck" not fulfilled or burner error "Brn_Err" present or the trials for ignition set in "Trl_f_Ign" are ≤ 0 or > 3 .
Step_No 512	Re-start of HIMatrix CSG 01 (after voltage return)
Step_No 1024	Loss of flame in burner operation
Step_No 4096	Igniter sequence was manually aborted

Table 35: Igniter Error Indicators

For details on the sequence-dependent error indicators, refer to the detailed chart (→ Applicable document: HIMatrix CSG 01 Sequence CSG HI 800 625 E).

8.2.3.3 Main Burner

Operation Indicators

Step number	Operating details
Step_No 0	Initial step
Step_No 1	Position test of SSV1 and SSV2
Step_No 2	Position test of pressure relief valve
Step_No 3	Flame simulation test
Step_No 4	Ignition load signal from control valves
Step_No 5	1st phase of tightness test (de-pressurized)
Step_No 6	1st phase of tightness test (de-pressurized)
Step_No 7	1st phase of tightness test (de-pressurized)
Step_No 8	1st phase of tightness test (de-pressurized)
Step_No 9	2nd phase of tightness test (pressurized)
Step_No 10	2nd phase of tightness test (pressurized)
Step_No 11	2nd phase of tightness test (pressurized)
Step_No 12	2nd phase of tightness test (pressurized)
Step_No 13	2nd phase of tightness test (pressurized)
Step_No 14	2nd phase of tightness test (pressurized)
Step_No 15	2nd phase of tightness test (pressurized)
Step_No 16	1st ignition, triggering of SSV1 and SSV2 for 1st ignition
Step_No 17	1st ignition aborted, re-ignition delay time
Step_No 18	2nd ignition, ready for re-ignition
Step_No 19	2nd ignition, triggering of SSV1 and SSV2 for 2nd ignition
Step_No 20	2nd ignition aborted, re-ignition delay time
Step_No 21	3rd ignition, ready for re-ignition
Step_No 22	3rd ignition, triggering of SSV1 and SSV2 for 3rd ignition
Step_No 23	Flame available
Step_No 24	Gas burner in operation
Step_No 25	Gas burner with fuel air ratio monitoring in operation
Step_No 26	Gas burner with load control in operation
Step_No 27	Gas burner with load reduction in operation
Step_No 28	Gas burner not in operation
Step_No 29	3rd phase of tightness test (pressurized)
Step_No 30	3rd phase of tightness test (pressurized)
Step_No 31	3rd phase of tightness test (pressurized)
Step_No 32	3rd phase of tightness test (pressurized)
Step_No 33	Wait for restart

Table 36: Main Burner Operation Indicators

Error Indicators

Error number	Error information
Step_No 256	Initial interlock "Intlck" not fulfilled, or "Trl_f_Ign" is < 1 or > 3
Step_No 512	Re-start of HIMatrix CSG 01 (after voltage return)
Step_No 1024	Loss of flame in burner operation
Step_No 2048	Fuel air ratio disturbed
Step_No 4096	Burner sequence manually aborted

Table 37: Main Burner Error Indicators

For details on the sequence-dependent error indicators, refer to the detailed chart (→ Applicable document: HIMatrix CSG 01 Sequence CSG HI 800 625 E).

8.3 Diagnostics

The controller separately monitors the signals within the burner (→ Chapter 7.6, page 32) to localize the first switching off signals. The operating graph shows the first switch-off signal in red.

The graph for the diagnostic display could look like this:



Figure 5: Example of Diagnostic Panel

The cause of the lock-out can be recognized through the color of a signal field changing from green to red. The signal behavior corresponds to a first-up value message, i.e., the first fault that occurred is displayed in red, all subsequent faults are suppressed.

The error description is as follows:

Error	Description
01	HIMatrix CSG 01 parameter error
02	HIMatrix CSG 01 system fault (CPU and/or I/O area)
03	Main interlock engaged (input 1)
04	Combustion air pressure < MIN (input 4)
05	Igniter flame lost (input 6)
06	Main burner flame lost (input 9)
07	Fuel air ratio fault (input 16)
08	Pressure relief valve open in operation (input 15)
09	Not used
10	Not used
11	Not used
12	Not used
13	Not used
14	Not used
15	Not used
16	Start conditions for main burner lost after pre-purging

Table 38: Error Description

The operating field **Test** can be used to test the first-up value indicators and the proper operation of the first-up value detection in the HIMatrix CSG 01.

8.4 Changing the Parameters

The parameters can be changed after the password has been activated. The parameters that may be changed are specified in section Process Adjustments (→ Chapter 5.1, page 24).

The following system state is required for activating the password:

- The fuel valves of the igniter are closed.
- The fuel valves of the main burner are closed.
- No lock-out is present (step number > 128). Exception: step number 512 after re-start of the HIMatrix CSG 01.

For further details, refer to section Activating the password (→ Chapter 8.4.2.1, page 44).

8.4.1 Changing the Parameters via the Control Panel

The graph for changing the parameters could look like this:

3 CSG, re-start delay time

Password time : 125_{sec}

Enter new value : 240.0_{sec}

Controller value : 240.0_{sec}

Checked value : 240.0_{sec} Ackn 1

Process value : 0.0_{sec} Ackn 2

Actual value : 180.0_{sec}

Return | <== | ==>

Figure 6: Example of Control Panel for Changing Parameters

The control panel for changing the parameters contains the following elements:

Indicators	Operating field	Field for entering values	Designation
X			Password time
X			Color indicator Password time
X		X	Enter new value
X			Color indicator Enter new value
X			Controller value
X			Checked value
X			Process value
X			Actual value
	X		Ackn 1
	X		Ackn 2
	X		Return
	X		Backward
	X		Forward

Table 39: HIMatrix CSG 01 Control Panel, Re-Start Delay Time

The **Password time** indicator displays how much time is left to change the parameters. The color indicator **Password time** is lit green until the password release time has expired. **Actual value** displays the value of the current parameter.

Change the parameters as follows:

1. Enter the new value in the field **Enter new value**.
☒ **Controller value** must immediately display the value shown in **Enter new value**.

The HIMatrix CSG 01 has read in the new value if it is immediately displayed in **Controller value**. If the entry is incorrect, the entered value is ignored and the color indicator behind the time of **Enter new value** is lit in red.

2. Press the push-button **Ackn 1**.
☒ The new value is displayed in **Checked value**.
3. Check the value in **Checked value**.
4. Press the push-button **Ackn 2**.
☒ The new value is displayed in **Process Value**.
 ► The HIMatrix CSG 01 then starts operating with the new value.

8.4.2 Password

This chapter describes how to:

- Activate the password.
- Change the password.
- Reset the password to the factory settings.

i

Prior to starting up the HIMatrix CSG 01, users must change the default password "11111" to prevent unauthorized changes to the safety parameters.

The graph for entering the password could look like this:

The image shows a control panel interface for entering a password. It has a title bar with '1' and 'CSG password'. Below the title bar, there are four rows of text: 'New value :', 'Checked value :', 'Process value :', and 'Password release :'. The 'New value' field contains '*****' and a green indicator light. The 'Checked value' field contains '15879'. The 'Process value' field contains '0'. The 'Password release' field contains '300sec'. To the right of the 'Process value' and 'Password release' fields are buttons labeled 'Ackn 1' and 'Ackn 2' respectively. At the bottom of the panel are two buttons: 'Return' and 'Change'.

1 CSG password	
New value :	***** ■
Checked value :	15879
Process value :	0 Ackn 1
Password release :	300sec Ackn 2
Return Change	

Figure 7: Example of Control Panel for Entering the Password

8.4.2.1 Activating the Password

To activate the releases time of 300 seconds to change the parameters, the current password must be entered and confirmed.

1. Enter the password in the field **New value**.
If the entry is incorrect, the password in **New value** is ignored and the indicator for **New value** is lit in red.
2. Press the push-button **Ackn 1**.
☒ The password is displayed in **Checked value**.
3. Press the push-button **Ackn 2**.
☒ If the test was successful, the password is briefly displayed in **Process value**.
☒ The release time (300 s) allowing the user to change the process parameter starts. The remaining time is displayed by the indicator **Password release**.
► The release for changing the parameters is activated.

8.4.2.2 Modifying the Parameters for Changing the Password in the Control Panel

The parameters are changed in 2 phases:

1. Activation of the release for parameter changes. The time limit for changing the parameters is 300 seconds.
2. Changing the parameters within the release time via the control panel
(→ Chapter 8.4.1, page 42).



During the release time for changing the parameters, the sequence chains cannot be started. The burner start is blocked.

If the entry field **New value** cannot be configured as a write/read field, the entered password must be overwritten by a wrong password, e.g., 0. The proceeding described above can only be repeated after the correct password has been entered again (this procedure must be run using a HIMA standard panel).

If the entry field **New value** can be configured as a write/read fields, e.g., when a DCS or a SCADA station is used, the communication variable CSG_COM_DO_38A could be used for overwriting the password variable CSG_COM_DI_38.

8.4.2.3 Changing the Password

To activate the release for changing the password, the following requirements must be met:

- Activate input 20 **Error reset** for 5 seconds.
- The following signals are present:
 - Deactivate input 1 **Main interlock fulfilled**.
 - Activate input 17 **Start igniter and main burner**.
 - Deactivate input 18 **Do not stop igniter**.
 - Deactivate input 19 **Do not stop main burner**.
 - Activate the password (→ Chapter 8.4.2.1, page 44)



The password must be between 10000 and 65535.

1. Click the **Change** button in the graph for entering the password.
☒ The dialog box for changing the password appears.
2. Perform the parameter change (→ Chapter 8.4.1, page 42).
► From now on, the HIMatrix CSG 01 uses the new password.

8.4.2.4 Resetting the Password to the Factory Settings

To activate the release for resetting the password of HIMatrix CSG 01, the following requirements must be met:

- Activate input 20 **Error reset** for 5 seconds.
- The following signals are present:
 - Deactivate input 1 **Main interlock fulfilled**.
 - Activate input 17 **Start igniter and main burner**.
 - Deactivate input 18 **Do not stop igniter**.
 - Deactivate input 19 **Do not stop main burner**.
 - Activate the password (→ Chapter 8.4.2.1, page 44).

To reset the password

1. Activate 3 times the input 2 **Start enable fulfilled**.

☑ The default password, "11111", is set.

The previous process values are overwritten and lost.

The password reset is only performed via the signals on the HIMatrix CSG 01 hardware.

9 Communications Information

A Modbus TCP master can send binary control commands to the HiMatrix CSG 01 via one of four RJ-45 interfaces and receive feedbacks from the HiMatrix CSG 01.

The tables in this chapter specify the Modbus TCP offset addresses for the IP address 192.168.0.117 with their specific bit assignments.

For further digital details, refer to the annexed communication list (→ Applicable document: HiMatrix CSG 01 COM list HI 800 600 E).

To achieve the greatest possible flexibility when using different control panels, all communication variables (addresses) are defined in "unsigned WORD" data format. This applies to reading and writing communication variables.

To obtain a resolution of one or two decimal places for process and process time values (1/10 second, 1/10 process value, 1/100 process value), the range of values for the communication variables is limited. In the HiMatrix CSG 01, the read value is internally divided by 10 for one decimal place and by 100 for two decimal places. The value is further processed with the data format REAL (FLOAT).

9.1 Controller Commands from Control Panel (HiMatrix CSG 01 Reading)

9.1.1 Modbus TCP Register Address 0

Offset address	Function	Logic signal
Register.Bit 1.0	Acknowledgment 1, password entry	1/0
Register.Bit 0.1	Acknowledgment 2, password entry	1/0
Register.Bit 0.2	Acknowledgment 1, HiMatrix CSG 01 configuration	1/0
Register.Bit 0.3	Acknowledgment 2, HiMatrix CSG 01 configuration	1/0
Register.Bit 0.4	Acknowledgment 1, restart delay time	1/0
Register.Bit 0.5	Acknowledgment 2, restart delay time	1/0
Register.Bit 0.6	Acknowledgment 1, pre-purge time	1/0
Register.Bit 0.7	Acknowledgment 2, pre-purge time	1/0
Register.Bit 0.8	Acknowledgment 1, ready for ignition time	1/0
Register.Bit 0.9	Acknowledgment 2, ready for ignition time	1/0
Register.Bit 0.10	Acknowledgment 1, igniter pre-ignition time	1/0
Register.Bit 0.11	Acknowledgment 2, igniter pre-ignition time	1/0
Register.Bit 0.12	Acknowledgment 1, igniter trials for ignition	1/0
Register.Bit 0.13	Acknowledgment 2, igniter trials for ignition	1/0
Register.Bit 0.14	Acknowledgment 1, igniter safety time	1/0
Register.Bit 0.15	Acknowledgment 2, igniter safety time	1/0

Table 40: Modbus TCP Register Address 0

- The behavior described in the Function column corresponds to signal 1 (high level).
- The register is organized as WORD with 16 bits.

9.1.2 Modbus TCP Register Address 1

Offset address	Function	Logic signal
Register.Bit 1.0	Acknowledgment 1, igniter re-ignition delay time	1/0
Register.Bit 1.1	Acknowledgment 2, igniter re-ignition delay time	1/0
Register.Bit 1.2	Acnknowledgment 1, igniter re-ignition time	1/0
Register.Bit 1.3	Acnknowledgment 2, igniter re-ignition time	1/0
Register.Bit 1.4	Acknowledgment 1, igniter and main burner overlapping time	1/0
Register.Bit 1.5	Acknowledgment 2, igniter and main burner overlapping time	1/0
Register.Bit 1.6	Acknowledgment 1, main burner tightness test time	1/0
Register.Bit 1.7	Acknowledgment 2, main burner tightness test time	1/0
Register.Bit 1.8	Acknowledgment 1, main burner de-pressurizing time	1/0
Register.Bit 1.9	Acknowledgment 2, main burner de-pressurizing time	1/0
Register.Bit 1.10	Acknowledgment 1, main burner trials for ignition	1/0
Register.Bit 1.11	Acknowledgment 2, main burner trials for ignition	1/0
Register.Bit 1.12	Acknowledgment 1, main burner safety time	1/0
Register.Bit 1.13	Acknowledgment 2, main burner safety time	1/0
Register.Bit 1.14	Acknowledgment 1, main burner, re-ignition delay time	1/0
Register.Bit 1.15	Acknowledgment 2, main burner, re-ignition delay time	1/0

Table 41: Modbus TCP Register Address 1

- The behavior described in the Function column corresponds to signal 1 (high level).
- The register is organized as WORD with 16 bits.

9.1.3 Modbus TCP Register Address 2

Offset address	Function	Logic signal
Register.Bit 2.0	Acknowledgment 1, main burner, re-ignition time	1/0
Register.Bit 2.1	Acknowledgment 2, main burner, re-ignition time	1/0
Register.Bit 2.2	Acknowledgment 1, fuel air ratio delay time	1/0
Register.Bit 2.3	Acknowledgment 2, fuel air ratio delay time	1/0
Register.Bit 2.4	Acknowledgment 1, password change	1/0
Register.Bit 2.5	Acknowledgment 2, password change	1/0
Register.Bit 2.6	Without function	1/0
Register.Bit 2.7	Without function	1/0
Register.Bit 2.8	Without function	1/0
Register.Bit 2.9	Without function	1/0
Register.Bit 2.10	Without function	1/0
Register.Bit 2.11	Without function	1/0
Register.Bit 2.12	Without function	1/0
Register.Bit 2.13	Without function	1/0
Register.Bit 2.14	Without function	1/0
Register.Bit 2.15	Without function	1/0

Table 42: Modbus TCP Register Address 2

- The behavior described in the Function column corresponds to signal 1 (high level).
- The register is organized as WORD with 16 bits.

9.1.4 Modbus TCP Register Address 3

Offset address	Function	Logic signal
Register.Bit 3.0	Without function	1/0
Register.Bit 3.1	Without function	1/0
Register.Bit 3.2	Without function	1/0
Register.Bit 3.3	Without function	1/0
Register.Bit 3.4	Without function	1/0
Register.Bit 3.5	Without function	1/0
Register.Bit 3.6	Without function	1/0
Register.Bit 3.7	Without function	1/0
Register.Bit 3.8	Without function	1/0
Register.Bit 3.9	Without function	1/0
Register.Bit 3.10	Without function	1/0
Register.Bit 3.11	Without function	1/0
Register.Bit 3.12	Without function	1/0
Register.Bit 3.13	Without function	1/0
Register.Bit 3.14	Without function	1/0
Register.Bit 3.15	Without function	1/0

Table 43: Modbus TCP Register Address 3

- The behavior described in the Function column corresponds to signal 1 (high level).
- The register is organized as WORD with 16 bits.

9.1.5 Modbus TCP Register Address 4

Offset address	Function	Logic signal
Register.Bit 4.0	Without function	1/0
Register.Bit 4.1	Without function	1/0
Register.Bit 4.2	Without function	1/0
Register.Bit 4.3	Without function	1/0
Register.Bit 4.4	Without function	1/0
Register.Bit 4.5	Without function	1/0
Register.Bit 4.6	Without function	1/0
Register.Bit 4.7	Without function	1/0
Register.Bit 4.8	Without function	1/0
Register.Bit 4.9	Without function	1/0
Register.Bit 4.10	Without function	1/0
Register.Bit 4.11	Without function	1/0
Register.Bit 4.12	Without function	1/0
Register.Bit 4.13	Without function	1/0
Register.Bit 4.14	Adoption of the parameter substitute values	1/0
Register.Bit 4.15	Functional test of first-up alarming	1/0

Table 44: Modbus TCP Register Address 4

- The behavior described in the Function column corresponds to signal 1 (high level).
- The register is organized as WORD with 16 bits.

9.2 Control Command from Higher Automation Level

9.2.1 Modbus TCP Register Address 40

Offset address	Function	Logic signal
Register.Bit 40.0	Start igniter and main burner	1/0
Register.Bit 40.1	Stop igniter	1/0
Register.Bit 40.2	Stop burner	1/0
Register.Bit 40.3	Error reset	1/0
Register.Bit 40.4	Without function	1/0
Register.Bit 40.5	Without function	1/0
Register.Bit 40.6	Without function	1/0
Register.Bit 40.7	Without function	1/0
Register.Bit 40.8	Without function	1/0
Register.Bit 40.9	Without function	1/0
Register.Bit 40.10	Without function	1/0
Register.Bit 40.11	Without function	1/0
Register.Bit 40.12	Without function	1/0
Register.Bit 40.13	Without function	1/0
Register.Bit 40.14	Without function	1/0
Register.Bit 40.15	Without function	1/0

Table 45: Modbus TCP Register Address 40

- The behavior described in the Function column corresponds to signal 1 (high level).
- The register is organized as WORD with 16 bits.
- Additional and separate release required for these signals in the HIMatrix CSG 01 configuration.

9.3 Feedback to the Control Panel (HIMatrix CSG 01 Writing)

9.3.1 Modbus TCP Register Address 0

Offset address	Function	Logic signal
Register.Bit 1.0	Parameter setting error, password entry	1/0
Register.Bit 0.1	Parameter setting error, HIMatrix CSG 01 configuration	1/0
Register.Bit 0.2	Parameter setting error, restart delay time	1/0
Register.Bit 0.3	Parameter setting error, pre-purge time	1/0
Register.Bit 0.4	Parameter setting error, ready for ignition time	1/0
Register.Bit 0.5	Parameter setting error, igniter pre-ignition time	1/0
Register.Bit 0.6	Parameter setting error, igniter trials for ignition	1/0
Register.Bit 0.7	Parameter setting error, igniter safety time	1/0
Register.Bit 0.8	Parameter setting error, igniter re-ignition delay time	1/0
Register.Bit 0.9	Parameter setting error, igniter re-ignition time	1/0
Register.Bit 0.10	Parameter setting error, igniter and main burner overlapping time	1/0
Register.Bit 0.11	Parameter setting error, main burner tightness test time	1/0
Register.Bit 0.12	Parameter setting error, main burner de-pressurizing time	1/0
Register.Bit 0.13	Parameter setting error, main burner trials for ignition	1/0
Register.Bit 0.14	Parameter setting error, main burner safety time	1/0
Register.Bit 0.15	Parameter setting error, main burner re-ignition delay time	1/0

Table 46: Modbus TCP Register Address 0

- The behavior described in the Function column corresponds to signal 1 (high level).
- The register is organized as WORD with 16 bits.

9.3.2 Modbus TCP Register Address 1

Offset address	Function	Logic signal
Register.Bit 1.0	Parameter setting error, main burner re-ignition time	1/0
Register.Bit 1.1	Parameter setting error, main burner fuel air ratio	1/0
Register.Bit 1.2	Parameter setting error, password	1/0
Register.Bit 1.3	Without function	1/0
Register.Bit 1.4	Without function	1/0
Register.Bit 1.5	Without function	1/0
Register.Bit 1.6	Without function	1/0
Register.Bit 1.7	Without function	1/0
Register.Bit 1.8	Without function	1/0
Register.Bit 1.9	Without function	1/0
Register.Bit 1.10	Without function	1/0
Register.Bit 1.11	Without function	1/0
Register.Bit 1.12	Without function	1/0
Register.Bit 1.13	Without function	1/0
Register.Bit 1.14	Without function	1/0
Register.Bit 1.15	Without function	1/0

Table 47: Modbus TCP Register Address 1

- The behavior described in the Function column corresponds to signal 1 (high level).
- The register is organized as WORD with 16 bits.

9.3.3 Modbus TCP Register Address 2

Offset address	Function	Logic signal
Register.Bit 2.0	Release for parameter changes	1/0
Register.Bit 2.1	Main interlock is available	1/0
Register.Bit 2.2	Burner interlock available	1/0
Register.Bit 2.3	Pre-purge sequence running	1/0
Register.Bit 2.4	Pre-purge sequence fault	1/0
Register.Bit 2.5	Pre-purge conditions available	1/0
Register.Bit 2.6	Ready for ignition after pre-purging	1/0
Register.Bit 2.7	Igniter ready to ignite	1/0
Register.Bit 2.8	Igniter sequence running	1/0
Register.Bit 2.9	Igniter sequence fault	1/0
Register.Bit 2.10	Igniter in operation	1/0
Register.Bit 2.11	Igniter is starting the main burner	1/0
Register.Bit 2.12	Main burner sequence running	1/0
Register.Bit 2.13	Main burner sequence fault	1/0
Register.Bit 2.14	Main burner ready to ignite	1/0
Register.Bit 2.15	Main burner in operation	1/0

Table 48: Modbus TCP Register Address 2

- The behavior described in the Function column corresponds to signal 1 (high level).
- The register is organized as WORD with 16 bits.

9.3.4 Modbus TCP Register Address 3

Offset address	Function	Logic signal
Register.Bit 3.0	Release for load and combined control	1/0
Register.Bit 3.1	Burner not in operation	1/0
Register.Bit 3.2	Release for password change	1/0
Register.Bit 3.3	Release for password entry	1/0
Register.Bit 3.4	Common alarm	1/0
Register.Bit 3.5	Without function	1/0
Register.Bit 3.6	Without function	1/0
Register.Bit 3.7	Without function	1/0
Register.Bit 3.8	Without function	1/0
Register.Bit 3.9	Without function	1/0
Register.Bit 3.10	Without function	1/0
Register.Bit 3.11	Without function	1/0
Register.Bit 3.12	Without function	1/0
Register.Bit 3.13	Without function	1/0
Register.Bit 3.14	Without function	1/0
Register.Bit 3.15	Without function	1/0

Table 49: Modbus TCP Register Address 3

- The behavior described in the Function column corresponds to signal 1 (high level).
- The register is organized as WORD with 16 bits.

9.3.5 Modbus TCP Register Address 4

Offset address	Function	Logic signal
Register.Bit 4.0	First-up alarm, parameter setting error	1/0
Register.Bit 4.1	First-up alarm, HIMatrix CSG 01 system fault	1/0
Register.Bit 4.2	First-up alarm, main interlock engaged	1/0
Register.Bit 4.3	First-up alarm, air pressure < MIN	1/0
Register.Bit 4.4	First-up alarm, igniter flame disturbed	1/0
Register.Bit 4.5	First-up alarm, main burner flame disturbed	1/0
Register.Bit 4.6	First-up alarm, fuel air ratio disturbed	1/0
Register.Bit 4.7	First-up alarm, pressure relief valve disturbed	1/0
Register.Bit 4.8	Without function	1/0
Register.Bit 4.9	Without function	1/0
Register.Bit 4.10	Without function	1/0
Register.Bit 4.11	Without function	1/0
Register.Bit 4.12	Without function	1/0
Register.Bit 4.13	Without function	1/0
Register.Bit 4.14	Without function	1/0
Register.Bit 4.15	First-up alarm, no start pre-conditions after pre-purging	1/0

Table 50: Modbus TCP Register Address 4

- The behavior described in the Function column corresponds to signal 1 (high level).
- The register is organized as WORD with 16 bits.

9.4 Feedbacks to the Higher Automation Level (HIMatrix CSG 01 Writing)

9.4.1 Modbus TCP Register Address 147

Offset address	Function	Logic signal
Register.Bit 147.0	DI 1, main interlock fulfilled	1/0
Register.Bit 147.1	DI 2, start enable fulfilled	1/0
Register.Bit 147.2	DI 3, pre-purging/no pre-purging	1/0
Register.Bit 147.3	DI 4, combustion air pressure > MIN	1/0
Register.Bit 147.4	DI 5, pre-purge conditions fulfilled	1/0
Register.Bit 147.5	DI 6, igniter flame available	1/0
Register.Bit 147.6	DI 7, igniter SSV1 closed	1/0
Register.Bit 147.7	DI 8, igniter SSV2 closed	1/0
Register.Bit 147.8	DI 9, main burner flame available	1/0
Register.Bit 147.9	DI 10, tightness pressure > MAX	1/0
Register.Bit 147.10	DI 11, tightness pressure < MIN	1/0
Register.Bit 147.11	DI 12, main burner ignition power position	1/0
Register.Bit 147.12	DI 13, main burner SSV1 closed	1/0
Register.Bit 147.13	DI 14, main burner SSV2 closed	1/0
Register.Bit 147.14	DI 15, main burner pressure relief valve closed	1/0
Register.Bit 147.15	DI 16, main burner fuel air ratio	1/0

Table 51: Modbus TCP Register Address 147

- The behavior described in the Function column corresponds to signal 1 (high level).
- The register is organized as WORD with 16 bits.

9.4.2 Modbus TCP Register Address 148

Offset address	Function	Logic signal
Register.Bit 148.0	DI 17, push-button Start igniter and main burner	1/0
Register.Bit 148.1	DI 18, push-button Do not stop igniter	1/0
Register.Bit 148.2	DI 19, push-button Do not stop main burner	1/0
Register.Bit 148.3	DI 20, error reset	1/0
Register.Bit 148.4	Without function	1/0
Register.Bit 148.5	Without function	1/0
Register.Bit 148.6	Without function	1/0
Register.Bit 148.7	Without function	1/0
Register.Bit 148.8	Without function	1/0
Register.Bit 148.9	Without function	1/0
Register.Bit 148.10	Without function	1/0
Register.Bit 148.11	Without function	1/0
Register.Bit 148.12	Without function	1/0
Register.Bit 148.13	Without function	1/0
Register.Bit 148.14	Without function	1/0
Register.Bit 148.15	Without function	1/0

Table 52: Modbus TCP Register Address 148

- The behavior described in the Function column corresponds to signal 1 (high level).
- The register is organized as WORD with 16 bits.

9.4.3 Modbus TCP Register Address 149

Offset address	Function	Logic signal
Register.Bit 149.0	DO 1, HIMatrix CSG 01 is ready to operate	1/0
Register.Bit 149.1	DO 2, start pre-purging	1/0
Register.Bit 149.2	DO 3, check of combustion air pressure	1/0
Register.Bit 149.3	DO 4, igniter ignition system/transformer	1/0
Register.Bit 149.4	DO 5, igniter SSV1 and SSV2	1/0
Register.Bit 149.5	DO 6, main burner SSV1	1/0
Register.Bit 149.6	DO 7, main burner SSV2	1/0
Register.Bit 149.7	DO 8, main burner pressure relief valve	1/0
Register.Bit 149.8	Without function	1/0
Register.Bit 149.9	Without function	1/0
Register.Bit 149.10	Without function	1/0
Register.Bit 149.11	Without function	1/0
Register.Bit 149.12	Without function	1/0
Register.Bit 149.13	Without function	1/0
Register.Bit 149.14	Without function	1/0
Register.Bit 149.15	Without function	1/0

Table 53: Modbus TCP Register Address 149

- The behavior described in the Function column corresponds to signal 1 (high level).
- The register is organized as WORD with 16 bits.

9.4.4 Modbus TCP Register Address 150

Offset address	Function	Logic signals
Register.Bit 150.0	Parameter setting error, password entry	1/0
Register.Bit 150.1	Parameter setting error, HIMatrix CSG 01 configuration	1/0
Register.Bit 150.2	Parameter setting error, restart delay time	1/0
Register.Bit 150.3	Parameter setting error, pre-purge time	1/0
Register.Bit 150.4	Parameter setting error, ready for ignition time	1/0
Register.Bit 150.5	Parameter setting error, igniter pre-ignition time	1/0
Register.Bit 150.6	Parameter setting error, igniter trials for ignition	1/0
Register.Bit 150.7	Parameter setting error, igniter safety time	1/0
Register.Bit 150.8	Parameter setting error, igniter re-ignition delay time	1/0
Register.Bit 150.9	Parameter setting error, igniter re-ignition time	1/0
Register.Bit 150.10	Parameter setting error, igniter and main burner overlapping time	1/0
Register.Bit 150.11	Parameter setting error, main burner tightness test time	1/0
Register.Bit 150.12	Parameter setting error, main burner de-pressurizing time	1/0
Register.Bit 150.13	Parameter setting error, main burner trials for ignition	1/0
Register.Bit 150.14	Parameter setting error, main burner safety time	1/0
Register.Bit 150.15	Parameter setting error, main burner re-ignition delay time	1/0

Table 54: Modbus TCP Register Address 150

- The behavior described in the Function column corresponds to signal 1 (high level).
- The register is organized as WORD with 16 bits.

9.4.5 Modbus TCP Register Address 151

Offset address	Function	Logic signal
Register.Bit 151.0	Parameter setting error, main burner re-ignition time	1/0
Register.Bit 151.1	Parameter setting error, main burner fuel air ratio	1/0
Register.Bit 151.2	Parameter setting error, password	1/0
Register.Bit 151.3	Without function	1/0
Register.Bit 151.4	Without function	1/0
Register.Bit 151.5	Without function	1/0
Register.Bit 151.6	Without function	1/0
Register.Bit 151.7	Without function	1/0
Register.Bit 151.8	Without function	1/0
Register.Bit 151.9	Without function	1/0
Register.Bit 151.10	Without function	1/0
Register.Bit 151.11	Without function	1/0
Register.Bit 151.12	Without function	1/0
Register.Bit 151.13	Without function	1/0
Register.Bit 151.14	Without function	1/0
Register.Bit 151.15	Without function	1/0

Table 55: Modbus TCP Register Address 151

- The behavior described in the Function column corresponds to signal 1 (high level).
- The register is organized as WORD with 16 bits.

9.4.6 Modbus TCP Register Address 152

Offset address	Function	Logic signal
Register.Bit 152.0	Release for parameter changes	1/0
Register.Bit 152.1	Main interlock is available	1/0
Register.Bit 152.2	Burner interlock available	1/0
Register.Bit 152.3	Pre-purge sequence running	1/0
Register.Bit 152.4	Pre-purge sequence fault	1/0
Register.Bit 152.5	Pre-purge conditions available	1/0
Register.Bit 152.6	Ready for ignition after pre-purging	1/0
Register.Bit 152.7	Igniter ready to ignite	1/0
Register.Bit 152.8	Igniter sequence running	1/0
Register.Bit 152.9	Igniter sequence fault	1/0
Register.Bit 152.10	Igniter in operation	1/0
Register.Bit 152.11	Igniter is starting the main burner	1/0
Register.Bit 152.12	Main burner sequence running	1/0
Register.Bit 152.13	Main burner sequence fault	1/0
Register.Bit 152.14	Main burner ready to ignite	1/0
Register.Bit 152.15	Main burner in operation	1/0

Table 56: Modbus TCP Register Address 152

- The behavior described in the Function column corresponds to signal 1 (high level).
- The register is organized as WORD with 16 bits.

9.4.7 Modbus TCP Register Address 153

Offset address	Function	Logic signal
Register.Bit 153.0	Release for load and combined control	1/0
Register.Bit 153.1	Burner not in operation	1/0
Register.Bit 153.2	Release for password change	1/0
Register.Bit 153.3	Release for password entry	1/0
Register.Bit 153.4	Common alarm	1/0
Register.Bit 153.5	Without function	1/0
Register.Bit 153.6	Without function	1/0
Register.Bit 153.7	Without function	1/0
Register.Bit 153.8	Without function	1/0
Register.Bit 153.9	Without function	1/0
Register.Bit 153.10	Without function	1/0
Register.Bit 153.11	Without function	1/0
Register.Bit 153.12	Without function	1/0
Register.Bit 153.13	Without function	1/0
Register.Bit 153.14	Without function	1/0
Register.Bit 153.15	Without function	1/0

Table 57: Modbus TCP Register Address 153

- The behavior described in the Function column corresponds to signal 1 (high level).
- The register is organized as WORD with 16 bits.

10 Mounting and Electrical Installation

The safety-related HiMatrix CSG 01 systems can be installed on mounting surfaces, as well as in closed enclosures such as control stations, terminal boxes and control cabinets. They have been developed in compliance with the relevant standards for EMC, climate and environmental requirements.

The specified current standards (→ Chapter 2.6.2, page 11) must be observed.

The protection class of the HiMatrix CSG 01 systems (IP20) can be increased by installing them in an appropriate enclosure in accordance with the requirements. In doing so, appropriate heat dissipation must be ensured (→ Chapter 10.2, page 62).

i

Only personnel with knowledge of ESD protective measures may modify or extend the system wiring.

10.1 Mounting and Removing HiMatrix CSG 01 Systems

i

To ensure efficient cooling, the device must be mounted on a horizontal DIN rail.
A free space of at least 100 mm above and below the device must be maintained.
The device must not be mounted above heating equipment or any heat source.

The location for installing a HiMatrix CSG 01 system must be chosen observing the operating requirements to ensure smooth operation.

The HiMatrix systems are mounted on a 35 mm DIN rail and not directly on a base.

Horizontal (with reference to the label on the front plate) is the mandatory mounting position to ensure sufficient ventilation. Vertical mounting requires additional measures to ensure sufficient ventilation.

The dimensions of the various devices are specified in the product data (→ Chapter 3.3.1, page 20).

The minimum clearances of the devices among one another, to external devices and to the control cabinet enclosure are:

- Vertical clearance: 100 mm
- Horizontal clearance: 20 mm

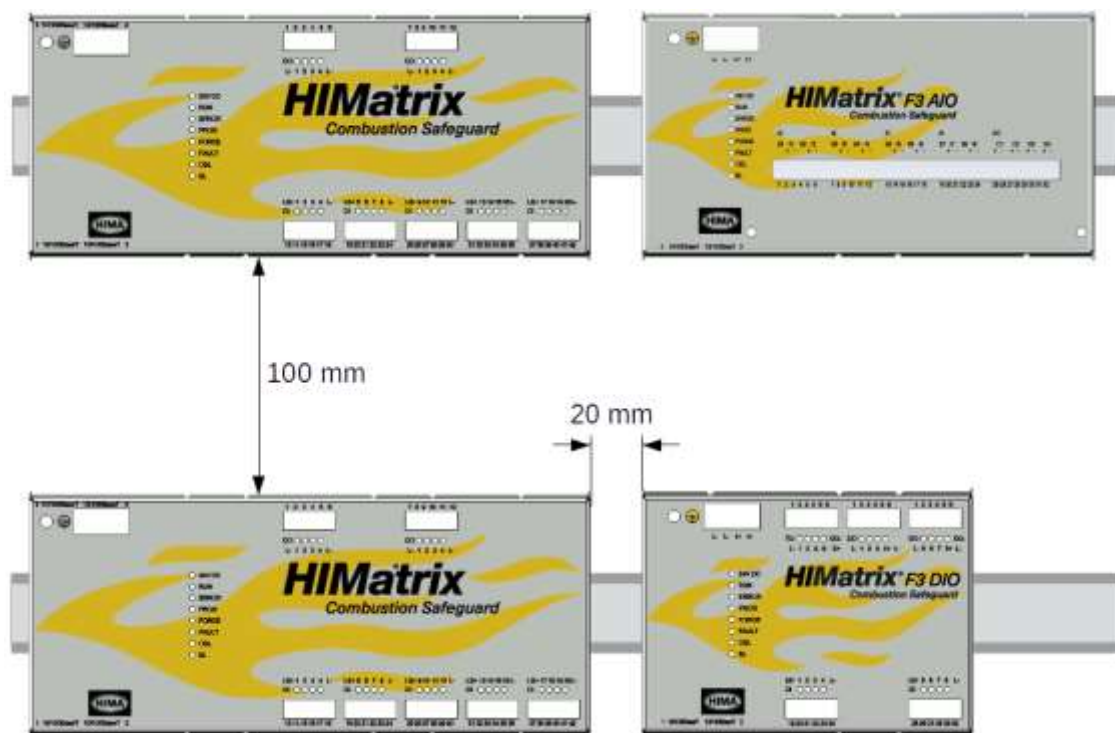


Figure 8: Example of Minimum Clearances for HIMatrix CSG

The mounting space (construction depth) must also be taken into account for attaching the connectors for inputs and outputs, and for communication.

10.1.1 Mounting the Device on the DIN Rail

1. Shift the latch on the rear side of the device downwards, press it against the housing frame and snap it into position.
 2. Attach the guiding rail located on the rear side of the device to the upper edge of the DIN rail.
 3. Press the device against the rail and release the latch again to secure the device to the rail.
- The device is attached to the DIN rail.

10.1.2 Remove the Device from the DIN Rail

1. Insert a flathead screwdriver into the gap between the housing and the latch, using it as a lever to move the latch downward and simultaneously lift the device from the rail.
 - The device is removed from the DIN rail.

10.1.3 Routing Cables

Keep the cable connections from the cable channel to the HIMatrix CSG 01 systems as short as possible. Avoid routing cables across the front plates of the system.

10.1.4 Air Circulation

The ventilation slots in the housing must not be obstructed. For this reason, when mounting cable ducts at the same level, the cable ducts are limited to a height of 40 mm. If the cable ducts are higher, the mounting rails must be placed on spacers:


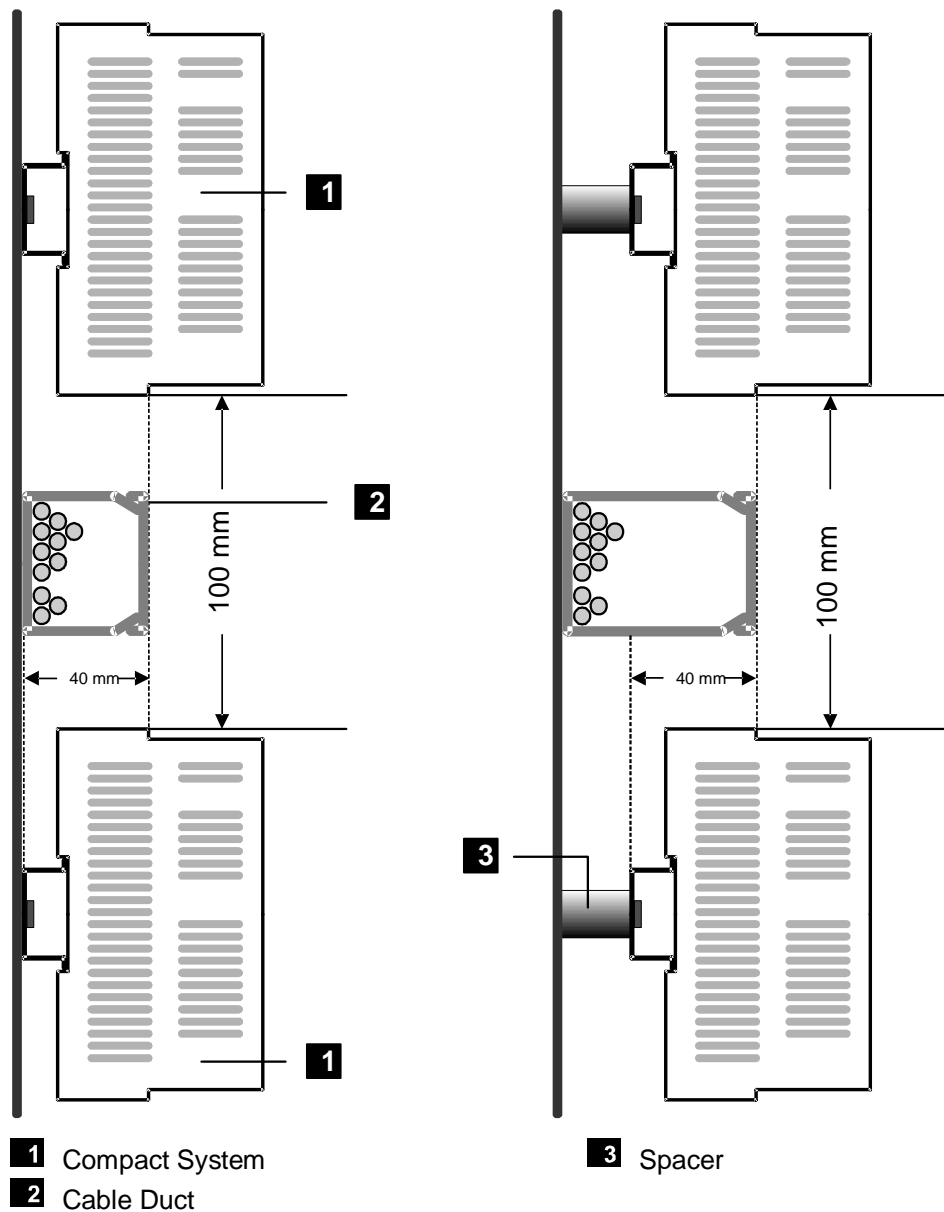


Figure 9: Mounting of HIMatrix CSG 01 Systems with Cable Channels and Spacers

If more than two HIMatrix CSG 01 systems are mounted one on top of the other (even if the minimum vertical clearance of 100 mm is maintained), additional ventilation measures must be implemented to ensure uniform temperature distribution.

The picture below (on the left side) shows the minimum clearances if no spacers are used for the mounting rails:

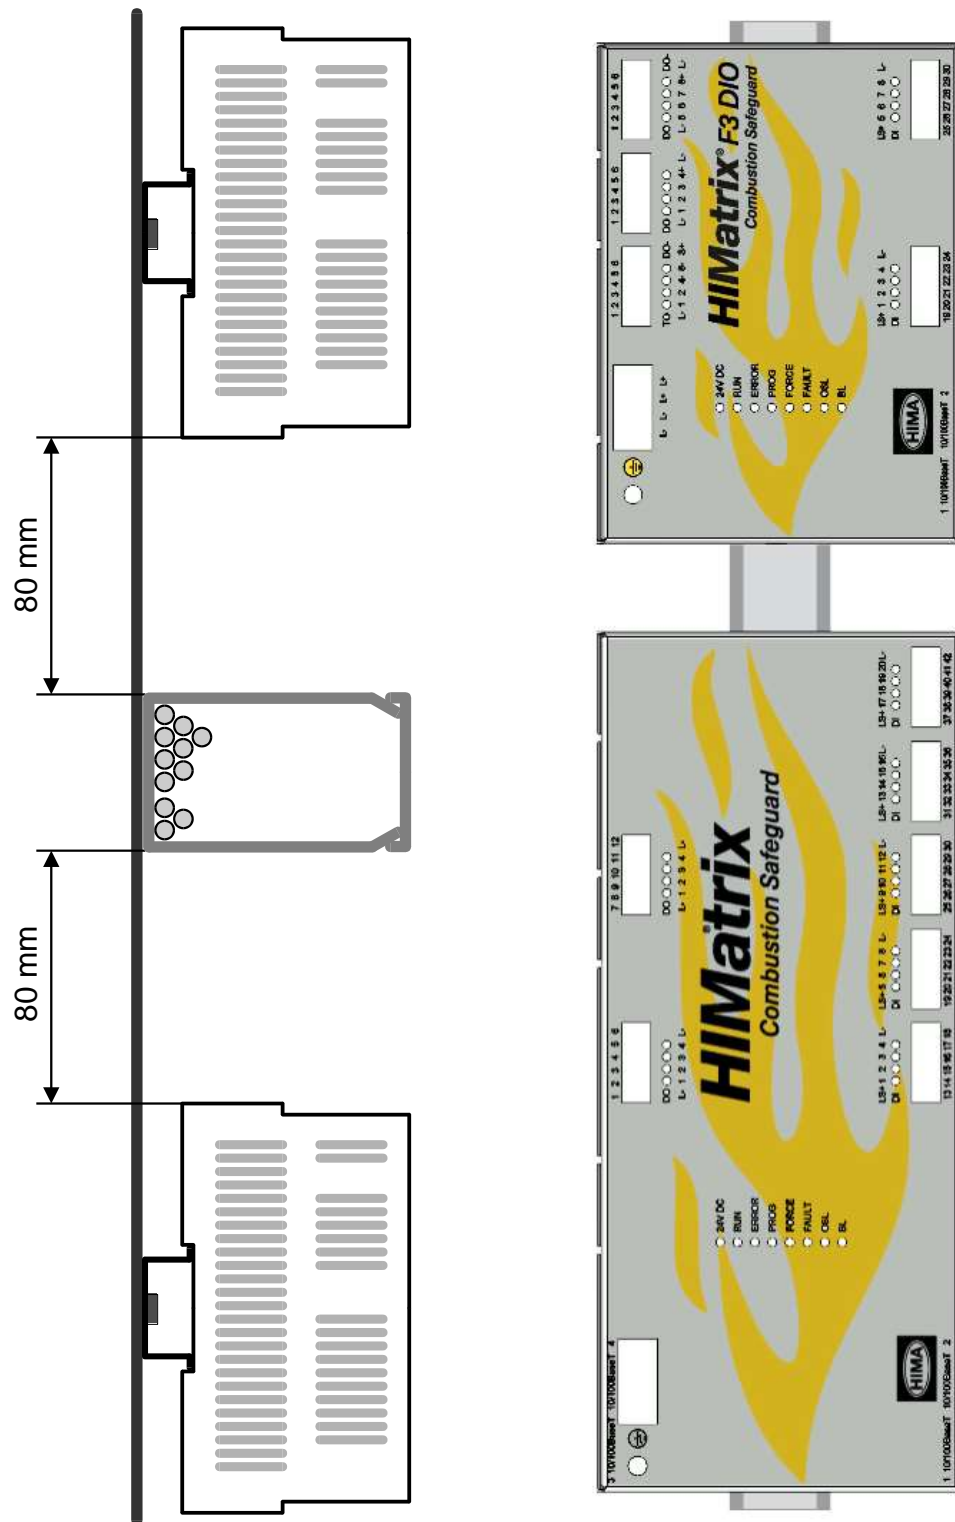

Mounting clearances without spacers

Vertical Mounting of HIMatrix CSG 01 Systems

Figure 10: Mounting without Spacers and Vertical Mounting

i

HIMatrix CSG 01 systems may only be mounted vertically if sufficient ventilation is ensured. With open mounting surfaces, it is not difficult to remain within the maximum operating temperature limits provided that the minimum clearances are maintained and air circulation is not obstructed.

10.1.5 Connecting the Input and Output Circuits

The input and output circuits must be connect using pluggable terminals located on the front plate of the device.

NOTICE



Short-circuits caused by plugging output circuit terminals under load are possible.

Failure to comply with these instructions can damage the terminals.

- **Plug the terminals for output circuits without a load.**
-

10.1.6 Grounding and Shielding

10.1.6.1 Grounding the 24 VDC System Voltage

All HIMatrix CSG 01 systems must be operated with power supply units that comply with SELV (safety extra low voltage) or PELV (protective extra low voltage) requirements. Functional ground is prescribed to improve the electromagnetic compatibility (EMC).

All HIMatrix CSG 01 systems can be operated with grounded reference potential L- or ungrounded.

Ungrounded Operation

The advantage of ungrounded operation is a better EMC behavior.

Some applications have specific requirements for the ungrounded operation of controllers, e.g., in accordance with the VDE 0116-1:2016-03 standard, ground fault monitoring is required for ungrounded operation.

Grounded Operation

Grounding must be implemented in accordance with the standard (VDE 0116-1:2016-03) and must have a separate ground connection through which no power-dependent interference currents may flow. Only grounding of negative pole (L-) is permitted. The positive pole (L+) must not be grounded since a potential ground fault on the sensor wire would bridge the affected sensor.

The negative pole can only be grounded in one place within the system. The negative pole is usually grounded directly behind the power supply unit, e.g., on the busbar. The grounding should be easily accessible and well separable. The grounding resistance must be $\leq 2 \Omega$.

10.1.6.2 Grounding Connectors

All HIMatrix CSG 01 systems have labeled screws for grounding. The wire cross-section for the connection to the screw is 2.5 mm^2 . The ground lines must be as short as possible. The tightening torque of the grounding screw is 1.6 Nm.

Provided that the DIN rail is grounded in accordance with the standards, mounting the HIMatrix CSG 01 systems on the DIN rail already ensures a sufficient ground connection.

These measures ensure a reliable earth ground and compliance with the current EMC requirements for HIMatrix CSG 01 systems.

i

The shield clamp must not be used as a strain relief for the connected cable.

10.1.6.3 EMC Protection

Windows in the enclosure, in which the HiMatrix CSG 01 system is installed, are permitted.

A number of electromagnetic interferences outside the standard limit values require appropriate measures.

i

- For improved EMC, ground the housing.
 - The connection to the next grounding point must be as short as possible to achieve a low grounding resistance.
-

Sensor or actuator wires for analog inputs and outputs used in HiMatrix CSG 01 systems with shrouds must be laid as shielded cables. The shielding must be connected to the HiMatrix CSG 01 system and the sensor and actuator housing and grounded only on the HiMatrix CSG 01 system side to form a Faraday cage.

In all other devices, the shielding must be positioned in the controller housing, terminal box, control cabinet, etc.

If surges on digital inputs cannot be excluded through the burner design, suitable measures must be implemented, e.g., shielded input lines.

10.2 Considerations about Heat

The increased integration level of electronic components causes a corresponding heat loss. This depends on the external load of devices. For this reason, the device installation and ventilation are relevant in connection with the structure.

Lowering the ambient temperature increases the lifetime and the reliability of the electronic components within the systems.

i

Considerations about heat must take **every** device within a cabinet or enclosure into account! Take the environmental conditions into account when mounting the respective devices.

10.2.1 Heat Dissipation

A closed enclosure or a closed cabinet must be designed such that the heat generated inside can be dissipated through its surface.

Choose the mounting type and position such that heat dissipation is ensured.

The power dissipation of the installed equipment is decisive for determining the fan components. Uniform distribution of the heat load and unhindered natural convection are assumed (→ Chapter 10.2.1.3, page 63).

10.2.1.1 Definitions

Size	Description	Unit
P_V	Power dissipation (heat capacity) of the electronic devices within the enclosure	W
A	Effective enclosure surface (→ Chapter 10.2.1.2, page 63)	m ²
W	Enclosure width	m
H	Enclosure height	m
D	Enclosure depth	m
k	Coefficient of heat transfer of the enclosure	W/m ² K
	Example: steel plate	Approx. 5.5 W/m ² K

Table 58: Definitions for Calculating the Power Dissipation

10.2.1.2 Installation Type

The effective enclosure surface area A as a function of the mounting or installation type is determined as follows:








Enclosure installation type in accordance with VDE 0660, Part 5	Calculation of A [m ²]
 Individual enclosure, free-standing on all sides	$A = 1.8 \times H \times (W + D) + 1.4 \times W \times D$
 Individual enclosure for wall mounting	$A = 1.4 \times W \times (H + D) + 1.8 \times H \times D$
 First or last enclosure in a suite, free-standing	$A = 1.4 \times D \times (W + H) + 1.8 \times W \times H$
 First or final enclosure, for wall mounting	$A = 1.4 \times H \times (W + D) + 1.4 \times W \times D$
 Central enclosure, free-standing	$A = 1.8 \times W \times H + 1.4 \times W \times D + H \times D$
 Central enclosure, for wall mounting	$A = 1.4 \times W \times (H + D) + H \times D$
 Central enclosure, for wall mounting, with covered roof surface	$A = 1.4 \times W \times H + 0.7 \times W \times D + H \times D$

Table 59: Calculation of the Enclosure Installation

10.2.1.3 Natural Convection

When natural convection is applied, the lost heat is dissipated through the enclosure walls.
Requirement: The ambient temperature must be lower than the temperature within the enclosure.

The maximum temperature increase $(\Delta T)_{\max}$ of all electronic devices within the enclosure is calculated as follows:

$$(\Delta T)_{\max} = \frac{P_V}{k * A}$$

The power dissipation P_V can be calculated based on the specifications for the electric power rating of the system and its inputs and outputs.

The temperature within an enclosure can also be calculated in accordance with VDE 0660, Part 507 (HD 528 S2).

11 Maintenance

No maintenance measures are required during normal operation.

If the HIMatrix CSG 01 is faulty, replace it with an identical type and configure it in accordance with the requirements.

Interventions in the HIMatrix CSG 01 or repairs may only be carried out by the manufacturer.

11.1 Faults

Fault response of digital inputs:

If the device detects a fault on a digital input, the user program processes a low level in accordance with the de-energize to trip principle.

The device activates the FAULT LED.

Fault response of digital outputs:

If the device detects a faulty signal on a digital output, the affected output is set to the safe (de-energized) state using the safety switches.

If a device fault occurs, all digital outputs are switched off.

In both cases, the device activates the FAULT LED.

If the test harness detects safety-critical faults, the module enters the STOP_INVALID state and will remain in this state. The input signals are no longer processed by the device and the outputs switch to the de-energized, safe state.

11.2 Maintenance Measures

The HIMatrix CSG 01 must be subject to a proof test.

11.2.1 Proof Test (in Accordance with IEC 61508)

The objective of the proof test is to detect dangerous hidden failures in a safety-related system so that, if necessary, a repair can restore the system to a proper state (**as-new condition**).

After a successful proof test, safe operation including the safety functions are ensured again.

The proof test execution depends on the following:

- The system characteristics (EUC = equipment under control).
- The system's risk potential.
- The standards used for operating the system.
- The standards applied by the test authority for the system's approval.

According to IEC 61508 1-7, IEC 61511 1-3, IEC 62061 and VDI/VDE 2180, Sheets 1 to 4, the operator of the safety-related systems is responsible for proof testing. The complete safety functions within the HIMA safety-related system must be checked during the proof test.

For safety-related HIMA systems complying with safety integrity level 3 (SIL 3), the proof test must be performed in intervals of 10 years.

In practice, the proof test interval required for the sensors and actuators (field devices) is shorter (e.g., every 6 or 12 months) than that required for the HIMA controller. Testing the entire safety loop together with a field device automatically includes the test of the HIMA controller. There is therefore no need to additionally proof testing the HIMA controller.

If the proof test of the field devices does not include the HIMA controller, the HIMA controller must be tested at least once every 10 years. This can be achieved by restarting the HIMA controller.

12 Decommissioning

The HIMatrix CSG 01 is decommissioned by removing the supply voltage. Afterwards, the pluggable screw terminals for inputs and outputs and the Ethernet cables can be removed.

13 Transport and Storage

To avoid mechanical damage, the device and components must be transported in the original product packaging and in additional packaging suitable for transportation.

The devices and components must always be stored in their original product packaging. This packaging also provides optimal protection against electrostatic discharge (ESD).

14 Disposal

Industrial customers are responsible for correctly disposing of decommissioned hardware. Upon request, a disposal agreement can be arranged with HIMA.

Devices, components and packaging materials must be delivered in accordance with the applicable local regulations for reuse or must be properly disposed of.



15 Appendix

15.1 List of Abbreviations

Abbreviation	Description
AI	Analog input
AO	Analog output
BMS	Burner management system
COM	Communication system
CSG	Combustion safeguard
DI	Digital input
DO	Digital output
EMC	Electromagnetic compatibility
EN	European standard
ESD	Electrostatic discharge
FARC	Fuel air ratio control
HMI	Human machine interface
IEC	International Electrotechnical Commission
NFPA	National Fire Protection Association (USA)
PELV	Protective extra low voltage
PES	Programmable electronic system
PFD	Probability of dangerous failure on demand, probability of a dangerous failure on demand of a safety function
PFH	Probability of a dangerous failure per hour
RFI	Radio frequency interference
RJ-45	Registered Jack 45: standardized connector
SELV	Safety extra low voltage
SIL	Safety integrity level (IEC 61508/IEC 61511)
SRS	System rack slot, addressing of a module
SSV	Safety shutoff valve

Table 60: Abbreviations

HI 800 742 E (1812)

HIMA Paul Hildebrandt GmbH

Albert-Bassermann-Str. 28
68782 Brühl, Germany

Phone +49 6202 709-0

Fax +49 6202 709-107

E-mail info@hima.com

www.hima.com