


Lesson 10 Tilt Ball Switch

Introduction

In this lesson, you will learn how to use a tilt ball switch in order to detect small angle of inclination.

Hardware Required

- ✓ 1 * RexQualis UNO R3
- ✓ 1 * Breadboard
- ✓ 2 * 220ohm Resistors
- ✓ 1 * Tilt Ball switch
- ✓ 1 * 5MM LED
- ✓ 4 * M-M Jumper Wires

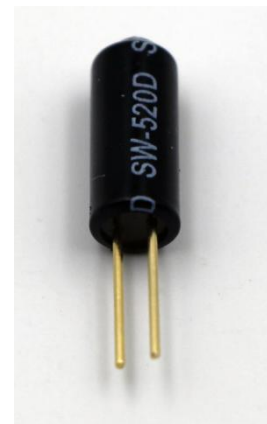

Principle

Tilt Ball switch

Tilt Switch with internal ball that will switch to ON state of approx. 15 degrees tilt. Also great for sensing excessive vibration

Material: Housing and cover: PE heat shrinkable tubing

Ball: Stainless steel

Shape: Round


Color: Black

Contact Rating:12V

Contact Resistance: <10 ohm

Insulation Resistance:>10M ohm

Capacitance:5PF

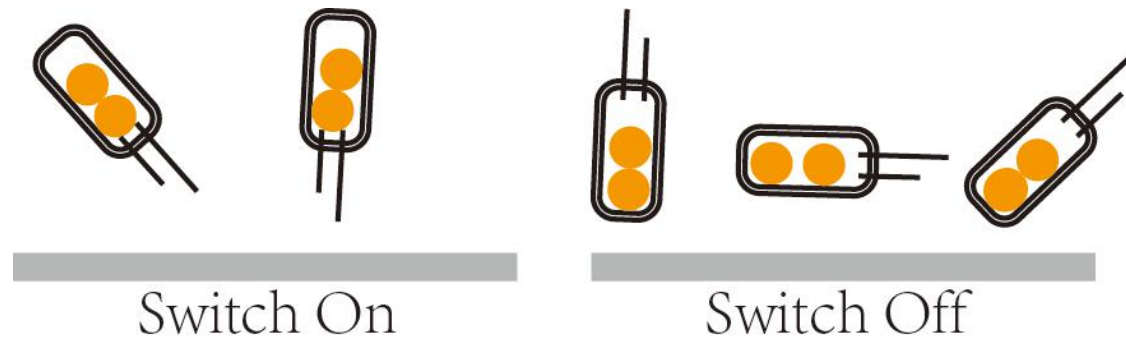

Code interpretation

```
const int LedPin=8; //the led attach to
```

```
void setup()
```

```
{
```

```
    pinMode(LedPin,OUTPUT); //initialize the LedPin as an output
```

```
}
```

```
void loop()
```

```
{
```

```
    int i;
```

```
    while(1)
```

```
    {
```


```
        i=analogRead(5); //Read the simulation 5 voltage value
```

```
        if(i>1000)//If it's greater than 512 (2.5v)
```


```
{  
    digitalWrite(LedPin,HIGH);//turn led on  
}  
else  
{  
    digitalWrite(LedPin,LOW);//turn led off  
}  
}  
}
```

Experimental Procedures


Step 1:Build the circuit

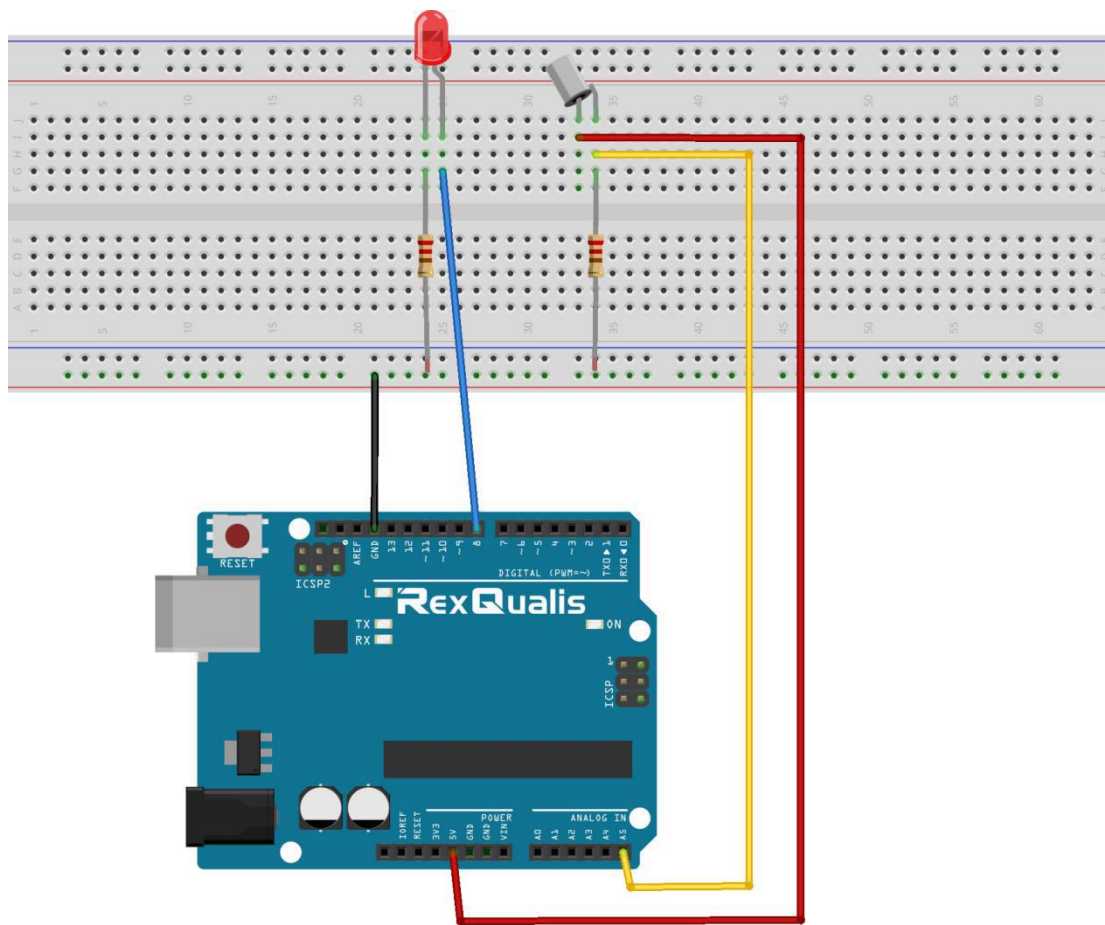

Schematic Diagram

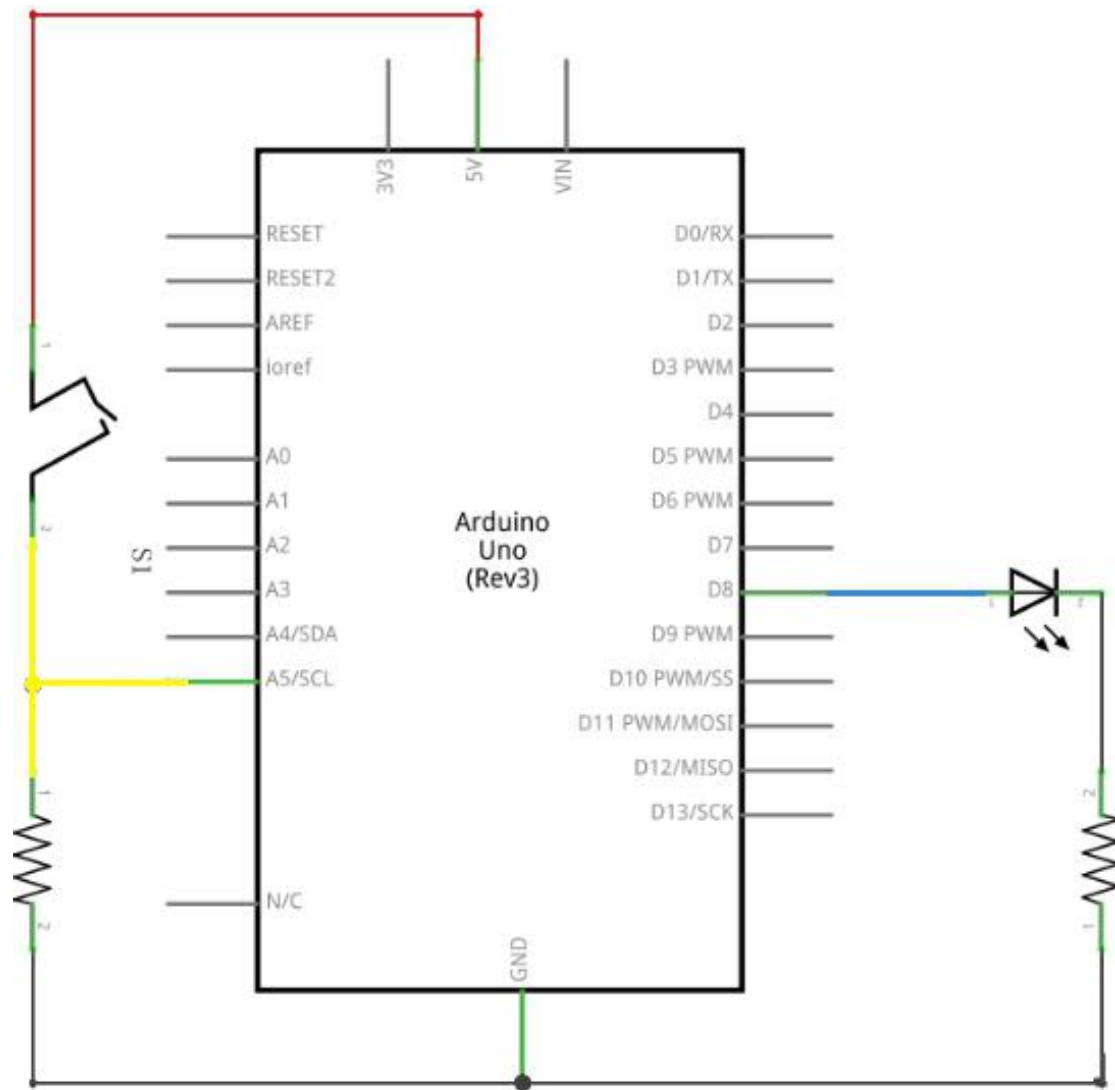


Step 2: Open the code: `Tilt_Ball_Switch_Code`

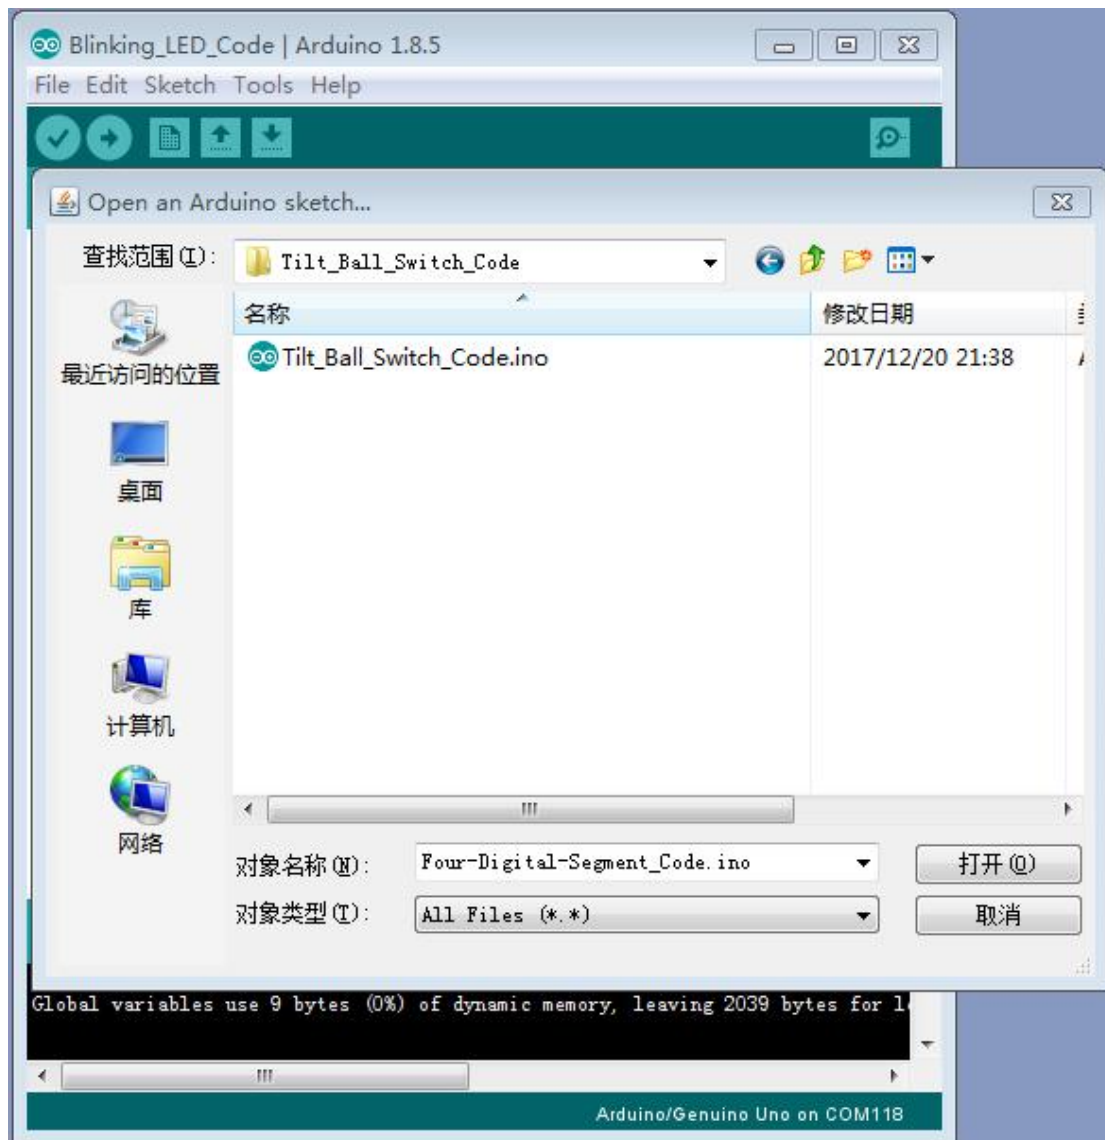

Step 3: Attach Arduino UNO R3 board to your computer via USB cable and check that the 'Board Type' and 'Serial Port' are set correctly.

Step 4: Upload the code to the RexQualis UNO R3 board.

Then, You can control the LED by controlling the balance of the Tilt Ball Switch.

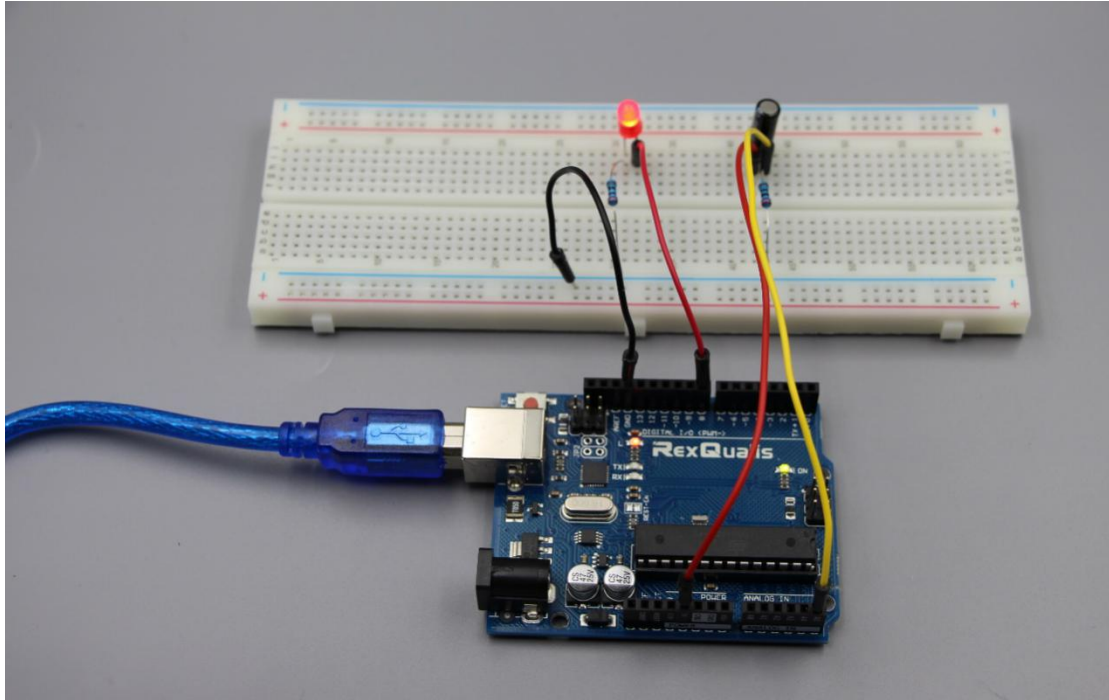

If it isn' t working, make sure you have assembled the circuit correctly, verified and uploaded the code to your board. For how to upload the code and install the library, check Lesson 0 Preface.