

## **EXPERIMENT:8**

### **RELAY INTERFACING WITH DEV BOARD/NODE**

#### **What will you learn from this module:**

Note :- In this Experiment you will learn to interface relay module with nRF Development board.

#### **Requirements:**


- nRF connect desktop software
- nRF Command line tools
- Visual studio code
- USB cable
- nRF 52832 board
- Relay module

#### **Prerequisites:**


- Basic knowledge of C/C++
- Basic knowledge of communication protocol
- Basic project setup

## Setup and Configuration:


- Open VS Code and click on **Open Existing Application** [1] > click on **Relay** [2] > **Open** [3] as shown in the picture below.

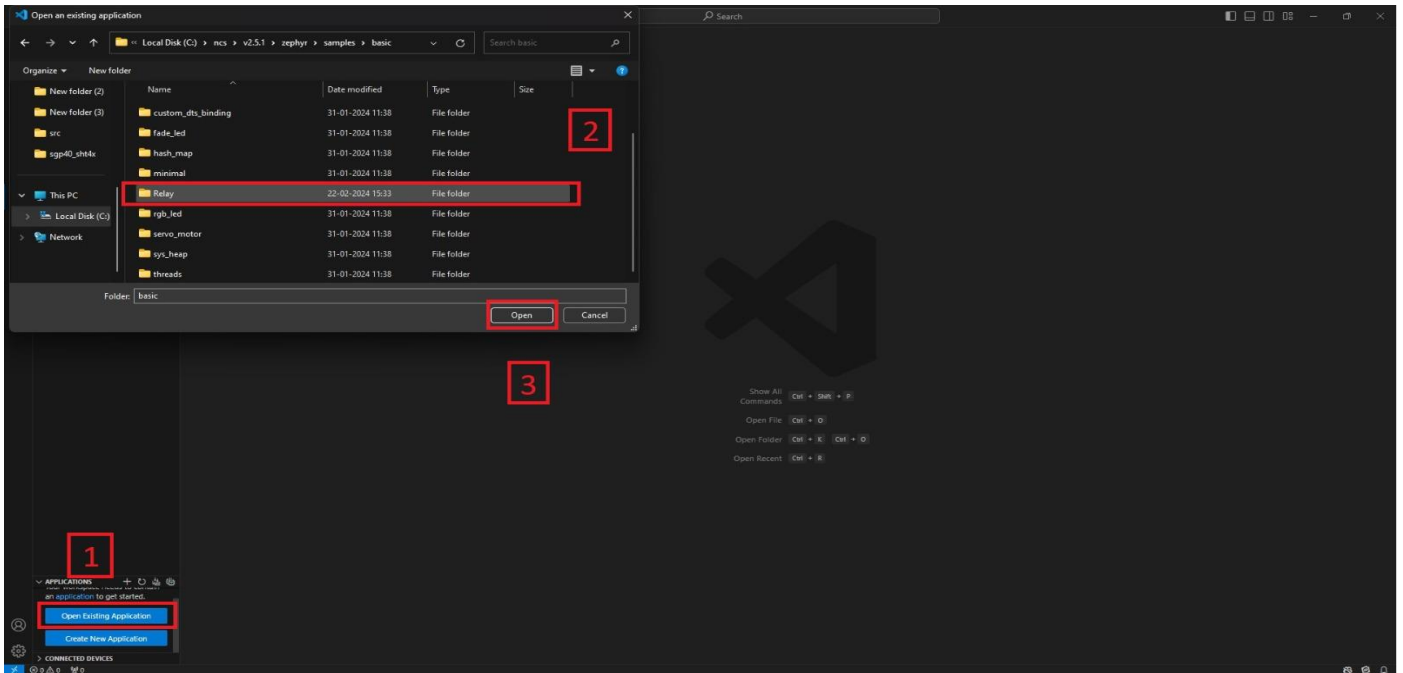


- Click on create new **build configuration** [1] Here you can change the board version, if you are using nRF52832, then select **nrf52dk\_nrf52832** [2] or you can change from there for another version like nRF52833 etc.

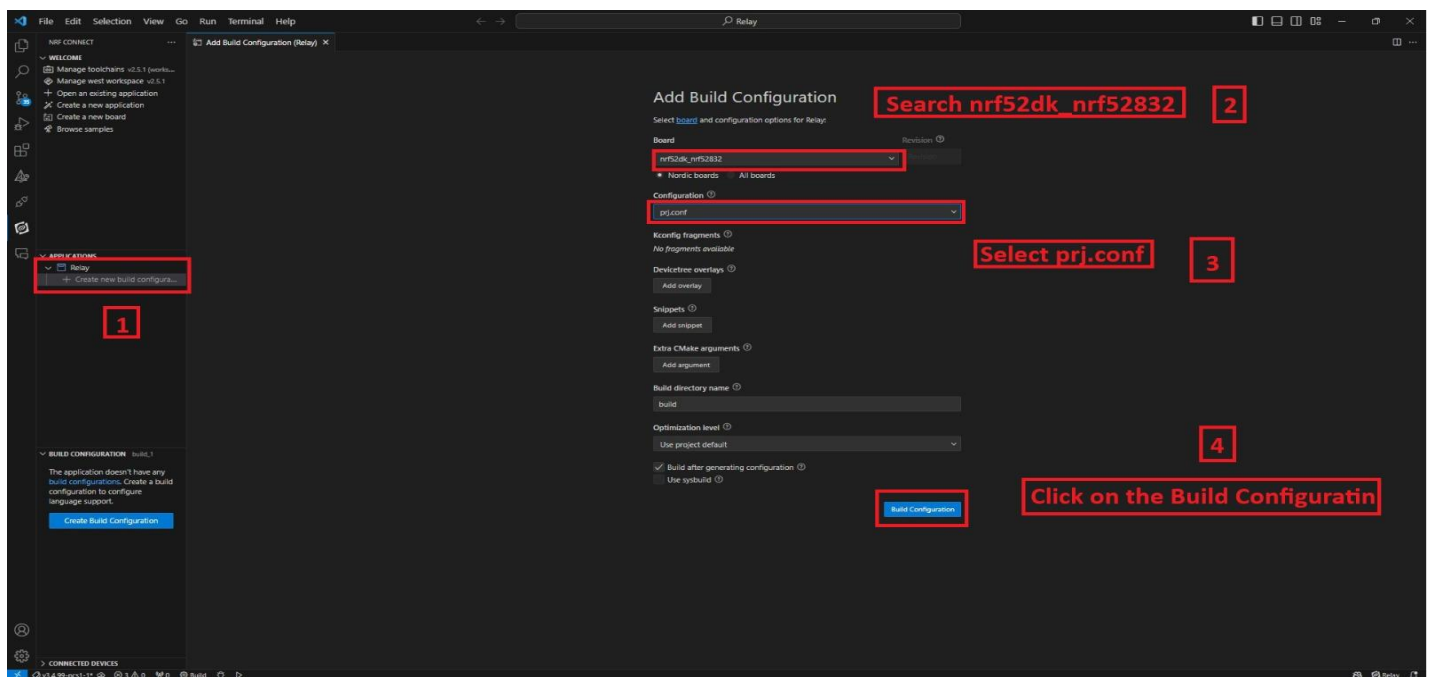


- Go to source file, click **source file [2]** > click on **Application** > click on **src** > click on **main.c [3]**.
- After Click on **main.c** file and you will see the code on your screen **[4]**.

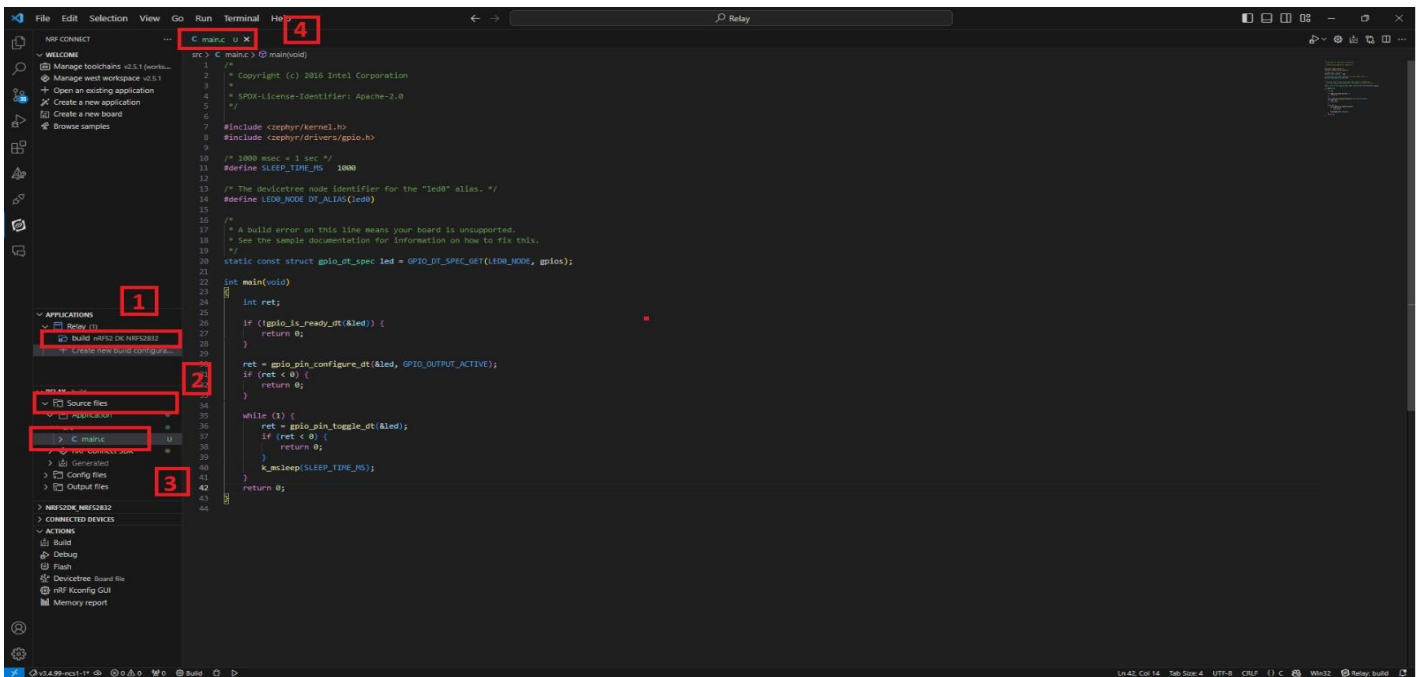

- Run the build configuration again and check the **connected device [1]**.
- Then **flash [2]** the code in nRF dev kit.
- If **flashed successfully [3]** message is displayed on serial terminal, then flash process is complete.

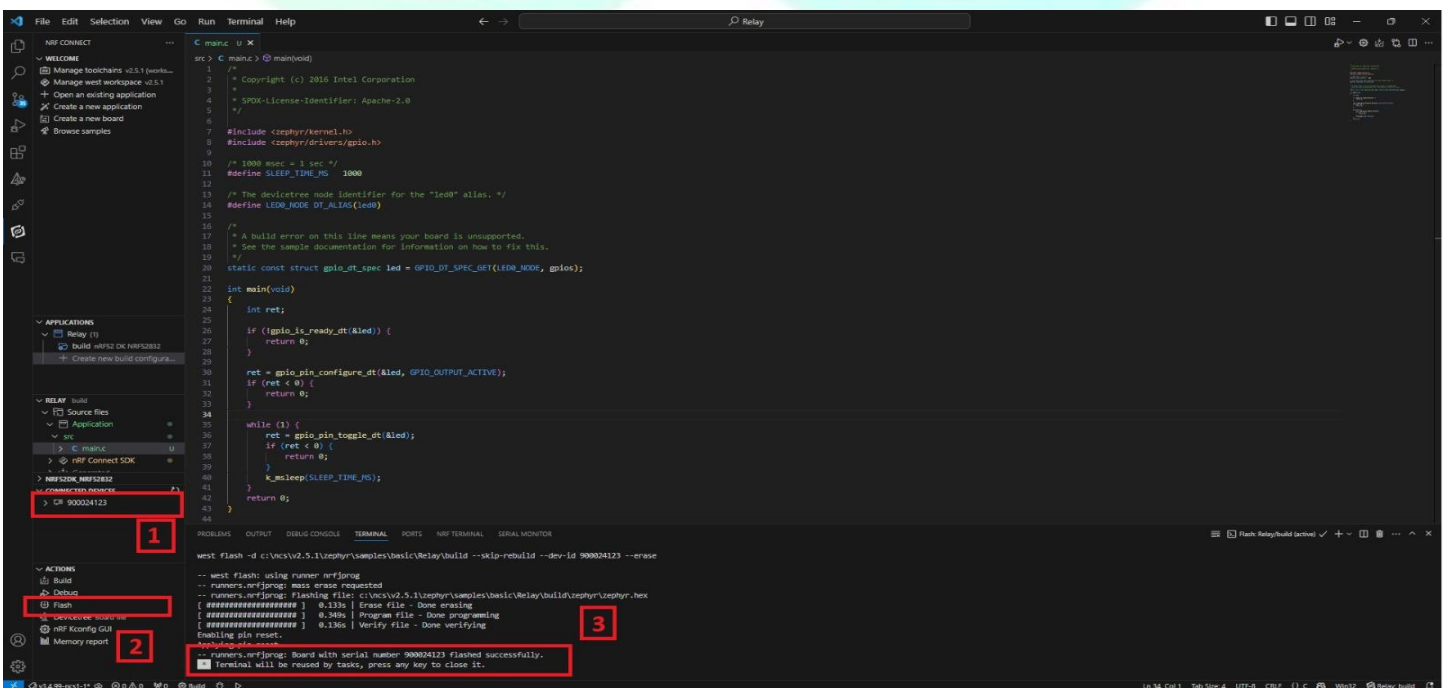

## ❖ PIN CONFIGURATION :-

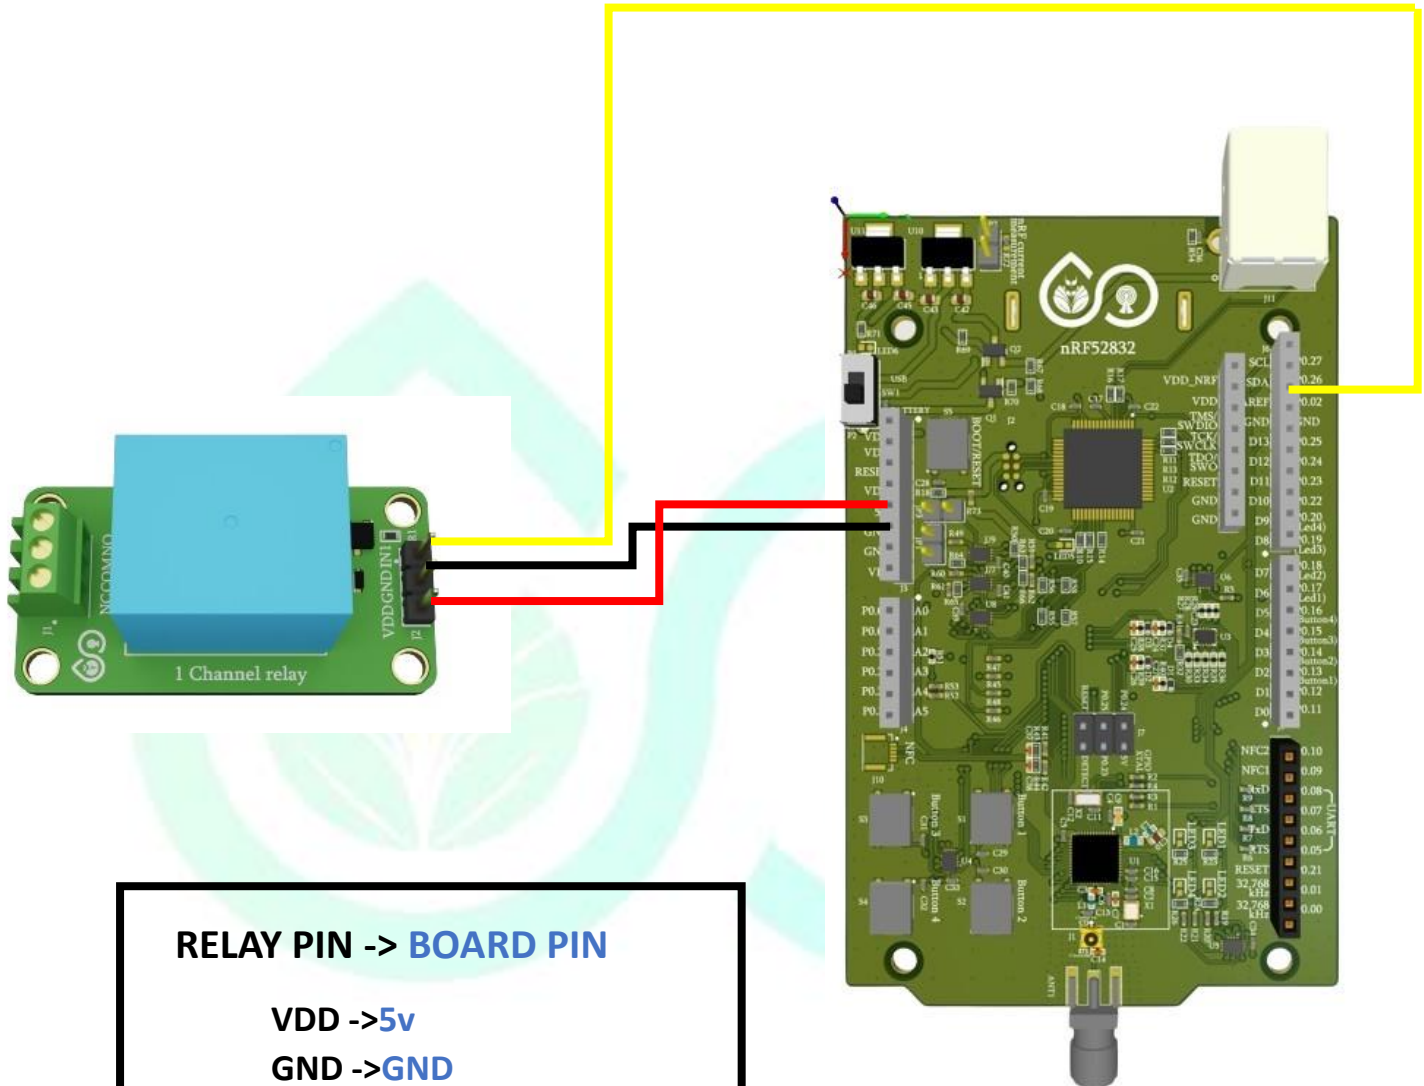


**RELAY PIN -> BOARD PIN**

**VDD -> 5v**

**GND -> GND**

**SIG -> P0.2(FOR RELAY)**

## ❖ OUTPUT :-

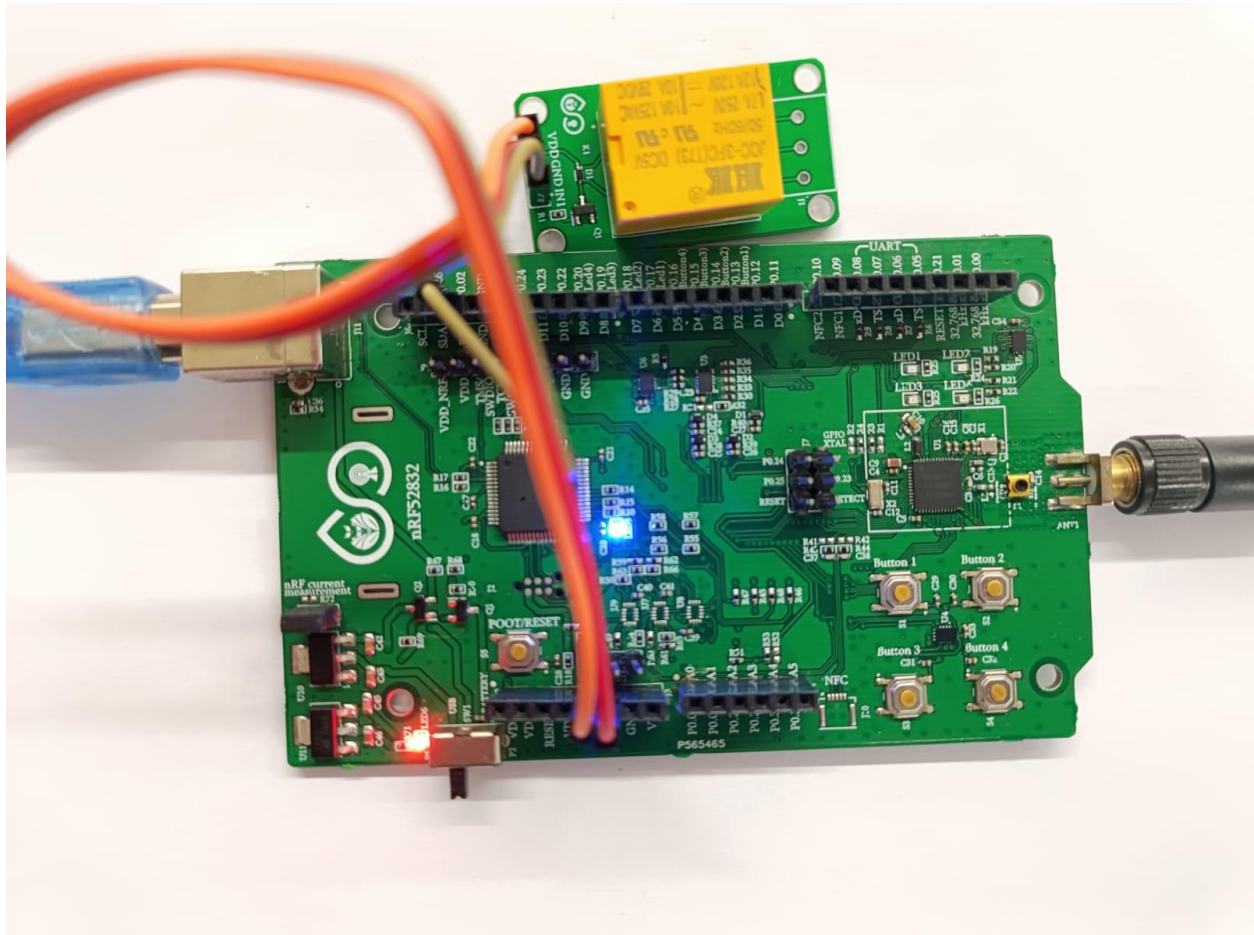


You will hear the sound of **click** on the interval of 1 sec (because we used delay of 1sec) that's mean relay is working and when you will connect any load with relay then you will able to control the load.




## ❖ WITH THE HELP OF NODE


- Open VS Code and click on **Open Existing Application** [1] > click on **Relay\_Node** [2] > **Open** [3] as shown in the picture below.

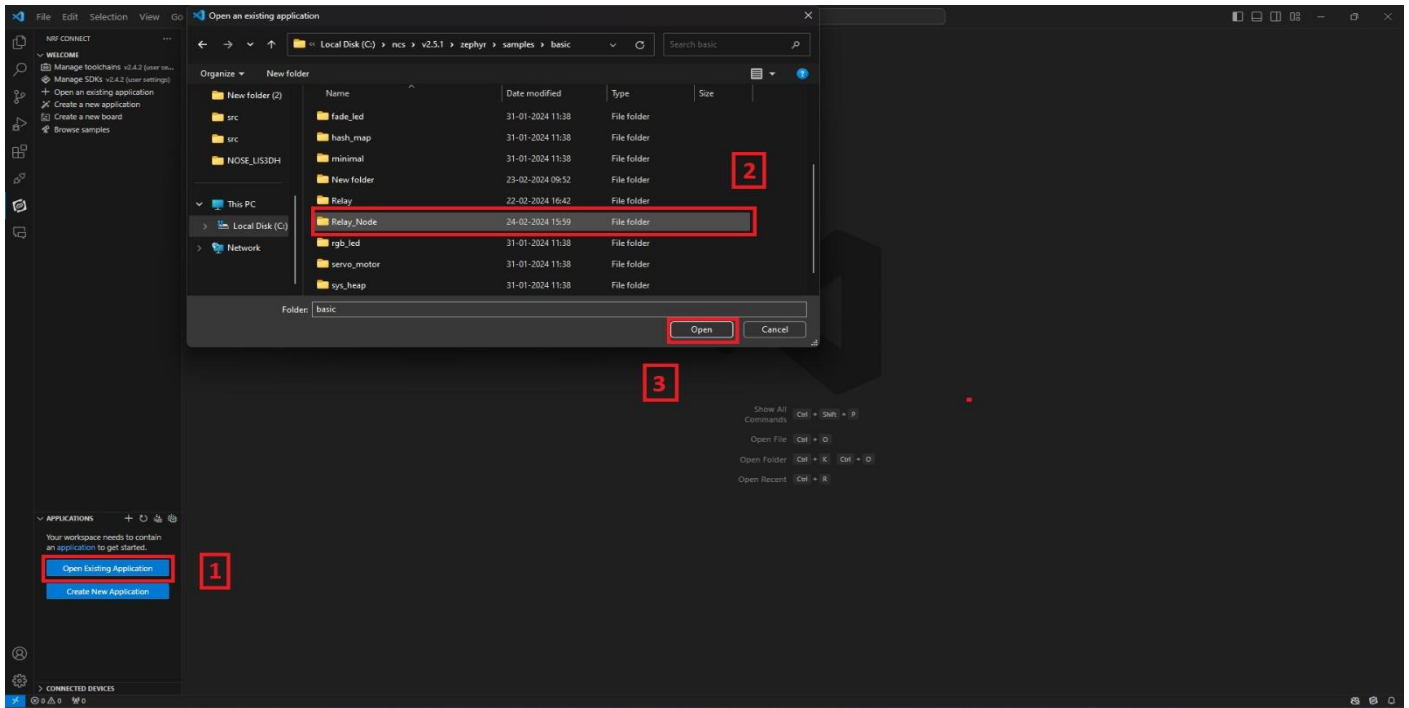


- Click on create new **build configuration** [1] Here you can change the board version, if you are using nRF52832, then select **nrf52dk\_nrf52832** [2] or you can change from there for another version like nRF52833 etc.

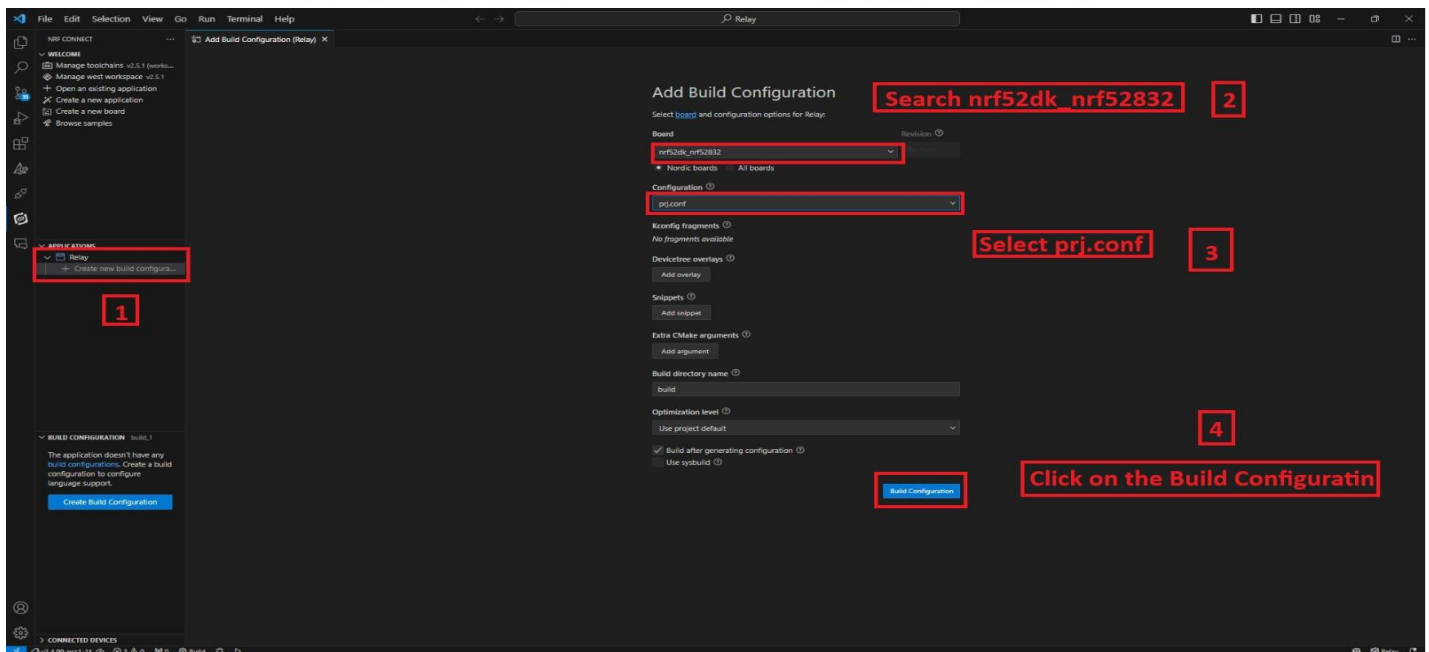

- Go to source file, click **source file [2]** > click on **Application** > click on **src** > click on **main.c [3]**.
- After Click on **main.c** file and you will see the code on your screen [4].

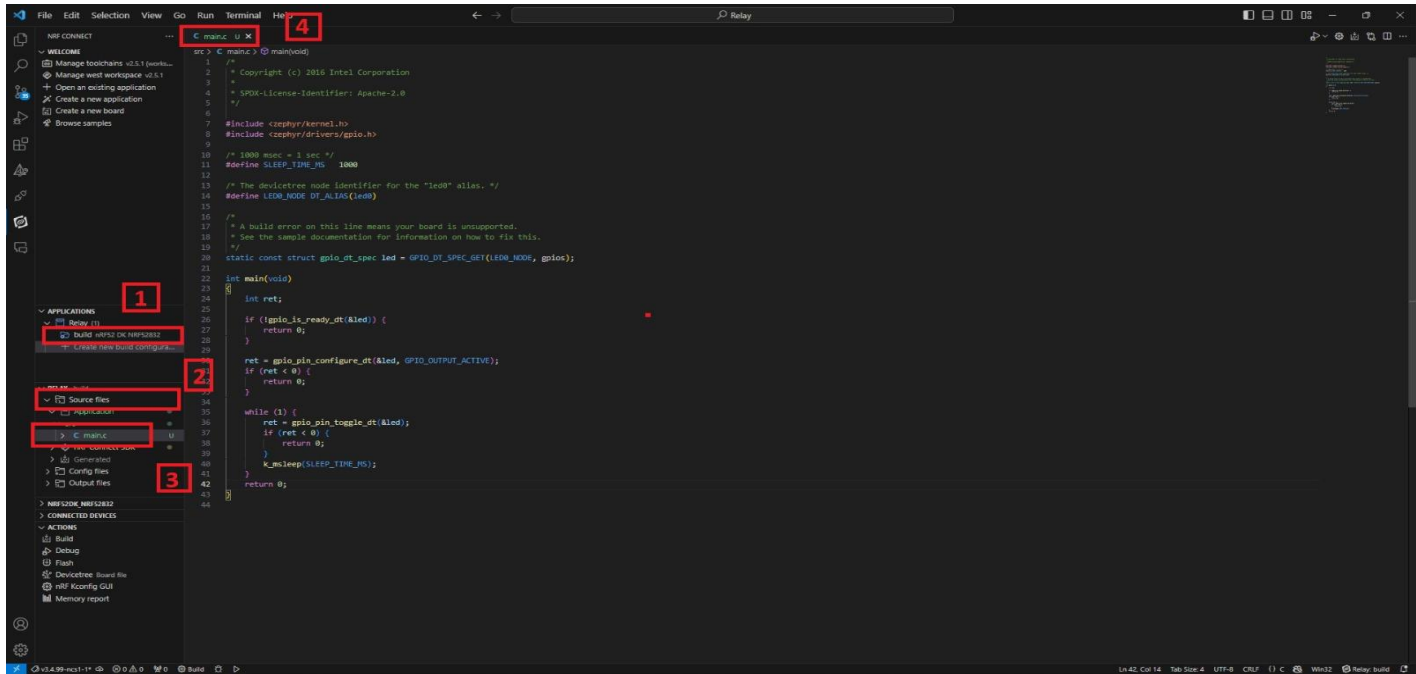


- Run the **build configuration** again and check the connected device [1].
- Then **flash [2]** the code in nRF dev kit.

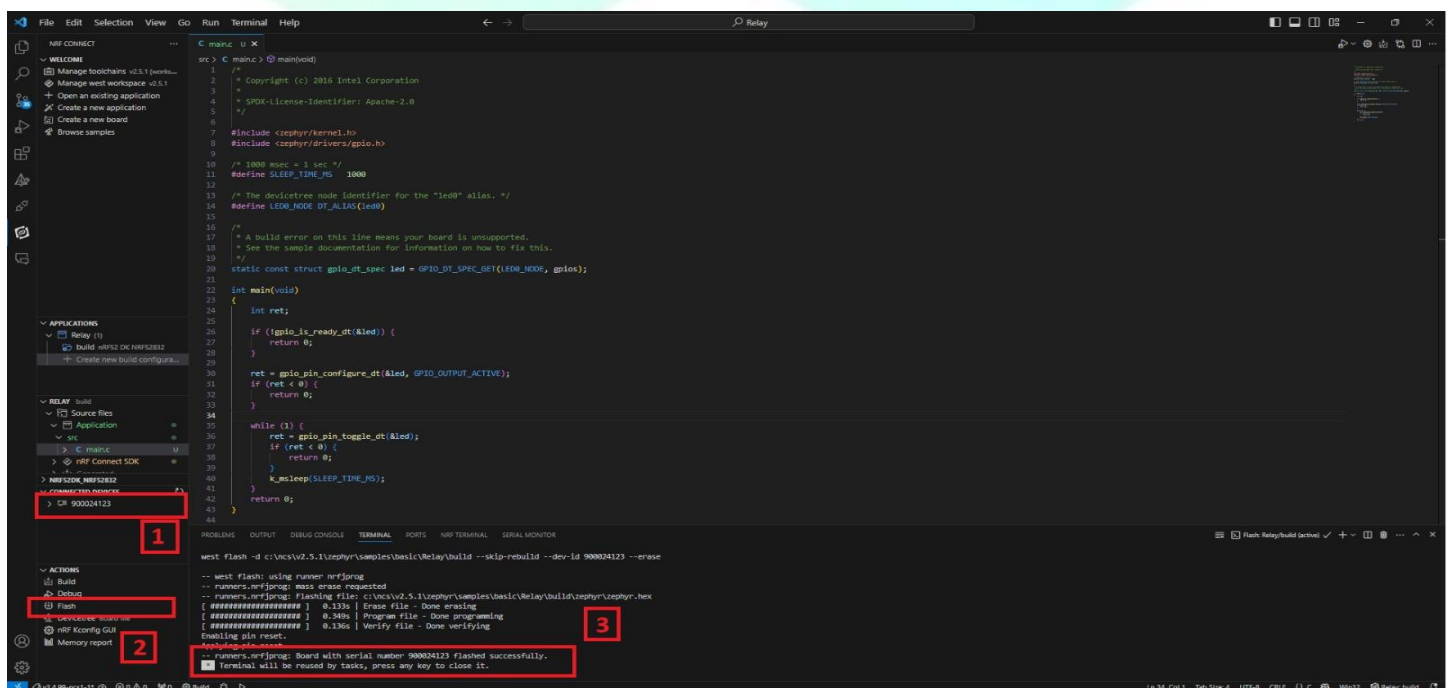

## ❖ PIN CONFIGURATION & OUTPUT:-

- For Node programming remove the jumper **J2** from the development board.
- Now flash the code with the help of nRF52832 development board as shown below in the figure.

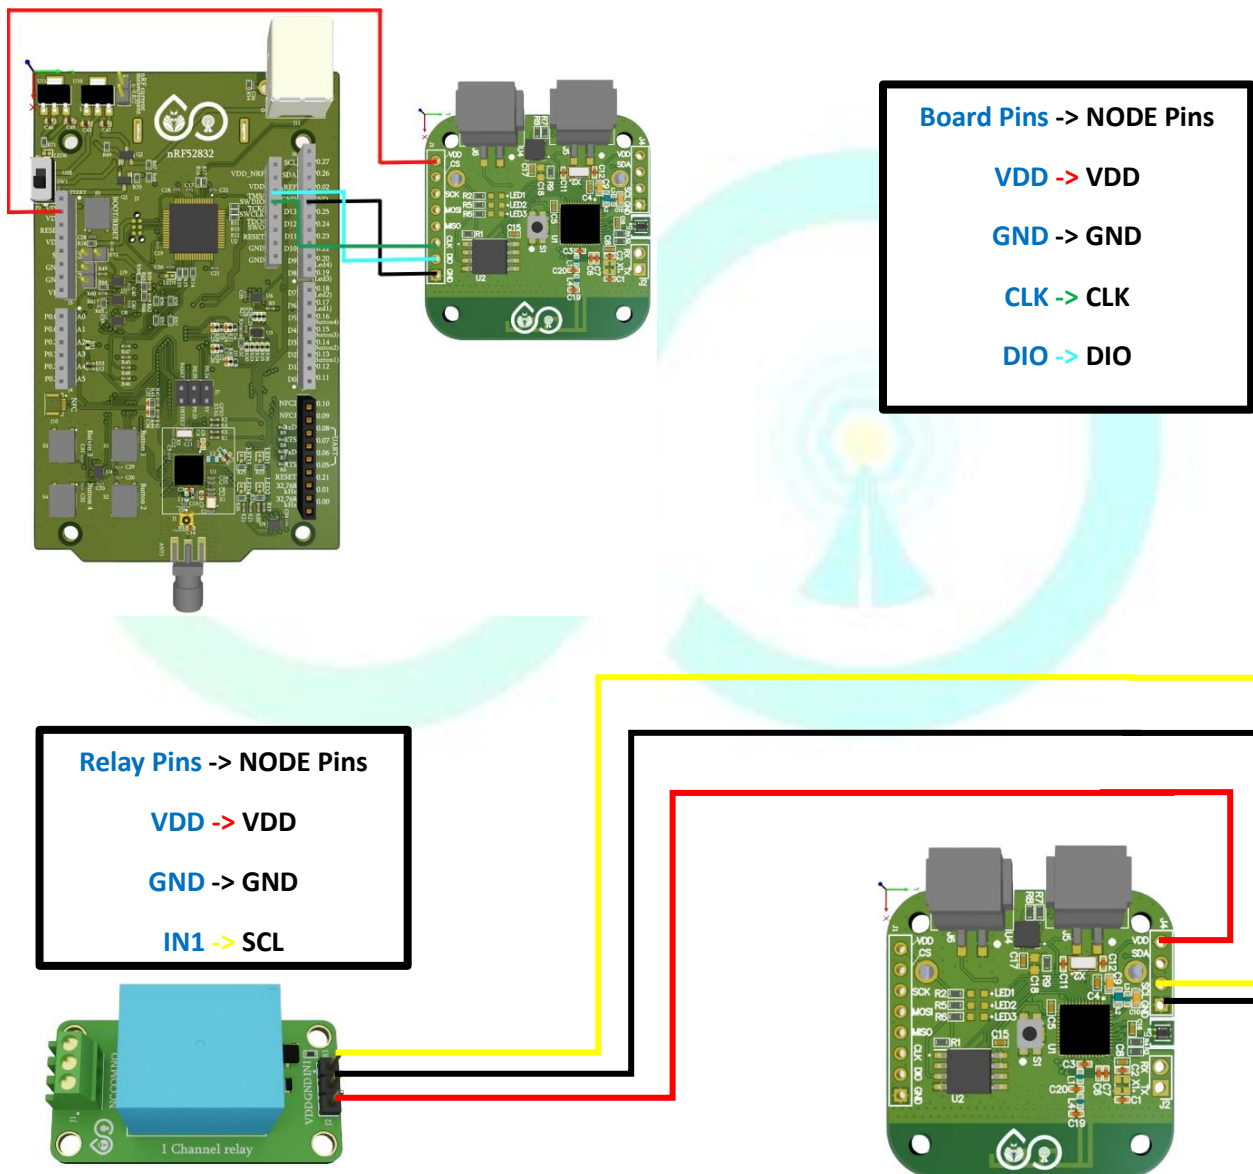

You will hear the sound of **click** on the interval of 1 sec (because we used delay of 1sec) that's mean relay is working and when you will connect any load with relay then you will able to control the load.