

LSM110A User Manual

Rev 1.4

SJIT

JAN. 23, 2024

Contents


1. HARD WARE.....	3
1.1 EVALUATION KIT COMPONENT	3
1.2 EVB LSM110A BOARD	4
1.3 SCHEMATIC	5
1.4 CONNECTOR PIN DESCRIPTION	7
1.5 ANTENNA DIMENSION	8
1.6 RETURN LOSS & VSWR	9
1.7 2D RADIATION PATTERN.....	10
1.8 3D EFFICIENCY.....	11
1.9 EVB RADIATION → CONDUCTION CHANGE.....	12
2. MEMORY MAP.....	13
3. TEST PROGRAM.....	14
3.1 EVALUATION BOARD CONNECTION	14
3.2 PROGRAM EXECUTION	14
3.3 TEST PROGRAM DESCRIPTION	15
4. AT COMMAND COMPLETE SET	20
4.1 LoRa COMMAND.....	20
4.2 SIGFOX COMMAND.....	29

History

Date	Contents	Version	
2022-04-14	Create	V1.0	
2022-04-18	Change AT Command GUI and Add AT command	V1.1	
2022-05-20	Add LoRa AT command	V1.2	
2022-06-02	Add memory map	V1.3	
2024-01-23	Set Channel Mask - AT+CHMASK=channel mask Change Baudrate - AT+BAUDRATE=baudrate Add additional explanation of Rx2 Datarate Maintain Uplink Count - AT+DADDR=addr,1 Add content of Default Region & RC Add a table of Tx power for explanation Change the company name Set Devnonce count - AT+DEVNONCE=<count>	V1.4	

1. Hard Ware

1.1 Evaluation Kit Component

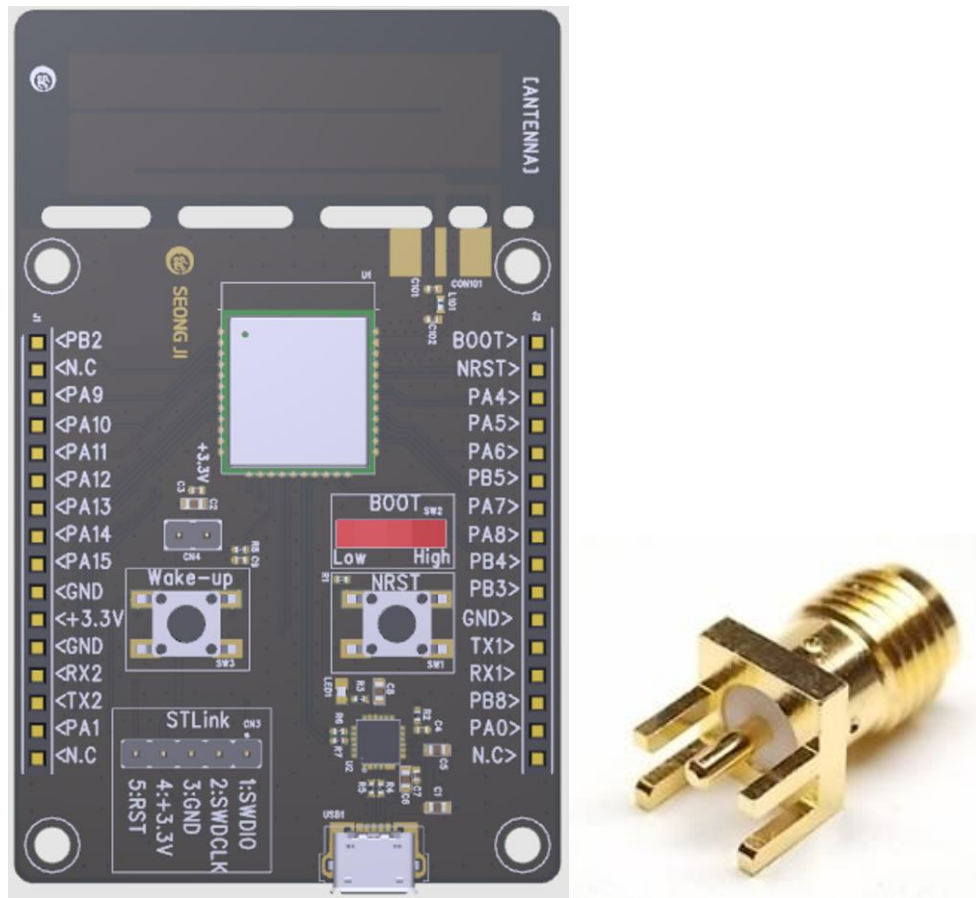


EVB LSM

[Fig. Evaluation Kit Component]

LSM110A Evaluation Kit Component

- 1) EVB LSM: 1EA
- 2) SMA Connector(ST type): 1EA


1.2 EVB LSM110A Board

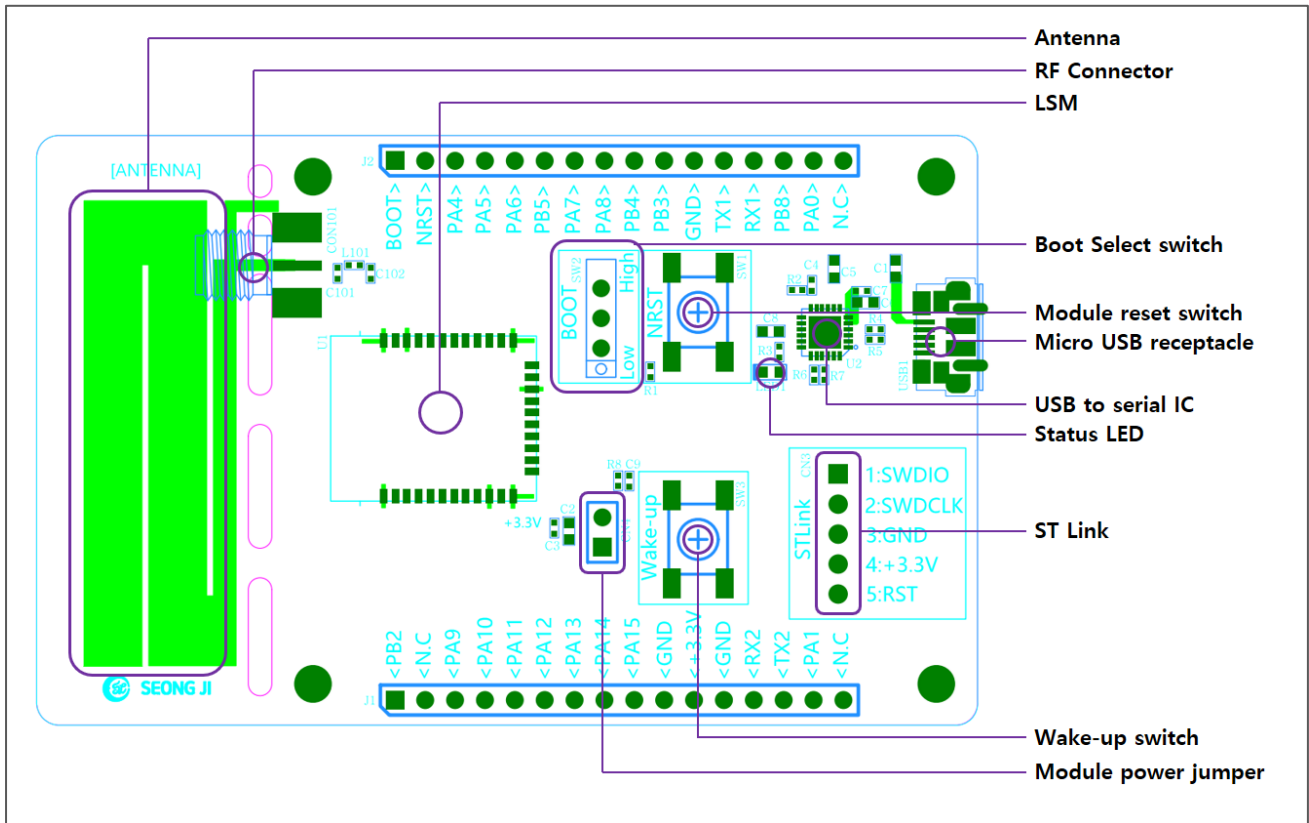


[Fig. EVM LSM]

- **RF Connector:** RF connector for Antenna
- **LSM:** LoRa - Sigfox module
- **Boot Select switch:** Boot mode Low/High switch (↓ : Low, ↑ : High)
- **Module reset switch:** EVB LSM H/W reset switch
- **Micro USB receptacle:** Micro USB connector
 - ① Power supply
 - ② Virtual UART interface
- **USB to serial IC:** FT232HL/FTDI
- **Status LED:** Debug & Module status LED
- **ST Link:** ST Link connector
- **Wake-up switch:** wake-up switch
- **Module power Jumper:** EVB LSM power supply jumper PIN
- **Module external power PIN:** EVB LSM external power supply PIN (+3.3V supply)

SJIT CONFIDENTIAL

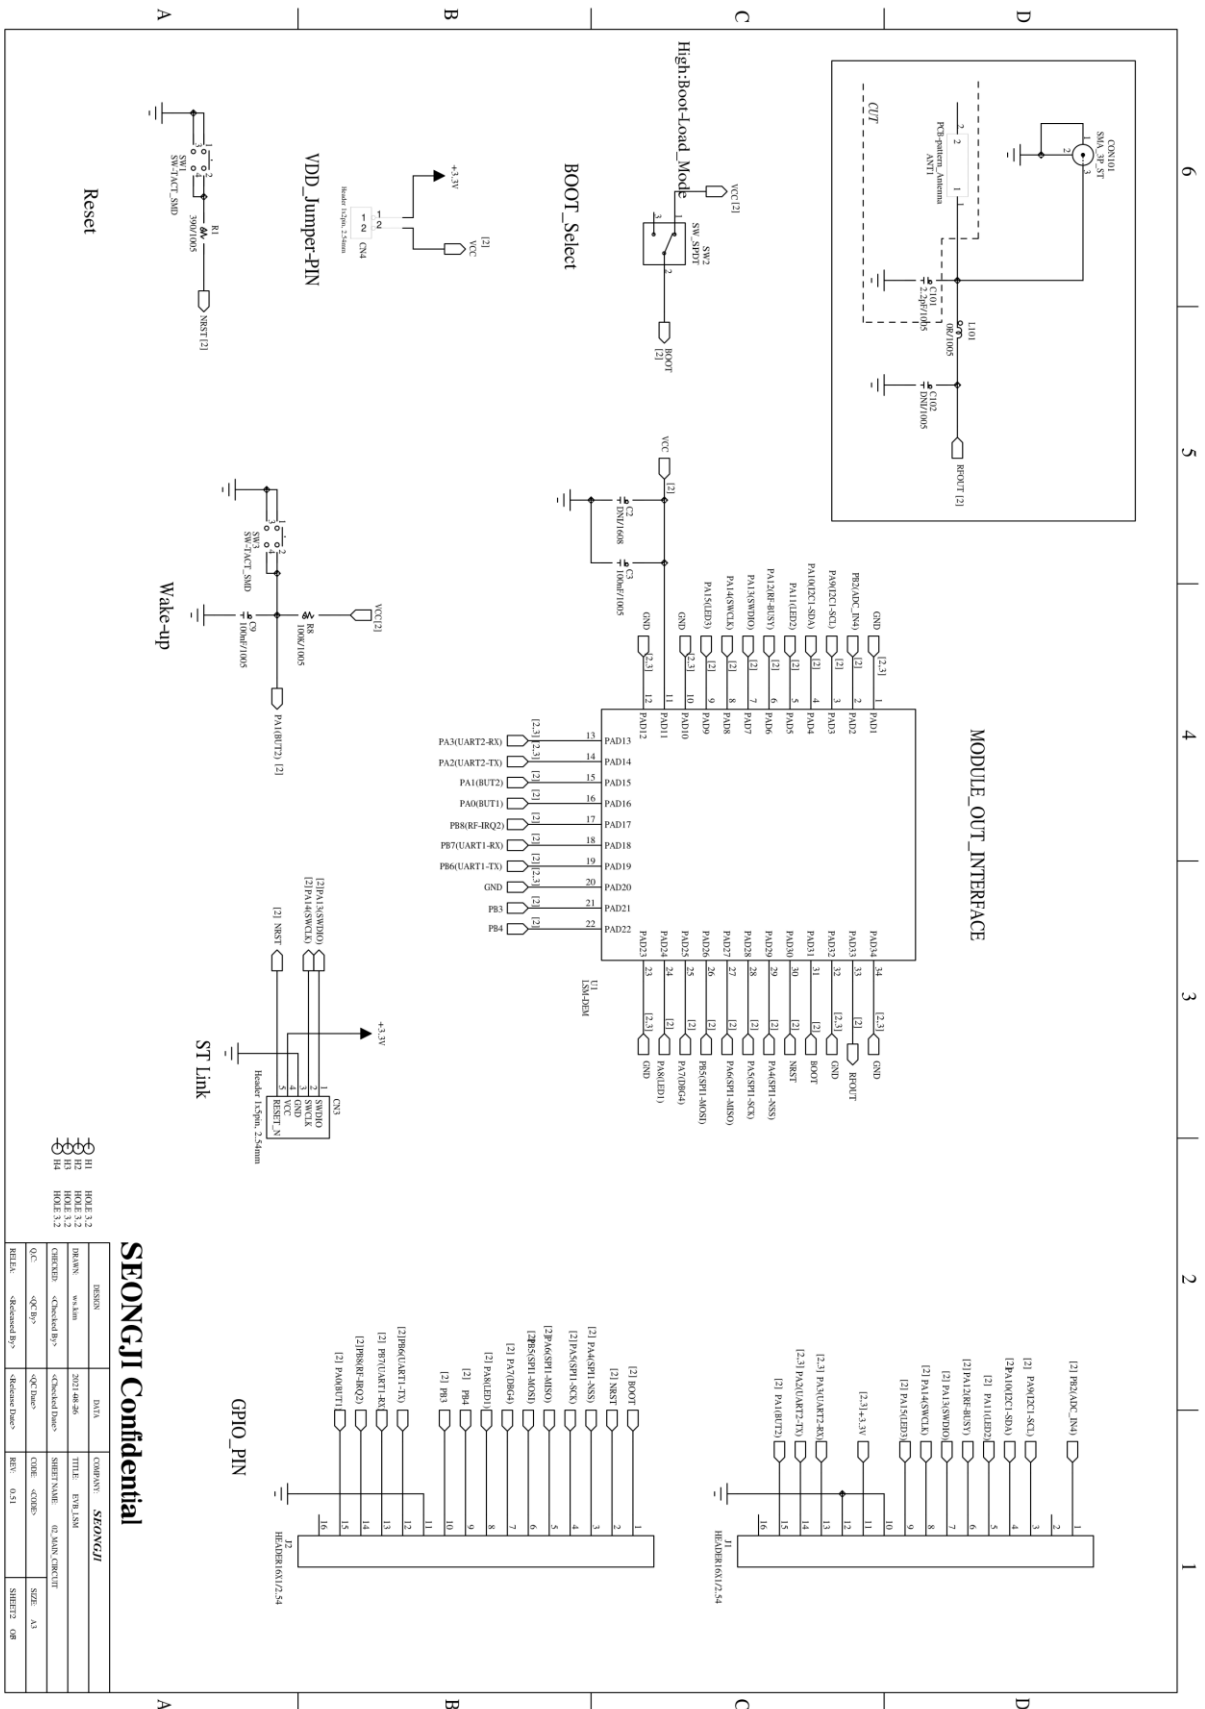

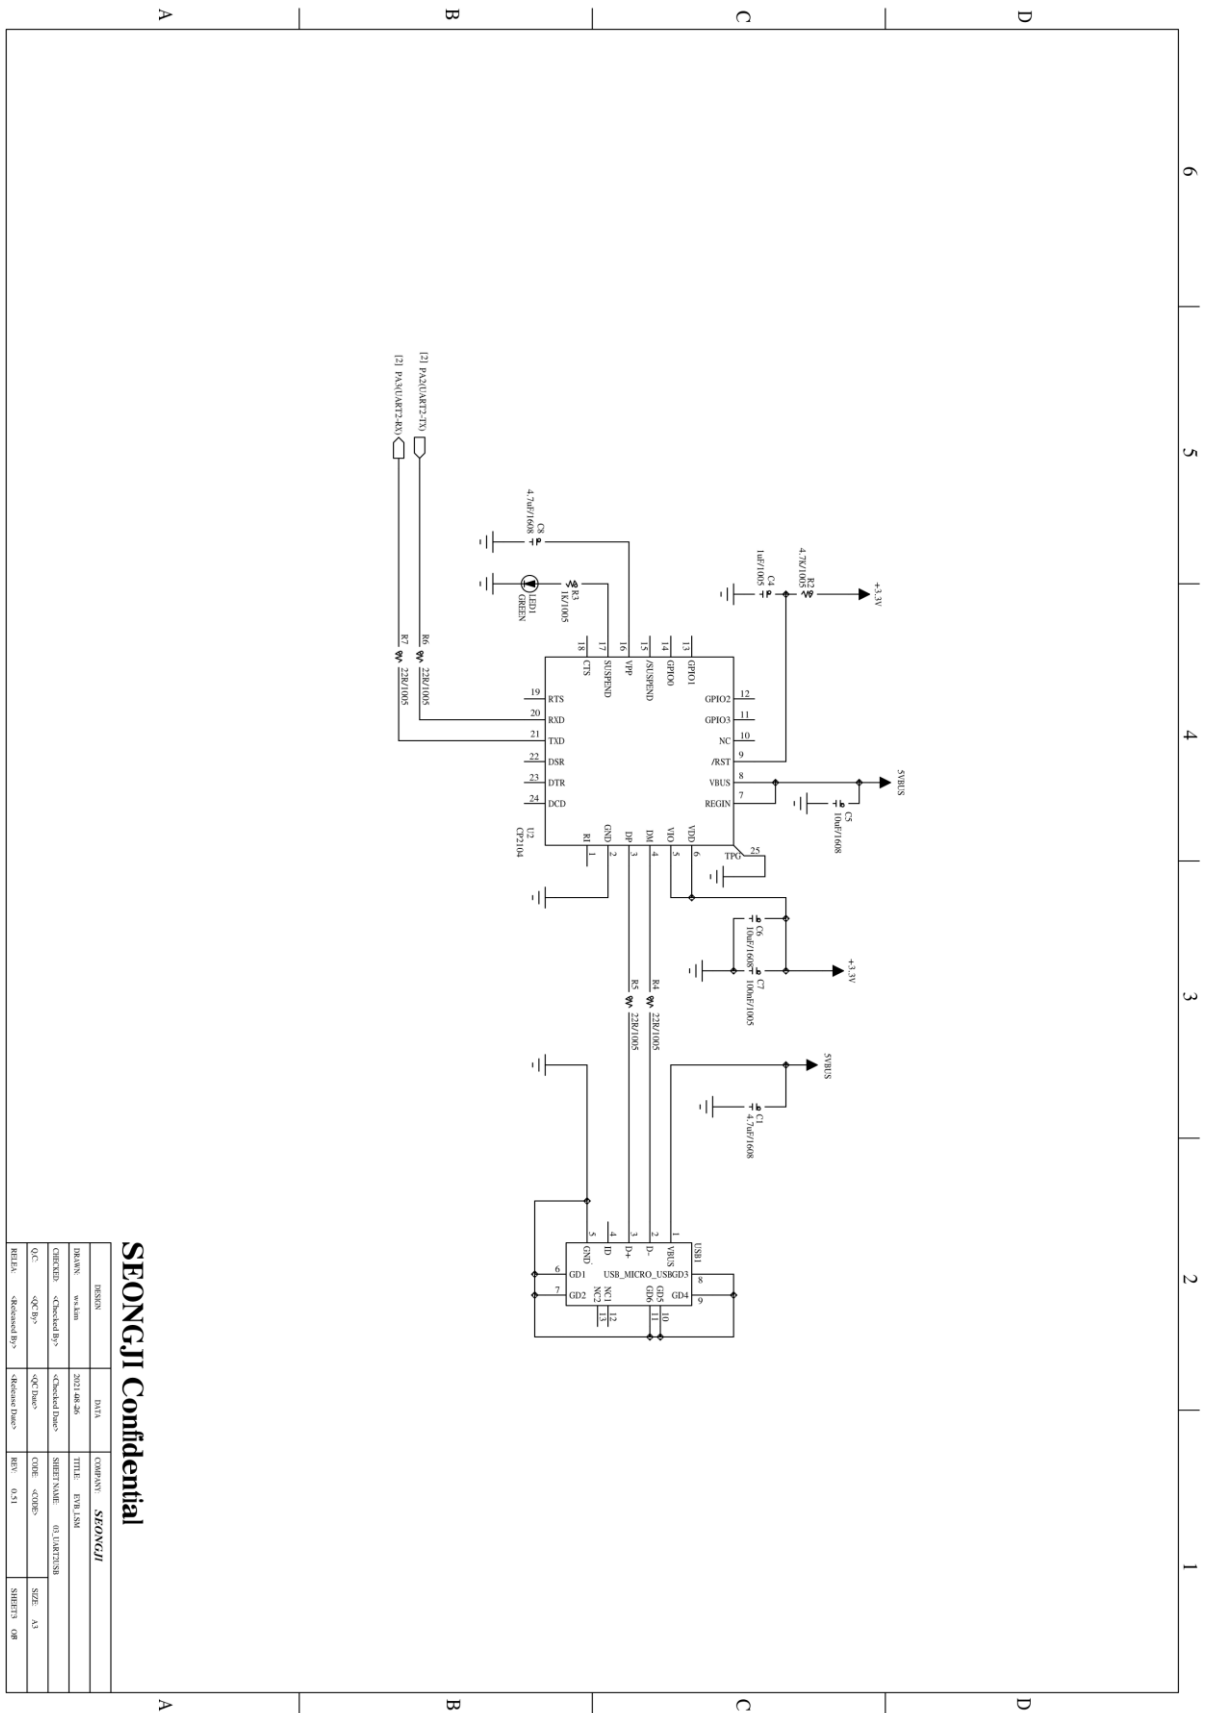

SEONGJII Confidential


DESIGN	DATE	COMPANY	SEONGJII
DESIGNER	2021.08.26	TITLE	REV. A.1
CHECKED	<Checked By>	SHEET NAME	01.LSM110A
QC	<QC By>	QC Date	
REVIEW	<Reviewer Name>	REV.	0.1
		SHEET	01

1.4 Connector PIN Description


Connector	Pin No.	Pin name	Module Pin No.	Function
J1	1	PB2	2	AC/DC In
	2	-	-	-
	3	PA9	3	Inter-Integrated Circuit Serial Clock (SCL)
	4	PA10	4	Inter-Integrated Circuit Serial Data (SDA)
	5	PA11	5	General purpose IO
	6	PA12	6	General purpose IO
	7	PA13	7	Serial Wire Debug Data (FW Download)
	8	PA14	8	Serial Wire Debug Clock (FW Download)
	9	PA15	9	General purpose IO
	10	GND	-	Ground
	11	VDD	11	Power Supply(+1.8V ~ +3.6V)
	12	GND	12	Ground
	13	PA3	13	UART2 Receive Data
	14	PA2	14	UART2 Transmit Data
	15	PA1	15	Wake-up, General purpose IO
	16	-	-	-

Connector	Pin No.	Pin name	Module Pin No.	Function
J2	1	BOOT	31	IC Boot0
	2	NRST	30	IC Reset
	3	PA4	29	Selectable SPI1 functionality (NSS)
	4	PA5	28	Selectable SPI1 functionality (SCK)
	5	PA6	27	Selectable SPI1 functionality (MISO)
	6	PB5	26	Selectable SPI1 functionality (MOSI)
	7	PA7	25	General purpose IO
	8	PA8	24	General purpose IO
	9	PB4	22	General purpose IO
	10	PB3	21	General purpose IO
	11	GND	20	Ground
	12	PB6	19	UART1 Transmit Data
	13	PB7	18	UART1 Receive Data
	14	PB8	17	General purpose IO
	15	PA0	16	General purpose IO
	16	-	-	-

1.5 Antenna Dimension

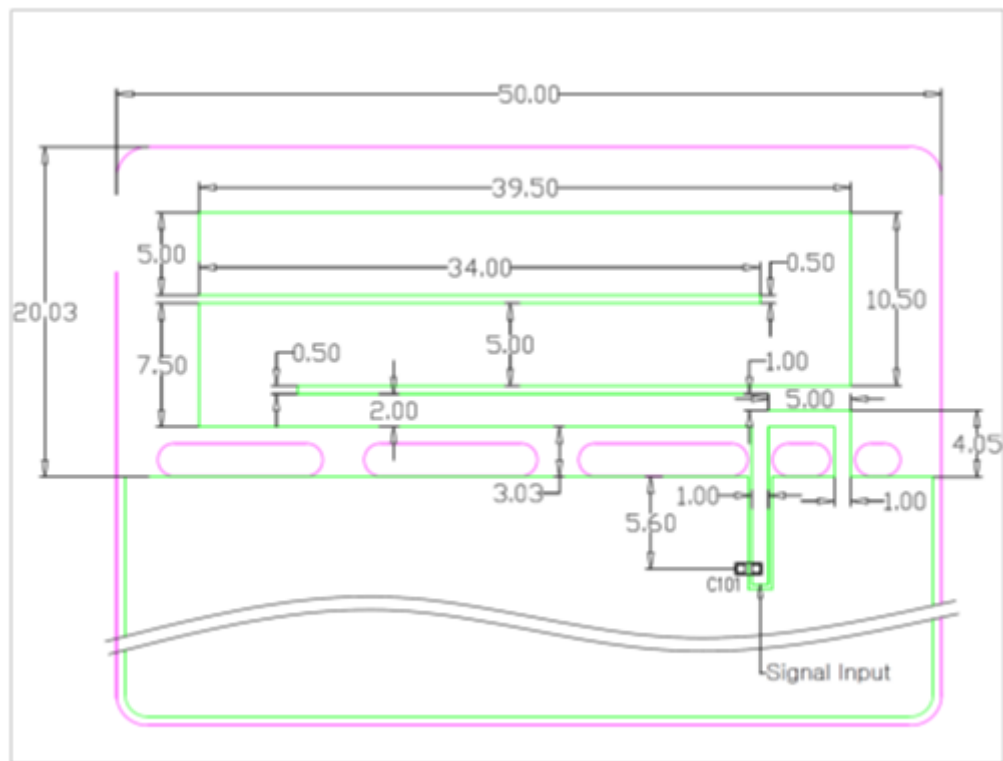


[Antenna Pattern]

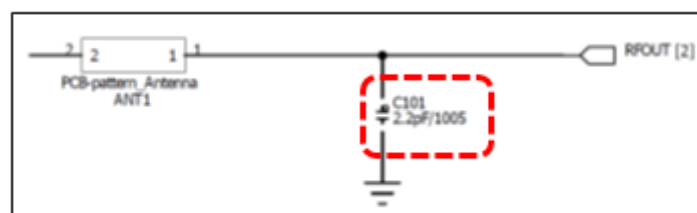


[Matching]

1.6 Return loss & VSWR

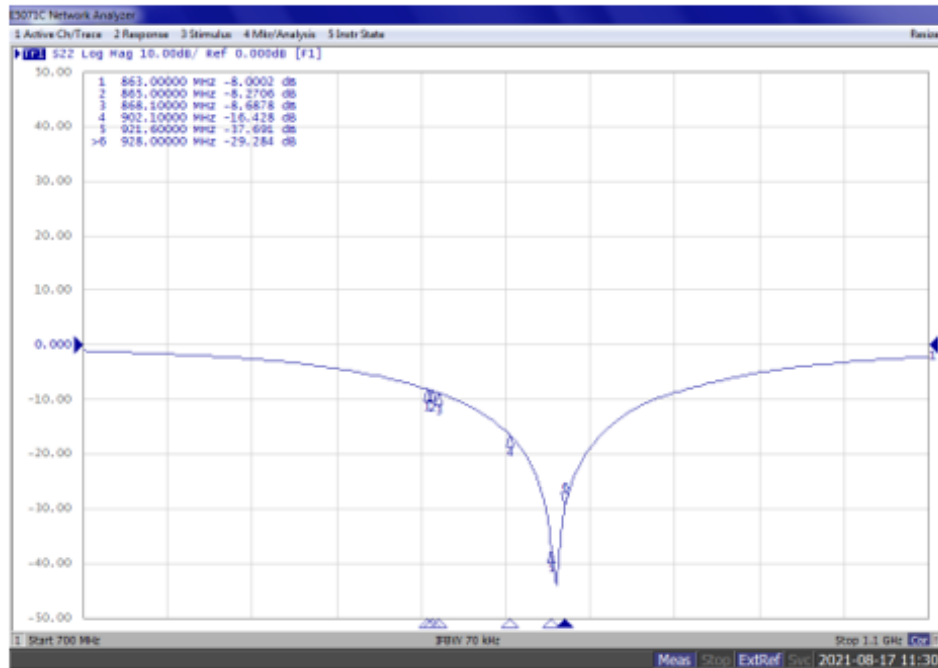


[Return Loss]

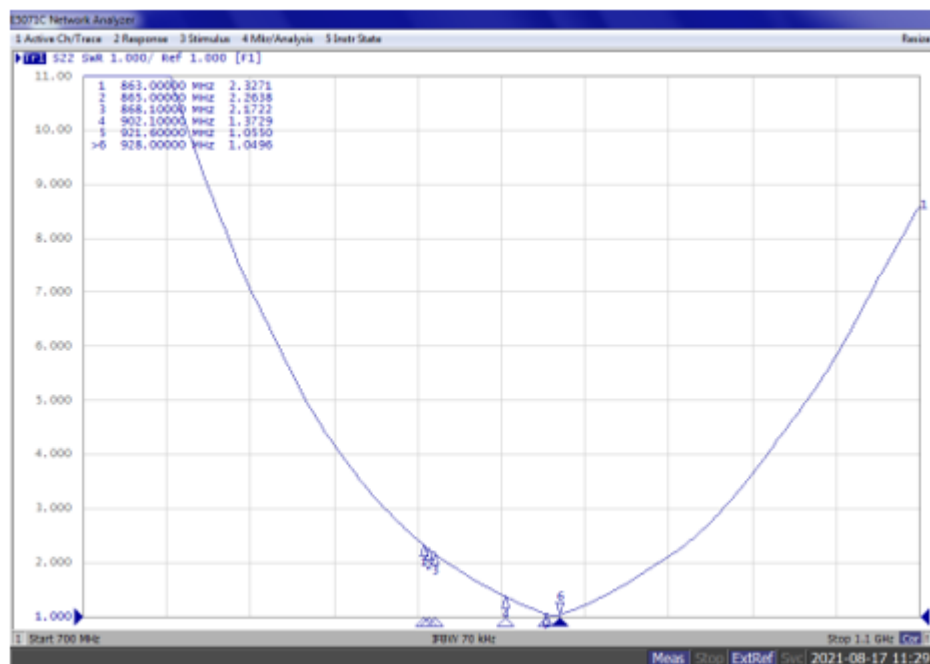


[VSWR]


1.7 2D Radiation Pattern

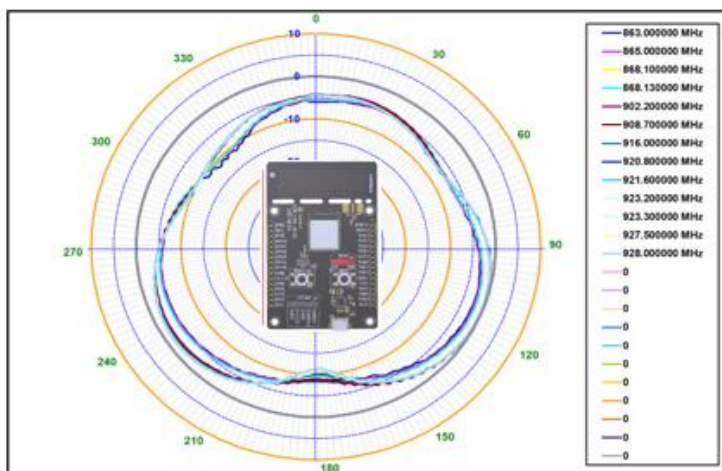

[X-Y]

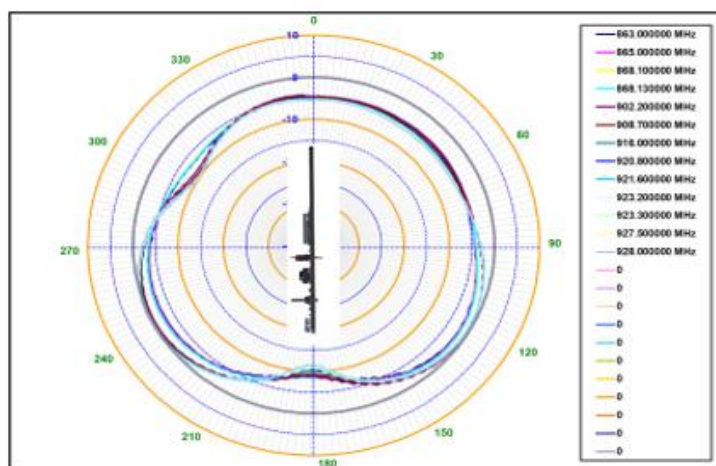

[Y-Z]

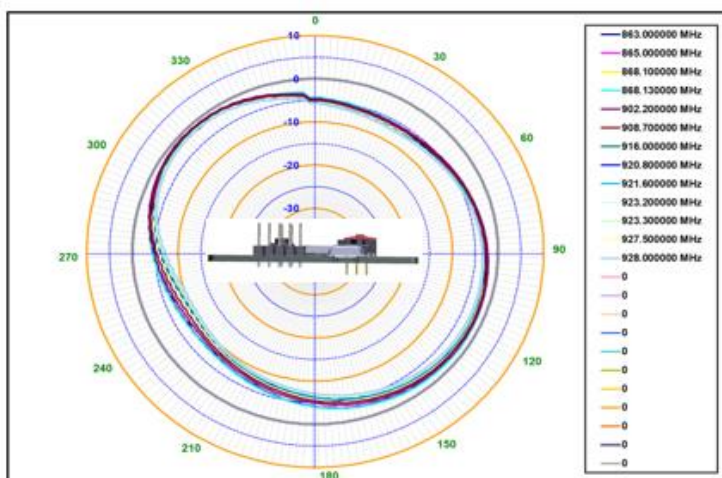


[X-Z]


1.8 3D Efficiency

Antenna Pattern & Gain Report

Manufacturer	Company Name
Model Name	Filename
Tester Name	Airlink
Test Date	2021-08-18 오후 4:55:34
IF BW	100 Hz
Port Power	0.00 dBm
Meas Step	15 `

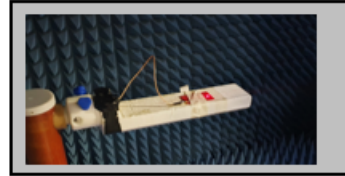
[illegible]

1.9 EVB Radiation → Conduction Change

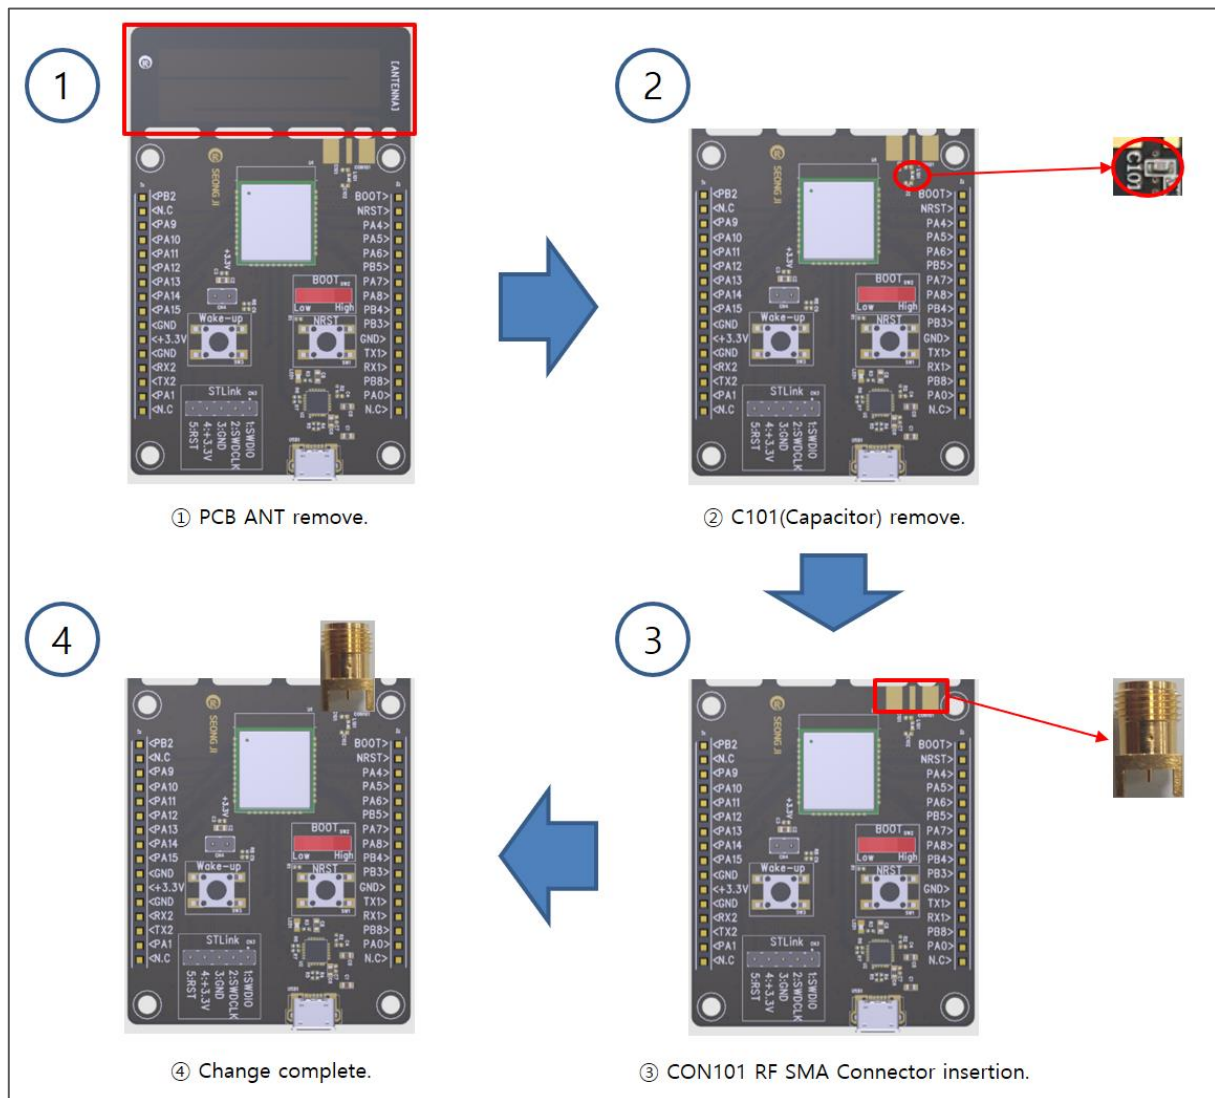

2. Memory map

- LSM110A F/W version: V1.0.1
- LSM110A IAP(Bootloader)
 - ◆ Start address: 0x08000000
 - ◆ End address: 0x08001FFF
 - ◆ Size: 0x2000(8,192byte)
 - ◆ Area in IAP
- LSM110A F/W
 - ◆ Start address: 0x08002000
 - ◆ End address: 0x0802FFFF
 - ◆ Size: 0x2E000(188,416byte)
 - ◆ Area in LSM110A F/W
- LoRa user area
 - ◆ Start address: 0x0803A000
 - ◆ End address: 0x0803BFFF
 - ◆ Size: 0x2000(8,192byte)
 - ◆ Area in LoRa user data
- Sigfox user area
 - ◆ Start address: 0x0803C000
 - ◆ End address: 0x0803DFFF
 - ◆ Size: 0x2000(8,192byte)
 - ◆ Area in Sigfox user data
- Sigfox ID/PAC
 - ◆ Start address: 0x0803E000
 - ◆ Area in Sigfox ID, PAC

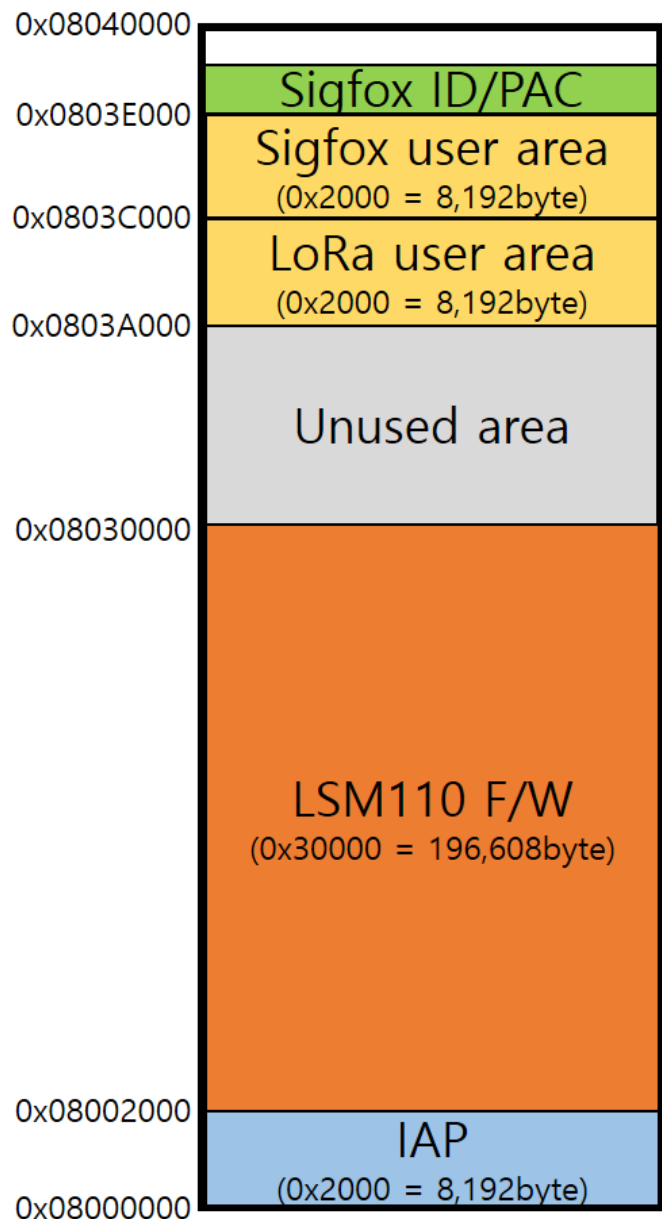

The Sigfox ID/PAC(Credentials) is placed at 0x0803E500. (**The Sigfox area must not be erased and modified.**)


※ Warning: Never erase the entire memory.

Users are responsible for any problems caused by the erase.

3. Test Program

3.1 Evaluation board Connection

- 1) EVBLSM110A connect to Window PC by USB cable.

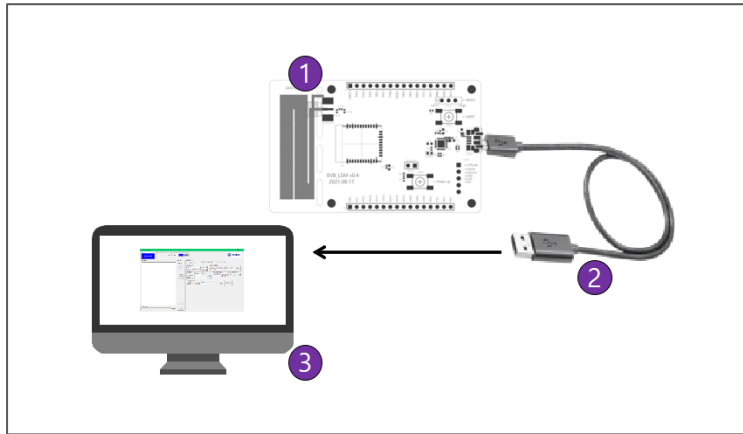


- ① LSM110A
- ② Micro USB cable
- ③ Windows PC

[Fig. EVBLSM110A connection]

3.2 Program execution


- 1) EVBLSM110A connected serial-port in Windows PC, and then check the COM-port number in device manager.

➔ USB Serial Port(Com□□)

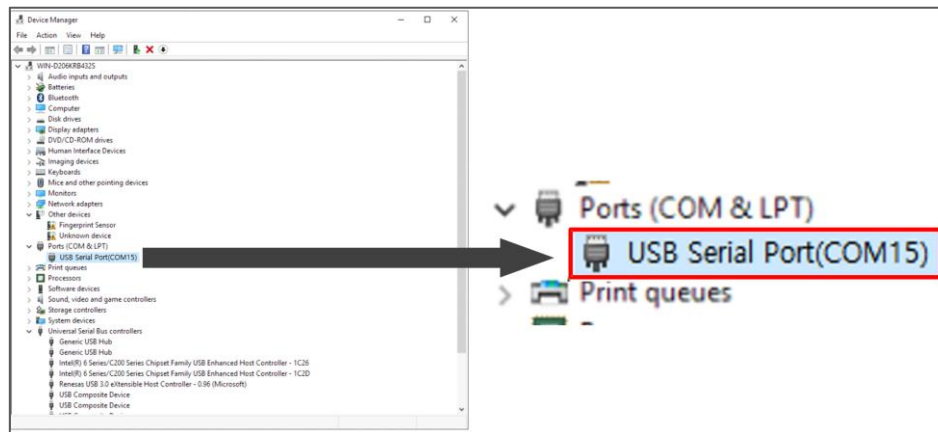

[Fig. EVBLSM110A serial port]

- 2) Run serial communication program "LSM110_CMD_vXX.exe"
- 3) Write serial port Number in 'DUTCOM' BOX, and then 'connect' click.




Serial port number

[Fig. EVBLSM110A serial port number]

3.3 Test program Description

3.3.1 Lora command GUI

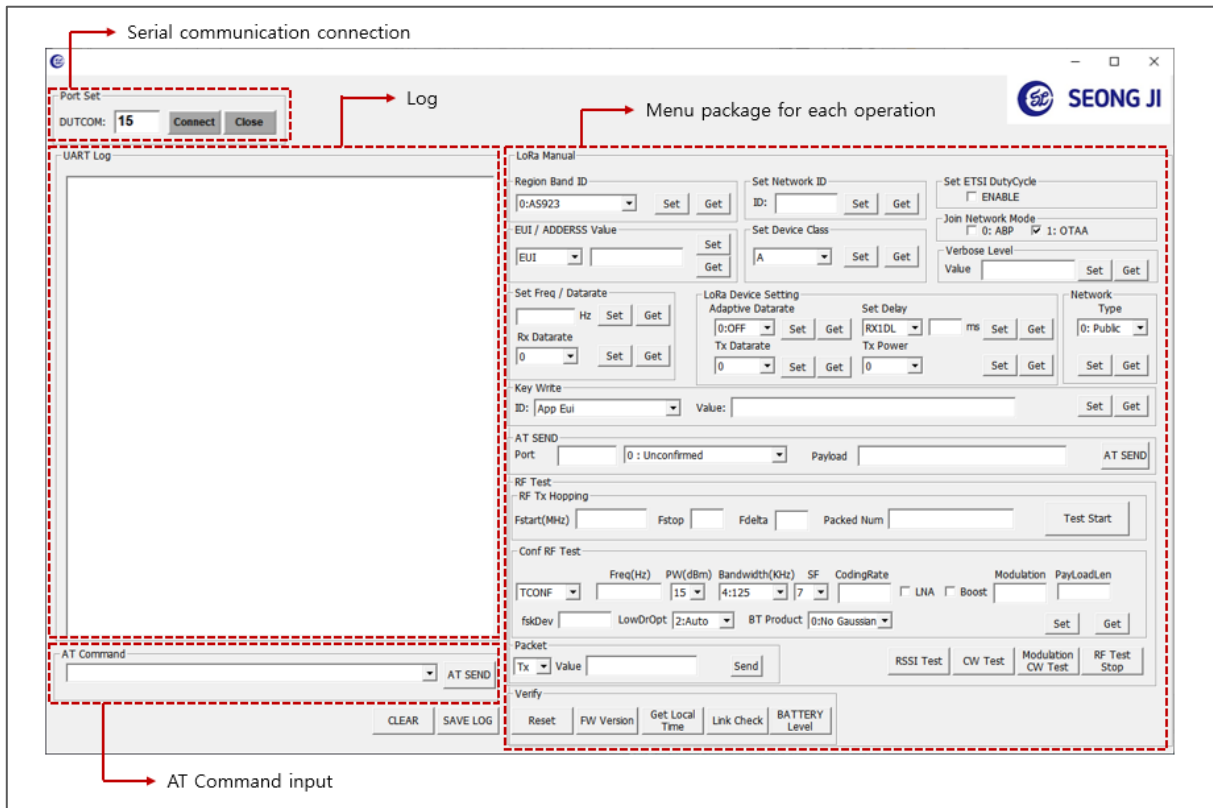


[Fig. Screen of execute Test program]

- 1) Write command on AT Command edit box located on left bottom and then click Send button to execute command. Configuration value list is defined on chapter "AT command complete set"
- 2) Instead of the item 1), can click button to execute on each AT command menu package on the right.

Example)

Command : AT+BAND=5 (CR) AT+BAND=? (CR)

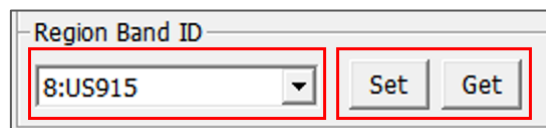

[Fig. Region Band ID Set Command]

3.3.2 Lora RF Test Description

1) Configure RF test

General Setting

*** Conf RF Test Setting**(Required to set every device reset)

The screenshot shows the LSM_LoRa_CMD software interface. The 'Conf RF Test' section is highlighted with a red box. It contains the following fields and controls:

- Region Band ID:** 8:US915 (Set, Get)
- Set Network ID:** ID: (Set, Get)
- Set ETSI DutyCycle:** ☐ ENABLE
- Join Network Mode:** ☐ 0: ABP ☒ 1: OTAA
- Verbose Level:** Value: (Set, Get)
- Set Device Class:** A (Set, Get)
- Set Freq / Datarate:** Hz (Set, Get), Rx Datarate (Set, Get), Tx Datarate (Set, Get)
- LoRa Device Setting:** Adaptive Datarate (0:OFF, Set, Get), RXIDL (Set, Get), Set Delay (ms, Set, Get), Tx Power (Set, Get)
- Key Write:** ID: App Eui, Value: (Set, Get)
- AT SEND:** Port (0: Unconfirmed), Payload (AT SEND)
- RF Test:** RF Tx Hopping (Fstart(MHz), Fstop, Fdelta, Packed Num, Test Start)
- Conf RF Test:** Freq(Hz) 915200000, PW(dBm) 22, Bandwidth(KHz) 4:125, SF 7, CodingRate 5, ☐ LNA, ☐ Boost, Modulation 1, PayloadLen 16, fskDev 0, LowDrOpt 2:Auto, BT Product 0:No Gaussian (Set, Get)
- Packet:** Tx Value (Send)
- Verify:** RSSI Test, CW Test, Modulation CW Test, RF Test Stop
- Buttons:** CLEAR, SAVE LOG, Reset, FW Version, Get Local Time, Link Check, BATTERY Level


- As in the picture above, enter parameters without spaces and Set

AT+TCNF=<Frequency>:<Power>:<LoRa Bandwidth>:<Lora SF>:<CodingRate>:<Lna>:<PA Boost>:
<Modulation>:<PayloadLen>:<FskDeviation>:<LowDrOpt>:<BTproduct> <CR>

EX) AT+TCNF=915200000:22:4:7:4/5:0:0:1:16:0:2:0

2) Tx Test


After selecting Tx in the Packet part, set the number of times to repeat Value and Send.

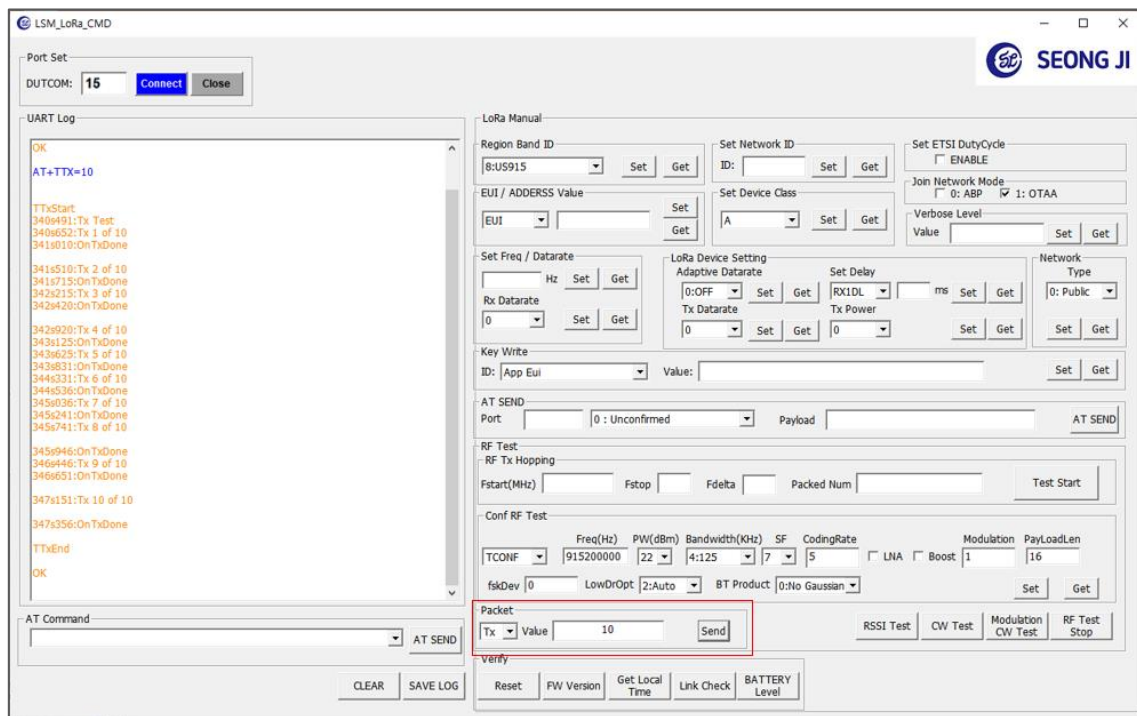


3) Rx Test

After selecting Rx in the Packet part, set the number of times to repeat Value and Send.

- ➔ if received success display "OnRxDone"
- ➔ if received fail display "OnRxTimeout"

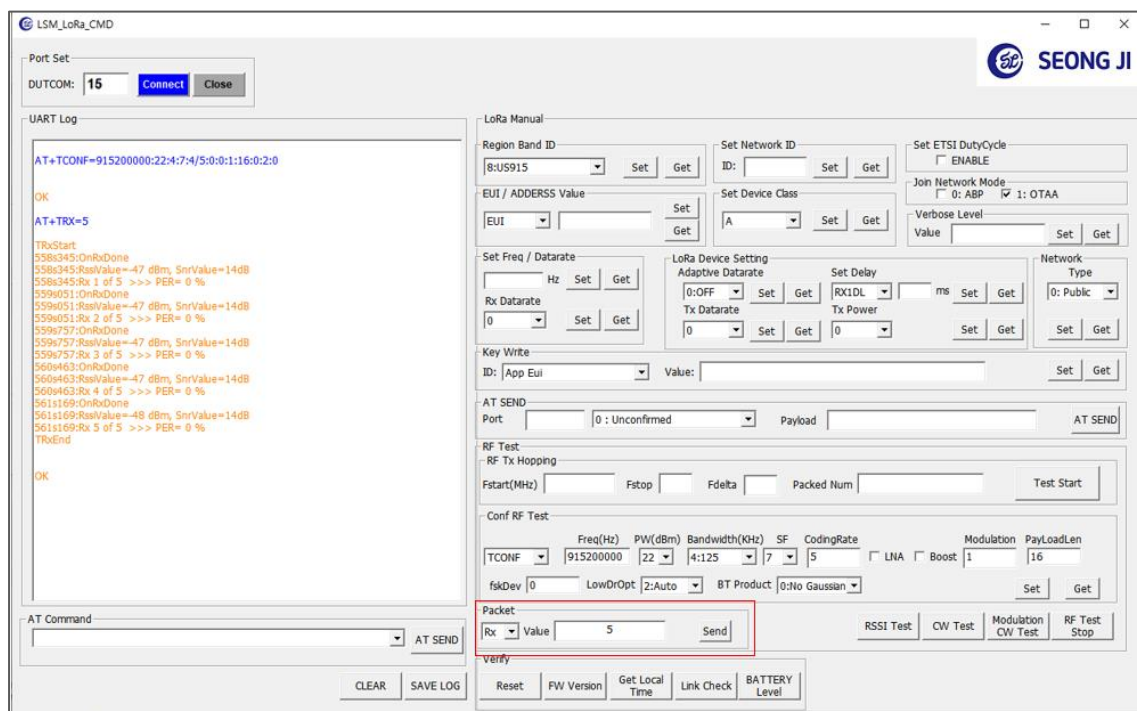

3.3.3 Sigfox command GUI

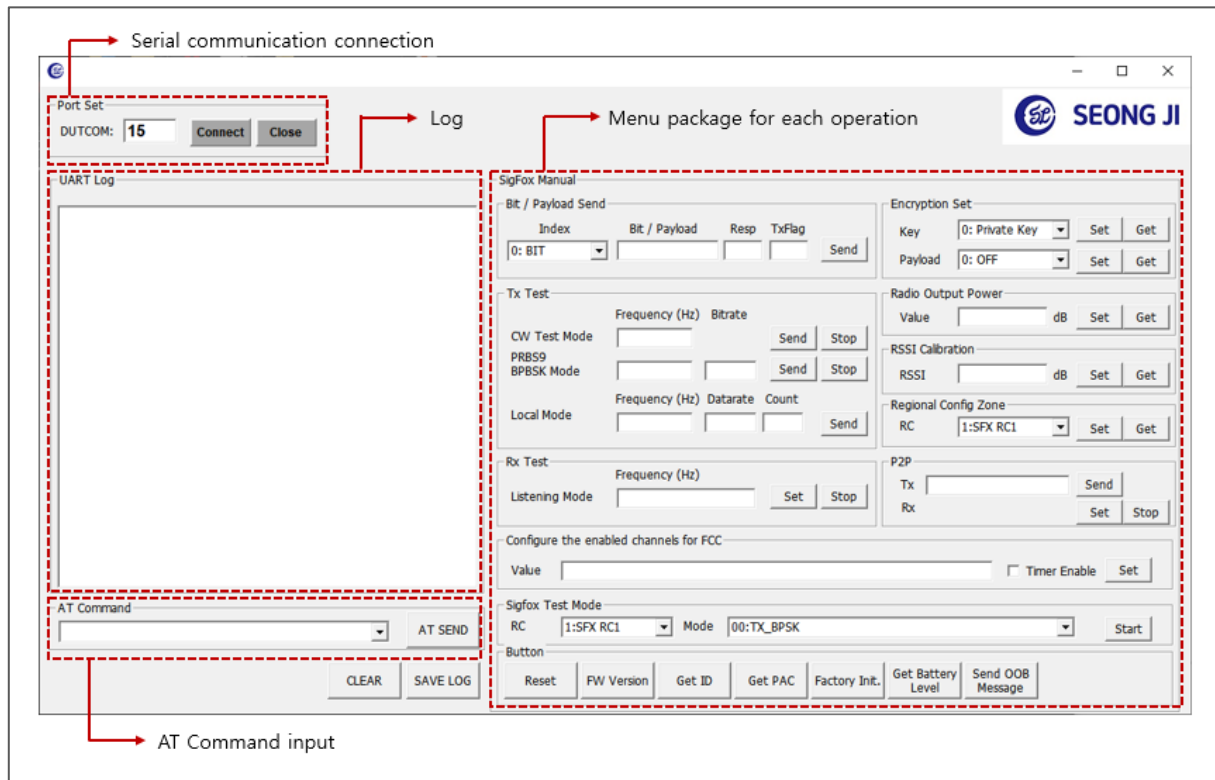


[Fig. Screen of execute Test program]

◎ The LSM110A supports only RC2/RC4 and doesn't support monarch

- 1) Write command on AT Command edit box located on left bottom and then click Send button to execute command. Configuration value list is defined on chapter "AT command complete set"
- 2) Instead of the item 2), can click button to execute on each AT command menu package on the right.

Example)

Command: ATS410=0 (CR) (0: private key 1: public key)



[Fig. Encryption Set Command]

3.3.4 Sigfox RF Test Description

- 1) Input AT Command command to LSM110A used as RX

EX) AT+RL=905200000

- 2) Test Result

- ➔ if received success display "TEST PASSED"
- ➔ if received fail display "Wait For End of Rx"

The screenshot shows the LSM_SigFox_CMD software interface. The 'Rx Test' section is highlighted with a red box. It contains the following fields and buttons:

- Rx Test:**
 - Listening Mode: 905200000
 - Buttons: Set, Stop

Other visible sections include:

- Port Set:** DUTCOM: 15, Connect, Close
- UART Log:** Empty text area
- SigFox Manual:**
 - Bit / Payload Send: Index (0: BIT), Bit / Payload, Resp, TxFlag, Send
 - Tx Test: CW Test Mode (902200000), PRBS9, BPBKS Mode, Local Mode, Frequency (Hz), Datarate, Count, Send, Stop
 - Encryption Set: Key (0: Private Key), Payload (0: OFF), Set, Get
 - Radio Output Power: Value, dB, Set, Get
 - RSSI Calibration: RSSI, dB, Set, Get
 - Regional Config Zone: RC (2:SFX RC2), Set, Get
 - P2P: Tx, Rx, Send, Stop
 - Configure the enabled channels for FCC: Value, Timer Enable, Set
 - Sigfox Test Mode: RC (1:SFX RC1), Mode (00:TX_BPSK), Start
 - Buttons: Reset, FW Version, Get ID, Get PAC, Factory Init., Get Battery Level, Send OOB Message
- AT Command:** AT SEND, CLEAR, SAVE LOG

- 3) Input AT Command command to LSM110A used as TX

EX) AT+CW=902200000

- ➔ Transmit frequency to Continuous wave

The screenshot shows the LSM_SigFox_CMD software interface. The 'Tx Test' section is highlighted with a red box. It contains the following fields and buttons:

- Tx Test:**
 - CW Test Mode: 902200000
 - Buttons: Send, Stop

Other visible sections include:

- Port Set:** DUTCOM: 15, Connect, Close
- UART Log:** Empty text area
- SigFox Manual:**
 - Bit / Payload Send: Index (0: BIT), Bit / Payload, Resp, TxFlag, Send
 - Encryption Set: Key (0: Private Key), Payload (0: OFF), Set, Get
 - Radio Output Power: Value, dB, Set, Get
 - RSSI Calibration: RSSI, dB, Set, Get
 - Regional Config Zone: RC (2:SFX RC2), Set, Get
 - P2P: Tx, Rx, Send, Stop
 - Configure the enabled channels for FCC: Value, Timer Enable, Set
 - Sigfox Test Mode: RC (1:SFX RC1), Mode (00:TX_BPSK), Start
 - Buttons: Reset, FW Version, Get ID, Get PAC, Factory Init., Get Battery Level, Send OOB Message
- AT Command:** AT SEND, CLEAR, SAVE LOG

4. AT command complete set

A typical serial terminal emulator can also be used to control the EVK instead of the proposed test SW. In that case the following parameters should be used:

- Speed : 9600 bauds
- Data bits: 8
- Stop bits: 1
- Parity: None

The following table gather all AT command available:

4.1 LoRa Command

Command	Name	Description
AT?	Help on all <CMD>	Help on All Commands. Ex) AT? (CR)
ATZ	Reset	Trig a MCU reset. Ex) ATZ (CR)
AT+BAT=?	Battery level	Get the battery level (in mV). Ex) AT+BAT=? (CR)
AT+VL=level AT+VL=?	Verbose level	Set or Get the verbose level. <level>: [0: off ~ 3: High] Ex) AT+VL=3 (CR)
AT+MODE=mode AT+MODE=?	Mode Change	LoRa & Sigfox Mode Change. After a MCU reset. <mode>: [0: SigFox, 1: LoRa] Ex) AT+MODE=1 (CR)
AT\$SSWVER=?	Software version	Get the Software version. Ex) AT\$SSWVER=? (CR)
AT+VER=?	Firmware and library versions	Get the version of firmware and libraries. Ex) AT+VER=? (CR)
AT+LTIME=?	Local time in UTC format	Get the local time in UTC format. Ex) AT+LTIME=? (CR)

Command	Name	Description
AT+LINKC?	Link Check	Piggyback a Link Check Request to the next uplink. Ex) AT+LINKC? (CR)
AT+APPEUI=eui AT+APPEUI=?	Application EUI	Set or Get the Application EUI. Ex) AT+APPEUI=00:00:00:00:00:00:07 (CR)
AT+NWKKEY=key AT+NWKKEY=?	Network Key	Set or Get the Network Key. Ex) AT+NWKKEY=00:11:22:33:44:55:66:77:88:99:AA:BB:CC:DD:EE:FF (CR)
AT+APPKEY=key AT+APPKEY=?	Application Key	Set or Get the Application Key. Ex) AT+APPKEY=00:11:22:33:44:55:66:77:88:99:AA:BB:CC:DD:EE:FF (CR)
AT+NWKSKEY=key AT+NWKSKEY=?	Network Session Key	Set or Get the Network Session Key. Ex) AT+NWKSKEY=00:11:22:33:44:55:66:77:88:99:AA:BB:CC:DD:EE:FF (CR)
AT+APPSKEY=key AT+APPSKEY=?	Application Session Key	Set or Get the Application Session Key. Ex) AT+APPSKEY=00:11:22:33:44:55:66:77:88:99:AA:BB:CC:DD:EE:FF (CR)
AT+DADDR=address AT+DADDR=?	Device address	Set or Get the Device address. If use 'AT+DADDR=address,1', Uplink count is maintained Ex) AT+DADDR=00:11:22:33 (CR) Ex) AT+DADDR=00:11:22:33,1 (CR)
AT+DEUI=?	Device EUI	Get the Device EUI. Ex) AT+DEUI=? (CR)
AT+NWKID=id AT+NWKID=?	Network ID	Set or Get the Network ID. <id>: [0 ~ 127]. Ex) AT+NWKID=100 (CR)
AT+JOIN=mode AT+JOIN=?	Join network with Mode	Join network with Mode. <mode> [0: ABP, 1: OTAA] Ex) AT+JOIN=1 (CR)

Command	Name	Description
AT+SEND=port:ack:data 	Send binary data	Send binary data with the application <Port> [1 ~ 199] <Ack> [0: unconfirmed, 1: confirmed] Ex) AT+SEND=1:1:123456789012345678901234567890 123456789012345678901234567890123456 (CR)
AT+ADR=mode AT+ADR=?	Adaptive DataRate	Set or Get the Adaptive DataRate setting. <mode>: [0: Off, 1: On] Ex) AT+ADR=0 (CR)
AT+DR=datarate AT+DR=?	Tx DataRate	Set or Get the Tx DataRate. Activation when ADR off Only <datarate>: [0 ~ 7] [AU915 : 2 ~ 7 / US915 : 0 ~ 4] 0: LoRa - SF12 / 125 kHz, bit rate - 250 bit/s 1: LoRa - SF11 / 125 kHz, bit rate - 440 bit/s 2: LoRa - SF10 / 125 kHz, bit rate - 980 bit/s 3: LoRa - SF9 / 125 kHz, bit rate - 1760 bit/s 4: LoRa - SF8 / 125 kHz, bit rate - 3125 bit/s 5: LoRa - SF7 / 125 kHz, bit rate - 5470 bit/s 6: LoRa - SF7 / 250 kHz, bit rate - 11000 bit/s 7: FSK - 50 kbps, bit rate - 5000 bit/s Ex) AT+DR=0 (CR)
AT+BAND=band AT+BAND=?	Active Region Band ID	Set or Get the Active Region Band ID. [0 ~ 9] <band>: [0,1: AS923-1, 1: AU915, 2: CN470, 3: CN779, 4: EU433, 5: EU868, 6: KR920, 7: IN865, 8: US915(default band), 9: RU864] Note: Bands are not saved when rebooting Ex) AT+BAND=0 (CR)
AT+TXP=power AT+TXP=?	Transmit Power	Set or Get the Transmit Power. (valid range according to region) <power>: [0 ~ 15] AS923: [0~7] AU915: [0~14] CN779: [0~5] EU868: [0~7] KR920: [0~7] IN865: [0~10] US915: [0~14] RU864: [0~7]

		<div>Ex) AT+TXP=0 (CR) (in KR920 0: MAX ERP)</div> <table><tr><th>TXPower</th><th>Configuration (EIRP)</th></tr><tr><td>0</td><td>Max EIRP</td></tr><tr><td>1</td><td>Max EIRP – 2dB</td></tr><tr><td>2</td><td>Max EIRP – 4dB</td></tr><tr><td>3</td><td>Max EIRP – 6dB</td></tr><tr><td>4</td><td>Max EIRP – 8dB</td></tr><tr><td>5</td><td>Max EIRP – 10dB</td></tr><tr><td>6</td><td>Max EIRP – 12dB</td></tr><tr><td>7</td><td>Max EIRP – 14dB</td></tr><tr><td>8..14</td><td>RFU</td></tr><tr><td>15</td><td>Defined in [TS001]Error! Bookmark not defined.</td></tr></table> <div>Table 71: KR920-923 TXPower</div>	TXPower	Configuration (EIRP)	0	Max EIRP	1	Max EIRP – 2dB	2	Max EIRP – 4dB	3	Max EIRP – 6dB	4	Max EIRP – 8dB	5	Max EIRP – 10dB	6	Max EIRP – 12dB	7	Max EIRP – 14dB	8..14	RFU	15	Defined in [TS001]Error! Bookmark not defined.
TXPower	Configuration (EIRP)																							
0	Max EIRP																							
1	Max EIRP – 2dB																							
2	Max EIRP – 4dB																							
3	Max EIRP – 6dB																							
4	Max EIRP – 8dB																							
5	Max EIRP – 10dB																							
6	Max EIRP – 12dB																							
7	Max EIRP – 14dB																							
8..14	RFU																							
15	Defined in [TS001]Error! Bookmark not defined.																							
AT+DEVNONCE=count AT+DEVNONCE=?	Devnonce count	<div>Set or Get Devnonce count</div> <div>Ex) AT+DEVNONCE=0</div> <div>Ex) AT+DEVNONCE=?</div>																						

Command	Name	Description
AT+CLASS=class AT+CLASS=?	Device Class	Set or Get the Device Class. <Class>: [A, B, C] Ex) AT+CLASS=? (CR)
AT+DCS=mode AT+DCS=?	ETSI DutyCycle	Set or Get the ETSI DutyCycle. <mode>: [0: disable, 1: enable] - Only for testing Ex) AT+DCS=0 (CR) (for KR920, AS923, AU915,...)
AT+RX2FQ=freq AT+RX2FQ=?	Rx2 window Freq	Set or Get the Rx2 window. After setting DR of Rx2, also Rx2C will be set <freq>: Frequency (in Hz) Ex) AT+RX2FQ=915200000 (CR)
AT+RX2DR=datarate AT+RX2DR=?	Rx2 window DataRate	Set or Get the Rx2 window DataRate. After setting DR of Rx2, also Rx2C will be set <datarate>: [0 ~ 13] AS923: [0~7] AU915: [2~13] CN779: [0~7] EU868: [0~7] KR920: [0~5] IN865: [0~5] US915: [8~13] RU864: [0~7] Ex) AT+RX2DR=0 (CR)
AT+RX1DL=delay AT+RX1DL=?	Delay between end of Tx and Rx Window 1	Set or Get the delay between the end of the Tx and the Rx Window 1. <delay>: delay (in ms) Ex) AT+RX1DL=1000 (CR)
AT+RX2DL=delay AT+RX2DL=?	Delay between end of Tx and Rx Window 2	Set or Get the delay between the end of the Tx and the Rx Window 2 in ms. <delay>: delay (in ms) Ex) AT+RX2DL=2000 (CR)
AT+JN1DL=delay AT+JN1DL=?	Join Accept Delay between end of Tx and Join Rx Window 1	Set or Get the Join Accept Delay between the end of the Tx and the Join Rx Window 1 in ms. <delay>: delay (in ms) Ex) AT+JN1DL=5000 (CR)

Command	Name	Description
AT+JN2DL=delay AT+JN2DL=?	Join Accept Delay between end of Tx and Join Rx Window 2	Set or Get the Join Accept Delay between the end of the Tx and the Join Rx Window 2 in ms. <delay>: delay (in ms) Ex) AT+JN2DL=6000 (CR)
AT+NWKTYPE=type AT+NWKTYPE=?	Network Type	Set or Get the Network Type setting Type <type>: [0: Public, 1: Private] Ex) AT+NWKTYPE=1 (CR)
AT+DEVNONCE=0 AT+DEVNONCE=?	OTAA DevNonce	Set to 0 or Get the OTAA DevNonce Ex) AT+DEVNONCE=0 (CR)
AT+CNFRETX=retxnb AT+CNFRETX=?	Confirmed Uplink Retransmission	Set or Get Number for the Confirmed Uplink Retransmission <retxnb>: [1 ~ 15] Ex) AT+CNFRETX=1 (CR)
AT+UNCNFRETX=retxnb AT+UNCNFRETX=?	Unconfirmed Uplink Retransmission	Set or Get Number for the Unconfirmed Uplink Retransmission <retxnb>: [1 ~ 15] Ex) AT+UNCNFRETX=1 (CR)
AT+PGSLOT=period AT+PGSLOT=?	Ping Slot	Set or Get the unicast ping slot Period <period>: [0:1s ~ 7:128s] (=2^Period) Ex) AT+PGSLOT=3 (CR)
AT+TTH=fstart:fstop:fdelt a:packetnb AT+TTH=?	Test Tx Hopping	Starts RF Tx hopping test from Fstart to Fstop in Hz or MHz, Fdelta in Hz. Class B test. <fstart>: frequency (in Hz or MHz) <fstop>: frequency (in Hz or MHz) <fdelta>: frequency (in Hz) Ex) AT+TTH=915:922:500000:10 (CR)

Command	Name	Description
AT+TCONF=frequency:power:bandwidth:sf:codingrate:lina:paboost:modulation:payloadlen:fskdeviation:lowdropt:btproduct AT+TCONF=?	Configure RF	<p>Configure RF test.</p> <p><Frequency>: [ex: 915200000]Hz <Power>: [-9 ~ 22]dBm Max 22dBm at High Power <Bandwidth>: Lora [4: 125, 5: 250, 6: 500]kHz, or FSK: [4800Hz : 467000]Hz <SF>: [7 ~ 12] or <FSK>: [600 ~ 300000] <CodingRate>: [4/5, 4/6, 4/7, 4/8] <Lna>: [0: Off, 1: On] <PA Boost>: [0: Off, 1: On] <Modulation>: [0: FSK, 1: LoRa, 2: BPSK] <PayloadLen>: [1 ~ 256] <FskDev>: FSK Only [600 ~ 20000] <LowDrOpt>: Lora Only [0: off, 1: On, 2: Auto] <BTproduct>: [0: no Gaussian Filter Applied, 1: BT=0,3, 2: BT=0,5, 3: BT=0,7, 4: BT=1]</p> <p>Ex) AT+TCONF=915200000:22:4:7:4/5:0:0:1:16:0:2:0 (CR)</p>
AT+TTONE	RF Tx Tone test	<p>Starts RF Tx Tone test (CW Test Mode)</p> <p>Ex)AT+TTONE (CR)</p>
AT+TRSSI	RF Rx RSSI test	<p>Starts RF Rx RSSI test.</p> <p>Ex) AT+TRSSI (CR)</p>
AT+TTX=packetnb	Test RF Tx	<p>Starts RF Tx test: Nb of packets sent.</p> <p>Ex) AT+TTX=16 (CR)</p>
AT+TRX=packetnb	Test RF Rx	<p>Starts RF Rx test: Nb of packets expected.</p> <p>Stop by input 'X'</p> <p>Ex) AT+TRX=16 (CR)</p>
AT+MTX	Test RF Modulation wave	<p>Starts RF Tx test: Modulation Continuous Wave</p> <p>Ex) AT+MTX (CR)</p>
AT+MRX	Test RF Continuous Rx	<p>Starts RF Rx test: Continuous receive</p> <p>Stop by input 'X'</p> <p>Ex) AT+MRX (CR)</p>

Command	Name	Description
AT+TOFF	Stop RF test	Stops on-going RF test. Ex) AT+TOFF (CR)
AT+CHMASK=mask AT+CHMASK=?	Channel Mask	Set Region Channel Mask Configurable mask Dynamic Channel(AS923, EU868, etc) – Channel mask[0] Fixed Channel(US915, AU915) – Channel mask[0:5] Ex) Dynamic channel: AT+CHMASK=0x7F (CR) Ex) Fixed channel: AT+CHMASK=0x7F,0000,0000,001F,0000,0000 (CR)
AT+BAUDRATE=baudrate AT+BAUDRATE=?	Set Baudrate	Set Baudrate Set baudrate to '9600' before setting 'Sigfox Mode' <Baudrate> [9600, 115200] EX) AT+BAUDRATE=9600 (CR)

Command	Name	Description
AT+PCONF=frequency:power:bandwidth:sf:codingrate:lina:paboost:modulation:payloadlen:fskdeviation:lowdr:opt:btproduct	P2P Configure	<p>Set or Get configure P2P.</p> <p><Frequency>: [ex: 915200000]Hz <Power>: [-9 ~ 22]dBm Max 22dBm at High Power <Bandwidth>: Lora [4: 125, 5: 250, 6: 500]kHz, or FSK: [4800Hz : 467000]Hz <SF>: [7 ~ 12] or <FSK>: [600 ~ 300000] <CodingRate>: [4/5, 4/6, 4/7, 4/8] <Lna>: [0: Off, 1: On] <PA Boost>: [0: Off, 1: On] <Modulation>: [0: FSK, 1: LoRa, 2: BPSK] <PayloadLen>: [1 ~ 256] <FskDev>: FSK Only [600 ~ 20000] <LowDrOpt>: Lora Only [0: off, 1: On, 2: Auto] <BTproduct>: [0: no Gaussian Filter Applied, 1: BT=0,3, 2: BT=0,5, 3: BT=0,7, 4: BT=1]</p> <p>Ex) AT+PCONF=915200000:22:4:7:4/5:0:0:1:16:0:2:0 (CR)</p>
AT+PSEND=data	P2P Data Send	<p>Send binary data with P2P.</p> <p>Ex) AT+PSEND=00112233445566778899AABBCCDDEE (CR)</p>
AT+PRECV	P2P Data Receive	<p>Starts P2P data receive.</p> <p>Stop by input 'X'</p> <p>Ex) AT+PRECV (CR)</p>

4.2 Sigfox Command

Command	Name	Description
AT?	Help on all <CMD>	Help on All Commands Ex) AT? (CR)
ATZ	Reset	Trig a MCU reset. Ex) ATZ (CR)
ATE=mode	Echo mode	Not used except to set echo mode. <mode>: [0: echo ON, 1: echo OFF] Ex) ATE=1 (CR) ATE=? (CR) Get echo mode
AT+BAT=?	Battery level	Get the battery level (in mV). Ex) AT+BAT=? (CR)
AT+VL=level AT+VL=?	Verbose level	Set or Get the verbose level. <level>: [0: off, 1: Low, 2: Meddle, 3: High] Ex) AT+VL=3 (CR) AT+VL=? (CR) Get level
AT+MODE=mode AT+MODE=?	Mode Change	LoRa & Sigfox Mode Change. After a MCU reset. <mode>: [0: SigFox, 1: LoRa] Ex) AT+MODE=1 (CR) AT+MODE=? (CR) Get mode
AT\$SSWVER=?	Software version	Get the Software version. Ex) AT\$SSWVER=? (CR)
AT+VER=?	Firmware and library versions	Get the version of firmware and libraries. Ex) AT+VER=? (CR)
AT\$RFS	Factory settings	Restores the factory setting. Ex) AT\$RFS (CR)
AT\$ID	Device ID	Get the 32-bit device ID. Ex) AT\$ID (CR)

Command	Name	Description
AT\$PAC	Device PAC	Get the 8-byte device PAC. Ex) AT\$PAC (CR)
AT\$SB=bit_value{,opt_responsewaited}{,opt_txflag}	Bit status	Send a bit to the Sigfox network. <bit_value>: [0 or 1] <opt_responsewaited> 0: no response waited (default) <opt_responsewaited> 1: response waited <opt_txflag> 0: one Tx frame sent <opt_txflag> 1: three Tx frame sent (default) Ex) AT\$SB=0,1,1 (CR) AT\$SB=1 (CR) sends bit 1 with no response waited. AT\$SB=0,1 (CR) sends bit 0 with a response waited. AT\$SB=0,1,1 (CR) sends bit 0 with a response waited and with three Tx frames sent.
AT\$SF=payload{,opt_responsewaited}{,opt_txflag}	ASCII payload in bytes	Send a frame to the Sigfox network. <payload>: [12 bytes maximum in ASCII format (24 ASCII characters max)] <opt_responsewaited>: [0: no response waited (default)] <opt_responsewaited>: [1: response waited] <opt_txflag>: [0: one Tx frame sent] <opt_txflag>: [1: three Tx frames sent (default)] Ex) AT\$SF=313245,1,1 (CR) AT\$SF=313245 (CR) sends 0x31 0x32 0x45 payload with no response waited. AT\$SF=313245,1 (CR) sends 0x31 0x32 0x45 payload with a response waited. AT\$SF=313245,1,1 (CR) sends 0x31 0x32 0x45 payload with a response waited and with three Tx frames sent.

Command	Name	Description
AT\$SH=payload_length, payload{,opt_responsewait ed}{,opt_txflag}	Hexadecimal payload in bytes	<p>Send a Hex frame to the Sigfox network.</p> <p><payload_length>: [length in bytes]</p> <p><payload>: [12 bytes maximum in hexadecimal format]</p> <p><opt_responsewait>: [0: no response waited (default)]</p> <p><opt_responsewait>: [1: response waited]</p> <p><opt_txflag>: [0: one Tx frame sent]</p> <p><opt_txflag>: [1: three Tx frames sent (default)]</p> <p>Ex) AT\$SH=1,A,1 (CR)</p> <p>AT\$SH=1,A (CR) sends 0x41 payload with no response waited.</p> <p>AT\$SH=1,A,1 (CR) sends 0x41 payload with a response waited.</p>
AT\$CW=freq	Continuous wave(CW)	<p>Start or stop a continuous unmodulated carrier for test. Run CW Test mode.</p> <p><freq>: frequency (in Hz)</p> <p>Ex) AT\$CW=902200000 (CR)</p> <p>AT\$CW=0 (CR) Stop a CW</p>
AT\$PN=freq,bitrate	PRBS9 BPBSK test mode	<p>Run PRBS9 BPBSK Test mode. Send a continuous modulated carrier for test.</p> <p><freq>: frequency (in Hz)</p> <p><bitrate>: 100 or 600</p> <p>Ex) AT\$PN=902200000,100 (CR)</p> <p>AT\$PN=0 (CR) Stop a BPBSK</p>
AT\$RC=rc	Sigfox RC setting	<p>Commands for changing and setting RC.</p> <p><rc></p> <p>RC2(default band) = 2 RC4 = 4</p> <p>Ex) AT\$RC=2</p>

Command	Name	Description
AT\$TM=rc,mode	Sigfox test mode	<p>Start a Sigfox test mode.</p> <p><rc></p> <p>SFX_RC1 = 1 SFX_RC2 = 2 SFX_RC3C = 3C SFX_RC4 = 4 SFX_RC5 = 5 SFX_RC6 = 6 SFX_RC7 = 7</p> <p><mode></p> <p>SFX_TEST_MODE_TX_BPSK = 0 SFX_TEST_MODE_TX_PROTOCOL = 1 SFX_TEST_MODE_RX_PROTOCOL = 2 SFX_TEST_MODE_RX_GFSK = 3 SFX_TEST_MODE_RX_SENSENSE = 4 SFX_TEST_MODE_TX_SYNTH = 5 SFX_TEST_MODE_TX_FREQ_DISTRIBUTION = 6 SFX_TEST_MODE_TX_BIT = 11 SFX_TEST_MODE_PUBLIC_KEY = 12 SFX_TEST_MODE_NVM = 13</p> <p>Ex) AT\$TM=2,0 (CR)</p>
AT\$RSSICAL=value AT\$RSSICAL=?	RSSI value in dB	<p>Set or Get the RSSI calibration value in dB.</p> <p><value>: calibration value (in dB)</p> <p>Ex) AT\$RSSICAL=0 (CR) AT\$RSSICAL=? (CR)</p>
AT\$RL=freq	Listening for a data packet	<p>Starts listening for a local loop.</p> <p><freq>: frequency (in Hz)</p> <p>Stop by input 'X'</p> <p>Ex) AT\$RL=905200000 (CR)</p>
AT\$SL=freq,datarate,count	Send local loop	<p>Send TX packet up to count number for local test.</p> <p><freq>: frequency (in Hz) <datarate>: data rate (in bps) <count>: send packets counter</p> <p>Ex) AT\$SL=905200000,600,10 (CR)</p>

Command	Name	Description
AT\$RP2P	P2P RX	Starts listening for the P2P. Stop by input 'X' Ex) AT\$RP2P (CR)
AT\$SP2P=payload	P2P TX	Send TX packet for the P2P. <payload>: [12 bytes maximum in ASCII format (24 ASCII characters max)] Ex) AT\$SP2P=112233445566778899AABBCC (CR)
ATS300	Out-of-band message	Send one keep-alive out-of-band message. Ex) ATS300 (CR)
ATS302=power ATS302=?	Radio output power	Set or Get the radio output power. <power> : power (in dBm) Ex) ATS302=22 (CR) ATS302=? (CR) Get power
ATS400= <8_digit_word0> <8_digit_word1> <8_digit_word2>,timer_enable	Enabled channels for FCC	Configure the enabled channels for FCC. Ex) ATS400=000000004000000000000000,0 (CR)
ATS410=key ATS410=?	Encryption key	Set or Get the configuration of the device encryption key. <key>: [0: Use Private key, 1: Use Public key] Ex) ATS410=1 (CR) ATS410=? (CR) Get the encryption key
ATS411=mode ATS411=?	Payload encryption	Set or Get the device payload encryption mode. <mode>: [0:Payload Encryption OFF, 1:Payload Encryption ON] Ex) ATS411=1 (CR) ATS411=? (CR) Get payload encryption