

Ag Irrigation-Pump Remote Control

Using Arduino-UNO and Digi-Xbee RF



Written By: Thomas G (01/2017)

Feel free to use: no strings attached (text content only / images respectfully referenced)

Table of Contents

1. INTRODUCTION	2	5.1 Build Electronics	11
2. TOOLS REQUIRED	2	5.1.1 Install Zigbee Shield	11
3. MATERIALS (BOM) - \$190.25	3	5.1.2 Build Screw-Terminal Perfboard	12
3.1 HV-Panel Components (\$87.75)	3	5.1.3 Build Dual-Power Perfboard	16
3.2 Electronic Components (\$54.63)	3	5.2 Hardware Assembly	17
3.3 RF Components (\$80.88)	4	5.2.1 Print Models (3D-Prints)	17
3.4 Miscellaneous Components	5	5.2.2 Install Components	18
4. HAND REMOTE	5	5.3 Install Firmware	18
4.1 Hardware Assembly	6	6. PUMP PANEL	18
4.1.1 Print Casing (3D-Prints)	6	6.1 Verify Current Setup	18
4.2 Electronics Assembly	6	6.1.1 Ditch Pump Setup	18
4.2.1 LCD Keypad Shield	6	6.1.2 Canal Pump Setup	19
4.2.2 Zigbee/Xbee Shield	7	6.2 Power Control	19
4.2.3 Active Buzzer	8	6.2.1 Install Power Supply	19
4.2.4 Install Xbee	8	6.2.2 Install Solid State Relay	19
4.2.5 Install Battery	8	6.2.3 Wire in Pump Controller	19
4.3 Firmware Upload	9	7. MONITORING ACCESSORIES	19
4.3.1 Uploading	9	7.1 Local Battery Meter	20
4.3.2 Customizing	9	7.2 Pressure Transducer (\$9.59)	20
4.4 Operation Instructions	10	7.3 Ultrasonic Water Level (\$10.77)	20
5. PUMP CONTROLLER	10	7.4 Water Meter	20

1. INTRODUCTION

The "**Ag Irrigation Pump Remote Control**" project's goal is to provide RF remote control and monitoring features of an Agriculture-Industry Irrigation Pump; typically used in wheel-line and hand-line irrigation setups. The project uses Xbee RF radio's with up to a 28-mile range (Specification of Xbee; but more practically when using at ground level - a mile or two). The project consists of a Hand-Held "**Hand Remote**" and a pole mounted "**Pump Controller**" as well as high voltage control electrical components to be mounted inside the pumps electrical panel.

The project is Open Source and Resides at: <https://github.com/tgit23/AgIrrigationRemoteControl>

The most recent version of this document can be gotten as a PDF at: <https://github.com/tgit23/AgIrrigationRemoteControl/AgIrrigationPumpRemoteControl.pdf>



Illustration 1: Hand Remote

2. TOOLS REQUIRED

The following tools are required to build the project components

- ✓ 3D-Printer
- ✓ Soldering Iron / Solder / Wire
- ✓ Screw Driver

3. MATERIALS (BOM) - \$190.25

3.1 HV-Panel Components (\$87.75)



Illustration 2: Power Supply



Illustration 3: Solid State Relay



Illustration 4: DIN Rail

- RHINO switching power supply, 24 VDC (adjustable) output, 2.5A, 60W, 320-600 VAC input, 3-phase, aluminum housing, 35mm DIN rail mount. (\$59.00)
 - [https://www.automationdirect.com/adc/Shopping/Catalog/Power_Products_\(Electrical\)/DC_Power_Supplies/24VDC, 3-Phase Input/PSB24-060S-3](https://www.automationdirect.com/adc/Shopping/Catalog/Power_Products_(Electrical)/DC_Power_Supplies/24VDC,_3-Phase_Input/PSB24-060S-3)
- Solid state relay, 35mm DIN-rail mount, 3-32 VDC input voltage, SPST, normally open SCR, 10A contact rating, 48-480 VAC load voltage, zero cross. (\$20.75)
 - [https://www.automationdirect.com/adc/Shopping/Catalog/Relays_-z- Timers/Solid_State_Relays/DIN_Mount_Relays_\(AD-SSR8_-z- AD-SSR2_-z- AD-SSR6_-z- AD-HSSR8_Series\)/General_Purpose_10A - 65A, \(AD-SSR8_-z- AD-SSR2_-z- AD-SSR6_Series\)/AD-SSR810-DC-48Z](https://www.automationdirect.com/adc/Shopping/Catalog/Relays_-z- Timers/Solid_State_Relays/DIN_Mount_Relays_(AD-SSR8_-z- AD-SSR2_-z- AD-SSR6_-z- AD-HSSR8_Series)/General_Purpose_10A_-_65A_(AD-SSR8_-z- AD-SSR2_-z- AD-SSR6_Series)/AD-SSR810-DC-48Z)
- DIN rail, slotted, 35mm, 10 mm height, 1m length, aluminum. Package of 2 (\$8.00)
 - [https://www.automationdirect.com/adc/Shopping/Catalog/Enclosures_-z- Subpanels_-z- Thermal_Management_-z- Lighting/Enclosure_Subpanels_-a- Internal Mounting Accessories/DIN Rails/DN-R35SAL1-2](https://www.automationdirect.com/adc/Shopping/Catalog/Enclosures_-z- Subpanels_-z- Thermal_Management_-z- Lighting/Enclosure_Subpanels_-a- Internal_Mounting_Accessories/DIN_Rails/DN-R35SAL1-2)

3.2 Electronic Components (\$54.63)

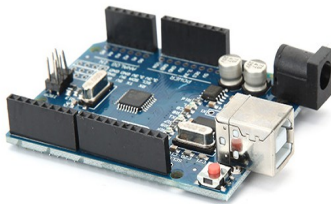


Illustration 5: Arduino UNO R3



Illustration 6: LCD Keypad Shield

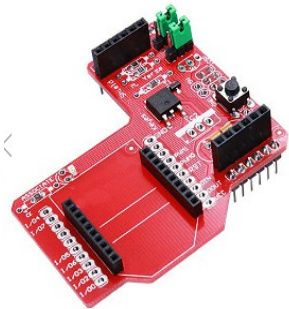


Illustration 7: Zigbee Shield




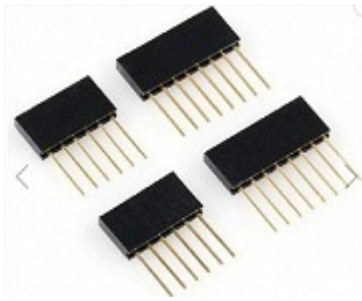


Illustration 8:
Rocker Switch

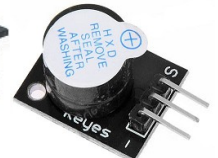


Illustration 9: Active
Buzzer

- (2) Geekcreit UNO R3 Atmega328P Development Board for Arduino (\$3.34/ea)
 - <http://us.banggood.com/Wholesale-Warehouse-UNO-R3-ATmega328P-Development-Board-For-Arduino-No-Cable-wp-Usa-964163.html>
- Keypad Shield Blue Backlight for Arduino Robot LCD 1602 Board (\$4.11/ea)
 - <http://www.banggood.com/Keypad-Shield-Blue-Backlight-For-Arduino-Robot-LCD-1602-Board-p-79326.html>
 - Resources
 - DFRobot Wiki LCD [https://www.dfrobot.com/wiki/index.php/Arduino_LCD_KeyPad_Shield_\(SKU:_DFR0009\)](https://www.dfrobot.com/wiki/index.php/Arduino_LCD_KeyPad_Shield_(SKU:_DFR0009))
 - Schematic <http://image.dfrobot.com/image/data/DFR0009/LCDKeypad%20Shield%20V1.0%20SCH.pdf>
 - Layout https://raw.githubusercontent.com/Arduinolib/DFRobot_LCD_keypad/master/DFR0009_Layout.png
- (2) Zigbee Shield RF Wireless Module Expansion Board for Arduino Xbee (\$4.83/ea)
 - <http://www.banggood.com/Zigbee-Shield-RF-Wireless-Module-Expansion-Board-For-Arduino-XBee-p-916226.html>
 - Resources
 - This Schematic is the right one <https://www.arduino.cc/en/uploads/Main/XbeeShieldSchematic.pdf>
 - <https://www.cooking-hacks.com/documentation/tutorials/xbee-arduino-raspberry-pi-tutorial/>
 - http://www.cooking-hacks.com/skin/frontend/default/cooking/pdf/arduino_XBee.pdf
- Active Speaker Buzzer Alarm (\$1.17)
 - <http://www.banggood.com/Arduino-Compatible-Active-Speaker-Buzzer-Alarm-Module-For-PC-Printer-p-76358.html?rmms=search>
- Black Snap-in On/Off Rocker Switch (\$3.34)
 - <http://www.banggood.com/20Pcs-Black-Push-Button-Mini-Switch-6A-10A-110V-250V-KCD1-101-2Pin-Snap-in-OnOff-Rocker-Switch-p-1096193.html>
- 20pcs 2 Pin Plug-in Screw Terminal Block Connector 5.08mm Pitch (\$2.15)
 - http://www.banggood.com/20pcs-2-Pin-Plug-in-Screw-Terminal-Block-Connector-5_08mm-Pitch-p-993197.html
- Fulree DC 8-35V to 1.5-24V Adjustable Buck Converter Power Supply Voltage Regulator For Car Truck Boat (\$7.99)
 - http://www.banggood.com/DC-8-35V-to-1_5-24V-Adjustable-Buck-Converter-Power-Supply-Voltage-Regulator-For-Car-Truck-Boat-p-1087176.html
- 40Pcs FR-4 Double Side Prototype PCB Printed Circuit Board (\$9.69)
 - <http://www.banggood.com/40Pcs-FR-4-Double-Side-Prototype-PCB-Printed-Circuit-Board-p-995732.html>
- 10P 2.54MM Stackable Long Connector Female Pin Header (\$1.19)
 - <http://www.banggood.com/Stackable-Long-Pins-Header-Connector-Female-Kit-p-88504.html>
- 30 Pcs 40 Pin 2.54mm Single Row Male Pin Header Strip For Arduino Prototype Shield DIY (\$3.99)
 - http://www.banggood.com/30-Pcs-40-Pin-2_54mm-Single-Row-Male-Pin-Header-Strip-For-Arduino-Prototype-Shield-DIY-p-1033757.html
- DIY 9V Battery Storage Container Box Case Holder With ON/OFF Toggle Switch (\$4.66)
 - <http://us.banggood.com/Wholesale-Warehouse-DIY-9V-Battery-Storage-Container-Box-Case-Holder-With-ONOFF-Toggle-Switch-wp-Usa-1086131.html>

3.3 RF Components (\$80.88)



- (2) Xbee-Pro 900Hp S3B Digimesh, 900Mhz, 250Mw, Rpsma Connector, 200Kbps (\$36.11/ea)
 - <https://www.arrow.com/en/products/xbp9b-dmst-002/digi-international>
- (2) Antenna Helical 3dB Gain 900MHz (\$4.33/ea)
 - <https://www.arrow.com/en/products/w1063/pulse-electronics-corporation>

3.4 Miscellaneous Components

- (3) Small Screws
- (4) 10K Resistors
- (1) Right-Angle 9Vdc Power Plug for Arduino Power Jack
- (2) Diodes
-

4. HAND REMOTE

The Hand Remote is the remote controller unit used to control the pump remotely, display the monitored values and notify the user of any malfunctions using alarm settings.

- ✓ Features
 - Buzzer alarm settings for monitoring values
 - Battery level indicator
 - Programmable Interface through USB

4.1 Hardware Assembly

4.1.1 Print Casing (3D-Prints)

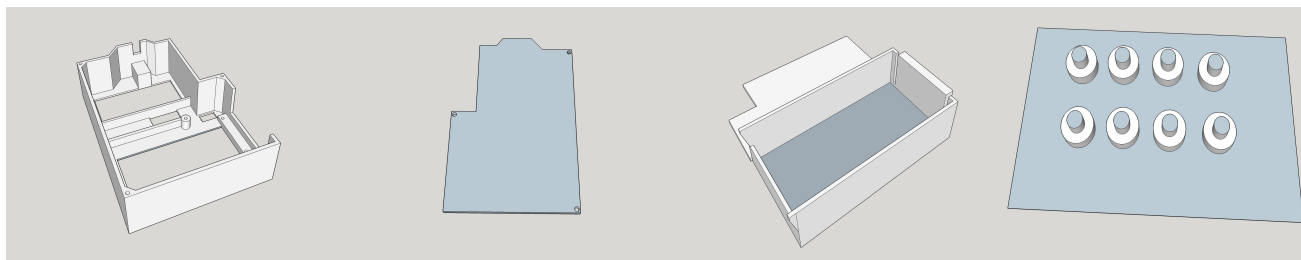


Illustration 10: Front Case

Illustration 11: Back Cover

Illustration 12: Battery Cover

Illustration 13: Buttons

✓ 3D-Prints

- Face WL-HandRemote-Case
- Back Cover WL-HandRemote-BackCover
- Battery Cover WL-HandRemote-BatteryCover
- Buttons WL-HandRemote-Buttons

4.2 Electronics Assembly

✓ The [HANDREMOTE](#) uses the following electronic parts

- 1- Arduino UNO R3 Board
- 1- LCD Keypad Shield
- 1- Zigbee Shield
- 1- Xbee-Pro 900Hp S3B Module
- 1- 9Vdc Battery Connector
- 1- Active Buzzer
- 1- Helical Antenna

✓ The following shows the Arduino UNO Pins used

PIN	LCD Usage	Xbee Usage	Accessory	PIN	LCD Usage	Xbee Usage	Accessory
SCL				5V			Piezo Voltage
SDA				RES			
AREF				3.3V			
GND				5V			
D13				GND			Piezo Ground
D12				VIN			
D11				A0	LCD Button		
D10	LCD Backlight Control			A1			
D9	LCD Enable			A2			
D8	LCD RS			A3			
D7	LCD DB7			A4			
D6	LCD DB6			A5			
D5	LCD DB5			ISCP 5VDC		Power for Xbee Shield	
D4	LCD DB4			ISCP GND		Power for Xbee Shield	
D3				ISCP RESET		Reset on Xbee Shield	
D2			Piezo Signal				
D1 (TX)		Xbee Shield					
D0 (RX)		Xbee Shield					


4.2.1 LCD Keypad Shield

1. Solder two 10K Resistors
 - a) One from VIN to A1
 - b) One from A1 to GND

The two resistors setup a voltage divider from the 9Vdc battery (which we will attach to VIN). Analog inputs on the Arduino should never exceed 5Vdc. The voltage divider will split the battery voltage to 1/2 its actual voltage. This will allow the hand-remote to monitor the battery level.


2. Solder Voltage Wires from ICSP Pin-Out
 - a) One (Red) wire from ICSP 5V Pin
 - b) One (Black) wire from ICSP GND Pin

These wires will feed the 5Vdc to the 'Active Buzzer' and the 'Xbee Shield' by its ICSP port. The Xbee Shield also implements a reset button; but we will not be attaching it since its usage shouldn't be needed.

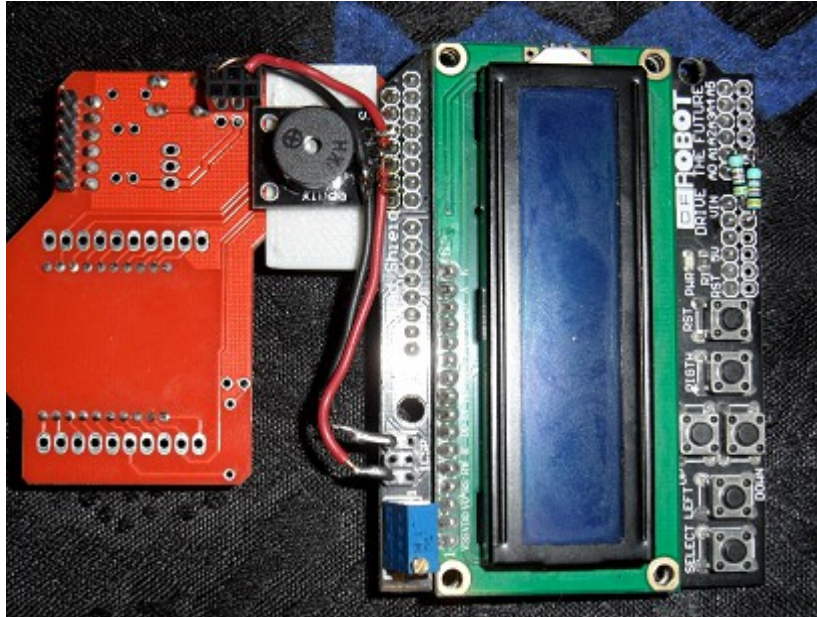

4.2.2 Zigbee/Xbee Shield

1. Solder Xbee Shield to the LCD Keypad (Flipped upside down)
 - a) Solder all pins into the holes of the LCD Shield
2. Proceed to step 'D' – Install Active Buzzer then proceed below
3. Connect Power to Xbee Shield
 - a) Cut to length, Strip and Plug (Red) wire into the ICSP Plug of the Xbee Shield as shown in picture above
 - b) Cut to length, Strip and Plug (Black) wire into the ICSP Plug of the Xbee Shield as shown in picture above
4. Now Install the LCD, Buzzer, Zigbee Combo into the Front Case
5. Remove Green Xbee Shield Jumpers and Solder their Center Pins to LCD Keypad (or Arduino UNO as pictured) D8 & D9 as shown below

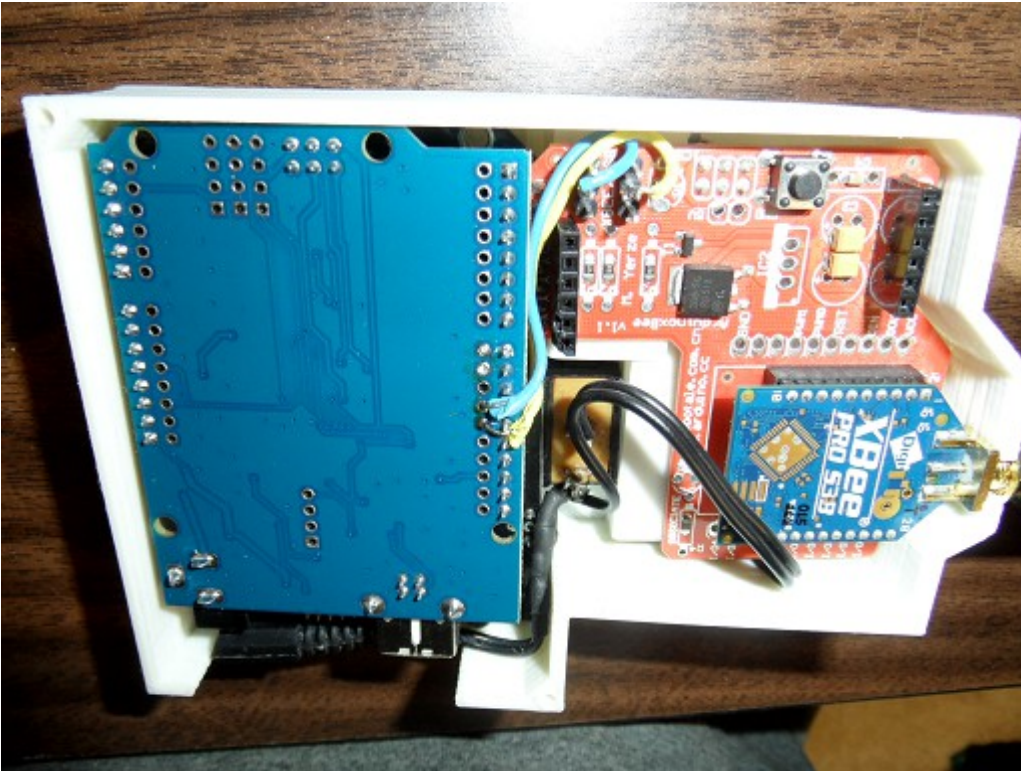

✓ Resources

- <https://www.arduino.cc/en/Main/ArduinoXbeeShield>
- <https://www.arduino.cc/en/Guide/ArduinoXbeeShield>

✓ Jumper Details

- Xbee Position = Xbee UART Serial connects to Arduino Serial
- USB Position = Xbee UART Serial connects to USB Serial (Computer)
- The Jumpers are aligned Top->Bottom Exactly the same as the Xbee DIN/DOOUT are aligned on the shield (DIN is closest jumper to Digital Pins Jack on Shield)

Since the Arduino uses Serial-0 for uploads and debug communication; we use the 'Software Serial' library and Digital Pins D8 & D9 for Serial Communications to and from the Xbee module.

4.2.3 Active Buzzer

1. Solder Buzzer 'S' pin to LCD Keypad Shield D2
2. Solder (Red) wire to Center pin
3. Solder (Black) wire to the Left Pin

The 'S' pin is bent back to connect to the solder joint on the LCD Shield. The Red/Black wires were not cut but the insulation was split using automatic wire strippers. The Center and Left Pins of the Buzzer were cut just long enough to solder wires to them.

4.2.4 Install Xbee

- ✓ Plug the Xbee Module into the Shield, Tighten the Nut and Screw in the Antenna

4.2.5 Install Battery

1. Route the 9Vdc Battery Power Plug from the front, around Xbee shield, to the back
2. Wire (Red) wire to one side of the switch
3. Wire (Black) wire to the 9Vdc Power Plug (Jack)
4. Wire (Red) wire from other side of switch to the 9Vdc Power Plug (Jack)

This Concludes the Electronic Hardware Assembly for the Hand Remote. Attach the Back Cover with screws and plug into the USB for Firmware uploading.

4.3 Firmware Upload

4.3.1 Uploading

1. Install Arduino Sketch IDE <https://www.arduino.cc/en/Main/Software>
2. Install the [PEERIO SERIAL CONTROL](#) Library
 - a) In a web-browser; go to <https://github.com/tgit23/PeerIOSerialControl>
 - b) On Green [CLONE OR DOWNLOAD](#) Choose [DOWNLOAD ZIP](#)
 - c) Save to a place you'll remember – like Documents or Desktop
 - d) Run the Arduino Sketch IDE
 - e) Choose Menu Item [SKETCH](#) → [INCLUDE LIBRARY](#) → [ADD .ZIP LIBRARY](#)
 - f) Select the [PEERIO SERIAL CONTROL](#) Library file saved in step 'b' above
3. Install [HANDREMOTE](#) Firmware
 - a) In a web-browser; go to <https://github.com/tgit23/AgIrrigationRemoteControl>
 - b) On Green [CLONE OR DOWNLOAD](#) Choose [DOWNLOAD ZIP](#)
 - c) Save to a place you'll remember – like Documents or Desktop
 - d) Unzip the Folder
 - e) In Arduino Sketch IDE choose [FILE](#) → [OPEN](#) and Select the File [HANDREMOTE.INO](#) within the folder unzipped in step 'd' above
 - f) Select the Port the [HANDREMOTE](#) USB is connected to; in Sketch menu [TOOLS](#) → [PORT](#)
 - g) Select the Board; Sketch menu [TOOLS](#) → [BOARD](#) → [ARDUINO/GENUINO UNO](#)
 - h) Press the Up-Arrow in the Top-Left Corner to upload the firmware onto the [HANDREMOTE](#)

The LCD should start showing readable characters. Use the [Operation Instructions](#) to verify its correct operation

4.3.2 Customizing

✓ Overview

- Downloaded firmware includes menu items for;
 - Pump Controller Selection - Ability to control multiple Pump Controllers from one Hand-Remote Unit
 - Power - Sets or Read the Pump Power as either ON or OFF
 - Water Level - An Accessory IO-Monitor to check the canal/ditch water level
 - Battery - Reads the Battery Voltage Level
 - Pressure - An Accessory IO-Monitor to check the water pressure
 - Alarms - Various Alarms for the monitoring readings above

The menu items are defined in the Setup-Menu Function identified by line 'void SetupMenu() {'. Each item in the Menu has a numeric index (i.e. Menu[Index-#]).

✓ To delete a Menu Item

- Find the menu items index (ie. Menu[Index]) you'd like to delete by identifying it by its' Menu[Index].Text setting
- Select ALL Menu[Index] lines with the same index
- Press delete
- Starting from the top make sure the indexes are in order; for example if you deleted [3], change [4] to [3], [5] to [4] and etc.. for all entries
- Up towards the top of the program (~line 50) change value of '#define MENUITEMS ?' to the number of menu items that exist now

✓ To add a Menu Item

- Start a new line below the last one defined and enter the attributes that need to be set
 - Menu[?].Text - The text that will display on the LCD
 - Menu[?].Value - Typically not set; holds the value of the item
 - Menu[?].ValueSettable - TRUE/FALSE determines if the user can change the value
 - Menu[?].ValueLocation - PROG/LOCALPIN/REMOTEPIN/EPROM; Determines where the value of the item is set/retrieved
 - Menu[?].Pin - Arduino Pin# associated with the item
 - Menu[?].Analog - TRUE/FALSE; Default is FALSE, Set to 'true' if using an Analog pin for the value
 - Menu[?].AlarmCompare - LESS/GREATER/EQUAL; Defines how an alarm will compare its limit value to the ValueIdx Value
 - Menu[?].AlarmValueIdx - The Menu[Index].Value this alarm item will compare itself with
 - Menu[?].Option[?].Poll - TRUE/FALSE; Default is true. Set to false if the value doesn't need to be refreshed and displayed

Options are how a limited amount of select-able items are defined for a value. For example ON or OFF would be two options.

- Menu[?].Option[?].LastOption - Counting from 0-> ; How many options are defined
- Menu[?].Option[?].Text - Option[?].Text defines an option that can be selected like 'ON'
- Menu[?].Option[?].DrivePin - Option[?].DrivePin LOW or HIGH when this option gets selected

- Up towards the top of the program (~line 50) change value of '#define MENUITEMS ?' to the number of menu items that exist now

4.4 Operation Instructions

5. PUMP CONTROLLER

✓ Features


- Back-up Arduino power source for when power is lost (Track time off and turn-back-on automatically)
 - Back-up battery level indicator and possible charge circuit
- Timer and Logger of events

✓ Automation

- Automatically turn off the pump if no water exists
- Automatically re-start pump if a power failure has occurred
- Set to Automatically turn on pump when water height is okay

5.1 Build Electronics


Wiring Diagram of the [PUMP CONTROLLER](#) - (Arduino Base → Zigbee Shield → Screw Terminal Perfboard)

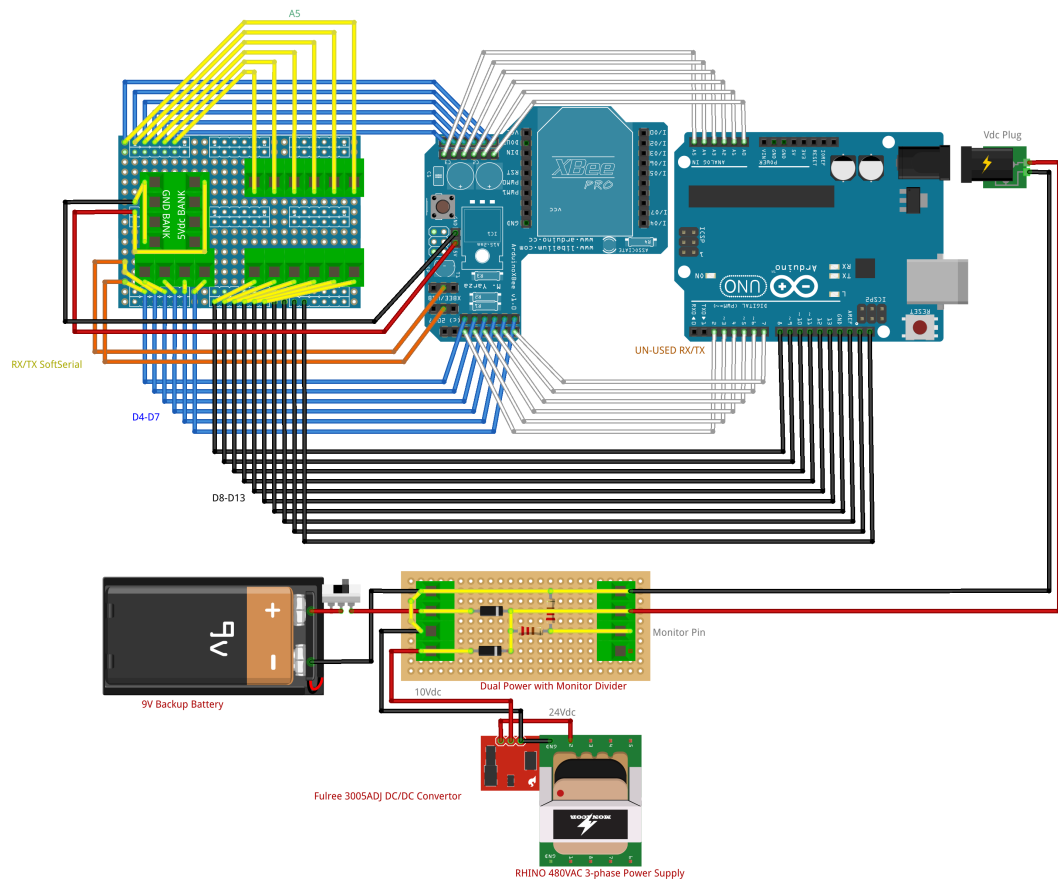

fritzing

5.1.1 Install Zigbee Shield

1. Remove the Jumpers from the (XBEE/USB) Headers
2. Solder a New 2-Pin Male Header into the Holes for (GND / 5V) as shown below
3. Plug the Zigbee Shield onto the Arduino UNO
4. Plug the Xbee PRO S3B Module into the Zigbee Shield

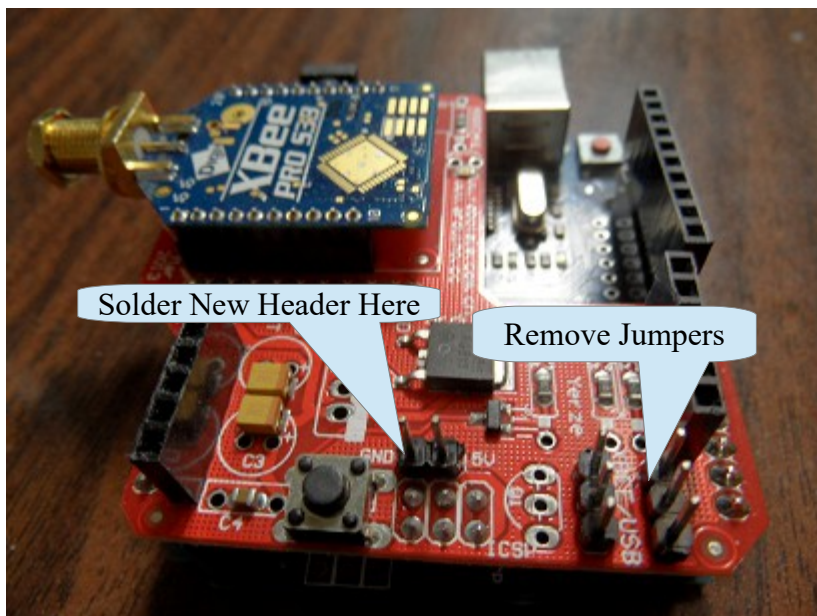

5.1.2 Build Screw-Terminal Perfboard

Note: Its important to plug in all the headers BEFORE soldering them in, to get a proper alignment

1. Plug a 2, 4, or 6P Female header onto the (GND/5V) male header you soldered onto the Zigbee Shield in Section 5.2.1
2. Plug a 2, 4, or 6P Female header across the CENTER pins of the (XBEE/USB) male header the jumpers were removed from in Section 5.2.1
3. Plug 6P Male headers onto the two 6P – Female headers which are part of the Zigbee Shield
4. Plug a Long 10P Female Header into the Arduino to extend D8-D13 up to the same level as the Zigbee Female Headers
5. Plug a 10P Male header into the Long 10P Female Header just attached in Step #4 above.
6. Drop the 5cm x 7cm Perf board onto the top of the Zigbee Shield lining up the headers plugged in above to their nearest Perf Board hole.
7. Solder the header pins to the top of the Perf board sitting on the Zigbee Shield

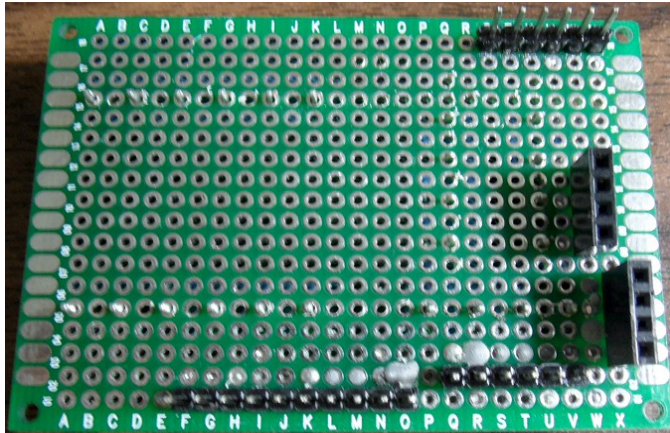


Illustration 14: Under-side with headers facing right




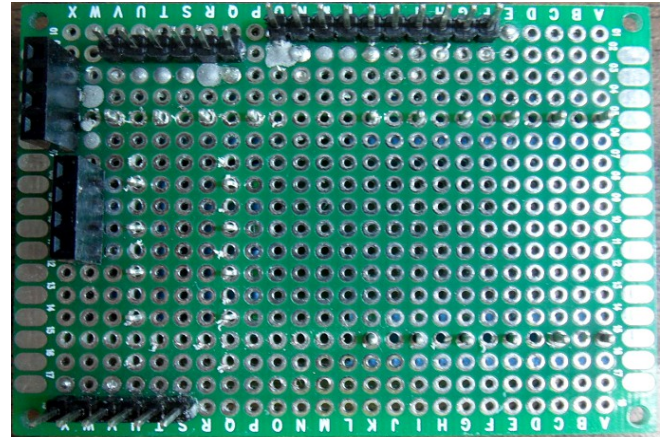


Illustration 15: Under-side with other facing left

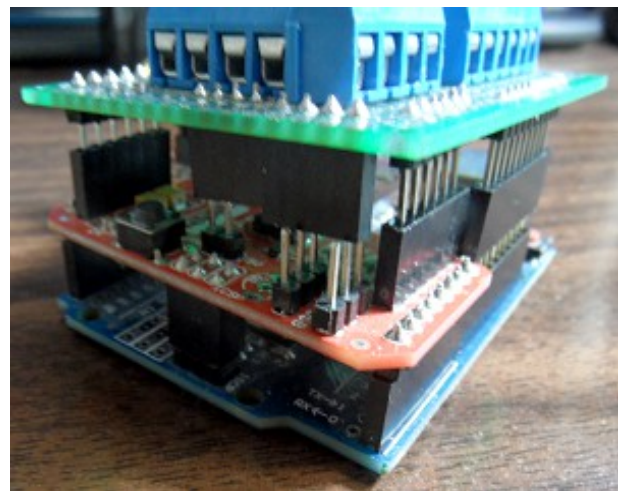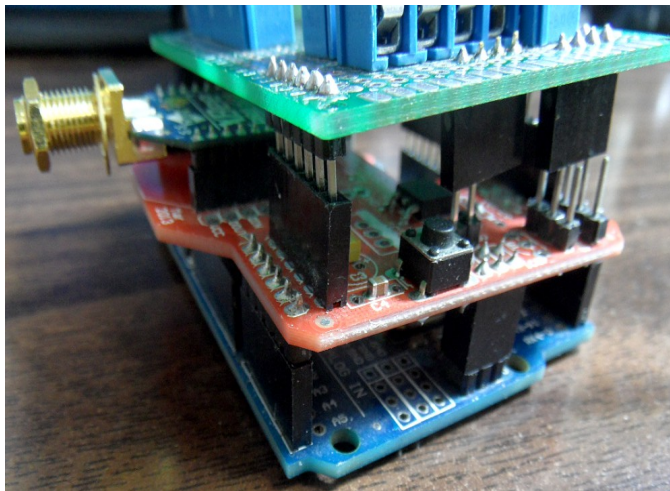


8. Organize and Prep the Screw Terminals

- a) Slide together the Screw-Terminals into **(2) 6-Screw** and **(3) 4-Screw** sets (*Notice: Blocks have slide together seams on their edges*)
- b) **Temporarily** insert them into the Perfboard as shown below
 - EITHER pinch the pins with pliers until they fit inside the holes
 - OR the Perfboard holes can be drilled out to 1.1mm in order to get a proper fit.

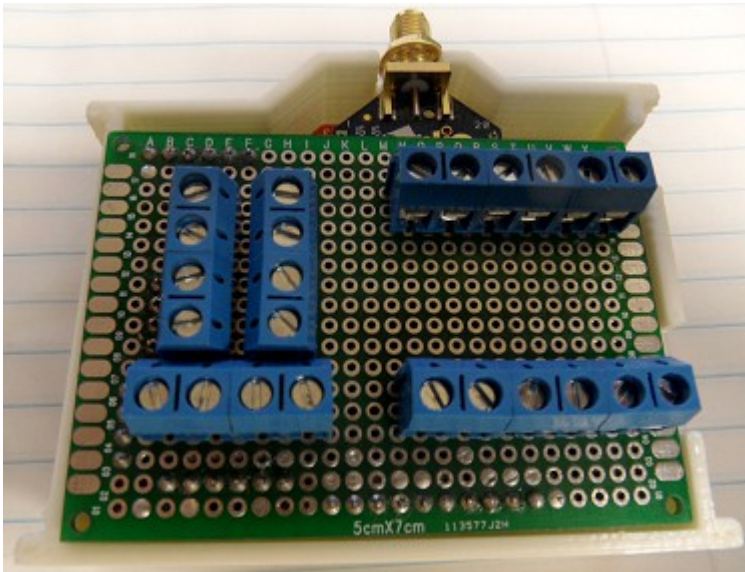


9. Solder in the jumper wires

- a) Use copper hard-core breadboard jumper wire
- b) 1st - Fill the holes the wires will be inserted into with solder
- c) 2nd - Strip one end about 1/2" from the end
- d) 3rd - Heat the solder and insert the wire down to the insulation. The cooling solder will stabilize the wire
- e) Repeat for all holes shown below next to the Male Headers and the GND/5V Female Header
 - Refer to Wiring Diagram @ [Section 5.2](#)

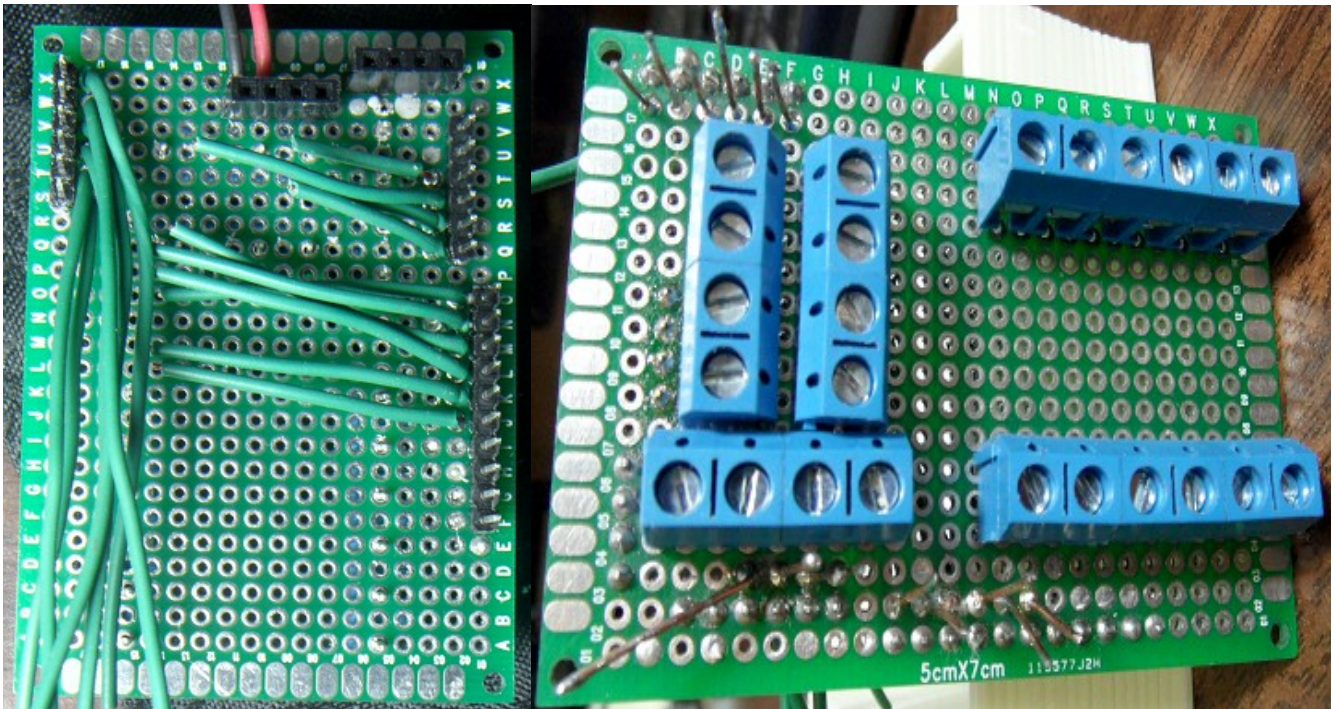


10. Solder the Top-Side jumper wires to the Pin Headers

a) Cut to length, bend-over, and Solder jumper wire ends to Header Pins

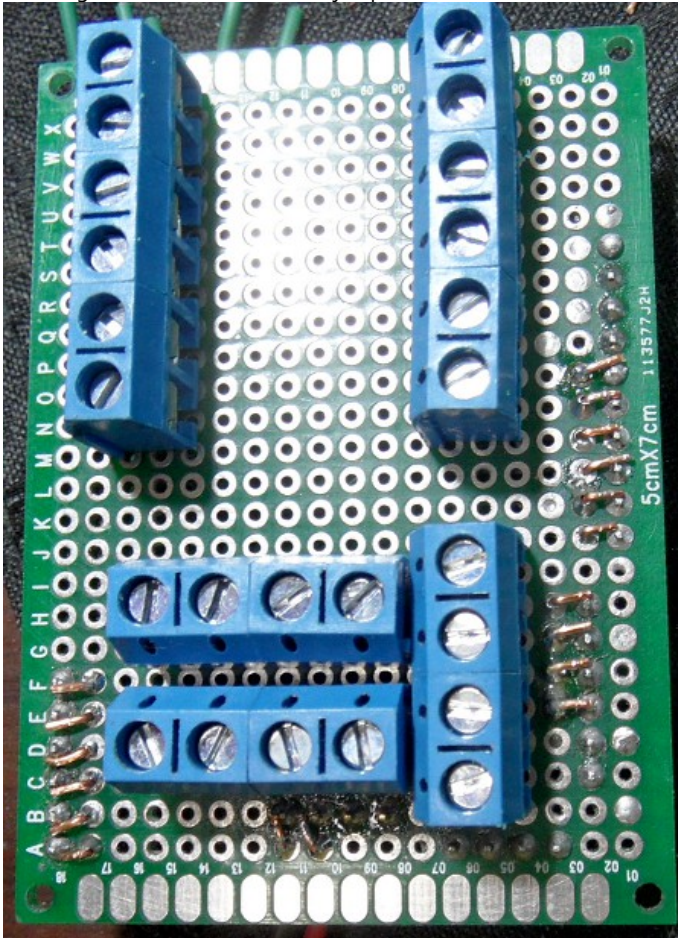


11. Attach two Top-Side Jumpers from A2 → XBEE DIN and A3 → XBEE DOUT

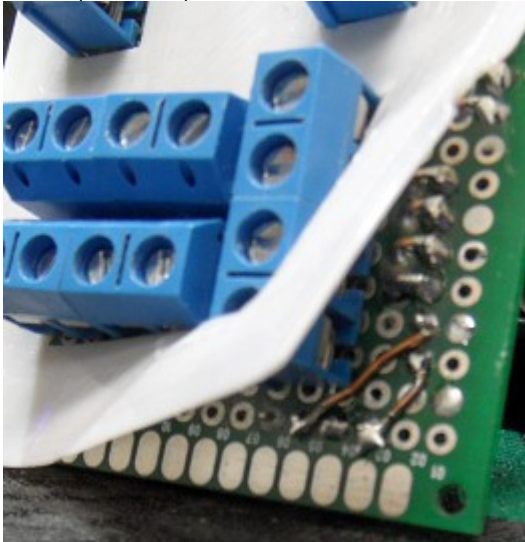

12. Finally Install the Screw Terminal Blocks


- a) Remove the Screw Terminal Blocks from the Perfboard
- b) Place the Plastic Lining (3D-Prints) as shown above over the Perfboard aligned so the Terminal Blocks can be placed in the openings
- c) Turn the Perfboard over and Cut, Strip and Solder the Jumper Wires to their Destination
 - Again Refer to Wiring Diagram @ [Section 5.2](#)

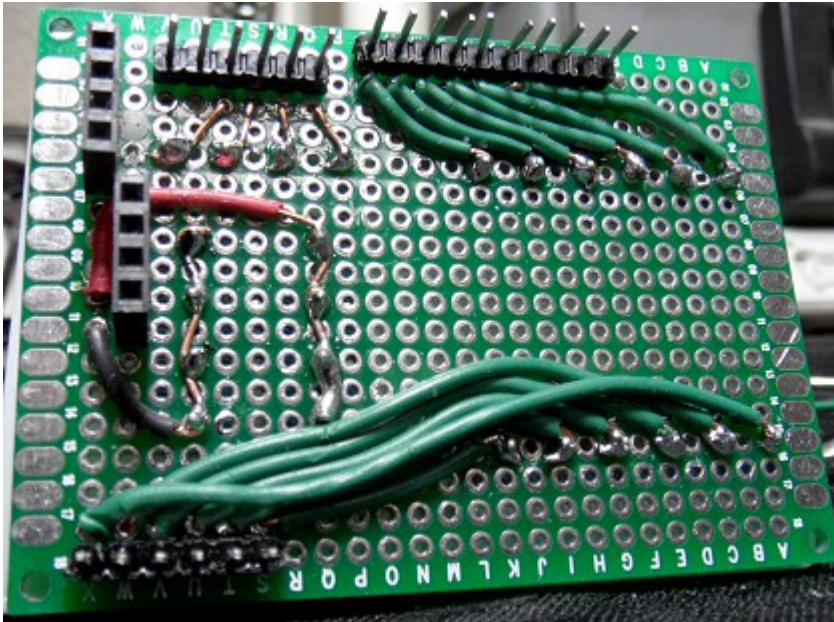


13.

5.1.3 Build Dual-Power Perfboard

1. Using a 3cm x 7cm Perfboard
2. Install Components
 - a) (2) Diodes – Any 1/4 Watt Diode Will do
 - b) (2) Resistors – Diagram shows a (910K Diodes → 330K → GND), However any values that produce a voltage divider less than 1/2 will work.
 - c) (2) 4-Screw Terminal Blocks Assemblies
 - d) Solder the leaded components onto the board from the top-side for stability

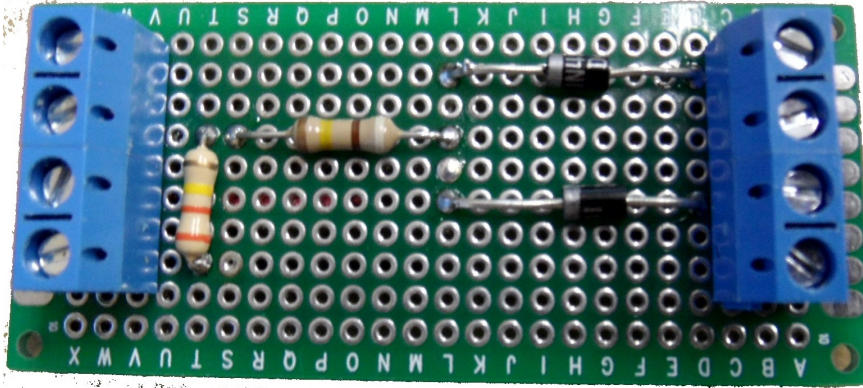

3. Solder Connections

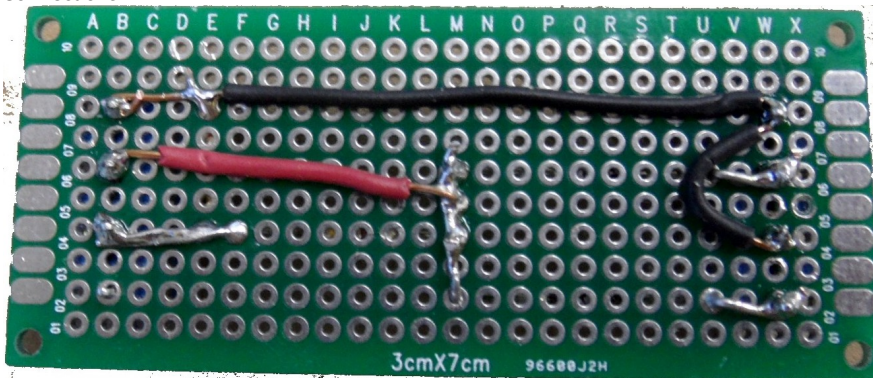

5.2 Hardware Assembly

5.2.1 Print Models (3D-Prints)

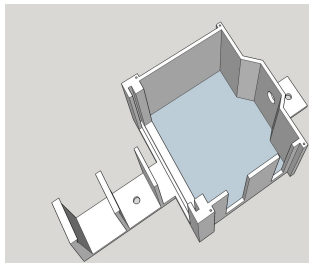


Illustration 16: Cover.stl

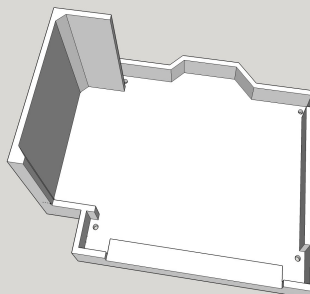


Illustration 17: CaseCover.stl



Illustration 18: ScrewTerminal-PCB-Cover

5.2.2 Install Components

5.3 Install Firmware

6. PUMP PANEL


Most 3-phase irrigation pumps that do not have variable frequency drives(VFD) or inverters are setup similarly. Below is the details of two pump panels as an **example or reference** to the pump power circuit. This information was gathered to determine the wiring and power needed to control the pumps power.

6.1 Verify Current Setup

6.1.1 Ditch Pump Setup

✓ Details

- Box - Eaton Irrigation Pump Control Type 3R Enclosure Rainproof
 - <http://www.eaton.com/Eaton/ProductsServices/Electrical/ProductsandServices/AutomationandControl/EnclosedControl/NEMA/PumpPanels/index.htm>

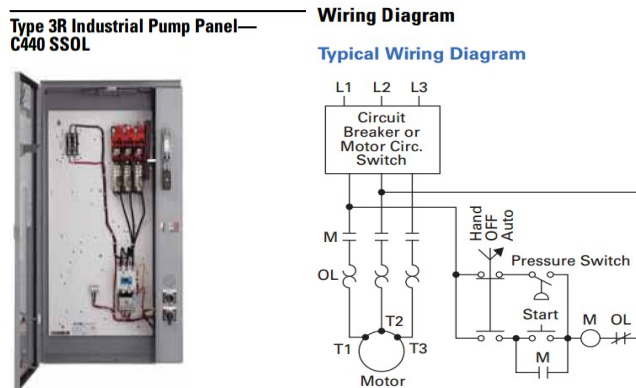

- Starter Contactor - Eaton-Cuttlr/Hammer 45-Amp Model # AN16GNO Series B1 (Need to check Contactor Model #)
 - MODEL # Decoding
 - A = Starter
 - N = NEMA
 - 1 = Non-Reversing
 - 6 = Starter w/C306 Over Load Relay
 - G = NEMA Size #2 (45-Amp)
 - N = Normally Open
 - O = Horizontal Mount
 - <https://www.galco.com/buy/Cutler-Hammer-Div-of-Eaton-Corp/AN16GN0AB>
 - <http://www.eaton.com/Eaton/index.htm>
 - <http://www.eaton.com/Eaton/ProductsServices/Electrical/ProductsandServices/AutomationandControl/ContactorsStarters/ElectromechanicalContactorsandStarters/FreedomSeries/FreedomSeries/index.htm#tabs-2>



- Starter Contactor (Coil) Amperage
 - See Page 9 "AC COIL DATA" for NEMA Size #2 Shows 230VA(Volt-amperes which is VA=V*A) so 230VA/480Vac = 0.479Amps @ 480V
 - http://www.eaton.com/ecm/idcplg?IdcService=GET_FILE&allowInterrupt=1&RevisionSelectionMethod=LatestReleased&noSaveAs=0&Rendition=Primary&dDocName=998056282226
- Auxiliary Contact - Cutler Hammer Model #C320KGS1 10-Series A2 (480VAC @ 1.5 Amps?)

6.1.2 Canal Pump Setup

- ✓ Details
 - Box by Cutler-Hammer
 - Need to get more details later after opening the enclosure
 - Capacitor = Model #9L18BBB301 650VAC 1-1-1 MFD

6.2 Power Control

BE SURE THE MAIN BREAKER IS TURNED OFF AND CAREFULLY CHECK THAT THERE IS NO VOLTAGE ON THE BREAKER WITH A PROPER METER!!! 480VAC is deadly; and can cause severe flash burn (e.g. A meter on the wrong setting can "flash" explode causing "flash" burns on you even at a distance away)

See <https://www.youtube.com/watch?v=6hpE5LYj-CY>

6.2.1 Install Power Supply

1. Cut DIN Rail to length that will comfortably fit the Power Supply, Solid State Relay, and Fulree DC/DC Converter
2. Using tapped screws fasten the DIN rail horizontally in an open space within the Pump Panel
3. Attache the RHINO power supply to the DIN rail
4. Wire L1, L2, L3 of the RHINO Power Supply to the Top Terminals of the Starter Contactor

6.2.2 Install Solid State Relay

1. Attach the Solid State Relay next to the Power Supply on the DIN Rail
2. Wire Connector 15 → Auto Position of the HAND-OFF-AUTO switch
3. Wire Connector 16 → M auxiliary contact on the right side of the Starter Contactor

6.2.3 Wire in Pump Controller

1. Mount the 'Pump Controller' Box up high on the telephone pole or on-top of the Pump Panel
2. Wire the Solid State Relay (A1) Connector to the Pump Controller D5 Pin
3. Wire the Solid State Relay (A2) Connector to the GND on the Pump Controller
4. Wire the 24Vdc(+) from the Power Supply to the Pump Controller
5. Wire the 24Vdc(-) from the Power Supply to the Pump Controller

7. MONITORING ACCESSORIES

7.1 Local Battery Meter

- ✓ (2) 10K Ohm Resistors
- ✓

7.2 Pressure Transducer (\$9.59)



- ✓ 5V 0-1.2 MPa Pressure Transducer Sensor Oil Fuel Diesel Gas Water Air Sensor
 - <http://www.banggood.com/Pressure-Transducer-Sensor-Oil-Fuel-Diesel-Gas-Water-Air-Sensor-p-1007341.html>

- \$9.59

7.3 Ultrasonic Water Level (\$10.77)



- ✓ DC 5V Waterproof Ultrasonic Module Distance Measuring Transducer Sensor

- <http://www.banggood.com/DC-5V-Waterproof-Ultrasonic-Module-Distance-Measuring-Transducer-Sensor-p-1094462.html>

- \$ 10.77

7.4 Water Meter