

TrainSpeedo Rev. 1.0

Description


The project is based on this source:

<https://dcc-arduino.weebly.com/scale-speedometer.html>

Introduction

This project is a "real size" speedometer for miniature trains, cars and anything you wish to measure.

It can calculate the speed of the object between 2 measuring points along the track (or road) by counting milliseconds between passages at the start and end gates. If you enter the distance between those gates (in dm) and the used scale (ex. H0 = 1:87) in to the Arduino, it will calculate the actual "real" speed of the object if it were on a 1:1 scale in the real world. This is a useful tool for measuring and calibrating the speed of your model trains on the layout, in order to be able to set and control their speed in the PC or central station for a realistic run on the tracks.

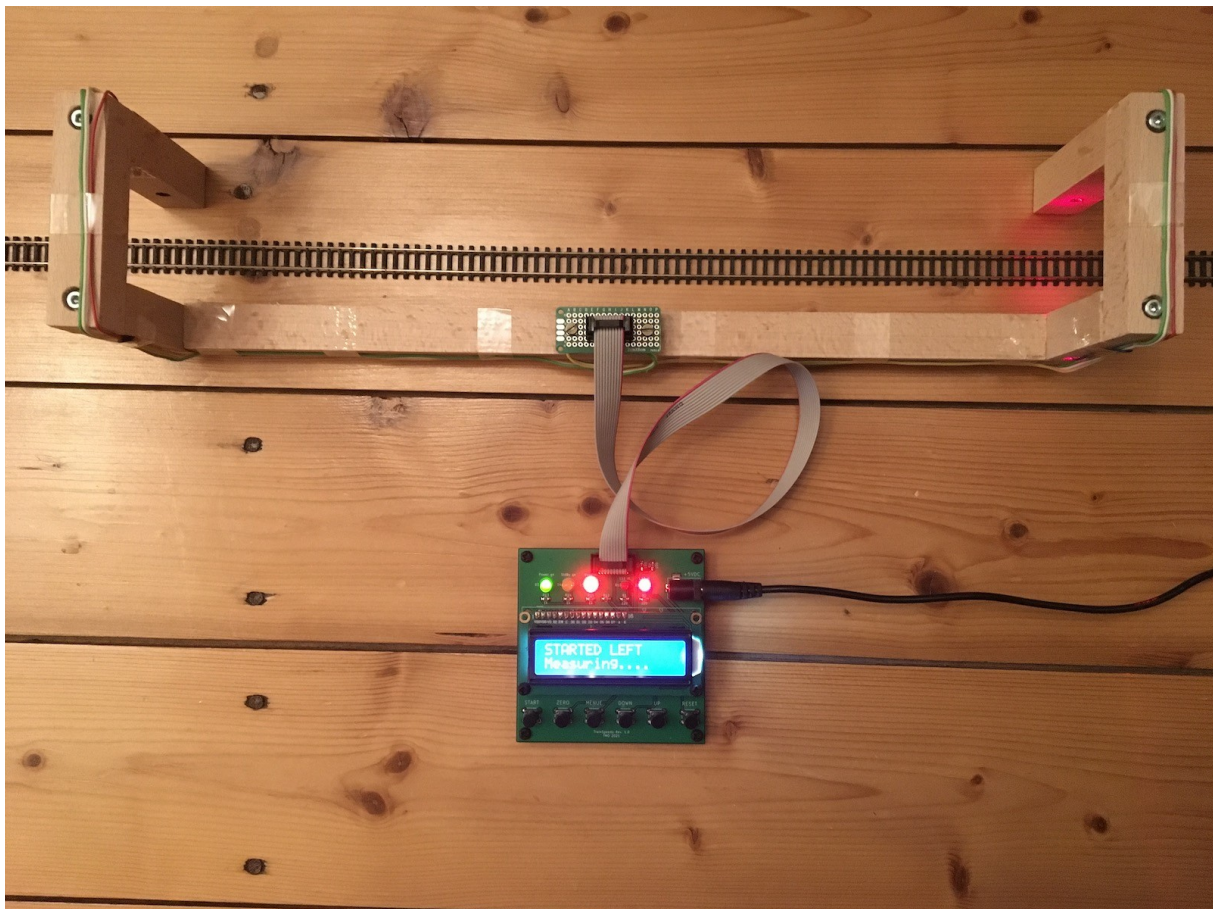

2 detectors are set up along the track, at a known distance (in dm) from each other. When a train runs by one of the detectors, the timer is started, the switch is auto-disabled (to eliminate double counts or other forms of interference) and only when the object passes by the other detector, will the timer be stopped and will the module calculate the speed based on time , distance and scale factors.

Due to the auto-disable function of the detectors, the system can calculate either LTR or RTL (left to right or right to left) moving objects with the same accuracy.

The commands :

-- **START** button : use this one to trigger the circuit and put it in stand-by so it will start measuring when an object enters the test track section.

-- **ZERO** button : to clear the display or to interrupt an ongoing measurement (bypass)

-- **MENU** button : enters the 3 menu levels

* first push : enter the menu and go to the input screen for track length


* 2nd push : record the current setting and go to screen for scale input

* 3rd push : record the scale factor and go to the confirm / exit screen

* 4th push : confirm and store the new values or return to old ones and then go to main mode. (exit menu)

-- **UP / DOWN** buttons : used to increment / decrement or change the values in the menu screen.

-- **RESET** button (optional) : for a full reset of the device (however, scale and length are stored in EEPROM and will be remembered)

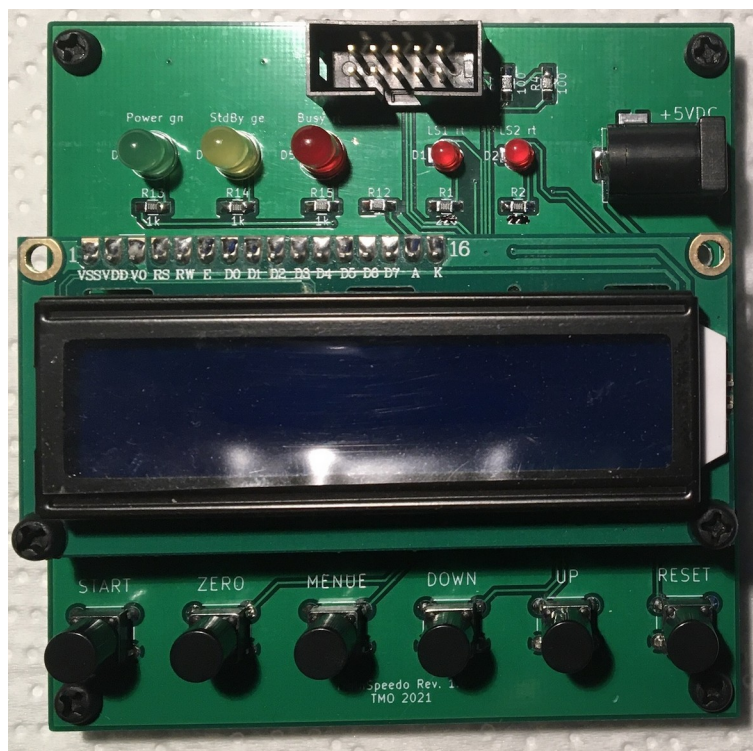

Detection

Detection is done using two Laser-LED / Transistor combinations, which create a "light vault" at each end of the measuring track/road.

The switching is "to ground" so when an object breaks the beam, the counter will start.

instead of IR vaults, you can also use conventional switches (contact switches), reed switches (magnetic), manual switches (like a stopwatch works) or any kind of detection that can switch a contact to ground.

Speed conversion formulas

We measure the distance between detectors in dm (decimeters) .

We measure the time in ms (milliseconds).

We measure the scale in units (ex. 87 = scale H0 = 1:87, 160 = Scale N = 1:160) after some calculations (1000 ms in a second -- 1 m/s = 3.6 km/h -- 100 mm in a dm) here is the formula :

$$\text{speed (km/h)} = 360 * \text{Distance (dm)} * \text{Scale (units)} / \text{Time (ms)}$$

So a train covering 6 dm in 3838 ms at scale H0 (87) would be going 48 km/h in reality.

BOM

Reference	Value	Package	Part
C1, C2	22p	SMD 0805	Ceramic capacitor
C3	100n	SMD 0805	Ceramic capacitor
D1, D2	red	3mm THT	Led
D3	green	5mm THT	Led
D4	yellow	5mm THT	Led
D5	red	5mm THT	Led
LD1, LD2	red	6x14mm 650nm	Laser diode
R1, R2	1k	SMD 0805	Resistor
R3, R4	100	SMD 0805	Resistor
R5, R6, R9, R10	2k2	SMD 0805	Resistor
R7, R8, R11	10k	SMD 0805	Resistor
R12	75	SMD 0805	Resistor
R13, R14, R15	1k	SMD 0805	Resistor
RV1	10k	RM-065 THT	Trimmer
Q1, Q2	SFH300	5mm THT	Phototransistor
Q3, Q4, Q5, Q6	BC337	TO-92	Transistor NPN
SW1, SW2, SW3	6x6x6 mm	THT	Push-Switch

SW4, SW5, SW6	6x6x6 mm	THT	Push-Switch
U1	ATmega328-AU	TQFP-32 7x7mm pitch 0,8mm	Microcontroller
U2	RC1602A	Various	Display unit
U2	1x16	Female straight RM2,54	Connector
Y1	16MHz	HC49-U vertical	Crystal
J1	Barrel Jack	Female 5,5mm / 2,1mm	Connector
J2	2x5	Female straight RM2,54	Connector
J3	2x3	Male straight RM2,54	Connector
J4	1x2	Male straight RM2,54	Connector
J5	2x5	Male straight RM2,54	Connector

Power supply

A plug-in power supply with output 5VDC 1-3A with a barrel connector 5.5mm / 2.1mm can be used. The positive pole must be on the inside.



Building the firmware

The firmware was created with the Arduino software 1.8.15. For this it is necessary to integrate the minicore library into the Arduino software.

<https://github.com/MCUdude/MiniCore>

The following parameters are to be set in the Tools menu:



The next step is to compile and export the firmware in the Sketch menu.



Now two .hex files have been created. The hex file without bootloader can now be used as a finished firmware and loaded into the Atmega.

Programming

For programming, the display must be removed and jumper J4 opened.

The ATmega is programmed via the ISCP interface J3. The fuses must be set before programming the firmware.

Fuses:

- EXTENDED: 0xFD
- HIGH: 0xDE
- LOW: 0xF7 -> externer Full.swing Crystal (hier: 16MHz, wie Arduino UNO, NANO)

I used the Pololu Programmer v2.1 with the software AVRFuses 1.5.2 and the Pololu Configuratuins Utility under macos.

Initial start-up

The contrast of the display can be adjusted with the trimmer RV1 until characters are visible.

Jumper J4 must be closed.

When starting up for the first time or after programming firmware, the model scale and the measuring distance must be set using the MENUE, UP, DOWN buttons.

For example:

Scale:

H0 : 87

N : 160

Measuring distance between the detectors (photoelectric barrier):

4 : 40cm

10 : 100cm

Release notes :


1 due to limitations in EEPROM writeable values (0-254) the length of measurement is limited to 254 decimeters, meaning 25,5 M (approx 70 ft) which should cover most purposes. Bear in mind that the speed calculations are done in cm/s but the length of the test track is in dm (decimeters) when you enter it in the menu. All internal conversions are done by the Arduino module.

2 for wiring and component saving reasons, ALL pull up resistors (internal ones) must be enabled on the input channels.

Revision 1.0:

The following changes are taken into account in revision 1.0a.

1. A bridge from pin 1 to pin 5 must be added to the underside of the board (see picture).

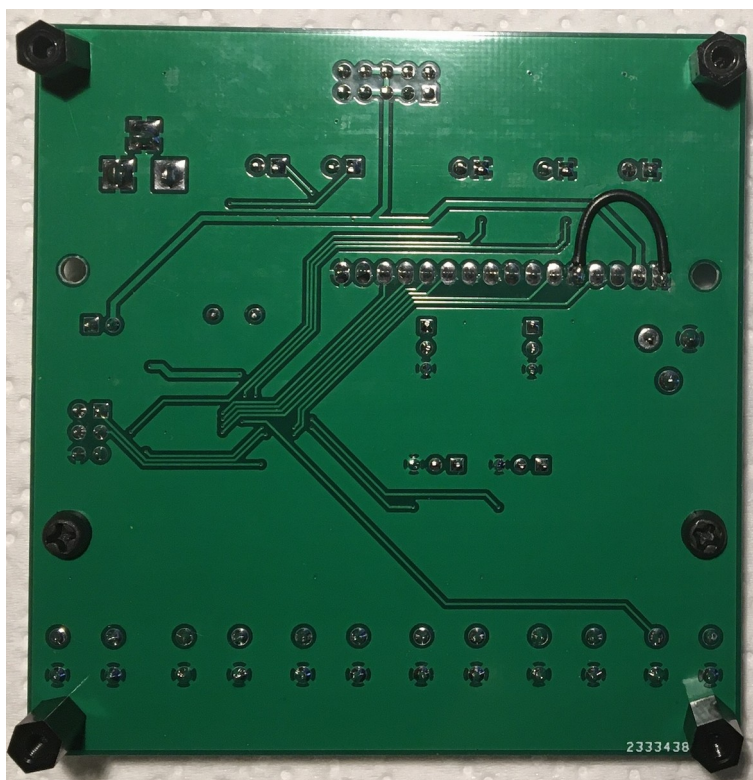

2. Changed component values C1, C2, R1, R2 and R12 compared to the board labeling.

C1, C2: 22p SMD 0805

R1, R2: 1k SMD 0805

R12: 75 SMD 0805

