

# Pocket Checklist

## F-14A/B AIRCRAFT

REV: 20220606



Procedures

Systems

AWG-9  
Radar

TCS  
LANTIRN

A/G  
Weapons

A/A  
Weapons



## DISCLAIMER

This document represents a personal project and is intended for entertainment purposes only. Do not use for training purposes or in real life scenarios.

# Contents

<b>1</b>	<b>PROCEDURES</b>	<b>1-1</b>
1.1	START-UP . . . . .	1-3
1.1.1	PILOT - PRE-START . . . . .	1-3
1.1.2	PILOT - ENGINE START . . . . .	1-4
1.1.3	PILOT - POST-START . . . . .	1-5
1.1.4	RIO - PRE-START . . . . .	1-7
1.1.5	RIO - POST-START - SHORE . . . . .	1-7
1.1.6	RIO - POST-START - CARRIER . . . . .	1-9
1.2	TAKEOFF & LANDING . . . . .	1-11
1.2.1	PRE-TAXI . . . . .	1-11
1.2.2	TAKEOFF - SHORE . . . . .	1-11
1.2.3	TAKEOFF - CARRIER . . . . .	1-12
1.2.4	LANDING - OVERHEAD PATTERN . . . . .	1-13
1.2.5	LANDING - CHECKLIST . . . . .	1-14
1.3	IN-FLIGHT . . . . .	1-15
1.3.1	AERIAL REFUELING . . . . .	1-15
1.3.2	AIRSTART . . . . .	1-16
<b>2</b>	<b>SYSTEMS</b>	<b>2-1</b>
2.1	FLIGHT CONTROL SYSTEMS . . . . .	2-3
2.1.1	AFCS - SAS . . . . .	2-3
2.1.2	AFCS - AUTOPILOT . . . . .	2-3
2.1.3	APC / AUTOTHROTTLE . . . . .	2-5
2.1.4	ACLS . . . . .	2-5
2.1.5	WING-SWEEP . . . . .	2-5
2.2	NAVIGATION SYSTEMS . . . . .	2-7
2.2.1	OVERVIEW . . . . .	2-7
2.2.2	ALIGNMENT - OVERVIEW . . . . .	2-9
2.2.3	ALIGNMENT - NON-SAT . . . . .	2-10
2.2.4	ALIGNMENT - NON-SAT - SUBMODES . . . . .	2-12
2.2.5	ALIGNMENT - FAILURES . . . . .	2-12
2.2.6	WAYPOINT . . . . .	2-14
2.2.7	TACAN . . . . .	2-14
2.2.8	VOR/ADF . . . . .	2-15

2.2.9	DISPLAYS . . . . .	2-16
2.3	COMMUNICATION SYSTEMS . . . . .	2-17
2.3.1	OVERVIEW . . . . .	2-17
2.3.2	ARC-159 UHF 1 . . . . .	2-18
2.3.3	ARC-182 V/UHF 2 . . . . .	2-19
2.3.4	KY-28 VOICE SECURITY EQUIPMENT . . . . .	2-20
2.3.5	LINK 4 DATALINK - OVERVIEW . . . . .	2-21
2.3.6	LINK 4 DATALINK - CONTROL PANEL . . . . .	2-21
2.3.7	LINK 4 DATALINK - REPLY/ANTENNA PANEL . . . . .	2-22
2.4	DEFENSIVE SYSTEMS . . . . .	2-23
2.4.1	ALR-67 RWR - CONTROLS / OVERVIEW . . . . .	2-23
2.4.2	ALR-67 RWR - THREAT SYMBOLOGY . . . . .	2-25
2.4.3	ALE-39 CMS DISPENSER . . . . .	2-27
2.4.4	ALQ-100 / ALQ-126 DECM . . . . .	2-28
<b>3</b>	<b>AWG-9 RADAR</b>	<b>3-1</b>
3.1	OVERVIEW . . . . .	3-3
3.1.1	MAIN MODES - OVERVIEW . . . . .	3-3
3.1.2	MAIN MODES . . . . .	3-3
3.2	PULSE MODES . . . . .	3-4
3.2.1	PULSE - PULSE SEARCH . . . . .	3-4
3.2.2	PULSE - PSTT . . . . .	3-5
3.3	PULSE DOPPLER MODES . . . . .	3-6
3.3.1	PD - PULSE DOPPLER SEARCH . . . . .	3-6
3.3.2	PD - RWS . . . . .	3-9
3.3.3	PD - TWS . . . . .	3-10
3.3.4	PD - TWS MAN . . . . .	3-12
3.3.5	PD - TWS AUTO . . . . .	3-13
3.3.6	PD - PDSTT . . . . .	3-14
3.4	ACM . . . . .	3-15
3.4.1	ACM MODES - OVERVIEW . . . . .	3-15
3.5	IFF . . . . .	3-17
3.5.1	APX-76 IFF . . . . .	3-17
3.6	TACTICAL INFORMATION DISPLAY . . . . .	3-18
3.6.1	TID SYMBOLOGY . . . . .	3-18
<b>4</b>	<b>TCS - LANTIRN</b>	<b>4-1</b>
4.1	TCS . . . . .	4-3
4.1.1	OVERVIEW . . . . .	4-3
4.2	LANTIRN . . . . .	4-5
4.2.1	OVERVIEW . . . . .	4-5
4.2.2	OVERVIEW - STARTUP . . . . .	4-5
4.2.3	OVERVIEW - POINTING MODES . . . . .	4-6
4.2.4	OVERVIEW - LASING/DESIGNATION . . . . .	4-7
4.2.5	CONTROLS - PANEL . . . . .	4-8

4.2.6	CONTROLS - STICK	4-9
4.2.7	DISPLAY	4-10
<b>5</b>	<b>A/G WEAPONS</b>	<b>5-1</b>
5.1	SETTINGS	5-3
5.1.1	A/G WEAPON SETTINGS - OVERVIEW	5-3
5.1.2	SELECTIVE ORDNANCE JETTISON	5-4
5.2	UNGUIDED ORDNANCE	5-5
5.2.1	M61 GUN	5-5
5.2.2	FFAR / ZUNI ROCKETS	5-5
5.2.3	UNGUIDED BOMB - CCIP	5-6
5.2.4	UNGUIDED BOMB - CCRP	5-6
5.3	GUIDED ORDNANCE	5-8
5.3.1	LASER GUIDED BOMB	5-8
5.3.2	TALD DECOYS	5-9
<b>6</b>	<b>A/A WEAPONS</b>	<b>6-1</b>
6.1	M61 GUN	6-3
6.1.1	M61 GUN - OVERVIEW	6-3
6.1.2	M61 GUN - MANUAL	6-4
6.1.3	M61 GUN - RTGS / NO RADAR	6-4
6.1.4	M61 GUN - RTGS / RADAR	6-4
6.2	AIM-9 SIDEWINDER	6-5
6.2.1	AIM-9 - OVERVIEW	6-5
6.2.2	AIM-9 - SILENT	6-6
6.2.3	AIM-9 - RADAR	6-6
6.3	AIM-7 SPARROW	6-7
6.3.1	AIM-7 - OVERVIEW	6-7
6.3.2	AIM-7 - STT	6-8
6.4	AIM-54 PHOENIX	6-9
6.4.1	AIM-54 - OVERVIEW	6-9
6.4.2	AIM-54 - PD-STT	6-10
6.4.3	AIM-54 - TWS / MULTI	6-11
6.4.4	AIM-54 - ACM	6-12



# Chapter 1

## PROCEDURES

### Contents

1.1	START-UP . . . . .	1-3
1.1.1	PILOT - PRE-START . . . . .	1-3
1.1.2	PILOT - ENGINE START . . . . .	1-4
1.1.3	PILOT - POST-START . . . . .	1-5
1.1.4	RIO - PRE-START . . . . .	1-7
1.1.5	RIO - POST-START - SHORE . . . . .	1-7
1.1.6	RIO - POST-START - CARRIER . . . . .	1-9
1.2	TAKEOFF & LANDING . . . . .	1-11
1.2.1	PRE-TAXI . . . . .	1-11
1.2.2	TAKEOFF - SHORE . . . . .	1-11
1.2.3	TAKEOFF - CARRIER . . . . .	1-12
1.2.4	LANDING - OVERHEAD PATTERN . . . . .	1-13
1.2.5	LANDING - CHECKLIST . . . . .	1-14
1.3	IN-FLIGHT . . . . .	1-15
1.3.1	AERIAL REFUELING . . . . .	1-15
1.3.2	AIRSTART . . . . .	1-16





## 1.1 START-UP

## 1.1.1 PILOT - PRE-START

1.	Parking Brake	ENGAGED
2.	Ground Power	connected
3.	Compressed Air	connected
4.	ICS	HOT MIC
5.	TO RIO	"Begin Start-Up"
6.	ICS	Comm Check
7.	MASTER TEST Selector	(a) LTS <ul style="list-style-type: none"> <li>Warning Lights .....checked</li> <li>Caution Lights .....checked</li> <li>Advisory Lights ..... checked</li> </ul> (b) FIRE DET/EXT <ul style="list-style-type: none"> <li>L FIRE GO ..... illuminated</li> <li>R FIRE GO .....illuminated</li> </ul> (c) INST <ul style="list-style-type: none"> <li>RPM .....96%</li> <li>EGT .....960 C</li> <li>FF .....10500 pph</li> <li>AOA .....18 ± 5</li> <li>Wing Sweep .....45 ± 2.5</li> <li>FUEL QTY .....2000 ± 200</li> <li>Oxygen QTY ..... 2 liters</li> <li>L&amp;R FF lights ..... illuminated</li> </ul> (d) OFF
8.	Ejection Seat	Armed
9.	RIO	Canopy Closed
10.	Oxygen	ON (FWD)
11.	Emergency Wing Sweep	OVERSWEEP

## 1.1.2 PILOT - ENGINE START

1.	<b>AIR SOURCE</b>	<b>OFF</b>
2.	<b>Hydraulics</b>	(a) <b>HYD TRANSFER PUMP</b> ..... <b>SHUTOFF</b> (b) <b>Emerg. Hyd.</b> ..... <b>AUTO (LOW)</b>
3.	<b>L&amp;R MASTER GEN</b>	<b>NORM</b>
4.	<b>RIO</b>	<i>"Ready to Start"</i>
5.	<b>Right Engine Start-Up</b>	(a) <b>Engine Crank</b> ..... <b>R</b> (b) <b>R Eng N2</b> ..... 20% (c) <b>R Throttle</b> ..... <b>IDLE</b> (d) <b>TIT</b> ..... < 890 C during start (e) <b>R GEN CAUTION</b> ..... extinguished
6.	<b>Stabilized Parameters</b>	<ul style="list-style-type: none"> <li>• <b>RPM</b> ..... 62-78%</li> <li>• <b>TIT</b> ..... approx 500 C</li> <li>• <b>Fuel Flow</b> ..... 950-1400 pph</li> <li>• <b>NOZ</b> ..... 5 (100%)</li> <li>• <b>Oil Pressure</b> ..... 25-35 psi</li> <li>• <b>Hyd Pressure</b> ..... 3000 psi</li> </ul>
7.	<b>Left Engine Start-Up</b>	(a) <b>Engine Crank</b> ..... <b>L</b> (b) <b>L Eng N2</b> ..... 20% (c) <b>L Throttle</b> ..... <b>IDLE</b> (d) <b>TIT</b> ..... < 890 C during start (e) <b>L GEN Caution</b> ..... extinguished
8.	<b>Stabilized Parameters</b>	<ul style="list-style-type: none"> <li>• <b>RPM</b> ..... 62-78%</li> <li>• <b>TIT</b> ..... approx 500 C</li> <li>• <b>Fuel Flow</b> ..... 950-1400 pph</li> <li>• <b>NOZ</b> ..... 5 (100%)</li> <li>• <b>Oil Pressure</b> ..... 25-35 psi</li> <li>• <b>Hyd Pressure</b> ..... 3000 psi</li> </ul>
9.	<b>HYD TRANSFER PUMP</b>	<b>NORM</b>
10.	<b>HYD PRESSURE</b>	3000 psi
11.	<b>AIR SOURCE</b>	<b>BOTH ENG</b>
12.	<b>Ground Power</b>	disconnected
13.	<b>Compressed Air</b>	disconnected

## 1.1.3 PILOT - POST-START

1.	<b>TO RIO</b>	<i>"Both Engines Running"</i>
2.	<b>Displays Control Panel</b>	<ul style="list-style-type: none"> <li>• VDI ..... <b>ON</b></li> <li>• HUD ..... <b>ON</b></li> <li>• HSD ..... <b>ON</b></li> <li>• HDS MODE ..... <b>TID</b> (monitor INS)</li> </ul>
3.	<b>RIO</b>	<b>Select Align Quality</b> <ul style="list-style-type: none"> <li>• <b>INS GO NOW:</b> shortest but least precise alignment</li> <li>• <b>INS GO COARSE:</b> does not meet Launch Criteria for AIM-7 / AIM-54</li> <li>• <b>INS GO MIN WPN LAUNCH:</b> allows AIM-7 / AIM-54 launch</li> <li>• <b>INS GO FINE</b> fine align (8 min)</li> </ul>
4.	<b>ACM Panel</b>	<ul style="list-style-type: none"> <li>• <b>GUN RATE</b> ..... as required</li> <li>• <b>SW COOL</b> ..... <b>OFF</b></li> <li>• <b>MSL PREP</b> ..... <b>OFF</b></li> <li>• <b>Missile MODE/STP</b> ..... <b>NORM</b></li> </ul>
5.	<b>Gun Rounds</b>	<b>Set</b>
6.	<b>ANTI-SKID SPOILER BK</b>	<b>OFF</b>
7.	<b>Emergency Wing Sweep</b>	(a) <b>Handle</b> ..... <b>AFT</b> (b) <b>Angle</b> ..... Verify 68 deg
8.	<b>AFCS Panel - SAS STAB AUG</b>	<ul style="list-style-type: none"> <li>• <b>PITCH</b> ..... <b>ON</b></li> <li>• <b>ROLL</b> ..... <b>ON</b></li> <li>• <b>YAW</b> ..... <b>ON</b></li> </ul>
9.	<b>WING/EXT TRANS</b>	<b>AUTO</b>
10.	<b>UHF 1 Function Selector</b>	<b>BOTH</b>
11.	<b>TACAN Function Selector</b>	<b>T/R</b>
12.	<b>ARA-63 ICLS RECEIVER</b>	<b>ON</b>

- |                             |  |
|-----------------------------|--|
| 13. <b>Radar Altimeter</b>  | (a) <b>Control Knob</b> ..... one click CW to turn on<br>(b) <b>Display</b> ..... 6000 ft (warm up)<br>(c) <b>Display</b> ..... 0 ft (ready) |
| 14. <b>Standby ADI</b>      | erect at least 2 min before T/O  |
| 15. <b>KY-28 Crypt. Key</b> | <b>Set</b> (refer to GROUND SETTINGS kb)   |
| 16. <b>RIO</b>              | set D/L frequency  |
| 17. <b>Lights</b>           | As desired   |

<b>WARNING</b>
----------------

- **PARKING BRAKE MUST BE ENGAGED DURING ALIGNMENT.**  
Lack of parking brake engagement inhibits INS alignment

## 1.1.4 RIO - PRE-START

1. <b>Oxygen</b>	<b>ON (FWD)</b>
2. <b>PILOT</b>	<ul style="list-style-type: none"> <li>• <b>Ground Power</b> .....connected</li> <li>• <b>Compressed Air</b> .....connected</li> </ul>
3. <b>ICS</b>	Comm Check
4. <b>Lights</b>	As required
5. <b>LTS Test</b>	Coordinate with Pilot
6. <b>Ejection Seats</b>	<b>ARMED</b>
7. <b>Canopy</b>	<b>CLOSED</b>
8. <b>TO PILOT</b>	<i>"Ready to Start"</i>

## 1.1.5 RIO - POST-START - SHORE

1. <b>PILOT</b>	<ul style="list-style-type: none"> <li>• <b>Engines</b> ..... started</li> <li>• <b>AIR SOURCE</b> ..... BOTH ENG</li> </ul>
2. <b>INS STARTUP</b>	(a) <b>LIQUID COOLING</b> ..... <b>ON (FWD)</b> (b) <b>WCS Switch</b> ..... <b>STANDBY</b> (c) <b>IR/TV Power</b> ..... <b>STBY/IR/TV</b> (d) <b>TID/DDD</b> ..... illuminated after 40 s
3. <b>Kneeboard</b>	Retrieve Coordinates, Elevation, Magnetic Variation from GROUND SETTINGS Page

**WARNING** Input Coords **BEFORE** selecting **GND ALIGN** if using ASH

4. <b>Start INS Align</b>	(a) <b>Nav Mode</b> ..... <b>GND ALIGN</b> (b) <b>CAP</b> <ul style="list-style-type: none"> <li>• <b>Category</b> ..... <b>NAV</b></li> <li>• <b>MESSAGE</b> ..... <b>OWN AC</b></li> </ul> (c) <b>Keyboard</b> <ul style="list-style-type: none"> <li>• <b>CLEAR, LAT</b>, latitude, <b>ENTER</b></li> <li>• <b>LONG</b>, longitude, <b>ENTER</b></li> <li>• <b>ALT</b>, altitude, <b>ENTER</b></li> </ul> (d) <b>CAP MESSAGE</b> ..... <b>MAG HDG VAR</b> (e) <b>Keyboard</b> ..... <b>HDG</b> , mag var, <b>ENTER</b> (f) <b>Align Progress</b> ..... Monitor
5. <b>U/VHF Mode</b>	<b>T/R G</b>

6. <b>Datalink</b>	(a) <b>Kneeboard</b> ..... TACTICAL DL (b) <b>DL Power</b> ..... ON (FWD) (c) <b>DL Mode</b> ..... TAC (AFT) (d) <b>DL Freq.</b> ..... Set
7. <b>TACAN</b>	T/R
8. <b>RWR Panel</b>	(a) <b>Display Type</b> ..... NORM (b) <b>PWR</b> ..... ON (c) <b>TEST</b> ..... SPL (d) <b>MODE</b> ..... LMT
9. <b>DECM</b>	STBY, then ACT
10. <b>IFF</b>	(a) <b>MASTER</b> ..... STBY (b) <b>CODE</b> ..... as required
11. <b>Altimeter</b>	Reset
12. <b>CAP</b>	Enter Data (WP, FP, etc.)
13. <b>Displays</b>	<ul style="list-style-type: none"> <li>• <b>DDD</b> ..... Set</li> <li>• <b>TID</b> ..... Set</li> <li>• <b>Multiple Display Indicator</b> ..... Set</li> </ul>
14. <b>Hand Control Panel</b>	Set
15. <b>AN/ALE-39</b>	Set (as required) <ul style="list-style-type: none"> <li>• <b>AUTO (CHAFF)/MAN</b></li> <li>• <b>MAN</b></li> </ul>
16. <b>Flare Mode</b>	PILOT
17. <b>Complete INS Align</b>	<ul style="list-style-type: none"> <li>• <b>Duration Full Fine</b> ..... 8 min</li> <li>• <b>Duration ASH</b> ..... much faster</li> <li>(a) <b>Align Complete</b> ..... Caret → Diamond</li> <li>(b) <b>NAV Mode</b> ..... INS NAV</li> </ul>
18. <b>Standby ADI</b>	Erect at least 2 min before T/O
19. <b>TO PILOT</b>	"Ready to Taxi"
<b>Once Airborne</b>	
20. <b>IR/TV Power</b>	ON
21. <b>WCS Switch</b>	WCS XMT

## 1.1.6 RIO - POST-START - CARRIER

1.	<b>PILOT</b>	<ul style="list-style-type: none"> <li>Engines ..... started</li> <li>AIR SOURCE ..... BOTH ENG</li> </ul>
2.	<b>INS STARTUP</b>	(a) LIQUID COOLING ..... ON (FWD) (b) WCS Switch ..... STANDBY (c) IR/TV Power ..... STBY/IR/TV (d) TID/DDD ..... illuminated after 40 s
3.	<b>Datalink</b>	(a) Kneeboard ..... TACTICAL DL (b) DL Power ..... ON (FWD)
4.	<b>Start INS Align</b>	(a) DL FREQ ..... Set (b) DL Mode ..... CAINS/WAYPT (c) Nav Mode ..... CVA
5.	<b>U/VHF Mode</b>	T/R G
6.	<b>TACAN</b>	T/R
7.	<b>RWR Panel</b>	(a) Display Type ..... NORM (b) PWR ..... ON (c) TEST ..... SPL (d) MODE ..... LMT
8.	<b>DECM</b>	STBY, then ACT
9.	<b>IFF</b>	(a) MASTER ..... STBY (b) CODE ..... as required
10.	<b>Altimeter</b>	Reset
11.	<b>CAP</b>	Enter Data (WP, FP, etc.)
12.	<b>Displays</b>	<ul style="list-style-type: none"> <li>DDD ..... Set</li> <li>TID ..... Set</li> <li>Multiple Display Indicator ..... Set</li> </ul>
13.	<b>Hand Control Panel</b>	Set
14.	<b>AN/ALE-39</b>	Set (as required) <ul style="list-style-type: none"> <li>AUTO (CHAFF)/MAN</li> <li>MAN</li> </ul>
15.	<b>Flare Mode</b>	PILOT

16. <b>Complete INS Align</b>	<ul style="list-style-type: none"> <li>• <b>Duration Full Fine</b> ..... 9 min</li> <li>• <b>Duration ASH</b> ..... much faster</li> <li>(a) <b>Align Complete</b> ..... Caret → Diamond</li> <li>(b) <b>NAV Mode</b> ..... <b>INS NAV</b></li> </ul>
17. <b>Datalink</b>	(a) <b>DL Mode</b> ..... <b>TAC (AFT)</b> (b) <b>DL Freq.</b> ..... <b>Set</b>
18. <b>Standby ADI</b>	Erect at least 2 min before T/O
19. <b>TO PILOT</b>	<i>"Ready to Taxi"</i>

**Once Airborne**

20. <b>IR/TV Power</b>	<b>ON</b>
21. <b>WCS Switch</b>	<b>WCS XMT</b>

**WARNING**

- Input Coords **BEFORE** selecting **GND ALIGN** if using ASH. Else alignment can progress too far to correct coordinates by the time they are input.
- **PARKING BRAKE MUST BE ENGAGED DURING ALIGNMENT.**  
Lack of parking brake engagement inhibits INS alignment



## 1.2 TAKEOFF &amp; LANDING

## 1.2.1 PRE-TAXI

1. <b>ANTI-SKID SPOILER BK</b>	<b>OFF</b>
2. <b>HOOK BYPASS</b>	As Required
3. <b>Nose Strut</b>	<b>RETRACTED</b>
4. <b>HUD MODE</b>	<b>TO</b>
5. <b>Parking Brake</b>	<b>Released (IN)</b>
6. <b>NWS</b>	<b>ENGAGED</b>
7. <b>Path</b>	verify clear


## 1.2.2 TAKEOFF - SHORE

<b>After Lining Up On Runway</b>	
1. <b>Wing Sweep</b>	(a) <b>EM WING SWEEP</b> ..... <b>FWD</b> , then <b>IN</b> (b) <b>MASTER RESET</b> ..... <b>PRESS</b> (c) <b>Wings</b> ..... Verify thumb controller (d) <b>WING SWEEP</b> ..... <b>AUTO</b> (e) <b>Wings</b> ..... Verify at 20 deg
2. <b>ANTI SKID SPOILER BK</b>	<b>BOTH (UP)</b>
3. <b>FLAPS</b>	<b>UP</b>
4. <b>Trim</b>	0 deg
5. <b>NWS</b>	<b>DISENGAGED</b>
6. <b>Takeoff</b>	(a) <b>Throttle</b> ..... <b>MIL</b> (90% RPM) (b) <b>Stick</b> ..... <b>Back</b> at 130 KIAS (c) <b>Rotation</b> ..... approx 140 KIAS (d) <b>GEAR</b> ..... <b>UP</b> < 250 KIAS

## 1.2.3 TAKEOFF - CARRIER

<b>Lineup</b>	<ul style="list-style-type: none"> <li>• Wait behind JBD until Catapult is clear</li> <li>• Follow Taxi Directors Instructions to line up on Catapult</li> </ul>
1. <b>Wing Sweep</b>	(a) <b>EM WING SWEEP</b> ..... <b>FWD</b> , then <b>IN</b> (b) <b>MASTER RESET</b> ..... <b>PRESS</b> (c) <b>Wings</b> ..... Verify thumb controller (d) <b>WING SWEEP</b> ..... <b>AUTO</b> (e) <b>Wings</b> ..... Verify at 20 deg
2. <b>FLAPS</b>	<b>DOWN</b>
3. <b>Launch Bar Preparation</b>	(a) <b>Nose Strut</b> ..... <b>KNEEL</b> when directed (b) <b>Throttle</b> ..... <b>UP</b> when directed (c) <b>Taxi</b> ..... launch bar into shuttle (d) <b>Throttle</b> ..... <b>IDLE</b> when directed
4. <b>Trim</b>	2-3 deg nose up
5. <b>Speed Brakes</b>	<b>IN</b>
6. <b>Final Checks</b>	(a) <b>Throttle</b> ..... <b>MIL</b> when directed (b) <b>Control Wipeout</b> <ul style="list-style-type: none"> <li>• Stick Full Forward</li> <li>• Stick Full Aft</li> <li>• Stick Full Left</li> <li>• Stick Full Right</li> <li>• Rudder Full Left</li> <li>• Rudder Full Right</li> </ul> (c) <b>Eng. Inst.</b> ..... <b>Checked</b> (d) <b>Caution/Warnings</b> ..... <b>None</b>
7. <b>Catapult Shot</b>	(a) <b>Salute</b> ..... <b>CAT SHOT</b> (b) <b>Gear</b> ..... <b>UP</b> < 250 KIAS (c) <b>Flaps</b> ..... <b>UP</b> < 225 KIAS
8. <b>Clearing Turn</b>	

## 1.2.4 LANDING - OVERHEAD PATTERN

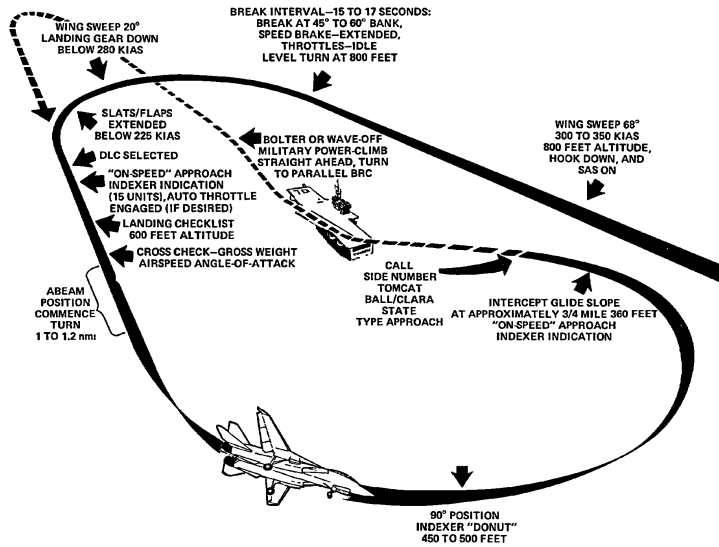

1. Initial Approach	<ul style="list-style-type: none"> <li>• WING SWEEP ..... 68 deg</li> <li>• HOOK ..... DOWN</li> <li>• SAS ..... ON</li> <li>• HUD ..... LDG</li> <li>• Airspeed ..... 300-350 KIAS</li> <li>• Altitude ..... 800 ft</li> </ul>
2. Initial Break	<ul style="list-style-type: none"> <li>• Break Interval ..... 15-17 s</li> <li>• BANK ..... 45-60 deg</li> <li>• SPEED BRAKE ..... EXTEND</li> <li>• Throttle ..... IDLE</li> <li>• G ..... 3-4 G</li> <li>• Altitude ..... 800 ft</li> </ul>
3. Break Turn	<ul style="list-style-type: none"> <li>• Wing Sweep ..... AUTO &lt; 280 KIAS</li> <li>• Landing Gear ..... DOWN &lt; 280 KIAS</li> <li>• FLAPS ..... DOWN &lt; 225 KIAS</li> </ul>
4. Downwind	<ul style="list-style-type: none"> <li>• DLC ..... Selected once flaps out</li> <li>• AOA ..... ON-SPEED</li> <li>• LANDING CHECKLIST</li> <li>• Altitude ..... descend to 600 ft</li> </ul>

5. <b>Final Turn</b>	180 Deg Position • Abeam Pos. .... 1-1.2 nmi 90 Deg Position • AOA ..... DONUT • Altitude ..... 400-500 ft
6. <b>Intercept Glideslope</b>	• Distance ..... 3/4 Mile • Altitude ..... 360 ft • AOA ..... ON-SPEED

### 1.2.5 LANDING - CHECKLIST

1. <b>Wing Sweep</b>	20 deg AUTO
2. <b>Wheels</b>	• Lights ..... 3 DOWN • Transition Light ..... OUT
3. <b>SAS</b>	ON
4. <b>FLAPS</b>	DOWN
5. <b>DLC</b>	Checked
6. <b>Hook</b>	• HOOK ..... DOWN • Transition Light ..... OUT
7. <b>Harness</b>	Locked
8. <b>Speedbrakes</b>	EXT
9. <b>Brakes</b>	Check
10. <b>Fuel</b>	Check

### 1.3 IN-FLIGHT

#### 1.3.1 AERIAL REFUELING

1. <b>REFUELING CHECKLIST</b>	(a) <b>WCS</b> ..... <b>STBY</b> (b) <b>ARMING</b> ..... <b>SAFE</b> (c) <b>DUMP Switch</b> ..... <b>OFF</b> (d) <b>AIR SOURCE</b> ..... <b>L ENG</b> (e) <b>REFUEL PROBE</b> ..... <b>As desired</b> (transition light off) (f) <b>WING SWEEP</b> ..... <b>As desired</b>
2. <b>DISENGAGE- MENT</b>	(a) <b>REFUEL PROBE</b> ..... <b>RET</b> (transition light off) (b) <b>AIR SOURCE</b> ..... <b>BOTH</b> (c) <b>WING SWEEP</b> ..... <b>AUTO</b>

## 1.3.2 AIRSTART

<ul style="list-style-type: none"> <li><b>Spooldown</b></li> </ul>	<p><i>Before significant spooldown</i></p> <p>(a) <b>Non-Running ENG</b> ..... IDLE or above</p> <p><i>If no relight occurs</i></p> <p>(b) <b>Non-Running ENG</b> ..... OFF then IDLE</p> <p><i>If still no relight occurs</i></p> <p>(c) <b>ENG MODE</b> ..... SEC</p> <p>(d) <b>Non-Running ENG</b> ..... OFF then IDLE</p>
<ul style="list-style-type: none"> <li><b>Cross-Bleed Restart</b></li> </ul>	<p><i>With one ENG running, if Spooldown fails</i></p> <p>(a) <b>Non-Running ENG</b> ..... OFF</p> <p>(b) <b>FUEL SHUT OFF</b> ..... check</p> <p>(c) <b>Running throttle</b> ..... 80%+</p> <p>(d) <b>BACK UP IGNITION</b> ..... ON</p> <p>(e) <b>ENG CRANK</b> ..... non-running eng</p> <p>(f) <b>Non-Running ENG</b> ..... IDLE</p> <p><i>If no start occurs</i></p> <p>(g) <b>Non-Running ENG</b> ..... OFF then IDLE</p> <p><i>If still no start</i></p> <p>(h) <b>ENG MODE</b> ..... SEC</p> <p>(i) <b>Non-Running ENG</b> ..... OFF then IDLE</p>
<ul style="list-style-type: none"> <li><b>Windmill Restart</b></li> </ul>	<p>(a) <b>Airspeed</b> ..... &gt;450 kts</p> <p>(b) <b>Throttle</b> ..... IDLE or above</p> <p>(c) <b>BACK UP IGNITION</b> ..... ON</p> <p><i>If no relight occurs</i></p> <p>(d) <b>Throttle</b> ..... OFF then IDLE</p> <p><i>If still no relight</i></p> <p>(e) <b>ENG MODE</b> ..... SEC</p> <p>(f) <b>Throttle</b> ..... OFF then IDLE</p>
<ul style="list-style-type: none"> <li><b>Post Restart</b></li> </ul>	<p>(a) <b>BACK UP IGNITION</b> ..... OFF</p> <p>(b) <b>ENG MODE</b> ..... PRI</p>

# Chapter 2

## SYSTEMS

### Contents

2.1	FLIGHT CONTROL SYSTEMS . . . . .	2-3
2.1.1	AFCS - SAS . . . . .	2-3
2.1.2	AFCS - AUTOPILOT . . . . .	2-3
2.1.3	APC / AUTOTHROTTLE . . . . .	2-5
2.1.4	ACLS . . . . .	2-5
2.1.5	WING-SWEEP . . . . .	2-5
2.2	NAVIGATION SYSTEMS . . . . .	2-7
2.2.1	OVERVIEW . . . . .	2-7
2.2.2	ALIGNMENT - OVERVIEW . . . . .	2-9
2.2.3	ALIGNMENT - NON-SAT . . . . .	2-10
2.2.4	ALIGNMENT - NON-SAT - SUBMODES . . . . .	2-12
2.2.5	ALIGNMENT - FAILURES . . . . .	2-12
2.2.6	WAYPOINT . . . . .	2-14
2.2.7	TACAN . . . . .	2-14
2.2.8	VOR/ADF . . . . .	2-15
2.2.9	DISPLAYS . . . . .	2-16
2.3	COMMUNICATION SYSTEMS . . . . .	2-17
2.3.1	OVERVIEW . . . . .	2-17
2.3.2	ARC-159 UHF 1 . . . . .	2-18
2.3.3	ARC-182 V/UHF 2 . . . . .	2-19
2.3.4	KY-28 VOICE SECURITY EQUIPMENT . . . . .	2-20
2.3.5	LINK 4 DATALINK - OVERVIEW . . . . .	2-21
2.3.6	LINK 4 DATALINK - CONTROL PANEL . . . . .	2-21
2.3.7	LINK 4 DATALINK - REPLY/ANTENNA PANEL . . . . .	2-22

2.4	DEFENSIVE SYSTEMS . . . . .	2-23
2.4.1	ALR-67 RWR - CONTROLS / OVERVIEW . . . . .	2-23
2.4.2	ALR-67 RWR - THREAT SYMBOLOGY . . . . .	2-25
2.4.3	ALE-39 CMS DISPENSER . . . . .	2-27
2.4.4	ALQ-100 / ALQ-126 DECM . . . . .	2-28



## 2.1 FLIGHT CONTROL SYSTEMS

### 2.1.1 AFCS - SAS

- |   |  |
|---|--|
| <ul style="list-style-type: none"> <li><b>SAS</b></li> </ul>                                  | <ul style="list-style-type: none"> <li><b>Stability Augmentation System</b> <ul style="list-style-type: none"> <li><b>Not Fly-by-Wire</b></li> <li>Automatic control surface commands generated by analog computer to improve stability</li> </ul> </li> </ul> |
| <ul style="list-style-type: none"> <li><b>Controls</b></li> </ul>                             | <ul style="list-style-type: none"> <li><b>Three individual Switches</b> <ul style="list-style-type: none"> <li>Pitch</li> <li>Roll</li> <li>Yaw</li> </ul> </li> </ul>   |
| <ul style="list-style-type: none"> <li><b>Autopilot Emergency Disengage Paddle</b></li> </ul> | <ul style="list-style-type: none"> <li><b>Paddle on Stick</b> <ul style="list-style-type: none"> <li>Disengages Autopilot Modes</li> <li>Deactivates Pitch, Roll SAS Channels</li> </ul> </li> </ul>   |

### 2.1.2 AFCS - AUTOPILOT

- |  |   |
|--|---|
| <ul style="list-style-type: none"> <li><b>Attitude Hold</b></li> </ul> | <ul style="list-style-type: none"> <li><b>Basic Attitude Hold</b> <ul style="list-style-type: none"> <li>Maintains existing pitch &amp; roll</li> <li>Attitude can be changed with stick input</li> <li>If engaged outside limits will automatically move within range</li> </ul> </li> <li><b>Limits</b> <ul style="list-style-type: none"> <li>Pitch: 30 deg</li> <li>Roll: 60 deg</li> </ul> </li> <li><b>Engagement</b> <ul style="list-style-type: none"> <li>(a) <b>SAS Switches</b> ..... <b>ON (FWD)</b></li> <li>(b) <b>Alt. Hold Mode</b> ..... <b>OFF</b></li> <li>(c) <b>VEC/PCD/ACL</b> ..... <b>OFF</b></li> <li>(d) <b>Heading Mode</b> ..... <b>OFF</b></li> <li>(e) <b>Autopilot Switch</b> ..... <b>ENGAGE (FWD)</b></li> </ul> </li> </ul> |
|--|---|

<ul style="list-style-type: none"> <li>• <b>Altitude Hold</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>Barometric Altitude Hold</b> <ul style="list-style-type: none"> <li>– Maintains current barometric altitude</li> </ul> </li> <li>• <b>Limits</b> <ul style="list-style-type: none"> <li>– Vertical velocity: &lt; 100 ft/s</li> </ul> </li> <li>• <b>Engagement</b> <ul style="list-style-type: none"> <li>(a) <b>SAS Switches</b> ..... <b>ON (FWD)</b></li> <li>(b) <b>Autopilot Switch</b> ..... <b>ENGAGE (FWD)</b></li> <li>(c) <b>Alt. Hold Mode</b> ..... <b>ALT (FWD)</b></li> <li>(d) <b>A/P REF Light</b> ..... Wait until appears</li> <li>(e) <b>NWS Button</b> ..... <b>Press</b></li> </ul> </li> </ul>
<ul style="list-style-type: none"> <li>• <b>Heading Hold</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>Magnetic Heading Hold</b> <ul style="list-style-type: none"> <li>– Maintains current magnetic heading</li> </ul> </li> <li>• <b>Limits</b> <ul style="list-style-type: none"> <li>– Bank angle &lt; 5 deg</li> </ul> </li> <li>• <b>Engagement</b> <ul style="list-style-type: none"> <li>(a) <b>SAS Switches</b> ..... <b>ON (FWD)</b></li> <li>(b) <b>Autopilot Switch</b> ..... <b>ENGAGE (FWD)</b></li> <li>(c) <b>Heading Mode</b> ..... <b>HDG (FWD)</b></li> </ul> </li> </ul>
<ul style="list-style-type: none"> <li>• <b>Ground Track</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>Autopilot follows ground track</b> <ul style="list-style-type: none"> <li>– Similar to heading hold</li> <li>– Compensates for wind drift</li> <li>– Uses INS data instead of mag. bearing</li> </ul> </li> <li>• <b>Limits</b> <ul style="list-style-type: none"> <li>– Bank angle &lt; 5 deg</li> </ul> </li> <li>• <b>Engagement</b> <ul style="list-style-type: none"> <li>(a) <b>SAS Switches</b> ..... <b>ON (FWD)</b></li> <li>(b) <b>Autopilot Switch</b> ..... <b>ENGAGE (FWD)</b></li> <li>(c) <b>Heading Mode</b> ..... <b>GT (AFT)</b></li> <li>(d) <b>A/P REF Light</b> ..... Wait until appears</li> <li>(e) <b>NWS Button</b> ..... <b>Press</b></li> </ul> </li> </ul>
<ul style="list-style-type: none"> <li>• <b>VEC/PCD</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>Vector / Precision Course Direction</b> <ul style="list-style-type: none"> <li>– Allows Link 4 controller to remotely direct the aircraft</li> <li>– <b>Not Modelled in DCS</b></li> </ul> </li> </ul>

- |   |  |
|---|--|
| <ul style="list-style-type: none"> <li>• <b>ACL</b></li> </ul>                                  | <ul style="list-style-type: none"> <li>• <b>Automatic Carrier Landing</b> <ul style="list-style-type: none"> <li>– See relevant section</li> </ul> </li> </ul>   |
| <ul style="list-style-type: none"> <li>• <b>Autopilot Emergency Disengage Paddle</b></li> </ul> | <ul style="list-style-type: none"> <li>• <b>Paddle on Stick</b> <ul style="list-style-type: none"> <li>– Disengages Autopilot Modes</li> <li>– Deactivates Pitch, Roll SAS Channels</li> </ul> </li> </ul> |

### 2.1.3 APC / AUTOTHROTTLE

- |   |  |
|---|--|
| <ul style="list-style-type: none"> <li>• <b>APC</b></li> </ul>        | <ul style="list-style-type: none"> <li>• <b>Approach Power Compensator</b> <ul style="list-style-type: none"> <li>– Automatic throttle control</li> <li>– <b>Maintains ON SPEED AoA</b></li> </ul> </li> </ul>   |
| <ul style="list-style-type: none"> <li>• <b>Conditions</b></li> </ul> | <p>Inhibited / disengaged if conditions not met:</p> <ul style="list-style-type: none"> <li>• <b>Throttles</b> ..... 75%-90% RPM</li> <li>• <b>Landing Gear Handle</b> ..... <b>Down</b></li> <li>• <b>Weight on Wheels</b> ..... <b>No</b></li> </ul> |
| <ul style="list-style-type: none"> <li>• <b>Engage</b></li> </ul>     | <ul style="list-style-type: none"> <li>• <b>Throttle Mode</b> ..... <b>AUTO (FWD)</b></li> </ul>   |
| <ul style="list-style-type: none"> <li>• <b>Disengage</b></li> </ul>  | <ul style="list-style-type: none"> <li>• <b>Cage/Seam Button</b></li> </ul>  |

### 2.1.4 ACLS

### 2.1.5 WING-SWEEP

- |   |  |
|---|--|
| <ul style="list-style-type: none"> <li>• <b>Overview</b></li> </ul> | <ul style="list-style-type: none"> <li>• <b>In Flight Limited between 20 deg &amp; 68 deg</b></li> <li>• <b>On Ground can Oversweep to 75 deg</b></li> <li>• <b>Hydromechanically Controlled</b> <ul style="list-style-type: none"> <li>– Automatically through CADC</li> <li>– Manually with emergency wing-sweep handle</li> </ul> </li> <li>• <b>15 deg/s at 1g loading</b></li> <li>• <b>Mechanically linked to ensure symmetry</b></li> </ul> |
|---|--|

<ul style="list-style-type: none"> <li>CADC Modes</li> </ul>	<ul style="list-style-type: none"> <li><b>AUTO</b> <ul style="list-style-type: none"> <li>CADC controls wing position as function of current Mach via wing-sweep program</li> </ul> </li> <li><b>MAN</b> <ul style="list-style-type: none"> <li>Pilot manually chooses desired wing sweep angle with thumb controller</li> </ul> </li> <li><b>BOMB</b> <ul style="list-style-type: none"> <li>Sets wing sweep to <b>55 deg</b> or further aft</li> </ul> </li> </ul>
<ul style="list-style-type: none"> <li>Emergency Mode</li> </ul>	<ul style="list-style-type: none"> <li><b>Emergency Wing-Sweep Handle</b> <ul style="list-style-type: none"> <li>Moved with wing sweep program by spider detent under normal operation</li> <li>Can be forced out of spider detent and moved manually</li> </ul> </li> </ul>
<ul style="list-style-type: none"> <li>Oversweep</li> </ul>	<ul style="list-style-type: none"> <li><b>Selected via Emergency Wing-Sweep Handle</b> <ul style="list-style-type: none"> <li>(a) <b>Em. Wing-Sweep</b> ..... <b>68 deg</b> Wait for wing-seal airbags to deflate</li> <li>(b) <b>HZ TAIL AUTH</b> ..... <b>Illuminated</b></li> <li>(c) <b>Em. Wing-Sweep</b> ..... <b>75 deg</b></li> </ul> </li> </ul>
<ul style="list-style-type: none"> <li>Return to CAD Control</li> </ul>	<ul style="list-style-type: none"> <li><b>After Emergency Mode / Oversweep</b> <ul style="list-style-type: none"> <li>(a) <b>Em. Wing-Sweep</b> ..... <b>Spider Detent</b> (Fwd on startup)</li> <li>(b) <b>MASTER RESET</b> ..... <b>Press</b></li> </ul> </li> </ul>

Indicated Mach	Max Forward Wing Position
0.4	20 deg
0.7	25 deg
0.8	50 deg
0.9	60 deg
1.0	68 deg

<b>NOTE</b>
-------------

- Indicates **Max** forward selectable wing sweep position

## 2.2 NAVIGATION SYSTEMS

### 2.2.1 OVERVIEW

- **CAINS**

Carrier Aircraft Inertial Navigation System

- **Primary navigation system of F-14**
- Additionally provides information for tactical systems
  - Own position for long-range AIM-7 & AIM-54 modes
  - Accurate Datalink sharing/receiving

#### Main Components

- **IMU**

Inertial Measurement Unit

- 3-Axis, 4-Gimbal system prevents gimbal-lock
- 2 gyros provide aircraft attitude and stabilize the platform
- 3 accelerometers measure accelerations in all orthogonal axes

- **CSDC**

Computer Signal Data Converter

- Handles data interface between sensors and **WCS**

- **WCS**

**AWG-9 Computer**

- **WCS** performs general navigation computations and provides them to PILOT & RIO through displays

- **NPS**

Navigation Power Supply

- Provides power to **IMU** & **CSDC**

- **Subsystems**

- Radar Altimeter
- TACAN
- AHRS

#### Controls

- **CAP**

- Used for Data Entry
- **CATEGORY - NAV**

- **NAV MODE Selector**

- **OFF** – Turns off power to IMU
- **ALIGN** – Three align modes

**See Alignment Section**

- **INS** – Selects normal INS navigation mode
- **IMU/AM** – Selects backup mode. Uses IMU for aircraft attitude, TAS from CADDC, and stored/entered winds for navigation
- **AHRS/AM** – Selects further degraded backup mode. Uses magnetic heading from AHRS, TAS and AoA from CADDC, and stored wind and mag var for navigation

### Failure Indicators

- **NAV COMP Light**

- If illuminates while **NAV MODE** is in **INS** indicates failure in **INS** or **CSDC**
- Navigation system automatically switches to **IMU/AM**
- Remains illuminated until **NAV MODE** is set to **IMU/AM**

- **IMU Light**

- Indicates failure of **IMU**
- Navigation system automatically switches to **AHRS/AM**
- Remains illuminated until **NAV MODE Switch** is set to **AHRS/AM**

- **AHRS Light**

- Indicates **AHRS** self-test detected a failure
- Magnetic heading now commanded by WCS computer using last known mag var values
- Heading values will degrade over time

## 2.2.2 ALIGNMENT - OVERVIEW

<ul style="list-style-type: none"> <li>• <b>Main Phases</b></li> </ul>	<ul style="list-style-type: none"> <li>(a) <b>Coarse Alignment</b> <ul style="list-style-type: none"> <li>• Warm-up of IMU elements</li> <li>• Gimbals caged to Airframe</li> <li>• Gyros brought up to speed</li> <li>• Coarse IMU platform leveling performed with accelerometer outputs</li> <li>• Begins upon completion of initialization sequence</li> <li>• Computes Initial coarse estimates of IMU wander angle</li> </ul> </li> <li>(b) <b>Fine Alignment</b> <ul style="list-style-type: none"> <li>• Uses gyroscopic drift to calculate true heading</li> </ul> </li> </ul>
<ul style="list-style-type: none"> <li>• <b>Primary Align Modes</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>SAT – NOT IMPLEMENTED</b> <ul style="list-style-type: none"> <li>– Ground</li> <li>– Carrier</li> </ul> </li> <li>• <b>NON-SAT</b> <ul style="list-style-type: none"> <li>– Ground</li> <li>– Carrier</li> </ul> </li> </ul>
<ul style="list-style-type: none"> <li>• <b>Align Submodes</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>CAT ALIGN</b> – overrides parking brake requirement</li> <li>• <b>STORED HEADING</b> – uses previous alignment as reference for rapid alignment</li> <li>• <b>HANDSET</b> – for <b>CVA ALIGN</b> when SINS data not available</li> </ul>

## NOTE

- Initialization requires Aircraft or Homebase data
  - Lat/Long
  - Pressure Altitude
- If **HANDSET Alignment** used requires Carrier parameters
  - Speed
  - True heading
- Parking brake must be on during initialization of any mode**
  - If released during coarse align, **STBY** and **READY** lights flash, align program reinitializes
  - If released during fine align, suspend align discrete sent to CSDC, **STBY** or **READY** light blinks, time-to-align clock on **TID** stops

## 2.2.3 ALIGNMENT - NON-SAT

- |  |  |
|--|--|
| <ul style="list-style-type: none"> <li><b>Enter GND Align</b></li> </ul> | <ul style="list-style-type: none"> <li><b>GND ALIGN</b> requires own-aircraft or Homebase parameters               <ul style="list-style-type: none"> <li>Latitude / Longitude</li> <li>Altitude</li> </ul> </li> <li>Can be entered into <b>CAP</b> before or within 90-120 s after selecting <b>GND ALIGN</b></li> </ul> |
|--|--|

## NOTE

- Whatever has been hooked when **ALIGN** is selected is injected as own-aircraft coordinates
- If fine align complete not yet achieved, own-aircraft latitude entry will reinitialize the alignment

- |  |  |
|--|--|
| <ul style="list-style-type: none"> <li><b>Enter CVA Align</b></li> </ul> | <ul style="list-style-type: none"> <li><b>CVA ALIGN</b> requires <b>DL CAINS Mode</b> to align aircraft IMU to ship's INS               <ul style="list-style-type: none"> <li>(a) <b>Datalink</b> ..... <b>ON</b></li> <li>(b) <b>WCS</b> ..... <b>STBY</b></li> <li>(c) <b>D/L Mode</b> ..... <b>CAINS/WAYPT</b></li> <li>(d) <b>NAV MODE Switch</b> ..... <b>CVA ALIGN</b></li> </ul> </li> </ul> |
|--|--|



- **Initialization**

- After approx. 20 s **STBY/READY Lights** illuminate
- **TID** displays alignment time of **0.7** during initialization
- After 42-45 s **NAV COMP** and **READY** lights extinguish, indicating IMU is ready
- Upon completion of initialization the **Alignment Status Indicator (CARET)** appears,

- **Coarse Alignment**

- **CARET** before coarse-align complete marker (first tick)
- Upon completion of coarse alignment phase the **CARET** is directly above the first tick and changes to a **DIAMOND**

**NOTE**

- Parking brake can be released for taxi after coarse align is complete. Will suspend align
- Suspend align indicated by flashing **STBY** and/or **READY Lights**
- During suspend align taxiing more than 4000 ft will render the **INS** performance unreliable

- **Fine Alignment**

- **DIAMOND** between first and third ticks
- **Second Tick** – minimum weapon launch criteria met
  - **STBY Light** – extinguishes
  - **READY Light** – light illuminates
  - **INS Mode** – may be selected
- **Third Tick** – fine alignment complete
  - Dot appears in Diamond
  - Can be left in align for progressively more accurate alignment

- **Exit Alignment**

- **Select INS Mode**
  - **READY Light** – extinguishes
  - Tactical tape appears
  - Normal navigation display available

- **Reinitialization**

If observable acronym (O) or stalled align noticed during fine align. RIO can apply any of following methods

- (a) **NAV MODE SWITCH** ..... **OFF**
- (b) **WCS** ..... **OFF**
- (c) Proceed with normal start sequence
- (a) **NAV MODE SWITCH** ..... **OFF**
- (b) **NAV MODE SWITCH** .. **Desired Align Mode**
- (a) **NAV MODE SWITCH** ..... **INS**  
Verify **IN** on **TID**
- (b) **NAV MODE SWITCH** ..... **OFF**
- (c) **NAV MODE SWITCH** .. **Desired Align Mode**

<b>NOTE</b>
-------------

- You will get **Erroneous Heading Readings on a Carrier** even with fine align complete (up to 30 deg) due to ship's magnetic field
- Deviation goes away shortly after takeoff

## 2.2.4 ALIGNMENT - NON-SAT - SUBMODES

- **Stored Heading Alignment**

- Reference alignment stored prior to powering-down the aircraft
- **ASH** – Automatic Stored Heading displayed on TID when align selected and reference align available

- **Handset Alignment**

- For use when SINS data not available (indicated by flashing **HS** on **TID**)
- Similar to **GND ALIGN** but requires additional parameters for the ship movement
  - Latitude / Longitude
  - Ship's Speed
  - Ship's True Heading

- **Catapult Alignment**

- Inhibits suspend align while positioned on the catapult when parking brake released

## 2.2.5 ALIGNMENT - FAILURES

- **TID Status Indicators**

Appear between first and second ticks

- **C – Cal Data Fail**
- **T – Temp** (cold IMU)
- **S – SINS Data Invalid**
- **O – Observable** (alignment data bad)

- **INS Status Indicators**

- **STBY ON / READY ON**

- Normal during align initialization
- Else indicates IMU, NAV COMP, NPS or AHRS Failure

- **STBY ON / READY OFF**

- Normal during align after initialization
- Normal when **IMU/AM** selected prior to completion of coarse align

- **STBY FLASHING / READY FLASHING**

- Alignment not initiated due to suspended alignment (check parking brake)

- **STBY FLASHING / READY OFF**

- Align suspended (check parking brake)

- **STBY OFF / READY ON**

- Min weapon launch requirements met

- **STBY OFF / READY OFF**

- System operating normally

- **STBY OFF / READY FLASHING**

(After 5 s both off)

- Occurs when **IMU/AM** selected and IMU is aligned. If another mode not selected within 5 s, alignment lost, INS not available

- **STBY OFF / READY FLASHING**

- Alignment suspended past mission alert criteria with parking brake off

## 2.2.6 WAYPOINT

- |  |   |
|--|---|
| <ul style="list-style-type: none"> <li><b>Reference Point Types</b></li> </ul> | <ul style="list-style-type: none"> <li><b>Navigation Waypoint</b> – Used for navigation. Maximum of 3 stored simultaneously</li> <li><b>Fixed Point (FP)</b> – Arbitrary point to establish current position relative to external references</li> <li><b>Initial Point (IP)</b> – Starting point for A/G attack run</li> <li><b>Surface Target (ST)</b> – Enemy surface target</li> <li><b>Defended Point (DP)</b> – Area to protect (i.e friendly forces)</li> <li><b>Hostile Area (HA)</b> – Area with known ground or air hostiles</li> <li><b>Home Base (HB)</b> – Airfield / CV</li> </ul> |
|--|---|

## 2.2.7 TACAN

- |  |  |
|--|--|
| <ul style="list-style-type: none"> <li><b>Overview</b></li> </ul>          | <p><b>Tactical Air Navigation System</b></p> <ul style="list-style-type: none"> <li>Indicates Position relative to station             <ul style="list-style-type: none"> <li><b>Slant Range</b> within 0.1 nm</li> <li><b>Bearing</b> within 0.5 deg</li> </ul> </li> <li><b>Operating Range</b> – approx 300 nm</li> <li>126 channels, 2 modes of operation</li> </ul>   |
| <ul style="list-style-type: none"> <li><b>Operating Modes</b></li> </ul>   | <ul style="list-style-type: none"> <li><b>REC</b> – Receive only</li> <li><b>T/R</b> – Transmit &amp; Receive, enables ranging</li> <li><b>A/A</b> – Air to air mode</li> </ul>  |
| <ul style="list-style-type: none"> <li><b>Typical Operation</b></li> </ul> | <p><b>TACAN Setup</b></p> <p>(a) <b>Mode</b> ..... <b>As Desired</b></p> <p>(b) <b>Frequency</b> ..... <b>As Desired</b></p> <p>(c) <b>TACAN CMD</b> ..... <b>As Required</b><br/>(Corresponding Crewmember)</p> <p><b>Pilot Setup</b></p> <p>(a) <b>STEER CMD</b> ..... <b>TACAN</b></p> <p>(b) <b>HSD MODE</b> ..... <b>NAV</b></p> <p>(c) <b>Desired Course</b> ..... <b>Set via CRS Knob</b></p> <p><b>Consult BDHI and HSD to track TACAN station</b></p> |

## 2.2.8 VOR/ADF

- **Overview**

**Automatic Direction Finder**

- Used with **ARC-182 Radio**
- **BDHI** – Displays **Relative Bearing** to transmitting ground station
- **Range** – Line of sight
- **Frequency Range** – 108-399.975 MHz
- Only operable for RIO

- **Typical Operation**

**RIO Setup**

- (a) **V/UHF 2 Mode** ..... **T/R**  
(warm-up, at least 5 min)
- (b) **V/UHF 2 Frequency Mode** ..... **MAN**
- (c) **V/UHF 2 Frequency** ..... **As desired**
- (d) **V/UHF 2 Mode** ..... **DF**

**NOTE**

- **UHF 1 ADF** is not functional despite controls in **PILOT** cockpit

## 2.2.9 DISPLAYS

## Pilot Cockpit Interface

• <b>HUD</b>	<b>Heads Up Display</b> <ul style="list-style-type: none"> <li>Displays flight &amp; combat information onto front canopy</li> </ul>
• <b>VDI</b>	<b>Vertical Display Indicator</b> <ul style="list-style-type: none"> <li><b>TV Mode</b> <ul style="list-style-type: none"> <li>Displays <b>TCS</b> imagery</li> </ul> </li> <li><b>NORM Mode</b> <ul style="list-style-type: none"> <li>Displays similar flight &amp; combat information as HUD</li> </ul> </li> </ul>
• <b>HSD</b>	<b>Horizontal Situation Display</b> <ul style="list-style-type: none"> <li><b>NAV Mode</b> Information           <ul style="list-style-type: none"> <li><b>Diamond</b> – Current heading</li> <li><b>Chevron</b> – <b>TACAN TO</b> bearing</li> <li><b>+</b> – <b>TACAN FROM</b> bearing</li> <li><b>House</b> – <b>ADF</b> bearing</li> <li><b>RNG</b> – Range to Waypoint (nm)</li> <li><b>MODE</b> – <b>NAV STEER</b> mode</li> <li><b>W</b> – Wind heading / speed (kts)</li> <li><b>TAS</b> – True AirSpeed (kts)</li> <li><b>GS</b> – GroundSpeed (kts)</li> </ul> </li> <li><b>TID Mode</b> Information           <ul style="list-style-type: none"> <li><b>Repeat of TID Symbology</b></li> <li>Overhead View</li> <li>Waypoint Coordinates</li> </ul> </li> </ul>
• <b>BDHI</b>	<b>Bearing Distance Heading Indicator</b> <ul style="list-style-type: none"> <li>Displays A/C magnetic heading with nav bearing &amp; range data</li> <li>2 Servo driven needles           <ul style="list-style-type: none"> <li><b>No.1</b> (single bar) – <b>UHF (ADF)</b> system</li> <li><b>No.2</b> (double bar) – <b>TACAN</b> System</li> </ul> </li> </ul>

## 2.3 COMMUNICATION SYSTEMS

### 2.3.1 OVERVIEW

<ul style="list-style-type: none"> <li>• <b>ARC-159</b> <b>UHF 1</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>Air-to-Air &amp; Air-to-Surface Communication</b></li> <li>• <b>Pilot Controlled</b></li> <li>• <b>Frequency</b> <ul style="list-style-type: none"> <li>- <b>Range</b> - 225.000 - 399.975 MHz</li> <li>- <b>Steps</b> - 25 kHz</li> <li>- <b>Channels</b> - 20</li> </ul> </li> </ul>
<ul style="list-style-type: none"> <li>• <b>ARC-182</b> <b>V/UHF 2</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>Air-to-Air &amp; Air-to-Surface Communication</b></li> <li>• <b>RIO Controlled</b></li> <li>• <b>Frequency</b> <ul style="list-style-type: none"> <li>- <b>Band 1</b> - 30 - 88 MHz</li> <li>- <b>Band 2</b> - 108 - 156 MHz</li> <li>- <b>Band 3</b> - 156 - 174 MHz</li> <li>- <b>Band 4</b> - 225 - 399.975 MHz</li> <li>- <b>Steps</b> - 25 kHz</li> <li>- <b>Channels</b> - 20</li> </ul> </li> </ul>
<ul style="list-style-type: none"> <li>• <b>ARA-50</b> <b>UHF ADF</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>UHF Automatic Direction Finder</b></li> <li>• <b>LoS bearing to UHF Transmitter</b></li> <li>• <b>Bearing displayed on BDHI, Pilot HSD</b></li> <li>• <b>5 min Warmup</b></li> </ul>
<ul style="list-style-type: none"> <li>• <b>KY-28</b> <b>Voice Security Equipment</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>Voice Ciphering</b></li> <li>• <b>Integrated with UHF 1 and V/UHF 2</b></li> <li>• <b>2 min Warmup</b></li> </ul>

## 2.3.2 ARC-159 UHF 1

<ul style="list-style-type: none"> <li>• <b>ARC-159 UHF 1</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>Air-to-Air &amp; Air-to-Surface Communication</b></li> <li>• <b>Pilot Controlled</b></li> <li>• <b>Frequency</b> <ul style="list-style-type: none"> <li>- <b>Range</b> - 225.000 - 399.975 MHz</li> <li>- <b>Steps</b> - 25 kHz</li> <li>- <b>Channels</b> - 20</li> </ul> </li> </ul>
<ul style="list-style-type: none"> <li>• <b>VOL Knob</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>Controls Pilot UHF 1 Audio Level</b></li> </ul>
<ul style="list-style-type: none"> <li>• <b>BRT/TEST Knob</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>Controls Radio FREQ Display</b></li> <li>• Turn past max to display <b>888.888</b></li> </ul>
<ul style="list-style-type: none"> <li>• <b>SQL Switch</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>Toggles radio squelch (noise attenuation)</b></li> </ul>
<ul style="list-style-type: none"> <li>• <b>READ Switch</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>Displays Frequency of Selected Preset Channel</b></li> </ul>
<ul style="list-style-type: none"> <li>• <b>LOAD Button</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>Saves Displayed Frequency to Selected Preset Channel</b></li> </ul>
<ul style="list-style-type: none"> <li>• <b>TONE Button</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>Steady 1.020 kHz Test Tone</b></li> </ul>
<ul style="list-style-type: none"> <li>• <b>Mode Selector</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>Frequency Selection Method</b> <ul style="list-style-type: none"> <li>- <b>GUARD</b> - 243.000 MHz</li> <li>- <b>MANUAL</b> - Manual tuning</li> <li>- <b>PRESET</b> - Preset channels</li> </ul> </li> </ul>
<ul style="list-style-type: none"> <li>• <b>Function Selector</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>Selects Transceivers to Energize</b> <ul style="list-style-type: none"> <li>- <b>ADF</b> - Not simulated</li> <li>- <b>BOTH</b> - Main &amp; Guard</li> <li>- <b>MAIN</b> - Main</li> <li>- <b>OFF</b> - Secures UHF 1 radio</li> </ul> </li> </ul>
<ul style="list-style-type: none"> <li>• <b>CHAN SEL</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>Selects from 20 preset Channels</b></li> </ul>



## 2.3.3 ARC-182 V/UHF 2

<ul style="list-style-type: none"><li>• <b>ARC-182 V/UHF 2</b></li></ul>	<ul style="list-style-type: none"><li>• <b>Air-to-Air &amp; Air-to-Surface Communication</b></li><li>• <b>RIO Controlled</b></li><li>• <b>Frequency</b><ul style="list-style-type: none"><li>- <b>Band 1</b> - 30 - 88 MHz</li><li>- <b>Band 2</b> - 108 - 156 MHz</li><li>- <b>Band 3</b> - 156 - 174 MHz</li><li>- <b>Band 4</b> - 225 - 399.975 MHz</li><li>- <b>Steps</b> - 25 kHz</li><li>- <b>Channels</b> - 20</li></ul></li></ul>
<ul style="list-style-type: none"><li>• <b>VOL Knob</b></li></ul>	<ul style="list-style-type: none"><li>• <b>Controls RIO UHF 2 Audio Level</b></li></ul>
<ul style="list-style-type: none"><li>• <b>BRT/TEST Knob</b></li></ul>	<ul style="list-style-type: none"><li>• <b>Controls Radio FREQ Display</b></li></ul>
<ul style="list-style-type: none"><li>• <b>SQL Switch</b></li></ul>	<ul style="list-style-type: none"><li>• <b>Toggles radio squelch (noise attenuation)</b></li></ul>
<ul style="list-style-type: none"><li>• <b>Mode Selector</b></li></ul>	<ul style="list-style-type: none"><li>• <b>Transceiver Settings</b><ul style="list-style-type: none"><li>- <b>OFF</b> - Secures V/UHF radio unless frequency mode set to <b>243</b></li><li>- <b>T/R</b> - Energizes transmitter and main receiver</li><li>- <b>T/R &amp; G</b> - Energizes transmitter, main, and guard receiver</li><li>- <b>DF</b> - Automatic direction finding from 108 - 399.975 MHz</li><li>- <b>TEST</b> - BIT</li></ul></li></ul>

<ul style="list-style-type: none"> <li>• <b>CHAN SEL Outer Dial</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>Selects Frequency Tuning Mode</b> <ul style="list-style-type: none"> <li>- <b>243</b> – Selects UHF Guard</li> <li>- <b>MAN</b> – Manual Select frequency</li> <li>- <b>G</b> – Tunes Tranceiver to guard frequency in last selected band</li> <li>- <b>PRESET</b> – Allows selection between 40 preset channels (31-40 are Have Quick and not simulated)</li> <li>- <b>READ</b> – Displays frequency of selected preset channel</li> <li>- <b>LOAD</b> – Saves displayed frequency to selected preset channel</li> </ul> </li> </ul>
<ul style="list-style-type: none"> <li>• <b>CHAN SEL Inner Dial</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>Selects one of 40 Preset Channels</b></li> </ul>

### 2.3.4 KY-28 VOICE SECURITY EQUIPMENT

<ul style="list-style-type: none"> <li>• <b>KY-28 Voice Security Equipment</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>Voice Ciphering</b></li> <li>• <b>Integrated with UHF 1 and V/UHF 2</b></li> <li>• <b>2 min Warmup</b></li> </ul>
<ul style="list-style-type: none"> <li>• <b>ZEROIZE Switch</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>Lift Guard to Erase Preloaded Codes</b></li> <li>• <b>Codes loaded via ground crew</b></li> </ul>
<ul style="list-style-type: none"> <li>• <b>Power-Mode Switch</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>Selects Mode</b> <ul style="list-style-type: none"> <li>- <b>P/OFF</b> – Removes power from system</li> <li>- <b>C</b> – Transmit / Receive in secure mode</li> <li>- <b>DELAY</b> – Between PTT and trans.</li> </ul> </li> </ul>
<ul style="list-style-type: none"> <li>• <b>Radio-Select Switch</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>Selects Radio Mode</b> <ul style="list-style-type: none"> <li>- <b>RELAY</b> – Acts as relay for other stations (not simulated)</li> <li>- <b>RAD-2</b> – Secure voice for V/UHF 2</li> <li>- <b>RAD-1</b> – Secure voice for UHF 1</li> </ul> </li> </ul>

## 2.3.5 LINK 4 DATALINK - OVERVIEW

• <b>Link 4</b>	<ul style="list-style-type: none"> <li>• <b>Modes</b> – Mutually exclusive               <ul style="list-style-type: none"> <li>– <b>Link 4A</b> – AWACS / Surface Ship</li> <li>– <b>Link 4C</b> – Fighter to Fighter</li> </ul> </li> <li>• <b>Data Speed</b> – up to 5000 bit/s!</li> </ul>
• <b>Link 4A</b>	<ul style="list-style-type: none"> <li>• <b>Network</b> – AWACS / Surface Ship</li> <li>• Additionally used for ACLS</li> </ul>
• <b>Link 4C</b>	<ul style="list-style-type: none"> <li>• <b>Network</b> – Fighter to Fighter               <ul style="list-style-type: none"> <li>– Up to four F-14s</li> <li>– Unique to F-14</li> </ul> </li> </ul>
• <b>Basic Operation</b>	(a) <b>Power Switch</b> ..... As Desired <ul style="list-style-type: none"> <li>• <b>Link 4A</b> ..... <b>ON</b></li> <li>• <b>Link 4C</b> ..... <b>AUX</b></li> </ul> (b) <b>Mode Switch</b> ..... <b>TAC</b> (c) <b>Frequency</b> ..... <b>Set</b>

## 2.3.6 LINK 4 DATALINK - CONTROL PANEL

• <b>Test Switch</b>	<ul style="list-style-type: none"> <li>• <b>Controls Test / Anti-Jam Modes</b> <ul style="list-style-type: none"> <li>– <b>TEST</b> – Initiates BIT</li> <li>– <b>NORM</b> – Normal Operation</li> <li>– <b>A-J</b> – Anti-Jam (not simulated)</li> </ul> </li> </ul>
• <b>Frequency Thumbwheels</b>	<ul style="list-style-type: none"> <li>• <b>Selects Datalink Frequency</b> <ul style="list-style-type: none"> <li>– <b>First Digit – Fixed as 3</b></li> <li>– <b>Allowable Range</b> – 300.0 - 324.9 MHz</li> </ul> </li> </ul>
• <b>Power Switch</b>	<ul style="list-style-type: none"> <li>• <b>Controls System Power</b> <ul style="list-style-type: none"> <li>– <b>ON</b> – Enables Link 4A</li> <li>– <b>OFF</b> – Disables system</li> <li>– <b>AUX</b> – Enables Link 4C</li> </ul> </li> </ul>

**2.3.7 LINK 4 DATALINK - REPLY/ANTENNA PANEL**

<ul style="list-style-type: none"><li>• <b>ANTENNA Switch</b></li></ul>	<ul style="list-style-type: none"><li>• <b>Selects Antenna</b><ul style="list-style-type: none"><li>- Shared with UHF 1 – Mutually exclusive</li><li>- UHF 1 LWR / DL UPR</li><li>- UHF 1 UPR / DL LWR</li></ul></li></ul>
<ul style="list-style-type: none"><li>• <b>REPLY Switch</b></li></ul>	<ul style="list-style-type: none"><li>• <b>Sets Reply Mode</b><ul style="list-style-type: none"><li>- <b>NORM</b> – Own Aircraft replies to datalink messages</li><li>- <b>CANC</b> – Receive only</li></ul></li></ul>
<ul style="list-style-type: none"><li>• <b>MODE Switch</b></li></ul>	<ul style="list-style-type: none"><li>• <b>Controls Overall Mode</b><ul style="list-style-type: none"><li>- <b>TAC</b> – Normal airborne mode</li><li>- <b>CAINS/WAYPT</b> – Enables CV align</li></ul></li></ul>
<ul style="list-style-type: none"><li>• <b>Address Thumbwheels</b></li></ul>	<ul style="list-style-type: none"><li>• <b>Sets Two Least Significant Bits of Aircraft D/L Address</b></li></ul>

## 2.4 DEFENSIVE SYSTEMS

### 2.4.1 ALR-67 RWR - CONTROLS / OVERVIEW

<ul style="list-style-type: none"><li>• <b>PWR Switch</b></li></ul>	<ul style="list-style-type: none"><li>• Set to ON to Operate</li></ul>
<ul style="list-style-type: none"><li>• <b>VOL Knob</b></li></ul>	<ul style="list-style-type: none"><li>• Sets RIO Audio Level</li></ul>
<ul style="list-style-type: none"><li>• <b>TEST Switch</b></li></ul>	<ul style="list-style-type: none"><li>• <b>Springloaded to Center</b></li><li>• <b>BIT</b> – Initiates Build In Test</li><li>• <b>SPL</b> – Holds BIT status page while held</li></ul>
<ul style="list-style-type: none"><li>• <b>MODE Switch</b></li></ul>	<ul style="list-style-type: none"><li>• <b>Springloaded to Center</b></li><li>• <b>OFST</b> – Separates overlapping symbols</li><li>• <b>LMT</b> – Displays 6 highest threats</li></ul>
<ul style="list-style-type: none"><li>• <b>DISPLAY TYPE Selector</b></li></ul>	<ul style="list-style-type: none"><li>• <b>Changes Priority of Display</b><ul style="list-style-type: none"><li>– <b>NORM</b> – Normal threat symbology</li><li>– <b>AI</b> – Airborne Interceptor prioritized</li><li>– <b>AAA</b> – Anti-aircraft artillery prioritized</li><li>– <b>UNK</b> – Unknown prioritized</li><li>– <b>FRIEND</b> – Friendly threats prioritized</li></ul></li><li>• <b>Indicated by Letter in Display Center</b></li></ul>

- **Display**

- **Outer Band**

- **Critical Band**
- Imminent threat to own aircraft
- Blinking indicates engaging own aircraft

- **Middle Band**

- **Lethal Band**
- Potentially threatening emitters
- Not actively engaging own aircraft

- **Inner Band**

- **Non-Lethal Band**
- Not currently within capability of emitter

- **Inner Circle**

- **N, I, A, U, F** – Prioritization type
- **O** – Offset
- **L** – Limit
- **B** – BIT Failure
- **T** – Thermal overload

- **Alert Tones**

- **Short Tone** – New emitter / emitter moved
- **Slow Warbling** – Threat in critical band
- **Fast Warbling** – Threat actively engaging own aircraft
- **4-Tone Sequence** – New threat capable of silently engaging own aircraft

## 2.4.2 ALR-67 RWR - THREAT SYMBOLOGY

## SHIPS

<b>AB</b>	Arleigh Burke
<b>AK</b>	Admiral Kuznetsov
<b>GR</b>	Grisha 5 (Albatros)
<b>HP</b>	Oliver Hazard Perry
<b>J2</b>	Type 054A Frigate, "Jiangkai II class"
<b>KK</b>	Krivak 3 (Rezky)
<b>KV</b>	Kirov (Pyotr Velikiy)
<b>L1</b>	Type 052B Destroyer, "Luyang I class"
<b>L2</b>	Type 052C Destroyer, "Luyang II class"
<b>N</b>	<i>Ship with Nav Radar</i>
<b>NE</b>	Neustrashimy
<b>NZ</b>	Nimitz (Vinson, Stennis)
<b>SV</b>	Slava (Moscow)
<b>TC</b>	Ticonderoga
<b>TT</b>	Tarantul 3 (Molniya)
<b>TW</b>	Tarawa
<b>YU</b>	Type 071 Amphibious Transport Dock, "Yuzhao class"

## AIRCRAFT

<b>14</b>	F-14A/B
<b>15</b>	F-15C/E
<b>16</b>	F-16C
<b>17</b>	JF-17
<b>18</b>	F/A-18C
<b>19</b>	MiG-19

<b>21</b>	MiG-21bis
<b>23</b>	MiG-23MLD
<b>24</b>	Su-24M/MR
<b>25</b>	MiG-25PD
<b>29</b>	MiG-29A/G/S Su-27 Su-33 J-11A
<b>30</b>	Su-30
<b>31</b>	MiG-31
<b>34</b>	Su-34
<b>37</b>	AJS-37
<b>39</b>	Su-25TM
<b>50</b>	A-50
<b>52</b>	B-52
<b>AN</b>	AN-26B AN-30M
<b>AP</b>	AH-64D
<b>B1</b>	B-1B
<b>BE</b>	Tu-95 Tu-142M
<b>BF</b>	Tu-22M3
<b>BJ</b>	Tu-160
<b>E2</b>	E-2D
<b>E3</b>	E-3C
<b>F4</b>	F-4E
<b>F5</b>	F-5E
<b>HX</b>	Ka-27
<b>IL</b>	IL-76MD IL-78M
<b>KC</b>	KC-135

<b>KJ</b>	KJ-2000
<b>M2</b>	Mirage 2000-C Mirage 2000-5
<b>S3</b>	S-3B
<b>SH</b>	SH-60B
<b>TO</b>	Tornado
<b>TR</b>	C-130 C-17A

**AIR DEFENSE**

<b>2</b>	S-75 TR SNR (SA-2) "Fan Song"
<b>3</b>	S-125 TR SNR-125 (SA-3) "Low Blow"
<b>6</b>	Kub SA-6
<b>7</b>	HQ-7 TR
<b>8</b>	OSA (SA-8)
<b>10</b>	S-300PS 30N6 TR (SA-10)
<b>11</b>	Buk (SA-11)
<b>12</b>	S-300V
<b>15</b>	Tor 9A331 (SA-15)
<b>19</b>	Tunguska 2C6M (SA-19)
<b>A</b>	Gepard M-163 Vulcan ZSU-23-4 Shilka
<b>BB</b>	S-300PS 64H6E SR (SA-10/Big Bird)
<b>BF</b>	Rapier Blindfire TR
<b>CS</b>	S-300PS 5N66M SR (SA-10/Clam Shell)
<b>DE</b>	Sborka (Dog Ear)
<b>FF</b>	S-125 P-19 SR (SA-3/Flat Face)
<b>GR</b>	Roland SR

<b>HA</b>	Hawk SR
<b>HK</b>	Hawk TR
<b>HQ</b>	HQ-7 SR
<b>PT</b>	Patriot
<b>RO</b>	Roland
<b>RP</b>	Rapier SR
<b>S</b>	1L13 55G6 EWR
<b>SD</b>	Buk TR (SA-11/Snow Drift)
<b>SN</b>	PRW-11 (Side Net)

**MISSILES**

<b>M</b>	AIM-54 AIM-120 MICA-EM R-37 R-77 SD-10
----------	---

**ATC**

<b>T</b>	Airport ATC Radar
----------	-------------------



## 2.4.3 ALE-39 CMS DISPENSER

## Programmer

- |  |  |
|--|--|
| <ul style="list-style-type: none"> <li>• <b>CHAFF Section</b></li> </ul> | <ul style="list-style-type: none"> <li>• <b>B QTY</b> – Number of cartridges to eject in burst               <ul style="list-style-type: none"> <li>– <b>Options</b> – <b>1-4</b> cartridges, <b>C</b> continuous, <b>R</b> random (4-6 cartridges)</li> </ul> </li> <li>• <b>B INTV</b> – Time in seconds between each cartridge ejection               <ul style="list-style-type: none"> <li>– <b>Options</b> – <b>.1, .2, .5, .7, 1</b> seconds, <b>R</b> random</li> </ul> </li> <li>• <b>S QTY</b> – How many salvos of bursts               <ul style="list-style-type: none"> <li>– <b>Options</b> – <b>1, 2, 4, 6, 8, 10, 15</b> salvos</li> </ul> </li> <li>• <b>S INT</b> – Time in seconds between salvos               <ul style="list-style-type: none"> <li>– <b>Options</b> – <b>2, 4, 6, 8, 10</b> seconds</li> </ul> </li> </ul> |
|--|--|

## NOTE

- **R & C** burst settings have special **INTV** behavior

- |  |  |
|--|--|
| <ul style="list-style-type: none"> <li>• <b>JAMMER Sect.</b></li> </ul>  | Jammer cartridges not implemented in DCS   |
| <ul style="list-style-type: none"> <li>• <b>FLARE Section</b></li> </ul> | <ul style="list-style-type: none"> <li>• <b>QTY</b> – Number of cartridges to eject in burst               <ul style="list-style-type: none"> <li>– <b>Options</b> – <b>2, 3, 4, 6, 8, 10</b> cartridges</li> </ul> </li> <li>• <b>INTV</b> – Time in seconds between each cartridge ejection               <ul style="list-style-type: none"> <li>– <b>Options</b> – <b>2, 4, 6, 8, 10</b> seconds</li> </ul> </li> </ul> |

## Control Panel

- |  |  |
|--|--|
| <ul style="list-style-type: none"> <li>• <b>PWR/MODE Switch</b></li> </ul> | <ul style="list-style-type: none"> <li>• <b>AUTO (CHAFF) / MAN</b> – Enables power to system and allows automatic chaff ejection program initiation</li> <li>• <b>MAN</b> – Enables power to system</li> <li>• <b>OFF</b> – Disables system</li> </ul> |
|--|--|

## 2.4.4 ALQ-100 / ALQ-126 DECM

<ul style="list-style-type: none"> <li>• <b>DECM OVERVIEW</b></li> </ul>	<p><b>Defensive Electronic Counter Measures</b></p> <ul style="list-style-type: none"> <li>• Modelled as simple noise jammers in DCS</li> </ul>
<ul style="list-style-type: none"> <li>• <b>Controls</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>AUDIO Knob</b> – Controls volume of audio played to RIO. Audio is generated directly from received PRF signals</li> <li>• <b>Mode Selector</b> <ul style="list-style-type: none"> <li>– <b>OFF</b> – Turns off power to the system</li> <li>– <b>STBY</b> – Begins pre-warming system</li> <li>– <b>HOLD 3 SEC</b> – Prepares system for BIT</li> <li>– <b>ACT</b> – BIT of system, takes approx 30 s</li> <li>– <b>REC</b> – Receive only mode</li> <li>– <b>RPT</b> – Full system functionality</li> </ul> </li> </ul>
<ul style="list-style-type: none"> <li>• <b>STANDBY Light</b></li> </ul>	<p>Indicates system warmup not yet complete or system has a fault</p>
<ul style="list-style-type: none"> <li>• <b>Threat Advisory Indicator</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>IFF</b> – Friendly IFF signal received but no reply generated</li> <li>• <b>RCV</b> – ALQ-126 is receiving a signal</li> <li>• <b>XMIT</b> – ALQ-126 is transmitting</li> <li>• <b>SAM</b> <ul style="list-style-type: none"> <li>– <b>Steady</b> – Lockon from SAM detected</li> <li>– <b>Flashing</b> – SAM launch detected</li> </ul> </li> <li>• <b>AAA</b> <ul style="list-style-type: none"> <li>– <b>Steady</b> – Lockon from AAA detected</li> <li>– <b>Flashing</b> – AAA engagement detected</li> </ul> </li> <li>• <b>CW</b> – CW emitter detected</li> <li>• <b>AI</b> – Airborne Interceptor lockon detected</li> </ul>

## Chapter 3

# AWG-9 RADAR

### Contents

3.1	OVERVIEW . . . . .	3-3
3.1.1	MAIN MODES - OVERVIEW . . . . .	3-3
3.1.2	MAIN MODES . . . . .	3-3
3.2	PULSE MODES . . . . .	3-4
3.2.1	PULSE - PULSE SEARCH . . . . .	3-4
3.2.2	PULSE - PSTT . . . . .	3-5
3.3	PULSE DOPPLER MODES . . . . .	3-6
3.3.1	PD - PULSE DOPPLER SEARCH . . . . .	3-6
3.3.2	PD - RWS . . . . .	3-9
3.3.3	PD - TWS . . . . .	3-10
3.3.4	PD - TWS MAN . . . . .	3-12
3.3.5	PD - TWS AUTO . . . . .	3-13
3.3.6	PD - PDSTT . . . . .	3-14
3.4	ACM . . . . .	3-15
3.4.1	ACM MODES - OVERVIEW . . . . .	3-15
3.5	IFF . . . . .	3-17
3.5.1	APX-76 IFF . . . . .	3-17
3.6	TACTICAL INFORMATION DISPLAY . . . . .	3-18
3.6.1	TID SYMBOLOGY . . . . .	3-18

AWG-9

### 3.1 OVERVIEW

#### 3.1.1 MAIN MODES - OVERVIEW


	Pulse		Pulse Doppler			
	Pulse Search	P-STT	PD Search	RWS	TWS	PD-STT
<b>Range</b>	60 nm	50 nm	110 nm	90 nm	90 nm	90 nm
<b>AIM-7</b>	BRSIT	CW	BRSIT		-	PD
<b>AIM-54</b>	BRSIT	ACT	BRSIT		Multi TGT	PD/ACT

#### 3.1.2 MAIN MODES

- |  |  |
|--|--|
| <ul style="list-style-type: none"> <li><b>Pulse</b></li> </ul>         | <ul style="list-style-type: none"> <li><b>Basic Pulse w/o doppler filtering</b> <ul style="list-style-type: none"> <li>- Cannot be notched</li> <li>- Ground Clutter</li> <li>- Rudimentary Ground mapping</li> </ul> </li> <li><b>Pulse Sub-Modes</b> <ul style="list-style-type: none"> <li>- <b>Pulse Search</b></li> <li>- <b>Pulse-STT</b></li> </ul> </li> </ul>   |
| <ul style="list-style-type: none"> <li><b>Pulse Doppler</b></li> </ul> | <ul style="list-style-type: none"> <li><b>Doppler filter -&gt; no ground returns</b> <ul style="list-style-type: none"> <li>- Susceptible to notching</li> <li>- No ground clutter</li> <li>- Greater range</li> <li>- Advanced sub modes</li> <li>- AIM-54 Guidance</li> </ul> </li> <li><b>Pulse Doppler Sub-Modes</b> <ul style="list-style-type: none"> <li>- <b>PD Search</b></li> <li>- <b>RWS</b></li> <li>- <b>TWS</b></li> <li>- <b>PD-STT</b></li> </ul> </li> </ul> |

## 3.2 PULSE MODES


### 3.2.1 PULSE - PULSE SEARCH

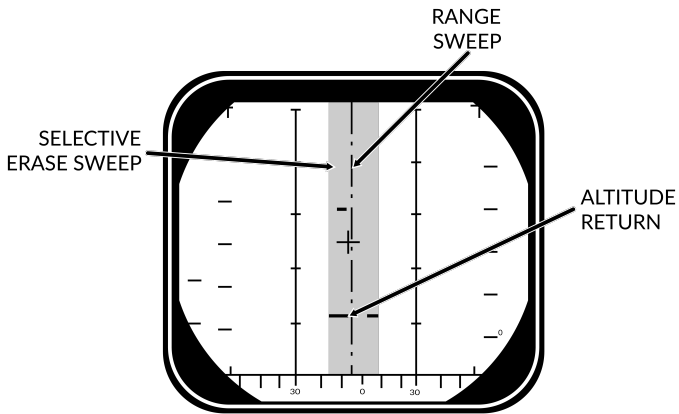

SEARCH ( $\pm 10^\circ$  SCAN)

<ul style="list-style-type: none"> <li><b>Pulse Search</b></li> </ul>	<p><b>Basic Mode</b> - AWG-9 does not use pulse doppler filtering</p> <ul style="list-style-type: none"> <li><b>Advantages</b> <ul style="list-style-type: none"> <li>- All aspect target detection</li> <li>- Cannot be notched</li> <li>- Rudimentary ground mapping</li> </ul> </li> <li><b>Disadvantages</b> <ul style="list-style-type: none"> <li>- Cannot discern ground returns and targets</li> <li>- Lower range</li> </ul> </li> </ul>
<ul style="list-style-type: none"> <li><b>DDD</b></li> </ul>	<ul style="list-style-type: none"> <li><b>Range/Azimuth</b></li> <li>Visual representation of radar and erase sweeps</li> </ul>
<ul style="list-style-type: none"> <li><b>TID</b></li> </ul>	<ul style="list-style-type: none"> <li><b>No Information from Pulse</b></li> <li><b>Cannot guide AIM-54</b></li> </ul>

## 3.2.2 PULSE - PSTT

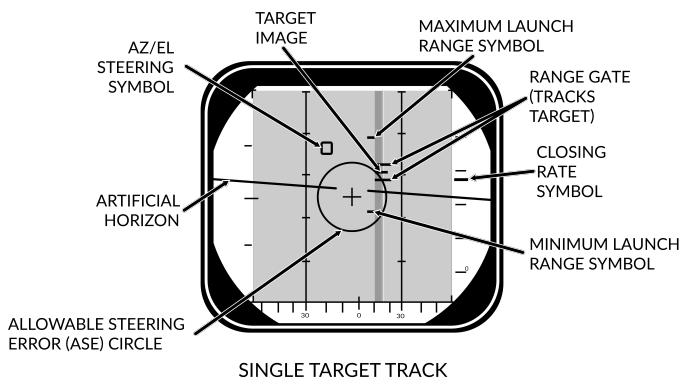

- **Pulse STT**

Lock Target w/o doppler filtering

- **Advantages**

- Cannot be notched

- **Disadvantages**

- Susceptible to ground clutter

- **Lock Target**

- **Conditions**

- Pulse Search Mode selected
- RDR HCU Mode selected

- **Lock Target**

- Hold HCU Half-action
- Slew to desired Target
- HCU Full-Action to lock

- **Unlock Target**

- HCU Half-action


- **DDD**

- **Track Indications**

- ANT TRK light
- RDROT light
- Tracking gates
- Closure rate
- Attack Symbology

### 3.3 PULSE DOPPLER MODES

#### 3.3.1 PD - PULSE DOPPLER SEARCH

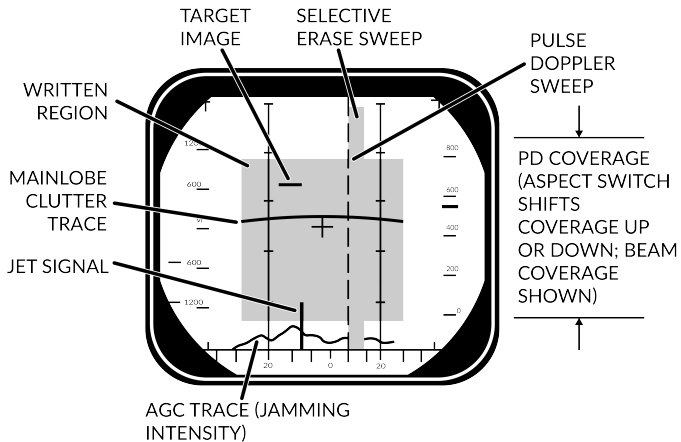

SEARCH ( $\pm 40^\circ$  SCAN)

- Pulse Doppler Search**

**“Early Warning” Mode** - Longest Range, cannot display range

- Advantages**

- Longest Range
- Doppler Filtering
- **“Look Down Shoot Down”**

- Disadvantages**

- Can be notched
- No range information


- DDD**

- Closure Rate/Azimuth**

- Visual representation of radar and erase sweeps



<ul style="list-style-type: none"><li>• <b>Doppler Filters</b></li></ul>	<ul style="list-style-type: none"><li>• <b>Main Lobe Clutter (MLC) Filter</b><ul style="list-style-type: none"><li>- Own GS +/- 133 knots</li><li>- Removes main ground return</li><li>- Source of notching</li></ul></li><li>• <b>Zero Doppler Filter</b><ul style="list-style-type: none"><li>- <b>Negative own GS +/- 100 knots</b></li><li>- Removes Radar reflection from ground directly beneath own AC</li></ul></li></ul>
<ul style="list-style-type: none"><li>• <b>MLC Switch</b></li></ul>	<ul style="list-style-type: none"><li>• <b>IN:</b> Enables MLC filter</li><li>• <b>AUTO:</b> Enables MLC filter if look-up angle less than 3 deg</li><li>• <b>OUT:</b> Disables MLC filter</li></ul>
<ul style="list-style-type: none"><li>• <b>Vc Switch</b></li></ul>	<p>Changes closure rate DDD scale</p> <ul style="list-style-type: none"><li>• <b>X-4:</b> -800 to 4000 knots</li><li>• <b>NORM:</b> -200 to 1000 knots</li><li>• <b>VID:</b> -50 to 250 knots</li></ul>
<ul style="list-style-type: none"><li>• <b>ASPECT Switch</b></li></ul>	<p>Changes closure rate processing scale</p> <ul style="list-style-type: none"><li>• <b>NOSE:</b> -600 to 1800 knots</li><li>• <b>BEAM:</b> -1200 to 1200 knots</li><li>• <b>TAIL:</b> -1800 to 600 knots</li></ul>

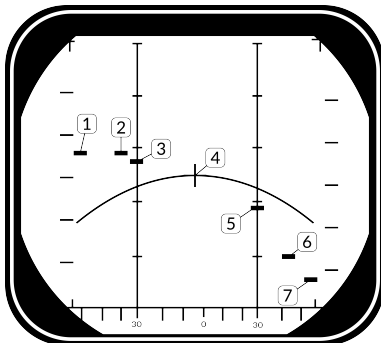

	Look Angle	Line of Sight Rate	Target Heading
1	60 deg	1490	180 deg
2	45 deg	1500	120 deg
3	30 deg	1428	100 deg
4	0 deg	1200	90 deg
5	30 deg	672	80 deg
6	45 deg	210	60 deg
7	60 deg	-300	0 deg

## 3.3.2 PD - RWS

<ul style="list-style-type: none"> <li>• <b>Range While Search</b></li> </ul>	<p><b>FM Ranging</b>, used for getting good A/A picture before selecting TWS</p> <ul style="list-style-type: none"> <li>• <b>FM Ranging</b> <ul style="list-style-type: none"> <li>- Pulse Doppler with ranging</li> <li>- TID shows momentary tracks with ranges</li> <li>- Processing reduces max range</li> </ul> </li> <li>• <b>Advantages</b> <ul style="list-style-type: none"> <li>- Long Range</li> <li>- Doppler Filtering</li> <li>- “<b>Look Down Shoot Down</b>”</li> <li>- Signal Processing</li> </ul> </li> <li>• <b>Disadvantages</b> <ul style="list-style-type: none"> <li>- Can be notched</li> </ul> </li> </ul>
<ul style="list-style-type: none"> <li>• <b>DDD</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>Closure Rate/Azimuth</b></li> <li>• Visual representation of radar and erase sweeps</li> </ul>
<ul style="list-style-type: none"> <li>• <b>TID</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>Momentary Tracks</b></li> <li>• Max concurrent tracks: 48</li> <li>• <b>Cannot lock targets from TID</b></li> </ul>
<ul style="list-style-type: none"> <li>• <b>Filtering</b></li> </ul>	<p><b>Same as Pulse Doppler Search</b></p>

## 3.3.3 PD - TWS

<ul style="list-style-type: none"> <li>• <b>Track While Scan</b></li> </ul>	<p><b>Builds Track Files</b>, high situational awareness, multi-target AIM-54 launch</p> <ul style="list-style-type: none"> <li>• <b>Track Files</b> <ul style="list-style-type: none"> <li>- AWG-9 builds Trackfiles for contacts</li> <li>- Can launch multiple AIM-54</li> <li>- Processing reduces max range</li> <li>- Can lock targets from TID</li> </ul> </li> <li>• <b>FM Ranging</b> <ul style="list-style-type: none"> <li>- Pulse Doppler with ranging</li> <li>- TID shows momentary tracks with ranges</li> <li>- Processing reduces max range</li> </ul> </li> <li>• <b>Advantages</b> <ul style="list-style-type: none"> <li>- Doppler Filtering</li> <li>- <b>Multi-Target AIM-54</b></li> </ul> </li> <li>• <b>Disadvantages</b> <ul style="list-style-type: none"> <li>- <b>Lowest Range</b></li> <li>- Can be notched</li> </ul> </li> </ul>
<ul style="list-style-type: none"> <li>• <b>DDD</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>Closure Rate/Azimuth</b></li> <li>• Visual representation of radar and erase sweeps</li> </ul>
<ul style="list-style-type: none"> <li>• <b>TID</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>Tracksfiles</b></li> <li>• Max concurrent tracks: 24</li> <li>• Max displayed tracks: 18</li> </ul>
<ul style="list-style-type: none"> <li>• <b>Filtering</b></li> </ul>	<p><b>Same as Pulse Doppler Search</b></p>
<ul style="list-style-type: none"> <li>• <b>Scan Volume</b></li> </ul>	<p>Trackfiles require update every 2.5 s -&gt;</p> <ul style="list-style-type: none"> <li>• 20 deg 4 bar (if selected)</li> <li>• 40 deg 2 bar (else)</li> </ul>
<ul style="list-style-type: none"> <li>• <b>TID Mode Selector</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>GND STAB:</b> Ground Stabilized, True North is up on TID</li> <li>• <b>A/C STAB:</b> Aircraft Stabilized</li> <li>• <b>ATTAK:</b> same as A/C STAB with superimposed attack steering symbology</li> <li>• <b>TV:</b> Displays TCS on TID, displays LANTIRN on TID if equipped</li> </ul>

- **TID Display Selector Buttons**

- **RID DISABLE:** Not simulated
- **ALT NUM:** Enables display of track altitudes on left side of track symbols
- **SYM ELEM:** Enables display of all supplementary symbology of tracks and waypoints
- **DATA LINK:** Enables display of D/L contacts
- **JAM STROBE:** Enables display of jam strobes
- **NON-ATTK:** enables/disables display of targets not possible to engage (friendlies)
- **LAUNCH ZONE:** Enables display of weapon launch zones
- **VEL VECTOR:** Enables display of velocity vectors

- **TRACK HOLD CLSN Steering Buttons**

- **TRACK HOLD**
  - Normally: Tracks maintained for 14 s after last observation
  - Track Hold: maintained for 2 min after last observation
- **CLSN Button**
  - begins collision steering to currently tracked target
  - enables Steering Centroid if in TWS
  - LD CLSN presents azimuth steering only
  - CLSN presents both azimuth and elevation steering

- **TWS AUTO / MAN**

- **TWS MAN:** Manual azimuth/elevation control, target designation by RIO
- **TWS AUTO:** Automatic prioritization of targets and azimuth elevation control


## 3.3.4 PD - TWS MAN

<ul style="list-style-type: none"> <li>• <b>TWS MAN</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>Target Selection:</b> Manual</li> <li>• <b>Scan Azimuth/Elevation:</b> Manual</li> </ul>
<ul style="list-style-type: none"> <li>• <b>Target Selection</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>Conditions</b> <ul style="list-style-type: none"> <li>- TWS MAN Radar Mode selected</li> <li>- TID CURSOR TID Mode selected</li> </ul> </li> <li>• <b>Hook Target</b> <ul style="list-style-type: none"> <li>(a) Hold HCU Half-Action</li> <li>(b) Slew TID Cursor over desired Tgt</li> <li>(c) HCU Full-Action to select Tgt</li> </ul> </li> <li>• <b>TID Symbology</b> <ul style="list-style-type: none"> <li>- Range (<b>RA</b>)</li> <li>- Bearing (<b>BR</b>)</li> <li>- Altitude (<b>AL</b>)</li> <li>- Magnetic course (<b>MC</b>)</li> </ul> </li> <li>• <b>Lock Target</b> <ul style="list-style-type: none"> <li>(d) Press <b>PD STT</b> or <b>Pulse STT</b> buttons</li> </ul> </li> <li>• <b>Deselect Target</b> <ul style="list-style-type: none"> <li>(e) press HCU Half-Action</li> </ul> </li> </ul>
<ul style="list-style-type: none"> <li>• <b>AIM-54 Launch</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>Automatically selects TWS AUTO</b></li> <li>• <b>Prevents selection of TWS MAN</b></li> </ul>

## 3.3.5 PD - TWS AUTO

<ul style="list-style-type: none"><li>• <b>TWS AUTO</b></li></ul>	<ul style="list-style-type: none"><li>• <b>Target Selection:</b> prioritizes contacts based off range, aspect, closure</li><li>• <b>Scan Azimuth/Elevation:</b> Geometric center of targets in scan volume</li></ul>
<ul style="list-style-type: none"><li>• <b>Centroid / Steering Cues</b></li></ul>	<ul style="list-style-type: none"><li>• <b>Steering Centroid</b><ul style="list-style-type: none"><li>- facilitates steering cues</li><li>- HUD, VDI, TID, DDD</li><li>- Appears as <b>X</b> on TID</li><li>- Takes Gimbal limits into account</li><li>- Weights individual Tracks based on parameters</li></ul></li><li>• <b>Illumination Centroid</b><ul style="list-style-type: none"><li>- <b>Not Visible</b></li><li>- Controls azimuth and elevation of scan pattern</li><li>- Takes scan volume into account</li></ul></li></ul>
<ul style="list-style-type: none"><li>• <b>Pilot Steering Cues</b></li></ul>	<ul style="list-style-type: none"><li>• <b>Conditions</b><ul style="list-style-type: none"><li>- A-A HUD Mode selected</li><li>- Master Arm ON (UP)</li><li>- AIM-54 or AIM-7 selected</li><li>- TWS-AUTO selected</li></ul></li></ul>

## 3.3.6 PD - PDSTT

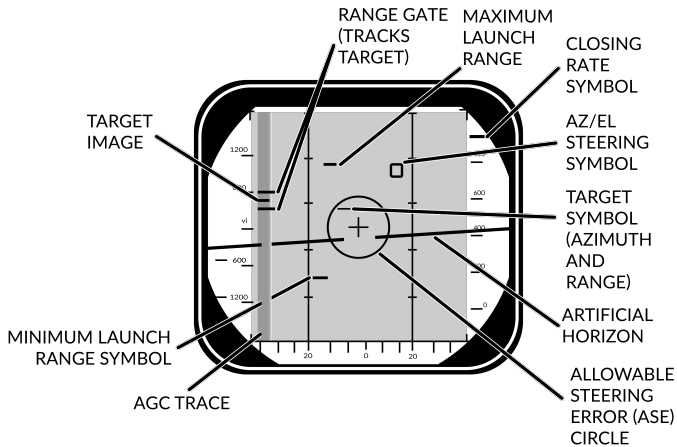

SINGLE TARGET TRACK

<ul style="list-style-type: none"> <li><b>Pulse Doppler STT</b></li> </ul>	<p>Lock Target with doppler filtering</p> <ul style="list-style-type: none"> <li><b>Advantages</b> <ul style="list-style-type: none"> <li>Ground Clutter filtering</li> </ul> </li> <li><b>Disadvantages</b> <ul style="list-style-type: none"> <li>Susceptible to notching</li> </ul> </li> </ul>
<ul style="list-style-type: none"> <li><b>Lock Target</b></li> </ul>	<ul style="list-style-type: none"> <li><b>Conditions</b> <ul style="list-style-type: none"> <li>Pulse Doppler Mode selected (PD Search, RWS, TWS)</li> <li>RDR HCU Mode selected</li> </ul> </li> <li><b>Lock Target</b> <ul style="list-style-type: none"> <li>(a) Hold HCU Half-action</li> <li>(b) Slew to desired Target</li> <li>(c) HCU Full-Action to lock</li> </ul> </li> <li><b>Unlock Target</b> <ul style="list-style-type: none"> <li>(d) HCU Half-action</li> </ul> </li> </ul>



- **DDD**

- **Track Indications**

- ANT TRK light
- RDROT light
- Tracking gates
- Closure rate
- Attack Symbology

### 3.4 ACM


#### 3.4.1 ACM MODES - OVERVIEW

	PLM	VSL	PAL	MRL
Range	5 nm	5 nm	15 nm	5 nm
Description	Boresight	Vertical	Horizontal	RIO
Weapons	Gun + All Missiles			

- **PLM**

- **Pilot Lockon Mode**
- **Highest Priority ACM**
- **Search Pattern**

- Small Boresight
- Range: 5 nm

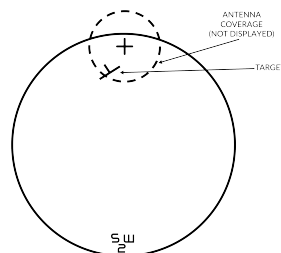

- **VSL**

- **Vertical Scan Lockon**
- **HI Search Pattern**
  - Width: 5 deg
  - Vertical: +15 to +55 deg
  - Range: 5 nm
- **LO Search Pattern**
  - Width: 5 deg
  - Vertical: -15 to +25 deg
  - Range: 5 nm
- **RIO/PILOT Controlled**

- **PAL**

- **Pilot Automatic Lockon**
- **Search Pattern**
  - Width: +/- 20 deg
  - Vertical: 8-bar
  - Range: 15 nm

- **MRL**

- **Manual Rapid Lockon**
- **RIO Controlled**
- **Search Pattern**
  - HCU Controlled
  - Range: 5 nm

**3.5 IFF**

---





**3.5.1 APX-76 IFF**

---

### 3.6 TACTICAL INFORMATION DISPLAY




#### 3.6.1 TID SYMBOLOGY















##### GENERAL

Center Dot		<ul style="list-style-type: none"> <li>• <b>Basic Component of Symbols</b> <ul style="list-style-type: none"> <li>– Marks coordinates of symbol</li> </ul> </li> </ul>
Own AC		<ul style="list-style-type: none"> <li>• <b>Symbol representing own aircraft</b> <ul style="list-style-type: none"> <li>– Ground Stabilized: Moves</li> <li>– Aircraft Stabilized: Stationary</li> <li>– Outside TID: line drawn from TID center towards symbol</li> </ul> </li> </ul>
TID Cursor		<ul style="list-style-type: none"> <li>• <b>Hook Cursor</b> <ul style="list-style-type: none"> <li>– Controlled by HCU in TID mode</li> </ul> </li> <li>• <b>Half-Action</b> <ul style="list-style-type: none"> <li>– Enables display of symbol</li> <li>– Enables HCU stick to move cursor</li> </ul> </li> <li>• <b>Full-Action</b> <ul style="list-style-type: none"> <li>– Hooks closest symbol</li> <li>– If no symbol near, cursor dropped at location</li> </ul> </li> </ul>
TWS Steering Centroid		<ul style="list-style-type: none"> <li>• <b>Steering centroid of TWS tracks</b> <ul style="list-style-type: none"> <li>– Selected by WCS for weapons engagement</li> </ul> </li> </ul>





##### ONBOARD SENSORS

##### Symbol Above Dot





Unknown		<ul style="list-style-type: none"> <li>• <b>Unknown Sensor Track</b></li> <li>• <b>All Returns in RWS</b></li> </ul>
Hostile		<ul style="list-style-type: none"> <li>• <b>Sensor Track designated Hostile by RIO</b></li> </ul>
Friend		<ul style="list-style-type: none"> <li>• <b>Sensor Track designated Friendly by RIO</b></li> </ul>







Angle-Track Radar Target		<ul style="list-style-type: none"> <li>• Radar Angle Tracking <ul style="list-style-type: none"> <li>- Jamming Target</li> </ul> </li> </ul>
Angle-Track Radar Target with Altitude Difference Ranging		<ul style="list-style-type: none"> <li>• Radar Angle Tracking <ul style="list-style-type: none"> <li>- Jamming Target</li> <li>- Alt. diff. ranging</li> </ul> </li> </ul>
TCS-Angle Tracked Target		<ul style="list-style-type: none"> <li>• TCS Angle Tracking</li> </ul>
TCS-Angle Tracked Target with Altitude Difference Ranging		<ul style="list-style-type: none"> <li>• TCS Angle Tracking <ul style="list-style-type: none"> <li>- Alt. diff. ranging</li> </ul> </li> </ul>
<b>D/L TARGETS</b>		<b>Symbol Below Dot</b>
Unknown		<ul style="list-style-type: none"> <li>• D/L Track designated Un- known by Source</li> </ul>
Hostile		<ul style="list-style-type: none"> <li>• D/L Track designated Hostile by Source</li> </ul>
Friendly		<ul style="list-style-type: none"> <li>• D/L Track designated Friendly by Source</li> </ul>
<b>MANUAL REF POINTS</b>		
Home base		<ul style="list-style-type: none"> <li>• Waypoint Representing <ul style="list-style-type: none"> <li>- Home Base</li> <li>- Carrier</li> <li>- Airfield</li> </ul> </li> </ul>
Waypoint		<ul style="list-style-type: none"> <li>• Nav Waypoint</li> <li>• Supplanted by Number <ul style="list-style-type: none"> <li>- 1, 2, or 3</li> </ul> </li> </ul>
Defended Point		<ul style="list-style-type: none"> <li>• Waypoint to Defend</li> </ul>
Fixed Point		<ul style="list-style-type: none"> <li>• Generic Waypoint</li> </ul>
Hostile Area		<ul style="list-style-type: none"> <li>• Waypoint Indicating Hostile Area</li> </ul>
Surface Target		<ul style="list-style-type: none"> <li>• Waypoint Indicating Surface Target</li> </ul>
IP		<ul style="list-style-type: none"> <li>• Initial Point <ul style="list-style-type: none"> <li>- Waypoint for A/G engage- ment</li> </ul> </li> </ul>

## D/L REF POINTS



Home Base		<ul style="list-style-type: none"> <li>• D/L Waypoint Representing Home Base</li> </ul>
Waypoint		<ul style="list-style-type: none"> <li>• D/L Generic Waypoint</li> </ul>
Data Link Fixed Point		<ul style="list-style-type: none"> <li>• D/L Waypoint Representing Fixed Point</li> </ul>
Surface Target		<ul style="list-style-type: none"> <li>• D/L Waypoint Representing a Surface Target</li> </ul>

## POS SYMB MODIFIERS

Mandatory Attack		<ul style="list-style-type: none"> <li>• Additional Symbology on TWS Track <ul style="list-style-type: none"> <li>- Horizontal bar through center dot</li> </ul> </li> <li>• Selected by RIO <ul style="list-style-type: none"> <li>- Only 1 target can be designated</li> <li>- Guaranteed WCS priority number</li> </ul> </li> </ul>
Data Link Destroy		<ul style="list-style-type: none"> <li>• Additional Symbology on D/L Track <ul style="list-style-type: none"> <li>- Horizontal bar through center dot</li> </ul> </li> <li>• Selected by Source <ul style="list-style-type: none"> <li>- No effect on WCS prioritization</li> </ul> </li> </ul>
Do Not Attack		<ul style="list-style-type: none"> <li>• Additional Symbology on TWS or D/L Track <ul style="list-style-type: none"> <li>- Vertical bar through center dot</li> </ul> </li> <li>• If Set by RIO <ul style="list-style-type: none"> <li>- Removes WCS prioritization</li> </ul> </li> </ul>
Multiple Targets		<ul style="list-style-type: none"> <li>• Additional Symbology on TWS or D/L Track <ul style="list-style-type: none"> <li>- Horizontal bar on left side of symbol</li> </ul> </li> <li>• Indicates Multiple Targets</li> </ul>

Data Link Challenge		<ul style="list-style-type: none"> <li>• <b>Additional Symbolology on D/L Track</b> <ul style="list-style-type: none"> <li>– Small <b>V</b> with center at center dot</li> </ul> </li> <li>• <b>Command to Visually Identify</b></li> </ul>
Track Extrapolated		<ul style="list-style-type: none"> <li>• <b>Additional Symbolology on TWS or D/L Track</b> <ul style="list-style-type: none"> <li>– Small <b>X</b> with center at center dot</li> </ul> </li> <li>• <b>No Update within 8 seconds</b> <ul style="list-style-type: none"> <li>– Track deleted after 14 seconds</li> <li>– Or after 2 min if track hold</li> </ul> </li> </ul>
Altitude Numerics		<ul style="list-style-type: none"> <li>• <b>Altitude to Nearest Ten Thousand</b> <ul style="list-style-type: none"> <li>– example: 35000-45000</li> </ul> </li> </ul>
Firing Order Numerics		<ul style="list-style-type: none"> <li>• <b>Indicates AIM-54 Prioritization</b> <ul style="list-style-type: none"> <li>– Numbers 1-6</li> <li>– Only in TWS</li> </ul> </li> </ul>
Time-to-Impact (TTI)		<ul style="list-style-type: none"> <li>• <b>After AIM-54 Launch</b> <ul style="list-style-type: none"> <li>– Prioritization replaced with estimated TTI</li> </ul> </li> <li>• <b>Flashes after Pitbull</b></li> </ul>
Velocity Vector		<ul style="list-style-type: none"> <li>• <b>Additional Symbolology from center Dot</b> <ul style="list-style-type: none"> <li>– Direction represents track heading</li> <li>– Length represents speed</li> </ul> </li> <li>• <b>Varies with Mode</b> <ul style="list-style-type: none"> <li>– Ground Stabilized: true heading and ground speed</li> <li>– Aircraft Stabilized: relative heading and velocity</li> </ul> </li> </ul>

## Launch Zone Vectors

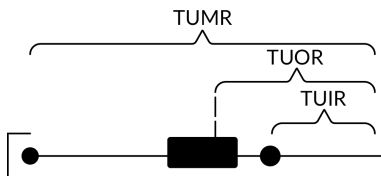

- **Additional Symbolology for AIM-54**

- Selected manually by RIO
- Or 60 seconds from max launch

- **TUMR**

- Time-Until-Minimum-Range
- Max: 180 seconds, 1.5 inches

- **TUOR**

- Time-Until-Optimal-Range
- Start of bar is 8 seconds from optimum

- **TUIR**

- Time-Until-In-Range

## Jamming Strobe



- **Line from own AC towards Jammer**

## Radar Antenna Scan Pattern Azimuth Limits



- **Limits of Current Scan Azimuth**
- **Single Line in STT**

## Data Link Jamming Strobe



- **Line from D/L point towards Jammer**

## Data Link Pointer



- **Additional Symbolology on D/L Track**

- Circle
- Indicates operator concern



Data Link Priority Kill



- Additional Symbology on D/L Track
  - Square
  - Indicates target must be destroyed
  - No effect on WCS prioritization

### ATTACK DISPLAY SYMBOLOGY

Artificial Horizon



- Represents Pitch and Roll

Steering Guidance Symbol



- Represents Steering Error
  - Should be placed as near as possible to center of ASE circle

Allowable Steering Error Circle



- Indicates Allowable Steering Error for Missile Launch
- Size Varies with Geometry, Mode, Missile

Breakaway Indication



- Appears when Target Range Less than Minimum for Selected Weapon



# Chapter 4

## TCS - LANTIRN

### Contents

4.1	TCS . . . . .	.4-3
4.1.1	OVERVIEW . . . . .	.4-3
4.2	LANTIRN . . . . .	.4-5
4.2.1	OVERVIEW . . . . .	.4-5
4.2.2	OVERVIEW - STARTUP . . . . .	.4-5
4.2.3	OVERVIEW - POINTING MODES . . . . .	.4-6
4.2.4	OVERVIEW - LASING/DESIGNATION . . . . .	.4-7
4.2.5	CONTROLS - PANEL . . . . .	.4-8
4.2.6	CONTROLS - STICK . . . . .	.4-9
4.2.7	DISPLAY . . . . .	.4-10



## **4.1 TCS**

---

### **4.1.1 OVERVIEW**

---



## 4.2 LANTIRN

### 4.2.1 OVERVIEW

<ul style="list-style-type: none"> <li><b>LANTIRN</b></li> </ul>	<p>Low <b>Altitude Navigation</b> and <b>Targeting Infra-Red</b> for <b>Night</b></p> <ul style="list-style-type: none"> <li><b>Only Targeting Pod</b> – Nav pod was deleted</li> <li><b>Incomplete Integration</b> – Own control panel, supplants TCS feed</li> </ul>
<ul style="list-style-type: none"> <li><b>Master Modes</b></li> </ul>	<ul style="list-style-type: none"> <li><b>A/G</b> – Allows bomb release guidance</li> <li><b>A/A</b> – Optimized for air targets</li> </ul>
<ul style="list-style-type: none"> <li><b>FOV Levels Overview</b></li> </ul>	<ul style="list-style-type: none"> <li><b>Wide</b> <ul style="list-style-type: none"> <li><b>FOV</b> – 5.9 deg</li> <li><b>Slew</b> – 8.5 deg/s</li> </ul> </li> <li><b>Narrow</b> <ul style="list-style-type: none"> <li><b>FOV</b> – 1.7 deg</li> <li><b>Slew</b> – 1.8 deg/s</li> </ul> </li> <li><b>Expanded</b> <ul style="list-style-type: none"> <li><b>FOV</b> – 0.8 deg</li> <li><b>Slew</b> – 0.7 deg/s</li> <li><b>Digital Zoom</b> – Degraded quality</li> </ul> </li> </ul>

### 4.2.2 OVERVIEW - STARTUP

1.	<b>Power Switch</b>	<b>POD</b>
2.	<b>Pod Startup Sequence</b>	<ul style="list-style-type: none"> <li>8 min startup sequence</li> <li><b>MODE Switch</b> shows <b>STBY</b> when complete</li> </ul>
3.	<b>MODE Switch</b>	<b>Press</b>
4.	<b>Initialization Sequence</b>	<ul style="list-style-type: none"> <li>30 sec initialization</li> <li><b>MODE Switch</b> shows <b>OPER</b> when ready</li> </ul>
5.	<b>VIDEO Switch</b>	<b>FLIR</b>
6.	<b>TID MODE</b>	<b>TV</b>

## 4.2.3 OVERVIEW - POINTING MODES

<ul style="list-style-type: none"> <li>• <b>Sensor Modes Overview</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>Contrast Lock</b> <ul style="list-style-type: none"> <li>– Area Track</li> <li>– Point Track</li> </ul> </li> <li>• <b>Q Designation</b> <ul style="list-style-type: none"> <li>– <b>Directional Q</b> – QSNO / QADL / QHUD</li> <li>– <b>Location Q</b> – QWp / QDES</li> </ul> </li> </ul>
<ul style="list-style-type: none"> <li>• <b>Directional Q</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>Do Not Allow Weapon Guidance</b></li> <li>• <b>QSNO</b> <ul style="list-style-type: none"> <li>– Pod slaved to <b>ground 15 nm in front</b> along own aircraft heading</li> </ul> </li> <li>• <b>QADL</b> <ul style="list-style-type: none"> <li>– <b>Pod slaved to ADL</b></li> <li>– In A/A mode</li> </ul> </li> <li>• <b>QHUD</b> <ul style="list-style-type: none"> <li>– <b>Pod slaved to HUD</b></li> <li>– In A/G mode</li> </ul> </li> </ul>
<ul style="list-style-type: none"> <li>• <b>Location Q</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>Allow Weapon Guidance</b></li> <li>• <b>QWp</b> <ul style="list-style-type: none"> <li>– Pod slaved to WCS waypoint</li> <li>– Cycled with <b>QWp+</b> / <b>QWp-</b></li> </ul> </li> <li>• <b>QDES</b> <ul style="list-style-type: none"> <li>– <b>Designate targets for engagement</b></li> <li>– <b>LANTIRN Trigger Second Detent</b> to designate</li> <li>– Coordinates can be manually added to WCS for navigation</li> </ul> </li> </ul>



## 4.2.4 OVERVIEW - LASING/DESIGNATION

• <b>A/G Designation</b>	(a) <b>Designate</b> ..... <b>Trigger Full-Action</b> <ul style="list-style-type: none"> <li>• Laser Fires</li> <li>• Slant Range calculated</li> <li>• Time-to-Go calculated</li> </ul>
• <b>Steering Cues</b>	<ul style="list-style-type: none"> <li>• <b>Automatically activated when QDES selected/designated</b></li> <li>• QDES remains even if new Q selected</li> <li>• Cues still point towards QDES even if pod at another point</li> </ul>
• <b>Manual Lase</b>	(a) <b>Lase</b> ..... <b>Trigger Half-Action Hold</b>
• <b>Latched Lase</b>	<ul style="list-style-type: none"> <li>• <b>Effect</b> – Lases for 60 sec</li> </ul> (a) <b>Activate</b> ..... <b>Latch Lase Button Press</b> (b) <b>Extend</b> ..... <b>Latch Lase Button Press</b> (c) <b>Deactivate</b> ..... <b>Trigger Half-Action</b>
• <b>Auto Lase</b>	<ul style="list-style-type: none"> <li>• <b>Effect</b> – Fires from -10 to +4 sec TIMP</li> </ul> (a) <b>Laser Mode</b> ..... <b>Slider AFT Short</b> (b) <b>Cycle A/M</b> ..... <b>Right 4-Way Depress</b>
• <b>Laser Notes</b>	<ul style="list-style-type: none"> <li>• <b>Always at current Pod location</b></li> <li>• Can point to different location than QDES</li> </ul>

## 4.2.5 CONTROLS - PANEL

<ul style="list-style-type: none"><li>• <b>Power Switch</b></li></ul>	<ul style="list-style-type: none"><li>• <b>OFF</b> – Disables power to system</li><li>• <b>IMU</b> – Only powers LANTIRN IMU (<b>Not Simulated in DCS</b>)</li><li>• <b>POD</b> – Powers whole system</li></ul>
<ul style="list-style-type: none"><li>• <b>MODE Switch</b></li></ul>	<ul style="list-style-type: none"><li>• <b>STBY</b> – Standby</li><li>• <b>OPER</b> – Operational</li></ul>
<ul style="list-style-type: none"><li>• <b>LASER Switch</b></li></ul>	<ul style="list-style-type: none"><li>• <b>ARM</b> – Arms laser</li><li>• <b>SAFE</b> – Inhibits laser use</li></ul>
<ul style="list-style-type: none"><li>• <b>VIDEO Switch</b></li></ul>	<ul style="list-style-type: none"><li>• <b>FLIR</b> – Displays LANTIRN FLIR on TID</li><li>• <b>TCS</b> – Displays TCS video on TID</li></ul>
<ul style="list-style-type: none"><li>• <b>Indicator Light</b></li></ul>	<ul style="list-style-type: none"><li>• <b>Indicate Error States</b></li></ul>
<ul style="list-style-type: none"><li>• <b>IBIT Button</b></li></ul>	<ul style="list-style-type: none"><li>• <b>Initiates Build-In-Test</b></li></ul>

## 4.2.6 CONTROLS - STICK

• <b>Master Mode</b>	<ul style="list-style-type: none"> <li>• A/G Mode – Side 2-Way FWD</li> <li>• A/A Mode – Side 2-Way AFT</li> </ul>
• <b>Slew</b>	Center Slew Hat
• <b>WHOT/BHOT</b>	Center Slew Hat Depress
• <b>Contrast Track</b>	<ul style="list-style-type: none"> <li>• Point Track – Left 4-Way Up</li> <li>• Area Track – Left 4-Way Down</li> </ul>
• <b>Q Select</b>	<ul style="list-style-type: none"> <li>• QADL/QHUD – Right 4-Way Up</li> <li>• QDES – Right 4-Way Right</li> <li>• QSNO – Right 4-Way Down</li> </ul>
• <b>Declutter</b>	Right 4-Way Depress
• <b>Zoom Level</b>	FOV Button
• <b>Cycle Gain Control Mode</b>	Slider FWD short
• <b>Manual Gain Control</b>	(a) Slider ..... FWD long (b) Gain ..... Right 4-Way Up/Down (c) Level ..... Right 4-Way Left/Right
• <b>Laser Code</b>	(a) Slider ..... AFT short (b) Select Digit ..... Right 4-Way Left/Right (c) Change Digit ..... Right 4-Way Up/Down
• <b>Focus Control</b>	(a) Slider ..... AFT hold (b) Right 4-Way ..... Up/Down
• <b>Manual Lase</b>	Trigger Half-Action
• <b>Latched Laser</b>	Latched Laser Fire Button
• <b>Designate QDES</b>	Trigger Full-Action

## 4.2.7 DISPLAY

<ul style="list-style-type: none"> <li>• <b>Top Left</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>Own Aircraft Datablock</b> <ul style="list-style-type: none"> <li>- <b>Lat</b> - deg:min.dec</li> <li>- <b>Long</b> - deg:min.dec</li> <li>- <b>ALT</b> - Altitude (ft)</li> <li>- <b>KGS</b> - Knots Ground Speed</li> <li>- <b>DIVE</b> - Dive Angle (deg)</li> </ul> </li> </ul>
<ul style="list-style-type: none"> <li>• <b>Mid Left</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>Sensor Mode</b> - <b>WHOT</b> / <b>BHOT</b></li> <li>• <b>Gain Control</b> - <b>Auto</b> / <b>Manual</b></li> </ul>
<ul style="list-style-type: none"> <li>• <b>Bottom Left</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>Pod Info Datablock</b> <ul style="list-style-type: none"> <li>- <b>SRA</b> - Slant Range</li> <li>- <b>AZ</b> - Pod LoS Azimuth L/R</li> <li>- <b>EL</b> - Pod LoS Elevation</li> <li>- <b>Time</b> - UTC Time</li> <li>- <b>IBIT</b> - Codes</li> </ul> </li> </ul>
<ul style="list-style-type: none"> <li>• <b>Bottom Center</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>Master Mode</b> - <b>A/A</b> / <b>A/G</b></li> <li>• <b>Track Mode</b> - <b>AREA</b> / <b>POINT</b> / <b>Q</b></li> <li>• <b>Current Weapon</b></li> <li>• <b>Laser Code</b></li> <li>• <b>L</b> <ul style="list-style-type: none"> <li>- <b>Steady</b> - Laser Armed</li> <li>- <b>Flashing</b> - Laser Firing</li> </ul> </li> </ul>
<ul style="list-style-type: none"> <li>• <b>Bottom Right</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>Q Datablock</b> <ul style="list-style-type: none"> <li>- <b>TTG</b> - Time-To-Go</li> <li>- <b>B/R</b> - Bearing and Range</li> <li>- <b>ELEV</b> - Elevation (ft) of Q</li> <li>- <b>Lat</b> - deg:min:dec</li> <li>- <b>Long</b> - deg:min:dec</li> </ul> </li> </ul>
<ul style="list-style-type: none"> <li>• <b>Mid Center</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>Crosshair</b> <ul style="list-style-type: none"> <li>- <b>Bounding Box</b> - Indicates currently tracked target in point mode</li> <li>- <b>Zoom Boxes</b> - Indicates next zoom levels</li> <li>- <b>FLIR Pointing Cue</b> - Shows Pod LoS, screen center indicates straight down</li> </ul> </li> </ul>

- **Mid Right**

- **Bomb Release Cue**

- Only shown if current Q is **QDES**, with valid weapon selected
- **TREL** - Time to release
- **TIMP** - Time to Impact (after release)

- **Top Center**

- **Steering Guidance to Q**

- Relative bearing L/R to commanded heading



# Chapter 5

## A/G WEAPONS

### Contents

5.1	SETTINGS . . . . .	.5-3
5.1.1	A/G WEAPON SETTINGS - OVERVIEW . . . . .	.5-3
5.1.2	SELECTIVE ORDNANCE JETTISON . . . . .	.5-4
5.2	UNGUIDED ORDNANCE . . . . .	.5-5
5.2.1	M61 GUN . . . . .	.5-5
5.2.2	FFAR / ZUNI ROCKETS . . . . .	.5-5
5.2.3	UNGUIDED BOMB - CCIP . . . . .	.5-6
5.2.4	UNGUIDED BOMB - CCRP . . . . .	.5-6
5.3	GUIDED ORDNANCE . . . . .	.5-8
5.3.1	LASER GUIDED BOMB . . . . .	.5-8
5.3.2	TALD DECOYS . . . . .	.5-9

**A/G**



## 5.1 SETTINGS

### 5.1.1 A/G WEAPON SETTINGS - OVERVIEW

• <b>WPN TYPE</b>	<ul style="list-style-type: none"> <li>• <b>Selects Weapon Type</b> <ul style="list-style-type: none"> <li>– Configures WCS for selected weapon</li> <li>– Refer to Kneeboard for list of mounted weapons</li> <li>– Mk-81 / 82 / 83 have both <b>L</b> and <b>H</b> option referring to high and low drag</li> </ul> </li> </ul>
• <b>DLVY MODE</b>	<ul style="list-style-type: none"> <li>• <b>STP-SGL</b> – Single weapon per press</li> <li>• <b>STP-PRS</b> Single pair per press</li> <li>• <b>RPL-SGL</b> – QTY of weapons per press</li> <li>• <b>RPL-PRS</b> – QTY of pairs per press</li> </ul>
• <b>DLVY OPTNS</b>	<ul style="list-style-type: none"> <li>• <b>INTERVAL</b> – Interval in ms</li> <li>• <b>QTY</b> – Number of stores to be released</li> </ul>
• <b>MECH FUZE</b>	<ul style="list-style-type: none"> <li>• <b>NOSE</b> – Arms nose fuze</li> <li>• <b>SAFE</b> – Inhibits arming of fuzes</li> <li>• <b>NOSE/TAIL</b> – Arms both fuzes</li> </ul>
• <b>ELEC FUZE</b>	<ul style="list-style-type: none"> <li>• <b>SAFE</b> – Inhibits electrical bomb fuzing</li> <li>• <b>VT</b> – Sets air-burst mode at preset burst height for compatible stores</li> <li>• <b>INST</b> – Sets instantaneous burst mode</li> <li>• <b>DLY 1</b> – Sets preset time delay 1</li> <li>• <b>DLY 2</b> – Sets preset time delay 2</li> </ul>
• <b>STA SEL</b>	<ul style="list-style-type: none"> <li>• <b>Selects Stations for Employment/Jettison</b> <ul style="list-style-type: none"> <li>– Set to <b>SEL</b> to activate a pylon</li> <li>– Stations 1 &amp; 8 should be set to <b>B</b> for selection</li> <li>– Station 1 &amp; 8 <b>SW</b> was used for Sidewinder jettison, is now inoperable</li> </ul> </li> </ul>
• <b>TANK JETT</b>	<ul style="list-style-type: none"> <li>• <b>Allows Drop Tank Jettison</b></li> </ul>
• <b>SEL JETT</b>	<ul style="list-style-type: none"> <li>• <b>JETT</b> – Selective jettison</li> <li>• <b>SAFE</b> – Inhibits jettison</li> <li>• <b>AUX</b> – Backup mode</li> </ul>

- |   |   |
|---|---|
| <ul style="list-style-type: none"> <li><b>JETT OPTIONS</b></li> </ul> | <ul style="list-style-type: none"> <li><b>MERTER</b> – Jettisons ejector racks</li> <li><b>WPNS</b> – Jettisons weapons only</li> </ul>   |
| <ul style="list-style-type: none"> <li><b>ATTK MODE</b></li> </ul>    | <ul style="list-style-type: none"> <li><b>CCMPTR TGT</b> <ul style="list-style-type: none"> <li><b>Computer Target</b> – Similar to CCRP</li> </ul> </li> <li><b>CMPTTR IP</b> <ul style="list-style-type: none"> <li><b>Computer initial point</b></li> <li>Extended <b>CMPTTR TGT</b> mode using known IP</li> <li>For use when target hard to spot visually but close to landmark</li> </ul> </li> <li><b>CMPTTR PLT</b> <ul style="list-style-type: none"> <li><b>Computer Pilot</b> – similar to CCIP</li> </ul> </li> <li><b>MAN</b> <ul style="list-style-type: none"> <li><b>Manual</b> – HUD displays pipper</li> <li>Backup mode</li> </ul> </li> <li><b>D/L BOMB</b> <ul style="list-style-type: none"> <li><b>Data-Link Bomb</b> – Automatic mode steered by D/L cues</li> <li><b>Not Implemented in DCS</b></li> </ul> </li> </ul> |

### 5.1.2 SELECTIVE ORDNANCE JETTISON

1. <b>Pilot Conditions</b>	<ul style="list-style-type: none"> <li><b>MASTER ARM</b> ..... <b>ON</b></li> </ul>
2. <b>RIO Conditions</b>	<ul style="list-style-type: none"> <li><b>Desired Stations</b> ..... <b>Selected</b></li> <li><b>JETT OPTIONS</b> ..... <b>As Desired</b></li> </ul>
3. <b>Jettison</b>	(a) <b>SEL JETT Guard</b> ..... <b>Flipped</b> (b) <b>SEL JETT Switch</b> ..... <b>JETT</b>

## 5.2 UNGUIDED ORDNANCE

### 5.2.1 M61 GUN

1. <b>Pilot Conditions</b>	<ul style="list-style-type: none"> <li>• MASTER ARM ..... ON</li> <li>• HUD ..... A/G</li> <li>• WEAPON SELECTOR ..... GUNS</li> <li>• Wing Sweep ..... BOMB</li> </ul>
2. <b>Employment</b>	(a) Dive ..... 20-30 deg (b) Pipper ..... on target (c) TRIGGER ..... FIRE
3. <b>Note: TCS</b>	<ul style="list-style-type: none"> <li>• TCS slaved to radar impact point</li> <li>• Rio can select <b>NAR</b> or <b>WIDE</b></li> </ul>

### 5.2.2 FFAR / ZUNI ROCKETS

1. <b>RIO Conditions</b>	<ul style="list-style-type: none"> <li>• WPN TYP ..... LAU-10</li> <li>• Attack Mode ..... Pilot Attack</li> <li>• Deliver Mode ..... RPL-SGL</li> <li>• Mechanical Fuze ..... NOSE</li> <li>• Electronic Fuze ..... INST</li> <li>• Delivery Options ..... As Desired</li> <li>• Stations ..... Armed</li> </ul>
2. <b>Pilot Conditions</b>	<ul style="list-style-type: none"> <li>• MASTER ARM ..... ON</li> <li>• HUD ..... A/G</li> <li>• WEAPON SELECTOR ..... OFF</li> <li>• Stations ..... verify selected</li> <li>• Wing Sweep ..... BOMB</li> </ul>
3. <b>Employment</b>	(a) Dive ..... 20-30 deg (b) Pipper ..... on target (c) TRIGGER ..... FIRE

## 5.2.3 UNGUIDED BOMB - CCIP

1. <b>RIO Conditions</b>	<ul style="list-style-type: none"> <li>• WPN TYP ..... MK-8X</li> <li>• Attack Mode ..... Pilot Attack</li> <li>• Deliver Mode ..... STP-PRS</li> <li>• Mechanical Fuze ..... NOSE</li> <li>• Electronic Fuze ..... INST</li> <li>• Delivery Options ..... As Desired</li> <li>• Stations ..... Armed</li> </ul>
2. <b>Pilot Conditions</b>	<ul style="list-style-type: none"> <li>• MASTER ARM ..... ON</li> <li>• HUD ..... A/G</li> <li>• WEAPON SELECTOR ..... OFF</li> <li>• Stations ..... verify selected</li> <li>• Wing Sweep ..... BOMB</li> </ul>
3. <b>Employment</b>	(a) Dive ..... 40 deg (b) Pipper ..... on target (c) STORE RELEASE ..... Press and Hold

## 5.2.4 UNGUIDED BOMB - CCRP

1. <b>RIO Conditions</b>	<ul style="list-style-type: none"> <li>• WPN TYP ..... MK-8X</li> <li>• Attack Mode ..... Target Attack</li> <li>• Deliver Mode ..... STP-PRS</li> <li>• Mechanical Fuze ..... NOSE</li> <li>• Electronic Fuze ..... INST</li> <li>• Delivery Options ..... As Desired</li> <li>• Stations ..... Armed</li> </ul>
2. <b>Pilot Conditions</b>	<ul style="list-style-type: none"> <li>• MASTER ARM ..... ON</li> <li>• HUD ..... A/G</li> <li>• WEAPON SELECTOR ..... OFF</li> <li>• Stations ..... verify selected</li> <li>• Wing Sweep ..... BOMB</li> </ul>
3. <b>Designation</b>	(a) Slew Diamond ..... VSL HI/LO (b) Designate ..... PAL

4. **Employment**

- (a) **Flight Path** ..... Straight, Level
  - (b) **Vel Vector** ..... on Bomb Fall Line
- When Solution Cue meets Velocity Vector
- (c) **STORE RELEASE** ..... **Press and Hold**
-

## 5.3 GUIDED ORDNANCE

### 5.3.1 LASER GUIDED BOMB

1. <b>LANTIRN PREP</b>	<p>(a) <b>Target Pod Power</b> ..... <b>POD</b></p> <ul style="list-style-type: none"> <li>• Warm up takes approx. 8 min</li> <li>• Automatically switches to <b>STANDBY</b></li> </ul> <p>(b) <b>Laser Code</b> ..... as desired</p> <ul style="list-style-type: none"> <li>• <b>MUST BE SET ON THE GROUND</b></li> <li>• <b>Default: 1688</b></li> </ul> <p>(c) <b>LANTIRN Mode</b> ..... <b>OPERATE</b></p> <ul style="list-style-type: none"> <li>• <b>STANDBY</b> caution will flash for 30 s</li> <li>• Then switches to <b>OPER</b></li> </ul> <p>(d) <b>VIDEO Switch</b> ..... <b>FLIR</b></p> <p>(e) <b>TID Mode</b> ..... <b>TV</b></p>
2. <b>RIO Conditions</b>	<ul style="list-style-type: none"> <li>• <b>WPN TYP</b> ..... <b>GBU-XX</b></li> <li>• <b>Attack Mode</b> ..... <b>Manual</b></li> <li>• <b>Deliver Mode</b> ..... <b>STP-SGL</b></li> <li>• <b>Mechanical Fuze</b> ..... <b>NOSE</b></li> <li>• <b>Electronic Fuze</b> ..... <b>INST</b></li> <li>• <b>Delivery Options</b> ..... <b>As Desired</b></li> <li>• <b>Stations</b> ..... <b>Armed</b></li> </ul>
3. <b>Pilot Conditions</b>	<ul style="list-style-type: none"> <li>• <b>MASTER ARM</b> ..... <b>ON</b></li> <li>• <b>HUD</b> ..... <b>A/G</b></li> <li>• <b>WEAPON SELECTOR</b> ..... <b>OFF</b></li> <li>• <b>VDI Mode</b> ..... <b>TV</b></li> <li>• <b>Stations</b> ..... verify selected</li> <li>• <b>Wing Sweep</b> ..... <b>BOMB</b></li> </ul>
4. <b>Slew LANTIRN</b>	<p><b>Refer to LANTIRN Control Section</b></p> <ul style="list-style-type: none"> <li>• <b>Slave to WYPT</b> ..... <b>Left-4-Way RIGHT</b></li> <li>• <b>QSNO (Snowplow)</b> ..... <b>S4 HAT Down</b></li> <li>• <b>Toggle FOV</b> ..... <b>LANTIRN Toggle FOV</b></li> <li>• <b>Slew</b> ..... <b>LANTIRN Stick</b></li> <li>• <b>Area Track</b> ..... <b>Left-4-Way UP</b></li> <li>• <b>Point Track</b> ..... <b>Left-4-Way Down</b></li> <li>• <b>Undesignate</b> ..... <b>LANTIRN Undesignate</b></li> </ul>

5. <b>Designate</b>	<p>Refer to LANTIRN Designation Section</p> <p>(a) <b>Designate</b> ..... <b>Trigger Full-Action</b></p> <ul style="list-style-type: none"> <li>• Slant Range calculated</li> <li>• Time-to-Go calculated</li> </ul> <p><b>Once Time-to-Release (TREL) is 0</b></p> <p>(b) <b>Auto-Lase</b> ... If selected: lases IOs to impact</p> <p>(c) <b>Manual Lase</b> ..... <b>Trigger Full-Action</b></p> <p>(d) <b>While Lasing</b> ..... L blinks</p>
6. <b>Employment</b>	<p><b>Once Time-to-Release (TREL) is 0</b></p> <p>(a) <b>STORE RELEASE</b> ..... <b>Press and Hold</b></p> <p>(b) <b>Flight Path</b> ..... Gentle right-hand turn (to prevent masking)</p>

### 5.3.2 TALD DECOYS

1. <b>RIO Conditions</b>	<ul style="list-style-type: none"> <li>• <b>WPN TYP</b> ..... <b>TALD</b></li> <li>• <b>Deliver Mode</b> ..... <b>STP-SGL</b></li> <li>• <b>Delivery Options</b> ..... <b>As Desired</b></li> <li>• <b>Stations</b> ..... <b>Armed</b></li> </ul>
2. <b>Pilot Conditions</b>	<ul style="list-style-type: none"> <li>• <b>MASTER ARM</b> ..... <b>ON</b></li> <li>• <b>HUD</b> ..... <b>A/G</b></li> <li>• <b>WEAPON SELECTOR</b> ..... <b>OFF</b></li> <li>• <b>HSD Mode</b> ..... <b>TID</b></li> <li>• <b>Stations</b> ..... verify selected</li> </ul>
3. <b>Employment</b>	<p>(a) <b>Flight Path</b> ..... High / Fast</p> <p>(b) <b>RWR</b> ..... Monitor to locate emitters</p> <p>(c) <b>STORE RELEASE</b> ..... <b>Press and Hold</b></p>





# Chapter 6

## A/A WEAPONS

### Contents

6.1	M61 GUN . . . . .	.6-3
6.1.1	M61 GUN - OVERVIEW . . . . .	.6-3
6.1.2	M61 GUN - MANUAL . . . . .	.6-4
6.1.3	M61 GUN - RTGS / NO RADAR . . . . .	.6-4
6.1.4	M61 GUN - RTGS / RADAR . . . . .	.6-4
6.2	AIM-9 SIDEWINDER . . . . .	.6-5
6.2.1	AIM-9 - OVERVIEW . . . . .	.6-5
6.2.2	AIM-9 - SILENT . . . . .	.6-6
6.2.3	AIM-9 - RADAR . . . . .	.6-6
6.3	AIM-7 SPARROW . . . . .	.6-7
6.3.1	AIM-7 - OVERVIEW . . . . .	.6-7
6.3.2	AIM-7 - STT . . . . .	.6-8
6.4	AIM-54 PHOENIX . . . . .	.6-9
6.4.1	AIM-54 - OVERVIEW . . . . .	.6-9
6.4.2	AIM-54 - PD-STT . . . . .	.6-10
6.4.3	AIM-54 - TWS / MULTI . . . . .	.6-11
6.4.4	AIM-54 - ACM . . . . .	.6-12



## 6.1 M61 GUN

### 6.1.1 M61 GUN - OVERVIEW

<ul style="list-style-type: none"> <li><b>GUN RATE Button</b></li> </ul>	<ul style="list-style-type: none"> <li><b>Cycles Gun Rate</b> <ul style="list-style-type: none"> <li><b>HIGH</b> – 6000 rpm</li> <li><b>LOW</b> – 4000 rpm</li> </ul> </li> </ul>
<ul style="list-style-type: none"> <li><b>A/A Gun Modes</b></li> </ul>	<ul style="list-style-type: none"> <li><b>RTGS</b> <ul style="list-style-type: none"> <li><b>Real-Time Gunsight Mode</b></li> <li>Selected automatically with guns</li> <li><b>If No WCS Data Available</b> displays bullet location at 2000 ft with diamond and 1000 ft with pipper</li> <li><b>If WCS Data Available</b> pipper displays bullet location at targets current range out to 4000 ft</li> </ul> </li> <li><b>MANUAL</b> <ul style="list-style-type: none"> <li>Fixed manual pipper</li> <li>Adjust with <b>GUN ELEV</b> knob</li> <li>Press <b>CAGE/SEAM</b> to select</li> </ul> </li> </ul>
<ul style="list-style-type: none"> <li><b>CAGE/SEAM Button</b></li> </ul>	<ul style="list-style-type: none"> <li><b>Cycles RTGS / MANUAL Gun Modes</b></li> </ul>
<ul style="list-style-type: none"> <li><b>ROUNDS Knob</b></li> </ul>	<ul style="list-style-type: none"> <li><b>Allows selection of remaining gun rounds</b></li> </ul>

## 6.1.2 M61 GUN - MANUAL

1. <b>Pilot Conditions</b>	<ul style="list-style-type: none"> <li>• MASTER ARM ..... ON</li> <li>• HUD ..... A/A</li> <li>• Gun Rate ..... HIGH</li> <li>• Gunsight Lead ..... as required</li> <li>• WEAPON SELECTOR ..... GUNS</li> </ul>
2. <b>Employment</b>	(a) Gun Mode ..... MANUAL (b) Pipper ..... on target (c) Trigger ..... FIRE

## 6.1.3 M61 GUN - RTGS / NO RADAR

1. <b>Pilot Conditions</b>	<ul style="list-style-type: none"> <li>• MASTER ARM ..... ON</li> <li>• HUD ..... A/A</li> <li>• Gun Rate ..... HIGH</li> <li>• WEAPON SELECTOR ..... GUNS</li> </ul>
2. <b>Employment</b>	(a) Gun Mode ..... RTGS (b) Pipper ..... on target (c) Trigger ..... FIRE

## 6.1.4 M61 GUN - RTGS / RADAR

1. <b>Pilot Conditions</b>	<ul style="list-style-type: none"> <li>• MASTER ARM ..... ON</li> <li>• HUD ..... A/A</li> <li>• Gun Rate ..... HIGH</li> <li>• WEAPON SELECTOR ..... GUNS</li> </ul>
2. <b>Employment</b>	(a) Gun Mode ..... RTGS (b) Radar ..... STT (c) Pipper ..... on target (d) Trigger ..... FIRE

## 6.2 AIM-9 SIDEWINDER

### 6.2.1 AIM-9 - OVERVIEW

<ul style="list-style-type: none"> <li>• <b>Missile Preparation</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>MSL PREP</b> <ul style="list-style-type: none"> <li>- AIM-9 seeker must be cooled</li> <li>- Either press <b>SW COOL</b> button</li> <li>- Or activation of <b>ACM</b></li> </ul> </li> </ul>
<ul style="list-style-type: none"> <li>• <b>Seeker Head Modes</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>SEAM</b> <ul style="list-style-type: none"> <li>- <b>Sidewinder Expanded Acquisition Mode</b></li> <li>- <b>Double-D search pattern</b> invisible to pilot</li> <li>- 4.5 sec search time</li> <li>- <b>Allows AIM-9 to be uncaged and track target</b></li> <li>- 40 deg track limit</li> <li>- <b>Allows WCS to slave AIM-9 to radar track</b></li> </ul> </li> <li>• <b>Boresight</b> <ul style="list-style-type: none"> <li>- AIM-9 locked to ADL</li> <li>- 2.5 deg FOV</li> <li>- Selected if <b>MODE/STP</b> set to <b>BRSIT</b></li> <li>- And <b>ACM</b> not active</li> </ul> </li> </ul>
<ul style="list-style-type: none"> <li>• <b>MODE/STP Switch</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>NORM</b> <ul style="list-style-type: none"> <li>- Allows <b>SEAM</b> seeker mode</li> </ul> </li> <li>• <b>BRSIT</b> <ul style="list-style-type: none"> <li>- Forces Boresight seeker mode</li> <li>- Overridden if <b>ACM</b> active</li> </ul> </li> </ul>
<ul style="list-style-type: none"> <li>• <b>CAGE/SEAM Button</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>Uncages Seeker</b> <ul style="list-style-type: none"> <li>- Starts 4.5 second double-D search</li> <li>- If no IR source found cages again</li> </ul> </li> <li>• <b>Slaves Seeker</b> <ul style="list-style-type: none"> <li>- If radar STT locked</li> </ul> </li> </ul>

## 6.2.2 AIM-9 - SILENT

1. <b>Pilot Conditions</b>	<ul style="list-style-type: none"> <li>• MASTER ARM ..... ON</li> <li>• HUD ..... A/A</li> <li>• SW COOL ..... ON</li> <li>• MODE/STP ..... As Desired</li> <li>• WEAPON SELECTOR ..... SW</li> </ul>
2. <b>Employment</b>	(a) CAGE/SEAM ..... Uncage Seeker (b) IR-Lock ..... Good Tone (c) Trigger ..... FIRE


## 6.2.3 AIM-9 - RADAR

1. <b>Pilot Conditions</b>	<ul style="list-style-type: none"> <li>• MASTER ARM ..... ON</li> <li>• HUD ..... A/A</li> <li>• SW COOL ..... ON</li> <li>• MODE/STP ..... NORM</li> <li>• WEAPON SELECTOR ..... SW</li> </ul>
2. <b>Employment</b>	(a) Radar ..... STT (b) CAGE/SEAM ..... Slave Seeker (c) IR-LOCK ..... Good Tone (d) Steering ..... center T-shaped cue with ASE (e) Trigger ..... FIRE

## 6.3 AIM-7 SPARROW

### 6.3.1 AIM-7 - OVERVIEW

<ul style="list-style-type: none"> <li>• <b>Missile Preparation</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>MSL PREP</b> <ul style="list-style-type: none"> <li>- AIM-7 must be tuned to AWG-9</li> <li>- Either press <b>MSL PREP</b> button</li> <li>- Or activation of <b>ACM</b></li> </ul> </li> </ul>
<ul style="list-style-type: none"> <li>• <b>Launch Modes</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>Normal</b> <ul style="list-style-type: none"> <li>- Standard operation, STT target designated before launch</li> <li>- AIM-7 uses SARH all the way to target</li> <li>- WCS can use CS or PD for guidance set with <b>MSL OPTIONS</b> Switch</li> </ul> </li> <li>• <b>Boresight</b> <ul style="list-style-type: none"> <li>- Uses CS flood antenna of AWG-9</li> <li>- Missile will <b>track strongest return</b> in Flood area</li> <li>- Automatically activated if STT broken</li> <li>- Selected if <b>MODE/STP</b> set to <b>BRSIT</b></li> <li>- <b>Or if no STT available</b></li> <li>- <b>Shown Below</b></li> </ul> </li> </ul>
<ul style="list-style-type: none"> <li>• <b>MSL SPD GATE Switch</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>NOSE QTR</b> <ul style="list-style-type: none"> <li>- Standard setting in DCS</li> </ul> </li> <li>• <b>All Others</b> <ul style="list-style-type: none"> <li>- Not simulated</li> </ul> </li> </ul>
<ul style="list-style-type: none"> <li>• <b>MSL OPTIONS Switch</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>NORM</b> <ul style="list-style-type: none"> <li>- WCS uses dedicated CW antenna for AIM-7 guidance</li> </ul> </li> <li>• <b>SP PD</b> <ul style="list-style-type: none"> <li>- WCS uses PD from main flood antenna for AIM-7F/M guidance</li> </ul> </li> </ul>
<ul style="list-style-type: none"> <li>• <b>MODE/STP Switch</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>NORM</b> <ul style="list-style-type: none"> <li>- Sets normal launch mode logic</li> </ul> </li> <li>• <b>BRSIT</b> <ul style="list-style-type: none"> <li>- Forces Boresight launch mode</li> </ul> </li> </ul>

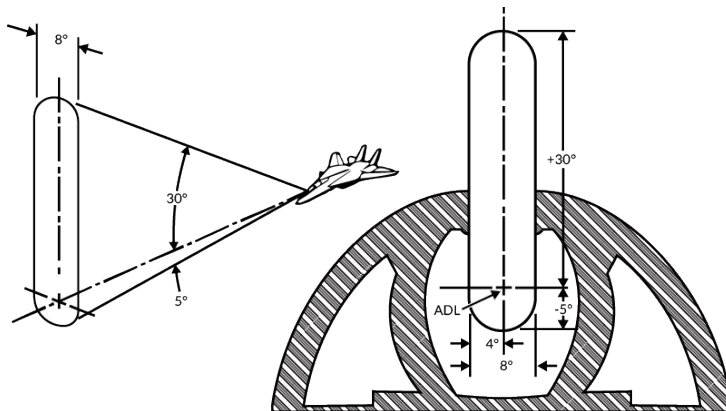

### 6.3.2 AIM-7 - STT

1. <b>Pilot Conditions</b>	<ul style="list-style-type: none"> <li>• <b>MASTER ARM</b> ..... <b>ON</b></li> <li>• <b>HUD</b> ..... <b>A/A</b></li> <li>• <b>MSL PREP</b> ..... <b>ON</b></li> <li>• <b>MODE/STP</b> ..... <b>NORM</b></li> <li>• <b>WEAPON SELECTOR</b> ..... <b>SP</b></li> </ul>
2. <b>RIO Conditions</b>	<ul style="list-style-type: none"> <li>• <b>MSL SPD GATE</b> ..... <b>NOSE QTR</b></li> <li>• <b>MSL OPTIONS</b> ..... <b>As Desired</b></li> </ul>
3. <b>Employment</b>	<p>(a) <b>Radar</b> ..... <b>STT</b></p> <p>(b) <b>Steering</b></p> <ul style="list-style-type: none"> <li>• <b>Target</b> &lt; 20 deg from ADL</li> <li>• <b>ASE</b> center T-shaped cue within</li> </ul> <p>(c) <b>Trigger</b> ..... <b>Press and Hold</b> (until weapon release)</p> <p>(d) <b>Radar</b> ..... <b>Maintain Lock</b> (until impact)</p>



## 6.4 AIM-54 PHOENIX

### 6.4.1 AIM-54 - OVERVIEW

<ul style="list-style-type: none"> <li>• <b>Missile Preparation</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>Weapon Cooling</b> <ul style="list-style-type: none"> <li>- AIM-54 requires liquid cooling</li> <li>- RIO enabled <b>LIQUID COOLING</b> switch</li> </ul> </li> <li>• <b>MSL PREP</b> <ul style="list-style-type: none"> <li>- AIM-54 must be tuned to AWG-9</li> <li>- Either press <b>MSL PREP</b> button</li> <li>- Or activation of <b>ACM</b></li> </ul> </li> </ul>
<ul style="list-style-type: none"> <li>• <b>Launch Modes</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>PDSTT SARH</b> <ul style="list-style-type: none"> <li>- AIM-54 uses SARH all the way to target</li> <li>- Faster update rate than TWS</li> <li>- <b>Slightly increased effective range</b> as compared to a TWS launch</li> </ul> </li> <li>• <b>TWS SARH/ARH</b> <ul style="list-style-type: none"> <li>- Allows <b>6 AIM-54 launches at 6 targets</b></li> <li>- Missile is initially SARH guided</li> <li>- When within AIM-54 seeker range AWG-9 sends activation command</li> <li>- <b>Not Fire and Forget:</b> Requires automatic activation command</li> </ul> </li> <li>• <b>ACM Active</b> <ul style="list-style-type: none"> <li>- Activated when <b>BRSIT</b> selected</li> <li>- Or when <b>ACM</b> active with no radar track</li> <li>- Missile commanded active <b>before launch</b></li> </ul> </li> </ul>
<ul style="list-style-type: none"> <li>• <b>MSL SPD GATE Switch</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>NOSE QTR</b> <ul style="list-style-type: none"> <li>- Standard setting in DCS</li> </ul> </li> <li>• <b>All Others</b> <ul style="list-style-type: none"> <li>- Not simulated</li> </ul> </li> </ul>

<ul style="list-style-type: none"> <li>• <b>MSL OPTIONS Switch</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>NORM</b> <ul style="list-style-type: none"> <li>– Normal guidance (SARH or SARH/ARH)</li> </ul> </li> <li>• <b>PH ACT</b> <ul style="list-style-type: none"> <li>– WCS immediately sends AIM-54 activation command on launch</li> <li>– Reverts to SARH if no target detected</li> <li>– <b>Must be selected before launch</b></li> </ul> </li> </ul>
<ul style="list-style-type: none"> <li>• <b>TGTS Switch</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>SMALL</b> – 6nm activation range</li> <li>• <b>NORM</b> – 10nm activation range</li> <li>• <b>LARGE</b> – 13nm activation range</li> </ul>
<ul style="list-style-type: none"> <li>• <b>Missile Next Launch Button</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>Selects Hooked Track as Next Target for AIM-54 TWS Engagement</b></li> </ul>
<ul style="list-style-type: none"> <li>• <b>MODE/STP Switch</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>NORM</b> <ul style="list-style-type: none"> <li>– Normal operation</li> </ul> </li> <li>• <b>BRSIT</b> <ul style="list-style-type: none"> <li>– Commanded active <b>before launch</b></li> <li>– Missile follows ADL and locks strongest return</li> </ul> </li> </ul>
<ul style="list-style-type: none"> <li>• <b>TWS Symbology</b></li> </ul>	<p><b>Refer to TID Symbology Section</b></p> <ul style="list-style-type: none"> <li>• <b>Pre-Launch</b> <ul style="list-style-type: none"> <li>– Prioritization numbers assigned to tracks automatically or manually</li> <li>– Blinking indicates optimal launch parameters</li> </ul> </li> <li>• <b>Post-Launch</b> <ul style="list-style-type: none"> <li>– Target prioritization number replaced with TTI</li> <li>– Other prioritization numbers collapsed by one</li> <li>– Tracks under missile attack brightened</li> <li>– <b>TTI blinks when missile active</b></li> </ul> </li> </ul>
<ul style="list-style-type: none"> <li>• <b>Launch To Eject (LTE) Time</b></li> </ul>	<ul style="list-style-type: none"> <li>• <b>Normal Operation</b> – 3-4 seconds</li> <li>• <b>When in ACM</b> – 1 second</li> </ul>

#### 6.4.2 AIM-54 - PD-STT

1. <b>Pilot Conditions</b>	<ul style="list-style-type: none"> <li>MASTER ARM ..... ON</li> <li>HUD ..... A/A</li> <li>MSL PREP ..... ON</li> <li>MODE/STP ..... NORM</li> <li>WEAPON SELECTOR ..... PH</li> </ul>
2. <b>RIO Conditions</b>	<ul style="list-style-type: none"> <li>LIQUID COOLING ..... ON (FWD)</li> <li>MSL SPD GATE ..... NOSE QTR</li> <li>MSL OPTIONS ..... As Desired</li> <li>TGTS Switch ..... As Desired</li> </ul>
3. <b>Employment</b>	<p>(a) Radar ..... STT</p> <p>(b) Steering</p> <ul style="list-style-type: none"> <li>Target &lt; 20 deg from ADL</li> <li>ASE center T-shaped cue within</li> </ul> <p>(c) Trigger ..... Press and Hold (until weapon release)</p> <p>(d) Radar ..... Maintain Lock (until impact)</p>

#### 6.4.3 AIM-54 - TWS / MULTI

1. <b>Pilot Conditions</b>	<ul style="list-style-type: none"> <li>MASTER ARM ..... ON</li> <li>HUD ..... A/A</li> <li>MSL PREP ..... ON</li> <li>MODE/STP ..... NORM</li> <li>WEAPON SELECTOR ..... PH</li> </ul>
2. <b>RIO Conditions</b>	<ul style="list-style-type: none"> <li>LIQUID COOLING ..... ON (FWD)</li> <li>MSL SPD GATE ..... NOSE QTR</li> <li>MSL OPTIONS ..... As Desired</li> <li>TGTS Switch ..... As Desired</li> <li>WCS Mode ..... TWS MAN/AUTO</li> </ul>
3. <b>Employment</b>	<p>(a) Radar ..... TWS</p> <p>(b) Trigger ..... Press and Hold (until weapon release)</p> <p>(c) Repeat ..... for remaining targets</p> <p>(d) Radar ..... Maintain Track (until active)</p>

## 6.4.4 AIM-54 - ACM

1. <b>Pilot Conditions</b>	<ul style="list-style-type: none"> <li>• MASTER ARM ..... ON</li> <li>• HUD ..... A/A</li> <li>• MSL PREP ..... ON</li> <li>• ACM COVER ..... UP</li> <li>• WEAPON SELECTOR ..... PH</li> </ul>
2. <b>RIO Conditions</b>	<ul style="list-style-type: none"> <li>• LIQUID COOLING ..... ON (FWD)</li> <li>• MSL SPD GATE ..... NOSE QTR</li> <li>• MSL OPTIONS ..... As Desired</li> <li>• TGTS Switch ..... As Desired</li> </ul>
3. <b>Employment</b>	<p>(a) <b>Steering</b></p> <ul style="list-style-type: none"> <li>• <b>Range</b> &lt; 10 nm for immediate tracking</li> <li>• <b>Azimuth</b> near ADL</li> </ul> <p>(b) <b>Trigger</b> ..... <b>Press and Hold</b> (until weapon release)</p> <p>(c) <b>Repeat</b> ..... Can fire additional missiles (no guarantee good missile distribution to targets)</p>

**WARNING**

- **MISSILE IS PITBULL OFF THE RAIL** – No IFF capabilities

