

# Pocket Checklist

# F-14A/B AIRCRAFT

REV: 20220211



Procedures

Systems

AWG-9  
Radar

TCS  
LANTIRN

A/G  
Weapons

A/A  
Weapons



## DISCLAIMER

This document represents a personal project and is intended for entertainment purposes only. Do not use for training purposes or in real life scenarios.

# Contents

|          |                                      |            |
|----------|--------------------------------------|------------|
| <b>1</b> | <b>PROCEDURES</b>                    | <b>1-1</b> |
| 1.1      | START-UP . . . . .                   | 1-3        |
| 1.1.1    | PILOT - PRE-START . . . . .          | 1-3        |
| 1.1.2    | PILOT - ENGINE START . . . . .       | 1-4        |
| 1.1.3    | PILOT - POST-START . . . . .         | 1-5        |
| 1.1.4    | RIO - PRE-START . . . . .            | 1-7        |
| 1.1.5    | RIO - POST-START - SHORE . . . . .   | 1-7        |
| 1.1.6    | RIO - POST-START - CARRIER . . . . . | 1-9        |
| 1.1.7    | PRE-TAXI . . . . .                   | 1-11       |
| 1.2      | TAKEOFF & LANDING . . . . .          | 1-11       |
| 1.2.1    | TAKEOFF - SHORE . . . . .            | 1-11       |
| 1.2.2    | TAKEOFF - CARRIER . . . . .          | 1-12       |
| 1.2.3    | LANDING - OVERHEAD PATTERN . . . . . | 1-13       |
| 1.2.4    | LANDING - CHECKLIST . . . . .        | 1-14       |
| 1.3      | IN-FLIGHT . . . . .                  | 1-15       |
| 1.3.1    | AERIAL REFUELING . . . . .           | 1-15       |
| 1.3.2    | AIRSTART . . . . .                   | 1-16       |
| <b>2</b> | <b>SYSTEMS</b>                       | <b>2-1</b> |
| 2.1      | FLIGHT CONTROL . . . . .             | 2-3        |
| 2.1.1    | AFCS - SAS . . . . .                 | 2-3        |
| 2.1.2    | AFCS - AUTOPILOT . . . . .           | 2-3        |
| 2.1.3    | APC / AUTOTHROTTLE . . . . .         | 2-5        |
| 2.1.4    | ACLS . . . . .                       | 2-5        |
| 2.1.5    | WING-SWEEP . . . . .                 | 2-5        |
| 2.2      | NAVIGATION . . . . .                 | 2-7        |
| 2.2.1    | NAV - OVERVIEW . . . . .             | 2-7        |
| 2.2.2    | NAV - INS . . . . .                  | 2-7        |
| 2.2.3    | NAV - ALIGNMENT . . . . .            | 2-8        |
| 2.2.4    | NAV - WAYPOINT . . . . .             | 2-9        |
| 2.2.5    | NAV - TACAN . . . . .                | 2-9        |
| 2.2.6    | NAV - VOR/ADF . . . . .              | 2-9        |
| 2.3      | COMMUNICATION . . . . .              | 2-11       |
| 2.3.1    | COMMS - OVERVIEW . . . . .           | 2-11       |

|       |  |      |
|-------|--|------|
| 2.3.2 | COMMS - ARC-159 UHF 1 . . . . .                  | 2-11 |
| 2.3.3 | COMMS - ARC-182 V/UHF 2 . . . . .                | 2-12 |
| 2.3.4 | COMMS - KY-28 VOICE SECURITY EQUIPMENT . . . . . | 2-13 |
| 2.3.5 | LINK 4 DATALINK - OVERVIEW . . . . .             | 2-15 |
| 2.3.6 | LINK 4 DATALINK - CONTROL PANEL . . . . .        | 2-15 |
| 2.3.7 | LINK 4 DATALINK - REPLY/ANTENNA PANEL . . . . .  | 2-16 |
| 2.4   | DEFENSIVE SYSTEMS . . . . .                      | 2-17 |
| 2.4.1 | ALR-67 RWR - CONTROLS / OVERVIEW . . . . .       | 2-17 |
| 2.4.2 | ALR-67 RWR - THREAT SYMBOLOGY . . . . .          | 2-19 |
| 2.4.3 | ALE-39 CMS DISPENSER . . . . .                   | 2-21 |
| 2.4.4 | ALQ-100 / ALQ-126 DECM . . . . .                 | 2-21 |

### 3 AWG-9 RADAR 3-1

|       |  |      |
|-------|--|------|
| 3.1   | OVERVIEW . . . . .                     | 3-3  |
| 3.1.1 | MAIN MODES - OVERVIEW . . . . .        | 3-3  |
| 3.1.2 | MAIN MODES . . . . .                   | 3-3  |
| 3.2   | PULSE MODES . . . . .                  | 3-3  |
| 3.2.1 | PULSE - PULSE SEARCH . . . . .         | 3-4  |
| 3.2.2 | PULSE - PSTT . . . . .                 | 3-5  |
| 3.3   | PULSE DOPPLER MODES . . . . .          | 3-6  |
| 3.3.1 | PD - PULSE DOPPLER SEARCH . . . . .    | 3-6  |
| 3.3.2 | PD - RWS . . . . .                     | 3-8  |
| 3.3.3 | PD - TWS . . . . .                     | 3-9  |
| 3.3.4 | PD - TWS MAN . . . . .                 | 3-11 |
| 3.3.5 | PD - TWS AUTO . . . . .                | 3-12 |
| 3.3.6 | PD - PDSTT . . . . .                   | 3-13 |
| 3.4   | ACM . . . . .                          | 3-14 |
| 3.4.1 | ACM MODES - OVERVIEW . . . . .         | 3-14 |
| 3.4.2 | APX-76 IFF . . . . .                   | 3-15 |
| 3.5   | TACTICAL INFORMATION DISPLAY . . . . . | 3-17 |
| 3.5.1 | TID SYMBOLOGY . . . . .                | 3-17 |

### 4 TCS - LANTIRN 4-1

|       |   |     |
|-------|---|-----|
| 4.1   | TCS . . . . .                           | 4-3 |
| 4.1.1 | OVERVIEW . . . . .                      | 4-3 |
| 4.2   | LANTIRN . . . . .                       | 4-5 |
| 4.2.1 | OVERVIEW . . . . .                      | 4-5 |
| 4.2.2 | OVERVIEW - STARTUP . . . . .            | 4-5 |
| 4.2.3 | OVERVIEW - POINTING MODES . . . . .     | 4-6 |
| 4.2.4 | OVERVIEW - LASING/DESIGNATION . . . . . | 4-7 |
| 4.2.5 | CONTROLS - PANEL . . . . .              | 4-7 |
| 4.2.6 | CONTROLS - STICK . . . . .              | 4-8 |
| 4.2.7 | DISPLAY . . . . .                       | 4-9 |

### 5 A/G WEAPONS 5-1

|          |  |            |
|----------|--|------------|
| 5.1      | SETTINGS . . . . .                       | 5-3        |
| 5.1.1    | A/G WEAPON SETTINGS - OVERVIEW . . . . . | 5-3        |
| 5.1.2    | SELECTIVE ORNANCE JETTISON . . . . .     | 5-4        |
| 5.2      | UNGUIDED . . . . .                       | 5-4        |
| 5.2.1    | M61 GUN . . . . .                        | 5-4        |
| 5.2.2    | FFAR / ZUNI ROCKETS . . . . .            | 5-5        |
| 5.2.3    | UNGUIDED BOMB - CCIP . . . . .           | 5-5        |
| 5.2.4    | UNGUIDED BOMB - CCRP . . . . .           | 5-6        |
| 5.3      | GUIDED . . . . .                         | 5-7        |
| 5.3.1    | LASER GUIDED BOMB . . . . .              | 5-7        |
| 5.3.2    | TALD DECOYS . . . . .                    | 5-8        |
| <b>6</b> | <b>A/A WEAPONS</b>                       | <b>6-1</b> |
| 6.1      | M61 GUN . . . . .                        | 6-3        |
| 6.1.1    | M61 GUN - OVERVIEW . . . . .             | 6-3        |
| 6.1.2    | M61 GUN - MANUAL . . . . .               | 6-3        |
| 6.1.3    | M61 GUN - RTGS / NO RADAR . . . . .      | 6-4        |
| 6.1.4    | M61 GUN - RTGS / RADAR . . . . .         | 6-4        |
| 6.2      | AIM-9 SIDEWINDER . . . . .               | 6-5        |
| 6.2.1    | AIM-9 - OVERVIEW . . . . .               | 6-5        |
| 6.2.2    | AIM-9 - SILENT . . . . .                 | 6-6        |
| 6.2.3    | AIM-9 - RADAR . . . . .                  | 6-6        |
| 6.3      | AIM-7 SPARROW . . . . .                  | 6-7        |
| 6.3.1    | AIM-7 - OVERVIEW . . . . .               | 6-7        |
| 6.3.2    | AIM-7 - STT . . . . .                    | 6-8        |
| 6.4      | AIM-54 PHOENIX . . . . .                 | 6-9        |
| 6.4.1    | AIM-54 - OVERVIEW . . . . .              | 6-9        |
| 6.4.2    | AIM-54 - PD-STT . . . . .                | 6-11       |
| 6.4.3    | AIM-54 - TWS / MULTI . . . . .           | 6-11       |



# Chapter 1

## PROCEDURES

### Contents

---

|       |                                      |             |
|-------|--------------------------------------|-------------|
| 1.1   | START-UP . . . . .                   | <b>1-3</b>  |
| 1.1.1 | PILOT - PRE-START . . . . .          | 1-3         |
| 1.1.2 | PILOT - ENGINE START . . . . .       | 1-4         |
| 1.1.3 | PILOT - POST-START . . . . .         | 1-5         |
| 1.1.4 | RIO - PRE-START . . . . .            | 1-7         |
| 1.1.5 | RIO - POST-START - SHORE . . . . .   | 1-7         |
| 1.1.6 | RIO - POST-START - CARRIER . . . . . | 1-9         |
| 1.1.7 | PRE-TAXI . . . . .                   | 1-11        |
| 1.2   | TAKEOFF & LANDING . . . . .          | <b>1-11</b> |
| 1.2.1 | TAKEOFF - SHORE . . . . .            | 1-11        |
| 1.2.2 | TAKEOFF - CARRIER . . . . .          | 1-12        |
| 1.2.3 | LANDING - OVERHEAD PATTERN . . . . . | 1-13        |
| 1.2.4 | LANDING - CHECKLIST . . . . .        | 1-14        |
| 1.3   | IN-FLIGHT . . . . .                  | <b>1-15</b> |
| 1.3.1 | AERIAL REFUELING . . . . .           | 1-15        |
| 1.3.2 | AIRSTART . . . . .                   | 1-16        |

---





## 1.1 START-UP

## 1.1.1 PILOT - PRE-START

|     |                      |  |
|-----|----------------------|--|
| 1.  | Parking Brake        | ENGAGED  |
| 2.  | Ground Power         | connected  |
| 3.  | Compressed Air       | connected  |
| 4.  | ICS                  | HOT MIC  |
| 5.  | TO RIO               | "Begin Start-Up"   |
| 6.  | ICS                  | Comm Check   |
| 7.  | MASTER TEST Selector | <p>(a) LTS</p> <ul style="list-style-type: none"> <li>Warning Lights .....checked</li> <li>Caution Lights .....checked</li> <li>Advisory Lights ..... checked</li> </ul> <p>(b) FIRE DET/EXT</p> <ul style="list-style-type: none"> <li>L FIRE GO ..... illuminated</li> <li>R FIRE GO ..... illuminated</li> </ul> <p>(c) INST</p> <ul style="list-style-type: none"> <li>RPM .....96%</li> <li>EGT .....960 C</li> <li>FF .....10500 pph</li> <li>AOA .....18 ± 5</li> <li>Wing Sweep .....45 ± 2.5</li> <li>FUEL QTY .....2000 ± 200</li> <li>Oxygen QTY .....2 liters</li> <li>L&amp;R FF lights ..... illuminated</li> </ul> <p>(d) OFF</p> |
| 8.  | Ejection Seat        | Armed  |
| 9.  | RIO                  | Canopy Closed  |
| 10. | Oxygen               | ON (FWD)   |
| 11  | Emergency Wing Sweep | OVERSWEEP  |

## 1.1.2 PILOT - ENGINE START

|     |                              |   |
|-----|------------------------------|---|
| 1.  | <b>AIR SOURCE</b>            | <b>OFF</b>  |
| 2.  | <b>Hydraulics</b>            | (a) <b>HYD TRANSFER PUMP</b> ..... <b>SHUTOFF</b><br>(b) <b>Emerg. Hyd.</b> ..... <b>AUTO (LOW)</b>   |
| 3.  | <b>L&amp;R MASTER GEN</b>    | <b>NORM</b>   |
| 4.  | <b>RIO</b>                   | <i>"Ready to Start"</i>   |
| 5.  | <b>Right Engine Start-Up</b> | (a) <b>Engine Crank</b> ..... <b>R</b><br>(b) <b>R Eng N2</b> ..... 20%<br>(c) <b>R Throttle</b> ..... <b>IDLE</b><br>(d) <b>TIT</b> ..... < 890 C during start<br>(e) <b>R GEN CAUTION</b> ..... extinguished  |
| 6.  | <b>Stabilized Parameters</b> | <ul style="list-style-type: none"> <li>• <b>RPM</b> ..... 62-78%</li> <li>• <b>TIT</b> ..... approx 500 C</li> <li>• <b>Fuel Flow</b> ..... 950-1400 pph</li> <li>• <b>NOZ</b> ..... 5 (100%)</li> <li>• <b>Oil Pressure</b> ..... 25-35 psi</li> <li>• <b>Hyd Pressure</b> ..... 3000 psi</li> </ul> |
| 7.  | <b>Left Engine Start-Up</b>  | (a) <b>Engine Crank</b> ..... <b>L</b><br>(b) <b>L Eng N2</b> ..... 20%<br>(c) <b>L Throttle</b> ..... <b>IDLE</b><br>(d) <b>TIT</b> ..... < 890 C during start<br>(e) <b>L GEN Caution</b> ..... extinguished  |
| 8.  | <b>Stabilized Parameters</b> | <ul style="list-style-type: none"> <li>• <b>RPM</b> ..... 62-78%</li> <li>• <b>TIT</b> ..... approx 500 C</li> <li>• <b>Fuel Flow</b> ..... 950-1400 pph</li> <li>• <b>NOZ</b> ..... 5 (100%)</li> <li>• <b>Oil Pressure</b> ..... 25-35 psi</li> <li>• <b>Hyd Pressure</b> ..... 3000 psi</li> </ul> |
| 9.  | <b>HYD TRANSFER PUMP</b>     | <b>NORM</b>   |
| 10. | <b>HYD PRESSURE</b>          | 3000 psi  |
| 11. | <b>AIR SOURCE</b>            | <b>BOTH ENG</b>   |
| 12. | <b>Ground Power</b>          | disconnected  |
| 13. | <b>Compressed Air</b>        | disconnected  |

## 1.1.3 PILOT - POST-START

|     |                                  |  |
|-----|----------------------------------|--|
| 1.  | <b>TO RIO</b>                    | <i>"Both Engines Running"</i>  |
| 2.  | <b>Displays Control Panel</b>    | <ul style="list-style-type: none"> <li>• <b>VDI</b> ..... <b>ON</b></li> <li>• <b>HUD</b> ..... <b>ON</b></li> <li>• <b>HSD</b> ..... <b>ON</b></li> <li>• <b>HDS MODE</b> ..... <b>TID</b><br/>(monitor INS)</li> </ul>   |
| 3.  | <b>RIO</b>                       | <b>Select Align Quality</b> <ul style="list-style-type: none"> <li>• <b>INS GO NOW:</b> shortest but least precise alignment</li> <li>• <b>INS GO COARSE:</b> does not meet Launch Criteria for AIM-7 / AIM-54</li> <li>• <b>INS GO MIN WPN LAUNCH:</b> allows AIM-7 / AIM-54 launch</li> <li>• <b>INS GO FINE</b> fine align (8 min)</li> </ul> |
| 4.  | <b>ACM Panel</b>                 | <ul style="list-style-type: none"> <li>• <b>GUN RATE</b> ..... as required</li> <li>• <b>SW COOL</b> ..... <b>OFF</b></li> <li>• <b>MSL PREP</b> ..... <b>OFF</b></li> <li>• <b>Missile MODE/STP</b> ..... <b>NORM</b></li> </ul>  |
| 5.  | <b>Gun Rounds</b>                | <b>Set</b>   |
| 6.  | <b>ANTI-SKID SPOILER BK</b>      | <b>OFF</b>   |
| 7.  | <b>Emergency Wing Sweep</b>      | (a) <b>Handle</b> ..... <b>AFT</b><br>(b) <b>Angle</b> ..... Verify 68 deg   |
| 8.  | <b>AFCS Panel - SAS STAB AUG</b> | <ul style="list-style-type: none"> <li>• <b>PITCH</b> ..... <b>ON</b></li> <li>• <b>ROLL</b> ..... <b>ON</b></li> <li>• <b>YAW</b> ..... <b>ON</b></li> </ul>  |
| 9.  | <b>WING/EXT TRANS</b>            | <b>AUTO</b>  |
| 10. | <b>UHF 1 Function Selector</b>   | <b>BOTH</b>  |
| 11. | <b>TACAN Function Selector</b>   | <b>T/R</b>   |
| 12. | <b>ARA-63 ICLS RECEIVER</b>      | <b>ON</b>  |

|                             |  |
|-----------------------------|--|
| 13. <b>Radar Altimeter</b>  | (a) <b>Control Knob</b> ..... one click CW to turn on<br>(b) <b>Display</b> ..... 6000 ft (warm up)<br>(c) <b>Display</b> ..... 0 ft (ready) |
| 14. <b>Standby ADI</b>      | erect at least 2 min before T/O  |
| 15. <b>KY-28 Crypt. Key</b> | <b>Set</b> (refer to GROUND SETTINGS kb)   |
| 16. <b>RIO</b>              | set D/L frequency  |
| 17. <b>Lights</b>           | As desired   |

### WARNING

- **PARKING BRAKE MUST BE ENGAGED DURING ALIGNMENT.**  
Lack of parking brake engagement inhibits INS alignment

## 1.1.4 RIO - PRE-START

|                   |  |
|-------------------|--|
| 1. Oxygen         | ON (FWD)   |
| 2. PILOT          | <ul style="list-style-type: none"> <li>• Ground Power ..... connected</li> <li>• Compressed Air ..... connected</li> </ul> |
| 3. ICS            | Comm Check   |
| 4. Lights         | As required  |
| 5. LTS Test       | Coordinate with Pilot  |
| 6. Ejection Seats | ARMED  |
| 7. Canopy         | CLOSED   |
| 8. TO PILOT       | "Ready to Start"   |

## 1.1.5 RIO - POST-START - SHORE

|                |   |
|----------------|---|
| 1. PILOT       | <ul style="list-style-type: none"> <li>• Engines ..... started</li> <li>• AIR SOURCE ..... BOTH ENG</li> </ul>                                    |
| 2. INS STARTUP | (a) LIQUID COOLING ..... ON (FWD)<br>(b) WCS Switch ..... STANDBY<br>(c) IR/TV Power ..... STBY/IR/TV<br>(d) TID/DDD ..... illuminated after 40 s |
| 3. Kneeboard   | Retrieve Coordinates, Elevation, Magnetic Variation from GROUND SETTINGS Page   |

**WARNING** Input Coords **BEFORE** selecting **GND ALIGN** if using ASH

|                    |   |
|--------------------|---|
| 4. Start INS Align | (a) Nav Mode ..... GND ALIGN<br>(b) CAP <ul style="list-style-type: none"> <li>• Category ..... NAV</li> <li>• MESSAGE ..... OWN AC</li> </ul> (c) Keyboard <ul style="list-style-type: none"> <li>• CLEAR, LAT, latitude, ENTER</li> <li>• LONG, longitude, ENTER</li> <li>• ALT, altitude, ENTER</li> </ul> (d) CAP MESSAGE ..... MAG HDG VAR<br>(e) Keyboard ..... HDG, mag var, ENTER<br>(f) Align Progress ..... Monitor |
| 5. U/VHF Mode      | T/R G   |

|     |                           |   |
|-----|---------------------------|---|
| 6.  | <b>Datalink</b>           | (a) <b>Kneeboard</b> ..... TACTICAL DL<br>(b) <b>DL Power</b> ..... ON (FWD)<br>(c) <b>DL Mode</b> ..... TAC (AFT)<br>(d) <b>DL Freq.</b> ..... Set   |
| 7.  | <b>TACAN</b>              | <b>T/R</b>  |
| 8.  | <b>RWR Panel</b>          | (a) <b>Display Type</b> ..... NORM<br>(b) <b>PWR</b> ..... ON<br>(c) <b>TEST</b> ..... SPL<br>(d) <b>MODE</b> ..... LMT   |
| 9.  | <b>DECM</b>               | <b>STBY</b> , then <b>ACT</b>   |
| 10. | <b>IFF</b>                | (a) <b>MASTER</b> ..... <b>STBY</b><br>(b) <b>CODE</b> ..... as required  |
| 11. | <b>Altimeter</b>          | Reset   |
| 12. | <b>CAP</b>                | Enter Data (WP, FP, etc.)   |
| 13. | <b>Displays</b>           | <ul style="list-style-type: none"> <li>• <b>DDD</b> ..... Set</li> <li>• <b>TID</b> ..... Set</li> <li>• <b>Multiple Display Indicator</b> ..... Set</li> </ul>   |
| 14. | <b>Hand Control Panel</b> | Set   |
| 15. | <b>AN/ALE-39</b>          | Set (as required) <ul style="list-style-type: none"> <li>• <b>AUTO (CHAFF)/MAN</b></li> <li>• <b>MAN</b></li> </ul>   |
| 16. | <b>Flare Mode</b>         | <b>PILOT</b>  |
| 17. | <b>Complete INS Align</b> | <ul style="list-style-type: none"> <li>• <b>Duration Full Fine</b> ..... 8 min</li> <li>• <b>Duration ASH</b> ..... much faster</li> </ul><br>(a) <b>Align Complete</b> ..... Caret → Diamond<br>(b) <b>NAV Mode</b> ..... <b>INS NAV</b> |
| 18. | <b>Standby ADI</b>        | Erect at least 2 min before T/O   |
| 19. | <b>TO PILOT</b>           | <i>"Ready to Taxi"</i>  |

**Once Airborne**

|     |                    |                |
|-----|--------------------|----------------|
| 20. | <b>IR/TV Power</b> | <b>ON</b>      |
| 21. | <b>WCS Switch</b>  | <b>WCS XMT</b> |

## 1.1.6 RIO - POST-START - CARRIER

|                               |   |
|-------------------------------|---|
| 1. <b>PILOT</b>               | <ul style="list-style-type: none"> <li>Engines ..... started</li> <li>AIR SOURCE ..... BOTH ENG</li> </ul>  |
| 2. <b>INS STARTUP</b>         | (a) LIQUID COOLING ..... ON (FWD)<br>(b) WCS Switch ..... STANDBY<br>(c) IR/TV Power ..... STBY/IR/TV<br>(d) TID/DDD ..... illuminated after 40 s |
| 3. <b>Datalink</b>            | (a) Kneeboard ..... TACTICAL DL<br>(b) DL Power ..... ON (FWD)  |
| 4. <b>Start INS Align</b>     | (a) DL FREQ ..... Set<br>(b) DL Mode ..... CAINS/WAYPT<br>(c) Nav Mode ..... CVA  |
| 5. <b>U/VHF Mode</b>          | T/R G   |
| 6. <b>TACAN</b>               | T/R   |
| 7. <b>RWR Panel</b>           | (a) Display Type ..... NORM<br>(b) PWR ..... ON<br>(c) TEST ..... SPL<br>(d) MODE ..... LMT   |
| 8. <b>DECM</b>                | STBY, then ACT  |
| 9. <b>IFF</b>                 | (a) MASTER ..... STBY<br>(b) CODE ..... as required   |
| 10. <b>Altimeter</b>          | Reset   |
| 11. <b>CAP</b>                | Enter Data (WP, FP, etc.)   |
| 12. <b>Displays</b>           | <ul style="list-style-type: none"> <li>DDD ..... Set</li> <li>TID ..... Set</li> <li>Multiple Display Indicator ..... Set</li> </ul>              |
| 13. <b>Hand Control Panel</b> | Set   |
| 14. <b>AN/ALE-39</b>          | Set (as required) <ul style="list-style-type: none"> <li>AUTO (CHAFF)/MAN</li> <li>MAN</li> </ul>   |
| 15. <b>Flare Mode</b>         | PILOT   |

## 16. Complete INS Align

- Duration Full Fine ..... 9 min
- Duration ASH ..... much faster
- (a) Align Complete ..... Caret → Diamond
- (b) NAV Mode ..... INS NAV

## 17. Datalink

- (a) DL Mode ..... TAC (AFT)
- (b) DL Freq. .... Set

## 18. Standby ADI

Erect at least 2 min before T/O

## 19. TO PILOT

*"Ready to Taxi"*

## Once Airborne

## 20. IR/TV Power

ON

## 21. WCS Switch

WCS XMT

**WARNING**

- Input Coords **BEFORE** selecting **GND ALIGN** if using ASH. Else alignment can progress too far to correct coordinates by the time they are input.
- **PARKING BRAKE MUST BE ENGAGED DURING ALIGNMENT.**



## 1.1.7 PRE-TAXI

|                         |               |
|-------------------------|---------------|
| 1. ANTI-SKID SPOILER BK | OFF           |
| 2. HOOK BYPASS          | As Required   |
| 3. Nose Strut           | RETRACTED     |
| 4. HUD MODE             | TO            |
| 5. Parking Brake        | Released (IN) |
| 6. NWS                  | ENGAGED       |
| 7. Path                 | verify clear  |

## 1.2 TAKEOFF &amp; LANDING


## 1.2.1 TAKEOFF - SHORE

| After Lining Up On Runway |  |
|---------------------------|--|
| 1. Wing Sweep             | (a) EM WING SWEEP ..... FWD, then IN<br>(b) MASTER RESET ..... PRESS<br>(c) Wings ..... Verify thumb controller<br>(d) WING SWEEP ..... AUTO<br>(e) Wings ..... Verify at 20 deg |
| 2. ANTI SKID SPOILER BK   | BOTH (UP)  |
| 3. FLAPS                  | UP   |
| 4. Trim                   | 0 deg  |
| 5. NWS                    | DISENGAGED   |
| 6. Takeoff                | (a) Throttle ..... MIL (90% RPM)<br>(b) Stick ..... Back at 130 KIAS<br>(c) Rotation ..... approx 140 KIAS<br>(d) GEAR ..... UP < 250 KIAS                                       |

## 1.2.2 TAKEOFF - CARRIER

|                                  |   |
|----------------------------------|---|
| <b>Lineup</b>                    | <ul style="list-style-type: none"> <li>• Wait behind JBD until Catapult is clear</li> <li>• Follow Taxi Directors Instructions to line up on Catapult</li> </ul>  |
| 1. <b>Wing Sweep</b>             | (a) <b>EM WING SWEEP</b> ..... <b>FWD</b> , then <b>IN</b><br>(b) <b>MASTER RESET</b> ..... <b>PRESS</b><br>(c) <b>Wings</b> ..... Verify thumb controller<br>(d) <b>WING SWEEP</b> ..... <b>AUTO</b><br>(e) <b>Wings</b> ..... Verify at 20 deg  |
| 2. <b>FLAPS</b>                  | <b>DOWN</b>   |
| 3. <b>Launch Bar Preparation</b> | (a) <b>Nose Strut</b> ..... <b>KNEEL</b> when directed<br>(b) <b>Throttle</b> ..... <b>UP</b> when directed<br>(c) <b>Taxi</b> ..... launch bar into shuttle<br>(d) <b>Throttle</b> ..... <b>IDLE</b> when directed   |
| 4. <b>Trim</b>                   | 2-3 deg nose up   |
| 5. <b>Speed Brakes</b>           | <b>IN</b>   |
| 6. <b>Final Checks</b>           | (a) <b>Throttle</b> ..... <b>MIL</b> when directed<br>(b) <b>Control Wipeout</b> <ul style="list-style-type: none"> <li>• Stick Full Forward</li> <li>• Stick Full Aft</li> <li>• Stick Full Left</li> <li>• Stick Full Right</li> <li>• Rudder Full Left</li> <li>• Rudder Full Right</li> </ul> (c) <b>Eng. Inst.</b> ..... <b>Checked</b><br>(d) <b>Caution/Warnings</b> ..... <b>None</b> |
| 7. <b>Catapult Shot</b>          | (a) <b>Salute</b> ..... <b>CAT SHOT</b><br>(b) <b>Gear</b> ..... <b>UP</b> < 250 KIAS<br>(c) <b>Flaps</b> ..... <b>UP</b> < 225 KIAS  |
| 8. <b>Clearing Turn</b>          |   |

## 1.2.3 LANDING - OVERHEAD PATTERN

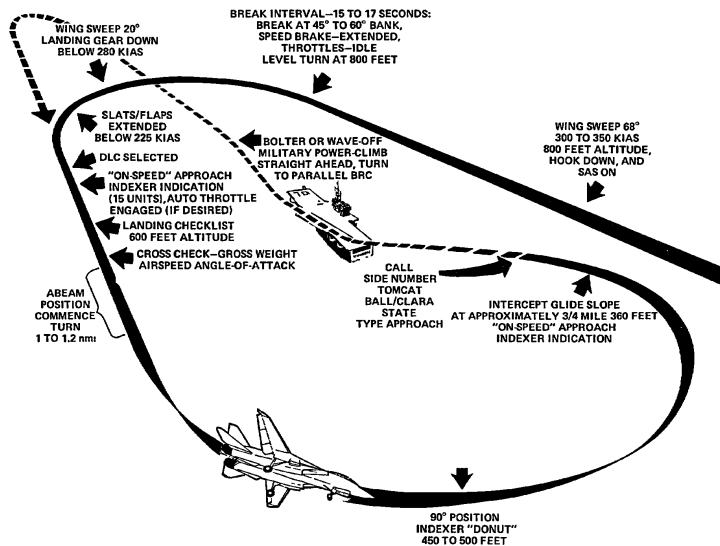

|                     |   |
|---------------------|---|
| 1. Initial Approach | <ul style="list-style-type: none"> <li>• WING SWEEP ..... 68 deg</li> <li>• HOOK ..... DOWN</li> <li>• SAS ..... ON</li> <li>• HUD ..... LDG</li> <li>• Airspeed ..... 300-350 KIAS</li> <li>• Altitude ..... 800 ft</li> </ul>               |
| 2. Initial Break    | <ul style="list-style-type: none"> <li>• Break Interval ..... 15-17 s</li> <li>• BANK ..... 45-60 deg</li> <li>• SPEED BRAKE ..... EXTEND</li> <li>• Throttle ..... IDLE</li> <li>• G ..... 3-4 G</li> <li>• Altitude ..... 800 ft</li> </ul> |
| 3. Break Turn       | <ul style="list-style-type: none"> <li>• Wing Sweep ..... AUTO &lt; 280 KIAS</li> <li>• Landing Gear ..... DOWN &lt; 280 KIAS</li> <li>• FLAPS ..... DOWN &lt; 225 KIAS</li> </ul>  |
| 4. Downwind         | <ul style="list-style-type: none"> <li>• DLC ..... Selected once flaps out</li> <li>• AOA ..... ON-SPEED</li> <li>• LANDING CHECKLIST</li> <li>• Altitude ..... descend to 600 ft</li> </ul>  |

|                         |  |
|-------------------------|--|
| 5. Final Turn           | 180 Deg Position<br>• Abeam Pos. .... 1-1.2 nmi<br>90 Deg Position<br>• AOA ..... DONUT<br>• Altitude ..... 400-500 ft |
| 6. Intercept Glideslope | • Distance ..... 3/4 Mile<br>• Altitude ..... 360 ft<br>• AOA ..... ON-SPEED   |

#### 1.2.4 LANDING - CHECKLIST

|                |   |
|----------------|---|
| 1. Wing Sweep  | 20 deg AUTO   |
| 2. Wheels      | • Lights ..... 3 DOWN<br>• Transition Light ..... OUT |
| 3. SAS         | ON  |
| 4. FLAPS       | DOWN  |
| 5. DLC         | Checked   |
| 6. Hook        | • HOOK ..... DOWN<br>• Transition Light ..... OUT     |
| 7. Harness     | Locked  |
| 8. Speedbrakes | EXT   |
| 9. Brakes      | Check   |
| 10. Fuel       | Check   |

## **1.3 IN-FLIGHT**

---

### **1.3.1 AERIAL REFUELING**

## 1.3.2 AIRSTART

|                       |   |
|-----------------------|---|
| • Spooldown           | <p><i>Before significant spooldown</i></p> <p>(a) <b>Non-Running ENG</b> ..... IDLE or above</p> <p><i>If no relight occurs</i></p> <p>(b) <b>Non-Running ENG</b> ..... OFF then IDLE</p> <p><i>If still no relight occurs</i></p> <p>(c) <b>ENG MODE</b> ..... SEC</p> <p>(d) <b>Non-Running ENG</b> ..... OFF then IDLE</p>   |
| • Cross-Bleed Restart | <p><i>With one ENG running, if Spooldown fails</i></p> <p>(a) <b>Non-Running ENG</b> ..... OFF</p> <p>(b) <b>FUEL SHUT OFF</b> ..... check</p> <p>(c) <b>Running throttle</b> ..... 80%+</p> <p>(d) <b>BACK UP IGNITION</b> ..... ON</p> <p>(e) <b>ENG CRANK</b> ..... non-running eng</p> <p>(f) <b>Non-Running ENG</b> ..... IDLE</p> <p><i>If no start occurs</i></p> <p>(g) <b>Non-Running ENG</b> ..... OFF then IDLE</p> <p><i>If still no start</i></p> <p>(h) <b>ENG MODE</b> ..... SEC</p> <p>(i) <b>Non-Running ENG</b> ..... OFF then IDLE</p> |
| • Windmill Restart    | <p>(a) <b>Airspeed</b> ..... &gt;450 kts</p> <p>(b) <b>Throttle</b> ..... IDLE or above</p> <p>(c) <b>BACK UP IGNITION</b> ..... ON</p> <p><i>If no relight occurs</i></p> <p>(d) <b>Throttle</b> ..... OFF then IDLE</p> <p><i>If still no relight</i></p> <p>(e) <b>ENG MODE</b> ..... SEC</p> <p>(f) <b>Throttle</b> ..... OFF then IDLE</p>   |
| • Post Restart        | <p>(a) <b>BACK UP IGNITION</b> ..... OFF</p> <p>(b) <b>ENG MODE</b> ..... PRI</p>   |

## Chapter 2

# SYSTEMS

### Contents

---

|       |  |             |
|-------|--|-------------|
| 2.1   | FLIGHT CONTROL . . . . .                         | <b>2-3</b>  |
| 2.1.1 | AFCS - SAS . . . . .                             | 2-3         |
| 2.1.2 | AFCS - AUTOPILOT . . . . .                       | 2-3         |
| 2.1.3 | APC / AUTOTHROTTLE . . . . .                     | 2-5         |
| 2.1.4 | ACLS . . . . .                                   | 2-5         |
| 2.1.5 | WING-SWEEP . . . . .                             | 2-5         |
| 2.2   | NAVIGATION . . . . .                             | <b>2-7</b>  |
| 2.2.1 | NAV - OVERVIEW . . . . .                         | 2-7         |
| 2.2.2 | NAV - INS . . . . .                              | 2-7         |
| 2.2.3 | NAV - ALIGNMENT . . . . .                        | 2-8         |
| 2.2.4 | NAV - WAYPOINT . . . . .                         | 2-9         |
| 2.2.5 | NAV - TACAN . . . . .                            | 2-9         |
| 2.2.6 | NAV - VOR/ADF . . . . .                          | 2-9         |
| 2.3   | COMMUNICATION . . . . .                          | <b>2-11</b> |
| 2.3.1 | COMMS - OVERVIEW . . . . .                       | 2-11        |
| 2.3.2 | COMMS - ARC-159 UHF 1 . . . . .                  | 2-11        |
| 2.3.3 | COMMS - ARC-182 V/UHF 2 . . . . .                | 2-12        |
| 2.3.4 | COMMS - KY-28 VOICE SECURITY EQUIPMENT . . . . . | 2-13        |
| 2.3.5 | LINK 4 DATALINK - OVERVIEW . . . . .             | 2-15        |
| 2.3.6 | LINK 4 DATALINK - CONTROL PANEL . . . . .        | 2-15        |
| 2.3.7 | LINK 4 DATALINK - REPLY/ANTENNA PANEL . . . . .  | 2-16        |
| 2.4   | DEFENSIVE SYSTEMS . . . . .                      | <b>2-17</b> |
| 2.4.1 | ALR-67 RWR - CONTROLS / OVERVIEW . . . . .       | 2-17        |
| 2.4.2 | ALR-67 RWR - THREAT SYMBOLOGY . . . . .          | 2-19        |

|       |                                  |      |
|-------|----------------------------------|------|
| 2.4.3 | ALE-39 CMS DISPENSER . . . . .   | 2-21 |
| 2.4.4 | ALQ-100 / ALQ-126 DECM . . . . . | 2-21 |

---



## 2.1 FLIGHT CONTROL

### 2.1.1 AFCS - SAS

|   |  |
|---|--|
| <ul style="list-style-type: none"> <li>• <b>SAS</b></li> </ul>                                  | <ul style="list-style-type: none"> <li>• <b>Stability Augmentation System</b> <ul style="list-style-type: none"> <li>- <b>Not Fly-by-Wire</b></li> <li>- Automatic control surface commands generated by analog computer to improve stability</li> </ul> </li> </ul> |
| <ul style="list-style-type: none"> <li>• <b>Controls</b></li> </ul>                             | <ul style="list-style-type: none"> <li>• <b>Three individual Switches</b> <ul style="list-style-type: none"> <li>- Pitch</li> <li>- Roll</li> <li>- Yaw</li> </ul> </li> </ul>   |
| <ul style="list-style-type: none"> <li>• <b>Autopilot Emergency Disengage Paddle</b></li> </ul> | <ul style="list-style-type: none"> <li>• <b>Paddle on Stick</b> <ul style="list-style-type: none"> <li>- Disengages Autopilot Modes</li> <li>- Deactivates Pitch, Roll SAS Channels</li> </ul> </li> </ul>   |

### 2.1.2 AFCS - AUTOPILOT

|  |   |
|--|---|
| <ul style="list-style-type: none"> <li>• <b>Attitude Hold</b></li> </ul> | <ul style="list-style-type: none"> <li>• <b>Basic Attitude Hold</b> <ul style="list-style-type: none"> <li>- Maintains existing pitch &amp; roll</li> <li>- Attitude can be changed with stick input</li> <li>- If engaged outside limits will automatically move within range</li> </ul> </li> <li>• <b>Limits</b> <ul style="list-style-type: none"> <li>- Pitch: 30 deg</li> <li>- Roll: 60 deg</li> </ul> </li> <li>• <b>Engagement</b> <ul style="list-style-type: none"> <li>(a) <b>SAS Switches</b> ..... <b>ON (FWD)</b></li> <li>(b) <b>Alt. Hold Mode</b> ..... <b>OFF</b></li> <li>(c) <b>VEC/PCD/ACL</b> ..... <b>OFF</b></li> <li>(d) <b>Heading Mode</b> ..... <b>OFF</b></li> <li>(e) <b>Autopilot Switch</b> ..... <b>ENGAGE (FWD)</b></li> </ul> </li> </ul> |
|--|---|

|  |  |
|--|--|
| <ul style="list-style-type: none"> <li>• <b>Altitude Hold</b></li> </ul> | <ul style="list-style-type: none"> <li>• <b>Barometric Altitude Hold</b> <ul style="list-style-type: none"> <li>– Maintains current barometric altitude</li> </ul> </li> <li>• <b>Limits</b> <ul style="list-style-type: none"> <li>– Vertical velocity: &lt; 100 ft/s</li> </ul> </li> <li>• <b>Engagement</b> <ul style="list-style-type: none"> <li>(a) <b>SAS Switches</b> ..... <b>ON (FWD)</b></li> <li>(b) <b>Autopilot Switch</b> ..... <b>ENGAGE (FWD)</b></li> <li>(c) <b>Alt. Hold Mode</b> ..... <b>ALT (FWD)</b></li> <li>(d) <b>A/P REF Light</b> ..... Wait until appears</li> <li>(e) <b>NWS Button</b> ..... <b>Press</b></li> </ul> </li> </ul>  |
| <ul style="list-style-type: none"> <li>• <b>Heading Hold</b></li> </ul>  | <ul style="list-style-type: none"> <li>• <b>Magnetic Heading Hold</b> <ul style="list-style-type: none"> <li>– Maintains current magnetic heading</li> </ul> </li> <li>• <b>Limits</b> <ul style="list-style-type: none"> <li>– Bank angle &lt; 5 deg</li> </ul> </li> <li>• <b>Engagement</b> <ul style="list-style-type: none"> <li>(a) <b>SAS Switches</b> ..... <b>ON (FWD)</b></li> <li>(b) <b>Autopilot Switch</b> ..... <b>ENGAGE (FWD)</b></li> <li>(c) <b>Heading Mode</b> ..... <b>HDG (FWD)</b></li> </ul> </li> </ul>  |
| <ul style="list-style-type: none"> <li>• <b>Ground Track</b></li> </ul>  | <ul style="list-style-type: none"> <li>• <b>Autopilot follows ground track</b> <ul style="list-style-type: none"> <li>– Similar to heading hold</li> <li>– Compensates for wind drift</li> <li>– Uses INS data instead of mag. bearing</li> </ul> </li> <li>• <b>Limits</b> <ul style="list-style-type: none"> <li>– Bank angle &lt; 5 deg</li> </ul> </li> <li>• <b>Engagement</b> <ul style="list-style-type: none"> <li>(a) <b>SAS Switches</b> ..... <b>ON (FWD)</b></li> <li>(b) <b>Autopilot Switch</b> ..... <b>ENGAGE (FWD)</b></li> <li>(c) <b>Heading Mode</b> ..... <b>GT (AFT)</b></li> <li>(d) <b>A/P REF Light</b> ..... Wait until appears</li> <li>(e) <b>NWS Button</b> ..... <b>Press</b></li> </ul> </li> </ul> |
| <ul style="list-style-type: none"> <li>• <b>VEC/PCD</b></li> </ul>       | <ul style="list-style-type: none"> <li>• <b>Vector / Precision Course Direction</b> <ul style="list-style-type: none"> <li>– Allows Link 4 controller to remotely direct the aircraft</li> <li>– <b>Not Modelled in DCS</b></li> </ul> </li> </ul>   |
| <ul style="list-style-type: none"> <li>• <b>ACL</b></li> </ul>           | <ul style="list-style-type: none"> <li>• <b>Automatic Carrier Landing</b> <ul style="list-style-type: none"> <li>– See relevant section</li> </ul> </li> </ul>   |

- Autopilot Emergency Disengage Paddle

- Paddle on Stick
  - Disengages Autopilot Modes
  - Deactivates Pitch, Roll SAS Channels

### 2.1.3 APC / AUTOTHROTTLE

|              |  |
|--------------|--|
| • APC        | <ul style="list-style-type: none"> <li>• Approach Power Compensator               <ul style="list-style-type: none"> <li>– Automatic throttle control</li> <li>– <b>Maintains ON SPEED AoA</b></li> </ul> </li> </ul>  |
| • Conditions | Engagement is inhibited / APC is disengaged if conditions not met <ul style="list-style-type: none"> <li>• <b>Throttles</b> .....75%-90% RPM</li> <li>• <b>Landing Gear Handle</b> ..... <b>Down</b></li> <li>• <b>Weight on Wheels</b> ..... <b>No</b></li> </ul> |
| • Engage     | • Throttle Mode ..... <b>AUTO (FWD)</b>  |
| • Disengage  | <b>Cage/Seam Button</b>  |

### 2.1.4 ACLS

### 2.1.5 WING-SWEEP

|              |  |
|--------------|--|
| • Overview   | <ul style="list-style-type: none"> <li>• In Flight Limited between 20 deg &amp; 68 deg</li> <li>• On Ground can Oversweep to 75 deg</li> <li>• Hydromechanically Controlled               <ul style="list-style-type: none"> <li>– Automatically through CADC</li> <li>– Manually with emergency wing-sweep handle</li> </ul> </li> <li>• 15 deg/s at 1g loading</li> <li>• Mechanically linked to ensure symmetry</li> </ul>  |
| • CADC Modes | <ul style="list-style-type: none"> <li>• <b>AUTO</b> <ul style="list-style-type: none"> <li>– CADC controls wing position as function of current Mach via wing-sweep program</li> </ul> </li> <li>• <b>MAN</b> <ul style="list-style-type: none"> <li>– Pilot manually chooses desired wing sweep angle with thumb controller</li> </ul> </li> <li>• <b>BOMB</b> <ul style="list-style-type: none"> <li>– Sets wing sweep to <b>55 deg</b> or further</li> </ul> </li> </ul> |

|   |  |
|---|--|
| <ul style="list-style-type: none"> <li>Emergency Mode</li> </ul>        | <ul style="list-style-type: none"> <li>Emergency Wing-Sweep Handle           <ul style="list-style-type: none"> <li>Moved with wing sweep program by spider detent under normal operation</li> <li>Can be forced out of spider detent and moved manually</li> </ul> </li> </ul>  |
| <ul style="list-style-type: none"> <li>Oversweep</li> </ul>             | <ul style="list-style-type: none"> <li>Selected via Emergency Wing-Sweep Handle           <ul style="list-style-type: none"> <li>(a) Em. Wing-Sweep ..... 68 deg<br/>Wait for wing-seal airbags to deflate</li> <li>(b) HZ TAIL AUTH ..... Illuminated</li> <li>(c) Em. Wing-Sweep ..... 75 deg</li> </ul> </li> </ul> |
| <ul style="list-style-type: none"> <li>Return to CAD Control</li> </ul> | <ul style="list-style-type: none"> <li>After Emergency Mode / Oversweep           <ul style="list-style-type: none"> <li>(a) Em. Wing-Sweep ..... Spider Detent<br/>(Fwd on startup)</li> <li>(b) MASTER RESET ..... Press</li> </ul> </li> </ul>  |

| Indicated Mach | Max Forward Wing Position |
|----------------|---------------------------|
| 0.4            | 20 deg                    |
| 0.7            | 25 deg                    |
| 0.8            | 50 deg                    |
| 0.9            | 60 deg                    |
| 1.0            | 68 deg                    |

## 2.2 NAVIGATION

### 2.2.1 NAV - OVERVIEW

| Pilot Cockpit Interface    |  |
|----------------------------|--|
| • HUD                      | Heads Up Display <ul style="list-style-type: none"> <li>Displays WRITE ME information</li> </ul>   |
| • VDI                      | Vertical Display Indicator <ul style="list-style-type: none"> <li>placeholder</li> </ul>   |
| • HSD                      | Horizontal Situation Display <ul style="list-style-type: none"> <li>NAV Mode Information               <ul style="list-style-type: none"> <li>Diamond – Current heading</li> <li>Chevron – TACAN TO bearing</li> <li>+ – TACAN FROM bearing</li> <li>House – ADF bearing</li> <li>RNG – Range to Waypoint (nm)</li> <li>MODE – NAV STEER mode</li> <li>W – Wind heading / speed (kts)</li> <li>TAS – True AirSpeed (kts)</li> <li>GS – GroundSpeed (kts)</li> </ul> </li> <li>TID Mode Information               <ul style="list-style-type: none"> <li>Overhead View</li> <li>Waypoint Coordinates</li> </ul> </li> </ul> |
| • BDHI                     | placeholder  |
| • Standby Magnetic Compass | placeholder  |
| • Tacan Control Panel      | placeholder  |
| • STEER CMD Selectors      | placeholder  |

### 2.2.2 NAV - INS

|  |  |
|--|--|
| <ul style="list-style-type: none"> <li>• <b>Contributing Subsystems</b></li> </ul> | <ul style="list-style-type: none"> <li>• <b>IMU</b> – Inertial Measurement Unit               <ul style="list-style-type: none"> <li>– <b>4 Gimbals</b> – No gimbal-lock, corrects platform attitude errors</li> <li>– <b>2 Gyros</b> – Source for aircraft attitude data</li> <li>– <b>3 Accelerometers</b> – Source for aircraft acceleration data</li> </ul> </li> <li>• <b>CSDC</b> – Computer Signal Data Converter               <ul style="list-style-type: none"> <li>– Processes sensor signals including IMU data</li> </ul> </li> </ul>   |
| <ul style="list-style-type: none"> <li>• <b>CSDC Data Modes</b></li> </ul>         | <p>(a) <b>INS</b> – Primary nav mode</p> <ul style="list-style-type: none"> <li>• <b>Velocity Data</b> – IMU</li> <li>• <b>Pitch/Roll Data</b> – IMU</li> </ul> <p>(b) <b>IMU/AM</b> – Backup mode selected by RIO or automatically when CSDC determines IMU velocity data unreliable.</p> <ul style="list-style-type: none"> <li>• <b>Velocity Data</b> – Calculated from true airspeed &amp; stored wind</li> <li>• <b>Pitch/Roll Data</b> – IMU</li> </ul> <p>(c) <b>AHRS/AM</b> – Further degraded mode selected by RIO or automatically when CSDC detects total INS failure</p> <ul style="list-style-type: none"> <li>• <b>Heading</b> – Mag heading &amp; MAG VAR</li> <li>• <b>Velocity Data</b> – Calculated from true airspeed &amp; stored wind</li> <li>• <b>Pitch/Roll Data</b> – AHRS</li> </ul> |

### 2.2.3 NAV - ALIGNMENT

|                                   |     |
|-----------------------------------|-----|
| • <b>Ground Align</b>             | (a) |
| • <b>Carrier Align D/L</b>        |     |
| • <b>Carrier Align Handset</b>    |     |
| • <b>Reinitialization</b>         |     |
| • <b>Automatic Stored Heading</b> |     |
| • <b>Catapult Align</b>           |     |

## 2.2.4 NAV - WAYPOINT

---

- **Reference Point Types**

- **Navigation Waypoint** – Used for navigation. Maximum of 3 stored simultaneously
  - **Fixed Point (FP)** – Arbitrary point to establish current position relative to external references
  - **Initial Point (IP)** – Starting point for A/G attack run
  - **Surface Target (ST)** – Enemy surface target
  - **Defended Point (DP)** – Area to protect (i.e friendly forces)
  - **Hostile Area (HA)** – Area with known ground or air hostiles
  - **Home Base (HB)** – Airfield / CV
- 

## 2.2.5 NAV - TACAN

## 2.2.6 NAV - VOR/ADF





## 2.3 COMMUNICATION

### 2.3.1 COMMS - OVERVIEW

|                                  |   |
|----------------------------------|---|
| • ARC-159 UHF 1                  | <ul style="list-style-type: none"> <li>• Air-to-Air &amp; Air-to-Surface Communication</li> <li>• Pilot Controlled</li> <li>• Frequency               <ul style="list-style-type: none"> <li>- Range - 225.000 - 399.975 MHz</li> <li>- Steps - 25 kHz</li> <li>- Channels - 20</li> </ul> </li> </ul>  |
| • ARC-182 V/UHF 2                | <ul style="list-style-type: none"> <li>• Air-to-Air &amp; Air-to-Surface Communication</li> <li>• RIO Controlled</li> <li>• Frequency               <ul style="list-style-type: none"> <li>- Band 1 - 30 - 88 MHz</li> <li>- Band 2 - 108 - 156 MHz</li> <li>- Band 3 - 156 - 174 MHz</li> <li>- Band 4 - 225 - 399.975 MHz</li> <li>- Steps - 25 kHz</li> <li>- Channels - 20</li> </ul> </li> </ul> |
| • ARA-50 UHF ADF                 | <ul style="list-style-type: none"> <li>• UHF Automatic Direction Finder</li> <li>• LoS bearing to UHF Transmitter</li> <li>• Bearing displayed on BDHI, Pilot HSD</li> <li>• 5 min Warmup</li> </ul>  |
| • KY-28 Voice Security Equipment | <ul style="list-style-type: none"> <li>• Voice Cipherng</li> <li>• Integrated with UHF 1 and V/UHF 2</li> <li>• 2 min Warmup</li> </ul>   |

### 2.3.2 COMMS - ARC-159 UHF 1

|                 |  |
|-----------------|--|
| • ARC-159 UHF 1 | <ul style="list-style-type: none"> <li>• Air-to-Air &amp; Air-to-Surface Communication</li> <li>• Pilot Controlled</li> <li>• Frequency               <ul style="list-style-type: none"> <li>- Range - 225.000 - 399.975 MHz</li> <li>- Steps - 25 kHz</li> <li>- Channels - 20</li> </ul> </li> </ul> |
| • VOL Knob      | • Controls Pilot UHF 1 Audio Level   |

|                            |  |
|----------------------------|--|
| • <b>BRT/TEST Knob</b>     | • <b>Controls Radio FREQ Display</b><br>• Turn past max to display <b>888.888</b>  |
| • <b>SQL Switch</b>        | • <b>Toggles radio squelch (noise attenuation)</b>   |
| • <b>READ Switch</b>       | • <b>Displays Frequency of Selected Preset Channel</b>   |
| • <b>LOAD Button</b>       | • <b>Saves Displayed Frequency to Selected Preset Channel</b>  |
| • <b>TONE Button</b>       | • <b>Steady 1.020 kHz Test Tone</b>  |
| • <b>Mode Selector</b>     | • <b>Frequency Selection Method</b> <ul style="list-style-type: none"> <li>- <b>GUARD</b> - 243.000 MHz</li> <li>- <b>MANUAL</b> - Manual tuning</li> <li>- <b>PRESET</b> - Preset channels</li> </ul>                                       |
| • <b>Function Selector</b> | • <b>Selects Transceivers to Energize</b> <ul style="list-style-type: none"> <li>- <b>ADF</b> - Not simulated</li> <li>- <b>BOTH</b> - Main &amp; Guard</li> <li>- <b>MAIN</b> - Main</li> <li>- <b>OFF</b> - Secures UHF 1 radio</li> </ul> |
| • <b>CHAN SEL</b>          | • <b>Selects from 20 preset Channels</b>   |

### 2.3.3 COMMS - ARC-182 V/UHF 2

|                          |   |
|--------------------------|---|
| • <b>ARC-182 V/UHF 2</b> | • <b>Air-to-Air &amp; Air-to-Surface Communication</b><br>• <b>RIO Controlled</b><br>• <b>Frequency</b> <ul style="list-style-type: none"> <li>- <b>Band 1</b> - 30 - 88 MHz</li> <li>- <b>Band 2</b> - 108 - 156 MHz</li> <li>- <b>Band 3</b> - 156 - 174 MHz</li> <li>- <b>Band 4</b> - 225 - 399.975 MHz</li> <li>- <b>Steps</b> - 25 kHz</li> <li>- <b>Channels</b> - 20</li> </ul> |
| • <b>VOL Knob</b>        | • <b>Controls RIO UHF 2 Audio Level</b>   |
| • <b>BRT/TEST Knob</b>   | • <b>Controls Radio FREQ Display</b>  |
| • <b>SQL Switch</b>      | • <b>Toggles radio squelch (noise attenuation)</b>  |

|  |   |
|--|---|
| <ul style="list-style-type: none"> <li>• <b>Mode Selector</b></li> </ul>       | <ul style="list-style-type: none"> <li>• <b>Transceiver Settings</b> <ul style="list-style-type: none"> <li>- <b>OFF</b> – Secures V/UHF radio unless frequency mode set to <b>243</b></li> <li>- <b>T/R</b> – Energizes transmitter and main receiver</li> <li>- <b>T/R &amp; G</b> – Energizes transmitter, main, and guard receiver</li> <li>- <b>DF</b> – Automatic direction finding from 108 - 399.975 MHz</li> <li>- <b>TEST</b> – BIT</li> </ul> </li> </ul>  |
| <ul style="list-style-type: none"> <li>• <b>CHAN SEL Outer Dial</b></li> </ul> | <ul style="list-style-type: none"> <li>• <b>Selects Frequency Tuning Mode</b> <ul style="list-style-type: none"> <li>- <b>243</b> – Selects UHF Guard</li> <li>- <b>MAN</b> – Manual Select frequency</li> <li>- <b>G</b> – Tunes Tranceiver to guard frequency in last selected band</li> <li>- <b>PRESET</b> – Allows selection between 40 preset channels (31-40 are Have Quick and not simulated)</li> <li>- <b>READ</b> – Displays frequency of selected preset channel</li> <li>- <b>LOAD</b> – Saves displayed frequency to selected preset channel</li> </ul> </li> </ul> |
| <ul style="list-style-type: none"> <li>• <b>CHAN SEL Inner Dial</b></li> </ul> | <ul style="list-style-type: none"> <li>• <b>Selects one of 40 Preset Channels</b></li> </ul>  |

#### 2.3.4 COMMS - KY-28 VOICE SECURITY EQUIPMENT

|   |  |
|---|--|
| <ul style="list-style-type: none"> <li>• <b>KY-28 Voice Security Equipment</b></li> </ul> | <ul style="list-style-type: none"> <li>• <b>Voice Ciphering</b></li> <li>• <b>Integrated with UHF 1 and V/UHF 2</b></li> <li>• <b>2 min Warmup</b></li> </ul>  |
| <ul style="list-style-type: none"> <li>• <b>ZEROIZE Switch</b></li> </ul>                 | <ul style="list-style-type: none"> <li>• <b>Lift Guard to Erase Preloaded Codes</b></li> <li>• <b>Codes loaded via ground crew</b></li> </ul>  |
| <ul style="list-style-type: none"> <li>• <b>Power-Mode Switch</b></li> </ul>              | <ul style="list-style-type: none"> <li>• <b>Selects Mode</b> <ul style="list-style-type: none"> <li>- <b>P/OFF</b> – Removes power from system</li> <li>- <b>C</b> – Transmit / Receive in secure mode</li> <li>- <b>DELAY</b> – Between PTT and trans.</li> </ul> </li> </ul> |

- 
- |  |  |
|--|--|
| <ul style="list-style-type: none"><li>• <b>Radio-Select Switch</b></li></ul> | <ul style="list-style-type: none"><li>• <b>Selects Radio Mode</b><ul style="list-style-type: none"><li>- <b>RELAY</b> – Acts as relay for other stations (not simulated)</li><li>- <b>RAD-2</b> – Secure voice for V/UHF 2</li><li>- <b>RAD-1</b> – Secure voice for UHF 1</li></ul></li></ul> |
|--|--|
-

## 2.3.5 LINK 4 DATALINK - OVERVIEW

|                          |  |
|--------------------------|--|
| • <b>Link 4</b>          | <ul style="list-style-type: none"> <li>• <b>Modes</b> – Mutually exclusive <ul style="list-style-type: none"> <li>– <b>Link 4A</b> – AWACS / Surface Ship</li> <li>– <b>Link 4C</b> – Fighter to Fighter</li> </ul> </li> <li>• <b>Data Speed</b> – up to 5000 bit/s!</li> </ul> |
| • <b>Link 4A</b>         | <ul style="list-style-type: none"> <li>• <b>Network</b> – AWACS / Surface Ship</li> <li>• Additionally used for ACLS</li> </ul>  |
| • <b>Link 4C</b>         | <ul style="list-style-type: none"> <li>• <b>Network</b> – Fighter to Fighter <ul style="list-style-type: none"> <li>– Up to four F-14s</li> <li>– Unique to F-14</li> </ul> </li> </ul>  |
| • <b>Basic Operation</b> | <p>(a) <b>Power Switch</b> ..... As Desired</p> <ul style="list-style-type: none"> <li>• <b>Link 4A</b> ..... <b>ON</b></li> <li>• <b>Link 4C</b> ..... <b>AUX</b></li> </ul> <p>(b) <b>Mode Switch</b> ..... <b>TAC</b></p> <p>(c) <b>Frequency</b> ..... <b>Set</b></p>        |

## 2.3.6 LINK 4 DATALINK - CONTROL PANEL

|                                    |   |
|------------------------------------|---|
| • <b>Test Switch</b>               | <ul style="list-style-type: none"> <li>• <b>Controls Test / Anti-Jam Modes</b> <ul style="list-style-type: none"> <li>– <b>TEST</b> – Initiates BIT</li> <li>– <b>NORM</b> – Normal Operation</li> <li>– <b>A-J</b> – Anti-Jam (not simulated)</li> </ul> </li> </ul> |
| • <b>Frequency<br/>Thumbwheels</b> | <ul style="list-style-type: none"> <li>• <b>Selects Datalink Frequency</b> <ul style="list-style-type: none"> <li>– <b>First Digit – Fixed as 3</b></li> <li>– <b>Allowable Range</b> – 300.0 - 324.9 MHz</li> </ul> </li> </ul>                                      |
| • <b>Power Switch</b>              | <ul style="list-style-type: none"> <li>• <b>Controls System Power</b> <ul style="list-style-type: none"> <li>– <b>ON</b> – Enables Link 4A</li> <li>– <b>OFF</b> – Disables system</li> <li>– <b>AUX</b> – Enables Link 4C</li> </ul> </li> </ul>                     |

## 2.3.7 LINK 4 DATALINK - REPLY/ANTENNA PANEL

|  |  |
|--|--|
| <ul style="list-style-type: none"><li>• <b>ANTENNA Switch</b></li></ul>      | <ul style="list-style-type: none"><li>• <b>Selects Antenna</b><ul style="list-style-type: none"><li>- Shared with UHF 1 - Mutually exclusive</li><li>- UHF 1 LWR / DL UPR</li><li>- UHF 1 UPR / DL LWR</li></ul></li></ul> |
| <ul style="list-style-type: none"><li>• <b>REPLY Switch</b></li></ul>        | <ul style="list-style-type: none"><li>• <b>Sets Reply Mode</b><ul style="list-style-type: none"><li>- <b>NORM</b> - Own Aircraft replies to datalink messages</li><li>- <b>CANC</b> - Receive only</li></ul></li></ul>     |
| <ul style="list-style-type: none"><li>• <b>MODE Switch</b></li></ul>         | <ul style="list-style-type: none"><li>• <b>Controls Overall Mode</b><ul style="list-style-type: none"><li>- <b>TAC</b> - Normal airborne mode</li><li>- <b>CAINS/WAYPT</b> - Enables CV align</li></ul></li></ul>          |
| <ul style="list-style-type: none"><li>• <b>Address Thumbwheels</b></li></ul> | <ul style="list-style-type: none"><li>• <b>Sets Two Least Significant Bits of Aircraft D/L Address</b></li></ul>   |

## 2.4 DEFENSIVE SYSTEMS

### 2.4.1 ALR-67 RWR - CONTROLS / OVERVIEW

|                                |  |
|--------------------------------|--|
| • <b>PWR Switch</b>            | • <b>Set to ON to Operate</b>  |
| • <b>VOL Knob</b>              | • <b>Sets RIO Audio Level</b>  |
| • <b>TEST Switch</b>           | <ul style="list-style-type: none"> <li>• <b>Springloaded to Center</b></li> <li>• <b>BIT</b> – Initiates Build In Test</li> <li>• <b>SPL</b> – Holds BIT status page while held</li> </ul>   |
| • <b>MODE Switch</b>           | <ul style="list-style-type: none"> <li>• <b>Springloaded to Center</b></li> <li>• <b>OFST</b> – Separates overlapping symbols</li> <li>• <b>LMT</b> – Displays 6 highest threats</li> </ul>  |
| • <b>DISPLAY TYPE Selector</b> | <ul style="list-style-type: none"> <li>• <b>Changes Priority of Display</b> <ul style="list-style-type: none"> <li>– <b>NORM</b> – Normal threat symbology</li> <li>– <b>AI</b> – Airborne Interceptor prioritized</li> <li>– <b>AAA</b> – Anti-aircraft artillery prioritized</li> <li>– <b>UNK</b> – Unknown prioritized</li> <li>– <b>FRIEND</b> – Friendly threats prioritized</li> </ul> </li> <li>• <b>Indicated by Letter in Display Center</b></li> </ul>  |
| • <b>Display</b>               | <ul style="list-style-type: none"> <li>• <b>Outer Band</b> <ul style="list-style-type: none"> <li>– <b>Critical Band</b></li> <li>– Imminent threat to own aircraft</li> <li>– Blinking indicates engaging own aircraft</li> </ul> </li> <li>• <b>Middle Band</b> <ul style="list-style-type: none"> <li>– <b>Lethal Band</b></li> <li>– Potentially threatening emitters</li> <li>– Not actively engaging own aircraft</li> </ul> </li> <li>• <b>Inner Band</b> <ul style="list-style-type: none"> <li>– <b>Non-Lethal Band</b></li> <li>– Not currently within capability of emitter</li> </ul> </li> <li>• <b>Inner Circle</b> <ul style="list-style-type: none"> <li>– <b>N, I, A, U, F</b> – Prioritization type</li> <li>– <b>O</b> – Offset</li> <li>– <b>L</b> – Limit</li> <li>– <b>B</b> – BIT Failure</li> <li>– <b>T</b> – Thermal overload</li> </ul> </li> </ul> |

- **Alert Tones**

- **Short Tone** – New emitter / emitter moved
  - **Slow Warbling** – Threat in critical band
  - **Fast Warbling** – Threat actively engaging own aircraft
  - **4-Tone Sequence** – New threat capable of silently engaging own aircraft
-



## 2.4.2 ALR-67 RWR - THREAT SYMBOLOGY

| SHIPS     |  |
|-----------|--|
| <b>AB</b> | Arleigh Burke  |
| <b>AK</b> | Admiral Kuznetsov  |
| <b>GR</b> | Grisha 5 (Albatros)                                      |
| <b>HP</b> | Oliver Hazard Perry                                      |
| <b>J2</b> | Type 054A Frigate,<br>"Jiangkai II class"                |
| <b>KK</b> | Krivak 3 (Rezky)   |
| <b>KV</b> | Kirov (Pyotr Velikiy)                                    |
| <b>L1</b> | Type 052B Destroyer,<br>"Luyang I class"                 |
| <b>L2</b> | Type 052C Destroyer,<br>"Luyang II class"                |
| <b>N</b>  | <i>Ship with Nav Radar</i>                               |
| <b>NE</b> | Neustrashimy   |
| <b>NZ</b> | Nimitz (Vinson, Stennis)                                 |
| <b>SV</b> | Slava (Moscow)   |
| <b>TC</b> | Ticonderoga  |
| <b>TT</b> | Tarantul 3 (Molniya)                                     |
| <b>TW</b> | Tarawa   |
| <b>YU</b> | Type 071 Amphibious<br>Transport Dock, "Yuzhao<br>class" |
| AIRCRAFT  |  |
| <b>14</b> | F-14A/B  |
| <b>15</b> | F-15C/E  |
| <b>16</b> | F-16C  |
| <b>17</b> | JF-17  |
| <b>18</b> | F/A-18C  |
| <b>19</b> | MiG-19   |

|           |  |
|-----------|--|
| <b>21</b> | MiG-21bis                              |
| <b>23</b> | MiG-23MLD                              |
| <b>24</b> | Su-24M/MR                              |
| <b>25</b> | MiG-25PD                               |
| <b>29</b> | MiG-29A/G/S<br>Su-27<br>Su-33<br>J-11A |
| <b>30</b> | Su-30                                  |
| <b>31</b> | MiG-31                                 |
| <b>34</b> | Su-34                                  |
| <b>37</b> | AJS-37                                 |
| <b>39</b> | Su-25TM                                |
| <b>50</b> | A-50                                   |
| <b>52</b> | B-52                                   |
| <b>AN</b> | AN-26B<br>AN-30M                       |
| <b>AP</b> | AH-64D                                 |
| <b>B1</b> | B-1B                                   |
| <b>BE</b> | Tu-95<br>Tu-142M                       |
| <b>BF</b> | Tu-22M3                                |
| <b>BJ</b> | Tu-160                                 |
| <b>E2</b> | E-2D                                   |
| <b>E3</b> | E-3C                                   |
| <b>F4</b> | F-4E                                   |
| <b>F5</b> | F-5E                                   |
| <b>HX</b> | Ka-27                                  |
| <b>IL</b> | IL-76MD<br>IL-78M                      |
| <b>KC</b> | KC-135                                 |

|           |                                |
|-----------|--------------------------------|
| <b>KJ</b> | KJ-2000                        |
| <b>M2</b> | Mirage 2000-C<br>Mirage 2000-5 |
| <b>S3</b> | S-3B                           |
| <b>SH</b> | SH-60B                         |
| <b>TO</b> | Tornado                        |
| <b>TR</b> | C-130<br>C-17A                 |

**AIR DEFENSE**

|           |   |
|-----------|---|
| <b>2</b>  | S-75 TR SNR (SA-2) "Fan Song"             |
| <b>3</b>  | S-125 TR SNR-125 (SA-3) "Low Blow"        |
| <b>6</b>  | Kub SA-6                                  |
| <b>7</b>  | HQ-7 TR                                   |
| <b>8</b>  | OSA (SA-8)                                |
| <b>10</b> | S-300PS 30N6 TR (SA-10)                   |
| <b>11</b> | Buk (SA-11)                               |
| <b>12</b> | S-300V                                    |
| <b>15</b> | Tor 9A331 (SA-15)                         |
| <b>19</b> | Tunguska 2C6M (SA-19)                     |
| <b>A</b>  | Gepard<br>M-163 Vulcan<br>ZSU-23-4 Shilka |
| <b>BB</b> | S-300PS 64H6E SR (SA-10/Big Bird)         |
| <b>BF</b> | Rapier Blindfire TR                       |
| <b>CS</b> | S-300PS 5N66M SR (SA-10/Clam Shell)       |
| <b>DE</b> | Sborka (Dog Ear)                          |
| <b>FF</b> | S-125 P-19 SR (SA-3/Flat Face)            |
| <b>GR</b> | Roland SR                                 |

|           |                           |
|-----------|---------------------------|
| <b>HA</b> | Hawk SR                   |
| <b>HK</b> | Hawk TR                   |
| <b>HQ</b> | HQ-7 SR                   |
| <b>PT</b> | Patriot                   |
| <b>RO</b> | Roland                    |
| <b>RP</b> | Rapier SR                 |
| <b>S</b>  | 1L13 55G6 EWR             |
| <b>SD</b> | Buk TR (SA-11/Snow Drift) |
| <b>SN</b> | PRW-11 (Side Net)         |

**MISSILES**

|          |   |
|----------|---|
| <b>M</b> | AIM-54<br>AIM-120<br>MICA-EM<br>R-37<br>R-77<br>SD-10 |
|----------|---|

**ATC**

|          |                   |
|----------|-------------------|
| <b>T</b> | Airport ATC Radar |
|----------|-------------------|

## 2.4.3 ALE-39 CMS DISPENSER

| Programmer   |  |
|--|--|
| <ul style="list-style-type: none"> <li><b>CHAFF Section</b></li> </ul>   | <ul style="list-style-type: none"> <li><b>B QTY</b> – Number of cartridges to eject in burst               <ul style="list-style-type: none"> <li><b>Options</b> – 1-4 cartridges, <b>C</b> continuous, <b>R</b> random (4-6 cartridges)</li> </ul> </li> <li><b>B INTV</b> – Time in seconds between each cartridge ejection               <ul style="list-style-type: none"> <li><b>Options</b> – .1, .2, .5, .7, 1 seconds, <b>R</b> random</li> </ul> </li> <li><b>S QTY</b> – How many salvos of bursts               <ul style="list-style-type: none"> <li><b>Options</b> – 1, 2, 4, 6, 8, 10, 15 salvos</li> </ul> </li> <li><b>S INT</b> – Time in seconds between salvos               <ul style="list-style-type: none"> <li><b>Options</b> – 2, 4, 6, 8, 10 seconds</li> </ul> </li> </ul> |
| <b>WARNING</b> R & C burst settings have special INTV behavior           |  |
| <ul style="list-style-type: none"> <li><b>JAMMER Section</b></li> </ul>  | Jammer cartridges not implemented in DCS   |
| <ul style="list-style-type: none"> <li><b>FLARE Section</b></li> </ul>   | <ul style="list-style-type: none"> <li><b>QTY</b> – Number of cartridges to eject in burst               <ul style="list-style-type: none"> <li><b>Options</b> – 2, 3, 4, 6, 8, 10 cartridges</li> </ul> </li> <li><b>INTV</b> – Time in seconds between each cartridge ejection               <ul style="list-style-type: none"> <li><b>Options</b> – 2, 4, 6, 8, 10 seconds</li> </ul> </li> </ul>   |
| Control Panel  |  |
| <ul style="list-style-type: none"> <li><b>PWR/MODE Switch</b></li> </ul> | <ul style="list-style-type: none"> <li><b>AUTO (CHAFF) / MAN</b> – Enables power to system and allows automatic chaff ejection program initiation</li> <li><b>MAN</b> – Enables power to system</li> <li><b>OFF</b> – Disables system</li> </ul>   |

## 2.4.4 ALQ-100 / ALQ-126 DECM



## Chapter 3

# AWG-9 RADAR

### Contents

|       |  |             |
|-------|--|-------------|
| 3.1   | OVERVIEW . . . . .                     | <b>3-3</b>  |
| 3.1.1 | MAIN MODES - OVERVIEW . . . . .        | 3-3         |
| 3.1.2 | MAIN MODES . . . . .                   | 3-3         |
| 3.2   | PULSE MODES . . . . .                  | <b>3-3</b>  |
| 3.2.1 | PULSE - PULSE SEARCH . . . . .         | 3-4         |
| 3.2.2 | PULSE - PSTT . . . . .                 | 3-5         |
| 3.3   | PULSE DOPPLER MODES . . . . .          | <b>3-6</b>  |
| 3.3.1 | PD - PULSE DOPPLER SEARCH . . . . .    | 3-6         |
| 3.3.2 | PD - RWS . . . . .                     | 3-8         |
| 3.3.3 | PD - TWS . . . . .                     | 3-9         |
| 3.3.4 | PD - TWS MAN . . . . .                 | 3-11        |
| 3.3.5 | PD - TWS AUTO . . . . .                | 3-12        |
| 3.3.6 | PD - PDSTT . . . . .                   | 3-13        |
| 3.4   | ACM . . . . .                          | <b>3-14</b> |
| 3.4.1 | ACM MODES - OVERVIEW . . . . .         | 3-14        |
| 3.4.2 | APX-76 IFF . . . . .                   | 3-15        |
| 3.5   | TACTICAL INFORMATION DISPLAY . . . . . | <b>3-17</b> |
| 3.5.1 | TID SYMBOLOGY . . . . .                | 3-17        |

AWG-9

### 3.1 OVERVIEW

#### 3.1.1 MAIN MODES - OVERVIEW


|               | Pulse        |       | Pulse Doppler |       |           |        |
|---------------|--------------|-------|---------------|-------|-----------|--------|
|               | Pulse Search | P-STT | PD Search     | RWS   | TWS       | PD-STT |
| <b>Range</b>  | 60 nm        | 50 nm | 110 nm        | 90 nm | 90 nm     | 90 nm  |
| <b>AIM-7</b>  | BRSIT        | CW    | BRSIT         |       | -         | PD     |
| <b>AIM-54</b> | BRSIT        | ACT   | BRSIT         |       | Multi TGT | PD/ACT |

#### 3.1.2 MAIN MODES

|  |   |
|--|---|
| <ul style="list-style-type: none"> <li>• <b>Pulse</b></li> </ul>         | <ul style="list-style-type: none"> <li>• <b>Basic Pulse w/o doppler filtering</b> <ul style="list-style-type: none"> <li>- Cannot be notched</li> <li>- Ground Clutter</li> <li>- Rudimentary Ground mapping</li> </ul> </li> <li>• <b>Pulse Sub-Modes</b> <ul style="list-style-type: none"> <li>- <b>Pulse Search</b></li> <li>- <b>Pulse-STT</b></li> </ul> </li> </ul>  |
| <ul style="list-style-type: none"> <li>• <b>Pulse Doppler</b></li> </ul> | <ul style="list-style-type: none"> <li>• <b>Doppler filter --&gt; no ground returns</b> <ul style="list-style-type: none"> <li>- Susceptible to notching</li> <li>- No ground clutter</li> <li>- Greater range</li> <li>- Advanced sub modes</li> <li>- AIM-54 Guidance</li> </ul> </li> <li>• <b>Pulse Doppler Sub-Modes</b> <ul style="list-style-type: none"> <li>- <b>PD Search</b></li> <li>- <b>RWS</b></li> <li>- <b>TWS</b></li> <li>- <b>PD-STT</b></li> </ul> </li> </ul> |

### 3.2 PULSE MODES


## 3.2.1 PULSE - PULSE SEARCH

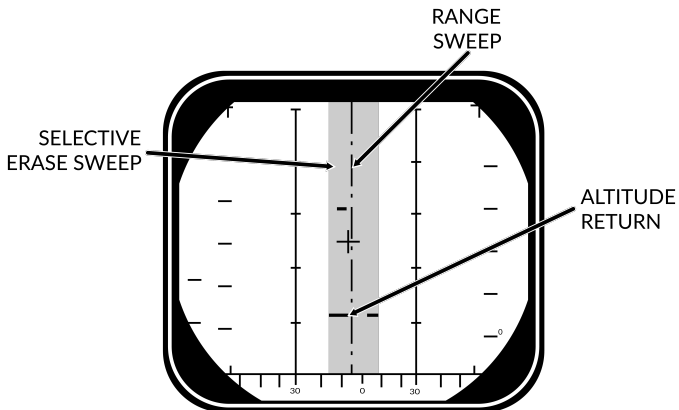SEARCH ( $\pm 10^\circ$  SCAN)

|   |   |
|---|---|
| <ul style="list-style-type: none"> <li>• <b>Pulse Search</b></li> </ul> | <p><b>Basic Mode</b> - AWG-9 does not use pulse doppler filtering</p> <ul style="list-style-type: none"> <li>• <b>Advantages</b> <ul style="list-style-type: none"> <li>- All aspect target detection</li> <li>- Cannot be notched</li> <li>- Rudimentary ground mapping</li> </ul> </li> <li>• <b>Disadvantages</b> <ul style="list-style-type: none"> <li>- Cannot discern ground returns and targets</li> <li>- Lower range</li> </ul> </li> </ul> |
| <ul style="list-style-type: none"> <li>• <b>DDD</b></li> </ul>          | <ul style="list-style-type: none"> <li>• <b>Range/Azimuth</b></li> <li>• Visual representation of radar and erase sweeps</li> </ul>   |
| <ul style="list-style-type: none"> <li>• <b>TID</b></li> </ul>          | <ul style="list-style-type: none"> <li>• <b>No Information from Pulse</b></li> <li>• <b>Cannot guide AIM-54</b></li> </ul>  |



### 3.2.2 PULSE - PSTT

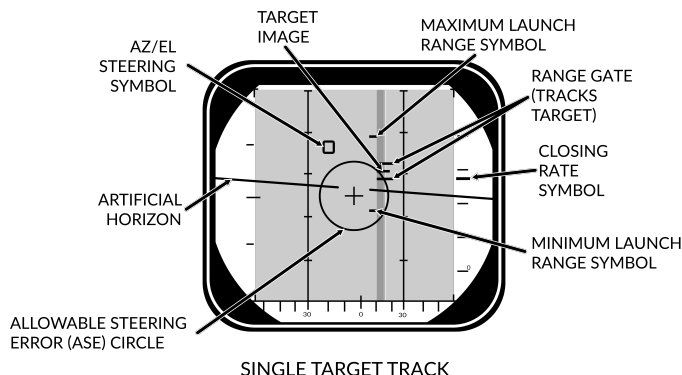

- **Pulse STT**

Lock Target w/o doppler filtering

- **Advantages**

- Cannot be notched

- **Disadvantages**

- Susceptible to ground clutter

- **Lock Target**

- **Conditions**

- Pulse Search Mode selected
- RDR HCU Mode selected

- **Lock Target**

- Hold HCU Half-action
- Slew to desired Target
- HCU Full-Action to lock

- **Unlock Target**

- HCU Half-action


- **DDD**

- **Track Indications**

- ANT TRK light
- RDROT light
- Tracking gates
- Closure rate
- Attack Symbology

### 3.3 PULSE DOPPLER MODES

#### 3.3.1 PD - PULSE DOPPLER SEARCH

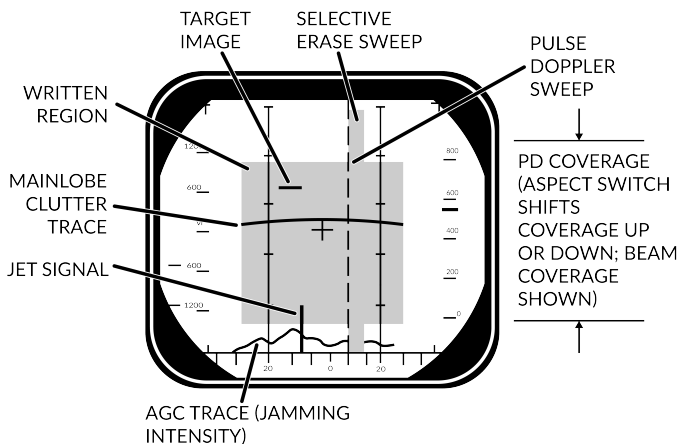

SEARCH (±40° SCAN)

|   |  |
|---|--|
| <ul style="list-style-type: none"> <li>• <b>Pulse Doppler Search</b></li> </ul> | <p><b>"Early Warning" Mode</b> - Longest Range, cannot display range</p> <ul style="list-style-type: none"> <li>• <b>Advantages</b> <ul style="list-style-type: none"> <li>- Longest Range</li> <li>- Doppler Filtering</li> <li>- "Look Down Shoot Down"</li> </ul> </li> <li>• <b>Disadvantages</b> <ul style="list-style-type: none"> <li>- Can be notched</li> <li>- No range information</li> </ul> </li> </ul>                     |
| <ul style="list-style-type: none"> <li>• <b>DDD</b></li> </ul>                  | <ul style="list-style-type: none"> <li>• <b>Closure Rate/Azimuth</b></li> <li>• Visual representation of radar and erase sweeps</li> </ul>   |
| <ul style="list-style-type: none"> <li>• <b>Doppler Filters</b></li> </ul>      | <ul style="list-style-type: none"> <li>• <b>Main Lobe Clutter (MLC) Filter</b> <ul style="list-style-type: none"> <li>- Own GS +/- 133 knots</li> <li>- Removes main ground return</li> <li>- Source of notching</li> </ul> </li> <li>• <b>Zero Doppler Filter</b> <ul style="list-style-type: none"> <li>- Negative own GS +/- 100 knots</li> <li>- Removes Radar reflection from ground directly beneath own AC</li> </ul> </li> </ul> |

- **MLC Switch**

- **IN:** Enables MLC filter
- **AUTO:** Enables MLC filter if look-up angle less than 3 deg
- **OUT:** Disables MLC filter

- **Vc Switch**


Changes closure rate DDD scale

- **X-4:** -800 to 4000 knots
- **NORM:** -200 to 1000 knots
- **VID:** -50 to 250 knots

- **ASPECT Switch**

Changes closure rate processing scale

- **NOSE:** -600 to 1800 knots
- **BEAM:** -1200 to 1200 knots
- **TAIL:** -1800 to 600 knots

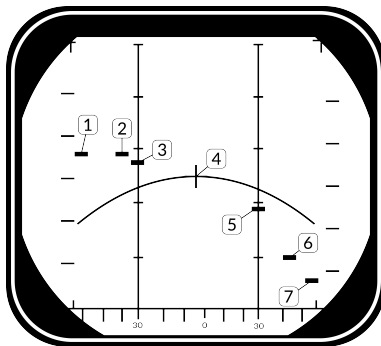

|   | Look Angle | Line of Sight Rate | Target Heading |
|---|------------|--------------------|----------------|
| 1 | 60 deg     | 1490               | 180 deg        |
| 2 | 45 deg     | 1500               | 120 deg        |
| 3 | 30 deg     | 1428               | 100 deg        |
| 4 | 0 deg      | 1200               | 90 deg         |
| 5 | 30 deg     | 672                | 80 deg         |
| 6 | 45 deg     | 210                | 60 deg         |
| 7 | 60 deg     | -300               | 0 deg          |

## 3.3.2 PD - RWS

|   |   |
|---|---|
| <ul style="list-style-type: none"> <li>• <b>Range While Search</b></li> </ul> | <p><b>FM Ranging</b>, used for getting good A/A picture before selecting TWS</p> <ul style="list-style-type: none"> <li>• <b>FM Ranging</b> <ul style="list-style-type: none"> <li>- Pulse Doppler with ranging</li> <li>- TID shows momentary tracks with ranges</li> <li>- Processing reduces max range</li> </ul> </li> <li>• <b>Advantages</b> <ul style="list-style-type: none"> <li>- Long Range</li> <li>- Doppler Filtering</li> <li>- "Look Down Shoot Down"</li> <li>- Signal Processing</li> </ul> </li> <li>• <b>Disadvantages</b> <ul style="list-style-type: none"> <li>- Can be notched</li> </ul> </li> </ul> |
| <ul style="list-style-type: none"> <li>• <b>DDD</b></li> </ul>                | <ul style="list-style-type: none"> <li>• <b>Closure Rate/Azimuth</b></li> <li>• Visual representation of radar and erase sweeps</li> </ul>  |
| <ul style="list-style-type: none"> <li>• <b>TID</b></li> </ul>                | <ul style="list-style-type: none"> <li>• <b>Momentary Tracks</b></li> <li>• Max concurrent tracks: 48</li> <li>• <b>Cannot lock targets from TID</b></li> </ul>   |
| <ul style="list-style-type: none"> <li>• <b>Filtering</b></li> </ul>          | <p><b>Same as Pulse Doppler Search</b></p>  |

## 3.3.3 PD - TWS

|  |  |
|--|--|
| <ul style="list-style-type: none"> <li>• <b>Track While Scan</b></li> </ul>  | <p><b>Builds Track Files</b>, high situational awareness, multi-target AIM-54 launch</p> <ul style="list-style-type: none"> <li>• <b>Track Files</b> <ul style="list-style-type: none"> <li>- AWG-9 builds Trackfiles for contacts</li> <li>- Can launch multiple AIM-54</li> <li>- Processing reduces max range</li> <li>- Can lock targets from TID</li> </ul> </li> <li>• <b>FM Ranging</b> <ul style="list-style-type: none"> <li>- Pulse Doppler with ranging</li> <li>- TID shows momentary tracks with ranges</li> <li>- Processing reduces max range</li> </ul> </li> <li>• <b>Advantages</b> <ul style="list-style-type: none"> <li>- Doppler Filtering</li> <li>- <b>Multi-Target AIM-54</b></li> </ul> </li> <li>• <b>Disadvantages</b> <ul style="list-style-type: none"> <li>- <b>Lowest Range</b></li> <li>- Can be notched</li> </ul> </li> </ul> |
| <ul style="list-style-type: none"> <li>• <b>DDD</b></li> </ul>               | <ul style="list-style-type: none"> <li>• <b>Closure Rate/Azimuth</b></li> <li>• Visual representation of radar and erase sweeps</li> </ul>   |
| <ul style="list-style-type: none"> <li>• <b>TID</b></li> </ul>               | <ul style="list-style-type: none"> <li>• <b>Tracksfiles</b></li> <li>• Max concurrent tracks: 24</li> <li>• Max displayed tracks: 18</li> </ul>  |
| <ul style="list-style-type: none"> <li>• <b>Filtering</b></li> </ul>         | <p><b>Same as Pulse Doppler Search</b></p>   |
| <ul style="list-style-type: none"> <li>• <b>Scan Volume</b></li> </ul>       | <p>Trackfiles require update every 2.5 s -&gt;</p> <ul style="list-style-type: none"> <li>• 20 deg 4 bar (if selected)</li> <li>• 40 deg 2 bar (else)</li> </ul>   |
| <ul style="list-style-type: none"> <li>• <b>TID Mode Selector</b></li> </ul> | <ul style="list-style-type: none"> <li>• <b>GND STAB:</b> Ground Stabilized, True North is up on TID</li> <li>• <b>A/C STAB:</b> Aircraft Stabilized</li> <li>• <b>ATTAK:</b> same as A/C STAB with superimposed attack steering symbology</li> <li>• <b>TV:</b> Displays TCS on TID, displays LANTIRN on TID if equipped</li> </ul>   |

|   |  |
|---|--|
| <ul style="list-style-type: none"> <li>• <b>TID Display</b><br/><b>Selector</b><br/><b>Buttons</b></li> </ul>     | <ul style="list-style-type: none"> <li>• <b>RID DISABLE:</b> Not simulated</li> <li>• <b>ALT NUM:</b> Enables display of track altitudes on left side of track symbols</li> <li>• <b>SYM ELEM:</b> Enables display of all supplementary symbology of tracks and waypoints</li> <li>• <b>DATA LINK:</b> Enables display of D/L contacts</li> <li>• <b>JAM STROBE:</b> Enables display of jam strobes</li> <li>• <b>NON-ATTK:</b> enables/disables display of targets not possible to engage (friendlies)</li> <li>• <b>LAUNCH ZONE:</b> Enables display of weapon launch zones</li> <li>• <b>VEL VECTOR:</b> Enables display of velocity vectors</li> </ul> |
| <ul style="list-style-type: none"> <li>• <b>TRACK HOLD</b><br/><b>CLSN Steering</b><br/><b>Buttons</b></li> </ul> | <ul style="list-style-type: none"> <li>• <b>TRACK HOLD</b> <ul style="list-style-type: none"> <li>- Normally: Tracks maintained for 14 s after last observation</li> <li>- Track Hold: maintained for 2 min after last observation</li> </ul> </li> <li>• <b>CLSN Button</b> <ul style="list-style-type: none"> <li>- begins collision steering to currently tracked target</li> <li>- enables Steering Centroid if in TWS</li> <li>- LD CLSN presents azimuth steering only</li> <li>- CLSN presents both azimuth and elevation steering</li> </ul> </li> </ul>   |
| <ul style="list-style-type: none"> <li>• <b>TWS AUTO / MAN</b></li> </ul>   | <ul style="list-style-type: none"> <li>• <b>TWS MAN:</b> Manual azimuth/elevation control, target designation by RIO</li> <li>• <b>TWS AUTO:</b> Automatic prioritization of targets and azimuth elevation control</li> </ul>  |

## 3.3.4 PD - TWS MAN


|   |  |
|---|--|
| <ul style="list-style-type: none"><li>• TWS MAN</li></ul>                 | <ul style="list-style-type: none"><li>• <b>Target Selection:</b> Manual</li><li>• <b>Scan Azimuth/Elevation:</b> Manual</li></ul>  |
| <ul style="list-style-type: none"><li>• <b>Target Selection</b></li></ul> | <ul style="list-style-type: none"><li>• <b>Conditions</b><ul style="list-style-type: none"><li>- TWS MAN Radar Mode selected</li><li>- TID CURSOR TID Mode selected</li></ul></li><li>• <b>Hook Target</b><ul style="list-style-type: none"><li>(a) Hold HCU Half-Action</li><li>(b) Slew TID Cursor over desired Tgt</li><li>(c) HCU Full-Action to select Tgt</li></ul></li><li>• <b>TID Symbology</b><ul style="list-style-type: none"><li>- Range (<b>RA</b>)</li><li>- Bearing (<b>BR</b>)</li><li>- Altitude (<b>AL</b>)</li><li>- Magnetic course (<b>MC</b>)</li></ul></li><li>• <b>Lock Target</b><ul style="list-style-type: none"><li>(d) Press <b>PD STT</b> or <b>Pulse STT</b> buttons</li></ul></li><li>• <b>Deselect Target</b><ul style="list-style-type: none"><li>(e) press HCU Half-Action</li></ul></li></ul> |
| <ul style="list-style-type: none"><li>• <b>AIM-54 Launch</b></li></ul>    | <ul style="list-style-type: none"><li>• <b>Automatically selects TWS AUTO</b></li><li>• <b>Prevents selection of TWS MAN</b></li></ul>   |

## 3.3.5 PD - TWS AUTO

|   |   |
|---|---|
| <ul style="list-style-type: none"><li>• <b>TWS AUTO</b></li></ul>                 | <ul style="list-style-type: none"><li>• <b>Target Selection:</b> prioritizes contacts based off range, aspect, closure</li><li>• <b>Scan Azimuth/Elevation:</b> Geometric center of targets in scan volume</li></ul>  |
| <ul style="list-style-type: none"><li>• <b>Centroid / Steering Cues</b></li></ul> | <ul style="list-style-type: none"><li>• <b>Steering Centroid</b><ul style="list-style-type: none"><li>- facilitates steering cues</li><li>- HUD, VDI, TID, DDD</li><li>- Appears as <b>X</b> on TID</li><li>- Takes Gimbal limits into account</li><li>- Weights individual Tracks based on parameters</li></ul></li><li>• <b>Illumination Centroid</b><ul style="list-style-type: none"><li>- <b>Not Visible</b></li><li>- Controls azimuth and elevation of scan pattern</li><li>- Takes scan volume into account</li></ul></li></ul> |
| <ul style="list-style-type: none"><li>• <b>Pilot Steering Cues</b></li></ul>      | <ul style="list-style-type: none"><li>• <b>Conditions</b><ul style="list-style-type: none"><li>- A-A HUD Mode selected</li><li>- Master Arm ON (UP)</li><li>- AIM-54 or AIM-7 selected</li><li>- TWS-AUTO selected</li></ul></li></ul>  |



### 3.3.6 PD - PDSTT

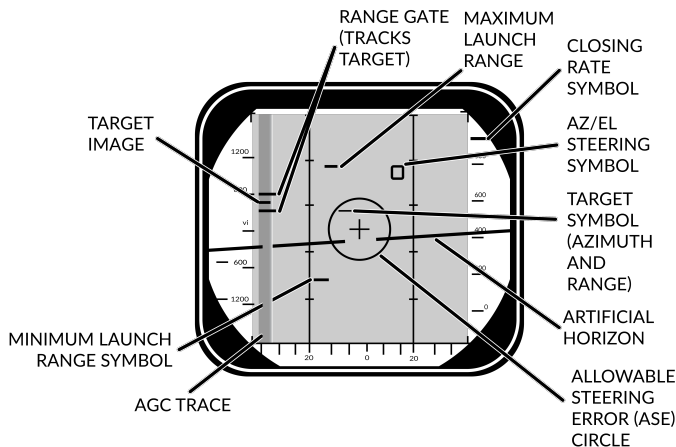

SINGLE TARGET TRACK

- |  |   |
|--|---|
| <ul style="list-style-type: none"> <li>• <b>Pulse Doppler STT</b></li> </ul> | <p>Lock Target with doppler filtering</p> <ul style="list-style-type: none"> <li>• <b>Advantages</b> <ul style="list-style-type: none"> <li>- Ground Clutter filtering</li> </ul> </li> <li>• <b>Disadvantages</b> <ul style="list-style-type: none"> <li>- Susceptible to notching</li> </ul> </li> </ul>  |
| <ul style="list-style-type: none"> <li>• <b>Lock Target</b></li> </ul>       | <ul style="list-style-type: none"> <li>• <b>Conditions</b> <ul style="list-style-type: none"> <li>- Pulse Doppler Mode selected (PD Search, RWS, TWS)</li> <li>- RDR HCU Mode selected</li> </ul> </li> <li>• <b>Lock Target</b> <ul style="list-style-type: none"> <li>(a) Hold HCU Half-action</li> <li>(b) Slew to desired Target</li> <li>(c) HCU Full-Action to lock</li> </ul> </li> <li>• <b>Unlock Target</b> <ul style="list-style-type: none"> <li>(d) HCU Half-action</li> </ul> </li> </ul> |
| <ul style="list-style-type: none"> <li>• <b>DDD</b></li> </ul>               | <ul style="list-style-type: none"> <li>• <b>Track Indications</b> <ul style="list-style-type: none"> <li>- ANT TRK light</li> <li>- RDROT light</li> <li>- Tracking gates</li> <li>- Closure rate</li> <li>- Attack Symbology</li> </ul> </li> </ul>  |

### 3.4 ACM

#### 3.4.1 ACM MODES - OVERVIEW

|             | PLM                | VSL      | PAL        | MRL  |
|-------------|--------------------|----------|------------|------|
| Range       | 5 nm               | 5 nm     | 15 nm      | 5 nm |
| Description | Boresight          | Vertical | Horizontal | RIO  |
| Weapons     | Gun + All Missiles |          |            |      |








|   |  |  |
|---|--|--|
| <ul style="list-style-type: none"> <li>PLM</li> </ul> | <ul style="list-style-type: none"> <li>Pilot Lockon Mode</li> <li>Highest Priority ACM</li> <li>Search Pattern               <ul style="list-style-type: none"> <li>Small Boresight</li> <li>Range: 5 nm</li> </ul> </li> </ul>  |  |
| <ul style="list-style-type: none"> <li>VSL</li> </ul> | <ul style="list-style-type: none"> <li>Vertical Scan Lockon</li> <li>HI Search Pattern               <ul style="list-style-type: none"> <li>Width: 5 deg</li> <li>Vertical: +15 to +55 deg</li> <li>Range: 5 nm</li> </ul> </li> <li>LO Search Pattern               <ul style="list-style-type: none"> <li>Width: 5 deg</li> <li>Vertical: -15 to +25 deg</li> <li>Range: 5 nm</li> </ul> </li> <li>RIO/PILOT Controlled</li> </ul> |  |
| <ul style="list-style-type: none"> <li>PAL</li> </ul> | <ul style="list-style-type: none"> <li>Pilot Automatic Lockon</li> <li>Search Pattern               <ul style="list-style-type: none"> <li>Width: +/- 20 deg</li> <li>Vertical: 8-bar</li> <li>Range: 15 nm</li> </ul> </li> </ul>   |  |
| <ul style="list-style-type: none"> <li>MRL</li> </ul> | <ul style="list-style-type: none"> <li>Manual Rapid Lockon</li> <li>RIO Controlled</li> <li>Search Pattern               <ul style="list-style-type: none"> <li>HCU Controlled</li> <li>Range: 5 nm</li> </ul> </li> </ul>   |  |















**3.4.2 APX-76 IFF**







### 3.5 TACTICAL INFORMATION DISPLAY

#### 3.5.1 TID SYMBOLOGY





| GENERAL               |   |   |
|-----------------------|---|---|
| Center Dot            |    | <ul style="list-style-type: none"> <li>• <b>Basic Component of Symbols</b> <ul style="list-style-type: none"> <li>– Marks coordinates of symbol</li> </ul> </li> </ul>  |
| Own AC                |    | <ul style="list-style-type: none"> <li>• <b>Symbol representing own aircraft</b> <ul style="list-style-type: none"> <li>– Ground Stabilized: Moves</li> <li>– Aircraft Stabilized: Stationary</li> <li>– Outside TID: line drawn from TID center towards symbol</li> </ul> </li> </ul>  |
| TID Cursor            |    | <ul style="list-style-type: none"> <li>• <b>Hook Cursor</b> <ul style="list-style-type: none"> <li>– Controlled by HCU in TID mode</li> </ul> </li> <li>• <b>Half-Action</b> <ul style="list-style-type: none"> <li>– Enables display of symbol</li> <li>– Enables HCU stick to move cursor</li> </ul> </li> <li>• <b>Full-Action</b> <ul style="list-style-type: none"> <li>– Hooks closest symbol</li> <li>– If no symbol near, cursor dropped at location</li> </ul> </li> </ul> |
| TWS Steering Centroid |  | <ul style="list-style-type: none"> <li>• <b>Steering centroid of TWS tracks</b> <ul style="list-style-type: none"> <li>– Selected by WCS for weapons engagement</li> </ul> </li> </ul>  |
| ONBOARD SENSORS       |   | Symbol Above Dot  |
| Unknown               |  | <ul style="list-style-type: none"> <li>• <b>Unknown Sensor Track</b></li> <li>• <b>All Returns in RWS</b></li> </ul>  |
| Hostile               |  | <ul style="list-style-type: none"> <li>• <b>Sensor Track designated Hostile by RIO</b></li> </ul>   |
| Friend                |  | <ul style="list-style-type: none"> <li>• <b>Sensor Track designated Friendly by RIO</b></li> </ul>  |







|  |   |   |
|--|---|---|
| Angle-Track<br>Radar Target  |     | <ul style="list-style-type: none"> <li>• Radar Angle Tracking <ul style="list-style-type: none"> <li>- Jamming Target</li> </ul> </li> </ul>                                    |
| Angle-Track<br>Radar Target with<br>Altitude Difference<br>Ranging |    | <ul style="list-style-type: none"> <li>• Radar Angle Tracking <ul style="list-style-type: none"> <li>- Jamming Target</li> <li>- Alt. diff. ranging</li> </ul> </li> </ul>      |
| TCS-Angle Tracked<br>Target  |    | <ul style="list-style-type: none"> <li>• TCS Angle Tracking</li> </ul>  |
| TCS-Angle Tracked<br>Target with Altitude<br>Difference Ranging    |    | <ul style="list-style-type: none"> <li>• TCS Angle Tracking <ul style="list-style-type: none"> <li>- Alt. diff. ranging</li> </ul> </li> </ul>                                  |
| D/L TARGETS  |   | Symbol Below Dot  |
| Unknown  |    | <ul style="list-style-type: none"> <li>• D/L Track designated Un-<br/>known by Source</li> </ul>  |
| Hostile  |    | <ul style="list-style-type: none"> <li>• D/L Track designated Hostile<br/>by Source</li> </ul>  |
| Friendly   |    | <ul style="list-style-type: none"> <li>• D/L Track designated Friendly<br/>by Source</li> </ul>   |
| MANUAL REF POINTS  |   |   |
| Home base  |    | <ul style="list-style-type: none"> <li>• Waypoint Representing <ul style="list-style-type: none"> <li>- Home Base</li> <li>- Carrier</li> <li>- Airfield</li> </ul> </li> </ul> |
| Waypoint   |   | <ul style="list-style-type: none"> <li>• Nav Waypoint</li> <li>• Supplanted by Number <ul style="list-style-type: none"> <li>- 1, 2, or 3</li> </ul> </li> </ul>                |
| Defended Point   |  | <ul style="list-style-type: none"> <li>• Waypoint to Defend</li> </ul>  |
| Fixed Point  |  | <ul style="list-style-type: none"> <li>• Generic Waypoint</li> </ul>  |
| Hostile Area   |  | <ul style="list-style-type: none"> <li>• Waypoint Indicating Hostile<br/>Area</li> </ul>  |
| Surface Target   |  | <ul style="list-style-type: none"> <li>• Waypoint Indicating Surface<br/>Target</li> </ul>  |
| IP   |  | <ul style="list-style-type: none"> <li>• Initial Point <ul style="list-style-type: none"> <li>- Waypoint for A/G engage-<br/>ment</li> </ul> </li> </ul>                        |

## D/L REF POINTS


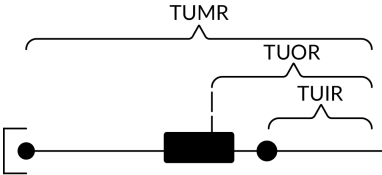




|                       |   |  |
|-----------------------|---|--|
| Home Base             |  | <ul style="list-style-type: none"> <li>• D/L Waypoint Representing Home Base</li> </ul>        |
| Waypoint              |  | <ul style="list-style-type: none"> <li>• D/L Generic Waypoint</li> </ul>                       |
| Data Link Fixed Point |  | <ul style="list-style-type: none"> <li>• D/L Waypoint Representing Fixed Point</li> </ul>      |
| Surface Target        |  | <ul style="list-style-type: none"> <li>• D/L Waypoint Representing a Surface Target</li> </ul> |

## POS SYMB MODIFIERS

|                   |   |  |
|-------------------|---|--|
| Mandatory Attack  |    | <ul style="list-style-type: none"> <li>• <b>Additional Symbology on TWS Track</b> <ul style="list-style-type: none"> <li>– Horizontal bar through center dot</li> </ul> </li> <li>• <b>Selected by RIO</b> <ul style="list-style-type: none"> <li>– Only 1 target can be designated</li> <li>– Guaranteed WCS priority number</li> </ul> </li> </ul> |
| Data Link Destroy |    | <ul style="list-style-type: none"> <li>• <b>Additional Symbology on D/L Track</b> <ul style="list-style-type: none"> <li>– Horizontal bar through center dot</li> </ul> </li> <li>• <b>Selected by Source</b> <ul style="list-style-type: none"> <li>– No effect on WCS prioritization</li> </ul> </li> </ul>  |
| Do Not Attack     |  | <ul style="list-style-type: none"> <li>• <b>Additional Symbology on TWS or D/L Track</b> <ul style="list-style-type: none"> <li>– Vertical bar through center dot</li> </ul> </li> <li>• <b>If Set by RIO</b> <ul style="list-style-type: none"> <li>– Removes WCS prioritization</li> </ul> </li> </ul>   |
| Multiple Targets  |  | <ul style="list-style-type: none"> <li>• <b>Additional Symbology on TWS or D/L Track</b> <ul style="list-style-type: none"> <li>– Horizontal bar on left side of symbol</li> </ul> </li> <li>• <b>Indicates Multiple Targets</b></li> </ul>  |

|                       |   |   |
|-----------------------|---|---|
| Data Link Challenge   |     | <ul style="list-style-type: none"> <li>• <b>Additional Symbology on D/L Track</b> <ul style="list-style-type: none"> <li>- Small <b>V</b> with center at center dot</li> </ul> </li> <li>• <b>Command to Visually Identify</b></li> </ul>   |
| Track Extrapolated    |    | <ul style="list-style-type: none"> <li>• <b>Additional Symbology on TWS or D/L Track</b> <ul style="list-style-type: none"> <li>- Small <b>X</b> with center at center dot</li> </ul> </li> <li>• <b>No Update within 8 seconds</b> <ul style="list-style-type: none"> <li>- Track deleted after 14 seconds</li> <li>- Or after 2 min if track hold</li> </ul> </li> </ul>  |
| Altitude Numerics     |    | <ul style="list-style-type: none"> <li>• <b>Altitude to Nearest Ten Thousand</b> <ul style="list-style-type: none"> <li>- example: 35000-45000</li> </ul> </li> </ul>   |
| Firing Order Numerics |    | <ul style="list-style-type: none"> <li>• <b>Indicates AIM-54 Prioritization</b> <ul style="list-style-type: none"> <li>- Numbers 1-6</li> <li>- Only in TWS</li> </ul> </li> </ul>  |
| Time-to-Impact (TTI)  |    | <ul style="list-style-type: none"> <li>• <b>After AIM-54 Launch</b> <ul style="list-style-type: none"> <li>- Prioritization replaced with estimated TTI</li> </ul> </li> <li>• <b>Flashes after Pitbull</b></li> </ul>  |
| Velocity Vector       |  | <ul style="list-style-type: none"> <li>• <b>Additional Symbology from center Dot</b> <ul style="list-style-type: none"> <li>- Direction represents track heading</li> <li>- Length represents speed</li> </ul> </li> <li>• <b>Varies with Mode</b> <ul style="list-style-type: none"> <li>- Ground Stabilized: true heading and ground speed</li> <li>- Aircraft Stabilized: relative heading and velocity</li> </ul> </li> </ul> |



|   |   |   |
|---|---|---|
| Launch Zone Vectors                       |     |  <ul style="list-style-type: none"> <li>• <b>Additional Symbolology for AIM-54</b> <ul style="list-style-type: none"> <li>- Selected manually by RIO</li> <li>- Or 60 seconds from max launch</li> </ul> </li> <li>• <b>TUMR</b> <ul style="list-style-type: none"> <li>- Time-Until-Minimum-Range</li> <li>- Max: 180 seconds, 1.5 inches</li> </ul> </li> <li>• <b>TUOR</b> <ul style="list-style-type: none"> <li>- Time-Until-Optimal-Range</li> <li>- Start of bar is 8 seconds from optimum</li> </ul> </li> <li>• <b>TUIR</b> <ul style="list-style-type: none"> <li>- Time-Until-In-Range</li> </ul> </li> </ul> |
| Jamming Strobe                            |    | <ul style="list-style-type: none"> <li>• <b>Line from own AC towards Jammer</b></li> </ul>  |
| Radar Antenna Scan Pattern Azimuth Limits |   | <ul style="list-style-type: none"> <li>• <b>Limits of Current Scan Azimuth</b></li> <li>• <b>Single Line in STT</b></li> </ul>  |
| Data Link Jamming Strobe                  |  | <ul style="list-style-type: none"> <li>• <b>Line from D/L point towards Jammer</b></li> </ul>   |
| Data Link Pointer                         |  | <ul style="list-style-type: none"> <li>• <b>Additional Symbolology on D/L Track</b> <ul style="list-style-type: none"> <li>- Circle</li> <li>- Indicates operator concern</li> </ul> </li> </ul>  |

**Data Link Priority Kill**



- **Additional Symbology on D/L Track**
  - Square
  - Indicates target must be destroyed
  - No effect on WCS prioritization

### ATTACK DISPLAY SYMBOLOGY

**Artificial Horizon**



- **Represents Pitch and Roll**

**Steering Guidance Symbol**



- **Represents Steering Error**
  - Should be placed as near as possible to center of ASE circle

**Allowable Steering Error Circle**



- **Indicates Allowable Steering Error for Missile Launch**
- **Size Varies with Geometry, Mode, Missile**

**Breakaway Indication**



- **Appears when Target Range Less than Minimum for Selected Weapon**

## Chapter 4

# TCS - LANTIRN

### Contents

---

|       |   |            |
|-------|---|------------|
| 4.1   | TCS . . . . .                           | <b>4-3</b> |
| 4.1.1 | OVERVIEW . . . . .                      | 4-3        |
| 4.2   | LANTIRN . . . . .                       | <b>4-5</b> |
| 4.2.1 | OVERVIEW . . . . .                      | 4-5        |
| 4.2.2 | OVERVIEW - STARTUP . . . . .            | 4-5        |
| 4.2.3 | OVERVIEW - POINTING MODES . . . . .     | 4-6        |
| 4.2.4 | OVERVIEW - LASING/DESIGNATION . . . . . | 4-7        |
| 4.2.5 | CONTROLS - PANEL . . . . .              | 4-7        |
| 4.2.6 | CONTROLS - STICK . . . . .              | 4-8        |
| 4.2.7 | DISPLAY . . . . .                       | 4-9        |

---



## 4.1 TCS

---

### 4.1.1 **OVERVIEW**



## 4.2 LANTIRN

### 4.2.1 OVERVIEW

|                              |  |
|------------------------------|--|
| • <b>LANTIRN</b>             | <p>Low <b>A</b>ltitude <b>N</b>avigation and <b>T</b>argeting <b>I</b>nfra-<b>R</b>ed for <b>N</b>ight</p> <ul style="list-style-type: none"> <li>• <b>Only Targeting Pod</b> – Nav pod was deleted</li> <li>• <b>Incomplete Integration</b> – Own control panel, supplants TCS feed</li> </ul>  |
| • <b>Master Modes</b>        | <ul style="list-style-type: none"> <li>• <b>A/G</b> – Allows bomb release guidance</li> <li>• <b>A/A</b> – Optimized for air targets</li> </ul>  |
| • <b>FOV Levels Overview</b> | <ul style="list-style-type: none"> <li>• <b>Wide</b> <ul style="list-style-type: none"> <li>– <b>FOV</b> – 5.9 deg</li> <li>– <b>Slew</b> – 8.5 deg/s</li> </ul> </li> <li>• <b>Narrow</b> <ul style="list-style-type: none"> <li>– <b>FOV</b> – 1.7 deg</li> <li>– <b>Slew</b> – 1.8 deg/s</li> </ul> </li> <li>• <b>Expanded</b> <ul style="list-style-type: none"> <li>– <b>FOV</b> – 0.8 deg</li> <li>– <b>Slew</b> – 0.7 deg/s</li> <li>– <b>Digital Zoom</b> – Degraded quality</li> </ul> </li> </ul> |

### 4.2.2 OVERVIEW - STARTUP

|    |                                |  |
|----|--------------------------------|--|
| 1. | <b>Power Switch</b>            | <b>POD</b>   |
| 2. | <b>Pod Startup Sequence</b>    | <ul style="list-style-type: none"> <li>• 8 min startup sequence</li> <li>• <b>MODE Switch</b> shows <b>STBY</b> when complete</li> </ul> |
| 3. | <b>MODE Switch</b>             | <b>Press</b>   |
| 4. | <b>Initialization Sequence</b> | <ul style="list-style-type: none"> <li>• 30 sec initialization</li> <li>• <b>MODE Switch</b> shows <b>OPER</b> when ready</li> </ul>     |
| 5. | <b>VIDEO Switch</b>            | <b>FLIR</b>  |
| 6. | <b>TID MODE</b>                | <b>TV</b>  |

## 4.2.3 OVERVIEW - POINTING MODES

|  |   |
|--|---|
| <ul style="list-style-type: none"> <li>• <b>Sensor Modes Overview</b></li> </ul> | <ul style="list-style-type: none"> <li>• <b>Contrast Lock</b> <ul style="list-style-type: none"> <li>- Area Track</li> <li>- Point Track</li> </ul> </li> <li>• <b>Q Designation</b> <ul style="list-style-type: none"> <li>- <b>Directional Q</b> - QSNO / QADL / QHUD</li> <li>- <b>Location Q</b> - QWp / QDES</li> </ul> </li> </ul>  |
| <ul style="list-style-type: none"> <li>• <b>Directional Q</b></li> </ul>         | <ul style="list-style-type: none"> <li>• <b>Do Not Allow Weapon Guidance</b></li> <li>• <b>QSNO</b> <ul style="list-style-type: none"> <li>- Pod slaved to <b>ground 15 nm in front</b> along own aircraft heading</li> </ul> </li> <li>• <b>QADL</b> <ul style="list-style-type: none"> <li>- <b>Pod slaved to ADL</b></li> <li>- In A/A mode</li> </ul> </li> <li>• <b>QHUD</b> <ul style="list-style-type: none"> <li>- <b>Pod slaved to HUD</b></li> <li>- In A/G mode</li> </ul> </li> </ul> |
| <ul style="list-style-type: none"> <li>• <b>Location Q</b></li> </ul>            | <ul style="list-style-type: none"> <li>• <b>Allow Weapon Guidance</b></li> <li>• <b>QWp</b> <ul style="list-style-type: none"> <li>- Pod slaved to WCS waypoint</li> <li>- Cycled with <b>QWp+</b> / <b>QWp-</b></li> </ul> </li> <li>• <b>QDES</b> <ul style="list-style-type: none"> <li>- <b>Designate targets for engagement</b></li> <li>- <b>LANTIRN Trigger Second Detent</b> to designate</li> <li>- Coordinates can be manually added to WCS for navigation</li> </ul> </li> </ul>       |



## 4.2.4 OVERVIEW - LASING/DESIGNATION

|                          |  |
|--------------------------|--|
| • <b>A/G Designation</b> | (a) <b>Designate</b> ..... <b>Trigger Full-Action</b> <ul style="list-style-type: none"> <li>• Laser Fires</li> <li>• Slant Range calculated</li> <li>• Time-to-Go calculated</li> </ul>   |
| • <b>Steering Cues</b>   | <ul style="list-style-type: none"> <li>• <b>Automatically activated when QDES selected/designated</b></li> <li>• QDES remains even if new Q selected</li> <li>• Cues still point towards QDES even if pod at another point</li> </ul>  |
| • <b>Manual Lase</b>     | (a) <b>Lase</b> ..... <b>Trigger Half-Action Hold</b>  |
| • <b>Latched Lase</b>    | <ul style="list-style-type: none"> <li>• <b>Effect</b> – Lases for 60 sec</li> </ul> <p>(a) <b>Activate</b> ..... <b>Latch Lase Button Press</b><br/> (b) <b>Extend</b> ..... <b>Latch Lase Button Press</b><br/> (c) <b>Deactivate</b> ..... <b>Trigger Half-Action</b></p> |
| • <b>Auto Lase</b>       | <ul style="list-style-type: none"> <li>• <b>Effect</b> – Fires from -10 to +4 sec TIMP</li> </ul> <p>(a) <b>Laser Mode</b> ..... <b>Slider AFT Short</b><br/> (b) <b>Cycle A/M</b> ..... <b>Right 4-Way Depress</b></p>  |
| • <b>Laser Notes</b>     | <ul style="list-style-type: none"> <li>• <b>Always at current Pod location</b></li> <li>• Can point to different location than QDES</li> </ul>   |

## 4.2.5 CONTROLS - PANEL

|                          |   |
|--------------------------|---|
| • <b>Power Switch</b>    | <ul style="list-style-type: none"> <li>• <b>OFF</b> – Disables power to system</li> <li>• <b>IMU</b> – Only powers LANTIRN IMU (<b>Not Simulated in DCS</b>)</li> <li>• <b>POD</b> – Powers whole system</li> </ul> |
| • <b>MODE Switch</b>     | <ul style="list-style-type: none"> <li>• <b>STBY</b> – Standby</li> <li>• <b>OPER</b> – Operational</li> </ul>  |
| • <b>LASER Switch</b>    | <ul style="list-style-type: none"> <li>• <b>ARM</b> – Arms laser</li> <li>• <b>SAFE</b> – Inhibits laser use</li> </ul>   |
| • <b>VIDEO Switch</b>    | <ul style="list-style-type: none"> <li>• <b>FLIR</b> – Displays LANTIRN FLIR on TID</li> <li>• <b>TCS</b> – Displays TCS video on TID</li> </ul>  |
| • <b>Indicator Light</b> | <ul style="list-style-type: none"> <li>• <b>Indicate Error States</b></li> </ul>  |
| • <b>IBIT Button</b>     | <ul style="list-style-type: none"> <li>• <b>Initiates Build-In-Test</b></li> </ul>  |

## 4.2.6 CONTROLS - STICK

|  |   |
|--|---|
| • <b>Master Mode</b>                       | <ul style="list-style-type: none"> <li>• A/G Mode – Side 2-Way FWD</li> <li>• A/A Mode – Side 2-Way AFT</li> </ul>                                    |
| • <b>Slew</b>                              | Center Slew Hat   |
| • <b>WHOT/BHOT</b>                         | Center Slew Hat Depress   |
| • <b>Contrast Track</b>                    | <ul style="list-style-type: none"> <li>• Point Track – Left 4-Way Up</li> <li>• Area Track – Left 4-Way Down</li> </ul>                               |
| • <b>Q Select</b>                          | <ul style="list-style-type: none"> <li>• QADL/QHUD – Right 4-Way Up</li> <li>• QDES – Right 4-Way Right</li> <li>• QSNO – Right 4-Way Down</li> </ul> |
| • <b>Declutter</b>                         | Right 4-Way Depress   |
| • <b>Zoom Level</b>                        | FOV Button  |
| • <b>Cycle Gain</b><br><b>Control Mode</b> | Slider FWD short  |
| • <b>Manual Gain</b><br><b>Control</b>     | (a) Slider ..... FWD long<br>(b) Gain ..... Right 4-Way Up/Down<br>Level ..... Right 4-Way Left/Right   |
| • <b>Laser Code</b>                        | (a) Slider ..... AFT short<br>(b) Select Digit ..... Right 4-Way Left/Right<br>(c) Change Digit ..... Right 4-Way Up/Down                             |
| • <b>Focus Control</b>                     | (a) Slider ..... AFT hold<br>(b) Right 4-Way ..... Up/Down  |
| • <b>Manual Lase</b>                       | Trigger Half-Action   |
| • <b>Latched Laser</b>                     | Latched Laser Fire Button   |
| • <b>Designate</b><br><b>QDES</b>          | Trigger Full-Action   |

4.2.7 **DISPLAY**

|                        |  |
|------------------------|--|
| • <b>Top Left</b>      | <ul style="list-style-type: none"> <li>• <b>Own Aircraft Datablock</b> <ul style="list-style-type: none"> <li>- <b>Lat</b> - deg:min.dec</li> <li>- <b>Long</b> - deg:min.dec</li> <li>- <b>ALT</b> - Altitude (ft)</li> <li>- <b>KGS</b> - Knots Ground Speed</li> <li>- <b>DIVE</b> - Dive Angle (deg)</li> </ul> </li> </ul>  |
| • <b>Mid Left</b>      | <ul style="list-style-type: none"> <li>• <b>Sensor Mode</b> - <b>WHOT</b> / <b>BHOT</b></li> <li>• <b>Gain Control</b> - <b>Auto</b> / <b>Manual</b></li> </ul>  |
| • <b>Bottom Left</b>   | <ul style="list-style-type: none"> <li>• <b>Pod Info Datablock</b> <ul style="list-style-type: none"> <li>- <b>SRA</b> - Slant Range</li> <li>- <b>AZ</b> - Pod LoS Azimuth L/R</li> <li>- <b>EL</b> - Pod LoS Elevation</li> <li>- <b>Time</b> - UTC Time</li> <li>- <b>IBIT</b> - Codes</li> </ul> </li> </ul>   |
| • <b>Bottom Center</b> | <ul style="list-style-type: none"> <li>• <b>Master Mode</b> - <b>A/A</b> / <b>A/G</b></li> <li>• <b>Track Mode</b> - <b>AREA</b> / <b>POINT</b> / <b>Q</b></li> <li>• <b>Current Weapon</b></li> <li>• <b>Laser Code</b></li> <li>• <b>L</b> <ul style="list-style-type: none"> <li>- <b>Steady</b> - Laser Armed</li> <li>- <b>Flashing</b> - Laser Firing</li> </ul> </li> </ul> |
| • <b>Bottom Right</b>  | <ul style="list-style-type: none"> <li>• <b>Q Datablock</b> <ul style="list-style-type: none"> <li>- <b>TTG</b> - Time-To-Go</li> <li>- <b>B/R</b> - Bearing and Range</li> <li>- <b>ELEV</b> - Elevation (ft) of Q</li> <li>- <b>Lat</b> - deg:min:dec</li> <li>- <b>Long</b> - deg:min:dec</li> </ul> </li> </ul>  |
| • <b>Mid Center</b>    | <ul style="list-style-type: none"> <li>• <b>Crosshair</b> <ul style="list-style-type: none"> <li>- <b>Bounding Box</b> - Indicates currently tracked target in point mode</li> <li>- <b>Zoom Boxes</b> - Indicates next zoom levels</li> <li>- <b>FLIR Pointing Cue</b> - Shows Pod LoS, screen center indicates straight down</li> </ul> </li> </ul>                              |

- **Mid Right**

- **Bomb Release Cue**

- Only shown if current Q is **QDES**, with valid weapon selected
- **TREL** - Time to release
- **TIMP** - Time to Impact (after release)

- **Top Center**

- **Steering Guidance to Q**

- Relative bearing L/R to commanded heading

## Chapter 5

# A/G WEAPONS

### Contents

---

|       |  |            |
|-------|--|------------|
| 5.1   | SETTINGS . . . . .                       | <b>5-3</b> |
| 5.1.1 | A/G WEAPON SETTINGS - OVERVIEW . . . . . | 5-3        |
| 5.1.2 | SELECTIVE ORNANCE JETTISON . . . . .     | 5-4        |
| 5.2   | UNGUIDED . . . . .                       | <b>5-4</b> |
| 5.2.1 | M61 GUN . . . . .                        | 5-4        |
| 5.2.2 | FFAR / ZUNI ROCKETS . . . . .            | 5-5        |
| 5.2.3 | UNGUIDED BOMB - CCIP . . . . .           | 5-5        |
| 5.2.4 | UNGUIDED BOMB - CCRP . . . . .           | 5-6        |
| 5.3   | GUIDED . . . . .                         | <b>5-7</b> |
| 5.3.1 | LASER GUIDED BOMB . . . . .              | 5-7        |
| 5.3.2 | TALD DECOYS . . . . .                    | 5-8        |

---

**A/G**

## 5.1 SETTINGS

### 5.1.1 A/G WEAPON SETTINGS - OVERVIEW

|                       |   |
|-----------------------|---|
| • <b>WPN TYPE</b>     | <ul style="list-style-type: none"> <li>• <b>Selects Weapon Type</b> <ul style="list-style-type: none"> <li>- Configures WCS for selected weapon</li> <li>- Refer to Kneeboard for list of mounted weapons</li> <li>- Mk-81 / 82 / 83 have both <b>L</b> and <b>H</b> option referring to high and low drag</li> </ul> </li> </ul>                               |
| • <b>DLVY MODE</b>    | <ul style="list-style-type: none"> <li>• <b>STP-SGL</b> – Single weapon per press</li> <li>• <b>STP-PRS</b> Single pair per press</li> <li>• <b>RPL-SGL</b> – QTY of weapons per press</li> <li>• <b>RPL-PRS</b> – QTY of pairs per press</li> </ul>  |
| • <b>DLVY OPTNS</b>   | <ul style="list-style-type: none"> <li>• <b>INTERVAL</b> – Interval in ms</li> <li>• <b>QTY</b> – Number of stores to be released</li> </ul>  |
| • <b>MECH FUZE</b>    | <ul style="list-style-type: none"> <li>• <b>NOSE</b> – Arms nose fuze</li> <li>• <b>SAFE</b> – Inhibits arming of fuzes</li> <li>• <b>NOSE/TAIL</b> – Arms both fuzes</li> </ul>  |
| • <b>ELEC FUZE</b>    | <ul style="list-style-type: none"> <li>• <b>SAFE</b> – Inhibits electrical bomb fuzing</li> <li>• <b>VT</b> – Sets air-burst mode at preset burst height for compatible stores</li> <li>• <b>INST</b> – Sets instantaneous burst mode</li> <li>• <b>DLY 1</b> – Sets preset time delay 1</li> <li>• <b>DLY 2</b> – Sets preset time delay 2</li> </ul>          |
| • <b>STA SEL</b>      | <ul style="list-style-type: none"> <li>• <b>Selects Stations for Employment/Jettison</b> <ul style="list-style-type: none"> <li>- Set to <b>SEL</b> to activate a pylon</li> <li>- Stations 1 &amp; 8 should be set to <b>B</b> for selection</li> <li>- Station 1 &amp; 8 <b>SW</b> was used for Sidewinder jettison, is now inoperable</li> </ul> </li> </ul> |
| • <b>TANK JETT</b>    | <ul style="list-style-type: none"> <li>• <b>Allows Drop Tank Jettison</b></li> </ul>  |
| • <b>SEL JETT</b>     | <ul style="list-style-type: none"> <li>• <b>JETT</b> – Selective jettison</li> <li>• <b>SAFE</b> – Inhibits jettison</li> <li>• <b>AUX</b> – Backup mode</li> </ul>   |
| • <b>JETT OPTIONS</b> | <ul style="list-style-type: none"> <li>• <b>MERTER</b> – Jettisons ejector racks</li> <li>• <b>WPNS</b> – Jettisons weapons only</li> </ul>   |

- **ATTK MODE**

- **CCMPTR TGT**

- **Computer Target** – Similar to CCRP

- **CMPTTR IP**

- **Computer initial point**
  - Extended **CMPTTR TGT** mode using known IP
  - For use when target hard to spot visually but close to landmark

- **CMPTTR PLT**

- **Computer Pilot** – similar to CCIP

- **MAN**

- **Manual** – HUD displays pipper
  - Backup mode

- **D/L BOMB**

- **Data-Link Bomb** – Automatic mode steered by D/L cues
  - **Not Implemented in DCS**

### 5.1.2 **SELECTIVE ORNANCE JETTISON**

|                            |  |
|----------------------------|--|
| 1. <b>Pilot Conditions</b> | • <b>MASTER ARM</b> ..... <b>ON</b>  |
| 2. <b>RIO Conditions</b>   | • <b>Desired Stations</b> ..... <b>Selected</b><br>• <b>JETT OPTIONS</b> ..... <b>As Desired</b> |
| 3. <b>Jettison</b>         | (a) <b>SEL JETT Guard</b> ..... <b>Flipped</b><br>(b) <b>SEL JETT Switch</b> ..... <b>JETT</b>   |

## 5.2 **UNGUIDED**

### 5.2.1 **M61 GUN**

|                            |   |
|----------------------------|---|
| 1. <b>Pilot Conditions</b> | • <b>MASTER ARM</b> ..... <b>ON</b><br>• <b>HUD</b> ..... <b>A/G</b><br>• <b>WEAPON SELECTOR</b> ..... <b>GUNS</b><br>• <b>Wing Sweep</b> ..... <b>BOMB</b> |
| 2. <b>Employment</b>       | (a) <b>Dive</b> ..... 20-30 deg<br>(b) <b>Pipper</b> ..... on target<br>(c) <b>TRIGGER</b> ..... <b>FIRE</b>  |
| • <b>Note: TCS</b>         | • TCS slaved to radar impact point<br>• Rio can select <b>NAR</b> or <b>WIDE</b>  |



**5.2.2 FFAR / ZUNI ROCKETS**

|                            |  |
|----------------------------|--|
| 1. <b>RIO Conditions</b>   | <ul style="list-style-type: none"> <li>• <b>WPNTYP</b> ..... <b>LAU-10</b></li> <li>• <b>Attack Mode</b> ..... <b>Pilot Attack</b></li> <li>• <b>Deliver Mode</b> ..... <b>RPL-SGL</b></li> <li>• <b>Mechanical Fuze</b> ..... <b>NOSE</b></li> <li>• <b>Electronic Fuze</b> ..... <b>INST</b></li> <li>• <b>Delivery Options</b> ..... <b>As Desired</b></li> <li>• <b>Stations</b> ..... <b>Armed</b></li> </ul> |
| 2. <b>Pilot Conditions</b> | <ul style="list-style-type: none"> <li>• <b>MASTER ARM</b> ..... <b>ON</b></li> <li>• <b>HUD</b> ..... <b>A/G</b></li> <li>• <b>WEAPON SELECTOR</b> ..... <b>OFF</b></li> <li>• <b>Stations</b> ..... verify selected</li> <li>• <b>Wing Sweep</b> ..... <b>BOMB</b></li> </ul>  |
| 3. <b>Employment</b>       | <ul style="list-style-type: none"> <li>(a) <b>Dive</b> ..... 20-30 deg</li> <li>(b) <b>Pipper</b> ..... on target</li> <li>(c) <b>TRIGGER</b> ..... <b>FIRE</b></li> </ul>   |

**5.2.3 UNGUIDED BOMB - CCIP**

|                            |   |
|----------------------------|---|
| 1. <b>RIO Conditions</b>   | <ul style="list-style-type: none"> <li>• <b>WPNTYP</b> ..... <b>MK-8X</b></li> <li>• <b>Attack Mode</b> ..... <b>Pilot Attack</b></li> <li>• <b>Deliver Mode</b> ..... <b>STP-PRS</b></li> <li>• <b>Mechanical Fuze</b> ..... <b>NOSE</b></li> <li>• <b>Electronic Fuze</b> ..... <b>INST</b></li> <li>• <b>Delivery Options</b> ..... <b>As Desired</b></li> <li>• <b>Stations</b> ..... <b>Armed</b></li> </ul> |
| 2. <b>Pilot Conditions</b> | <ul style="list-style-type: none"> <li>• <b>MASTER ARM</b> ..... <b>ON</b></li> <li>• <b>HUD</b> ..... <b>A/G</b></li> <li>• <b>WEAPON SELECTOR</b> ..... <b>OFF</b></li> <li>• <b>Stations</b> ..... verify selected</li> <li>• <b>Wing Sweep</b> ..... <b>BOMB</b></li> </ul>   |
| 3. <b>Employment</b>       | <ul style="list-style-type: none"> <li>(a) <b>Dive</b> ..... 40 deg</li> <li>(b) <b>Pipper</b> ..... on target</li> <li>(c) <b>STORE RELEASE</b> ..... <b>Press and Hold</b></li> </ul>   |

## 5.2.4 UNGUIDED BOMB - CCRP

|                            |  |
|----------------------------|--|
| 1. <b>RIO Conditions</b>   | <ul style="list-style-type: none"> <li>• WPNTYP ..... MK-8X</li> <li>• Attack Mode ..... Target Attack</li> <li>• Deliver Mode ..... STP-PRS</li> <li>• Mechanical Fuze ..... NOSE</li> <li>• Electronic Fuze ..... INST</li> <li>• Delivery Options ..... As Desired</li> <li>• Stations ..... Armed</li> </ul> |
| 2. <b>Pilot Conditions</b> | <ul style="list-style-type: none"> <li>• MASTER ARM ..... ON</li> <li>• HUD ..... A/G</li> <li>• WEAPON SELECTOR ..... OFF</li> <li>• Stations ..... verify selected</li> <li>• Wing Sweep ..... BOMB</li> </ul>   |
| 3. <b>Designation</b>      | (a) Slew Diamond ..... VSL HI/LO<br>(b) Designate ..... PAL  |
| 4. <b>Employment</b>       | (a) Flight Path ..... Straight, Level<br>(b) Vel Vector ..... on Bomb Fall Line<br><br>When Solution Cue meets Velocity Vector<br><br>(c) STORE RELEASE ..... Press and Hold   |

## 5.3 GUIDED

## 5.3.1 LASER GUIDED BOMB

|                            |   |
|----------------------------|---|
| 1. <b>LANTIRN<br/>PREP</b> | (a) <b>Target Pod Power</b> ..... <b>POD</b> <ul style="list-style-type: none"> <li>• Warm up takes approx. 8 min</li> <li>• Automatically switches to <b>STANDBY</b></li> </ul> (b) <b>Laser Code</b> ..... as desired <ul style="list-style-type: none"> <li>• <b>MUST BE SET ON THE GROUND</b></li> <li>• <b>Default: 1688</b></li> </ul> (c) <b>LANTIRN Mode</b> ..... <b>OPERATE</b> <ul style="list-style-type: none"> <li>• <b>STANDBY</b> caution will flash for 30 s</li> <li>• Then switches to <b>OPER</b></li> </ul> (d) <b>VIDEO Switch</b> ..... <b>FLIR</b><br>(e) <b>TID Mode</b> ..... <b>TV</b> |
| 2. <b>RIO Conditions</b>   | <ul style="list-style-type: none"> <li>• <b>WPNTYP</b> ..... <b>GBU-XX</b></li> <li>• <b>Attack Mode</b> ..... <b>Manual</b></li> <li>• <b>Deliver Mode</b> ..... <b>STP-SGL</b></li> <li>• <b>Mechanical Fuze</b> ..... <b>NOSE</b></li> <li>• <b>Electronic Fuze</b> ..... <b>INST</b></li> <li>• <b>Delivery Options</b> ..... <b>As Desired</b></li> <li>• <b>Stations</b> ..... <b>Armed</b></li> </ul>  |
| 3. <b>Pilot Conditions</b> | <ul style="list-style-type: none"> <li>• <b>MASTER ARM</b> ..... <b>ON</b></li> <li>• <b>HUD</b> ..... <b>A/G</b></li> <li>• <b>WEAPON SELECTOR</b> ..... <b>OFF</b></li> <li>• <b>VDI Mode</b> ..... <b>TV</b></li> <li>• <b>Stations</b> ..... verify selected</li> <li>• <b>Wing Sweep</b> ..... <b>BOMB</b></li> </ul>  |
| 4. <b>Slew LANTIRN</b>     | <b>Refer to LANTIRN Control Section</b> <ul style="list-style-type: none"> <li>• <b>Slave to WYPT</b> ..... <b>Left-4-Way RIGHT</b></li> <li>• <b>QSNO (Snowplow)</b> ..... <b>S4 HAT Down</b></li> <li>• <b>Toggle FOV</b> ..... <b>LANTIRN Toggle FOV</b></li> <li>• <b>Slew</b> ..... <b>LANTIRN Stick</b></li> <li>• <b>Area Track</b> ..... <b>Left-4-Way UP</b></li> <li>• <b>Point Track</b> ..... <b>Left-4-Way Down</b></li> <li>• <b>Undesignate</b> ..... <b>LANTIRN Undesignate</b></li> </ul>  |

|                      |  |
|----------------------|--|
| 4. <b>Designate</b>  | <p>Refer to LANTIRN Designation Section</p> <p>(a) <b>Designate</b> ..... <b>Trigger Full-Action</b></p> <ul style="list-style-type: none"> <li>• Slant Range calculated</li> <li>• Time-to-Go calculated</li> </ul> <p><b>Once Time-to-Release (TREL) is 0</b></p> <p>(b) <b>Auto-Lase</b> ... If selected: lases 10s to impact</p> <p>(c) <b>Manual Lase</b> ..... <b>Trigger Full-Action</b></p> <p>(d) <b>While Lasing</b> ..... <b>L</b> blinks</p> |
| 5. <b>Employment</b> | <p><b>Once Time-to-Release (TREL) is 0</b></p> <p>(a) <b>STORE RELEASE</b> ..... <b>Press and Hold</b></p> <p>(b) <b>Flight Path</b> ..... Gentle right-hand turn<br/>(to prevent masking)</p>   |

5.3.2 **TALD DECOYS**

|                            |  |
|----------------------------|--|
| 1. <b>RIO Conditions</b>   | <ul style="list-style-type: none"> <li>• <b>WPN TYP</b> ..... <b>TALD</b></li> <li>• <b>Deliver Mode</b> ..... <b>STP-SGL</b></li> <li>• <b>Delivery Options</b> ..... <b>As Desired</b></li> <li>• <b>Stations</b> ..... <b>Armed</b></li> </ul>                            |
| 2. <b>Pilot Conditions</b> | <ul style="list-style-type: none"> <li>• <b>MASTER ARM</b> ..... <b>ON</b></li> <li>• <b>HUD</b> ..... <b>A/G</b></li> <li>• <b>WEAPON SELECTOR</b> ..... <b>OFF</b></li> <li>• <b>HSD Mode</b> ..... <b>TID</b></li> <li>• <b>Stations</b> ..... verify selected</li> </ul> |
| 3. <b>Employment</b>       | <p>(a) <b>Flight Path</b> ..... High / Fast</p> <p>(b) <b>RWR</b> ..... Monitor to locate emitters</p> <p>(c) <b>STORE RELEASE</b> ..... <b>Press and Hold</b></p>   |

## Chapter 6

# A/A WEAPONS

### Contents

---

|       |                                     |             |
|-------|-------------------------------------|-------------|
| 6.1   | M61 GUN . . . . .                   | <b>.6-3</b> |
| 6.1.1 | M61 GUN - OVERVIEW . . . . .        | .6-3        |
| 6.1.2 | M61 GUN - MANUAL . . . . .          | .6-3        |
| 6.1.3 | M61 GUN - RTGS / NO RADAR . . . . . | .6-4        |
| 6.1.4 | M61 GUN - RTGS / RADAR . . . . .    | .6-4        |
| 6.2   | AIM-9 SIDEWINDER . . . . .          | <b>.6-5</b> |
| 6.2.1 | AIM-9 - OVERVIEW . . . . .          | .6-5        |
| 6.2.2 | AIM-9 - SILENT . . . . .            | .6-6        |
| 6.2.3 | AIM-9 - RADAR . . . . .             | .6-6        |
| 6.3   | AIM-7 SPARROW . . . . .             | <b>.6-7</b> |
| 6.3.1 | AIM-7 - OVERVIEW . . . . .          | .6-7        |
| 6.3.2 | AIM-7 - STT . . . . .               | .6-8        |
| 6.4   | AIM-54 PHOENIX . . . . .            | <b>.6-9</b> |
| 6.4.1 | AIM-54 - OVERVIEW . . . . .         | .6-9        |
| 6.4.2 | AIM-54 - PD-STT . . . . .           | .6-11       |
| 6.4.3 | AIM-54 - TWS / MULTI . . . . .      | .6-11       |

---



## 6.1 M61 GUN

### 6.1.1 M61 GUN - OVERVIEW

|                           |   |
|---------------------------|---|
| • <b>GUN RATE</b> Button  | • <b>Cycles Gun Rate</b><br>- <b>HIGH</b> - 6000 rpm<br>- <b>LOW</b> - 4000 rpm   |
| • <b>A/A Gun Modes</b>    | • <b>RTGS</b><br>- <b>Real-Time Gunsight Mode</b><br>- Selected automatically with guns<br>- <b>If No WCS Data Available</b> displays bullet location at 2000 ft with diamond and 1000 ft with pipper<br>- <b>If WCS Data Available</b> pipper displays bullet location at targets current range out to 4000 ft<br><br>• <b>MANUAL</b><br>- Fixed manual pipper<br>- Adjust with <b>GUN ELEV</b> knob<br>- Press <b>CAGE/SEAM</b> to select |
| • <b>CAGE/SEAM</b> Button | • <b>Cycles RTGS / MANUAL Gun Modes</b>   |
| • <b>ROUNDS</b> Knob      | • <b>Allows selection of remaining gun rounds</b>   |

### 6.1.2 M61 GUN - MANUAL

|                            |   |
|----------------------------|---|
| 1. <b>Pilot Conditions</b> | • <b>MASTER ARM</b> ..... <b>ON</b><br>• <b>HUD</b> ..... <b>A/A</b><br>• <b>Gun Rate</b> ..... <b>HIGH</b><br>• <b>Gunsight Lead</b> ..... as required<br>• <b>WEAPON SELECTOR</b> ..... <b>GUNS</b> |
| 2. <b>Employment</b>       | (a) <b>Gun Mode</b> ..... <b>MANUAL</b><br>(b) <b>Pipper</b> ..... on target<br>(c) <b>Trigger</b> ..... <b>FIRE</b>  |

**6.1.3 M61 GUN - RTGS / NO RADAR**

|                     |  |
|---------------------|--|
| 1. Pilot Conditions | <ul style="list-style-type: none"><li>• MASTER ARM ..... ON</li><li>• HUD ..... A/A</li><li>• Gun Rate ..... HIGH</li><li>• WEAPON SELECTOR ..... GUNS</li></ul> |
| 2. Employment       | <ul style="list-style-type: none"><li>(a) Gun Mode ..... RTGS</li><li>(b) Pipper ..... on target</li><li>(c) Trigger ..... FIRE</li></ul>                        |

**6.1.4 M61 GUN - RTGS / RADAR**

|                     |   |
|---------------------|---|
| 1. Pilot Conditions | <ul style="list-style-type: none"><li>• MASTER ARM ..... ON</li><li>• HUD ..... A/A</li><li>• Gun Rate ..... HIGH</li><li>• WEAPON SELECTOR ..... GUNS</li></ul>      |
| 2. Employment       | <ul style="list-style-type: none"><li>(a) Gun Mode ..... RTGS</li><li>(b) Radar ..... STT</li><li>(c) Pipper ..... on target</li><li>(d) Trigger ..... FIRE</li></ul> |



## 6.2 AIM-9 SIDEWINDER

### 6.2.1 AIM-9 - OVERVIEW

|  |   |
|--|---|
| <ul style="list-style-type: none"> <li>• <b>Missile Preparation</b></li> </ul> | <ul style="list-style-type: none"> <li>• <b>MSL PREP</b> <ul style="list-style-type: none"> <li>- AIM-9 seeker must be cooled</li> <li>- Either press <b>SW COOL</b> button</li> <li>- Or activation of <b>ACM</b></li> </ul> </li> </ul>   |
| <ul style="list-style-type: none"> <li>• <b>Seeker Head Modes</b></li> </ul>   | <ul style="list-style-type: none"> <li>• <b>SEAM</b> <ul style="list-style-type: none"> <li>- <b>Sidewinder Expanded Acquisition Mode</b></li> <li>- <b>Double-D</b> search pattern invisible to pilot</li> <li>- 4.5 sec search time</li> <li>- <b>Allows AIM-9 to be uncaged and track target</b></li> <li>- 40 deg track limit</li> <li>- <b>Allows WCS to slave AIM-9 to radar track</b></li> </ul> </li> <li>• <b>Boresight</b> <ul style="list-style-type: none"> <li>- AIM-9 locked to ADL</li> <li>- 2.5 deg FOV</li> <li>- Selected if <b>MODE/STP</b> set to <b>BRSIT</b></li> <li>- And <b>ACM</b> not active</li> </ul> </li> </ul> |
| <ul style="list-style-type: none"> <li>• <b>MODE/STP Switch</b></li> </ul>     | <ul style="list-style-type: none"> <li>• <b>NORM</b> <ul style="list-style-type: none"> <li>- Allows <b>SEAM</b> seeker mode</li> </ul> </li> <li>• <b>BRSIT</b> <ul style="list-style-type: none"> <li>- Forces Boresight seeker mode</li> <li>- Overridden if <b>ACM</b> active</li> </ul> </li> </ul>  |
| <ul style="list-style-type: none"> <li>• <b>CAGE/SEAM Button</b></li> </ul>    | <ul style="list-style-type: none"> <li>• <b>Uncages Seeker</b> <ul style="list-style-type: none"> <li>- Starts 4.5 second double-D search</li> <li>- If no IR source found cages again</li> </ul> </li> <li>• <b>Slaves Seeker</b> <ul style="list-style-type: none"> <li>- If radar STT locked</li> </ul> </li> </ul>  |

6.2.2 **AIM-9 - SILENT**

|                     |   |
|---------------------|---|
| 1. Pilot Conditions | <ul style="list-style-type: none"> <li>• MASTER ARM ..... ON</li> <li>• HUD ..... A/A</li> <li>• SW COOL ..... ON</li> <li>• MODE/STP ..... As Desired</li> <li>• WEAPON SELECTOR ..... SW</li> </ul> |
| 2. Employment       | (a) CAGE/SEAM ..... Uncage Seeker<br>(b) IR-Lock ..... Good Tone<br>(c) Trigger ..... FIRE  |


6.2.3 **AIM-9 - RADAR**

|                     |   |
|---------------------|---|
| 1. Pilot Conditions | <ul style="list-style-type: none"> <li>• MASTER ARM ..... ON</li> <li>• HUD ..... A/A</li> <li>• SW COOL ..... ON</li> <li>• MODE/STP ..... NORM</li> <li>• WEAPON SELECTOR ..... SW</li> </ul> |
| 2. Employment       | (a) Radar ..... STT<br>(b) CAGE/SEAM ..... Slave Seeker<br>(c) IR-LOCK ..... Good Tone<br>(d) Steering ..... center T-shaped cue with ASE<br>(e) Trigger ..... FIRE                             |

## 6.3 AIM-7 SPARROW

### 6.3.1 AIM-7 - OVERVIEW

|  |  |
|--|--|
| <ul style="list-style-type: none"> <li>• <b>Missile Preparation</b></li> </ul> | <ul style="list-style-type: none"> <li>• <b>MSL PREP</b> <ul style="list-style-type: none"> <li>- AIM-7 must be tuned to AWG-9</li> <li>- Either press <b>MSL PREP</b> button</li> <li>- Or activation of <b>ACM</b></li> </ul> </li> </ul>  |
| <ul style="list-style-type: none"> <li>• <b>Launch Modes</b></li> </ul>        | <ul style="list-style-type: none"> <li>• <b>Normal</b> <ul style="list-style-type: none"> <li>- Standard operation, STT target designated before launch</li> <li>- AIM-7 uses SARH all the way to target</li> <li>- WCS can use CS or PD for guidance set with <b>MSL OPTIONS</b> Switch</li> </ul> </li> <li>• <b>Boresight</b> <ul style="list-style-type: none"> <li>- Uses CS flood antenna of AWG-9</li> <li>- Missile will <b>track strongest return</b> in Flood area</li> <li>- Automatically activated if STT broken</li> <li>- Selected if <b>MODE/STP</b> set to <b>BRSIT</b></li> <li>- <b>Or if no STT available</b></li> <li>- <b>Shown Below</b></li> </ul> </li> </ul> |
| <ul style="list-style-type: none"> <li>• <b>MSL SPD GATE Switch</b></li> </ul> | <ul style="list-style-type: none"> <li>• <b>NOSE QTR</b> <ul style="list-style-type: none"> <li>- Standard setting in DCS</li> </ul> </li> <li>• <b>All Others</b> <ul style="list-style-type: none"> <li>- Not simulated</li> </ul> </li> </ul>   |
| <ul style="list-style-type: none"> <li>• <b>MSL OPTIONS Switch</b></li> </ul>  | <ul style="list-style-type: none"> <li>• <b>NORM</b> <ul style="list-style-type: none"> <li>- WCS uses dedicated CW antenna for AIM-7 guidance</li> </ul> </li> <li>• <b>SP PD</b> <ul style="list-style-type: none"> <li>- WCS uses PD from main flood antenna for AIM-7F/M guidance</li> </ul> </li> </ul>   |
| <ul style="list-style-type: none"> <li>• <b>MODE/STP Switch</b></li> </ul>     | <ul style="list-style-type: none"> <li>• <b>NORM</b> <ul style="list-style-type: none"> <li>- Sets normal launch mode logic</li> </ul> </li> <li>• <b>BRSIT</b> <ul style="list-style-type: none"> <li>- Forces Boresight launch mode</li> </ul> </li> </ul>   |

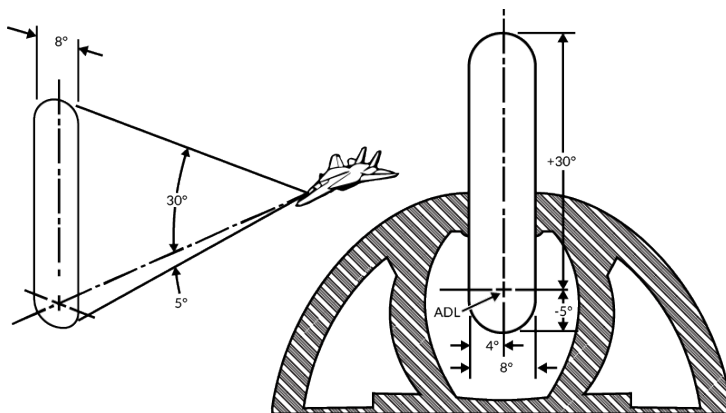

### 6.3.2 AIM-7 - STT

|                     |   |
|---------------------|---|
| 1. Pilot Conditions | <ul style="list-style-type: none"> <li>• MASTER ARM ..... ON</li> <li>• HUD ..... A/A</li> <li>• MSL PREP ..... ON</li> <li>• MODE/STP ..... NORM</li> <li>• WEAPON SELECTOR ..... SP</li> </ul>  |
| 2. RIO Conditions   | <ul style="list-style-type: none"> <li>• MSL SPD GATE ..... NOSE QTR</li> <li>• MSL OPTIONS ..... As Desired</li> </ul>   |
| 3. Employment       | <p>(a) Radar ..... STT</p> <p>(b) Steering</p> <ul style="list-style-type: none"> <li>• Target &lt; 20 deg from ADL</li> <li>• ASE center T-shaped cue within</li> </ul> <p>(c) Trigger ..... Press and Hold<br/>(until weapon release)</p> <p>(d) Radar ..... Maintain Lock<br/>(until impact)</p> |

## 6.4 AIM-54 PHOENIX

### 6.4.1 AIM-54 - OVERVIEW

|  |  |
|--|--|
| <ul style="list-style-type: none"> <li>• <b>Missile Preparation</b></li> </ul> | <ul style="list-style-type: none"> <li>• <b>Weapon Cooling</b> <ul style="list-style-type: none"> <li>- AIM-54 requires liquid cooling</li> <li>- RIO enabled <b>LIQUID COOLING</b> switch</li> </ul> </li> <li>• <b>MSL PREP</b> <ul style="list-style-type: none"> <li>- AIM-54 must be tuned to AWG-9</li> <li>- Either press <b>MSL PREP</b> button</li> <li>- Or activation of <b>ACM</b></li> </ul> </li> </ul>  |
| <ul style="list-style-type: none"> <li>• <b>Launch Modes</b></li> </ul>        | <ul style="list-style-type: none"> <li>• <b>PDSTT SARH</b> <ul style="list-style-type: none"> <li>- AIM-54 uses SARH all the way to target</li> <li>- Faster update rate than TWS</li> <li>- <b>Slightly increased effective range</b> as compared to a TWS launch</li> </ul> </li> <li>• <b>TWS SARH/ARH</b> <ul style="list-style-type: none"> <li>- Allows <b>6 AIM-54 launches at 6 targets</b></li> <li>- Missile is initially SARH guided</li> <li>- When within AIM-54 seeker range AWG-9 sends activation command</li> <li>- <b>Not Fire and Forget:</b> Requires automatic activation command</li> </ul> </li> <li>• <b>ACM Active</b> <ul style="list-style-type: none"> <li>- Activated when <b>BRSIT</b> selected</li> <li>- Or when <b>ACM</b> active with no radar track</li> <li>- Missile commanded active <b>before launch</b></li> </ul> </li> </ul> |
| <ul style="list-style-type: none"> <li>• <b>MSL SPD GATE Switch</b></li> </ul> | <ul style="list-style-type: none"> <li>• <b>NOSE QTR</b> <ul style="list-style-type: none"> <li>- Standard setting in DCS</li> </ul> </li> <li>• <b>All Others</b> <ul style="list-style-type: none"> <li>- Not simulated</li> </ul> </li> </ul>   |

|  |   |
|--|---|
| <ul style="list-style-type: none"> <li>• <b>MSL OPTIONS</b><br/><b>Switch</b></li> </ul>         | <ul style="list-style-type: none"> <li>• <b>NORM</b> <ul style="list-style-type: none"> <li>– Normal guidance (SARH or SARH/ARH)</li> </ul> </li> <li>• <b>PH ACT</b> <ul style="list-style-type: none"> <li>– WCS immediately sends AIM-54 activation command on launch</li> <li>– Reverts to SARH if no target detected</li> <li>– <b>Must be selected before launch</b></li> </ul> </li> </ul>   |
| <ul style="list-style-type: none"> <li>• <b>TGTS</b> <b>Switch</b></li> </ul>                    | <ul style="list-style-type: none"> <li>• <b>SMALL</b> – 6nm activation range</li> <li>• <b>NORM</b> – 10nm activation range</li> <li>• <b>LARGE</b> – 13nm activation range</li> </ul>  |
| <ul style="list-style-type: none"> <li>• <b>Missile Next</b><br/><b>Launch Button</b></li> </ul> | <ul style="list-style-type: none"> <li>• <b>Selects Hooked Track as Next Target for AIM-54 TWS Engagement</b></li> </ul>  |
| <ul style="list-style-type: none"> <li>• <b>MODE/STP</b><br/><b>Switch</b></li> </ul>            | <ul style="list-style-type: none"> <li>• <b>NORM</b> <ul style="list-style-type: none"> <li>– Normal operation</li> </ul> </li> <li>• <b>BRSIT</b> <ul style="list-style-type: none"> <li>– Commanded active <b>before launch</b></li> <li>– Missile follows ADL and locks strongest return</li> </ul> </li> </ul>  |
| <ul style="list-style-type: none"> <li>• <b>TWS Symbology</b></li> </ul>                         | <p><b>Refer to TID Symbology Section</b></p> <ul style="list-style-type: none"> <li>• <b>Pre-Launch</b> <ul style="list-style-type: none"> <li>– Prioritization numbers assigned to tracks automatically or manually</li> <li>– Blinking indicates optimal launch parameters</li> </ul> </li> <li>• <b>Post-Launch</b> <ul style="list-style-type: none"> <li>– Target prioritization number replaced with TTI</li> <li>– Other prioritization numbers collapsed by one</li> <li>– Tracks under missile attack brightened</li> <li>– <b>TTI blinks when missile active</b></li> </ul> </li> </ul> |
| <ul style="list-style-type: none"> <li>• <b>Launch To Eject (LTE) Time</b></li> </ul>            | <ul style="list-style-type: none"> <li>• <b>Normal Operation</b> – 3-4 seconds</li> <li>• <b>When in ACM</b> – 1 second</li> </ul>  |

#### 6.4.2 AIM-54 - PD-STT

|                     |   |
|---------------------|---|
| 1. Pilot Conditions | <ul style="list-style-type: none"> <li>• MASTER ARM ..... ON</li> <li>• HUD ..... A/A</li> <li>• MSL PREP ..... ON</li> <li>• MODE/STP ..... NORM</li> <li>• WEAPON SELECTOR ..... PH</li> </ul>  |
| 2. RIO Conditions   | <ul style="list-style-type: none"> <li>• LIQUID COOLING ..... ON (FWD)</li> <li>• MSL SPD GATE ..... NOSE QTR</li> <li>• MSL OPTIONS ..... As Desired</li> <li>• TGTS Switch ..... As Desired</li> </ul>  |
| 3. Employment       | <p>(a) Radar ..... STT</p> <p>(b) Steering</p> <ul style="list-style-type: none"> <li>• Target &lt; 20 deg from ADL</li> <li>• ASE center T-shaped cue within</li> </ul> <p>(c) Trigger ..... Press and Hold<br/>(until weapon release)</p> <p>(d) Radar ..... Maintain Lock<br/>(until impact)</p> |

### 6.4.3 AIM-54 - TWS / MULTI

|                     |   |
|---------------------|---|
| 1. Pilot Conditions | <ul style="list-style-type: none"> <li>• MASTER ARM ..... ON</li> <li>• HUD ..... A/A</li> <li>• MSL PREP ..... ON</li> <li>• MODE/STP ..... NORM</li> <li>• WEAPON SELECTOR ..... PH</li> </ul>  |
| 2. RIO Conditions   | <ul style="list-style-type: none"> <li>• LIQUID COOLING ..... ON (FWD)</li> <li>• MSL SPD GATE ..... NOSE QTR</li> <li>• MSL OPTIONS ..... As Desired</li> <li>• TGTS Switch ..... As Desired</li> <li>• WCS Mode ..... TWS MAN/AUTO</li> </ul>       |
| 4. Employment       | <ul style="list-style-type: none"> <li>(a) Radar ..... TWS</li> <li>(b) Trigger ..... Press and Hold<br/>(until weapon release)</li> <li>(c) Repeat ..... for remaining targets</li> <li>(d) Radar ..... Maintain Track<br/>(until active)</li> </ul> |





