



Input Connectors

Make sure to feed Vin with voltage that the LED strip can handle.
Two connector options for power:
• Phoenix Contact MSTBA
• Barrel Jack 2x6.4mm

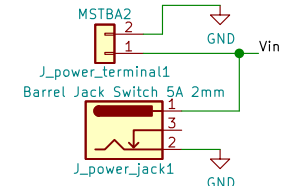


Input Protection

- P-Fet fuse here
 - Polarity protection
 - Add Power LED
 - Test pads
- <https://www.mouser.se/ProductDetail/Infineon-IR/AUIR3315STRL>
<https://www.mouser.se/datasheet/2/196/aur3315-1225292.pdf>



5V Buck


The 5V buck converter will feed the micro controllers with 5V DC.

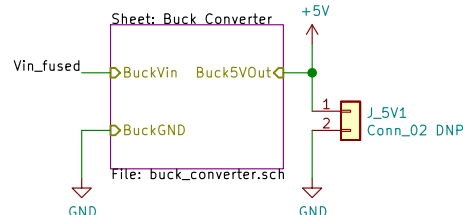

RGBW LED Driver (CV-mode)

LED driver is made for LED strip that have red, green, blue and white channels that have a common positive rail like +12V.


The LED driver can drive 4 output channels in constant voltage mode at 5A each. The channel can drive up to 10A current if an optional IRLML6344 is mounted. One color channel on a 5m LED strip consisting of 300 LED's will draw 6A (20mA x 300px) when fully lit. A full RGB strip 18A, and a RGBW strip 24A.

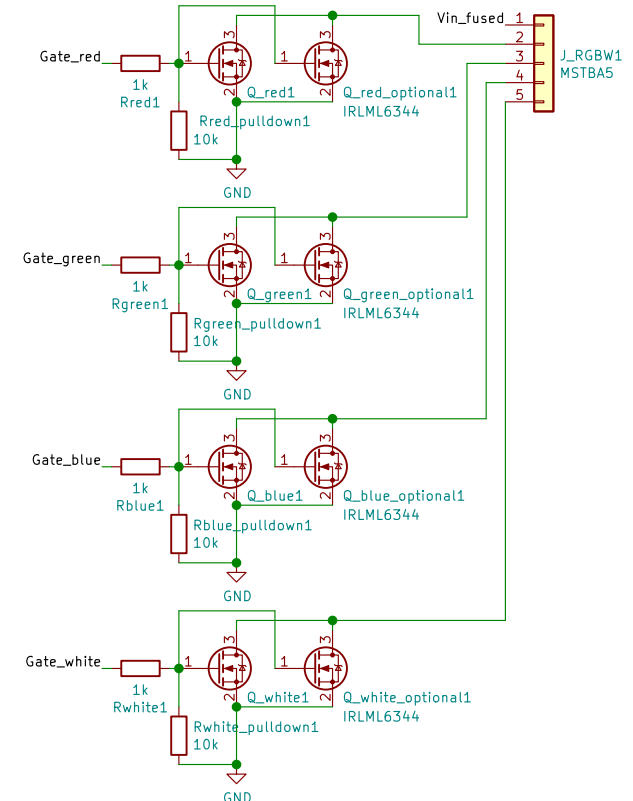

MCU Option Nano

Populate the Arduino Nano for simpler jobs like DMX controlling etc.


- Ports:
- D1 PD0 (TX) DMX_Send
 - D0 PD1 (RX) DMX_Receive
 - D3 PD3 addressable
 - D5 PD5 red
 - D6 PD6 green
 - D9 PB1 blue
 - D10 PB2 white
 - A1 PC1 POT_1
 - A2 PC2 POT_2
 - D7 PD7 SwCode1
 - D8 PB0 SwCode2
 - D11 PB3 SwCode4
 - D12 PB4 SwCode8

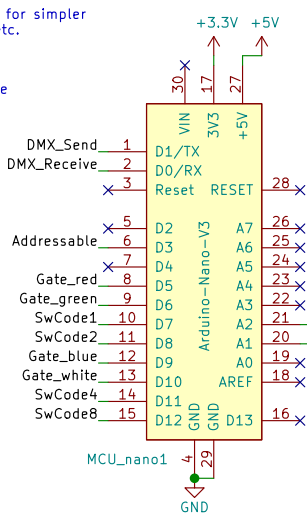

MCU Option ESP32


Populate the ESP32 if you want plenty of power or WiFi capabilities.

- Ports:
- IO21 DMX_Send
 - IO22 DMX_Receive
 - IO19 DMX_Enable_Receive
 - IO23 DMX_Enable_Send
 - IO25 addressable
 - IO26 red
 - IO27 green
 - IO14 blue
 - IO12 white
 - IO34 POT_1
 - IO35 POT_2
 - IO13 SwCode1
 - IO15 SwCode2
 - IO2 SwCode4
 - IO4 SwCode8

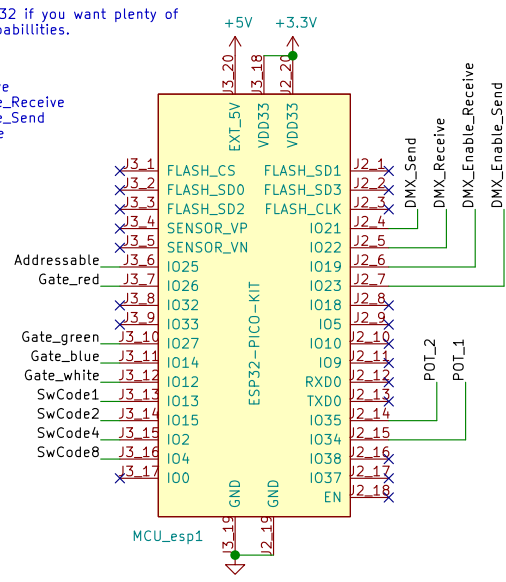


User Interface

2 potentiometers can be utilized to hue and brightness for example. The pot's give out max 3.3V. There is also a 10 position rotary code switch that can be used for modes.

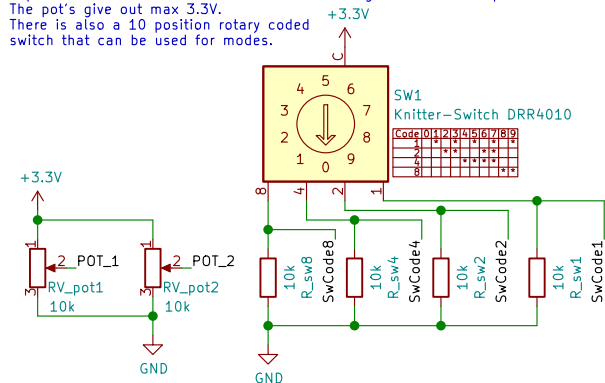


DMX512 Isolated

A RS-485 transceiver can optionally be mounted for sending and receiving DMX512. See sheet DMX512 for configuration.

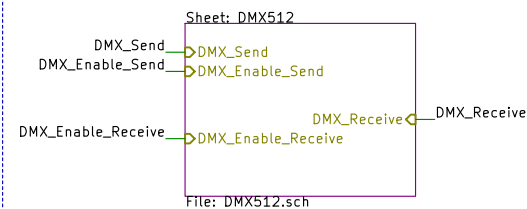

Addressable LED

Make sure to feed Vin with the right voltage for the LED strip. Usually 5V for addressable LED strip.

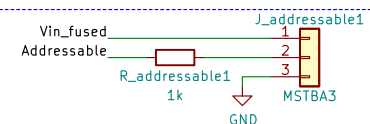

<http://tim.gremalm.se/>
<https://github.com/TimGremalm/LightBoxNano>

a generic PCB for controlling LED's both LED strip and WS2812

Tim Gremalm

Sheet: /

File: LightBoxNano.sch

Title: LightBoxNano - Main


Size: A4

Date:

KiCad E.D.A. kicad (5.1.5)-2

Rev:

Id: 1/3

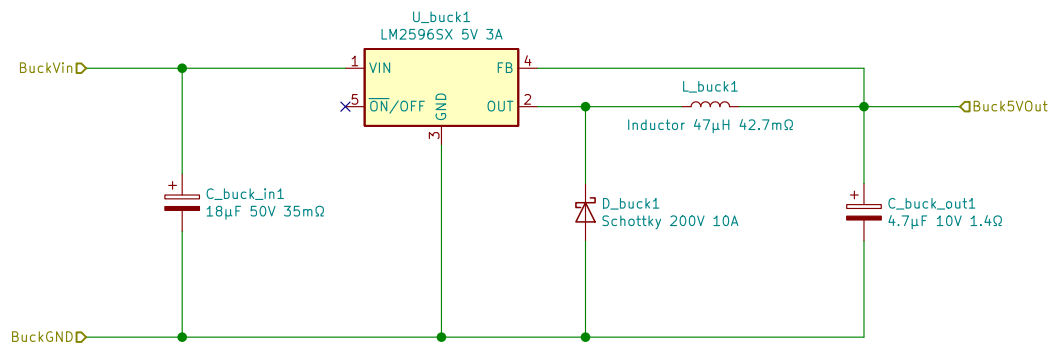

Using TI's LM2596 guide:

Vin: 30V

Vout: 5V

Iout: 3A

Efficiency: 77.1%

Duty Cycle: 19.95%

Frequency: 150kHz

Vout p-p: 945.86mV

<https://webench.ti.com/power-designer/switching-regulator/select>

<https://webench.ti.com/appinfo/webench/scripts/SDP.cgi?ID=572687AF787DDED1>

<http://tim.gremalm.se/>

<https://github.com/TimGremalm/LightBoxNano>

a generic PCB for controlling LED's both LED strip and WS2812

Tim Gremalm

Sheet: /Buck Converter/

File: buck_converter.sch

Title: LightBoxNano – Buck Converter

Size: A4


Date:

KiCad E.D.A. kicad (5.1.5)–2

Rev:

Id: 2/3


MCU Interface

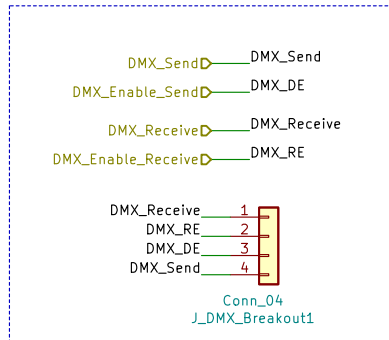

RS-485 Transceiver

For sending and receiving DMX512 a Analog Devices ADM2687E is used which isolates the RS-485 bus from the low voltage micro controller side.

ADM2687E also isolates the power on the bus side by a built in DC to DC converter.

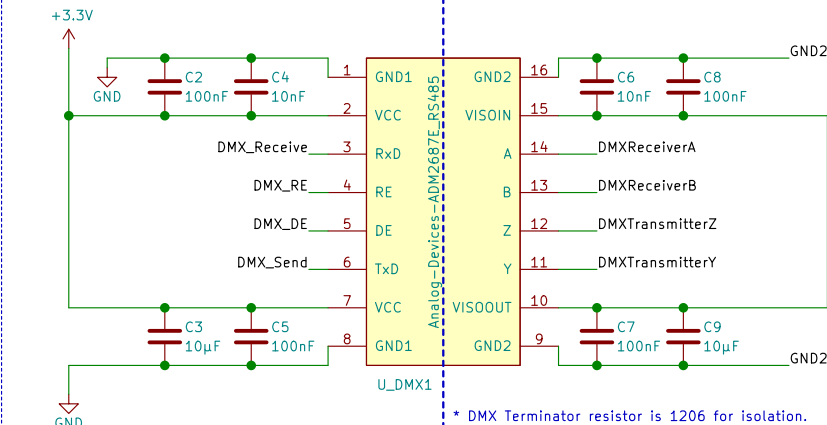


* Place capacitors as close to ADM2687E for noise suppression.
* Avoid sharp corners around the isolation barrier and ground plane.
See Analog's application notes for further tips:
<https://www.analog.com/media/en/technical-documentation/application-notes/AN-0971.pdf>

* DMX Terminator resistor is 1206 for isolation.


DMX Connectors

Neutrik female (NC3FAAH2) and male (NC3MAAH) 3 pin XLR connector is used for DMX512.

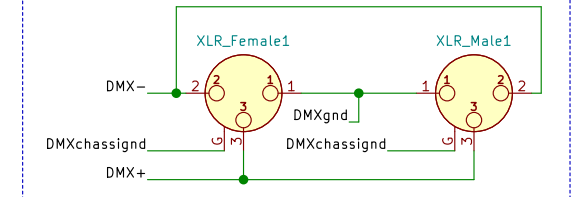


Terminator

A RS-485 bus is terminated by a 120 ohm resistor. This can be mounted here if needed.

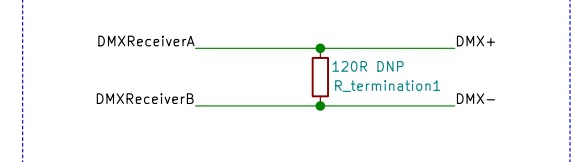


Link Tx to Rx (Optional)

For enabling sending on the DMX bus, these two jumper links must be soldered.

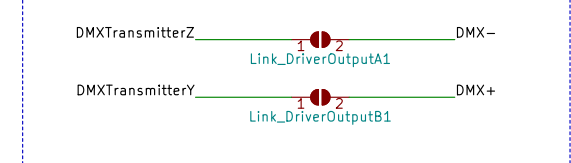

Link Ground (Optional)


Options for linking ground and shield of XLR connectors with RS-485 side of the transceiver.

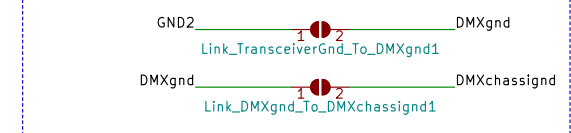

Configure Transceiver (Rx & Tx)

To receive data on the DMX bus; RE (Receiver Enable) must be pulled low, or high for disable.
For sending data; Tx to Rx link must be enabled, and DE (Driver Enable) must be pulled high, or low to disable.

RE and DE can be controlled from the MCU, or hard coded via these jumper links.

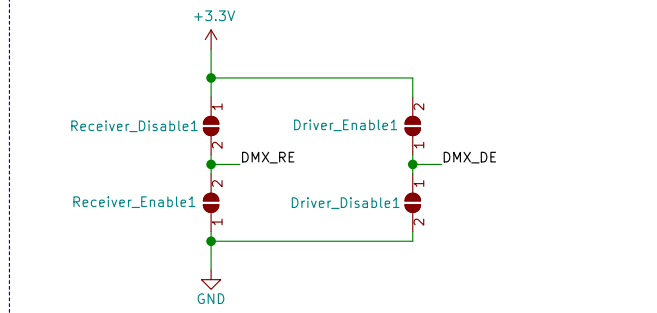

<http://tim.gremalm.se/>
<https://github.com/TimGremalm/LightBoxNano>

a generic PCB for controlling LED's both LED strip and WS2812

Tim Gremalm

Sheet: /DMX512/

File: DMX512.sch

Title: LightBoxNano - DMX512

Size: A4

Date:

KiCad E.D.A. kicad (5.1.5)-2

Rev:

Id: 3/3