



BlueRiver platform

Icron Extreme USB Programming Procedure User Guide

Revision History

Version	Date	Revision
2.1	April 5, 2018	Updated BlueRiver Manager (Demo Client) details to release 3.5 functionality.
2.0	March 5, 2018	Document converted to Semtech format and rewritten matching new document standards.
1.1	June 20, 2017	Updated to include changes since first release.
1.0	August 10, 2015	Initial release of document.

Contents

1	PURPOSE	3
2	OVERVIEW	3
2.1	SOFTWARE TO DOWNLOAD AND INSTALL.....	4
2.2	EQUIPMENT NEEDED	4
3	ICRON ASIC PROGRAMMING.....	5
3.1	VERIFICATION OF PYTHON AND PYSERIAL INSTALLATION	5
3.2	UPDATING OR INITIALIZING ICRON FIRMWARE	5
3.3	PROGRAMMING ICRON CONFIGURATION FILE (.BIN).....	7

Table of figures

Figure 1: Icron and BlueRiver communication setup	3
Figure 2: Example of the Icron ExpressLink software interface	6
Figure 3: Example of the BlueRiver Manager (DEMO Client) interface – Enable program of Icron Chip	6
Figure 4 BlueRiver Manager (Demo Client) USB Routing tab.....	8

Table of tables

Table 1: Required software to manage Icron ExtremeUSB module	4
--	---

1 Purpose

Routing of USB 2.0 data between BlueRiver transmitter devices (TX) and BlueRiver receiver (RX) devices is done using ExtremeUSB over LAN chip technology from Icron Technologies.

Icron ExtremeUSB eliminates the USB's 5-meter distance limitation, enabling applications where the host computer or USB device is required to be located away from the end user.

The purpose of this document is to outline the procedure required to program and modify default settings for the optional ICRON module that is can be connected to a BlueRiver device.

Note: Programming Icron is done using the Icron ExpressLink software; however, the BlueRiver Manager (Demo Client) is also required to configure the BlueRiver chipset to allow Icron programming.

2 Overview

Icron programming is completed using Icron's ExpressLink software.

- The current version of this software will contain the latest firmware to be uploaded.
- The update is completed over the BlueRiver chipset RS-232 interface.

Note: There is no RS-232 interface directly connected to the Icron module on the BlueRiver chipset. It is therefore necessary to perform the programming through the BlueRiver chipset.

The figure below represents the communication flow from the computer that is hosting the Icron and BlueRiver configuration software to the BlueRiver device itself:

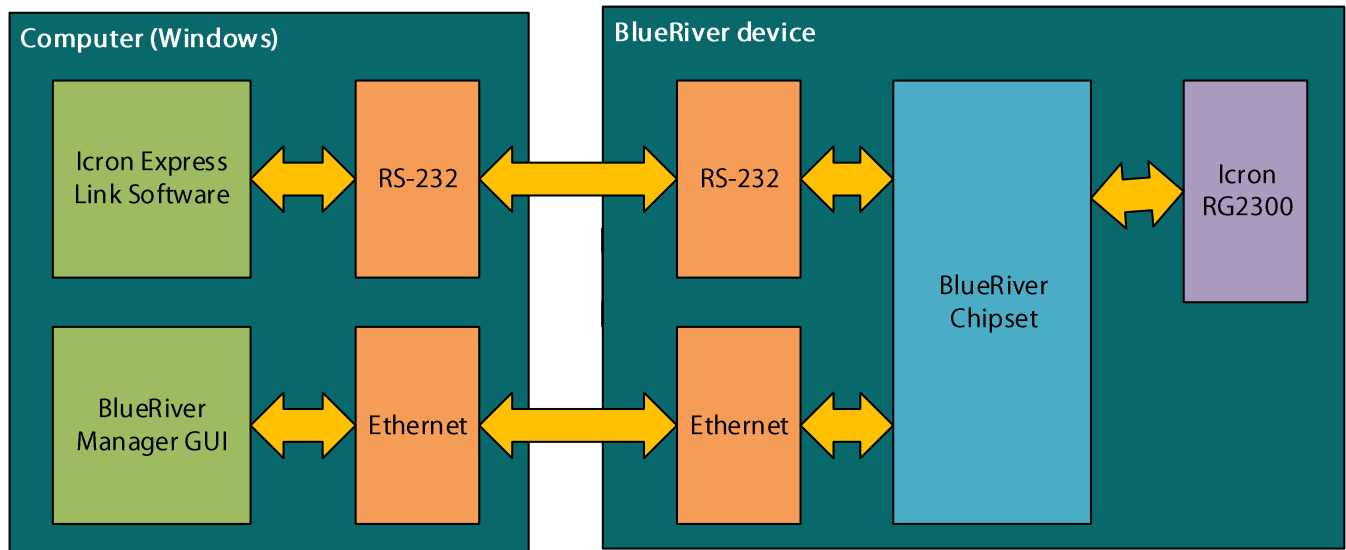


Figure 1: Icron and BlueRiver communication setup

When a BlueRiver Hardware Evaluation kit is sent out from Semtech AptoVision Products Group, the default settings for the Icron module are:

- BlueRiver transmitters (TX) set as Local Extenders (LEX)
- BlueRiver receivers (RX) set as Remote Extenders (REX)
- One-to-One pairing
- Mass Storage Acceleration
- Supports ISO devices, such as web cams
- Network Acquisition mode -> DHCP

If it is planned to enable any of the following Icron advanced features, contact Icron to obtain documentation on the HEX addresses for each of these settings:

- Simultaneous users (1 LEX to 4 REX) - act like a virtual hub
- Change configuration via Icron API commands
- Define IP Address (Must disable DHCP)
- Define Subnet Mask
- Define Gateway
- Define DHCP Server IP

If you are a manufacturer and planning to design the Icron functionality from scratch, contact Icron to obtain the supporting documentation and the necessary firmware, as well as a bin file for the LEX and REX units. The bin file will contain the necessary Icron configuration file. It is possible that you may need to make arrangements, such as signing a non-disclosure with Icron to access this information.

Once these files are obtained, following the instructions provided in this document to flash the Icron firmware and write the bin file to your units.

2.1 Software to Download and Install

The table below outlines the software that is required to program or modify the Icron ExtremeUSB module.

Table 1: Required software to manage Icron ExtremeUSB module

PDF	Usage
Python 3.x	https://www.python.org/
PySerial 3.x	https://pypi.python.org/pypi/pyserial
BlueRiver Manager NT BlueRiver Manager (Demo Client)	Contact Semtech AptoVision Products Group BlueRiver support team for a copy of the BlueRiver Manager (DEMO Client). Note: Next release functionality of BlueRiver Manager NT will be provided directly in the BlueRiver Manager (Demo Client).
ge_eeprom.py	Contact Icron. Note: This is python script needed to write the new configuration file into Icron.
Latest Express link software	Contact Icron. Note: This software will contain the latest Icron Firmware.

2.2 Equipment needed

- Computer running Windows 7 or higher,
- RS-232 cable
- ExpressLink software
- BlueRiver NT2000 device with ICRON RG2300 device installed
- BlueRiver NT2000 power cable
- Ethernet Cable
- BlueRiver NT1000 device could replace the BlueRiver NT2000 if the NT1000 design was modified to include the USBExtreme IC.

3 Icron ASIC Programming

3.1 Verification of Python and PySerial installation

Once `Python` and `PySerial` are downloaded and installed, the next step is to verify that the applications can successfully work together.

To complete this task, perform the following:

1. Open a command prompt window and change to the directory where the `Python` is installed.

`Python` is normally installed in the following location:

```
C:\Users\<YOURNAME>\AppData\Local\Programs\Python\Python35-32
```

2. In Command prompt, type the following:

```
py -m serial.tools.list_ports
```

3. A list of the available Com ports will be provided:

4. Next type the following command to access the desired ports, where the Com port specified is one that was listed as available:

```
py -m serial.tools.miniterm COM3
```

If there are no errors returned, then `Python` and `PySerial` are correctly installed.

5. Proceed to access and program the Icron ASIC.

3.2 Updating or Initializing Icron Firmware

Next proceed to initialize or update the programming of the Icron module.

Note: The BlueRiver Manager (Demo Client) and the Icron ExpressLink software must be installed on the host computer prior to beginning this procedure.

1. Connect the 1G network port of the host computer to 1G network port of the BlueRiver device.
2. Connect a Serial Port cable between the computer hosting the BlueRiver Manager (Demo Client) and Icron ExtremeUSB software to the BlueRiver device RS-232 connector.
3. Confirm the following:
 - a. Confirm that there is an ICRON RG2300 device installed on BlueRiver board. This verification can be done by either:
 - i. Inspecting the physical board.
 - ii. Using aBlueRiver API `get` command to retrieve details of the board configuration. Refer to the BlueRiver API Developers Guide (ug-0003) for details on BlueRiver API commands.
 - b. If not currently active, power up the BlueRiver device.
 - c. Verify that the BlueRiver device is connected to the computer using an RS-232 cable.
4. Launch the Icron ExpressLink software.

Note: Once launched ExpressLink is waiting for an Icron device, keep application open until this section is completed.



Figure 2: Example of the Icron ExpressLink software interface

5. Select the appropriate COM port from the drop down list.
6. Then click on the Connect button.
7. Launch the BlueRiver Manager (Demo Client) in Production mode.
 - a. Open a command prompt and change to the directory where the BlueRiver Manager executable (blueriver_manager.exe) file is located.

Example: C:\Program Files (x86)\Semtech\

- b. Then launch the BlueRiver Manager (Demo Client) in Production Mode.

a. This is done by adding -a to the executable, so type at the command prompt:

`blueriver_manager.exe -a`

Tip: If the BlueRiver Manager (Demo Client) is to be used frequently in production mode it is possible to create a desktop shortcut to launch it in this mode.

8. The BlueRiver Manager (Demo Client) graphical user interface will load.
9. From a Routing tab, example Video Routing, right click over the BlueRiver device that is to be programmed and from the menu that appears select Enable Program Icron Chip by RS232.

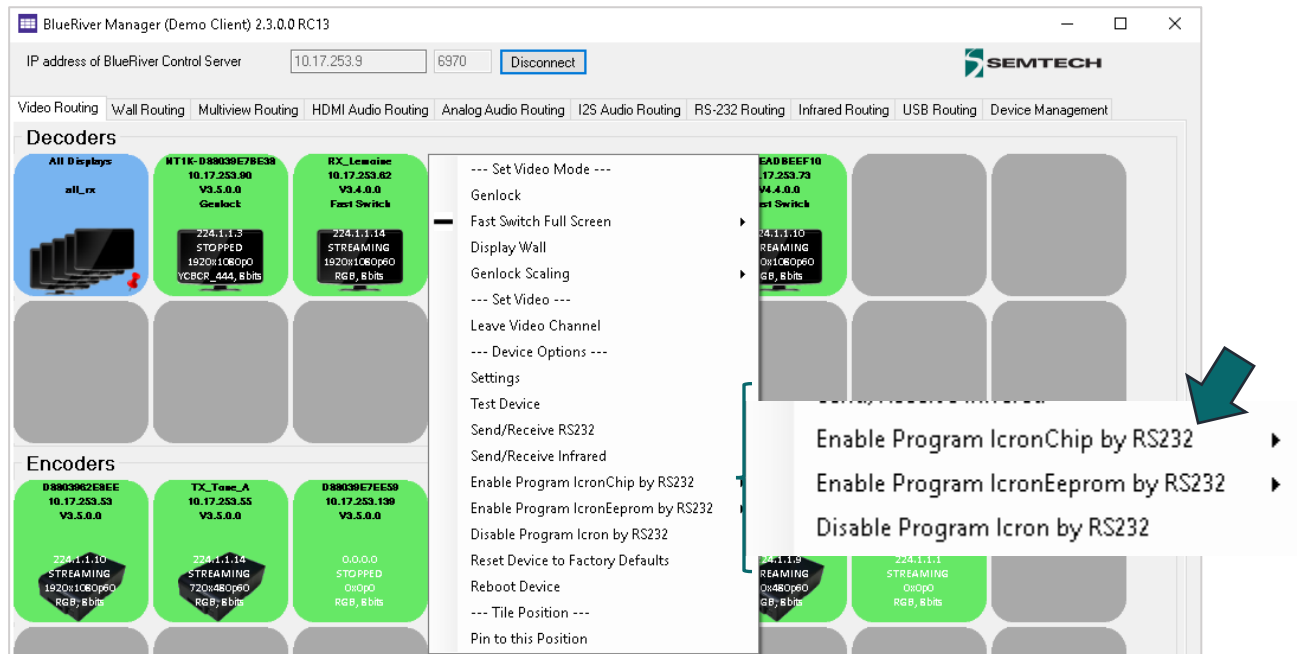


Figure 3: Example of the BlueRiver Manager (DEMO Client) interface – Enable program of Icron Chip

-
10. From within the `Icron ExpressLink` application, click on `Update Software` button.
 11. A progress bar will appear indicating that `ExpressLink` has started the update.
Note: When appropriate `ExpressLink` indicates that the `Icron Firmware` is initializing.
 12. Once the firmware update completes, in the `Icron ExpressLink` application click the `Disconnect` button.
 13. Return to the `BlueRiver Manager (Demo Client)`.
 14. Right click over the `BlueRiver` device that was just programmed and from the menu that appears select `Disable Program Icron Chip by RS232`.
 15. Repeat this procedure for each of the `BlueRiver` devices that requires an update and/or initialization of the `Icron Firmware`.

3.3 Programming Icron Configuration File (.bin)

Important! This procedure is to be used if the `Icron` module did not come preprogrammed with a `MAC Address` or required to modify default configuration settings.

Refer to `Icron` documentation for details on creating a configuration file that is equipped with a unique `MAC Address`.

Confirm that the configuration files, `.bin` and `ge_eeprom.py`, are both located in the same folder.

1. Connect the 1G network port of the host computer to 1G network port of the `BlueRiver` device.
2. Connect a Serial Port cable between the computer hosting the `BlueRiver Manager (Demo Client)` and `Icron ExtremeUSB` software to the `BlueRiver` device RS-232 connector.
3. If not currently running, launch the `BlueRiver Manager (Demo Client)` in the production mode. Refer to step 7 of previous section for details.
4. From a `Routing` tab, example `Video Routing`, right click over the `BlueRiver` device that is to be programmed and from the menu that appears select `Enable Program Icron Eprom RS232`.
5. Open a command prompt window.
6. Change to the directory where the `ge_eeprom.py` is located and run the following command:

```
py ge_eeprom.py COM5 write < test.bin
```


Note: File name, `test.bin`, is an example only. Be sure to use the appropriate name of the `.bin` file created for your installation.
7. The above command triggers the system to write the new `.bin` configuration file into the `Icron` module.
8. Once the configuration has been written return to the `BlueRiver Manager (Demo Client)`.
9. Right click over the `BlueRiver` device that was just programmed and from the menu that appears select `Disable Program Icron Chip by RS232`.
10. To apply the updated `.bin` file, reboot the device you just programmed.
 - a. From the `BlueRiver Manager (Demo Client)`, right mouse click over the device updated.
 - b. From the menu that appears select `Reboot Device`.
 - c. The selected `BlueRiver` device will proceed to reboot. It will briefly go offline and then reappear online.

11. Repeat the above steps for each BlueRiver device that has an associated Icron module requiring modifications to be programmed.

Warning! Remember that the MAC address for each Icron module must be unique. This means that it is required to modify the existing .bin file or create a new .bin file for each Icron module that is to be programmed.

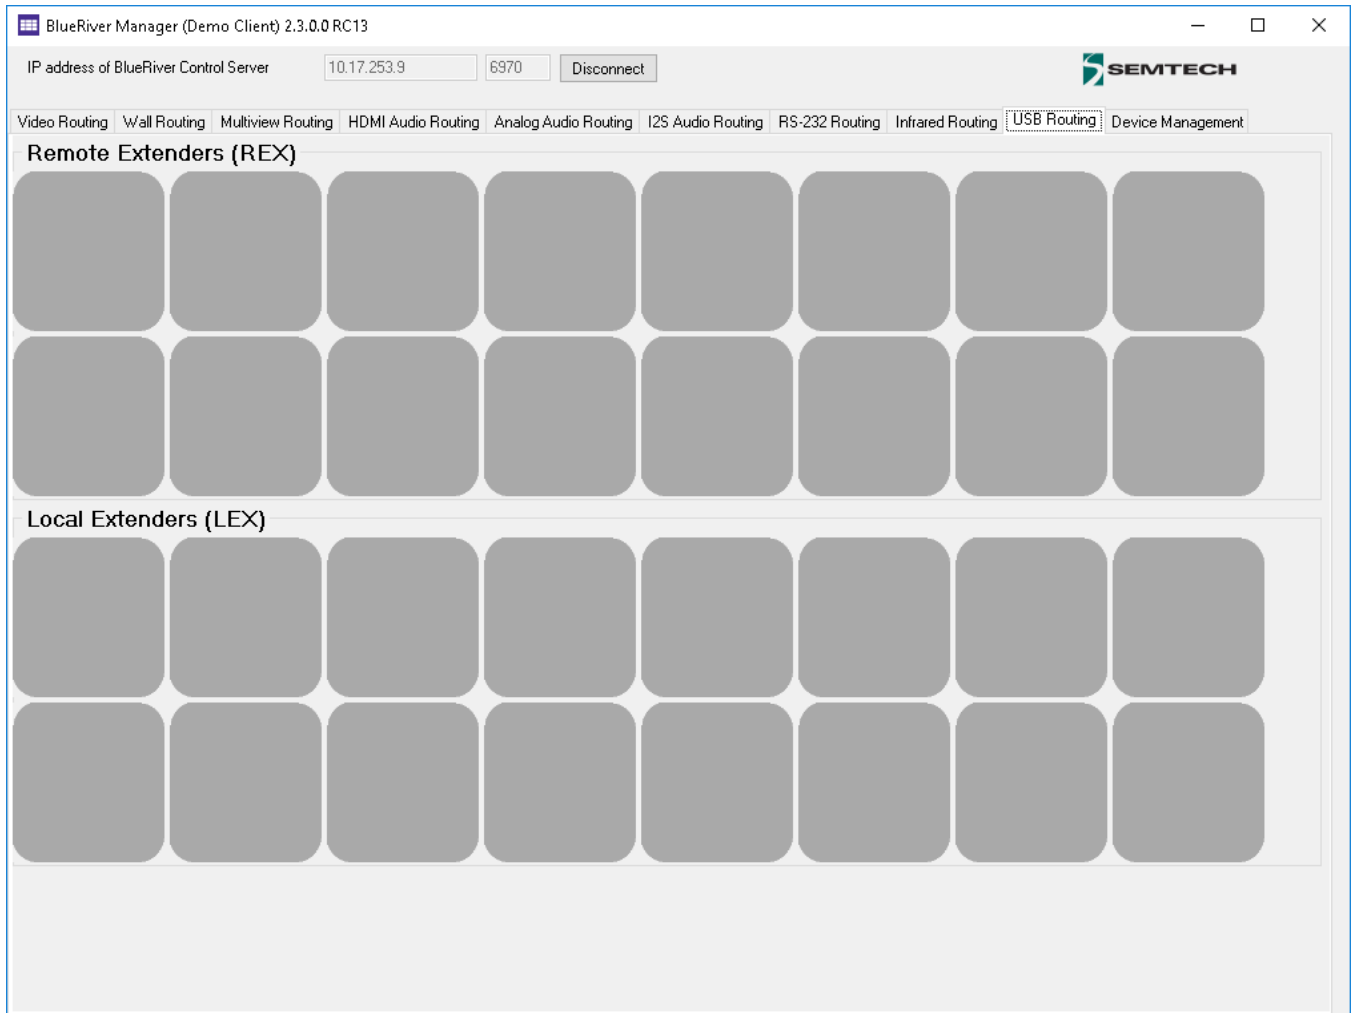


Figure 4 BlueRiver Manager (Demo Client) USB Routing tab



IMPORTANT NOTICE

Information relating to this product and the application or design described herein is believed to be reliable, however such information is provided as a guide only and Semtech assumes no liability for any errors in this document, or for the application or design described herein. Semtech reserves the right to make changes to the product or this document at any time without notice. Buyers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. Semtech warrants performance of its products to the specifications applicable at the time of sale, and all sales are made in accordance with Semtech's standard terms and conditions of sale.

SEMTECH PRODUCTS ARE NOT DESIGNED, INTENDED, AUTHORIZED OR WARRANTED TO BE SUITABLE FOR USE IN LIFE-SUPPORT APPLICATIONS, DEVICES OR SYSTEMS, OR IN NUCLEAR APPLICATIONS IN WHICH THE FAILURE COULD BE REASONABLY EXPECTED TO RESULT IN PERSONAL INJURY, LOSS OF LIFE OR SEVERE PROPERTY OR ENVIRONMENTAL DAMAGE. INCLUSION OF SEMTECH PRODUCTS IN SUCH APPLICATIONS IS UNDERSTOOD TO BE UNDERTAKEN SOLELY AT THE CUSTOMER'S OWN RISK. Should a customer purchase or use Semtech products for any such unauthorized application, the customer shall indemnify and hold Semtech and its officers, employees, subsidiaries, affiliates, and distributors harmless against all claims, costs damages and attorney fees which could arise.

The Semtech name and logo are registered trademarks of the Semtech Corporation. All other trademarks and trade names mentioned may be marks and names of Semtech or their respective companies. Semtech reserves the right to make changes to, or discontinue any products described in this document without further notice. Semtech makes no warranty, representation or guarantee, express or implied, regarding the suitability of its products for any particular purpose. All rights reserved.

© Semtech 2018

Contact Information:

Semtech Quebec Inc.
2344 Alfred Nobel Blvd. Suite 102, St. Laurent, QC, Canada H4S 0A4
Tel: 514-446-2400 • www.semtech.com