



Octane LLRP

Version 6.0.0

Copyright © 2012 - 2019 Impinj, Inc. All rights reserved

<http://www.impinj.com>

Impinj, Octane, Speedway, xSpan and xArray are either registered trademarks or trademarks of Impinj, Inc. Visit www.impinj.com/trademarks for additional information about Impinj trademarks.

Contents

1	Introduction	9
1.1	Purpose	9
1.2	Scope	9
1.3	References	9
1.4	Terms	10
1.5	Overview	11
1.6	Document Conventions	11
2	Octane LLRP Connections	13
3	Octane LLRP Capabilities	14
3.1	Octane LLRP Usage Notes	17
3.1.1	Octane Future Extensions	17
3.1.2	LLRP Response Timeout	18
3.1.3	LLRP Message Size	18
3.1.4	C1G2RFCControl Parameter	18
3.1.5	Per-Antenna Configuration	20
3.1.6	LLRP Data Persistence	20
3.1.7	LLRP Receive Sensitivity	21
3.1.8	LLRP GPO Control	22
3.1.9	LLRP AntennaEvent Parameter	22
3.1.10	LLRP Trigger Details	22
3.1.11	LLRP C1G2Read Parameter	23
3.1.12	LLRP C1G2Write Parameter	23
3.1.13	LLRP C1G2BlockWrite Parameter	23
3.1.14	LLRP Non-Specific Tag Errors	23
3.1.15	LLRP Buffered Events and Reports	24
3.1.16	LLRP TagTransitTime Field	24

3.1.17	LLRP ROResultSpec Parameter	25
3.1.18	LLRP Keepalive Messages	25
3.1.19	LLRP Transmit Power	25
3.1.20	C1G2 Version 1.2.0 Support	26
3.1.21	xArray/xSpan Capabilities	26
4	Octane LLRP Configuration	32
4.1	Standard Messages	38
4.1.1	xArray/xSpan Messages	38
4.2	Custom Messages	39
4.2.1	IMPINJ_ENABLE_EXTENSIONS Message	39
4.2.2	IMPINJ_ENABLE_EXTENSIONS_RESPONSE Message	40
4.2.3	IMPINJ_SAVE_SETTINGS Message	41
4.2.4	IMPINJ_SAVE_SETTINGS_RESPONSE Message	42
4.3	Custom Parameters	42
4.3.1	ImpinjRequestedData Parameter	42
4.3.2	ImpinjSubRegulatoryRegion Parameter	44
4.3.3	ImpinjInventorySearchMode Parameter	47
4.3.4	ImpinjFixedFrequencyList Parameter	49
4.3.5	ImpinjFrequencyCapabilities Parameter	52
4.3.6	ImpinjReducedPowerFrequencyList Parameter	53
4.3.7	ImpinjLowDutyCycle Parameter	55
4.3.8	ImpinjDetailedVersion Parameter	58
4.3.9	ImpinjGPIDebounceConfiguration Parameter	61
4.3.10	ImpinjAdvancedGPOConfiguration Parameter	62
4.3.11	ImpinjReaderTemperature Parameter	63
4.3.12	ImpinjLinkMonitorConfiguration Parameter	64
4.3.13	ImpinjReportBufferConfiguration Parameter	65
4.3.14	ImpinjAccessSpecConfiguration Parameter	66
4.3.15	ImpinjBlockWriteWordCount Parameter	67

4.3.16	ImpinjOpSpecRetryCount Parameter	67
4.3.17	ImpinjBlockPermalock Parameter	68
4.3.18	ImpinjBlockPermalockOpSpecResult Parameter	69
4.3.19	ImpinjGetBlockPermalockStatus Parameter	70
4.3.20	ImpinjGetBlockPermalockStatusOpSpecResult Parameter	71
4.3.21	ImpinjSetQTConfig Parameter	72
4.3.22	ImpinjSetQTConfigOpSpecResult Parameter	73
4.3.23	ImpinjGetQTConfig Parameter	74
4.3.24	ImpinjGetQTConfigOpSpecResult Parameter	75
4.3.25	ImpinjMarginRead Parameter	76
4.3.26	ImpinjMarginReadOpSpecResult Parameter	77
4.3.27	ImpinjTagReportContentSelector Parameter	78
4.3.28	ImpinjEnableSerializedTID Parameter	79
4.3.29	ImpinjEnableRFPhaseAngle Parameter	80
4.3.30	ImpinjEnablePeakRSSI Parameter	81
4.3.31	ImpinjEnableGPSCoordinates Parameter	82
4.3.32	ImpinjEnableOptimizedRead Parameter	83
4.3.33	ImpinjEnableRFDopplerFrequency Parameter	84
4.3.34	ImpinjSerializedTID Parameter	85
4.3.35	ImpinjTIDParity Parameter	85
4.3.36	ImpinjRFPhaseAngle Parameter	86
4.3.37	ImpinjPeakRSSI Parameter	87
4.3.38	ImpinjGPSCoordinates Parameter	87
4.3.39	ImpinjRFDopplerFrequency Parameter	88
4.3.40	ImpinjLoopSpec Parameter	89
4.3.41	ImpinjGPSNMEASentences Parameter	90
4.3.42	ImpinjGGASentence Parameter	91
4.3.43	ImpinjRMCSentence Parameter	91
4.3.44	ImpinjIntelligentAntennaManagement Parameter	92

4.3.45	ImpinjHubConfiguration	93
4.3.46	ImpinjInventoryConfiguration Parameter	94
4.3.47	ImpinjRFPowerSweep Parameter	95
4.3.48	xArray/xSpan Parameters	96
4.4	Operation	108
4.4.1	xArray/xSpan	108
5	Advanced Topics	115
5.1	Speedway Serialized TID Reporting and Monza4 Tags	115
5.2	xArray/xSpan Polarization Control	115
6	Custom Extension Encoding	117
6.1	Custom Messages	117
6.1.1	IMPINJ_ENABLE_EXTENSIONS	117
6.1.2	IMPINJ_ENABLE_EXTENSIONS_RESPONSE	118
6.1.3	IMPINJ_SAVE_SETTINGS	118
6.1.4	IMPINJ_SAVE_SETTINGS_RESPONSE	118
6.2	Custom Parameters	119
6.2.1	ImpinjRequestedData Parameter	119
6.2.2	ImpinjSubRegulatoryRegion Parameter	119
6.2.3	ImpinjInventorySearchMode Parameter	120
6.2.4	ImpinjFixedFrequencyList Parameter	120
6.2.5	ImpinjFrequencyCapabilities Parameter	121
6.2.6	ImpinjReducedPowerFrequencyList Parameter	121
6.2.7	ImpinjLowDutyCycle Parameter	122
6.2.8	ImpinjDetailedVersion Parameter	122
6.2.9	ImpinjHubVersions Parameter	123
6.2.10	ImpinjArrayVersion Parameter	123
6.2.11	ImpinjBLEVersion Parameter	124
6.2.12	ImpinjGPIDebounceConfiguration Parameter	124

6.2.13	ImpinjAdvancedGPOConfiguration Parameter	124
6.2.14	ImpinjReaderTemperature Parameter	125
6.2.15	ImpinjLinkMonitorConfiguration Parameter	125
6.2.16	ImpinjReportBufferConfiguration Parameter	125
6.2.17	ImpinjAccessSpecConfiguration Parameter	126
6.2.18	ImpinjBlockWriteWordCount Parameter	126
6.2.19	ImpinjOpSpecRetryCount Parameter	126
6.2.20	ImpinjBlockPermalock Parameter	127
6.2.21	ImpinjBlockPermalockOpSpecResult Parameter	127
6.2.22	ImpinjGetBlockPermalockStatus Parameter	128
6.2.23	ImpinjGetBlockPermalockStatusOpSpecResult Parameter	128
6.2.24	ImpinjSetQTConfig Parameter	129
6.2.25	ImpinjSetQTConfigOpSpecResult Parameter	129
6.2.26	ImpinjGetQTConfig Parameter	130
6.2.27	ImpinjGetQTConfigOpSpecResult Parameter	130
6.2.28	ImpinjMarginRead Parameter	131
6.2.29	ImpinjMarginReadOpSpecResult Parameter	131
6.2.30	ImpinjTagReportContentSelector Parameter	132
6.2.31	ImpinjEnableSerializedTID Parameter	132
6.2.32	ImpinjEnableRFPhaseAngle Parameter	132
6.2.33	ImpinjEnablePeakRSSI Parameter	133
6.2.34	ImpinjEnableGPSCoordinates Parameter	133
6.2.35	ImpinjEnableOptimizedRead Parameter	133
6.2.36	ImpinjEnableRFDopplerFrequency Parameter	134
6.2.37	ImpinjSerializedTID Parameter	134
6.2.38	ImpinjTIDParity Parameter	134
6.2.39	ImpinjRFPhaseAngle Parameter	135
6.2.40	ImpinjPeakRSSI Parameter	135
6.2.41	ImpinjGPSCoordinates Parameter	136

6.2.42	ImpinjRFDopplerFrequency Parameter	136
6.2.43	ImpinjLoopSpec Parameter	136
6.2.44	ImpinjGPSNMEASentences Parameter	137
6.2.45	ImpinjGGASentence Parameter	137
6.2.46	ImpinjRMCSentence Parameter	137
6.2.47	ImpinjIntelligentAntennaManagement Parameter	138
6.2.48	ImpinjAntennaConfiguration Parameter	138
6.2.49	ImpinjAntennaEventConfiguration Parameter	139
6.2.50	ImpinjInventoryConfiguration Parameter	139
6.2.51	ImpinjRFPowerSweep Parameter	140
6.3	xArray/xSpan Parameters	140
6.3.1	ImpinjArrayVersion Parameter	140
6.3.2	ImpinjxArrayCapabilities Parameter	141
6.3.3	ImpinjAntennaCapabilities Parameter	141
6.3.4	ImpinjAntennaPolarizationCapability Parameter	141
6.3.5	ImpinjTiltConfiguration Parameter	142
6.3.6	ImpinjBeaconConfiguration Parameter	142
6.3.7	ImpinjAntennaEventHysteresis Parameter	143
6.3.8	ImpinjPlacementConfiguration Parameter	143
6.3.9	ImpinjPolarizationControl Parameter	143
6.3.10	ImpinjLISpec	144
6.3.11	ImpinjLocationConfig Parameter	144
6.3.12	ImpinjDisabledAntennas Parameter	144
6.3.13	ImpinjC1G2LocationConfig	145
6.3.14	ImpinjTransmitPower Parameter	145
6.3.15	ImpinjLocationReporting Parameter	145
6.3.16	ImpinjLocationConfidence Parameter	146
6.3.17	ImpinjLocationReportData Parameter	146
6.3.18	ImpinjExtendedTagInformation Parameter	147

6.3.19	ImpinjDISpec Parameter	147
6.3.20	ImpinjDirectionSectors Parameter	148
6.3.21	ImpinjDirectionConfig Parameter	148
6.3.22	ImpinjC1G2DirectionConfig Parameter	148
6.3.23	ImpinjDirectionReporting Parameter	149
6.3.24	ImpinjDirectionReportData Parameter	149
6.3.25	ImpinjDirectionDiagnosticData Parameter	149
7	Octane LLRP Toolkit Information	150
8	Octane LLRP Default Values	151
9	Regulatory Region Information	154
9.1	Table 9.1 Regional Transmit Power Capabilities (dBm)	154
9.2	Table 9.2 Regional Frequency Capabilities	156
10	Revision History	169
11	Notices	170

1 Introduction

1.1 Purpose

This document describes the Low Level Reader Protocol (LLRP) capabilities of the Impinj Octane 6.0.0 software release for Impinj Speedway Readers and xArray and xSpan Gateways, including Octane LLRP custom extensions.

1.2 Scope

This document defines Impinj Octane 6.0.0 LLRP. It provides a summary for system architects so they can validate and understand the standard LLRP features supported by Impinj Octane 6.0.0 LLRP, as well as the unique Impinj Octane LLRP custom extensions, which provide added capabilities. It provides detailed information to developers who are planning to support Impinj Readers and xArray and xSpan Gateways through LLRP. Beginning with release 4.8 of this document, references to Impinj Speedway Reader have been deleted; the information in this document is now only valid for Impinj Speedway Readers and Impinj xArray and xSpan Gateways.

1.3 References

Table 1.1 References

Document	Version
EPCglobal Low Level Reader Protocol (LLRP)	1.0.1
EPCglobal UHF Class1 Gen2 Standard (C1G2)	1.2.0
Speedway Installation and Operations Guide	6.0.0
LLRP Toolkit Impinj Custom Extension Definition	10.20

- EPCglobal Low Level Reader Protocol (LLRP):

http://www.gs1.org/sites/default/files/docs/epc/llrp_1_0_1-standard-20070813.pdf

- EPCglobal UHF Class1 Gen2 Standard (C1G2):

http://www.gs1.org/sites/default/files/docs/epc/uhfc1g2_1_2_0-standard-20080511.pdf

1.4 Terms

AccessSpec Access Specification is a data element passed to the Reader to describe a set of operations to perform on a tag. It includes a filter set that describes the tag population to which this rule applies. In addition, it includes a list of read, write, lock, and kill commands to execute on each tag that matches the filter.

AISpec Antenna Inventory Specification list is contained in a ROSpec (see below), and executes in order. Each AISpec contains radio frequency (RF) parameters, inventory parameters, and duration.

AntennaConfiguration Each AISpec can contain one or more AntennaConfiguration parameters. These describe the RF parameters (power, frequency, receive sensitivity) and Gen2 settings (mode, filters, session) to use during an AISpec execution.

EPCglobal EPCglobal is an organization that leads the development of industry-driven standards for the Electronic Product Code (EPC) to support the use of RFID.

FOV Field-of-view is the Reader-observable world and the angular extent that is visible at a given moment. This typically relates to antenna type, number, and position.

LISpec Location Inventory Specification list is contained in a ROSpec. By adding a new LISpec to the ROSpec, the xArray Gateway will report the location of tags in the field of view.

DISpec Direction Inventory Specification list is contained in a ROSpec. By adding a new DISpec to the ROSpec, the xArray or xSpan Gateway will report the direction events (e.g. entries and exits) of tags in the field of view.

LLRP The EPCglobal Low Level Reader Protocol (LLRP) is the industry standard.

Location Role An inventory in which the xArray Gateway actively detects tag location.

Direction Role An inventory in which the xArray or xSpan Gateway actively reports tag direction as they pass through the field of view.

LTK The llrp-toolkit is an open source LLRP library development project.

RO Reader Operations is the group chartered within EPCglobal to define LLRP.

ROSpec Reader Operation Specification is a data element passed to the Reader to describe a bounded (start and end), triggered, and inventory operation.

Wide Area Monitoring (WAM) The role in which the xArray or xSpan Gateway, operating as a 52 or 13 antenna reader, detects tags similar to Speedway Readers.

1.5 Overview

In April 2007, EPCglobal ratified the Low Level Reader Protocol (LLRP) standard, a specification for the network interface between the Reader and its controlling software or hardware. The UHF Gen 2 standard provides a standardized tag and reader radio frequency (RF) air interface protocol.

Other standards have been proposed for the controller-to-reader network interface. Why has Impinj chosen LLRP as part of its Octane software solution? LLRP is modular with respect to air-protocol. LLRP allows basic configuration and operation independent of air protocol, and supports simple configuration of readers without any knowledge of air protocol specifics. In LLRP 1.0, EPCglobal developed a parameter set to control the full functionality of Gen2 readers. For protocol-specific operations, LLRP's Gen2 parameter set provides simple access to Gen2 functionality such as read, write, lock, and kill. It also provides simple methods to select the Gen2 link parameters.

Previous standardization approaches did not go far enough to accommodate the needs of both reader and application software providers, needs that included the ability to better leverage the competitive advantages of their respective products. By creating this new LLRP standard, the advocating group led by Impinj and other RFID vendors made a rich set of vendor extension points available. These extensions provide Reader vendors with the flexibility to innovate and differentiate their products within the standardized network framework. These innovations will drive future developments of the standard.

This document is divided into sections, described below.

- Section 2 describes how to configure and establish LLRP connections with Octane.
- Section 3 describes the standard LLRP capabilities of Octane 6.0.0 as supported on Impinj hardware platforms.
- Section 4 specifies the Octane LLRP custom extensions available on Speedway Reader and xArray and xSpan Gateways.
- Section 5 discusses advanced tag topics.
- Section 6 contains tables that define how each extension is encoded and decoded into LLRP messages and parameters.

1.6 Document Conventions

In this document, the term **Reader** is used to refer to the Speedway Reader and the xArray and xSpan Gateways. If the section refers to only one of these devices, the device name is used.

Throughout this document, references are made to both standard and extended LLRP messages, parameters, and fields. To help visually distinguish between these different types, Table 1.2 provides details on the conventions that are used.

Table 1.2 Document Style Conventions

Type	Example	Style
LLRP message	IMPINJ_ENABLE_EXTENSIONSCAPS_UNDESCORES	
LLRP parameter	<i>AntennaConfiguration</i>	Italics Camel Case
LLRP field	<i>ResetToFactoryDefault</i>	Italics Camel Case
Enumerated field value	'Upon N Tags or End of AISpec'	'Single-Quoted String'
File name	'ImpinjDef.xml'	'Single-quoted bold'
LTK function	<i>getLLRPStatus</i>	Bold italics case matches programming syntax
LTK class names	CIMPINJ_TCS_RESPONSE	Bold case matches programming syntax

2 Octane LLRP Connections

Octane LLRP allows both Reader- and Client-initiated connections. By default, the Reader listens for LLRP connections on the IANA-assigned TCP port 5084. Users can modify the LLRP listening port through Octane RShell or web interface. Users can enable Octane LLRP to make outgoing connections to a configurable server and port number. The address, port, and retry timers can be configured via the Octane RShell or web interface. See the *RShell Reference Manual* for more information about changing the LLRP connection configuration.

Octane LLRP accepts the first incoming connection on this port, and rejects subsequent connections as long as the first connection is active. If a connection request is received, the Reader will check the health of any existing connection. If the client TCP connection does not respond within 3.5 seconds, the Reader will automatically close the dead connection and will accept the new connection. When reconnecting after a network outage, it may take up to 3.5 seconds to accept a connection.

3 Octane LLRP Capabilities

Table 3.1 displays the capabilities supported by the Octane LLRP implementation, as defined by the LLRP standard. This table is organized by LLRP feature and Reader model. Not all Reader models support each Octane feature. Where relevant, the Reader reports these capabilities via the LLRP GET_READER_CAPABILITIES_RESPONSE message.

Table 3.1 Octane LLRP Capabilities for Firmware Version 6.0.0.X.240

LLRP FEATURE	R120	R120 + An- tenna Hub	R220	R420	R420 + An- tenna Hub	R660	R680	Informational Notes
Model Name	2001009	2001009	2001001	2001002	2001002	2001008	2001007	
GPI	4	0	4	4	0	0	0	These 4 GPI (referenced in LLRP as GPI 1-4). See the “GPIO Details” section in the <i>Speedway Installation and Operations Guide</i> .
GPO	4	0	4	4	0	0	0	These 4 GPO (referenced in LLRP as GPO 1-4). See the “GPIO Details” section in the <i>Speedway Installation and Operations Guide</i> .
Antenna	1	8	2	4	32	13	52	The antennas correspond to antenna ports 1-n, depending on the product capabilities.

LLRP FEATURE	R120	R120 + An- tenna Hub	R220	R420	R420 + An- tenna Hub	R660	R680	Informational Notes
UTC (real-world) Clock	✓	✓	✓	✓	✓	✓	✓	
Air Protocol Support	1	1	1	1	1	1	1	UHF Class 1 Generation 2 (C1G2)
Number of ROSpecs	1	1	1	1	1	1	1	
ROSpec Priority Support	1	1	1	1	1	1	1	Priority must always be set to 0.
RFSurvey Support	—	—	—	—	—	—	—	
Number of AISpecs per ROSpec	16	16	16	16	16	16	16	
Number of InventoryParameterSpecs per AISpec	1	1	1	1	1	1	1	
State-Aware Singulation Support	—	—	—	—	—	—	—	See section 4.3.3 for alternate control of singulation strategies.
Number of Inventory Filters	2	2	2	2	2	2	2	See Section 3.1.6.
Truncate Flag Support	—	—	—	—	—	—	—	Truncate flag must always be set to 0 (unspecified).
Number of AccessSpecs	1508	1508	1508	1508	1508	1508	1508	
Number of OpSpecs per AccessSpec	8	8	8	8	8	—	—	

LLRP FEATURE	R120	R120 + An- tenna Hub	R220	R420	R420 + An- tenna Hub	R660	R680	Informational Notes
ClientRequestOpSpecSupport			–	–	–	–	–	
Number of Gen2 Modes	Varies	Varies	Varies	Varies	Varies	Varies	Varies	Number depends on product, model, and regulatory region. Use LLRP capabilities to discover available modes. See section 3.1.4 for setting the Gen2 mode.
Buffer Overflow Warning Support	✓	✓	✓	✓	✓	✓	✓	
Buffered Report Support	✓	✓	✓	✓	✓	✓	✓	See section 3.1.15 for usage details.
AirProtocolInventory CommandSettings per AntennaConfiguration		1	1	1	1	1	1	
BlockWrite Support	✓	✓	✓	✓	✓	✓	✓	
BlockErase Support	–	–	–	–	–	–	–	

LLRP FEATURE	R120	R120 + An- tenna Hub	R220	R420	R420 + An- tenna Hub	R660	R680	Informational Notes
Disconnected Operation Support	✓	✓	✓	✓	✓	✓	✓	Reader will continue to execute ROSpecs and AccessSpecs when disconnected. To stop disconnected operation, disable or delete all ROSpecs and AccessSpecs before disconnecting. See section 3.1.15 for details on how events and reports are handled in this mode of operation.
Set Anten- naProper- ties Support	—	—	—	—	—	—	—	
TLS Encrypted Connection Support	—	—	—	—	—	—	—	Only TCP connections are supported.
Web Interface	✓	✓	✓	✓	✓	✓	✓	

3.1 Octane LLRP Usage Notes

3.1.1 Octane Future Extensions

To be compatible with future versions of Octane extensions, your application must ignore all custom parameters with subtypes that it cannot understand when received at any valid LLRP

or Octane extension point. In addition, it should treat any out of range enumerations as error conditions.

3.1.2 LLRP Response Timeout

Most commands will complete within milliseconds (nominally \ll 1 second). However, the following exceptions should be noted.

- GET_READER_CONFIG_RESPONSE with the AntennaProperties parameter can take up to 10 seconds while the Reader checks the status and connectivity of its antennas.
- IMPINJ_SAVE_SETTINGS_RESPONSE can take up to 2 seconds while the Reader commits the configuration settings to persistent storage.

3.1.3 LLRP Message Size

Messages longer than 10 Kbytes (Speedway) or 64 Kbytes (Speedway or xArray/xSpan Gateways) received by the Reader will cause a READER_EVENT_NOTIFICATION message containing a *ConnectionCloseEvent* parameter to be sent, followed by a close of the LLRP connection. The Reader transmit buffer is limited to 512 Kbytes. This corresponds to roughly 2000 TagReportData parameters per RO_ACCESS_REPORT. Client implementations should configure the ROResponseSpec properly to avoid excessively large individual reports.

3.1.4 C1G2RFControl Parameter

Speedway Gen2 modes are selected by Impinj system engineering to provide the best performance. No Tari adjustment is necessary. Tari values passed by the client will be ignored. Octane supports automatic control and optimization of Gen2 Mode settings (Autoset) for the Reader operating environment. In previous versions of Octane software, there were separate Autoset Dense Interrogator and Single Interrogator modes. Starting with Octane 4.8, the Reader now provides Autoset modes that optimize over both environments. In addition, Octane supports several pre-configured Gen2 modes.

- A *C1G2RFControl ModeIndex* of 1000 (Autoset) configures the Reader to choose the best Gen2 link parameters for environments where the tags might be transient and we do not wish to overcommit in our search for the weakest tag.
- A *C1G2RFControl ModeIndex* of 1002 (Autoset Static) configures the Reader to choose the best Gen2 link parameters for the environments where the tags population is relatively static and we wish to attempt to search for the weakest tag.

- A *C1G2RFControl ModeIndex* of 1003 (Autoset Static Fast) is an adaptation of Autoset Static for good RF environments
- A *C1G2RFControl ModeIndex* of 1004 (Autoset Static DRM) is an adaptation of Autoset Static for difficult RF environments
- A *C1G2RFControl ModeIndex* of 1005 (Autoset Custom) is reserved for future use
- Link parameters reported for Autoset modes in the *C1G2UHFRFModeTableEntry* should be ignored.

Table 3.2 documents the official names of the Gen2 modes supported by xArray, xSpan and Speedway. Modes vary depending on the model and regulatory region.

Table 3.2 Official Octane Gen2 Mode Names

ModeIdentifier	Official Name
0	Max Throughput Not supported on R120 or R220
1	Hybrid Mode (High throughput (M=2)) Not supported on R120 or R220
2	Dense Reader (M=4)
3	Dense Reader (M=8)
4	Max Miller (High throughput (M=4)) Not supported by regions that support mode 5. ETSI, China, India, Japan, Korea, and South Africa. Not supported on R120 or R220
5	Dense Reader 2 (M=4) Faster forward link than mode 2 Only available with regions: ETSI, China, India, Japan, Korea, and South Africa.
1000	AutoSet
1002	AutoSet Static (default mode)
1003	AutoSet Static Fast Not supported on R120 or R220
1004	AutoSet Static DRM Not supported on R120 or R220
1005	AutoSet Custom Reserved for future use

3.1.5 Per-Antenna Configuration

LLRP supports per-antenna configuration for many standard parameters. The following parameters must be configured the same for all enabled antennas in a particular AISpec or an error will be returned.

- *C1G2RFControl* parameter
 - *ModeIndex* must be configured the same.
- *RFTransmitter* parameter
 - *HopTableID* must be configured the same.
 - *ChannelIndex* must be configured the same.
- *C1G2Filter* parameter
 - All fields and sub-parameters must be configured the same.

All other parameters can be set to unique per-antenna values.

Impinj extension parameters that control antenna settings may also be restricted in a similar manner. For details about custom parameter requirements, see the individual section that documents the extension.

3.1.6 LLRP Data Persistence

LLRP configuration data, including data that is set by SET_READER_CONFIG, ADD_ROSPEC, and ADD_ACCESSSPEC messages, are persistent across LLRP connections. However, a reboot of the device will reset these parameters to their default values. See section 4.2.3 for details about saving the configuration. For information about default values for configuration data, see section 8.


3.1.7 LLRP Receive Sensitivity

All Speedway Readers and Gateways support a Receive Sensitivity range of -80 dBm to -30 dBm. The RSSI sensitivity levels are referenced to an absolute sensitivity of -80 dBm.

In order to set a receive sensitivity level of -47 dBm, the user must identify the `ReceiveSensitivityTableEntry` parameter within the `GeneralDeviceCapabilities` such that:

$$-80 \text{ dBm} + \text{ReceiveSensitivityValue} = -47 \text{ dBm}$$

In this case, the *ReceiveSensitivityValue* is calculated to be 33, which corresponds to *Index* 25 in the Octane 6.0.0 LLRP capabilities. To complete the example, to set the receive sensitivity level to -47 dBm for an antenna, the *ReceiverSensitivity* field of the `RFRceiver` parameter should be set to 25.

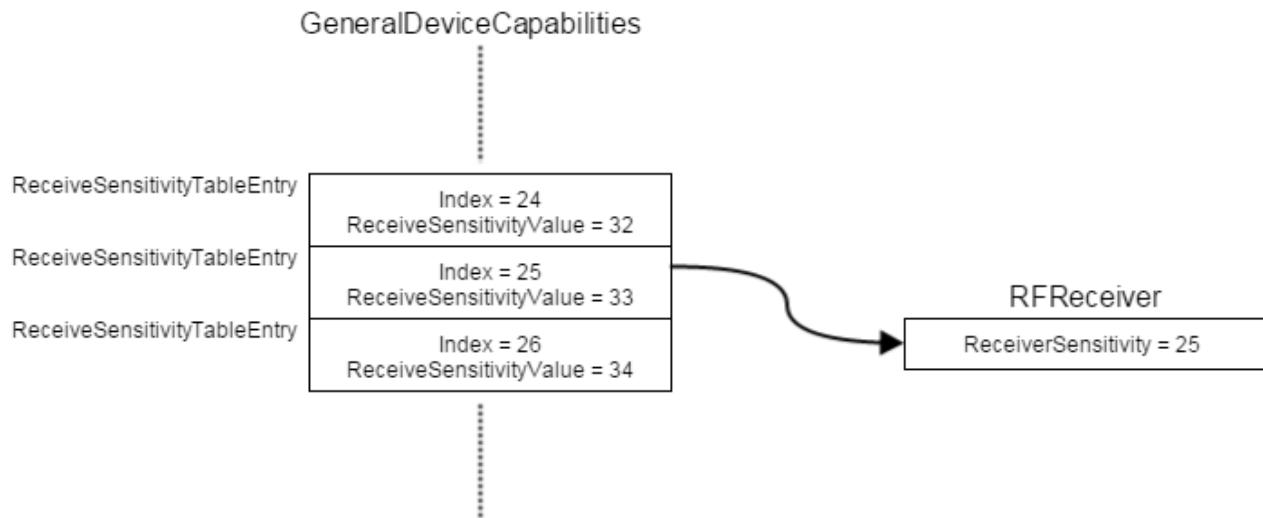

Conversely, given the *ReceiverSensitivity* field from the `RFRceiver` parameter, the effective receive sensitivity level in dBm can be determined as follows:

- Find the `ReceiveSensitivityTableEntry` parameter within `GeneralDeviceCapabilities` whose *Index* equals the value of the *ReceiverSensitivity* field.
- Use the *ReceiveSensitivityValue* from this `ReceiveSensitivityTableEntry` to compute the receive sensitivity level using the equation:

$$\text{Receive Sensitivity (dBm)} = -80 \text{ dBm} + \text{ReceiveSensitivityValue}$$

3.1.8 LLRP GPO Control

When a user disconnects from LLRP, the output state of the port pins remains as it was when connected. If the unit reboots, the GPO will be restored to the last saved GPO configuration. See section 4.2.3 for details about saving the configuration. In the absence of a saved configuration, the GPO will resort to the default configuration, as described in section 8.

3.1.9 LLRP AntennaEvent Parameter

The *AntennaEvent* parameter within a `READER_EVENT_NOTIFICATION` message reports the current connected state of the antenna. The Octane firmware can detect when antennas are connected or disconnected during inventory operation.

The Reader tracks the state of the antennas continuously and will only generate a `READER_EVENT_NOTIFICATION` with the *AntennaEvent* parameter if a change is detected from the last reported status. If an antenna was previously reported to be disconnected, and a new AISpec is started, client implementations should not expect another event to be reported until the antenna is reconnected.

The recommended method for tracking antenna connectivity is to issue a `GET_READER_CONFIG` upon connecting to the Reader. The Reader will report the current connected state of each antenna via the *AntennaProperties* parameter. The client can then monitor the connection for any new `READER_EVENT_NOTIFICATION` messages that contain *AntennaEvent* parameters and update the state as appropriate. This process is done asynchronously with respect to inventory control.

This feature is only available for Speedway Readers which have external antenna ports. Since the antenna detection algorithm relies on reflected power from an antenna port to determine the connected state of an antenna, antenna events are most reliable when operating at or near maximum transmit power and will become less reliable as transmit power is lowered.

With a SpeedwayR Antenna Hub connected to the Reader and the feature enabled in RShell, connected and disconnected events for the antenna are disabled by default. Enable the events with the *ReaderEventNotificationSpec* parameter in the `SET_READER_CONFIG` message.

3.1.10 LLRP Trigger Details

LLRP allows multiple types of start, stop, and report triggers. For some trigger types, additional information is required in the form of optional parameters. The LLRP specification is clear that these parameters must be present for a given trigger type. However, it does not clearly state what happens if one of these parameters appears when the trigger type does not require its presence. Octane LLRP assumes that these parameters can be present if, and only if, the trigger type requires them. As an example, if the *GPITriggerValue* parameter is present within the `ROSpecStartTrigger` of an `ROSpec` when the *ROSpecStartTriggerType* is set to 'Periodic', Octane returns an error.

3.1.11 LLRP C1G2Read Parameter

LLRP allows Gen2 Read command(s) to be set up using OpSpec(s) with *C1G2Read* parameter(s). The number of words to be read is specified by the *WordCount* field in the *C1G2Read* parameter. The Octane releases covered by this document support a maximum *WordCount* of 60 for the *C1G2Read* parameter.

The Gen2 protocol supports sending a Gen2 Read command with a *WordCount* of 0 (zero) to read the entire memory bank starting with the word indicated by the *WordPointer*. The Octane releases covered by this document do not support this feature and will reject a *C1G2Read* parameter with *WordCount* of 0.

3.1.12 LLRP C1G2Write Parameter

LLRP allows Gen2 Write command(s) to be set up using OpSpec(s) with *C1G2Write* parameter(s). The number of words to be written is specified by the *WordCount* field in the *C1G2Write* parameter. The Octane releases covered by this document support a maximum *WordCount* of 32 for the *C1G2Write* parameter.

3.1.13 LLRP C1G2BlockWrite Parameter

LLRP allows Gen2 BlockWrite command(s) to be set up using OpSpec(s) with *C1G2BlockWrite* parameter(s). The number of words to be written is specified by the *WordCount* field in the *C1G2BlockWrite* parameter. The Octane releases covered by this document support a maximum *WordCount* of 32 for the *C1G2BlockWrite* parameter.

3.1.14 LLRP Non-Specific Tag Errors

LLRP access operations (Read, Write, Kill, Lock, BlockWrite and BlockErase) all contain a result type of ‘Non-Specific Tag Error’ within the appropriate *C1G2OpSpecResult* parameter. Because the LLRP specification does not expose all possible C1G2 tag access error codes, the Octane firmware uses this error code as a catchall for the more specific tag errors. Table 3.3 documents the possible errors that might have occurred during tag access if the Octane firmware reports a ‘Non-Specific Tag Error’.

Table 3.3 Octane Non-Specific Tag Error Translation

LLRP Access Operation	Possible Specific Tag Errors
C1G2Read	CRC Error Memory Locked Memory Overrun
C1G2Write	Invalid Password Tag Lost
C1G2Kill	Tag Cannot be Killed Tag Lost
C1G2Lock	Memory Permalocked Memory Overrun Invalid Password Tag Lost
C1G2BlockWrite	Invalid Password Tag Lost
C1G2BlockErase	N/A (not supported)

3.1.15 LLRP Buffered Events and Reports

The default configuration value for *HoldEventsAndReportsUponReconnect* is **false** for the Reader. In this mode, any events or reports generated by the Reader without a client LLRP connection are silently discarded. If a client wants to have the Reader buffer reports generated in the absence of a client connection, it must set *HoldEventsAndReportsUponReconnect* to **true**. The Reader will then internally buffer generated reports until it receives an `ENABLE_EVENTS_AND_REPORTS` message from the client. Upon receiving this message, all buffered reports are delivered. All future events and reports will be delivered as they are generated. Note that, in this mode, reports are buffered but events are always discarded.

3.1.16 LLRP TagTransitTime Field

The *TagTransitTime* field in the *C1G2SingulationControl* parameter is defined by the LLRP Specification as “...the measure of expected tag mobility in the field of view...”. Internally, the Reader uses this value as part of a coarse low duty-cycle control mechanism. This means that unusually large values for this field are ignored, and the value is instead saturated at a maximum which is 10 seconds. The Reader can accept larger values, but they have no impact on the Reader operation.

It should be noted that the use of this field for low duty-cycle control is crude at best. We recommend that the low duty-cycle extension be used for precise control of Reader RF transmissions. For more information, see section 4.3.7.

3.1.17 LLRP ROReportSpec Parameter

The *ROReportSpec* parameter is treated as an autonomous parameter by the Reader. This varies slightly from other parameters, such as *AntennaConfiguration*, which can be decomposed. For example, if an AISpec contains an *AntennaConfiguration* parameter that does not contain an *RFReceiver* parameter, the Reader will consult the default configuration for the *RFReceiver* settings to use for that antenna. On the other hand, if an ROSpec contains a *ROReportSpec* parameter that does not have an *AirProtocolEPCMemorySelector* parameter (within *TagReportContentSelector*), or an *ImpinjTagReportContentSelector* parameter, the Reader assumes that those parameters are turned off for the subject *ROReportSpec*. The Reader does not consult the default configuration for these settings. Therefore, any *ROReportSpec* parameter that appears in a ROSpec is autonomous and complete, and will override all *ROReportSpec* settings in the default configuration.

3.1.18 LLRP Keepalive Messages

LLRP provides a heartbeat mechanism between the Reader, and client applications via *KEEPALIVE* and *KEEPALIVE_ACK* messages. The Reader is configured to initiate *KEEPALIVE* messages via the *KeepaliveSpec* in *SET_READER_CONFIG*. However, the LLRP Specification does not state what action the Reader can take if its *KEEPALIVE* messages are not acknowledged by the client. Some versions of Octane firmware can be configured to either ignore *KEEPALIVE_ACK* messages, or to process these messages and use them to infer the health of a current connection. For more information, see section 4.3.12.

3.1.19 LLRP Transmit Power

LLRP defines transmit power as an offset into the **TransmitPowerLevelTableEntry** table for the Reader, advertised in *UHFBandCapabilities*. Because the capabilities of one product may differ from another, the absolute transmit power in dBm should not be inferred from the value configured in the *TransmitPower* field of *RFTransmitter*. For example, a *TransmitPower* index of 61 is 30 dBm on Speedway, while on Speedway the same 30 dBm absolute power is a *TransmitPower* index of 81. Client applications should always reference the advertised Reader capabilities when determining absolute power values.

3.1.20 C1G2 Version 1.2.0 Support

Octane 6.0.0 is based on LLRP version 1.0.1, which does not support C1G2 version 1.2.0. We anticipate that future versions of LLRP will add support for features that are included in C1G2 1.2.0. However, to provide access to a subset of the C1G2 1.2.0 features while the standard bodies complete their efforts on a new version of LLRP, Octane includes vendor extensions to expose the underlying air protocol features. For more information, refer to the documentation for the individual extensions.

3.1.21 xArray/xSpan Capabilities

Standard Messages

GET_READER_CAPABILITIES_RESPONSE

If an *ImpinjRequestedData Parameter* is provided in a call to GET_READER_CAPABILITIES that specifies a *RequestedData* of *Impinj_xArray_Capabilities* (1003), then an *Impinj_xArrayCapabilities* parameter will be supplied in the GET_READER_CAPABILITIES_RESPONSE. For more information, see Table 3.6.

Standard Parameters

The following standard capabilities are reported on xArray and xSpan:

GeneralDeviceCapabilities

- Maximum number of antennas reported is 52 (xArray) or 13 (xSpan).
- Per Antenna Receive Sensitivity Range is reported for 52 or 13 antennas.
- Air protocol supported per antenna is reported for 52 or 13 antennas.
- NumGPIs is reported as 0.
- Num GPOs is reported as 0.

LLRPCapabilities

CanDoTagInventoryStateAwareSingulation is reported as **False**.

WAM mode only:

- *MaxNumSpecsPerROSpec* is reported as 32.
- *MaxNumAccessSpecs* is reported as 1508.

- Otherwise, $MaxNumSpecsPerROSpec = 1$

Note: Access operations are not recommended on the xArray or xSpan Gateways.

RegulatoryCapabilities

- The maximum TransmitPowerTableEntry reported is +30.0 dBm.

Custom Parameters

ImpinjRequestedData

The existing *ImpinjRequestedData* parameter has been extended to allow for the specification of xArray/xSpan capabilities and configurations.

Use GET_READER_CAPABILITIES to get the following xArray/xSpan capability values.

Value	Description
1003	'Impinj_xArray_Capabilities'
1004	'Impinj_Antenna_Capabilities'

Use GET_READER_CONFIG to get the following xArray/xSpan configuration values (if applicable).

Value	Description
2010	'Impinj_Tilt_Configuration'
2011	'Impinj_Beacon_Configuration'
2012	'Impinj_Antenna_Configuration'
2013	'Impinj_Location_Configuration'
2017	'Impinj_PolarizationControl_Configuration'

For more information about the *ImpinjRequestedData* parameter, see section 4.3.1.

***ImpinjArrayVersion* Parameter**

The existing *ImpinjDetailedVersion* parameter is extended in xArray/xSpan to report a new *ImpinjArrayVersion* parameter as a custom extension.

Description

This parameter provides detailed information about the individual components that comprise the integrated antenna array. The meaning behind each field varies by Reader model.

Table 3.4 ImpinjArrayVersion Field Descriptions

Field	Description
SerialNumber	The serial number of the antenna array hardware.
FirmwareVersion	The firmware version of the antenna array beam forming component.
PCBAVersion	The hardware version of the antenna array PCBA component.

LLRP Dependencies

This custom parameter has no LLRP dependencies.

Allowable Extension Points

- *ImpinjDetailedVersion* parameter

Definition

Definitions for the *ImpinjDetailedVersion* parameter are shown in Table 3.5.

Table 3.5 ImpinjArrayVersion Parameter Definitions

***ImpinjArrayVersion* Parameter**

SerialNumber: UTF-8 String**FirmwareVersion:** UTF-8 String**PCBAVersion:** UTF-8 String**Custom Extension Point List:** List of <custom parameter> [optional]

***ImpinjxArrayCapabilities* Parameter**

This parameter is used to return capabilities information about the array functionality of an xArray or xSpan Gateway. This parameter can be requested by specifying a *RequestedData* value of 1003, *Impinj_xArray_Capabilities*, in an *ImpinjRequestedData* parameter supplied to a call to the GET_READER_CAPABILITIES command.

LLRP Dependencies

None

Allowable Extension Points

- GET_READER_CAPABILITIES_RESPONSE message

Definition

Definitions for the *ImpinjxArrayCapabilities* parameter are shown in Table 3.6.

Table 3.6 ImpinjxArrayCapabilities Parameter

***ImpinjxArrayCapabilities* Parameter**

MaxNumSectors: Unsigned Long Integer. Reserved for future use. Always set to 0.**SupportsLISpecs:** Unsigned 1-bit Integer. If set to 1, Location role operations are supported**SupportsDISpecs:** Unsigned 1-bit Integer. If set to 1, Direction role operations are supported**ImpinjxArrayDirectionCapabilities:** <*ImpinjxArrayDirectionCapabilities*>

***ImpinjArrayDirectionCapabilities* Parameter**

This parameter is used to return capabilities information about the Direction Role functionality of an xArray or xSpan Gateway.

LLRP Dependencies

None

Allowable Extension Points

- *ImpinjArrayCapabilities* parameter

Definition

Definitions for the *ImpinjArrayDirectionCapabilities* parameter are shown in Table 3.7.

Table 3.7 *ImpinjArrayDirectionCapabilities* Parameter

***ImpinjArrayDirectionCapabilities* Parameter**

SystemTagPopulationLimitHighSensitivity: Unsigned Short Integer. The maximum tag population for which the system can reliably perform its Direction Role in High Sensitivity mode. This limit may change across different versions of Octane.

SystemTagPopulationLimitHighPerformance: Unsigned Short Integer. The maximum tag population for which the system can reliably perform its Direction Role in High Performance mode. This limit may change across different versions of Octane.

***ImpinjAntennaCapabilities* Parameter**

This parameter is used to return information about the Polarization Control functionality of the xArray or xSpan Gateway. This parameter can be requested by specifying a *RequestedData* value of 1004, *Impinj_Antenna_Capabilities*, in an *ImpinjRequestedData* parameter supplied to a call to the GET_READER_CAPABILITIES command.

LLRP Dependencies

None

Allowable Extension Points

- GET_READER_CAPABILITIES_RESPONSE message

Definition

Definitions for the *ImpinjAntennaCapabilites* parameter are shown in Tables 3.8 and 3.9.

Table 3.8 ImpinjAntennaCapabilities Parameter

<i>ImpinjAntennaCapabilities</i> Parameter
List of <ImpinjAntennaPolarizationCapability> parameters, one per exposed polarization. (Two for xArray/xSpan)
Custom Extension Point List: List of <custom parameter> [optional]

Table 3.9 ImpinjAntennaPolarizationCapability Parameter

<i>ImpinjAntennaPolarizationCapability</i> Parameter
Type: Unsigned 8-bit integer. Antenna Polarization Type. 0 = Linear Horizontal; 1 = Linear Vertical; 2 = Circular Right; 3 = Circular Left
AntennaIDOffset: Unsigned 16-bit integer. Antenna ID Offset to use for this Polarization Type
Custom Extension Point List: List of <custom parameter> [optional]

4 Octane LLRP Configuration

Octane extends LLRP with custom extensions to provide critical functionality unique to Impinj Reader and xArray and xSpan Gateway products. These features utilize the custom extension mechanism provided by LLRP. Table 4.1 summarizes the Octane LLRP custom extensions and a description of the features usage.

For each Octane LLRP custom extension, the documentation includes a description of the feature, a discussion of LLRP dependencies, the allowable extension points for the extension, and the definition of API elements. The subsections below outline the information provided for each Octane LLRP custom extension and its relevance to the developer or system architect who want to use Octane LLRP:

Description: The description subsection contains specific information about the extension, including what it does and how to use it. The description contains the high-level information required to implement the extension.

LLRP Dependency: The LLRP Dependency subsection describes how the contents of the extension affect other standard LLRP fields and parameters. Many extensions provide additional functionality over what standard LLRP offers. The settings in the standard version of the protocol elements can be modified or overridden entirely by the presence of an extension parameter. Where applicable, the LLRP dependency section clarifies the behavior.

Allowable Extension Points: The allowable extension point subsection describes where the extension is permitted within the LLRP messaging structure. Not all parameters in LLRP allow the presence of custom parameters. The LLRP specification documents the allowable locations of custom extensions.

Octane further restricts each individual custom extension and where they may appear within LLRP messages. Each custom parameter (not applicable for custom messages) lists the LLRP extension points at which the parameter may appear. Octane LLRP custom extension parameters can appear in any order in an LLRP custom extension point.

Definition: The definition subsection of each Octane extension defines the fields and sub-parameters that make up the extension. Field types and definitions for enumerated values are included in this section.

Table 4.1 Octane Custom LLRP Extension Summary

Octane LLRP								
Extension	R120	R220	R420	R640	R660	R680	Sections	Summary Description
Enable Extensions	✓	✓	✓	✓	✓	✓	4.2.1 4.2.2	Required to utilize any of the Octane LLRP custom extensions features.

Octane LLRP Extension	R120	R220	R420	R640	R660	R680	Sections	Summary Description
Detailed Version Information	√	√	√	√	√	√	4.3.8	Provides detailed version information for the subcomponents that make up the Reader.
Sub- Regulatory Region Control and Reporting	√	√	√	√	√	√	4.3.2	Used when regulatory regions offer several distinct modes of operation or when a single Reader offers multiple regulatory regions. The response to this command can take up to 10 seconds, because the Reader must reconfigure itself for the new region.
Inventory Search Mode	√	√	√	√	√	√	4.3.3	Configures the inventory algorithms for optimum performance. This is an alternate method to the <i>StateAwareSingulation</i> parameter in LLRP that requires detailed Gen2 knowledge.
Fixed Frequency List	√	√	√	√	√	√	4.3.4 4.3.5	Allows the client to control and configure automatic frequency selection for regulatory regions with fixed frequency operation.
Reduced Power	—	—	√	√	√	√	4.3.6	Provides Reduced Power operation level configurability on certain channels within the FCC regulatory region.

Octane LLRP Extension	R120	R220	R420	R640	R660	R680	Sections	Summary	Description
Low Duty Cycle	√	√	√	√	*	*	4.3.7		Provides clients the ability to configure a low duty cycle mode to limit interference. The Reader manages the duty cycle based on tag observation statistics. This feature is supported but not recommended for xSpan and xArray Gateways.
Save Settings	√	√	√	√	√	√	4.2.3 4.2.4		Allows the application to save configuration settings in the Reader. The response to this command can take up to 2 seconds, while the Reader commits the configuration to persistent storage.
GPI Debounce	√	√	√	√	—	—	4.3.9		Configures the minimum period between general-purpose input (GPI) transitions reported by the Reader. Debounce allows the Reader to be directly connected to mechanical switches or other “noisy” inputs.
Advanced GPO	√	√	√	√	—	—	4.3.10		Allows for more advanced use of the Reader general-purpose outputs (GPOs). GPOs can be pulsed for a specified duration, or can be tied to a specific Reader operational status.

Octane LLRP Extension	R120	R220	R420	R640	R660	R680	Sections	Summary	Description
Temperature Reporting	✓	✓	✓	✓	✓	✓	4.3.11		Allows for polled reporting of the internal Reader temperature.
Link State Monitoring	✓	✓	✓	✓	✓	✓	4.3.12		Configures the Reader to monitor the state of a LLRP connection using the LLRP KEEPALIVE mechanism.
Report Buffer Behavior	✓	✓	✓	✓	✓	✓	4.3.13		Instructs the Reader on how to buffer reports it sends to client applications. It can be used to decrease latency of tag reports at the expense of both Reader and Client CPU utilization.
Access Spec Configuration	✓	✓	✓	✓	Don't Use	Don't Use	4.3.14		Allows for fine-tuned control over AccessSpec
							4.3.15		execution including the
							4.3.16		number of words sent over the air interface during a BlockWrite operation, and how many times an operation is retried before declaring failure.
C1G2 Block-Permalock	✓	✓	✓	✓	✓	✓	4.3.17		Exposes the C1G2 air
							4.3.18		protocol BlockPermalock
							4.3.19		operation.
							4.3.20		

Octane LLRP Extension	R120	R220	R420	R640	R660	R680	Sections	Summary	Description
QT Technology (TM)	√	√	√	√	√	√	4.3.21 4.3.22 4.3.23 4.3.24	Allows the Reader to access and configure the QT Technology (TM) of the Impinj Monza 4QT tags. For more information about this feature, reference the Monza 4QT datasheet.	
Impinj Margin Read	√	√	√	√	√	√	4.3.25 4.3.26	Exposes the Impinj MarginRead operation for confirming the data integrity on Monza tag chips with Integra.	
Serialized TID	√	√	√	√	√	√	4.3.27 4.3.28 4.3.34 4.3.35	Allows the Reader to report both the EPC and TID as part of normal inventory, without the need for an explicit AccessSpec.	
RF Phase Angle	√	√	√	√	√	√	4.3.27 4.3.29 4.3.36	Reports the RF phase angle of the communication with the tag over the air interface.	
High Resolution RSSI	√	√	√	√	√	√	4.3.27 4.3.30 4.3.37	Reports the peak power of the tag backscatter in a higher resolution than is available via LLRP.	

Octane LLRP Extension	R120	R220	R420	R640	R660	R680	Sections	Summary Description
GPS Location	√	√	√	√	√	√	4.3.27 4.3.31 4.3.38 4.3.41 4.3.42 4.3.43	Allows the Reader to report its GPS location when attached to a supported GPS-capable device. The GPS location can be obtained instantaneously, or included within tag reports.
Optimized Read	√	√	√	√	√	√	4.3.32	Allows for the reporting of additional tag memory content during inventory without the use of AccessSpecs. The reads are optimized by the Reader for enhanced performance.
AISpec Looping	√	√	√	√	√	√	4.3.40	Allows the Reader to execute AISpecs repeatedly.
Intelligent Antenna Mgmt	√	√	√	√	*	*	4.3.44	Allows for the Reader's Intelligent Antenna Management Feature to be disabled. Enabled by default for R120, R220, R420 and R640, this feature ensures that the reader uses an antenna only if tags are detected on it. This feature is supported but not recommended for xSpan and xArray Gateways.
Inventory Configuration	√	√	√	√	√	√	4.3.46	Allows for Impinj specific inventory related behavior to be configured.

Octane LLRP Extension	R120	R220	R420	R640	R660	R680	Sections	Summary	Description
RF Power Sweep	√	√	√	√	√	√	4.3.47	Allows for Impinj specific RF Power Sweep feature to be configured.	

4.1 Standard Messages

The following subsections describe standard messages that are special cases supported in Octane LLRP.

4.1.1 xArray/xSpan Messages

GET_READER_CONFIG

The xArray Gateway supports AntennaID values from 0 to 52 in commands where this parameter is specified. The xSpan Gateway supports AntennaID values from 0 to 13. As with standard LLRP usage, values 1 to N address the N individual antennas (beams), while 0 is used to address all antennas.

The following values for *RequestedData* are **not supported**, and any GET_READER_CONFIG that specifies these values are ignored:

- 9 - GPIPortCurrentState
- 10 - GPOWriteData

The *RequestedData* field of the *ImpinjRequestedData* parameter has been modified to allow requests of configuration information specific to xArray or xSpan. For more information, see section 4.3.1.

GET_READER_CONFIG_RESPONSE

Since the corresponding values for *RequestedData* are not supported, GPOWriteData and GPIPortCurrentState parameters will not be returned in the GET_READER_CONFIG_RESPONSE.

When the Location Role is active (an *ImpinjLISpec* has been added) only Location Role related parameters - *ImpinjPlacementConfiguration*, *ImpinjLocationConfig*, *ImpinjC1G2LocationConfig* and *ImpinjLocationReporting* - will be returned in the GET_READER_CONFIG_RESPONSE. Location role is supported only by xArray at this time. Likewise, when the Direction Role is active (an

ImpinjDISpec has been added) only Direction Role related parameters - *ImpinjDirectionSectors*, *ImpinjDirectionConfig*, *ImpinjC1G2DirectionConfig* and *ImpinjDirectionReporting* - will be returned in the GET_READER_CONFIG_RESPONSE. Direction role is supported by both xArray and xSpan.

SET_READER_CONFIG

If a SET_READER_CONFIG command is issued when the Location or Direction Role is active (an *ImpinjLISpec* or *ImpinjDISpec* has been added), only xArray/xSpan specific parameters are accepted (all others ignored without error). The xArray/xSpan specific parameters include Location Role parameters (*ImpinjPlacementConfiguration*, *ImpinjLocationConfig*, *ImpinjC1G2LocationConfig* and *ImpinjLocationReporting*) and Direction Role parameters (*ImpinjDirectionSectors*, *ImpinjDirectionConfig*, *ImpinjC1G2DirectionConfig* and *ImpinjDirectionReporting*).

4.2 Custom Messages

The following subsections describe the custom messages supported in Octane LLRP.

4.2.1 IMPINJ_ENABLE_EXTENSIONS Message

This top-level extension custom message is used to enable the exchange of all other Impinj extensions. By default, all of the Impinj extensions are unavailable to the client, and the Reader or xArray or xSpan Gateway will respond to any Impinj extensions with an error. The client sends the custom message to the Reader after the connection is established if it wants to use Impinj extensions. If the connection is lost, the extensions revert to the unavailable state. However, Reader features that are controlled by the earlier use of extensions remain configured through connections, unless otherwise noted.

By sending this message to the Reader, the client acknowledges the ability to process all Impinj extensions. The client must ignore any unrecognized information received from the Reader, including the following:

- Unknown custom messages
- Unknown custom parameters
- Unknown reserved enumeration values in custom parameters
- Use of reserved bits in custom parameters and messages

LLRP Dependencies

The IMPINJ_ENABLE_EXTENSIONS message only applies for the duration of the current LLRP connection. If the LLRP connection is broken and re-established, the application must

re-issue this command. Sending a SET_READER_CONFIG message with the *ResetToFactoryDefault* flag set has no effect on the Impinj Extensions state.

Definition

Table 4.2 IMPINJ_ENABLE_EXTENSIONS Message Definition

IMPINJ_ENABLE_EXTENSIONS
Custom Extension Point List: List of <i><Impinj custom parameters></i> [optional]

For more information, see section 6.1.

4.2.2 IMPINJ_ENABLE_EXTENSIONS_RESPONSE Message

This custom message is the Reader response to an IMPINJ_ENABLE_EXTENSIONS message. If the Reader is capable of enabling the Impinj extensions, the Reader returns the success code in the LLRPStatus parameter. If there is an error, the Reader returns an appropriate error code.

LLRP Dependencies

This custom message has no LLRP dependencies.

Definition

Table 4.3 IMPINJ_ENABLE_EXTENSIONS_RESPONSE Message Definition

IMPINJ_ENABLE_EXTENSIONS_RESPONSE
Status: LLRPStatus Parameter
Custom Extension Point List: List of <i><Impinj custom parameter></i> [optional]

For more information, see section 6.1.

4.2.3 IMPINJ_SAVE_SETTINGS Message

The IMPINJ_SAVE_SETTINGS custom message instructs the Reader to save the current configuration to persistent storage. The saved parameters then become the power-on and Reader or xArray or xSpan Gateway reset settings. The specific configuration parameters that are saved to persistent storage are specified using the Boolean fields. These Boolean fields are implemented as a bit-field as shown in section 6.1. Unused reserved bits must be set to zero. Note that there is no way to recall this configuration during runtime. The configuration is only applied after a Reader power-on or reset.

Speedway: The entire reader state is saved to persistent storage. This includes settings from SET_READER_CONFIG, in addition to any configured ROSpecs and AccessSpecs. The current state of *ROSpecs* and *AccessSpecs* is preserved with one exception. The ‘Active’ *ROSpec* is saved in the ‘Inactive’ (but enabled) state. This means an *ROSpec* with an ‘Immediate’ start trigger is saved in the ‘Inactive’ state, but will then run immediately upon power-on or reset. Similarly, an *ROSpec* with a GPI start trigger will run upon the first GPI transition after power-on or reset. For *AccessSpecs*, the countdown value (if any) is saved as soon as this custom message is received. Automatic update of the persistent configuration during Reader operation is not supported.

xArray/xSpan Gateway: The entire reader state is saved to persistent storage EXCEPT for any configured ROSpecs or any xArray/xSpan specific parameters described in Section 4.3.48.

LLRP Dependencies

The configuration of the Reader when the IMPINJ_SAVE_SETTINGS message is received becomes the default configuration for all Reader resets. However, a SET_READER_CONFIG command with the *ResetToFactoryDefault* flag set will override the persistent settings. The Reader will then initialize with factory settings on subsequent resets until it receives another IMPINJ_SAVE_SETTINGS command.

Definition

Table 4.4 IMPINJ_SAVE_SETTINGS Message Definition

IMPINJ_SAVE_SETTINGS

SaveConfiguration: Boolean

Custom Extension Point List: List of *<Impinj custom parameter>* [optional]

For more information, see section 6.1.

4.2.4 IMPINJ_SAVE_SETTINGS_RESPONSE Message

This custom save-settings message is the response by the Reader to an IMPINJ_SAVE_SETTINGS message. If the Reader was capable of saving the current configuration to persistent storage, the Reader returns the success code in the LLRPStatus parameter. If there is an error, the Reader returns an appropriate error code.

LLRP Dependencies

This custom message has no LLRP dependencies.

Definition

Table 4.5 IMPINJ_SAVE_SETTINGS_RESPONSE Message Definition

IMPINJ_SAVE_SETTINGS_RESPONSE

Status: LLRPStatus Parameter

Custom Extension Point List: List of *<Impinj custom parameter>* [optional]

For more information, see section 6.1.

4.3 Custom Parameters

The following subsections describe the custom parameters supported in Octane LLRP. For additional information about using these parameters for xArray or xSpan Gateways, see section 4.3.48.

4.3.1 ImpinjRequestedData Parameter

This custom parameter allows the client to choose specific extensions for inclusion in either a GET_READER_CAPABILITIES_RESPONSE or a GET_READER_CONFIG_RESPONSE message. If the client requests ‘All’ in the command message and Impinj extensions have been enabled, then all Impinj extensions are included in the response. In order to reduce the response size, the client might request specific response parameters using this extension.

Note: This only applies to direct extensions of these two response messages. Custom extensions nested within parameters that are already present in either of these response messages are included provided the Reader has received the IMPINJ_ENABLE_EXTENSIONS message. Although this parameter can appear in either a GET_READER_CAPABILITIES or a

GET_READER_CONFIG message, not all ranges for the enumerated *RequestedData* field are valid in both messages.

LLRP Dependencies

There are no LLRP dependencies for this custom parameter. The standard LLRP requested data field is processed independently from the custom requested data field, with the exception that ‘All’ in the standard field also means ‘All’ in the custom field, if this parameter is omitted and extensions have been enabled.

Allowable Extension Points

- GET_READER_CAPABILITIES message (field values 1000 - 1999)
- GET_READER_CONFIG message (field values 2000 - 2999)

Definition

Table 4.6 ImpinjRequestedData Parameter Definitions

<i>ImpinjRequestedData</i> Parameter	
RequestedData: Unsigned Integer.	
Custom Extension Point List: List of <i><Impinj custom parameter></i> [optional]	
Possible Values:	
Value	Description
1000	‘All_Capabilities’
1001	‘Impinj_Detailed_Version’
1002	‘Impinj_Frequency_Capabilities’
2000	‘All_Configuration’
2001	‘Impinj_Sub_Regulatory_Region’
2003	‘Impinj_GPI_Debounce_Configuration’
2004	‘Impinj_Reader_Temperature’
2005	‘Impinj_Link_Monitor_Configuration’
2006	‘Impinj_Report_Buffer_Configuration’
2007	‘Impinj_Access_Spec_Configuration’

Value	Description
2008	‘Impinj_GPS_NMEA_Sentences’
2009	‘Impinj_Advanced_GPO_Configuration’
2015	‘Impinj_Hub_Configuration’
All others	Reserved for future use

For more information about xArray/xSpan parameters, see section 4.3.48.

4.3.2 ImpinjSubRegulatoryRegion Parameter

Use this custom parameter when a particular regulatory region supports multiple operational modes. The Reader validates the *RegulatoryRegion* field against the regulatory regions for which the Reader was manufactured, and only allows compatible regions to be set. Note that when you set the sub-regulatory region by using the SET_READER_CONFIG message, the *ResetToFactoryDefault* field must be set to **true**. This will delete any configured *ROSpecs* and *AccessSpecs*. Failure to set the *ResetToFactoryDefault* field will result in an error. The client should subsequently issue a GET_READER_CAPABILITIES command after it updates the regulatory region, because the change might have affected the advertised Reader capabilities. After the Reader accepts this parameter, it will begin to reload appropriate regulatory settings: this can take several seconds. Applications should plan for an additional delay of several seconds for the SET_READER_CONFIG_RESPONSE.

Note: Setting an LLRP *ResetToFactoryDefault* that changes the *RegulatoryRegion* will result in the same behavior as described above.

Not all regulatory regions are supported by each Reader model. Table 4.7 shows supported regions by Reader model.

Table 4.7 Supported regions by Reader models

Region	R120	R220	R420	R640	R660	R680
0: FCC part 15.247	✓	✓	✓	✓	✓	✓
1: ETSI EN 300-220	—	—	—	—	—	—
2: ETSI EN 302-208	—	—	—	—	—	—
3: Hong Kong 920-925 MHz	—	✓	✓	✓	✓	✓
4: Taiwan 922-928 MHz	—	✓	✓	✓	✓	✓

Region	R120	R220	R420	R640	R660	R680
5: Japan 952-954 MHz	—	—	—	—	—	—
6: Japan 952-955 MHz, 10mW max power	—	—	—	—	—	—
7: ETSI EN 302-208 (version 1.4.1)	√	√	√	√	√	√
8: Korea 917-921 MHz	√	√	√	√	√	√
9: Malaysia 919-923MHz	—	√	√	√	√	√
10: China 920-925 MHz	√	√	√	√	√	√
11: Japan 952-956 MHz (without LBT)	—	—	—	—	—	—
12: South Africa 915-919 MHz	√	√	√	√	√	√
13: Brazil 902-907/915-928 MHz	—	√	√	√	√	√
14: Thailand 920-925 MHz	—	√	√	√	√	√
15: Singapore 920-925 MHz	—	√	√	√	√	√
16: Australia 920-925 MHz	—	√	√	√	√	√
17: India 865-867 MHz	√	√	√	√	√	√
18: Uruguay 916-928 MHz	—	√	√	√	√	√
19: Vietnam 920-925 MHz	—	√	√	√	√	√
20: Israel 915-917 MHz	—	√	√	√	√	√
21: Philippines 918-920 MHz	—	√	√	√	√	√
22: Canada Post 902-928 MHz	—	—	—	—	—	—
23: Indonesia 923-925 MHz	—	√	√	√	√	√
24: New Zealand 922-927 MHz	—	√	√	√	√	√
25: Japan 916.7-920.9 MHz	—	—	√	—	√	√
26: Latin America 902-928 MHz	—	√	√	√	√	√
27: Peru 916-928 MHz	—	√	√	√	√	√
28: Bangladesh 925-927 MHz	—	√	√	√	√	√

Note: Inclusion of a country or region in the above table does not imply regulatory compliance.

Refer to the Impinj Support Portal for a list of certified countries and regions by product. The list changes over time as new countries are certified and as certificates expire.

LLRP Dependencies

When a particular LLRP region supports multiple operational modes, this parameter is required. For example, the LLRP ETSI region might support both with and without LBT. For regions that don't support multiple modes, the Reader will set this parameter automatically, based on the hardware version of the Reader, and the region information specified at manufacturing.

Allowable Extension Points

- GET_READER_CONFIG_RESPONSE message
- SET_READER_CONFIG message

Definition

Table 4.8 ImpinjSubRegulatoryRegion Parameter

<i>ImpinjSubRegulatoryRegion</i> Parameter	
RegulatoryRegion: Unsigned Short Integer.	
Custom Extension Point List: List of <i><Impinj custom parameter></i> [optional]	
Possible Values:	
Value	Description
0	'FCC part 15.247'
1	'ETSI EN 300-220'
2	'ETSI EN 302-208 (with LBT)'P0F
3	'Hong Kong 920-925 MHz'
4	'Taiwan 922-928 MHz'
5	'Japan 952-954 MHz'P1F - (no longer supported)
6	'Japan 952-955 MHz, 10mW max power' - (no longer supported)
7	'ETSI EN 302-208 (version 1.4.1)'
8	'Korea 917-921 MHz'
9	'Malaysia 919-923 MHz'

Value	Description
10	‘China 920-925 MHz’
11	‘Japan 952-956 MHz (without LBT)’
12	‘South Africa 915-919 MHz’
13	‘Brazil 902-907 and 915-928 MHz’
14	‘Thailand 920-925 MHz’
15	‘Singapore 920-925 MHz’
16	‘Australia 920-925 MHz’
17	‘India 865-867 MHz’
18	‘Uruguay 916-928 MHz’
19	‘Vietnam 920-925 MHz’
20	‘Israel 915-917 MHz’
21	‘Philippines 918-920 MHz’
22	‘Canada Post 902-928 MHz’ (no longer supported)
23	‘Indonesia 923-925 MHz’
24	‘New Zealand 922-927 MHz’
25	‘Japan 916.7-920.9 MHz’
26	‘Latin America 902-928 MHz’
27	‘Peru 916-928 MHz’
28	‘Bangladesh 925-927 MHz’
29-65535	Reserved for future use

Note: Inclusion of a country or region in the above table does not imply regulatory compliance. Refer to the Impinj Support Portal for a list of certified countries and regions by product. The list changes over time as new countries are certified and as certificates expire.

4.3.3 ImpinjInventorySearchMode Parameter

Specify the Impinj-specific inventory search mode used by a particular antenna using this custom parameter. The inventory search mode may be configured as either part of the default Reader configuration (via a SET_READER_CONFIG message), or as part of individual AISpecs within a ROSpec (via an ADD_ROSPEC message).

LLRP Dependencies

Impinj Readers implement state unaware singulation and therefore the Client does not control how the Reader attempts to singulate tags. This parameter provides a high-level control over the search algorithm and consequently does not interfere with any of the standard LLRP settings. When the InventorySearchMode is set to zero, the Reader will pick the inventory search mode that provides the most consistent performance for the session and timing parameters provided by LLRP.

Allowable Extension Points

- *C1G2InventoryCommand* parameter

Definition

Table 4.9 ImpinjInventorySearchMode Parameter

ImpinjInventorySearchMode Parameter

InventorySearchMode: Unsigned Short Integer.

Custom Extension Point List: List of *<Impinj custom parameter>* [optional]

Possible Values:

Value	Name	Typical Use Case	What it does
0	Reader Selected		Reader selected mode (default)
1	Single Target Inventory	High tag count, high-throughput use cases where a reduction in repeated tag observation is acceptable.	Inventories tags in state A, transitioning the tags to state B
2	Dual Target Inventory	Low-to-medium tag count, low-throughput use cases where repeated tag observation is desirable.	Inventories tags in state A, transitioning the tags to state B Inventories tags in state B, transitioning the tags back to state A

Value Name	Typical Use Case	What it does
3 Single Target Inventory with Suppression (aka TagFocus)	High tag count, high-throughput use cases where a reduction in repeated tag observations is acceptable. Suppresses repeated observations for extended periods of time while tags are energized. Supported only with Monza tags using Session 1	Inventories tags in state A, transitioning the tags to state B. Tags will persist in state B if they are energized. Tags will transition to state A in ≤ 5 seconds when de-energized
4 Reserved for future use		
5 Single Target Reset Inventory	Used in conjunction with 'Single Target Inventory' to achieve higher throughput when using Sessions 2 and 3 that have longer decay intervals.	Inventories tags in state B, transitioning the tags to state A
6 Dual Target Inventory with Reset	High tag count, high-throughput use cases where repeated tag observation is desirable	Inventories tags in state A, transitioning the tags to state B. Sends Gen2 Select command to transition tags back to state A
> 6 Reserved for future use		

4.3.4 ImpinjFixedFrequencyList Parameter

Use this custom parameter to allow the Reader to make intelligent decisions about which channel to use in fixed frequency or intelligent hopping regulatory regions. The *FixedFrequencyMode* field determines how the Reader will select the active channel. When set to **zero** (disabled), the Reader ignores this parameter and instead uses the frequency information in the LLRP *RFTransmitter* parameter. When set to **1**, the Reader chooses the active channel automatically, based on the rules of the regulatory region. When set to **2**, the Reader chooses the active channel from a

configurable list of channel indices based on the *ImpinjFrequencyCapabilities* parameter advertised in the Reader's capabilities. The maximum number of channels allowed in the configurable list is shown in Table 4.10. A repeated channel index means the Reader will test the channel multiple times. When *FixedFrequencyMode* is set to zero or one, the *ChannelList* array is ignored.

This parameter can only be added in an operational mode, such as 'not disabled', when the Reader is operating in a fixed frequency or intelligent hopping regulatory region. The parameter contents must be consistent across all enabled antennas in an AISpec.

Table 4.10 ImpinjFixedFrequencyList Regulatory Information

Region	Available FixedFrequencyMode	Maximum ChannelList Size
0: FCC part 15.247	0	N/A
1: ETSI EN 300-220	N/A	N/A
2: ETSI EN 302-208	See region 7	See region 7
3: Hong Kong 920-925 MHz	0	N/A
4: Taiwan 922-928 MHz	0	N/A
5: Japan 952-954 MHz	N/A	N/A
6: Japan 952-955 MHz, 10mW max power	N/A	N/A
7: ETSI EN 302-208 (version 1.4.1)	0, 1, 2	4
8: Korea 917-921 MHz	0	N/A
9: Malaysia 919-923MHz	0	N/A
10: China 920-925 MHz	0, 1, 2	16
11: Japan 952-956 MHz (without LBT)	0, 1, 2	4
12: South Africa 915-919 MHz	0	N/A
13: Brazil 902-907/915-928 MHz	0	N/A
14: Thailand 920-925 MHz	0	N/A
15: Singapore 920-925 MHz	0	N/A
16: Australia 920-925 MHz	0	N/A
17: India 865-867 MHz	0, 1, 2	4
18: Uruguay 916-928 MHz	0	N/A

Region	Available FixedFrequencyMode	Maximum ChannelList Size
19: Vietnam 920-925 MHz	0	N/A
20: Israel 915-917 MHz	0	N/A
21: Philippines 918-920 MHz	0, 1, 2	4
22: Canada Post 902-928 MHz	N/A	N/A
23: Indonesia 923-925 MHz	0	N/A
24: New Zealand 922-927 MHz	0	N/A
25: Japan 916.7-920.9 MHz	0, 1, 2	4
26: Latin America 902-928 MHz	0	N/A
27: Peru 916-928 MHz	0	N/A
28: Bangladesh 925-927 MHz	0	N/A

Note: Inclusion of a country or region in the above table does not imply regulatory compliance. Refer to the Impinj Support Portal for a list of certified countries and regions by product. The list changes over time as new countries are certified and as certificates expire.

LLRP Dependencies

When present and enabled, this parameter overrides the *ChannelIndex* field of the *RFTransmitter* parameter. The Reader will always return the last value set in the *ChannelIndex* field if queried, but if a client sets this custom parameter, that value must be ignored.

Allowable Extension Points

- *C1G2InventoryCommand* parameter

Definition

Table 4.11 ImpinjFixedFrequencyList Parameter

ImpinjFixedFrequencyList Parameter

FixedFrequencyMode: Unsigned Short Integer.

Custom Extension Point List: List of *<Impinj custom parameter>* [optional]

Possible Values:

Value	Description
0	'Disabled' (default)
1	'Reader will choose the channel from those allowed in the current regulatory region'
2	'Reader will choose the channel from the channel indices provided in the ChannelList field'
3-65535	Reserved for future use

Note: *ChannelList*: Short Array. An array of indices into the Reader's *ImpinjFrequencyCapabilities* that can be used.

4.3.5 ImpinjFrequencyCapabilities Parameter

The frequency capabilities custom parameter is included in the Reader's capabilities and carries each frequency supported by the Reader (see section 4.3.4 for more information). The *FrequencyList* field is a one-based array of frequencies in kHz.

LLRP Dependencies

This custom parameter has no LLRP dependencies.

Allowable Extension Points

- GET_READER_CAPABILITIES_RESPONSE

Definition

Table 4.12 ImpinjFrequencyCapabilities Parameter

ImpinjFrequencyCapabilities Parameter

FrequencyList: Unsigned Integer Array. Frequency in kHz.

Custom Extension Point List: List of *<Impinj custom parameter>* [optional]

4.3.6 ImpinjReducedPowerFrequencyList Parameter

This custom parameter is used to allow the Reader to apply a reduced power to specific channels listed in the *ChannelList*, when they are operating in the FCC regulatory region. The *ReducedPowerMode* field determines how the Reader will interpret the channels listed. When set to zero (disabled), the Reader ignores this parameter. When set to **1**, during inventory and access the Reader will apply a reduced power level to the list of channel indices derived from the *FrequencyList*. This list is supplied by the *ImpinjFrequencyCapabilities* parameter advertised in the Reader's capabilities (see section 4.3.5). The reduced power level is not configurable, and defaults to the lowest device power possible. The maximum number of channels allowed in the configurable list are specified in Table 4.13. When *ReducedPowerMode* is **1**, the *ChannelList* must contain at least two channels and no channel can be repeated. This parameter is valid only when the Reader is operating in the FCC regulatory region as shown in Table 4.13). The parameter contents must be consistent across all enabled antennas in an AISpec.

Table 4.13 ImpinjReducedPowerFrequencyList Regulatory Information

Region	Available ReducedPowerMode	Maximum ChannelList Size
0: FCC part 15.247	0, 1	16
1: ETSI EN 300-220	N/A	N/A
2: ETSI EN 302-208	See region 7	See region 7
3: Hong Kong 920-925 MHz	0	N/A
4: Taiwan 922-928 MHz	0	N/A
5: Japan 952-954 MHz	N/A	N/A
6: Japan 952-955 MHz, 10mW max power	N/A	N/A
7: ETSI EN 302-208 (version 1.4.1)	0	N/A
8: Korea 917-921 MHz	0	N/A
9: Malaysia 919-923MHz	0	N/A
10: China 920-925 MHz	0	N/A
11: Japan 952-956 MHz (without LBT)	0	N/A
12: South Africa 915-919 MHz	0	N/A
13: Brazil 902-907/915-928 MHz	0	N/A

Region	Available ReducedPowerMode	Maximum ChannelList Size
14: Thailand 920-925 MHz	0	N/A
15: Singapore 920-925 MHz	0	N/A
16: Australia 920-925 MHz	0	N/A
17: India 865-867 MHz	0	N/A
18: Uruguay 916-928 MHz	0	N/A
19: Vietnam 920-925 MHz	0	N/A
20: Israel 915-917 MHz	0	N/A
21: Philippines 918-920 MHz	0	N/A
22: Canada Post 902-928 MHz	N/A	N/A
23: Indonesia 923-925 MHz	0	N/A
24: New Zealand 922-927 MHz	0	N/A
25: Japan 916.7-920.9 MHz	0	N/A
26: Latin America 902-928 MHz	0	N/A
27: Peru 916-928 MHz	0	N/A
28: Bangladesh 925-927 MHz	0	N/A

Note: Inclusion of a country or region in the above table does not imply regulatory compliance. Refer to the Impinj Support Portal for a list of certified countries and regions by product. The list changes over time as new countries are certified and as certificates expire.

LLRP Dependencies

This custom parameter has no LLRP dependencies.

Allowable Extension Points

- *C1G2InventoryCommand* parameter

Definition

Table 4.14 ImpinjReducedPowerFrequencyList Parameter

ImpinjReducedPowerFrequencyList Parameter

ReducedPowerMode: Unsigned Short Integer.

Custom Extension Point List: List of *<Impinj custom parameter>* [optional]

Possible Values:

Value	Description
0	‘Disabled’ (default)
1	‘Reader applies the reduced power level to the Channels specified in the ChannelList’
2-65535	‘Reserved for future use’

Note: *ChannelList*: Unsigned Short Array. A maximum of sixteen one-based indices into the Reader’s :under:FrequencyList’ as advertised in the *ImpinjFrequencyCapabilities* parameter to apply the reduced power during inventory and access.

4.3.7 ImpinjLowDutyCycle Parameter

Use this custom parameter to provide additional control of the RF duty cycle of the Reader beyond the control already provided by the *TagTransitTime* field in the LLRP *C1G2SingulationControl* parameter. During inventory, if the Reader detects zero tags in the field-of-view (a definition that is model-specific, as described in this section), *EmptyFieldTimeout* specifies in milliseconds the amount of time the Reader will wait before entering low duty cycle mode. In this low duty cycle mode, the Reader will rescan the FOV every *FieldPingInterval* milliseconds, checking for tags. When a tag is detected, the full duty cycle will resume. The Reader exits the low duty cycle mode at the start of each AISpec, and restarts the empty field timers.

For regulatory region compliance, low duty cycle operation will occur in some regions, whether low duty cycle operation parameters are specified or not. For such regions, if valid low duty cycle operation parameter values are specified, the Reader might choose to adjust the specified values in order to maintain regulatory region compliance. This parameter is invalid in regions that use LBT, as shown in Table 4.15.

The FOV is defined as the tags visible by a single antenna, independent of the other antennas enabled in the current AISpec. Thus, each antenna manages its own FOV, empty field timer, and field ping timer. This means that the low duty cycle settings can be configured independently from other antennas that are enabled in the current AISpec. The only requirement is that, if

one antenna in the AISpec uses the *ImpinjLowDutyCycle* parameter, all antennas must use the extension. However, the timer values can vary between enabled antennas.

As an example, assume that, for one of the antennas in the current AISpec, *EmptyFieldTimeout* is set to 500 milliseconds and *FieldPingInterval* is set to 200 milliseconds. After that antenna detects zero tags in the field-of-view, that antenna's empty field timer is started. If that antenna subsequently detects tags, the timer stops. If that antenna detects zero tags for 500 milliseconds, a timeout occurs and the antenna enters low duty cycle mode. During this mode, the antenna will switch on briefly every 200 milliseconds to check for tags in its FOV. While this is all occurring, the same algorithm is running on each of the other enabled antennas independently.

Note: Low duty cycle mode is not supported if only one antenna is enabled. Note: If Low Duty Cycle is enabled on Speedway Readers, then Intelligent Antenna Management will be temporarily enabled. Note: Low duty cycle is not recommended for use with xSpan or xArray Gateways.

Table 4.15 ImpinjLowDutyCycle Regulatory Information

Region	Available LowDutyCycleMode
0: FCC part 15.247	0, 1
1: ETSI EN 300-220	N/A
2: ETSI EN 302-208	See region 7
3: Hong Kong 920-925 MHz	0, 1
4: Taiwan 922-928 MHz	0, 1
5: Japan 952-954 MHz	N/A
6: Japan 952-955 MHz, 10mW max power	N/A
7: ETSI EN 302-208 (version 1.4.1)	0, 1
8: Korea 917-921 MHz	0, 1
9: Malaysia 919-923MHz	0, 1
10: China 920-925 MHz	0, 1
11: Japan 952-956 MHz (without LBT)	0, 1
12: South Africa 915-919 MHz	0, 1
13: Brazil 902-907/915-928 MHz	0, 1
14: Thailand 920-925 MHz	0, 1
15: Singapore 920-925 MHz	0, 1

Region	Available LowDutyCycleMode
16: Australia 920-925 MHz	0, 1
17: India 865-867 MHz	0, 1
18: Uruguay 916-928 MHz	0, 1
19: Vietnam 920-925 MHz	0, 1
20: Israel 915-917 MHz	0, 1
21: Philippines 918-920 MHz	0, 1
22: Canada Post 902-928 MHz	N/A
23: Indonesia 923-925 MHz	0, 1
24: New Zealand 922-927 MHz	0, 1
25: Japan 916.7-920.9 MHz	0, 1
26: Latin America 902-928 MHz	0, 1
27: Peru 916-928 MHz	0, 1
28: Bangladesh 925-927 MHz	0, 1

Note: Inclusion of a country or region in the above table does not imply regulatory compliance. Refer to the Impinj Support Portal for a list of certified countries and regions by product. The list changes over time as new countries are certified and as certificates expire.

LLRP Dependencies

If present and enabled, this parameter overrides the *TagTransitTime* field in the LLRP *C1G2SingulationControl* parameter. The Reader always returns the last value that was set in the *TagTransitTime* field if queried. However, if a client has set this custom parameter, that value must be ignored.

Allowable Extension Points

- *C1G2InventoryCommand* parameter

Definition

Table 4.16 ImpinjLowDutyCycle Parameter

ImpinjLowDutyCycle Parameter

LowDutyCycleMode: Unsigned Short Integer.

Custom Extension Point List: List of *<Impinj custom parameter>* [optional]

Possible Values:

Value	Description
0	‘Disabled’ (default)
1	‘Enabled’ (Not recommended for use with xSpan or xArray Gateways)
2-65535	Reserved for future use

Note: *EmptyFieldTimeout*: Unsigned Short Integer. The time in milliseconds the Reader will wait, having detected no tags on all enabled antennas, before switching to low duty cycle mode.

Note: *FieldPingInterval*: Unsigned Short Integer. The time in milliseconds before the Reader switches on the transmitter to search for tags in the field during low duty cycle mode.

4.3.8 ImpinjDetailedVersion Parameter

Use this custom parameter to provide detailed information about the individual components running on the Reader. The primary platform version is available in the *ReaderFirmwareVersion*‘ field in the *GeneralDeviceCapabilities* parameter of the Reader’s capabilities. However, there are sub-components of the Reader that contain independent version information that is unavailable by using the primary platform version. This custom parameter provides the detailed information. The meaning behind each field varies by Reader model. Table 4-17 provides the translation for each model type.

Table 4.17 ImpinjDetailedVersion Field Descriptions

Field	Speedway
<i>ModelName</i>	The model name of the reader.
<i>SerialNumber</i>	The serial number of the reader.
<i>SoftwareVersion</i>	The primary platform firmware version (SOP). Same as <i>ReaderFirmwareVersion</i> .

Field	Speedway
<i>FirmwareVersion</i>	The firmware version of the Command Sequencer component.
<i>FPGAVersion</i>	The firmware version of the FPGA component.
<i>PCBAVersion</i>	The hardware version of the PCBA component.
<i>ImpinjHubVersions</i>	Hardware, firmware versions and serial numbers of attached Antenna Hubs.
<i>ImpinjArrayVersion</i>	Array specific hardware and version information that is considered additional to ImpinjDetailedVersion information.
<i>ImpinjBLEVersion</i>	The firmware version of the BLE hardware.

LLRP Dependencies

This custom parameter has no LLRP dependencies.

Allowable Extension Points

- GET_READER_CAPABILITIES_RESPONSE message

Definition

Table 4.18 ImpinjDetailedVersion Parameter

ImpinjDetailedVersion Parameter

ModelName: UTF-8 String

SerialNumber: UTF-8 String

SoftwareVersion: UTF-8 String

FirmwareVersion: UTF-8 String

ImpinjDetailedVersion Parameter

FPGAVersion: UTF-8 String*PCBAVersion*: UTF-8 String*ImpinjHubVersions*: Custom Parameter*ImpinjArrayVersion*: Custom Parameter*ImpinjBLEVersion*: Custom Parameter**Custom Extension Point List**: List of *<Impinj custom parameter>* [optional]

Table 4.19 ImpinjHubVersions Parameter

ImpinjHubVersions Parameter

List of *ImpinjArrayVersion* parameters**Custom Extension Point List**: List of *<Impinj custom parameter>* [optional]

Table 4.20 ImpinjArrayVersion Parameter

ImpinjArrayVersion Parameter

SerialNumber: UTF-8 String*FirmwareVersion*: UTF-8 String*PCBAVersion*: UTF-8 String**Custom Extension Point List**: List of *<Impinj custom parameter>* [optional]

Table 4.21 ImpinjBLEVersion Parameter

ImpinjBLEVersion Parameter

FirmwareVersion: UTF-8 String**Custom Extension Point List**: List of <*Impinj custom parameter*> [optional]

4.3.9 ImpinjGPIDebounceConfiguration Parameter

Use this custom parameter to control the GPI debounce timing. The *GPIPortNum* field is the 1-based GPI number, identical to *GPIPortNum* in the *GPIPortCurrentState* LLRP parameter. Once a transition is detected, whether rising or falling, subsequent transitions are ignored for *GPIDebounceTimerMSec* milliseconds. This timer value must be a multiple of 10 milliseconds. Setting *GPIDebounceTimerMSec* to zero effectively disables debounce. The GPI debounce timer affects triggered ROSpecs and GPI event reporting.

xArray/xSpan

This custom parameter is not supported by xArray or xSpan. This parameter will not be reported and any command that uses this parameter will be rejected.

LLRP Dependencies

This custom parameter has no LLRP dependencies.

Allowable Extension Points

- GET_READER_CONFIG_RESPONSE message
- SET_READER_CONFIG message

Definition

Table 4.22 ImpinjGPIDebounceConfiguration Parameter

ImpinjGPIDebounceConfiguration Parameter

GPIPortNum: Unsigned Short Integer.*Unsigned Integer*: The debounce duration in milliseconds. Must be a multiple of 10 milliseconds. Zero turns off the debounce algorithm for this GPI.**Custom Extension Point List**: List of <Impinj Custom Parameters> [optional]

4.3.10 ImpinjAdvancedGPOConfiguration Parameter

Use this custom parameter to control the advanced GPO feature of Speedway readers. When set to **Normal** (default) the GPO is set via the regular LLRP SET_READER_CONFIG message. When set to **Pulsed**, the GPO changes state based on the SET_READER_CONFIG message, and will change to the opposite state after *GPOPulseDurationMSec* milliseconds. When set to 'Reader_Operational_Status', 'LLRP_Connection_Status', 'Reader_Inventory_Status', 'Network_Connection_Status', or 'Reader_Inventory_Tags_Status', the GPO status acts like a Boolean value. When high (**true**, **1**), the corresponding status is **true**, which means that the reader is operating, has a LLRP connection, is inventorying, has a network connection, or tags are being singulated (respectively). When low (**false**, **0**), the opposite is the case. The GPO might lag the actual internal status. Notably the worst case delay on the 'Network_Connection_Status' can be up to 17 seconds.

Note: When the pin is configured for 'Reader_Inventory_Status', the reader asserts the GPO pin if an inventory operation is in progress. The state of the GPO pin is updated every 250 ms so it may take up to 500 ms for the pin to reflect a change in status.

xArray/xSpan

This custom parameter is not supported by xArray or xSpan. This parameter will not be reported and any command that uses this parameter will be rejected.

LLRP Dependencies

Whenever a GPO has been associated with a specific reader status, it cannot be set via the normal LLRP protocol. If a SET_READER_CONFIG message is received that attempts to change the state of a GPO that is associated with a specific reader status, the message will be rejected by the Reader.

Allowable Extension Points

- GET_READER_CONFIG_RESPONSE message
- SET_READER_CONFIG message

Definition

Table 4.23 ImpinjAdvancedGPOConfiguration Parameter

ImpinjAdvancedGPOConfiguration Parameter

GPOPortNum: Unsigned Short Integer.

ImpinjAdvancedGPOConfiguration Parameter

GPOMode: Unsigned Short Integer.

Custom Extension Point List: List of <Impinj Custom Parameters> [optional]

Possible Values:

Value	Description
0	‘Normal’ (default)
1	‘Pulsed’
2	‘Reader_Operational_Status’
3	‘LLRP_Connection_Status’
4	‘Reader_Inventory_Status’
5	‘Network_Connection_Status’
6	‘Reader_Inventory_Tags_Status’
7-65535	Reserved for future use

Note: *GPOPulseDurationMSec*: Unsigned Integer. The duration of the GPO pulse. This field is only valid when *GPOMode* is set to **Pulsed**. When *GPOMode* is set to **Pulsed**, this value must be non-zero. The duration is specified in milliseconds.

4.3.11 ImpinjReaderTemperature Parameter

Use this custom parameter to report the current temperature of the Reader in degrees Celsius. The temperature that is reported is the internal temperature of the Reader or xArray or xSpan Gateway, not the ambient temperature of the Reader surroundings. The temperature is accurate to within 2 degrees C across all operating temperatures.

LLRP Dependencies

This custom parameter has no LLRP dependencies.

Allowable Extension Points

- GET_READER_CONFIG_RESPONSE message

Definition

Table 4.24 ImpinjReaderTemperature Parameter

ImpinjReaderTemperature Parameter

Temperature: Signed Short Integer. The current temperature in degrees Celsius.

Custom Extension Point List: List of <*Impinj Custom Parameters*> [optional]

4.3.12 ImpinjLinkMonitorConfiguration Parameter

Use this custom parameter to configure the Reader to monitor LLRP link health by using KEEPALIVE and KEEPALIVE_ACK messages. When disabled or unsupported (see Table 4.1), the Reader ignores KEEPALIVE_ACK messages entirely. When this parameter is enabled, if the Reader fails to receive *LinkDownThreshold* consecutive KEEPALIVE_ACK messages from the client, the Reader will close the current connection. Note that this parameter must be configured in conjunction with the *KeepaliveSpec* LLRP parameter in the standard LLRP configuration. The frequency with which the Reader is configured to send KEEPALIVE messages, along with the threshold set in this parameter, determines how long the Reader will tolerate missing KEEPALIVE_ACK messages. The Reader or xArray or xSpan Gateway uses the LLRP *MessageID* field to correlate KEEPALIVE and KEEPALIVE_ACK messages. Clients must send the same *MessageID* when responding to Reader KEEPALIVE requests.

Note: The recommended KEEPALIVE interval is at least 10 seconds. Setting a shorter KEEPALIVE interval may result in errors.

LLRP Dependencies

This custom parameter must be set in conjunction with the LLRP *KeepaliveSpec* parameter. If you set this parameter alone without configuring a Periodic KeepaliveSpec, it has no effect.

Allowable Extension Points

- GET_READER_CONFIG_RESPONSE message
- SET_READER_CONFIG message

Definition

Table 4.25 ImpinjLinkMonitorConfiguration Parameter

ImpinjLinkMonitorConfiguration Parameter

LinkMonitorMode: Unsigned Short Integer.

Custom Extension Point List: List of <Impinj Custom Parameters> [optional]

Possible Values:

Value	Description
0	‘Disabled’ (default)
1	‘Enabled’
2-65535	Reserved for future use

Note: *LinkDownThreshold*: Unsigned Short Integer. The number of consecutive KEEPALIVE_ACK response messages that were not received before the Reader closed the current connection.

4.3.13 ImpinjReportBufferConfiguration Parameter

Use this custom parameter to configure how the Reader buffers asynchronous reports sent to the client. In **Normal** mode, the Reader buffers RO_ACCESS_REPORT messages internally for an optimal time period before transmission over the network. Response messages, KEEPALIVE messages, and READER_EVENT_NOTIFICATION messages are not affected, and are sent immediately. In **Low_Latency** mode, the Reader sends RO_ACCESS_REPORT messages as soon as they are available. In general, the default mode is well suited to most applications. Applications that require immediate access to inventory reports may require **Low_Latency** mode, but users should first evaluate network and system load.

LLRP Dependencies

This custom parameter has no LLRP dependencies.

Allowable Extension Points

- GET_READER_CONFIG_RESPONSE message
- SET_READER_CONFIG message

Definition

Table 4.26 ImpinjReportBufferConfiguration Parameter

ImpinjReportBufferConfiguration Parameter

ReportBufferMode: Unsigned Short Integer.

Custom Extension Point List: List of <Impinj Custom Parameters> [optional]

Possible Values:

Value	Description
0	‘Normal’ (default)
1	‘Low_Latency’
2-65535	Reserved for future use

4.3.14 ImpinjAccessSpecConfiguration Parameter

Use this custom parameter to allow additional control over how the Reader executes *AccessSpecs*. This parameter does not contain any specific controls, but it encapsulates individual parameters that do. Each parameter that it contains is optional, which allows for maximum flexibility for client implementations.

LLRP Dependencies

This custom parameter has no LLRP dependencies, although the parameters that it contains might. Reference the individual parameters for information about how they affect LLRP behavior.

Allowable Extension Points

- GET_READER_CONFIG_RESPONSE message
- SET_READER_CONFIG message
- *AccessSpec* parameter

Definition**Table 4.27 ImpinjAccessSpecConfiguration Parameter**

<i>ImpinjAccessSpecConfiguration</i> Parameter
<i>ImpinjBlockWriteWordCount</i> : < <i>ImpinjBlockWriteWordCount</i> parameter> [optional]
<i>ImpinjOpSpecRetryCount</i> : < <i>ImpinjOpSpecRetryCount</i> parameter> [optional]
Custom Extension Point List : List of < <i>Impinj Custom Parameters</i> > [optional]

4.3.15 ImpinjBlockWriteWordCount Parameter

Use this parameter to configure the number of words sent at one time to a tag, when processing a *C1G2BlockWrite* OpSpec custom parameter. The LLRP *C1G2BlockWrite* parameter has a word vector that contains the data to be written to a tag. Internally, the Reader breaks this vector up into individual C1G2 BlockWrite commands. This parameter determines the number of words sent via each BlockWrite command. Note that it is the user's responsibility to ensure that the tag population supports the BlockWrite word count that is configured via this parameter. BlockWrite commands to tags that do not support the configured word count will fail. The Reader or xArray or xSpan Gateway automatically aligns C1G2BlockWrite commands to appropriate boundaries and accounts for odd data lengths. The default word count is one.

LLRP Dependencies

This custom parameter determines the number of words sent at a time over the C1G2 air interface when processing a LLRP *C1G2BlockWrite* parameter.

Allowable Extension Points

- None included in *ImpinjAccessSpecConfiguration* parameter.

Definition

Table 4.28 ImpinjBlockWriteWordCount Parameter

ImpinjBlockWriteWordCount Parameter

WordCount: Unsigned Short Integer. Allowable range is 1-2.

Custom Extension Point List: List of *<Impinj Custom Parameters>* [optional]

4.3.16 ImpinjOpSpecRetryCount Parameter

Use this custom parameter to configure the number of times an OpSpec operation will be automatically retried by the Reader before failure is declared. The Reader intelligently chooses which types of failures to retry. For example, the Reader will not retry if the tag indicates that the operation failed due to a memory locked or memory overrun, which are operations that have no chance of succeeding. However, if the operation failed due to transient errors, such as CRC errors due to interference, the Reader will automatically retry *RetryCount* attempts before failure is declared.

LLRP dictates that OpSpec failure be declared once a single operation has failed, therefore the default *RetryCount* is 0.

LLRP Dependencies

This custom parameter has no LLRP dependencies.

Allowable Extension Points

- None included in the *ImpinjAccessSpecConfiguration* parameter.

Definition

Table 4.29 ImpinjOpSpecRetryCount Parameter

ImpinjOpSpecRetryCount Parameter

RetryCount: Unsigned Short Integer.

Custom Extension Point List: List of *<Impinj Custom Parameters>* [optional]

Possible Values:

Value	Description
0-3	The number of times each operation is retried.

4.3.17 ImpinjBlockPermalock Parameter

This OpSpec custom parameter configures the *C1G2 BlockPermalock* status of a particular memory bank from a tag. The *AccessPassword* field is the password that is required to move the tag into the secured state, if needed.

LLRP Dependencies

This custom parameter has no LLRP dependencies.

Allowable Extension Points

- *AccessCommandOpSpec* choice parameter.

Definition

Table 4.29 ImpinjBlockPermalock Parameter

ImpinjBlockPermalock Parameter

OpSpecID: Unsigned Short Integer.

AccessPassword : Unsigned Integer.

MB: Integer. The memory bank on which to perform the *BlockPermalock*.

Possible Values: 0-3

BlockPointer: Unsigned Short Integer. Specifies the starting address for *BlockMask* in units of 16 blocks.

BlockMask: Unsigned Short Integer Array. Specifies the blocks to lock, starting at *BlockPointer* and ending ((16*(*BlockMask* array length)) - 1) blocks later.

Custom Extension Point List: List of <*Impinj Custom Parameters*> [optional]

4.3.18 ImpinjBlockPermalockOpSpecResult Parameter

This custom parameter is the result of an *ImpinjBlockPermalock* OpSpec.

LLRP Dependencies

This custom parameter has no LLRP dependencies.

Allowable Extension Points

- *AccessCommandOpSpecResult* choice parameter.

Definition

Table 4.31 ImpinjBlockPermalockOpSpecResult Parameter

ImpinjBlockPermalockOpSpecResult Parameter

OpSpecID: Unsigned Short Integer.

Result: Integer.

Custom Extension Point List: List of <*Impinj Custom Parameters*> [optional]

Possible Values:

Value	Description
0	‘Success’
1	‘Insufficient power to perform block permalock operation’
2	‘Non-specific tag error’
3	‘No response from tag’
4	‘Non-specific Reader error’
5	‘Incorrect password error’
6	‘Tag memory overrun error’

4.3.19 ImpinjGetBlockPermalockStatus Parameter

Use this custom parameter to retrieve the OpSpec *C1G2 BlockPermalock* status of a particular memory bank from a tag. The *AccessPassword* field is the password that is required to move the tag into the secured state, if needed.

LLRP Dependencies

This custom parameter has no LLRP dependencies.

Allowable Extension Points

- *AccessCommandOpSpec* choice parameter.

Definition

Table 4.32 ImpinjGetBlockPermalockStatus Parameter

ImpinjGetBlockPermalockStatus Parameter

OpSpecID: Unsigned Short Integer.

AccessPassword: Unsigned Integer.

MB: Integer. The memory bank on which to retrieve the BlockPermalock status.

Possible Values: 0-3

BlockPointer: Unsigned Short Integer. Specifies the starting address to retrieve in units of 16 blocks.

BlockRange: Unsigned Short Integer. Specifies the range of blocks to retrieve, starting at *BlockPointer* and ending $((16 * \textit{BlockRange}) - 1)$ blocks later.

Custom Extension Point List: List of *<Impinj Custom Parameters>* [optional]
version 6.0.0

4.3.20 ImpinjGetBlockPermalockStatusOpSpecResult Parameter

This custom parameter is the result of an *ImpinjGetBlockPermalockStatus* OpSpec.

LLRP Dependencies

This custom parameter has no LLRP dependencies.

Allowable Extension Points

- *AccessCommandOpSpecResult* choice parameter.

Definition

Table 4.33 ImpinjGetBlockPermalockStatusOpSpecResult Parameter

ImpinjGetBlockPermalockStatusOpSpecResult Parameter

OpSpecID: Unsigned Short Integer.

PermalockStatus: Unsigned Short Integer Array. Specifies the Permalock status of each block requested.

Result: Integer.

Custom Extension Point List: List of *<Impinj Custom Parameters>* [optional]

Possible Values:

Value	Description
0	‘Success’
1	‘Non-specific tag error’
2	‘No response from tag’
3	‘Non-specific Reader error’
4	‘Incorrect password error’
5	‘Tag memory overrun error’

4.3.21 ImpinjSetQTConfig Parameter

Use this custom parameter to set the OpSpec for the QT Technology (TM) configuration on Impinj Monza 4QT tags. For more information about the meaning of the fields in this parameter and the use cases for this technology, see the Impinj Monza 4QT datasheet.

Some tags might not be reported when you use Serialized TID reporting and Monza4-QT tags with both public and short range modes. For more information, see section 5.1 **Speedway Serialized TID Reporting and Monza4 Tags**.

LLRP Dependencies

This custom parameter has no LLRP dependencies.

Allowable Extension Points

- AccessCommandOpSpec choice parameter.

Definition

Table 4.34 ImpinjSetQTConfig Parameter

ImpinjSetQTConfig Parameter

OpSpecID: Unsigned Short Integer.

AccessPassword: Unsigned Integer.

DataProfile: Integer. Determines which data profile is exposed by the tag.

Possible Values:

Value	Description
1	‘Private. The tag exposes its private data profile.’
2	‘Public. The tag exposes its public data profile.’
0,3-255	‘Reserved for future use’

AccessRange: Integer. Determines the range at which the tag may be accessed (Read, Write, Lock, etc.). The range at which the tag is inventoried is not affected.

Possible Values:

Value	Description
1	‘Normal_Range.’ The tag responds to access operations at the maximum range supported by the environment.
2	Short_Range. The tag only responds to access operations from a short range.
0,3-255	Reserved for future use

Persistence: Integer. Determines how long the changes made to the QT configuration with this OpSpec remain in effect.

Possible Values:

Value	Description
1	‘Temporary.’ The changes made by this command only last until the tag is powered down, at which time the previous configuration is restored.
2	‘Permanent.’ The changes made by this command are stored permanently to nonvolatile memory.
0,3-255	Reserved for future use

Note: Custom Extension Point List: List of <Impinj Custom Parameters> [optional]

4.3.22 ImpinjSetQTConfigOpSpecResult Parameter

This custom parameter is the result of an *ImpinjSetQTConfig* OpSpec.

LLRP Dependencies

This custom parameter has no LLRP dependencies.

Allowable Extension Points

- *AccessCommandOpSpecResult* choice parameter.

Definition

Table 4.35 ImpinjSetQTConfigOpSpecResult Parameter

ImpinjSetQTConfigOpSpecResult Parameter

OpSpecID: Unsigned Short Integer.

Result: Integer.

Custom Extension Point List: List of *<Impinj Custom Parameters>* [optional]

Possible Values:

Value	Description
0	‘Success’
1	‘Insufficient power to perform QT write operation’
2	‘Non-specific tag error’
3	‘No response from tag’
4	‘Non-specific Reader error’
5	‘Incorrect password error’

4.3.23 ImpinjGetQTConfig Parameter

Use this custom parameter to retrieve the OpSpec QT Technology (TM) configuration on Impinj Monza 4QT tags . For more information about the meaning of the fields within this parameter, and the use cases for this technology, refer to the Impinj Monza 4QT datasheet.

LLRP Dependencies

This custom parameter has no LLRP dependencies.

Allowable Extension Points

- *AccessCommandOpSpec* choice parameter.

Definition**Table 4.36 ImpinjGetQTConfig Parameter**

ImpinjGetQTConfig Parameter

OpSpecID: Unsigned Short Integer.

ImpinjGetQTConfig Parameter

AccessPassword: Unsigned Integer.

Custom Extension Point List: List of *<Impinj custom parameter>* [optional]

4.3.24 ImpinjGetQTConfigOpSpecResult Parameter

This custom parameter is the result of an *ImpinjGetQTConfig* OpSpec.

LLRP Dependencies

This custom parameter has no LLRP dependencies.

Allowable Extension Points

- AccessCommandOpSpecResult choice parameter.

Definition

Table 4.37 ImpinjGetQTConfigOpSpecResult Parameter

ImpinjGetQTConfigOpSpecResult Parameter

OpSpecID: Unsigned Short Integer.

Result: Integer.

Possible Values:

Value	Description
0	‘Success’
1	‘Non-specific tag error’
2	‘No response from tag’
3	‘Non-specific Reader error’
4	‘Incorrect password error’

DataProfile: Integer. Determines which data profile is exposed by the tag.

Possible Values:

Value	Description
0	‘Unknown’
1	‘Private’ The tag exposes its private data profile.
2	‘Public’ The tag exposes its public data profile.
3-255	Reserved for future use

AccessRange: Integer. Determines the range at which the tag may be accessed (Read, Write, Lock, etc.). The range at which the tag is inventoried is not affected.

Possible Values:

Value	Description
0	‘Unknown’.
1	‘Normal_Range’. The tag responds to access operations at the maximum range supported by the environment.
2	‘Short_Range’. The tag only responds to access operations from a short range.
3-255	Reserved for future use

Note: Custom Extension Point List: List of *<Impinj Custom Parameters>* [optional]

4.3.25 ImpinjMarginRead Parameter

Use this custom parameter to perform a MarginRead on Impinj Monza tags that support this feature. Currently, Monza R6, R6-P and S6-C support MarginRead. The MarginRead command can be used to confirm data integrity on Monza tag chips with Integra. This command allows a reader to explicitly verify that the non-volatile memory (NVM) in the tag chip is not weakly written, guaranteeing a minimum margin on NVM. It can be used for quality control to ensure data integrity and for failure analysis.

The `AccessPassword` field is the password required to move the tag into the secured state if needed. Unlike most other Access commands, Margin Read can be performed at the individual bit level. The `BitPointer` and `BitLength` fields are for the starting bit address and number of bits to check, respectively.

For more information about the mapping of the fields within this parameter, refer to the relevant Impinj tag datasheet.

LLRP Dependencies

This custom parameter has no LLRP dependencies.

Allowable Extension Points

- *AccessCommandOpSpec* choice parameter.

Definition

Table 4.38 ImpinjMarginRead Parameter

ImpinjMarginRead Parameter

OpSpecID: Unsigned Short Integer.

AccessPassword: Unsigned Integer.

MB: Integer. The memory bank on which to perform MarginRead

BitPointer: Unsigned Short Integer. The starting bit address in the memory bank at which to start the MarginRead

BitLength: Unsigned Byte. The number of bits starting at the `BitPointer` for which to perform MarginRead

Mask: Unsigned Short Integer Array. Specifies the bits in the specified memory on which to perform MarginRead

Custom Extension Point List: List of *<Impinj custom parameter>* [optional]

4.3.26 ImpinjMarginReadOpSpecResult Parameter

This custom parameter is the result of an *ImpinjMarginRead* OpSpec.

LLRP Dependencies

This custom parameter has no LLRP dependencies.

Allowable Extension Points

- AccessCommandOpSpecResult choice parameter.

Definition**Table 4.39 ImpinjMarginReadOpSpecResult Parameter**

<i>ImpinjMarginReadOpSpecResult</i> Parameter	
<i>OpSpecID</i> : Unsigned Short Integer.	
<i>Result</i> : Unsigned Byte.	
Possible Values:	
Value	Description
0	‘Success’
1	‘Failure’
2	‘Insufficient power’
3	‘Non-specific Tag error’
4	‘No response from tag’
5	‘Non-specific Reader error’
6	‘Incorrect password error’
7	‘Tag Memory Overrun error’
8	‘Tag Memory Locked error’

Note: Custom Extension Point List: List of *<Impinj Custom Parameters>* [optional]

4.3.27 ImpinjTagReportContentSelector Parameter

Use this custom parameter to configure additional parameters that are reported via the *TagReport-Data* parameter. Each optional parameter individually enables or configures a particular feature. Note that, because of how the *ROReportSpec* parameter is handled (described in section 3.1.17), if the optional parameter used to control a particular feature is absent, the feature is considered disabled. See the documentation for the actual parameters for full feature descriptions.

LLRP Dependencies

This custom parameter has no LLRP dependencies.

Allowable Extension Points

- *ROReportSpec* parameter.

Definition

Table 4.40 ImpinjTagReportContentSelector Parameter

ImpinjTagReportContentSelector Parameter

ImpinjEnableSerializedTID: <ImpinjEnableSerializedTID parameter> [optional]

ImpinjEnableRFPhaseAngle: <ImpinjEnableRFPhaseAngle parameter> [optional]

ImpinjEnablePeakRSSI: <ImpinjEnablePeakRSSI parameter> [optional]

ImpinjEnableGPSCoordinates: <ImpinjEnableGPSCoordinates parameter> [optional]

ImpinjEnableOptimizedRead: <ImpinjEnableOptimizedRead parameter> [optional]

ImpinjEnableRFDopplerFrequency: <ImpinjEnableRFDopplerFrequency parameter> [optional]

Custom Extension Point List: List of <Impinj custom parameter> [optional]

4.3.28 ImpinjEnableSerializedTID Parameter

Use this custom parameter to configure the Impinj Serialized TID feature. For tags that support this feature, when it is enabled, the *TagReportData* in the RO_ACCESS_REPORT will contain an *ImpinjSerializedTID* parameter that reports the tag TID. For more information about the *ImpinjSerializedTID* parameter and the associated “ImpinjTIDParity” parameter, see sections 4.3.34 and 4.3.35.

Some tags may not be reported when you use Serialized TID reporting and Monza4-QT tags with both public and short range modes. For more information, see section 5.1 **Speedway Serialized TID Reporting and Monza4 Tag**. Serialized TID reporting is optimized for Impinj tags and may result in reduced tag read rates when used with non-Impinj tags. Further note that Serialized TID reporting will not work for non-Impinj tags with TID memory size less than 96 bits.

LLRP Dependencies

This custom parameter has no LLRP dependencies.

Allowable Extension Points

- None. Extension points are included in the *ImpinjTagReportContentSelector* parameter.

Definition

Table 4.41 ImpinjEnableSerializedTID Parameter

ImpinjEnableSerializedTID Parameter

SerializedTIDMode: Unsigned Short Integer.

Custom Extension Point List: List of *<Impinj Custom Parameters>* [optional]

Possible Values:

Value	Description
0	‘Disabled’ (default)
1	‘Enabled’
2-65535	Reserved for future use

4.3.29 ImpinjEnableRFPhaseAngle Parameter

Use this custom parameter to configure the *ImpinjRFPhaseAngle* feature. When enabled, the *TagReportData* in the RO_ACCESS_REPORT will contain an *ImpinjRFPhaseAngle* parameter that reports the tag’s RF Phase Angle. For more information about the *ImpinjRFPhaseAngle* parameter, see section 4.3.36.

LLRP Dependencies

This custom parameter has no LLRP dependencies.

Allowable Extension Points

- None. Extension points are included in the *ImpinjTagReportContentSelector* parameter.

Definition

Table 4.42 ImpinjEnableRFPhaseAngle Parameter

ImpinjEnableRFPhaseAngle Parameter

RFPhaseAngleMode: Unsigned Short Integer.**Custom Extension Point List**: List of *<Impinj Custom Parameters>* [optional]

Possible Values:

Value	Description
0	‘Disabled’ (default)
1	‘Enabled’
2-65535	Reserved for future use

4.3.30 ImpinjEnablePeakRSSI Parameter

Use this custom parameter to configure the *ImpinjPeakRSSI* feature. When enabled, the *TagReportData* in the RO_ACCESS_REPORT will contain an *ImpinjPeakRSSI* parameter that reports the peak RSSI for the tag. For more information about the *ImpinjPeakRSSI* parameter, see section 4.3.37.

LLRP Dependencies

This custom parameter has no LLRP dependencies.

Allowable Extension Points

- None. Extension points are included in the *ImpinjTagReportContentSelector* parameter.

Definition**Table 4.43 ImpinjEnablePeakRSSI Parameter**

ImpinjEnablePeakRSSI Parameter

PeakRSSIMode: Unsigned Short Integer.**Custom Extension Point List**: List of *<Impinj Custom Parameters>* [optional]

Possible Values:

Value	Description
0	‘Disabled’ (default)
1	‘Enabled’
2-65535	Reserved for future use

4.3.31 ImpinjEnableGPSCoordinates Parameter

Use this custom parameter to configure the *ImpinjGPSCoordinates* feature. If enabled, and if the GPS receiver has acquired a location fix, the *TagReportData* in the RO_ACCESS_REPORT will contain an *ImpinjGPSCoordinates* parameter. For more information about *ImpinjGPSCoordinates*, see section 4.3.38.

LLRP Dependencies

This custom parameter has no LLRP dependencies.

Allowable Extension Points

- None. Extensions points are included in the *ImpinjTagReportContentSelector* parameter.

Definition

Table 4.44 ImpinjEnableGPSCoordinates Parameter

<i>ImpinjEnableGPSCoordinates</i> Parameter	
<i>GPSCoordinatesMode</i> : Unsigned Short Integer.	
Custom Extension Point List: List of <i><Impinj Custom Parameters></i> [optional]	
Possible Values:	
Value	Description
0	‘Disabled’ (default)
1	‘Enabled’
2-65535	Reserved for future use

4.3.32 ImpinjEnableOptimizedRead Parameter

Use this custom parameter to configure the *ImpinjOptimizedRead* feature. *ImpinjOptimizedRead* allows the reporting of additional tag memory content during an inventory without the use of *AccessSpecs*. The Reader optimizes the execution of these reads for improved overall inventory performance.

The memory bank and location of the reads are specified using the *C1G2Read* parameter, just as they are when using *AccessSpecs*. Similarly, the results of the reads are reported using the *C1G2ReadOpSpecResult* parameter in the *TagReportData* parameter. Reads issued using the *ImpinjOptimizedRead* feature are reported the same as reads using *AccessSpecs* and thus users should ensure that the *OpSpecIDs* used for the operations are unique.

Users may configure up to two optimized read operations. One departure from the *AccessSpec* model is that optimized reads are always attempted, even if the first read fails. So, for example, if the first read results in a failure due to a memory overrun, the second read will still be attempted. Therefore, if there are two optimized reads configured, it is guaranteed that there will be two *C1G2ReadOpSpecResult* parameters in each *TagReportData* parameter generated by the Reader.

Because this feature was designed for optimized inventory performance, any retries configured via the *ImpinjOpSpecRetryCount* parameter do not apply. For more information about the *ImpinjOpSpecRetryCount*, see section 4.3.16.

LLRP Dependencies

When the *ImpinjOptimizedRead* feature is enabled, *AccessSpecs* may still be configured and executed. The results of the *AccessSpec* execution are reported in the *TagReportData* parameter, after the results of the optimized read. Users should enable the reporting of the *AccessSpecID* parameter, and use unique *OpSpecIDs* to correlate the results to the actions.

Allowable Extension Points

- None. Extension points are included in *ImpinjTagReportContentSelector* parameter.

Definition

Table 4.45 ImpinjEnableOptimizedRead Parameter

ImpinjEnableOptimizedRead Parameter

OptimizedReadMode: Unsigned Short Integer.

Custom Extension Point List: List of *<Impinj Custom Parameters>* [optional]

Possible Values:

Value	Description
0	‘Disabled’ (default)
1	‘Enabled’
2-65535	Reserved for future use

Note: *C1G2Read*: List of <C1G2Read parameters> [optional, maximum of 2]

4.3.33 ImpinjEnableRFDopplerFrequency Parameter

Use this custom parameter to configure the *ImpinjRFDopplerFrequency* feature. If enabled, the *TagReportData* in the RO_ACCESS_REPORT will contain an *ImpinjRFDopplerFrequency* parameter that reports the estimated RF Carrier Doppler shift. For more information about ImpinjRFDopplerFrequency*, see section 4.3.39.

LLRP Dependencies

This custom parameter has no LLRP dependencies.

Allowable Extension Points

- None. Extension points are included in *ImpinjTagReportContentSelector* parameter.

Definition

Table 4.46 ImpinjEnableRFDopplerFrequency Parameter

***ImpinjEnableRFDopplerFrequency* Parameter**

RFDopplerFrequencyMode: Unsigned Short Integer.

Custom Extension Point List: List of <*Impinj Custom Parameters*> [optional]

Possible Values:

Value	Description
0	‘Disabled’ (default)
1	‘Enabled’

Value	Description
2-65535	Reserved for future use

4.3.34 ImpinjSerializedTID Parameter

Use this custom parameter to report the contents of the tag TID memory bank for Monza tags that support the *ImpinjSerializedTID* feature (Monza 4, 5 and 6) Refer to the Monza datasheets to determine which tags support this feature.

For Monza 6 tags, if a TID parity error is detected the ImpinjTIDParity sub-parameter will be included indicating the error condition.

This parameter will return the TID for tags that do not support this feature but at a severely reduced rate since SerializedTID reporting is optimized for Impinj tags.

LLRP Dependencies

This custom parameter has no LLRP dependencies.

Allowable Extension Points

- *TagReportData* parameter.

Definition

Table 4.47 ImpinjSerializedTID Parameter

<i>ImpinjSerializedTID</i> Parameter
<i>TID</i> : Unsigned Short Array. The contents of the tag TID memory bank.
<i>ImpinjTIDParity</i> : <ImpinjTIDParity parameter> [optional]
Custom Extension Point List : List of <Impinj custom parameter> [optional]

4.3.35 ImpinjTIDParity Parameter

This custom parameter provides the status of TID Parity Check for Monza 6 tags. The parameter will be included in the ImpinjSerializedTID parameter only if a TID parity error is detected.

LLRP Dependencies

This custom parameter has no LLRP dependencies.

Allowable Extension Points

- *ImpinjSerializedTID* parameter.

Definition

Table 4.48 ImpinjTIDParity Parameter

ImpinjTIDParity Parameter

ParityError Boolean - When true, TID parity error has been detected

Custom Extension Point List: List of <Impinj custom parameter> [optional]

4.3.36 ImpinjRFPhaseAngle Parameter

Use this custom parameter to report the RF phase angle of a singulated tag during normal inventory (EPC backscatter). The *PhaseAngle* field is a scaled, 12-bit value, with **0** representing 0 degrees (0 radians), and **4096** representing 360 degrees (2 radians). For example, if the reported phase angle is 1985, the corresponding angle can be calculated as:

$$1985 \times 360^\circ / 4096 = 174.46^\circ \text{ or } 1985 \times 2\pi \text{rad} / 4096 = 3.04 \text{rad}$$

If report accumulation is enabled via the *ROReportSpec* for the currently executing *ROSpec*, the RF phase angle that is reported via this parameter is the phase angle of the last tag singulation. No accumulation of phase data is available.

LLRP Dependencies

This custom parameter has no LLRP dependencies.

Allowable Extension Points

- *TagReportData* parameter.

Definition

Table 4.49 ImpinjRFPhaseAngle Parameter

ImpinjRFPhaseAngle Parameter

PhaseAngle: Unsigned Short Integer. The scaled phase angle of the tag response during normal inventory. See the Description for a calculation example.

Custom Extension Point List: List of *<Impinj custom parameter>* [optional]

4.3.37 ImpinjPeakRSSI Parameter

Report the peak RSSI of the tag during the current reporting interval with this custom parameter. Standard LLRP reports peak RSSI in whole dBm units. This parameter provides the same RSSI value in more precise dBm x 100 units. Applications requiring precise RSSI calculations may enable this parameter instead of (or in addition to) the PeakRSSI LLRP parameter.

LLRP Dependencies

This custom parameter has no LLRP dependencies.

Allowable Extension Points

- *TagReportData* parameter.

Definition

Table 4.50 ImpinjPeakRSSI Parameter

ImpinjPeakRSSI Parameter

RSSI: Signed Short Integer. The peak received power of the EPC backscatter in dBm x 100.

Custom Extension Point List: List of *<Impinj custom parameter>* [optional]

4.3.38 ImpinjGPSCoordinates Parameter

Use this custom parameter to report the GPS coordinates of the Reader when the tag was singulated . If the GPS receiver has not acquired a location fix, this parameter will not be included in the report. If LLRP accumulation is enabled, the reported coordinates correspond to the last

known Reader location when the tag was singulated. The GPS coordinates are reported in signed micro-degrees, so a minor conversion is required to convert the reported value to GPS coordinate formats that are typically used.

For example, if the reported GPS coordinates are 41948240 latitude and -87655562 longitude, this would correspond to:

(41.948240, -87.655562) or (41°56'53.664"N, 87°39'20.023"W)

LLRP Dependencies

This custom parameter has no LLRP dependencies.

Allowable Extension Points

- *TagReportData* parameter.

Definition

Table 4.51 ImpinjGPSCoordinates Parameter

ImpinjGPSCoordinates Parameter

Latitude: Signed Integer. Latitude coordinates in micro-degrees.

Longitude: Signed Integer. Longitude coordinates in micro-degrees.

Custom Extension Point List: List of <Impinj custom parameter> [optional]

4.3.39 ImpinjRFDopplerFrequency Parameter

Use this custom parameter to report the estimated RF carrier Doppler frequency shift. The estimate is made over the duration of each tag EPC and has units of Hz. This 16-bit parameter has twelve integer bits and four fractional bits. Accuracy and precision depend on Reader mode and measurement length.

If report accumulation is enabled via the *ROReportSpec* for the currently executing ROSpec, the RF Doppler frequency that is reported by this parameter is the Doppler frequency of the last tag singulation. No accumulation of Doppler frequency data is available.

LLRP Dependencies

This custom parameter has no LLRP dependencies.

Allowable Extension Points

- *TagReportData* parameter.

Definition

Table 4.52 ImpinjRFDopplerFrequency Parameter

ImpinjRFDopplerFrequency Parameter

DopplerFrequency: Signed Short Integer. RF carrier Doppler shift measured over EPC duration.

Custom Extension Point List: List of <Impinj custom parameter> [optional]

4.3.40 ImpinjLoopSpec Parameter

Use this custom parameter to allow the Reader to loop execution of AISpecs within an ROSpec. If it is included in the list of *SpecParameters* in a ROSpec, it must be the last *SpecParameter* present. There also must be at least one *AISpec* preceding the *ImpinjLoopSpec* parameter. If either condition is not met, the Reader will respond with an error.

LLRP Dependencies

This custom parameter overrides the end of a ROSpec. When the last AISpec completes execution, the first AISpec will be executed again until the ROSpec has been executed *LoopCount* iterations.

Allowable Extension Points

- *SpecParameter* parameter.

Definition

Table 4.53 ImpinjLoopSpec Parameter

ImpinjLoopSpec Parameter

LoopCount: Unsigned Integer. The number of times to loop execution of the AISpecs of the ROSpec (0 means unlimited).

Custom Extension Point List: List of <Impinj custom parameter> [optional]

4.3.41 ImpinjGPSNMEASentences Parameter

This custom parameter encapsulates the various NMEA (National Marine Electronic Association) sentences that are supported by the GPS device attached to the Reader. For more information about NMEA sentences, visit the NMEA website.

xArray/xSpan

This custom parameter is not supported by xArray or xSpan. This parameter will not be reported and any command that uses this parameter will be rejected.

LLRP Dependencies

This custom parameter has no LLRP dependencies.

Allowable Extension Points

- GET_READER_CONFIG_RESPONSE message.

Definition

Table 4.54 ImpinjGPSNMEASentences Parameter

ImpinjGPSNMEASentences Parameter

ImpinjGGASentence: <ImpinjGGASentence Parameter> [optional]

ImpinjRMCSentence: <ImpinjRMCSentence Parameter> [optional]

Custom Extension Point List: List of <Impinj custom parameter> [optional]

4.3.42 ImpinjGGASentence Parameter

This custom parameter contains the current GPS information of the Reader's location, as reported in NMEA GGA sentence format. If the GPS device has not acquired a location fix, the string is reported empty.

LLRP Dependencies

This custom parameter has no LLRP dependencies.

Allowable Extension Points

- None. Extension points are included in *ImpinjGPSNMEASentences* parameter.

Definition

Table 4.55 ImpinjGGASentence Parameter

ImpinjGGASentence Parameter

GGASentence: UTF-8 String

Custom Extension Point List: List of <Impinj custom parameter> [optional]

4.3.43 ImpinjRMCSentence Parameter

This custom parameter contains the current GPS information of the Reader's location as reported in NMEA RMC sentence format. If the GPS device has not acquired a location fix, the string is reported empty.

LLRP Dependencies

This custom parameter has no LLRP dependencies.

Allowable Extension Points

- None. Extension points are included in *ImpinjGPSNMEASentences* parameter.

Definition

Table 4.56 ImpinjRMCSentence Parameter

ImpinjRMCSentence Parameter

RMCSentence: UTF-8 String**Custom Extension Point List**: List of <Impinj custom parameter> [optional]

4.3.44 ImpinjIntelligentAntennaManagement Parameter

Readers implement the Intelligent Antenna Management feature whereby the Reader looks for the presence of tags on an antenna before proceeding to inventory tags on it. This ensures that no time is wasted on antennas that might not have tags in their field of view. However, in some applications it may be desirable for the Reader to attempt to singulate tags on all selected antennas on a regular basis. This custom parameter allows the user to enable or disable the Intelligent Antenna Management feature.

Note: Enabling Intelligent Antenna Management on xSpan or xArray Gateways may result in reduced performance.

LLRP Dependencies

Intelligent Antenna Management is integral to the Low Duty Cycle feature implemented by Speedway Readers. If Low Duty Cycle is enabled on Speedway Readers, the Intelligent Antenna Management feature will be temporarily enabled.

Allowable Extension Points

- None. Extension points are included in *ImpinjIntelligentAntennaManagement* parameter.

Definition

Table 4.57 ImpinjIntelligentAntennaManagement Parameter

ImpinjIntelligentAntennaManagement Parameter

***ManagementEnabled*: 1-bit.** If set to 1, feature is enabled (default on Speedway Readers)
If set to 0, feature is disabled (default on xSpan and xArray Gateways)

Custom Extension Point List: List of <Impinj custom parameter> [optional]

4.3.45 ImpinjHubConfiguration

This custom parameter displays connected Antenna Hubs. Hubs are identified with IDs 1-4 and in normal operation will display **No_Fault**. If a GPIO Adapter port is not connected to a Hub, the corresponding Hub ID displays **Disconnected**.

LLRP Dependencies

If exception events are enabled when an Antenna Hub fault is detected or cleared, an *ImpinjRM-CSentence* parameter will be sent in a *ReaderExceptionEvent* parameter.

Allowable Extension Points

- GET_READER_CONFIG_RESPONSE message.

Definition

Table 4.58 ImpinjHubConfiguration Parameter

ImpinjHubConfiguration Parameter

HubID: Unsigned Short Integer.

Connected: Unsigned Short Integer.

Fault: Unsigned Short Integer.

Custom Extension Point List: List of *<Impinj Custom Parameters>* [optional]

Possible Values:

Value	Description
0	‘Unknown’
1	‘Disconnected’
2	‘Connected’

Possible Values:

Value	Description
0	‘No_Fault’
1	‘RF_Power’

Value	Description
2	'RF_Power_On_Hub_1'
3	'RF_Power_On_Hub_2'
4	'RF_Power_On_Hub_3'
5	'RF_Power_On_Hub_4'
6	'No_Init'
7	'Serial_Overflow'
8	'Disconnected'

4.3.46 ImpinjInventoryConfiguration Parameter

Use this parameter to configure two Impinj-specific inventory related configuration parameters.

EnableAntDwellTimeLimit enables the antenna dwell time restriction (250ms) in Single Target Inventory Search Modes. Set by default, it can be reset to disable this dwell time restriction.

EnableSelectGapClose is valid only if Inventory Search Mode is set to Dual Target with Reset. Reset by default, it can be set in difficult RF environments to improve the reliability of the transition of tags from state B to state A by following the Gen2 Select command with a simplified inventory to 'mop up' tags that may not have seen the Gen2 Select command.

This parameter may be specified either part of the default Reader configuration (via a SET_READER_CONFIG message), or as part of individual AISpecs within a ROSpec (via an ADD_ROSPEC message). For any AISpec, each enabled antenna must be configured to use the same configuration. Mismatched antennas will result in an error reported by the Reader.

Note: This custom parameter requires expert knowledge and is intended for Impinj internal use only.

LLRP Dependencies

This custom parameter has no LLRP dependencies.

Allowable Extension Points

- *C1G2InventoryCommand* parameter

Definition

Table 4.59 ImpinjInventoryConfiguration Parameter

ImpinjInventoryConfiguration Parameter

EnableAntDwellTimeLimit Boolean - When true, limit antenna dwell time to 250ms in Single Target Inventory Search Modes.

EnableSelectGapClose Boolean - When true, and in Dual Target with Reset Search Mode, run a simplified inventory following the Gen2 Select command to improve the reliability of transition of tags from State B to State A.

Custom Extension Point List: List of *<Impinj custom parameter>* [optional]

4.3.47 ImpinjRFPowerSweep Parameter

Use this parameter to configure Impinj-specific RF Power Sweep operation.

When this feature is enabled, the reader performs each inventory operation - transitioning tags from one state to another (A to B or B to A) - at multiple power levels starting at or above with the MinimumPowerLevel, in increments of PowerLevelStepSize, ending with the maximum power level specified for the antenna.

For example, if the MinimumPowerLevel is specified as 63 (25.5 dBm) and the maximum power level for the antenna is configured to be 81 (30 dBm), with PowerLevelStepSize set to 8 (2 dBm), each inventory operation will be performed at power levels 65 (26 dBm), 73 (28 dBm), and 81 (30 dBm), in that order.

This parameter may be specified either part of the default Reader configuration (via a SET_READER_CONFIG message), or as part of individual AISpecs within a ROSpec (via an ADD_ROSPEC message). For any AISpec, each enabled antenna must be configured to use the same configuration. Mismatched antennas will result in an error reported by the Reader.

Note: This custom parameter requires expert knowledge and is intended for Impinj internal use only.

LLRP Dependencies

This custom parameter has no LLRP dependencies.

Allowable Extension Points

- *C1G2InventoryCommand* parameter

Definition

Table 4.60 ImpinjRFPowerSweep Parameter

ImpinjRFPowerSweep Parameter

EnableRFPowerSweep Boolean - When true, enables RF Power Sweep operation.

MinimumPowerLevel Unsigned Short Integer - **Transmit Power Level above which** to start the RF Power Sweep, expressed as an index into the TransmitPowerTable.
Ignored when EnablePowerSweep is false (i.e. when disabling RF Power Sweep)

PowerLevelStepSize Unsigned Short Integer - **Transmit Power Level step size by** which to sweep power. Specified as power level index. Ignored when EnablePowerSweep is false (i.e. when disabling RF Power Sweep)

Custom Extension Point List: List of *<Impinj custom parameter>* [optional]

Note: Custom Extension Point List: List of *<Impinj custom parameters>* [optional]

4.3.48 xArray/xSpan Parameters

ImpinjTiltConfiguration Parameter

This parameter is used to get the Tilt Sensor readings. It is only supported by xArray (not xSpan).

Note: The tilt sensor state is not updated when the reader is performing inventory operations. Therefore, you should avoid relying on tilt sensor readings while performing an inventory.

LLRP Dependencies

This parameter is returned in the GET_READER_CONFIG_RESPONSE if it is specified in an *ImpinjRequestedData* parameter supplied to the GET_READER_CONFIG command. This parameter cannot be used in a SET_READER_CONFIG command.

Allowable Extension Points

- GET_READER_CONFIG_RESPONSE message

Definition

Table 4.61 - ImpinjTiltConfiguration Parameter

ImpinjTiltConfiguration Parameter

XAxis: Integer - X-Axis orientation in degrees. Possible Values: -90 - +90

YAxis: Integer - Y-Axis orientation in degrees. Possible Values: -90 - +90

ZAxis: Integer - Z-Axis orientation in degrees. Possible Values: -90 - +90

Custom Extension Point List: List of *<Custom Parameters>* [optional]

ImpinjBeaconConfiguration Parameter

This parameter is used to get or set the Beacon state of the xArray or xSpan Gateway. The beacon is a flashing LED on the face of the Gateway that is used to visually identify an Gateway. When the beacon is **ON**, the LED is flashing. When the beacon is **OFF**, the beacon LED is not flashing.

Note: Getting or setting the Beacon state is not allowed when the reader is currently performing inventory operations.

LLRP Dependencies

This parameter is returned in the GET_READER_CONFIG_RESPONSE if it is specified in an *ImpinjRequestedData* parameter supplied to the GET_READER_CONFIG command. If the beacon has been activated and is currently set to **ON**, the “BeaconDurationSeconds” field will report the configured duration . If the beacon is set to **OFF**, the “BeaconDurationSeconds” field will report zero.

This parameter can be used in a SET_READER_CONFIG command to change the state of the Gateway beacon. When it is used to turn **ON** the beacon, the BeaconDurationSeconds field is used to set the amount of time that the Beacon will be set to “ON” before it is automatically returned to the **OFF** state. Note that a *BeaconDurationSeconds* value of 0 is rejected if *BeaconState* is **ON**.

Allowable Extension Points

- GET_READER_CONFIG_RESPONSE message
- SET_READER_CONFIG command

Definition

Table 4.62 - ImpinjBeaconConfiguration Parameter

ImpinjBeaconConfiguration Parameter

BeaconState: Boolean - If **TRUE**, then the Beacon is configured to **ON**. If **FALSE**, then the Beacon is configured to **OFF**.

BeaconDurationSeconds: Unsigned Long Integer - Duration of the beacon in seconds when configured to **ON**.

Custom Extension Point List: List of *<Custom Parameters>* [optional]

ImpinjLocationConfig Parameter

This parameter is used to get or set the configuration of the Location Role of the xArray Gateway device.

LLRP Dependencies

This parameter is returned in the GET_READER_CONFIG_RESPONSE when requested by specifying a *RequestedData* value of 2013, Impinj_Location_Configuration, in an *ImpinjRequestedData* parameter supplied to the GET_READER_CONFIG command. This parameter can be sent in a SET_READER_CONFIG command or in an ImpinjLISpec to configure xArray Location Role operation.

Allowable Extension Points

- GET_READER_CONFIG_RESPONSE message
- SET_READER_CONFIG command
- *ImpinjLISpec* parameter

Definition

Table 4.63 - ImpinjLocationConfig Parameter

ImpinjLocationConfig Parameter

ComputeWindowSeconds: Unsigned Short Integer - Duration of the smoothing window in seconds over which tag location estimates are computed.

TagAgeIntervalSeconds: Unsigned Short Integer - Time in seconds for which the tag must not be read (seen) before it is considered to have exited from the field of view.

UpdateIntervalSeconds: Unsigned Short Integer - Periodic interval in seconds after which tag location estimates are computed.

ImpinjDisabledAntennas: *<ImpinjDisabledAntennas Parameter>* [optional] to provide a list of antennas the user wishes to exclude from use by the tag location algorithm. A maximum of 24 antennas may be excluded.

Custom Extension Point List: List of *<Custom Parameters>* [optional]

ImpinjDisabledAntennas Parameter

This parameter is used to specify a list of antennas to be excluded from use by an Impinj specific feature. With the Location Role, it can be used to specify compromised antennas that should not be used by the Location algorithm.

LLRP Dependencies This custom parameter has not LLRP dependencies.

Allowable Extension Points

- *ImpinjLocationConfig* parameter

Definition**Table 4.64 - ImpinjDisabledAntennas Parameter**

***ImpinjDisabledAntennas* Parameter**

AntennaIDs: Unsigned Short Array - List of antennas to be excluded from use by an Impinj specific feature.

Custom Extension Point List: List of <*Custom Parameters*> [optional]

ImpinjC1G2LocationConfig Parameter

This parameter is used to get or set the Gen2 configuration of the Location Role of the xArray Gateway device.

LLRP Dependencies

This parameter is returned in the GET_READER_CONFIG_RESPONSE when requested by specifying a *RequestedData* value of 2013, Impinj_Location_Configuration, in an *ImpinjRequestedData* parameter supplied to the GET_READER_CONFIG command. This parameter can be sent in a SET_READER_CONFIG command or in an ImpinjLISpec to configure xArray Location Role operation.

Allowable Extension Points

- GET_READER_CONFIG_RESPONSE message
- SET_READER_CONFIG command
- *ImpinjLISpec* parameter

Definition**Table 4.65 - ImpinjC1G2LocationConfig Parameter**

***ImpinjC1G2LocationConfig* Parameter**

ModeIndex: Unsigned Short Integer - The Gen2 mode used by the Location Role

Session: Unsigned 2-bit Integer - The Gen2 session used by the Location Role

C1G2Filter: List of <*C1G2Filter Parameters*>[optional] to filter tags addressed by the Location Role

ImpinjTransmitPower: <*ImpinjTransmitPower Parameter*> [optional] to specify the transmit power used by the Location Role. If not specified, the Location Role uses the maximum transmit power allowed for the region of operation.

Custom Extension Point List: List of <*Custom Parameters*> [optional]

ImpinjTransmitPower Parameter

This parameter is used to specify the Transmit Power to be used by an Impinj specific feature. With the Location and Direction Roles, it can be used to specify the transmit power to be used for all antennas.

LLRP Dependencies This custom parameter has not LLRP dependencies.

Allowable Extension Points

- *ImpinjC1G2LocationConfig* parameter
- *ImpinjC1G2DirectionConfig* parameter

Definition

Table 4.66 - ImpinjTransmitPower Parameter

ImpinjTransmitPower Parameter

TransmitPower: Unsigned Short - The Transmit Power (index) to use for an Impinj specific feature. Usage is the same as for TransmitPower in the RFTransmitter parameter

Custom Extension Point List: List of *<Custom Parameters>* [optional]

ImpinjLocationReporting Parameter

This parameter is used to get or set the configuration of reporting of events in during Location Role operation.

LLRP Dependencies

This parameter is returned in the GET_READER_CONFIG_RESPONSE when requested by specifying a *RequestedData* value of 2013, Impinj_Location_Configuration, in an *ImpinjRequestedData* parameter supplied to the GET_READER_CONFIG command. This parameter can be sent in a SET_READER_CONFIG command or in an ImpinjLISpec to configure xArray Location Role reporting.

Allowable Extension Points

- GET_READER_CONFIG_RESPONSE message
- SET_READER_CONFIG command
- *ImpinjLISpec* parameter

Definition

Table 4.67 - ImpinjLocationReporting Parameter

ImpinjLocationReporting Parameter

EnableUpdateReport: Boolean - When true, reports are generated immediately after the tag location estimates are computed at the interval specified by the *UpdateIntervalSeconds* field of the *ImpinjLocationConfig* parameter.

EnableEntryReport: Boolean - When true, a report is generated when a tag enters the field of view (is seen for the first time).

EnableExitReport: Boolean - When true, a report is generated when a tag exits the field of view, as qualified by the *TagAgeIntervalSeconds* field of the *ImpinjLocationConfig* parameter.

EnableDiagnosticReport: Boolean - When true, diagnostic reports are generated.

Custom Extension Point List: List of <Custom Parameters> [optional]

ImpinjDirectionSectors Parameter

This parameter is used to set the active sectors used by the Direction Role of the xArray or xSpan Gateway device.

LLRP Dependencies

This parameter must be sent in an ImpinjDISpec to select the active sectors for the xArray or xSpan Direction Role operation.

Allowable Extension Points

- ImpinjDISpec parameter

Definition

Table 4.68 - ImpinjDirectionSectors Parameter

ImpinjDirectionSectors Parameter

EnabledSectorIDs: Unsigned Short Array - List of sectors to enable. The sectors are numbered 2 through 9. Selection of adjacent sectors is not permitted (sector 9 and sector 2 are considered adjacent). The list must contain a minimum of two sectors but no more than four.

ImpinjDirectionConfig Parameter

This parameter is used to get or set the configuration of the Direction Role of the xArray or xSpan Gateway device.

LLRP Dependencies

This parameter is returned in the GET_READER_CONFIG_RESPONSE when requested by specifying a *RequestedData* value of xxxx, Impinj_Direction_Configuration, in an *ImpinjRequestedData* parameter supplied to the GET_READER_CONFIG command. This parameter can be sent in a SET_READER_CONFIG command or in an ImpinjDISpec to configure xArray or xSpan Direction Role operation.

Allowable Extension Points

- GET_READER_CONFIG_RESPONSE message
- SET_READER_CONFIG command
- ImpinjDISpec parameter

Definition

Table 4.69 - ImpinjDirectionConfig Parameter

ImpinjDirectionConfig Parameter

TagAgeIntervalSeconds: Unsigned Short Integer - Time in seconds for which the tag must not be read (seen) before it is considered to have exited from the field of view. The default is 2 seconds.

UpdateIntervalSeconds: Unsigned Short Integer - Periodic interval in seconds after which (if enabled) tag direction update and diagnostic reports are sent. The default is 2 seconds.

FieldOfView: Enumeration - 'Wide' to use (outer) ring 4 or 'Narrow' to use (inner) ring 2. 'ReaderSelected' is the default, in which case the reader will select 'Narrow' if 2 sectors are enabled, otherwise 'Wide'.

ImpinjDirectionUserTagPopulationLimit: <*ImpinjDirectionUserTagPopulationLimit*> [optional].

Custom Extension Point List: List of <*Custom Parameters*> [optional]

ImpinjDirectionUserTagPopulationLimit Parameter

This parameter is used to get or set the User Population Limit parameter by the Direction Role of the xArray or xSpan Gateway device.

LLRP Dependencies

This custom parameter has no LLRP dependencies.

Allowable Extension Points

- ImpinjDirectionConfig parameter

Definition**Table 4.70 - ImpinjDirectionUserTagPopulationLimit Parameter**

***ImpinjDirectionUserTagPopulationLimit* Parameter**

UserTagPopulationLimit: Unsigned Short Integer - Number of tags in the field of view which when exceeded causes the TagPopulationStatus indicator to be set to ‘USER_OVERFLOW’. This can be used in applications that have a well defined expectation of how many tags will be present in the field of view at any given time. The default is 0 (zero) which disables any notion of a user specified limit.

ImpinjC1G2DirectionConfig Parameter

This parameter is used to get or set the Gen2 configuration of the Direction Role of the xArray or xSpan Gateway device.

LLRP Dependencies

This parameter is returned in the GET_READER_CONFIG_RESPONSE when requested by specifying a *RequestedData* value of 2013, Impinj_Location_Configuration, in an *ImpinjRequestedData* parameter supplied to the GET_READER_CONFIG command. This parameter can be sent in a SET_READER_CONFIG command or in an ImpinjDISpec to configure xArray or xSpan Direction Role operation.

Allowable Extension Points

- GET_READER_CONFIG_RESPONSE message
- SET_READER_CONFIG command
- *ImpinjDISpec* parameter

Definition**Table 4.71 - ImpinjC1G2DirectionConfig Parameter**

***ImpinjC1G2DirectionConfig* Parameter**

RFMode: Enumeration - The Gen2 RF mode used by the Direction Role. ‘HighSensitivity’ for difficult to reach tag populations or ‘HighPerformance’ for larger tag populations. ‘HighPerformance’ is the default.

ImpinjTransmitPower: *<ImpinjTransmitPower Parameter>* [optional] to specify the transmit power used by the Direction Role. If not specified, the Direction Role uses the maximum transmit power allowed for the region of operation.

ImpinjC1G2DirectionConfig Parameter

C1G2Filter: List of <*C1G2Filter Parameters*> [optional] to filter tags addressed by the Direction Role.

Custom Extension Point List: List of <*Custom Parameters*> [optional]

ImpinjDirectionReporting Parameter

This parameter is used to get or set the configuration of reporting of events during Direction Role operation.

LLRP Dependencies

This parameter is returned in the GET_READER_CONFIG_RESPONSE when requested by specifying a *RequestedData* value of 2013, *Impinj_Direction_Configuration*, in an *ImpinjRequestedData* parameter supplied to the GET_READER_CONFIG command. This parameter can be sent in a SET_READER_CONFIG command or in an *ImpinjDISpec* to configure xArray or xSpan Direction Role reporting.

Allowable Extension Points

- GET_READER_CONFIG_RESPONSE message
- SET_READER_CONFIG command
- *ImpinjDISpec* parameter

Definition

Table 4.72 - *ImpinjDirectionReporting* Parameter

ImpinjDirectionReporting Parameter

EnableUpdateReport: Boolean - When true, reports are generated at the interval specified by the *UpdateIntervalSeconds* field of the *ImpinjDirectionConfig* parameter.

EnableEntryReport: Boolean - When true, a report is generated when a tag enters the field of view (is seen for the first time).

EnableExitReport: Boolean - When true, a report is generated when a tag exits the field of view, as qualified by the *TagAgeIntervalSeconds* field of the *ImpinjDirectionConfig* parameter.

EnableDiagnosticReport: Boolean - When true, diagnostic reports are generated at the update interval.

DiagnosticReportLevel: Enumeration - ‘Off’ to exclude any diagnostics from reports. ‘Basic’ to include basic diagnostics in reports. ‘Extended’ to include extended diagnostic data in reports. ‘Debug’ to include debug data in reports. The default is ‘Off’.

Custom Extension Point List: List of <Custom Parameters> [optional]


ImpinjPlacementConfiguration Parameter

This parameter is used to get or set the mounting location of the xArray Gateway. The mounting location is specified in terms of three parameters - Height, Location and Orientation.


The Height of the xArray is specified relative to the average height of the tags in its field of view.

The Location is specified as an offset relative to customer-defined 'Store' X-Y coordinates.

The Orientation is specified as the orientation of the xArray X-Y coordinates relative to the 'Store' X-Y coordinates. The xArray coordinate system is defined by how the xArray is mounted, with the xAxis parallel to the xArray LEDs. Looking down from the xArray (mounted on a ceiling) the orientation is specified as an angle in degrees, positive angles in the counter-clockwise direction.

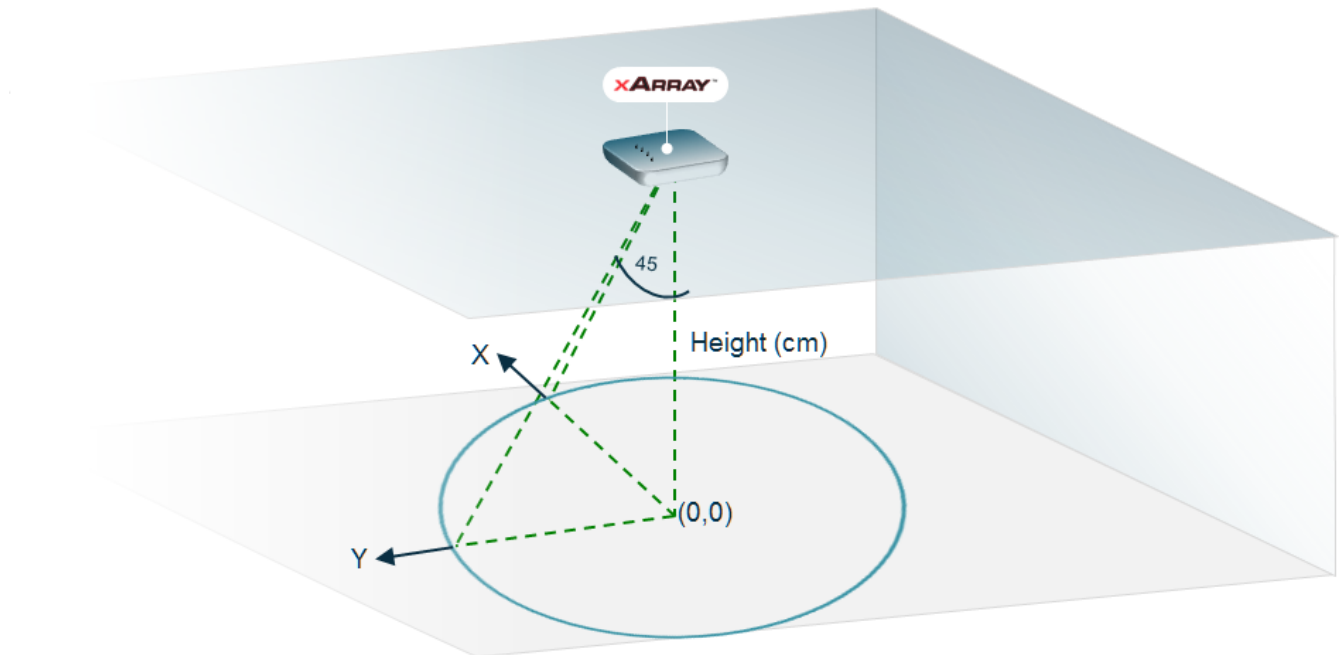

The following figure shows an example of how Location and Orientation would be specified for an example configuration.

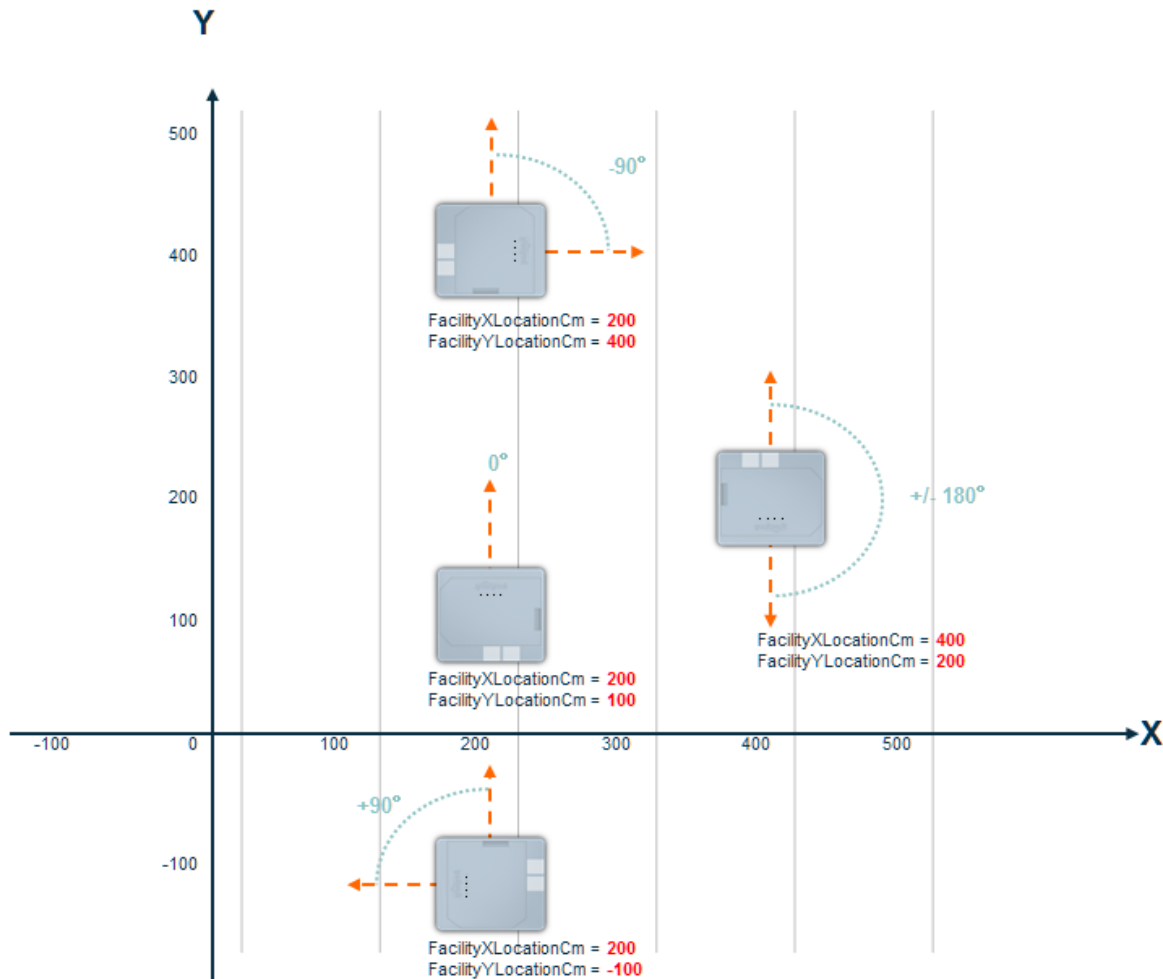

Note that this figure shows xArray placement as viewed from above.

LLRP Dependencies

This parameter can be sent in a SET_READER_CONFIG command to configure the xArray mounting location. This parameter is returned in the GET_READER_CONFIG_RESPONSE when requested by specifying a *RequestedData* value of 2013, *Impinj_Location_Configuration*, in an *ImpinjRequestedData* parameter supplied to the GET_READER_CONFIG command.

Allowable Extension Points

- GET_READER_CONFIG_RESPONSE message
- SET_READER_CONFIG command

Definition

Table 4.73 - ImpinjPlacementConfiguration Parameter

ImpinjPlacementConfiguration Parameter

HeightCm: Unsigned Short Integer - Height in centimeters with respect to the average tag height.

FacilityXLocationCm: Integer - The relative position of the xArray in centimeters within the facility. This is used by the xArray when computing location and might be useful for multi-xArray deployments.

FacilityYLocationCm: Integer - The relative position of the xArray in centimeters within the facility. This is used by the xArray when computing location and might be useful for multi-xArray deployments.

OrientationDegrees: Short Integer - The relative orientation of the xArray X-Y coordinates relative to the Store X-Y coordinates in degrees.

Custom Extension Point List: List of *<Custom Parameters>* [optional]

ImpinjPolarizationControl Parameter

This parameter is used to enable control of xArray or xSpan beam polarizations. Disabled by default, when enabled the Host can control individual beam polarizations using Antenna ID ranges at offsets specified by the ImpinjAntennaPolarizationCapability parameter returned as part of the GET_READER_CAPABILITIES_RESPONSE.

When enabled:

- SET_READER_CONFIG command will allow AntennaConfiguration parameters with the ‘polarized’ Antenna IDs
- GET_READER_CONFIG will return AntennaConfiguration for both ‘normal’ and ‘polarized’ Antenna IDs.
- AISpecs may specify ‘polarized’ Antenna IDs

See section 5.2 for details.

LLRP Dependencies

This parameter is returned in the GET_READER_CONFIG_RESPONSE when requested by specifying a *RequestedData* value of 2017, Impinj_PolarizationControl_Configuration, in an *ImpinjRequestedData* parameter supplied to the GET_READER_CONFIG command. This parameter can be sent in a SET_READER_CONFIG command to enable or disable Polarization Control

Allowable Extension Points

- GET_READER_CONFIG_RESPONSE message
- SET_READER_CONFIG command

Definition

Table 4.74 ImpinjPolarizationControl Parameter

***ImpinjPolarizationControl* Parameter**

PolarizationControlEnabled: Unsigned 1-bit Integer. If set to 1, Polarization Control is supported

Custom Extension Point List: List of *<Custom Parameters>* [optional]

4.4 Operation

4.4.1 xArray/xSpan

Standard Parameters

GPITriggerValue Parameter

GPI triggering is not supported by xArray or xSpan. This parameter will not be reported and any command that uses this parameter will be rejected.

AISpecStopTrigger Parameter

AISpecStopTriggerType cannot be **2**. GPI triggering is not supported by xArray or xSpan.

ROSpecStopTrigger Parameter

ROSpecStopTriggerType cannot be **2**. GPI triggering is not supported by xArray or xSpan.

EventNotificationState Parameter

The following values of *EventType* will not be reported and any command that uses these values will be ignored:

- 1 - GPIEvent

GPIEvent Parameter

This parameter is not supported by xArray or xSpan. This parameter will not be reported and any command that uses this parameter will be rejected.

xArray/xSpan Custom Parameters

ImpinjLISpec Parameter

This parameter is used to configure Location Role operation of the xArray Gateway. Only one *ImpinjLISpec* parameter can be specified. If an *ImpinjLISpec* parameter is specified, no other *DISpec*, *AISpec*, or *RFSurveySpec* may be additionally specified.

LLRP Dependencies

When the xArray Gateway is set to operate in the Location Role, all settings for the operation are conveyed by:

- *ImpinjLocationConfig*
- *ImpinjC1G2LocationConfig*
- *ImpinjLocationReporting*

If no values for these parameters are provided in the *ImpinjLISpec* or SET_READER_CONFIG, default values are used.

Configuration from the following parameters does not apply during Location inventory:

- *C1G2RFControl* parameter
- *RFTransmitter* parameter
- *C1G2Filter* parameter
- *C1G2SingulationControl* parameter
- *C1G2InventoryCommand* parameter

Location Role operation modifies the configured values of the *ImpinjPolarizationControl* and *ROReportTrigger* parameters. At the end of LISpec, Polarization Control will be disabled and ‘End of AISpec’ notifications unregistered from regardless of their configuration before the LISpec was executed.

Allowable Extension Points

- *ROSpec* Parameter

Definition

Table 4.75 - ImpinjLISpec Parameter

ImpinjLISpec Parameter

ImpinjLocationConfig: <*ImpinjLocationConfig* Parameter> [optional]

ImpinjC1G2LocationConfig: <*ImpinjC1G2LocationConfig* Parameter> [optional]

***ImpinjLISpec* Parameter**

ImpinjLocationReporting: <*ImpinjLocationReporting* Parameter> [optional]**Custom Extension Point List:** List of <*Custom Parameters*> [optional]

ImpinjDISpec Parameter

This parameter is used to configure Direction Role operation of the xArray or xSpan Gateway. Only one *ImpinjDISpec* parameter can be specified. If an *ImpinjDISpec* parameter is specified, no other *LISpec*, *AISpec*, or *RFSurveySpec* may be additionally specified.

LLRP Dependencies

When the xArray or xSpan Gateway is set to operate in the Direction Role, all settings for the operation are conveyed by:

- *ImpinjDirectionSectors*
- *ImpinjDirectionConfig*
- *ImpinjC1G2DirectionConfig*
- *ImpinjDirectionReporting*

If no values for these parameters are provided in the *ImpinjDISpec* or SET_READER_CONFIG, default values are used.

Configuration from the following parameters does not apply during Direction inventory:

- *C1G2RFControl* parameter
- *RFTransmitter* parameter
- *C1G2Filter* parameter
- *C1G2SingulationControl* parameter
- *C1G2InventoryCommand* parameter

Direction Role operation modifies the configured value of the *ImpinjPolarizationControl* parameter. At the end of DISpec, Polarization Control will be disabled regardless of its configuration before the DISpec was executed.

Allowable Extension Points

- *ROSpec* Parameter

Definition**Table 4.76 - ImpinjDISpec Parameter**

ImpinjDISpec Parameter

ImpinjDirectionSectors: <*ImpinjDirectionSectors* Parameter>**ImpinjDirectionConfig:** <*ImpinjDirectionConfig* Parameter> [optional]**ImpinjC1G2DirectionConfig:** <*ImpinjC1G2DirectionConfig* Parameter> [optional]**ImpinjDirectionReporting:** <*ImpinjDirectionReporting* Parameter> [optional]**Custom Extension Point List:** List of <*Custom* Parameters> [optional]

xArray/xSpan Reports and Notifications

The following two parameters are ignored by the xArray/xSpan during Location and Direction Roles operations:

- *ROReportSpec* parameter
- *ImpinjTagReportContentSelector*

ImpinjExtendedTagInformation Parameter

This custom parameter provides additional information about one or more tags that cannot be conveyed by using the standard LLRP *TagReportData* parameter. Following the EPCs is a set of parameters that provide additional information about the tag, such as its location or its direction of travel.

LLRP Dependencies

None

Allowable Extension Points

- RO_ACCESS_REPORT

Definition**Table 4.77 - ImpinjExtendedTagInformation Parameter**

ImpinjExtendedTagInformation Parameter

EPCData: List of <*EPCData* Parameter> - one or more EPCs about which the report applies**ImpinjLocationReportData:** <*ImpinjLocationReportData* Parameter> [optional]**ImpinjDirectionReportData:** <*ImpinjDirectionReportData* Parameter> [optional]**Custom Extension Point List:** List of <*Custom* Parameters> [optional]

ImpinjLocationReportData Parameter

This custom parameter provides tag location information. It may be present in the report when the xArray is running the Location Role and the report is enabled.

LLRP Dependencies

None

Allowable Extension Points

- *ImpinjExtendedTagInformation*

Definition

Table 4.78 - ImpinjLocationReportData Parameter

***ImpinjLocationReportData* Parameter**

LastSeenTimestampUTC: Unsigned 64-bit integer - the UTC timestamp at which the tag was last seen (read).

LocXCentimeters: Integer - the location of the tag on the facility X axis.

LocYCentimeters: Integer - the location of the tag on the facility Y axis.

Type: enumeration - the report type (0 - Entry, 1 - Update, 2 - Exit)

ImpinjLocationConfidence: <*ImpinjLocationConfidence* Parameter>

Custom Extension Point List: List of <*Custom Parameters*> [optional]

ImpinjLocationConfidence Parameter

This custom parameter defines the confidence information for a location report.

LLRP Dependencies

None

Allowable Extension Points

- *ImpinjLocationReportData*

Definition

Table 4.79 - ImpinjLocationConfidence Parameter

ImpinjLocationConfidence Parameter

ReadCount: Unsigned Short Integer - the number of read observations used for this location estimate

ConfidenceData: Array of Unsigned Integers - Diagnostic Confidence data array

Custom Extension Point List: List of <*Custom Parameters*> [optional]

ImpinjDirectionReportData Parameter

This custom parameter provides tag direction information. It may be present in the report when the xArray or xSpan is running the Direction Role and the report is enabled.

LLRP Dependencies

None

Allowable Extension Points

- *ImpinjExtendedTagInformation*

Definition

Table 4.80 - ImpinjDirectionReportData Parameter

ImpinjDirectionReportData Parameter

Type: Enumeration - the report type (0 - Entry, 1 - Update, 2 - Exit)

TagPopulationStatus: Enumeration - the reader's tag population status. 'OK' - the tag population is appropriate. 'USER_OVERFLOW' - the tag population exceeds the limit set by the user (for their application). 'SYSTEM_OVERFLOW' - the tag population exceeds what the algorithm can reliably track.

FirstSeenSectorID: Integer - the tag's entry sector ID.

FirstSeenTimestampUTC: Unsigned 64-bit integer - the UTC entry timestamp at which the tag was first seen.

LastSeenSectorID: Integer - the tags last seen sector (update reports) or exit sector ID (exit reports).

LastSeenTimestampUTC: Unsigned 64-bit integer - the UTC timestamp at which the tag was last seen.

ImpinjDirectionDiagnosticData: <*ImpinjDirectionDiagnosticData* parameter> [optional]

Custom Extension Point List: List of <*Custom Parameters*> [optional]

ImpinjDirectionDiagnosticData Parameter

This custom parameter contains diagnostic and debug ‘metrics’.

LLRP Dependencies

None

Allowable Extension Points

- *ImpinjDirectionReportData*

Definition

Table 4.81 - ImpinjDirectionDiagnosticData Parameter

ImpinjDirectionDiagnosticData Parameter

Metric: Array of Unsigned Integers - Diagnostic metric data

Custom Extension Point List: List of <*Custom* Parameters> [optional]

5 Advanced Topics

5.1 Speedway Serialized TID Reporting and Monza4 Tags

Some tags might not be reported when you use Serialized TID reporting and Monza4-QT tags with both public and short range modes. Speedway has an optional Serialized TID reporting feature that is intended to provide more information efficiently. The Monza4 has an optional public, short range feature that is intended to provide less information for privacy reasons. When the two features are used together, some tags might not be reported, yet everything is working exactly as intended.

The Speedway Serialized TID reporting feature – EPC+TID – causes the Reader to ask the tags for their Serialized TID during routine inventory operations. Usually tags are asked only for their EPC. By asking the tags to immediately send their TID, fewer interactions with the tag are needed to obtain both EPC and TID, and performance or the number of tags per second is better. When EPC+TID reporting is enabled, the Reader strives to consistently report both EPC and TID.

If a tag responds with only the EPC, the Reader immediately issues a read TID operation. If a transient error occurs the tag is skipped, not reported, and is retried later. If a persistent error occurs, the Reader reports only the EPC to the application.

The Monza4 tag has two independent modes, which are both intended to protect privacy. While a Monza4 tag is in **public** mode, it intentionally does not provide the TID when asked for EPC+TID. While a Monza4 tag is in **short range** mode, it intentionally does not support certain operations, including a read TID operation, unless it is close to the Reader antenna.

Specifically, The Reader requests EPC+TID from a Monza4 tag in **public** mode and **short range** mode. In this case, the Monza4 tag will only respond with the EPC. The Reader will immediately try to read the TID. If the Monza4 is close to the antenna, the TID read operation will work, which means that the EPC and TID are reported to the application. However, if the Monza4 tag is over a meter from the antenna, the TID read operation is simply ignored. The Monza4 tag deems reading the tag as a possible privacy invasion, and the Reader interprets the lack of tag response as a transient error **not reporting the tag**, unless a retry is successful. The retry can't be successful until the tag is brought close to the antenna read zone.

5.2 xArray/xSpan Polarization Control

Starting with the Octane 5.4.0 release, the xArray Gateway, and starting with the Octane 5.8.0 release, the xSpan, allows control of individual beam polarizations via the *ImpinjPolarizationControl* parameter. Separate control of 'horizontal' and 'vertical' polarizations is supported via new Antenna ID spaces. Once enabled, each beam polarization can be addressed using these spaces and

treated as an LLRP antenna both in terms of configuration and control. Antenna status (connect and disconnect) continues to be reported in terms of ‘normal’ Antenna IDs.

The LLRP Host requests *ImpinjAntennaCapabilities* using the GET_READER_CAPABILITIES command to determine the Antenna ID Offsets for the ‘horizontal’ and ‘vertical’ polarizations. For Octane 5.4.0, ‘horizontal’ polarizations of Antenna IDs 1-52 are addressable at an offset of 1000 i.e. 1001-1052, and ‘vertical’ polarizations addressable at an offset of 2000 i.e. 2001-2052.

The Host then enables Polarization Control by sending an *ImpinjPolarizationControl* parameter (with the PolarizationControlEnabled to 1) in a SET_READER_CONFIG command.

With Polarization Control enabled:

- SET_READER_CONFIG command may now specify AntennaConfiguration parameters using ‘polarized’ Antenna IDs
- GET_READER_CONFIG command/response now accept and report AntennaConfiguration parameters in terms of these ‘polarized’ Antenna IDs
- GET_READER_CONFIG command with Antenna ID = 0 (all antennas) returns AntennaConfiguration parameters for both ‘normal’ (1-52) and ‘polarized’ (1001-1052, 2001-2052) Antenna IDs
- AISpecs may now select beams using ‘polarized’ Antenna IDs
- TagReportData is now reported relative to ‘polarized’ Antenna IDs
- Antenna Status events continue to be reported relative to ‘normal’ Antenna IDs.
- **NOTE 1:** The xArray Location Role uses Polarization Control. The Location Role automatically disables Polarization after execution (when an LISpec ends)
- **NOTE 2:** The xArray/xSpan Direction Role uses Polarization Control. The Direction Role automatically disables Polarization after execution (when a DISpec ends)

6 Custom Extension Encoding

This section describes the encoding of Impinj custom extensions.

6.1 Custom Messages

All LLRP custom messages are encoded with a common header to ensure a unique namespace across all LLRP implementations. This header appears in each of the custom messages below for completeness. Byte and bit order are shown as the first and second row of the table respectively. The vendor ID field contains the Impinj Private Enterprise Number (PEN) - 25882. A unique subtype indicator defines each custom extension message.

Table 6-1 Impinj Custom Message Header

0										1										2										3	
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Rsvd			Ver			Message Type=1023										Message Length [31:16]															
Message Length [15:0]																Message ID [31:16]															
Message ID [15:0]																Vendor ID [31:16]= 25882															
Vendor ID (continued)																Subtype=Varies															

6.1.1 IMPINJ_ENABLE_EXTENSIONS

0										1										2										3	
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Rsvd		Ver		Message Type=1023												Message Length [31:16]															
Message Length [15:0]																Message ID [31:16]															
Message ID [15:0]																Vendor ID [31:16]															
Vendor ID [15:0]																Subtype=21								Reserved [31:24]							
Reserved [23:0]																								Impinj Cust. Parameter							
Impinj Custom Parameter (0-n) (continued)																															

For more information, see section 4.2.1.

6.1.2 IMPINJ_ENABLE_EXTENSIONS_RESPONSE

0										1									2									3			
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Rsvd		Ver		Message Type=1023												Message Length [31:16]															
Message Length [15:0]																Message ID [31:16]															
Message ID [15:0]																Vendor ID [31:16]															
Vendor ID [15:0]																Subtype=22				LLRPStatus Parameter											
LLRPStatus Parameter (continued)																															
Impinj Custom Parameter (0-n)																															

For more information, see section 4.2.2.

6.1.3 IMPINJ_SAVE_SETTINGS

0										1									2									3			
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Rsvd		Ver		Message Type=1023												Message Length [31:16]															
Message Length [15:0]																Message ID [31:16]															
Message ID [15:0]																Vendor ID [31:16]															
Vendor ID [15:0]																Subtype=23						C	Reserved								
Impinj Custom Parameter (0-n)																															

Abbreviations: C Save Configuration

For more information, see section 4.2.3.

6.1.4 IMPINJ_SAVE_SETTINGS_RESPONSE

0										1									2										3		
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Rsvd		Ver		Message Type=1023												Message Length [31:16]															
Message Length [15:0]																Message ID [31:16]															
Message ID [15:0]																Vendor ID [31:16]															
Vendor ID [15:0]																Subtype=24				LLRPStatus Parameter											
LLRPStatus Parameter (continued)																															
Impinj Custom Parameter (0-n)																															

For more information, see section 4.2.4.

6.2 Custom Parameters

All LLRP custom parameters are encoded with a common header to ensure a unique namespace across all LLRP implementations. This header appears in each of the custom parameters below for completeness. Byte and bit order are shown as the first and second row of the table respectively. The vendor ID field contains the Impinj Private Enterprise Number (PEN) - 25882. A unique subtype indicator defines each custom extension parameter.

0										1										2										3	
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023										Parameter Length															
Vendor ID=25882																															
Subtype=Varies																															

6.2.1 ImpinjRequestedData Parameter

0										1									2										3		
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023												Parameter Length													
Vendor ID=25882																															
Subtype=21																															
RequestedData																															
Impinj Custom Parameter (0-n)																															

For more information, see section 4.3.1.

6.2.2 ImpinjSubRegulatoryRegion Parameter

0										1										2										3	
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023										Parameter Length															
Vendor ID=25882																															
Subtype=22																															
RegulatoryRegion																															
Impinj Custom Parameter (0-n)																															

For more information, see section 4.3.2.

6.2.3 ImpinjInventorySearchMode Parameter

0										1									2										3		
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023										Parameter Length															
Vendor ID=25882																															
Subtype=23																															
InventorySearchMode																															
Impinj Custom Parameter (0-n)																															

For more information, see section 4.3.3.

6.2.4 ImpinjFixedFrequencyList Parameter

0										1									2										3		
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023										Parameter Length															
Vendor ID=25882																															
Subtype=26																															
FixedFrequencyMode																Reserved															
ChannelList Count																ChannelList Index #1															
...																ChannelList Index #n															
Impinj Custom Parameter (0-n)																															

For more information, see section 4.3.4.

6.2.5 ImpinjFrequencyCapabilities Parameter

0										1										2										3	
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023										Parameter Length															
Vendor ID=25882																															
Subtype=30																															
FrequencyList Count																FrequencyList Index #1 [31:16]															
FrequencyList Index #1 [15:0]																...															
...																FrequencyList Index #n [31:16]															
FrequencyList Index #n [15:0]																															
Impinj Custom Parameter (0-n)																															

For more information, see section 4.3.5

6.2.6 ImpinjReducedPowerFrequencyList Parameter

0										1										2										3	
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023										Parameter Length															
Vendor ID=25882																															
Subtype=27																															
ReducedPowerMode																Reserved															
ReducedPowerChannelList Count																ReducedPowerChannelList Index #1															
...																ReducedPowerChannelList Index #n															
Impinj Custom Parameter (0-n)																															

For more information, see section 4.3.6.

6.2.7 ImpinjLowDutyCycle Parameter

0										1									2									3			
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023										Parameter Length															
Vendor ID=25882																															
Subtype=28																															
LowDutyCycleMode																EmptyFieldTimeout															
FieldPingInterval																															
Impinj Custom Parameter (0-n)																															

For more information, see section 4.3.7.

6.2.8 ImpinjDetailedVersion Parameter

0										1										2										3	
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved					Type=1023										Parameter Length																
Vendor ID=25882																															
Subtype=29																															
ModelName Byte Count																															
ModelName=Variable length UTF-8 string																															
SerialNumber Byte Count																															
SerialNumber=Variable length UTF-8 string																															
SoftwareVersion Byte Count																															
SoftwareVersion=Variable length UTF-8 string																															
FirmwareVersion Byte Count																															
FirmwareVersion=Variable length UTF-8 string																															
FPGAVersion Byte Count																															
FPGAVersion=Variable length UTF-8 string																															
PCBAVersion Byte Count																															
PCBAVersion=Variable length UTF-8 string																															
ImpinjHubVersions Parameter (0-1)																															
ImpinjArrayVersionParameter (0-1)																															
ImpinjBLEVersion (0-1)																															
Impinj Custom Parameter (0-n)																															

For more information, see section 4.3.8.

6.2.9 ImpinjHubVersions Parameter

0										1									2										3		
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023										Parameter Length															
Vendor ID=25882																															
Subtype=1537																															
ImpinjArrayVersion Parameter (0-n)																															
Impinj Custom Parameter (0-n)																															

For more information, see section 4.3.8.

6.2.10 ImpinjArrayVersion Parameter

0										1									2										3		
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023										Parameter Length															
Vendor ID=25882																															
Subtype=1520																															
SerialNumber Byte Count																															
SerialNumber=Variable length UTF-8 string																															
FirmwareVersion Byte Count																															
FirmwareVersion=Variable length UTF-8 string																															
PCBAVersion Byte Count																															
PCBAVersion=Variable length UTF-8 string																															
Impinj Custom Parameter (0-n)																															

For more information, see section 4.3.8.

6.2.11 ImpinjBLEVersion Parameter

0										1										2										3	
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved					Type=1023											Parameter Length															
Vendor ID=25882																															
Subtype=1580																															
FirmwareVersion Byte Count																															
FirmwareVersion=Variable length UTF-8 string																															
Impinj Custom Parameter (0-n)																															

For more information, see section 4.3.8.

6.2.12 ImpinjGPIDebounceConfiguration Parameter

0										1										2										3	
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023										Parameter Length															
Vendor ID=25882																															
Subtype=36																															
GPIPortNum																GPIDebounceTimerMSec [31:16]															
GPIDebounceTimerMSec [15:0]																															
Impinj Custom Parameter (0-n)																															

For more information, see section 4.3.9.

6.2.13 ImpinjAdvancedGPOConfiguration Parameter

0										1										2										3	
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023										Parameter Length															
Vendor ID=25882																															
Subtype=64																															
GPIPortNum																GPOMode															
GPOPulseDurationMSec																															
Impinj Custom Parameter (0-n)																															

For more information, see section 4.3.10.

6.2.14 ImpinjReaderTemperature Parameter

0										1									2										3		
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023										Parameter Length															
Vendor ID=25882																															
Subtype=37																															
Temperature																															
Impinj Custom Parameter (0-n)																															

For more information, see section 4.3.11.

6.2.15 ImpinjLinkMonitorConfiguration Parameter

0										1										2										3	
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023										Parameter Length															
Vendor ID=25882																															
Subtype=38																															
LinkMonitorMode																LinkDownThreshold															
Impinj Custom Parameter (0-n)																															

For more information, see section 4.3.12.

6.2.16 ImpinjReportBufferConfiguration Parameter

0										1									2										3		
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023										Parameter Length															
Vendor ID=25882																															
Subtype=39																															
ReportBufferMode																															
Impinj Custom Parameter (0-n)																															

For more information, see section 4.3.13.

6.2.17 ImpinjAccessSpecConfiguration Parameter

0										1									2									3			
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023										Parameter Length															
Vendor ID=25882																															
Subtype=40																															
ImpinjBlockWriteWordCount (0-1)																															
Impinj Custom Parameter (0-n)																															

For more information, see section 4.3.14.

6.2.18 ImpinjBlockWriteWordCount Parameter

0										1									2										3		
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023										Parameter Length															
Vendor ID=25882																															
Subtype=41																															
WordCount																															
Impinj Custom Parameter (0-n)																															

For more information, see section 4.3.15.

6.2.19 ImpinjOpSpecRetryCount Parameter

0										1										2										3	
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023										Parameter Length															
Vendor ID=25882																															
Subtype=63																															
RetryCount																															
Impinj Custom Parameter (0-n)																															

For more information, see section 4.3.16.

6.2.20 ImpinjBlockPermalock Parameter

0										1									2									3			
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023										Parameter Length															
Vendor ID=25882																															
Subtype=42																															
OpSpecID																AccessPassword[31:16]															
AccessPassword[15:0]																MB		Reserved				BlockPointer[15:8]									
BlockPointer[7:0]						BlockMaskWordCount																									
BlockMask																															
Impinj Custom Parameter (0-n)																															

For more information, see section 4.3.17.

6.2.21 ImpinjBlockPermalockOpSpecResult Parameter

0										1									2										3		
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023										Parameter Length															
Vendor ID=25882																															
Subtype=43																															
Result						OpSpecID																									
Impinj Custom Parameter (0-n)																															

For more information, see section 4.3.18.

6.2.22 ImpinjGetBlockPermalockStatus Parameter

0										1									2									3			
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023										Parameter Length															
Vendor ID=25882																															
Subtype=44																															
OpSpecID																AccessPassword[31:16]															
AccessPassword[15:0]																MB		Reserved						BlockPointer[15:8]							
BlockPointer[7:0]						BlockRange																									
Impinj Custom Parameter (0-n)																															

For more information, see section 4.3.19.

6.2.23 ImpinjGetBlockPermalockStatusOpSpecResult Parameter

0										1									2									3			
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023										Parameter Length															
Vendor ID=25882																															
Subtype=45																															
Result						OpSpecID																StatusWordCount[15:8]									
StatusWordCount[7:0]						PermalockStatus																									
PermalockStatus (cont.)																															
Impinj Custom Parameter (0-n)																															

For more information, see section 4.3.20.

6.2.24 ImpinjSetQTConfig Parameter

0										1									2										3		
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023										Parameter Length															
Vendor ID=25882																															
Subtype=46																															
OpSpecID																AccessPassword[31:16]															
AccessPassword[15:0]																DataProfile								AccessRange							
Persistence						Reserved[31:8]																									
Reserved[7:0]																															
Impinj Custom Parameter (0-n)																															

For more information, see section 4.3.21.

6.2.25 ImpinjSetQTConfigOpSpecResult Parameter

0										1									2										3		
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023										Parameter Length															
Vendor ID=25882																															
Subtype=47																															
Result										OpSpecID																					
Impinj Custom Parameter (0-n)																															

For more information, see section 4.3.22.

6.2.26 ImpinjGetQTConfig Parameter

0										1										2										3	
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023										Parameter Length															
Vendor ID=25882																															
Subtype=48																															
OpSpecID																AccessPassword[31:16]															
AccessPassword[15:0]																															
Impinj Custom Parameter (0-n)																															

For more information, see section 4.3.23.

6.2.27 ImpinjGetQTConfigOpSpecResult Parameter

0										1										2										3	
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023										Parameter Length															
Vendor ID=25882																															
Subtype=49																															
Result						OpSpecID																DataProfile									
AccessRange						Reserved[31:8]																									
Reserved[7:0]																															
Impinj Custom Parameter (0-n)																															

For more information, see section 4.3.24.

6.2.28 ImpinjMarginRead Parameter

[illegible]

For more information, see section 4.3.25.

6.2.29 ImpinjMarginReadOpSpecResult Parameter

[illegible]

For more information, see section 4.3.26.

6.2.30 ImpinjTagReportContentSelector Parameter

[illegible]

For more information, see section 4.3.27.

6.2.31 ImpinjEnableSerializedTID Parameter

[illegible]

For more information, see section 4.3.28.

6.2.32 ImpinjEnableRFPhaseAngle Parameter

[illegible]

For more information, see section 4.3.29.

6.2.33 ImpinjEnablePeakRSSI Parameter

0										1										2										3							
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1						
Reserved						Type=1023										Parameter Length																					
Vendor ID=25882																																					
Subtype=53																																					
PeakRSSIMode																																					
Impinj Custom Parameter (0-n)																																					

For more information, see section 4.3.30.

6.2.34 ImpinjEnableGPSCoordinates Parameter

0										1										2										3	
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023										Parameter Length															
Vendor ID=25882																															
Subtype=54																															
GPSCoordinatesMode																															
Impinj Custom Parameter (0-n)																															

For more information, see section 4.3.31.

6.2.35 ImpinjEnableOptimizedRead Parameter

0										1										2										3	
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023										Parameter Length															
Vendor ID=25882																															
Subtype=65																															
OptimizedReadMode																															
C1G2Read Parameter (0-2)																															
Impinj Custom Parameter (0-n)																															

For more information, see section 4.3.32.

6.2.36 ImpinjEnableRFDopplerFrequency Parameter

0										1										2										3	
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023										Parameter Length															
Vendor ID=25882																															
Subtype=67																															
RFDopplerFrequencyMode																															
Impinj Custom Parameter (0-n)																															

For more information, see section 4.3.33.

6.2.37 ImpinjSerializedTID Parameter

0										1										2										3	
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023										Parameter Length															
Vendor ID=25882																															
Subtype=55																															
TIDWordCount																TID Word #1															
...																TID Word #n															
Impinj Custom Parameter (0-n)																															

For more information, see section 4.3.34.

6.2.38 ImpinjTIDParity Parameter

										1										2										3	
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023										Parameter Length															
Vendor ID=25882																															
Subtype=1566																															
P	Reserved																														
Impinj Custom Parameter (0-n)																															

Abbreviations: P - ParityError
For more information, see section 4.3.35.

6.2.39 ImpinjRFPhaseAngle Parameter

0										1										2										3	
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023										Parameter Length															
Vendor ID=25882																															
Subtype=56																															
PhaseAngle																															
Impinj Custom Parameter (0-n)																															

For more information, see section 4.3.36.

6.2.40 ImpinjPeakRSSI Parameter

0										1									2										3		
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023										Parameter Length															
Vendor ID=25882																															
Subtype=57																															
RSSI																															
Impinj Custom Parameter (0-n)																															

For more information, see section 4.3.37.

6.2.41 ImpinjGPSCoordinates Parameter

0										1									2										3		
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023										Parameter Length															
Vendor ID=25882																															
Subtype=58																															
Latitude																															
Longitude																															
Impinj Custom Parameter (0-n)																															

For more information, see section 4.3.38.

6.2.42 ImpinjRFDopplerFrequency Parameter

0										1									2										3		
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023										Parameter Length															
Vendor ID=25882																															
Subtype=68																															
DopplerFrequency																															
Impinj Custom Parameter (0-n)																															

For more information, see section 4.3.39.

6.2.43 ImpinjLoopSpec Parameter

0										1									2										3		
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023										Parameter Length															
Vendor ID=25882																															
Subtype=59																															
LoopCount																															
Impinj Custom Parameter (0-n)																															

For more information, see section 4.3.40.

6.2.44 ImpinjGPSNMEASentences Parameter

0										1									2									3			
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023										Parameter Length															
Vendor ID=25882																															
Subtype=60																															
ImpinjGGASentence Parameter (0-1)																															
ImpinjRMCSentence Parameter (0-1)																															
Impinj Custom Parameter (0-n)																															

For more information, see section 4.3.41.

6.2.45 ImpinjGGASentence Parameter

0										1									2									3			
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023										Parameter Length															
Vendor ID=25882																															
Subtype=61																															
GGASentence Byte Count																															
GGASentence=Variable length UTF-8 string																															
Impinj Custom Parameter (0-n)																															

For more information, see section 4.3.42.

6.2.46 ImpinjRMCSentence Parameter

0										1									2										3		
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023										Parameter Length															
Vendor ID=25882																															
Subtype=62																															
RMCSentence Byte Count																															
RMCSentence=Variable length UTF-8 string																															
Impinj Custom Parameter (0-n)																															

For more information, see section 4.3.43.

6.2.47 ImpinjIntelligentAntennaManagement Parameter

0										1										2										3	
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023										Parameter Length															
Vendor ID=25882																															
Subtype=1554																															
M	Reserved									Impinj Custom..																					
... Parameter (0-n)																															

Abbreviations: M - ManagementEnabled

For more information, see section 4.3.44.

6.2.48 ImpinjAntennaConfiguration Parameter

0										1										2									3		
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023										Parameter Length															
Vendor ID=25882																															
Subtype=1524																															
ImpinjAntennaEventHysteresis Parameter (0-1)																															
ImpinjAntennaEventConfiguration Parameter (0-1)																															
Impinj Custom Parameter (0-n)																															

6.2.49 ImpinjAntennaEventConfiguration Parameter

0										1										2										3			
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1		
Reserved						Type=1023										Parameter Length																	
Vendor ID=25882																																	
Subtype=1576																																	
E	Reserved[6:0]					Impinj Custom Parameter (0-n)																											

Abbreviations: E - EnableAntennaAttemptNotification

6.2.50 ImpinjInventoryConfiguration Parameter

0											1									2										3			
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1		
Reserved						Type=1023										Parameter Length																	
Vendor ID=25882																																	
Subtype=69																																	
A	S	Reserved[29:0]																															
Impinj Custom Parameter (0-n)																																	

Abbreviations: A - EnableAntDwellTimeLimit S - EnableSelectGapClose

6.2.51 ImpinjRFPowerSweep Parameter

0											1									2										3	
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023										Parameter Length															
Vendor ID=25882																															
Subtype=1582																															
R	MinimumPowerLevel[15:0]																PowerLevelStepSize[15:1]														
P																															

Abbreviations: R - EnableRFPowerSweep P - PowerLevelStepSize[0]

6.3 xArray/xSpan Parameters

The following parameters pertain only to the xArray or xSpan Gateways.

6.3.1 ImpinjArrayVersion Parameter

0										1										2										3	
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023										Parameter Length															
Vendor ID=25882																															
Subtype=1520																															
SerialNumber Byte Count																															
SerialNumber=Variable length UTF-8 string																															
FirmwareVersion Byte Count																															
FirmwareVersion=Variable length UTF-8 string																															
PCBAVersion Byte Count																															
PCBAVersion=Variable length UTF-8 string																															
Impinj Custom Parameter (0-n)																															

6.3.2 ImpinjArrayCapabilities Parameter

0										1									2									3			
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023										Parameter Length															
Vendor ID=25882																															
Subtype=1521																															
MaxNumSectors[31:16]																MaxNumSectors[15:0]															
L	T	Reserved						Impinj Custom Parameter (0-n)																							

Abbreviations: L - SupportsLISpecs

6.3.3 ImpinjAntennaCapabilities Parameter

0										1									2									3			
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023										Parameter Length															
Vendor ID=25882																															
Subtype=1563																															
ImpinjAntennaPolarizationCapability Parameter (0-n)																															
Impinj Custom Parameter (0-n)																															

6.3.4 ImpinjAntennaPolarizationCapability Parameter

0										1									2									3			
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023										Parameter Length															
Vendor ID=25882																															
Subtype=1564																															
Type										AntennaIDOffset																					
Impinj Custom Parameter (0-n)																															

6.3.5 ImpinjTiltConfiguration Parameter

0										1									2										3		
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023										Parameter Length															
Vendor ID=25882																															
Subtype=1522																															
XAxis																															
YAxis																															
ZAxis																															
Impinj Custom Parameter (0-n)																															

6.3.6 ImpinjBeaconConfiguration Parameter

0										1									2										3		
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023										Parameter Length															
Vendor ID=25882																															
Subtype=1523																															
B	Reserved								BeaconDurationSeconds[63:56]																						
BeaconDurationSeconds[55:0]																															
Impinj Custom Parameter (0-n)																															

Abbreviations: B - BeaconState

6.3.7 ImpinjAntennaEventHysteresis Parameter

0										1									2										3		
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023										Parameter Length															
Vendor ID=25882																															
Subtype=1526																															
AntennaEventConnected [63:32]																															
AntennaEventConnected [31:0]																															
AntennaEventDisconnected [63:32]																															
AntennaEventDisconnected [31:0]																															
Impinj Custom Parameter (0-n)																															

6.3.8 ImpinjPlacementConfiguration Parameter

0										1									2										3		
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023										Parameter Length															
Vendor ID=25882																															
Subtype=1540																															
HeightCm																FacilityXLocationCm[31:16]															
FacilityXLocationCm[15:0]																FacilityYLocationCm[31:16]															
FacilityYLocationCm[15:0]																OrientationDegrees															
Impinj Custom Parameter (0-n)																															

6.3.9 ImpinjPolarizationControl Parameter

0										1									2									3			
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023										Parameter Length															
Vendor ID=25882																															
Subtype=1562																															
P	Reserved						Impinj Custom Parameter (0-n)																								
Impinj Custom Parameter (continued)																															

Abbreviations: P - PolarizationControlEnabled

6.3.10 ImpinjLISpec

0										1									2									3			
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023										Parameter Length															
Vendor ID=25882																															
Subtype=1541																															
ImpinjLocationConfig (0-1)																															
ImpinjC1G2LocationConfig (0-1)																															
ImpinjLocationReporting(0-1)																															
Impinj Custom Parameter (0-n)																															

6.3.11 ImpinjLocationConfig Parameter

0										1									2										3		
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023										Parameter Length															
Vendor ID=25882																															
Subtype=1542																															
ComputeWindowSeconds																TagAgeIntervalSeconds															
UpdateIntervalSeconds																Impinj Custom..															
ImpinjParameter (0-n)																															

6.3.12 ImpinjDisabledAntennas Parameter

0										1									2										3		
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023										Parameter Length															
Vendor ID=25882																															
Subtype=1565																															
AntennaIDs Count																AntennaIDs Index #1															
...																AntennaIDs Index #n															
Impinj Custom Parameter (0-n)																															

6.3.16 ImpinjLocationConfidence Parameter

0										1									2										3		
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023										Parameter Length															
Vendor ID=25882																															
Subtype=1553																															
ReadCount															ConfidenceData Word Count																
ConfidenceData[0]																															
ConfidenceData...																															
ConfidenceData[N]																															
Impinj Custom Parameter (0-n)																															

6.3.17 ImpinjLocationReportData Parameter

0										1									2									3			
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023										Parameter Length															
Vendor ID=25882																															
Subtype=1545																															
LastSeenTimeStampUTC[63:32]																															
LastSeenTimestampUTC[31:0]																															
LocXCentimeters																															
LocYCentimeters																															
Type						ImpinjLocationConfidence Parameter																									
Impinj Custom Parameter (0-n)																															

6.3.18 ImpinjExtendedTagInformation Parameter

0										1									2									3			
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023										Parameter Length															
Vendor ID=25882																															
Subtype=1552																															
EPCData (1-N)																															
ImpinjTransitionReportData (0-1)																															
ImpinjLocationReportData (0-1)																															
Impinj Custom Parameter (0-n)																															

6.3.19 ImpinjDISpec Parameter

0										1									2									3			
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023										Parameter Length															
Vendor ID=25882																															
Subtype=1567																															
ImpinjDirectionSectors (1)																															
ImpinjDirectionConfig (0-1)																															
ImpinjC1G2DirectionConfig (0-1)																															
ImpinjDirectionReporting (0-1)																															
Impinj Custom Parameter (0-n)																															

6.3.20 ImpinjDirectionSectors Parameter

0										1									2									3			
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved					Type=1023										Parameter Length																
Vendor ID=25882																															
Subtype=1568																															
EnabledSectorIDs (1-n)																															
Impinj Custom Parameter (0-n)																															

6.3.21 ImpinjDirectionConfig Parameter

0										1									2										3		
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023										Parameter Length															
Vendor ID=25882																															
Subtype=1569																															
TagAgeIntervalSeconds																UpdateIntervalSeconds															
FieldofView						ImpinjDirectionUserTagPopulationLimit (0-1)																ImpinjCustom...									
...Parameter (0-n)																															

6.3.22 ImpinjC1G2DirectionConfig Parameter

0										1									2									3				
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	
Reserved					Type=1023										Parameter Length																	
Vendor ID=25882																																
Subtype=1571																																
RFMode(1)					ImpinjTransmitPower (0-1)										C1G2Filter(0-n)																	
C1G2FilterParameter (0-n)																																
Impinj Custom Parameter (0-n)																																

6.3.23 ImpinjDirectionReporting Parameter

0										1										2										3					
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1				
Reserved						Type=1023										Parameter Length																			
Vendor ID=25882																																			
Subtype=1572																																			
U	E	X	D	Reserved					DiagnosticReportLevel										ImpinjCustom...																
...Parameter(0-n)																																			

Abbreviations: U - EnableUpdateReport E - EnableEntryReport X - EnableExitReport D - EnableDiagnosticReport

6.3.24 ImpinjDirectionReportData Parameter

0										1									2										3		
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Reserved						Type=1023										Parameter Length															
Vendor ID=25882																															
Subtype=1573																															
Type (1)								TagPopulationStatus (1)								FirstSeenSectorID (1)								FirstSeenTimeStampUCT...							
...FirstSeenTimeStampUTC...																															
...FirstSeenTimeStampUTC (1)																								LastSeenSectorID (1)							
LastSeenTimeStampUTC...																															
...LastSeenTimeStampUTC (1)																															
ImpinjDirectionDiagnosticData (0-n)																															
Impinj Custom Parameter (0-n)																															

6.3.25 ImpinjDirectionDiagnosticData Parameter

0											1										2										3	
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	
Reserved					Type=1023										Parameter Length																	
Vendor ID=25882																																
Subtype=1574																																
Metric (1-n)																																

7 Octane LLRP Toolkit Information

Octane LLRP is tested against some libraries that are produced by the open source llrp-toolkit (LTK) project. Table 7.1 shows the compatibility of Octane 6.0.0 with the LTK. For information about building custom versions of the LTK, go to the toolkit site: <http://www.sourceforge.net/projects/llrp-toolkit>

Table 7.1 Octane LTK Compatibility

Language	Version	Availability	Notes
Perl	1.0.x	Sourceforge	Available as open source; not fully tested against Speedway, Speedway, xArray Gateway
C	10.28.0.240	Impinj	
C++	10.28.0.240	Impinj	
C# .NET	10.28.0.240	Impinj	
Java	10.28.0.240	Impinj	

8 Octane LLRP Default Values

The following table describes the factory default values for LLRP and Octane custom extension parameters for the available Octane regulatory regions. Commanding the Reader to restore LLRP factory defaults via the *ResetToFactoryDefault* field of the LLRP SET_READER_CONFIG message will restore the Reader to these factory defaults. Non-LLRP settings such as network settings, root password, or other settings programmable via a separate API on the Reader are not affected.

Table 8.1 Octane LLRP Default Configuration Values (1)

	FCC	ETSI	Hong Kong	Taiwan	Japan	Korea	Malaysia	China
Channel Index	N/A	Index 3 Channel 10 866.9 MHz	N/A	N/A	Index 1 Channel 2 952.4 MHz	N/A	N/A	Index 1 Channel 3 920.625 MHz
Hop Table ID	1	N/A	1	1	N/A	1	1	N/A
Transmit Power	30 dBm (under TransmitPower index varies by product)							
Receive Sensitivity	0 dB above maximum sensitivity							
Gen2 Mode ID	1000 (Autoset)							
Session	Session 1							
Tag Transit Time	0							
Tag Population	32							
RO Spec	No ROSpecs are configured							
Access Spec	No AccessSpecs are configured							
RO Report Trigger	Tag data will be reported on each singulation (N=1)							
Tag Report Data	AntennaID, PeakRSSI, and FirstSeenTimestamp are enabled							
Access Report Trigger	Access data will be reported at the completion of each AccessSpec							
Keep Alive	Disabled							
Reader Events	Antenna and ReaderExceptionEvents are enabled							
Hold Events and Reports	False							
GPI Configuration	All GPI are disabled							
GPI Debounce Timer	20 milliseconds							
GPO State	All GPO are driven low							
Impinj Extensions	Disabled							
Impinj Sub-Regulatory Region	0	7	3	4	11	8	9	10
Impinj Fixed Frequency List	Disabled							
Impinj Low Duty Cycle	Disabled							
Impinj Reduced Power Frequency List	Disabled							
Impinj Inventory Search Mode	Reader will select the appropriate search mode							
Link State Monitoring	Disabled							
Report Buffer Behavior	Normal							
Block Write Word Count	1							
Serialized TID Reporting	Disabled							
RF Phase Reporting	Disabled							
Intelligent Antenna Management	Enabled							

Table 8.2 Octane LLRP Default Configuration Values (2)

	South Africa	Brazil	Thailand	Singapore	Australia	India	Uruguay	Vietnam	Israel
Channel Index	N/A	N/A	N/A	N/A	N/A	Index 3 Channel 10 866.9 MHz	N/A	N/A	N/A
Hop Table ID	1	1	1	1	1	N/A	1	1	1
Transmit Power	30 dBm (UTransmitPowerU index varies by product)								
Receive Sensitivity	0 dB above maximum sensitivity								
Gen2 Mode ID	1000 (Autoset)								
Session	Session 1								
Tag Transit Time	0								
Tag Population	32								
RO Spec	No ROSpecs are configured								
Access Spec	No AccessSpecs are configured								
RO Report Trigger	Tag data will be reported on each singulation (N=1)								
Tag Report Data	AntennaID, PeakRSSI, and FirstSeenTimestamp are enabled								
Access Report Trigger	Access data will be reported at the completion of each AccessSpec								
Keep Alive	Disabled								
Reader Events	Antenna and ReaderExceptionEvents are enabled								
Hold Events and Reports	False								
GPI Configuration	All GPI are disabled								
GPI Debounce Timer	20 milliseconds								
GPO State	All GPO are driven low								
Impinj Extensions	Disabled								
Impinj Sub-Regulatory Region	12	13	14	15	16	17	18	19	20
Impinj Fixed Frequency List	Disabled								
Impinj Low Duty Cycle	Disabled								
Impinj Reduced Power Frequency List	Disabled								
Impinj Inventory Search Mode	Reader will select the appropriate search mode								
Link State Monitoring	Disabled								
Report Buffer Behavior	Normal								
Block Write Word Count	1								
Serialized TID Reporting	Disabled								
RF Phase Reporting	Disabled								
Intelligent Antenna Management	Enabled								

Table 8.3 Octane LLRP Default Configuration Values (3)

	Philippines	Canada Post	Indonesia	New Zealand	Japan	Latin America	Peru
Channel Index	Index 3 Channel 1 918.25 MHz	N/A	N/A	N/A	Index 3 Channel 18 919.2 MHz	N/A	N/A
Hop Table ID	N/A	1	1	1		1	1
Transmit Power	30 dBm (TransmitPower index varies by product)						
Receive Sensitivity	0 dB above maximum sensitivity						
Gen2 Mode ID	1000 (Autoset)						
Session	Session 1						
Tag Transit Time	0						
Tag Population	32						
RO Spec	No ROSpecs are configured						
Access Spec	No AccessSpecs are configured						
RO Report Trigger	Tag data will be reported on each singulation (N=1)						
Tag Report Data	AntennaID, PeakRSSI, and FirstSeenTimestamp are enabled						
Access Report Trigger	Access data will be reported at the completion of each AccessSpec						
Keep Alive	Disabled						
Reader Events	Antenna and ReaderExceptionEvents are enabled						
Hold Events and Reports	False						
GPI Configuration	All GPI are disabled						
GPI Debounce Timer	20 milliseconds						
GPO State	All GPO are driven low						
Impinj Extensions	Disabled						
Impinj Sub-Regulatory Region	21	22	23	24	25	26	27
Impinj Fixed Frequency List	Disabled						
Impinj Low Duty Cycle	Disabled						
Impinj Reduced Power Frequency List	Disabled						
Impinj Inventory Search Mode	Reader will select the appropriate search mode						
Link State Monitoring	Disabled						
Report Buffer Behavior	Normal						
Block Write Word Count	1						
Serialized TID Reporting	Disabled						
RF Phase Reporting	Disabled						
Intelligent Antenna Management	Enabled						

9 Regulatory Region Information

The tables in this section provide information about the capabilities of the Octane firmware in each regulatory region. This is for information only. For an accurate and complete list of a Reader's capabilities in a particular regulatory region, use the LLRP GET_READER_CAPABILITIES message.

- Table 9.1 documents the information contained in the *TransmitPowerLevelTableEntry* parameter list within *UHFBandCapabilities*.
- Table 9.2 documents the information contained in the *FrequencyList* field within *ImpinjFrequencyCapabilities*.

NOTE: Inclusion of a country or region in tables 9.1 or 9.2 does not imply regulatory compliance. Refer to the Impinj Support Portal for a list of certified countries by reader model. The list varies over time as new countries are added and as certificates expire.

9.1 Table 9.1 Regional Transmit Power Capabilities (dBm)

Region	R120 [1][3]	R220 [1]	R420 [1]	R640 [2]
0: FCC part 15.247	10.00 - 30.00	10.00 - 32.50	10.00 - 32.50	10.00 - 28.5 (27.00)
1: ETSI EN 300-220	N/A	N/A	N/A	N/A
2: ETSI EN 302-208 [4]	See region 7	See region 7	See region 7	See region 7
3: Hong Kong 920-925 MHz	N/A	10.00 - 32.50	10.00 - 32.50	10.00 - 28.5 (27.00)
4: Taiwan 922-928 MHz	N/A	10.00 - 32.50	10.00 - 32.50	10.00 - 28.5 (27.00)
5: Japan 952-954 MHz [5]	N/A	N/A	N/A	N/A
6: Japan 952-955 MHz, 10mW max power	N/A	N/A	N/A	N/A
7: ETSI EN 302-208 (version 1.4.1)	10.00 - 30.00	10.00 - 31.50	10.00 - 31.50	10.00 - 27.50 (27.25)
8: Korea 917-921 MHz	N/A	10.00 - 32.50	10.00 - 32.50	10.00 - 28.50 (27.00)
9: Malaysia 919-923MHz	N/A	10.00 - 32.50	10.00 - 32.50	10.00 - 27.75 (26.25)

Region	R120 [1][3]	R220 [1]	R420 [1]	R640 [2]
10: China 920-925 MHz	10.00 - 30.00	10.00 - 32.50	10.00 - 32.50	10.00 - 27.75 (26.25)
11: Japan 952-956 MHz (without LBT)	N/A	10.00 - 30.00	10.00 - 30.00	N/A
12: South Africa 915-919 MHz	N/A	10.00 - 32.50	10.00 - 32.50	10.00 - 28.50 (27.00)
13: Brazil 902-907/915-928 MHz	N/A	10.00 - 32.50	10.00 - 32.50	10.00 - 28.50 (27.00)
14: Thailand 920-925 MHz	N/A	10.00 - 32.50	10.00 - 32.50	10.00 - 28.50 (27.00)
15: Singapore 920-925 MHz	N/A	10.00 - 32.50	10.00 - 32.50	10.00 - 27.75 (26.25)
16: Australia 920-925 MHz	N/A	10.00 - 32.50	10.00 - 32.50	10.00 - 28.50 (27.00)
17: India 865-867 MHz	N/A	10.00 - 31.50	10.00 - 31.50	10.00 - 28.25 (28.00)
18: Uruguay 916-928 MHz	N/A	10.00 - 32.50	10.00 - 32.50	10.00 - 28.50 (27.00)
19: Vietnam 920-925 MHz	N/A	10.00 - 32.50	10.00 - 32.50	10.00 - 27.75 (26.25)
20: Israel 915-917 MHz	N/A	10.00 - 32.50	10.00 - 32.50	10.00 - 25.50 (24.00)
21: Philippines 918-920 MHz	N/A	10.00 - 32.50	10.00 - 32.50	10.00 - 28.50 (27.00)
22: Canada Post 902-928 MHz	N/A	N/A	N/A	N/A
23: Indonesia 923-925 MHz	N/A	10.00 - 32.50	10.00 - 32.50	10.00 - 27.75 (26.25)
24: New Zealand 922-927 MHz	N/A	10.00 - 32.50	10.00 - 32.50	10.00 - 28.50 (27.00)
25: Japan 916.7-920.9 MHz	N/A	N/A	10.00-30.00	N/A
26: Latin America 902-928 MHz	N/A	10.00 - 32.50	10.00 - 32.50	10.00 - 28.50 (27.00)

Region	R120 [1][3]	R220 [1]	R420 [1]	R640 [2]
27: Peru 916-928 MHz	N/A	10.00 - 32.50	10.00 - 32.50	10.00 - 28.50 (27.00)
28: Bangladesh 925-927 MHz	N/A	10.00 - 32.50	10.00 - 32.50	10.00 - 28.50 (27.00)

Note: Inclusion of a country or region in the above table does not imply regulatory compliance. Refer to the Impinj Support Portal for a list of certified countries and regions by product. The list changes over time as new countries are certified and as certificates expire.

[1] Speedway (hardware version 5.x and greater) only supports power above 31.5 dBm when powered via an external power supply. Power is limited to 31.5 dBm when powered via PoE, except for EU, India and Japan which are limited to 30.0dBm when powered via PoE. Speedway readers with hardware versions of 4.x and earlier are limited to 30.0 dBm when powered by PoE.

[2] xPortal R640 - the user specifies transmit power in the range specified. The Octane firmware will limit the transmit power to the maximum value listed in parentheses as required by the regulatory region.

[3] With Antenna Hub attached, the R120 can transmit up to the same (higher) maximum power limits as R220 and R420.

[4] 2: ETSI EN 302-208 (with LBT) is deprecated and internally mapped to 7: ETSI EN 302-208 (version 1.2.1).

[5] 5: Japan 952-954 MHz is no longer supported. It has been replaced by 11: Japan 952-956 (without LBT).

9.2 Table 9.2 Regional Frequency Capabilities

Region	ChannelIndex	Frequency (MHz)
0: FCC part 15.247	1	902.750
	2	903.250
	3	903.750
	4	904.250
	5	904.750

Region	ChannelIndex	Frequency (MHz)
	6	905.250
	7	905.750
	8	906.250
	9	906.750
	10	907.250
	11	907.750
	12	908.250
	13	908.750
	14	909.250
	15	909.750
	16	910.250
	17	910.750
	18	911.250
	19	911.750
	20	912.250
	21	912.750
	22	913.250
	23	913.750
	24	914.250
	25	914.750
	26	915.250
	27	915.750
	28	916.250
	29	916.750
	30	917.250
	31	917.750
	32	918.250
	33	918.750
	34	919.250

Region	ChannelIndex	Frequency (MHz)
	35	919.750
	36	920.250
	37	920.750
	38	921.250
	39	921.750
	40	922.250
	41	922.750
	42	923.250
	43	923.750
	44	924.250
	45	924.750
	46	925.250
	47	925.750
	48	926.250
	49	926.750
	50	927.250
1: ETSI EN 300-220	N/A	N/A
2: ETSI EN 302-208	See region 7	See region 7
3: Hong Kong 920-925 MHz	1	920.250
	2	920.750
	3	921.250
	4	921.750
	5	922.250
	6	922.750
	7	923.250
	8	923.750
	9	924.250
	10	924.750
4: Taiwan 922-928 MHz	1	922.250

Region	ChannelIndex	Frequency (MHz)
	2	922.750
	3	923.250
	4	923.750
	5	924.250
	6	924.750
	7	925.250
	8	925.750
	9	926.250
	10	926.750
	11	927.250
	12	927.750
5: Japan 952-954 MHz	N/A	N/A
6: Japan 952-955 MHz, 10mW max power	N/A	N/A
7: ETSI EN 302-208 (version 1.4.1)	1	865.700
	2	866.300
	3	866.900
	4	867.500
8: Korea 917-921 MHz	1	917.300
	2	917.900
	3	918.500
	4	919.100
	5	919.700
	6	920.300
9: Malaysia 919-923MHz	1	919.250
	2	919.750
	3	920.250
	4	920.750

Region	ChannelIndex	Frequency (MHz)
10: China 920-925 MHz	5	921.250
	6	921.750
	7	922.250
	8	922.750
	1	920.625
	2	920.875
	3	921.125
	4	921.375
	5	921.625
	6	921.875
	7	922.125
	8	922.375
	9	922.625
	10	922.875
	11	923.125
	12	923.375
11: Japan 952-956 MHz (without LBT)	13	923.625
	14	923.875
	15	924.125
	16	924.375
12: South Africa 915-919 MHz	1	952.400
	2	953.600
	3	954.800
	4	956.000
	1	915.600
	2	915.800
	3	916.000
	4	916.200

Region	ChannelIndex	Frequency (MHz)
13: Brazil 902-907/915-928 MHz	5	916.400
	6	916.600
	7	916.800
	8	917.000
	9	917.200
	10	917.400
	11	917.600
	12	917.800
	13	918.000
	14	918.200
	15	918.400
	16	918.600
	17	918.800
	1	902.750
	2	903.250
	3	903.750
	4	904.250
	5	904.750
	6	905.250
	7	905.750
	8	906.250
	9	906.750
	10	907.250
	11	915.250
	12	915.750
	13	916.250
	14	916.750
	15	917.250
	16	917.750

Region	ChannelIndex	Frequency (MHz)
	17	918.250
	18	918.750
	19	919.250
	20	919.750
	21	920.250
	22	920.750
	23	921.250
	24	921.750
	25	922.250
	26	922.750
	27	923.250
	28	923.750
	29	924.250
	30	924.750
	31	925.250
	32	925.750
	33	926.250
14: Thailand 920-925 MHz	34	926.750
	35	927.250
	1	920.250
	2	920.750
	3	921.250
	4	921.750
	5	922.250
	6	922.750
	7	923.250
	8	923.750
	9	924.250
	10	924.750

Region	ChannelIndex	Frequency (MHz)
15: Singapore 920-925 MHz	1	920.250
	2	920.750
	3	921.250
	4	921.750
	5	922.250
	6	922.750
	7	923.250
	8	923.750
	9	924.250
	10	924.750
16: Australia 920-925 MHz	1	920.250
	2	920.750
	3	921.250
	4	921.750
	5	922.250
	6	922.750
	7	923.250
	8	923.750
	9	924.250
	10	924.750
17: India 865-867 MHz	1	865.100
	2	865.700
	3	866.300
	4	866.900
18: Uruguay 916-928 MHz	1	916.250
	2	916.750
	3	917.250
	4	917.750
	5	918.250

Region	ChannelIndex	Frequency (MHz)
	6	918.750
	7	919.250
	8	919.750
	9	920.250
	10	920.750
	11	921.250
	12	921.750
	13	922.250
	14	922.750
	15	923.250
	16	923.750
	17	924.250
	18	924.750
	19	925.250
	20	925.750
	21	926.250
	22	926.750
	23	927.250
19: Vietnam 920-925 MHz	1	920.250
	2	920.750
	3	921.250
	4	921.750
	5	922.250
	6	922.750
	7	923.250
	8	923.750
	9	924.250
	10	924.750
20: Israel 915-917 MHz	1	916.250

Region	ChannelIndex	Frequency (MHz)
21: Philippines 918-920 MHz	1	918.250
	2	918.750
	3	919.250
	4	919.750
22: Canada Post 902-928 MHz	N/A	N/A
23: Indonesia 923-925 MHz	1	923.250
	2	923.750
	3	924.250
	4	924.750
24: New Zealand 922-927 MHz	1	922.250
	2	922.750
	3	923.250
	4	923.750
	5	924.250
	6	924.750
	7	925.250
	8	925.750
	9	926.250
	10	926.750
25: Japan 916.7-920.9 MHz	1	916.800
	2	918.000
	3	919.200
	4	920.400
26: Latin America 902-928 MHz	1	902.750
	2	903.250
	3	903.750
	4	904.250
	5	904.750
	6	905.250

Region	ChannelIndex	Frequency (MHz)
	7	905.750
	8	906.250
	9	906.750
	10	907.250
	11	907.750
	12	908.250
	13	908.750
	14	909.250
	15	909.750
	16	910.250
	17	910.750
	18	911.250
	19	911.750
	20	912.250
	21	912.750
	22	913.250
	23	913.750
	24	914.250
	25	914.750
	26	915.250
	27	915.750
	28	916.250
	29	916.750
	30	917.250
	31	917.750
	32	918.250
	33	918.750
	34	919.250
	35	919.750

Region	ChannelIndex	Frequency (MHz)
	36	920.250
	37	920.750
	38	921.250
	39	921.750
	40	922.250
	41	922.750
	42	923.250
	43	923.750
	44	924.250
	45	924.750
	46	925.250
	47	925.750
	48	926.250
	49	926.750
	50	927.250
	1	916.250
	2	916.750
	3	917.250
	4	917.750
	5	918.250
27: Peru 916-928 MHz	6	918.750
	7	919.250
	8	919.750
	9	920.250
	10	920.750
	11	921.250
	12	921.750
	13	922.250
	14	922.750

Region	ChannelIndex	Frequency (MHz)
	15	923.250
	16	923.750
	17	924.250
	18	924.750
	19	925.250
	20	925.750
	21	926.250
	22	926.750
	23	927.250
	1	925.250
	2	925.750
	3	926.250
28: Bangladesh 925-927 MHz	4	926.750

Note: Inclusion of a country or region in the above table does not imply regulatory compliance. Refer to the Impinj Support Portal for a list of certified countries and regions by product. The list changes over time as new countries are certified and as certificates expire.

[1] Default frequencies for fixed frequency regions are listed in bold.

10 Revision History

Date	Revision	Comments
02/21/2008	3.0	Original document created for Octane 3.0 release
01/12/2009	3.2	Updated for Octane 3.2 release
04/24/2009	4.0	Updated for Octane 4.0 release
08/12/2009	4.2	Updated for Octane 4.2 release
04/07/2010	4.4	Updated for Octane 4.4 release
05/26/2010	4.4 rev 2	Updated for Octane 4.4.1 release
11/1/2010	4.6	Updated for Octane 4.6 release
12/1/10	4.6 rev 2	Updated for Octane 4.6 release
4/25/11	4.8	Updated for Octane 4.8 release. Removed Speedway-specifics. Document going forward covers only Speedway.
10/27/11	4.8.2	Updated to reflect Gen2 mode 5 addition for ETSI based regions.
1/23/12	4.10	Added new Japan 916-920MHz region, region 25 and Latin America 902-928MHz region, region 26.
9/30/14	5.0	Added new Peru 916-928MHz region, region 27 Updated ImpinjRequestedData enumeration Added ImpinjIntelligentAntennaManagement
12/16/14	5.2	Added xArray specific LLRP content LTK version 10.18.1.240
03/09/15	5.2.2	Updated PoE TxPower
06/15/15	5.4.0	Updated for Octane 5.4.0 features LTK version 1.20.0.240
08/13/15	5.6.0	Added Direction Role extensions
12/21/15	5.6.2	Updated for Octane 5.6.2
08/02/16	5.8.0	Updated for Octane 5.8.0
12/13/16	5.10.0	Updated for Octane 5.10.0
5/31/17	5.12.0	Updated for Octane 5.12.0

11 Notices

Copyright © 2019, Impinj, Inc. All rights reserved.

Impinj gives no representation or warranty, express or implied, for accuracy or reliability of information in this document. Impinj reserves the right to change its products and services and this information at any time without notice.

EXCEPT AS PROVIDED IN IMPINJ'S TERMS AND CONDITIONS OF SALE (OR AS OTHERWISE AGREED IN A VALID WRITTEN INDIVIDUAL AGREEMENT WITH IMPINJ), IMPINJ ASSUMES NO LIABILITY WHATSOEVER AND IMPINJ DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY, RELATED TO SALE AND/OR USE OF IMPINJ PRODUCTS INCLUDING LIABILITY OR WARRANTIES RELATING TO FITNESS FOR A PARTICULAR PURPOSE, MERCHANTABILITY, OR INFRINGEMENT.

NO LICENSE, EXPRESS OR IMPLIED, BY ESTOPPEL OR OTHERWISE, TO ANY PATENT, COPYRIGHT, MASK WORK RIGHT, OR OTHER INTELLECTUAL PROPERTY RIGHT IS GRANTED BY THIS DOCUMENT.

Impinj assumes no liability for applications assistance or customer product design. Customers should provide adequate design and operating safeguards to minimize risks.

Impinj products are not designed, warranted or authorized for use in any product or application where a malfunction may reasonably be expected to cause personal injury or death or property or environmental damage ("hazardous uses") or for use in automotive environments. Customers must indemnify Impinj against any damages arising out of the use of Impinj products in any hazardous or automotive uses.

Impinj, GrandPrix TM, Indy [®], Monza [®], Octane TM, QT [®], Speedway [®], STP TM, True3D TM, xArray [®], and xSpan [®] are trademarks or registered trademarks of Impinj, Inc. All other product or service names are trademarks of their respective companies.

These products may be covered by one or more U.S. patents. See <http://www.impinj.com/patents> for details.

For more information, contact support@impinj.com