



MT-41 Demo Guide

Kevin Chang
RD/SW
WP1/WCS/ICS UG

MT-41 Demo Architecture

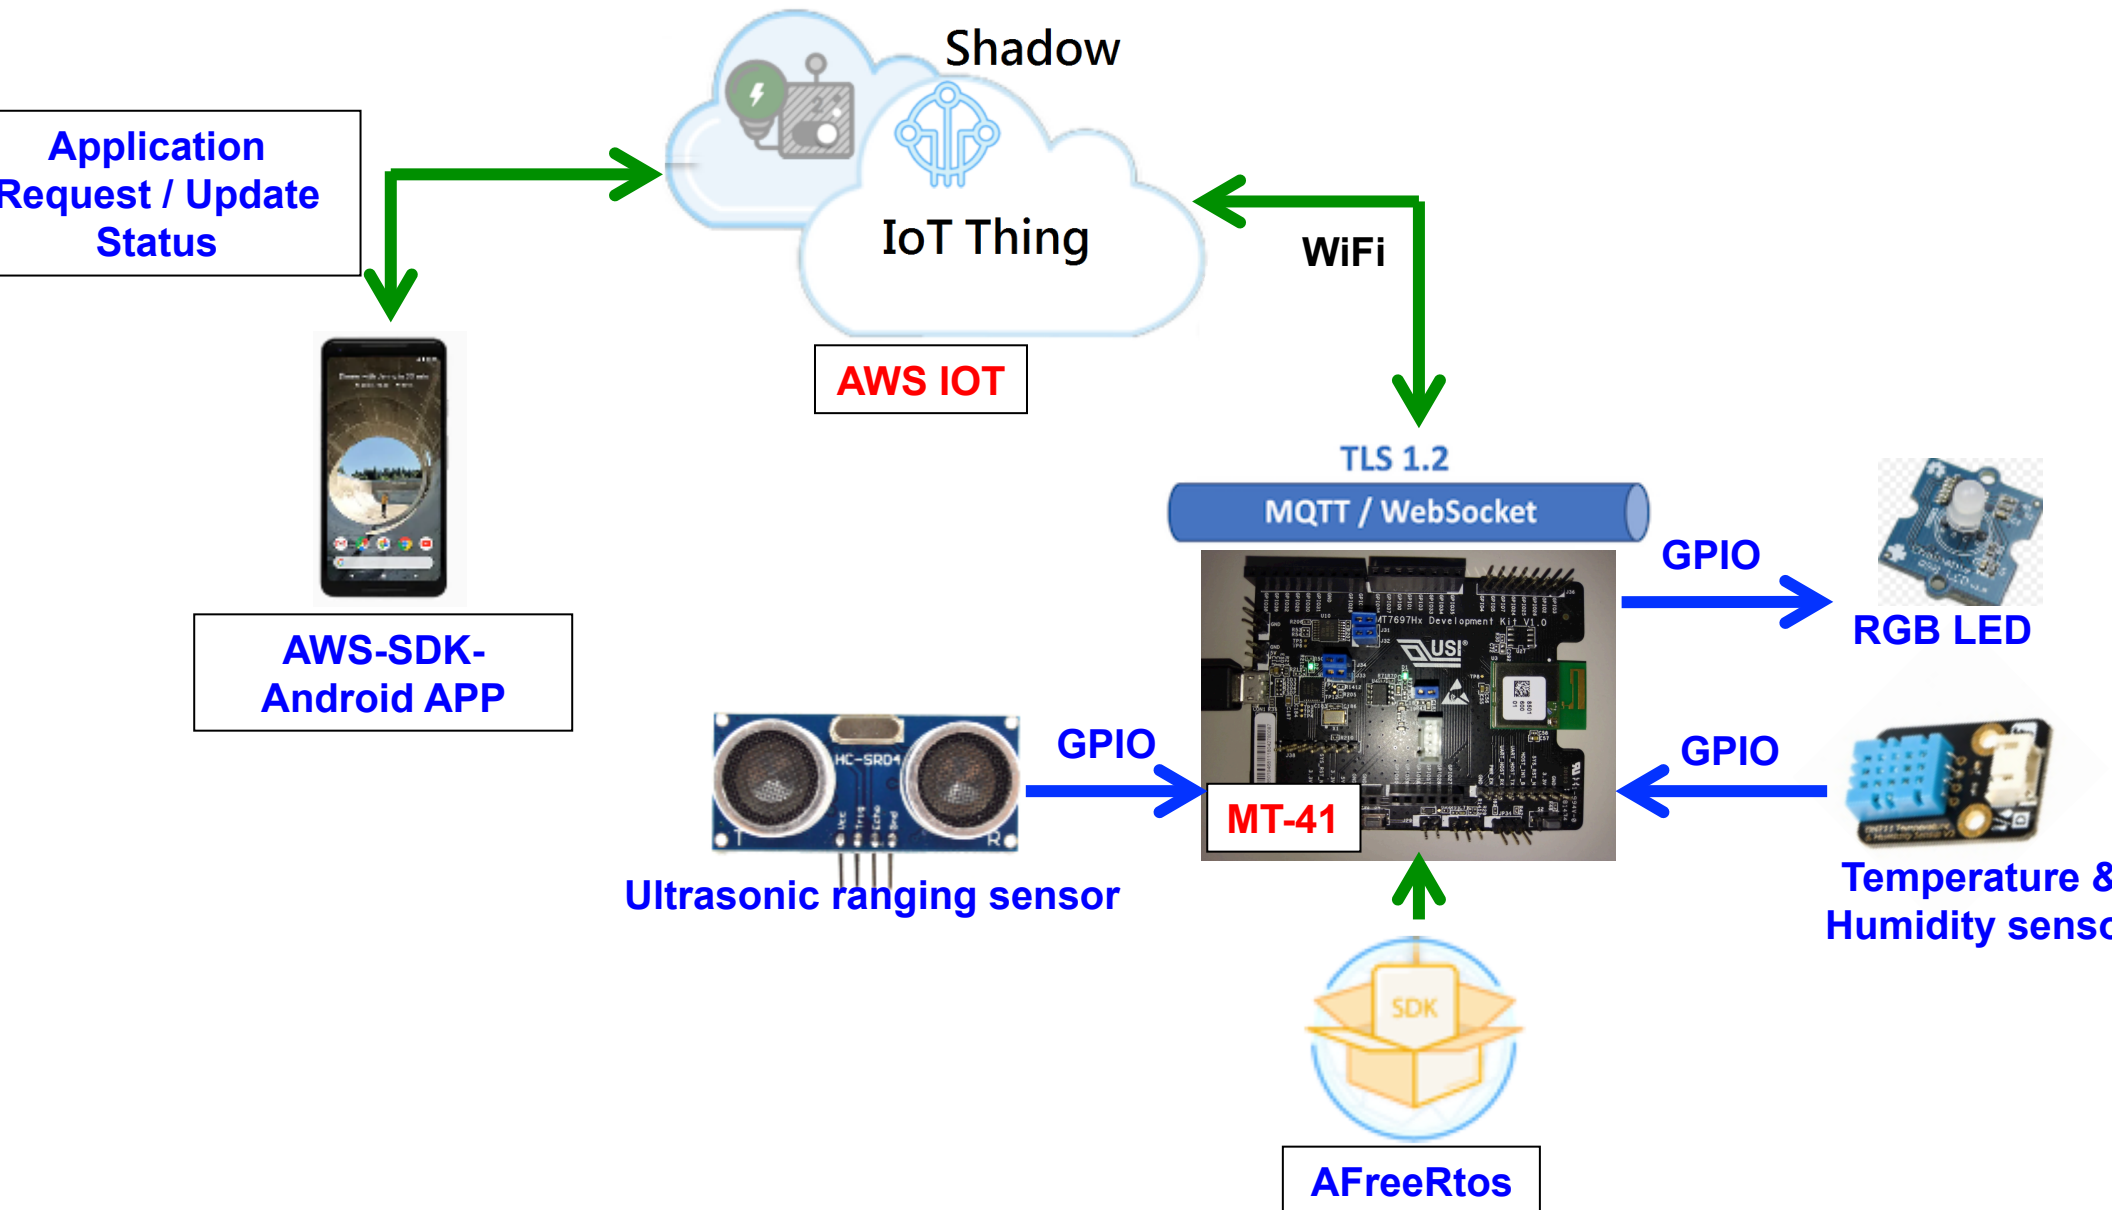


MT-41 Demo Pin Connection

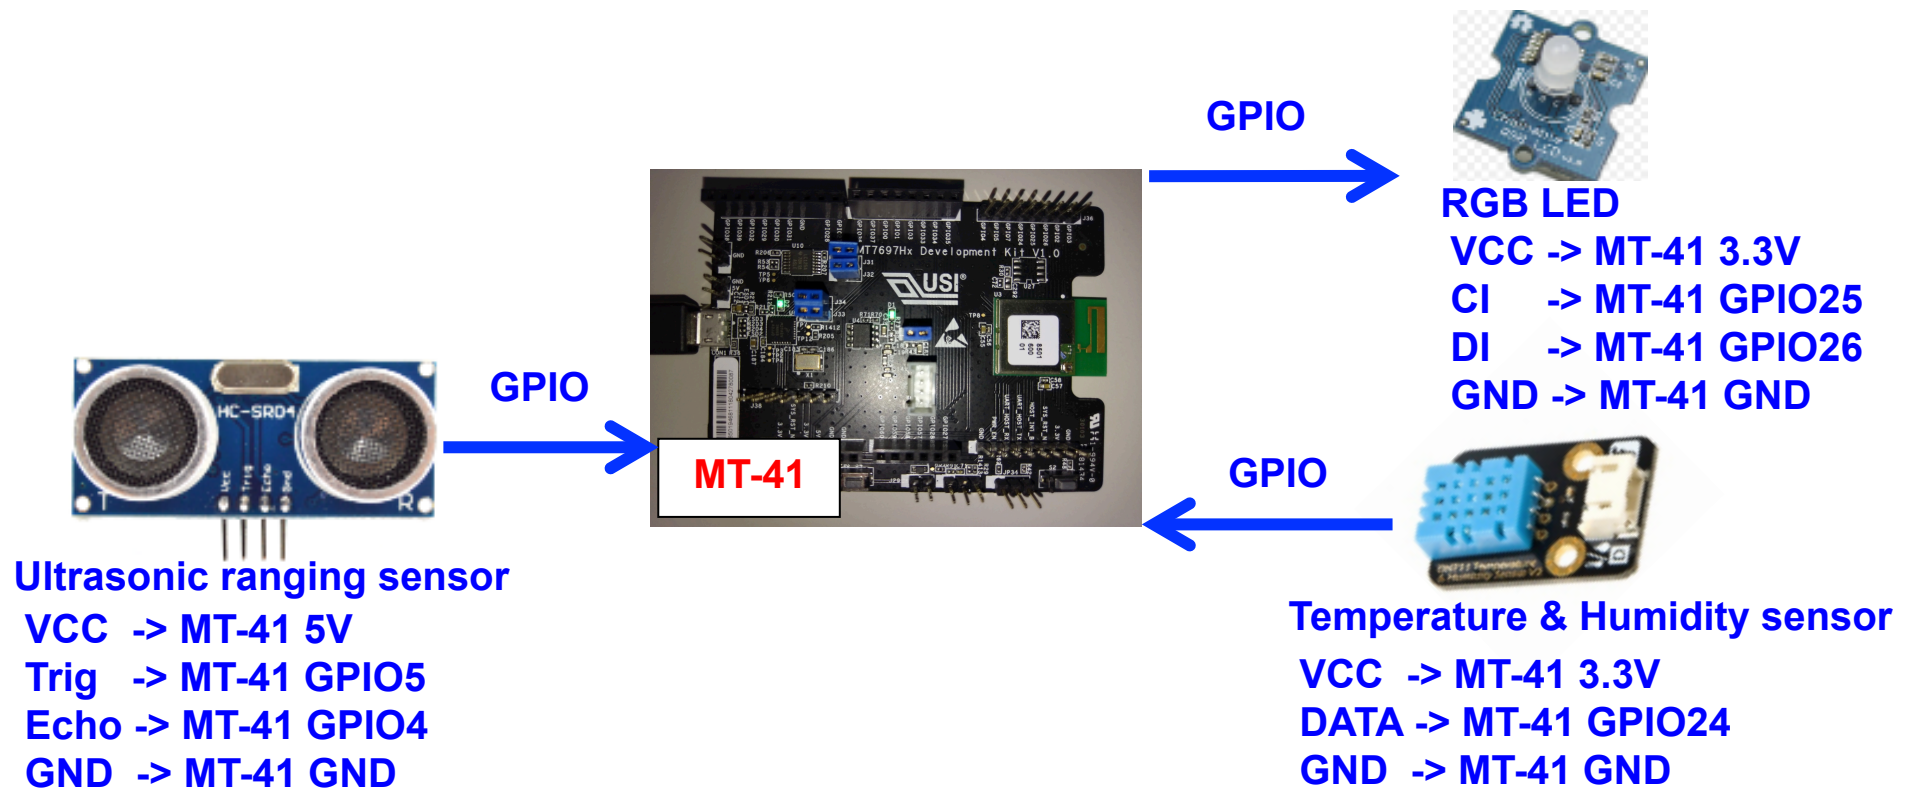

Amazon FreeRTOS Architecture



- Amazon FreeRTOS includes libraries that enable to:
 - Securely connect devices to the AWS IoT cloud using MQTT and device shadows
 - Discover and connect to AWS IoT Greengrass cores
 - Manage Wi-Fi connections
 - Listen for and process Amazon FreeRTOS Over-the-Air Updates

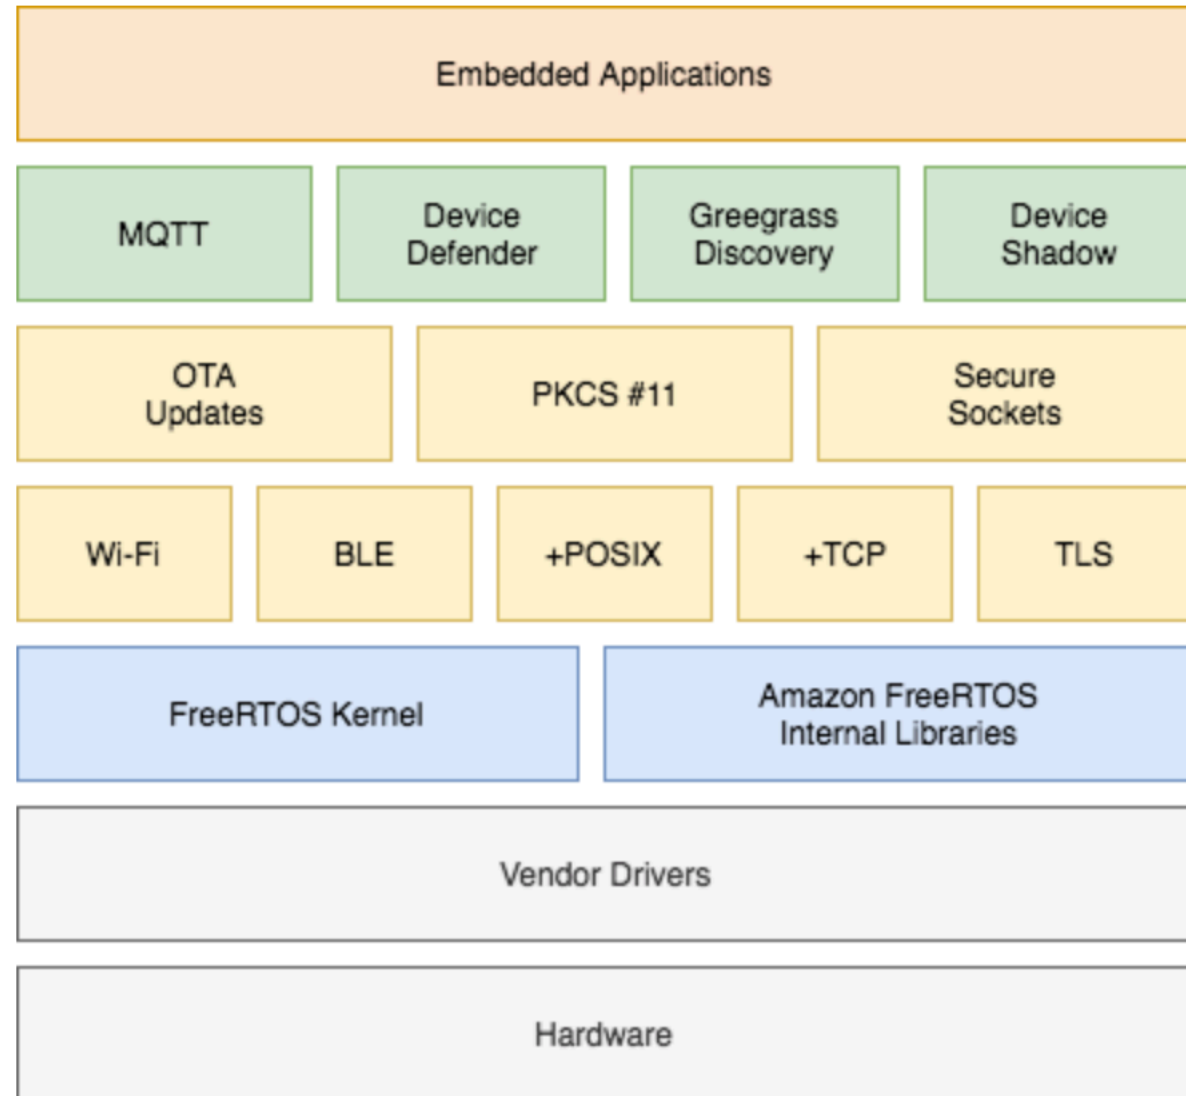

Getting Start with Amazon FreeRTOS



- Setting Up Your AWS Account and Permissions
 - To attach the AmazonFreeRTOSFullAccess policy to your IAM user
 - To attach the AWSIoTFullAccess policy to your IAM user
 - https://docs.aws.amazon.com/en_us/freertos/latest/userguide/freertos-account-and-permissions.html
- Registering Your MCU Board with AWS IoT
 - To register your board with AWS IoT, you need the following:
 - ◆ An AWS IoT policy
 - ◆ An AWS IoT thing
 - ◆ A private key and X.509 certificate
 - https://docs.aws.amazon.com/en_us/freertos/latest/userguide/get-started-freertos-thing.html

Getting Start with Amazon FreeRTOS



- Downloading Amazon FreeRTOS

- from the Amazon FreeRTOS console
 - ◆ Go to the Amazon FreeRTOS console
 - ◆ Under Predefined configurations, find Connect to AWS IoT- Platform, and then choose Download
- or from GitHub

<https://github.com/aws/amazon-freertos>

Getting Start with Amazon FreeRTOS



• Configuring the Amazon FreeRTOS Demos

- To configure your AWS IoT endpoint :
 - 1. Browse to the AWS IoT console. In the navigation pane, choose Settings.
 - ◆ Your AWS IoT endpoint is displayed in Endpoint. It should look like <1234567890123>-ats.iot.<us-east-1>.amazonaws.com. Make a note of this endpoint
 - 2. In the navigation pane, choose Manage, and then choose Things.
 - ◆ Your device should have an AWS IoT thing name. Make a note of this name
 - 3. Open <BASE_FOLDER>\demos\common\include\aws_clientcredential.h. Specify values for the following constants:
 - ◆ static const char clientcredentialMQTT_BROKER_ENDPOINT[] = "Your AWS IoT endpoint";
 - ◆ #define clientcredentialIOT_THING_NAME "The AWS IoT thing name of your board"

Getting Start with Amazon FreeRTOS



- Configuring the Amazon FreeRTOS Demos
 - To configure your Wi-Fi :
 - 1. Open <BASE_FOLDER>\demos\common\include\aws_clientcredential.h. Specify values for the following #define constants:
 - ◆ #define clientcredentialWIFI_SSID "Your Wi-Fi network SSID"
 - ◆ #define clientcredentialWIFI_PASSWORD "Your Wi-Fi network Password"
 - ◆ #define clientcredentialWIFI_SECURITY Your Wi-Fi network Security Type
 - Valid security types are:
 - ◆ eWiFiSecurityOpen (Open, no security)
 - ◆ eWiFiSecurityWEP (WEP security)
 - ◆ eWiFiSecurityWPA (WPA security)
 - ◆ eWiFiSecurityWPA2 (WPA2 security)

Getting Start with Amazon FreeRTOS



• Configuring the Amazon FreeRTOS Demos

- To format your AWS IoT credentials :
- You need the private key and certificate that downloaded from the AWS IoT console when registered the device
- 1. In a browser window, open
`<BASE_FOLDER>\tools\certificate_configuration\CertificateConfigurator.html`
- 2. Under Certificate PEM file, choose the `<ID>-certificate.pem.crt` that downloaded from the AWS IoT console
- 3. Under Private Key PEM file, choose the `<ID>-private.pem.key` that downloaded from the AWS IoT console
- 4. Choose Generate and save `aws_clientcredential_keys.h`, and then save the file in `<BASE_FOLDER>\demos\common\include`. This overwrites the existing file in the directory

Getting Start with the MT-41 Dev. Kit



- Setting Up the Environment

- Download and Install Keil MDK

- ◆ Go to the Keil MDK Getting Started page, and choose Download MDK-Core

- <http://www2.keil.com/mdk5/install/>

- Set Up a Serial Connection

- ◆ Install the Arm Mbed Windows serial port driver

- <https://os.mbed.com/docs/mbed-os/v5.12/tutorials/windows-serial-driver.html>

- ◆ After install the driver, a COM port appears in the Windows Device Manager
 - ◆ For debugging, you can open a session to the port with a terminal utility tool such as HyperTerminal or TeraTerm

Getting Start with the MT-41 Dev. Kit



- Setting Up Your AWS IoT Topic

- aws_hello_world.c at the <BASE_FOLDER>/demos/common/mqtt/
- Specify values for the following constants:
 - ◆ #define LEDTOPIC_NAME ((const uint8_t *) "Your LED TOPIC")
 - ◆ #define SensorTOPIC_NAME ((const uint8_t *) "Your Sensor TOPIC")

Getting Start with the MT-41 Dev. Kit



- Add Sensor Control in the Demo Project
 - Chainable P9813 LED:
 - p9813_led.c at the <BASE_FOLDER>/demos/mediatek/mt7697hx-dev-kit/common/application_code/mediatek_code/source/
 - p9813_led.h at the <BASE_FOLDER>/demos/mediatek/mt7697hx-dev-kit/common/application_code/mediatek_code/include/
 - Specify values for the following constants:
 - ◆ #define P9813_CLK HAL_GPIO_25
 - ◆ #define P9813_DATA HAL_GPIO_26
 - ◆ #define P9813_CLK_FUN_IDX HAL_GPIO_25_GPIO25
 - ◆ #define P9813_DATA_FUN_IDX HAL_GPIO_26_GPIO26

Getting Start with the MT-41 Dev. Kit



- Add Sensor Control in the Demo Project
 - DHT11 Temperature & Humidity Sensor:
 - dht.c at the <BASE_FOLDER>/demos/mediatek/mt7697hx-dev-kit/common/application_code/mediatek_code/source/
 - dht.h at the <BASE_FOLDER>/demos/mediatek/mt7697hx-dev-kit/common/application_code/mediatek_code/include/
 - Specify values for the following constants:
 - ◆ #define DHT_DATA HAL_GPIO_24
 - ◆ #define DHT_DATA_FUN_IDX HAL_GPIO_24_GPIO24

Getting Start with the MT-41 Dev. Kit



- Add Sensor Control in the Demo Project
 - HC-SR04 Ultrasonic Sensor:
 - hc_ranging.c at the <BASE_FOLDER>/demos/mediatek/mt7697hx-dev-kit/common/application_code/mediatek_code/source/
 - hc_ranging.h at the <BASE_FOLDER>/demos/mediatek/mt7697hx-dev-kit/common/application_code/mediatek_code/include/
 - Specify values for the following constants:
 - ◆ #define HCECHO HAL_GPIO_4
 - ◆ #define HCTRIG HAL_GPIO_5
 - ◆ #define HCECHO_FUN_IDX HAL_GPIO_4_GPIO4
 - ◆ #define HCTRIG_FUN_IDX HAL_GPIO_5_GPIO5

Getting Start with the MT-41 Dev. Kit



- Build the Demo Project with Keil MDK
 - Open the <BASE_FOLDER>/demos/mediatek/mt7697hx-dev-kit/uvision/aws_demo.uvprojx project file
 - After the project is built, the demo executable file at <BASE_FOLDER>/demos/mediatek/mt7697hx-dev-kit/uvision/out/Objects/aws_demo.axf
- Download the Demo Project with Keil MDK
 - Set the MT-41 Development Kit to PROGRAM mode
 - ◆ press and hold the PROG button. With the PROG button still pressed, press and release the RESET button, and then release the PROG button
 - From the menu, choose Flash, and then choose Configure Flash Tools
 - In Options for Target 'aws_demo', choose the Debug tab. Select Use, set the debugger to CMSIS-DAP Debugger, and then choose OK
 - From the menu, choose Flash, and then choose Download

Monitor with Terminal Emulator



- A terminal emulator can help you diagnose problems or verify that your device code is running properly.
- Connect your board to the computer before establish a serial connection to your board with a terminal emulator.
- Use the following settings to configure your terminal emulator:

Terminal Setting	Value
BAUD rate	115200
Data	8 bit
Parity	none
Stop	1 bit
Flow control	none

Monitor with MQTT Client

- Use the MQTT client to monitor the messages that device sends to the AWS Cloud
- To subscribe to the MQTT topic with the AWS IoT MQTT client
 - Sign in to the AWS IoT console, choose Test to open the MQTT client
 - In Subscription topic, enter “Your TOPIC”, and then choose subscribe to topic



The screenshot shows the AWS IoT MQTT client interface. On the left, there is a sidebar with the AWS IoT logo and a list of options: Monitor, Board, Page, ure, and end. The main area is titled "MQTT client" with a help icon. It is divided into two panels. The left panel, titled "Subscriptions", contains three options: "Subscribe to a topic", "Publish to a topic", and "Your TOPIC" (which is selected and highlighted with a blue bar). The right panel, titled "freertos/demos/iotdevice", contains a "Publish" section with the instruction "Specify a topic and a message to publish with a QoS of 0." Below this is a text input field containing "Your TOPIC" and a "Publish to topic" button. At the bottom of the right panel is a code editor showing a JSON message:


```
1 {  
2   "message": "Hello from AWS IoT console"  
3 }
```

Getting Start with AWS Android SDK



Setting Up Your AWS IoT Endpoint

- WiFiDemoActivity.java at androidawsusidemo/app/src/main/java/android/usidemo/
- Specify values for the following constants:
 - ◆ private static final String CUSTOMER_SPECIFIC_ENDPOINT = "Your AWS IoT endpoint";
 - ◆ private static final String AWS_IOT_POLICY_NAME = "Your AWS IoT policy";
 - ◆ private static final Regions MY_REGION = Regions.Your AWS IoT Region ;
 - ◆ private static final String PUBLISH_TOPIC ="Your LED TOPIC";
 - ◆ private static final String SUBSCRIBE_TOPIC ="Your Sensor TOPIC";
- Refer to aws-sdk-android-samples
<https://github.com/aws-labs/aws-sdk-android-samples/tree/master/AndroidPubSub>

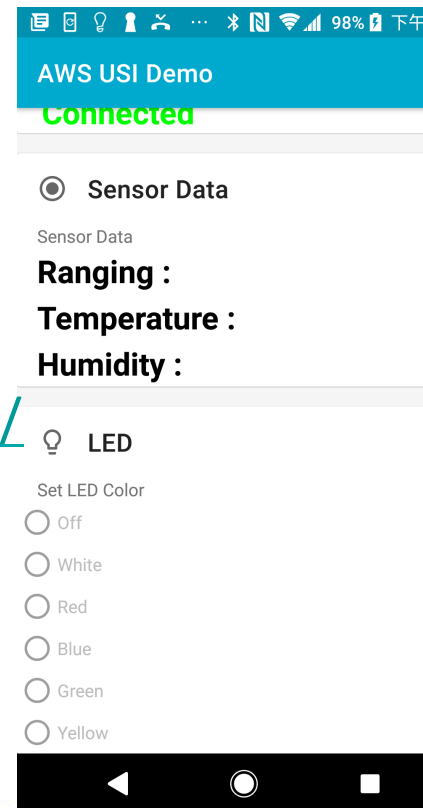

Thank You

www.usish.com

Realizing IDEAS Together