
SUEWS Documentation

Release 2018a.alpha

micromet@University of Reading, led by Prof Sue Grimmond

Apr 05, 2018

CONTENTS

1	Recent publications	3
2	Introduction	5
3	SUEWS and UMEP	7
4	Parameterisations and sub-models within SUEWS	9
4.1	Net all-wave radiation, Q^*	9
4.2	Anthropogenic heat flux, Q_F	9
4.3	Storage heat flux, ΔQ_S	9
4.4	Turbulent heat fluxes, Q_H and Q_E	10
4.5	Water balance	10
4.6	Snowmelt	10
4.7	Convective boundary layer	11
4.8	Thermal comfort	11
5	Preparing to run the model	13
5.1	Preparatory reading	13
5.2	Decide what type of model run you are interested in	13
5.3	Download the program and example data files	13
5.4	Run the model for example data	14
5.5	Preparation of data	14
5.6	Run the model for your site	18
5.7	Analyse the output	18
5.8	Summary of files	18
6	Input files	21
6.1	RunControl.nml	21
6.2	SUEWS_SiteInfo.xlsm	35
6.3	Initial Conditions file	143
6.4	Meteorological Input File	152
6.5	CBL input files	153
6.6	ESTM-related files	157
6.7	SOLWEIG input files	159
7	Output files	167
7.1	Runtime diagnostic information	167
7.2	Model output files	168
8	Troubleshooting	177
8.1	How to create a directory?	177

8.2	How to unzip a file	177
8.3	A text editor	177
8.4	Command prompt	177
8.5	Day of year [DOY]	177
8.6	ESTM output	177
8.7	First things to Check if the program seems to have problems	178
9	Acknowledgements	179
10	Notation	181
11	Development, Suggestions and Support	183
12	Version History	185
12.1	New in SUEWS Version 2018a	185
12.2	New in SUEWS Version 2017b (released 2 August 2017)	185
12.3	New in SUEWS Version 2017a (Feb 2017)	185
12.4	New in SUEWS Version 2016a (released 21 June 2016)	186
12.5	New in SUEWS Version 2014b (released 8 October 2014)	187
12.6	New in SUEWS Version 2014a.1 (released 26 February 2014)	187
12.7	New in SUEWS Version 2014a (released 21 February 2014)	187
12.8	New in SUEWS Version 2013a	188
12.9	New in SUEWS Version 2012b	188
12.10	New in SUEWS Version 2012a	189
12.11	New in SUEWS Version2011b	189
13	Differences between SUEWS, LUMPS and FRAISE	191
13.1	FRAISE Flux Ratio – Active Index Surface Exchange	191
	References	193
	Index	197

The current version of SUEWS is v2017b. The software can be downloaded by completing [this form](#).

This documentation site is regularly updated with new developments. For what's new in this version, see *New in SUEWS Version 2018a*.

The **latest formal** release of SUEWS is **v2017b** (released 1 August 2017).

The manual for SUEWS v2017b can be accessed [here](#) and should be referenced as follows:

Ward HC, L Järvi, T Sun, S Onomura, F Lindberg, F Olofson, A Gabey, CSB Grimmond (2017).
SUEWS Manual V2017b Department of Meteorology, University of Reading, Reading, UK

Please refer to [Ward et al. \(2017\)](#) for further details v2017a:

Ward HC, Yin San Tan, AM Gabey, S Kotthaus, WTJ Morrison, CSB Grimmond. Impact of temporal resolution of precipitation forcing data on modelled urban-atmosphere exchanges and surface conditions. International Journal of Climatology. doi: [10.1002/joc.5200](#)

Note: See other publications in the next section (if you have papers that could be added, please send them through)

RECENT PUBLICATIONS

Note: If you have papers to add to this list please let us and others know via the [email list](#).

- [Järvi et al. \(2017\)](#)
topic Application and evaluation in cold climates. Implications of warming
citation Järvi L, S Grimmond, JP McFadden, A Christen, I Strachan, M Taka, L Warsta, M Heimann 2017: Warming effects on the urban hydrology in cold climate regions Scientific Reports 7: 5833
- [Kokkonen et al. \(2017\)](#)
topic Downscaling climate (rainfall) data to 1 h
citation Kokkonen T, CSB Grimmond, O Rätty, HC Ward, A Christen, T Oke, S Kotthaus, L Järvi 2017: Sensitivity of Surface Urban Energy and Water Balance Scheme (SUEWS)
- [Ward and Grimmond \(2017\)](#)
topic for example applications:
citation Ward HC, S Grimmond 2017: Using biophysical modelling to assess the impact of various scenarios on summertime urban climate across Greater London Landscape and Urban Planning 165, 142–161
- [Demuzere et al. 2017](#)
topic evaluation in Singapore and comparison with other urban land surface models
citation Demuzere M, S Harshan, L Järvi, M Roth, CSB Grimmond, V Masson, KW Oleson, E Velasco H Wouters 2017: Impact of urban canopy models and external parameters on the modelled urban energy balance QJRMS, 143, Issue 704, Part A, 1581–1596
- [Ward et al.\(2016\)](#)
topic Evaluation of SUEWS model
citation Ward HC, Kotthaus S, Järvi L and Grimmond CSB (2016) Surface Urban Energy and Water Balance Scheme (SUEWS): Development and evaluation at two UK sites. Urban Climate
- [Ao et al. \(2016\)](#)
topic Evaluation of radiation in Shanghai
citation Ao XY, CSB Grimmond, DW Liu, ZH Han, P Hu, YD Wang, XR Zhen, JG Tan 2016: Radiation fluxes in a business district of Shanghai JAMC, 55, 2451-2468

- Onomura et al. (2015)

topic Boundary layer modelling

citation Onomura S, Grimmond CSB, Lindberg F, Holmer B & Thorsson S (2015) Meteorological forcing data for urban outdoor thermal comfort models from a coupled convective boundary layer and surface energy balance scheme Urban Climate, 11, 1-23

- Järvi et al. (2014)

topic Snow melt model development

citation Järvi L, Grimmond CSB, Taka M, Nordbo A, Setälä H & Strachan IB 2014: Development of the Surface Urban Energy and Water balance Scheme (SUEWS) for cold climate cities Geosci. Model Dev. 7, 1691-1711

Other papers

INTRODUCTION

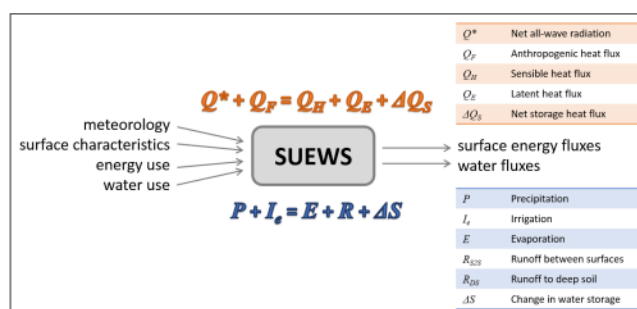


Fig. 2.1: Overview of SUEWS

Surface Urban Energy and Water Balance Scheme (**SUEWS**) (Järvi et al. 2011 [J11], Ward et al. 2016 [W16]) is able to simulate the urban radiation, energy and water balances using only commonly measured meteorological variables and information about the surface cover. SUEWS utilizes an evaporation-interception approach (Grimmond et al. 1991 [G91]), similar to that used in forests, to model evaporation from urban surfaces.

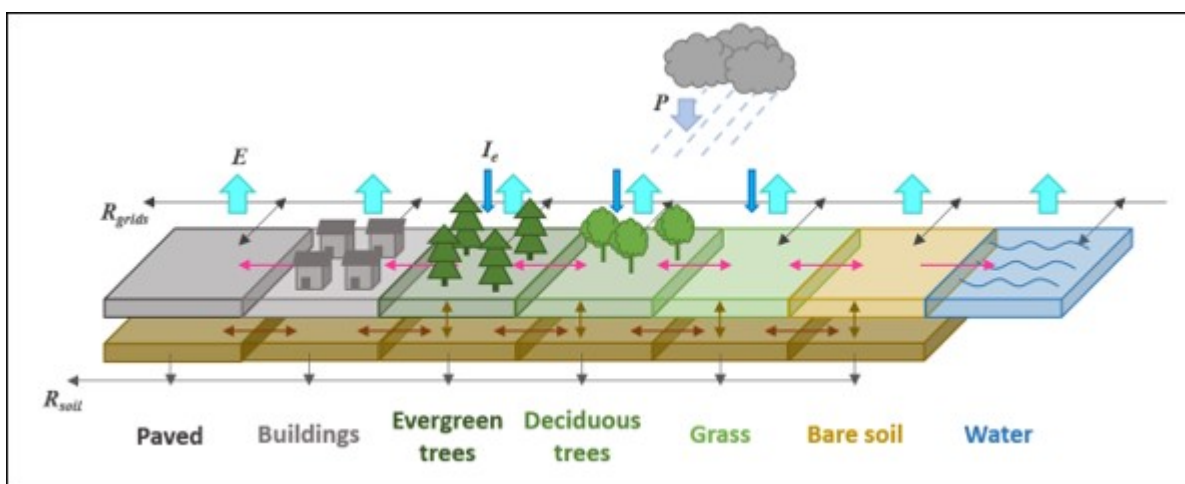


Fig. 2.2: The seven surface types considered in SUEWS

The model uses seven surface types: paved, buildings, evergreen trees/shrubs, deciduous trees/shrubs, grass, bare soil and water. The surface state for each surface type at each time step is calculated from the running water balance of the canopy where the evaporation is calculated from the Penman-Monteith equation. The soil moisture below each surface type (excluding water) is taken into account.

Horizontal movement of water above and below ground level is allowed. The user can specify the model time-step, but 5 min is strongly recommended. The main output file is provided at a resolution of 60 min by default. The model provides the radiation and energy balance components, surface and soil wetness, surface and soil runoff and the drainage for each surface. Timestamps refer to the end of the averaging period.

Model applicability: SUEWS is a neighbourhood-scale or local-scale model.

SUEWS AND UMEP

SUEWS can be run as a standalone model but also can be used within UMEP. There are numerous tools included within UMEP to help a user get started. The SUEWS simple within UMEP is a fast way to start using SUEWS.

The version of SUEWS within UMEP is the complete model. Thus all options that are listed in this manual are available to the user. In the UMEP SUEWS simple runs all options are set to values to allow initial exploration of the model behaviour.

The version of SUEWS within UMEP is a more recent release of the model than the independent SUEWS release.

- **Pre-Processor**
 - **Meteorological Data**
 - * **Prepare Existing Data** Transforms meteorological data into UMEP format
 - * **Download data (WATCH)** Prepare meteorological dataset from WATCH
 - **Spatial Data**
 - * **Spatial Data Downloader** Plugin for retrieving geodata from online services suitable for various UMEP related tools - **LCZ Converter** Conversion from Local Climate Zones (LCZs) in the WUDAPT database into SUEWS input data
 - **Urban land cover**
 - * **Land Cover Reclassifier** Reclassifies a grid into UMEP format land cover grid. Land surface models
 - * **Land Cover Fraction (Point)** Land cover fractions estimates from a land cover grid based on a specific point in space
 - * **Land Cover Fraction (Grid)** Land cover fractions estimates from a land cover grid based on a polygon grid
 - **Urban Morphology**
 - * **Morphometric Calculator (Point)** Morphometric parameters from a DSM based on a specific point in space
 - * **Morphometric Calculator (Grid)** Morphometric parameters estimated from a DSM based on a polygon grid
 - * **Source Area Model (Point)** Source area calculated from a DSM based on a specific point in space.
 - **SUEWS input data**
 - * **SUEWS Prepare** Preprocessing and preparing input data for the SUEWS model

- **Processor**
 - **Anthropogenic Heat (Q_F)**
 - * **LQF** Spatial variations anthropogenic heat release for urban areas
 - * **GQF** Anthropogenic Heat (Q_F).
 - **Urban Energy Balance**
 - * **SUEWS (Simple)** Urban Energy and Water Balance.
 - * **SUEWS (Advanced)** Urban Energy and Water Balance.
- **Post-Processor**
 - **Urban Energy Balance**
 - * **SUEWS analyser** Plugin for plotting and statistical analysis of model results from SUEWS simple and SUEWS advanced
 - **Benchmark**
 - * **Benchmark System** For statistical analysis of model results, such as SUEWS

PARAMETERISATIONS AND SUB-MODELS WITHIN SUEWS

4.1 Net all-wave radiation, Q^*

There are several options for modelling or using observed radiation components depending on the data available. As a minimum, SUEWS requires incoming shortwave radiation to be provided.

1. Observed net all-wave radiation can be provided as input instead of being calculated by the model.
2. Observed incoming shortwave and incoming longwave components can be provided as input, instead of incoming longwave being calculated by the model.
3. Other data can be provided as input, such as cloud fraction (see options in *RunControl.nml*).
4. **NARP** (Net All-wave Radiation Parameterization, Offerle et al. 2003 [*O2003*] , Loridan et al. 2011 [*L2011*]) scheme calculates outgoing shortwave and incoming and outgoing longwave radiation components based on incoming shortwave radiation, temperature, relative humidity and surface characteristics (albedo, emissivity).

4.2 Anthropogenic heat flux, Q_F

1. Two simple anthropogenic heat flux sub-models exist within SUEWS:
 - Järvi et al. (2011) [*J11*] approach, based on heating and cooling degree days and population density (allows distinction between weekdays and weekends).
 - Loridan et al. (2011) [*L2011*] approach, based on a linear piece-wise relation with air temperature.
2. Pre-calculated values can be supplied with the meteorological forcing data, either derived from knowledge of the study site, or obtained from other models, for example:
 - **LUCY** (Allen et al. 2011 [*lucy*], Lindberg et al. 2013 [*lucy2*]). A new version has been now included in UMEP. To distinguish it is referred to as ****LQF****
 - **GreaterQF** (Iamarino et al. 2011 [*I11*]). A new version has been now included in UMEP. To distinguish it is referred to as ****GQF****

4.3 Storage heat flux, ΔQ_s

1. Three sub-models are available to estimate the storage heat flux:
 - **OHM** (Objective Hysteresis Model, Grimmond et al. 1991 [*G91OHM*], Grimmond & Oke 1999a [*GO99QS*], 2002 [*GO2002*]). Storage heat flux is calculated using empirically-fitted relations with net all-wave radiation and the rate of change in net all-wave radiation.

- **AnOHM** (Analytical Objective Hysteresis Model, Sun et al. 2017 [*AnOHM17*]). OHM approach using analytically-derived coefficients. (**Not recommended in v2017b**)
 - **ESTM** (Element Surface Temperature Method, Offerle et al. 2005 [*Oaf2005*]). Heat transfer through urban facets (roof, wall, road, interior) is calculated from surface temperature measurements and knowledge of material properties. (**Not recommended in v2017b**)
2. Alternatively, ‘observed’ storage heat flux can be supplied with the meteorological forcing data.

4.4 Turbulent heat fluxes, Q_H and Q_E

1. **LUMPS** (Local-scale Urban Meteorological Parameterization Scheme, Grimmond & Oke 2002 [*GO2002*]) provides a simple means of estimating sensible and latent heat fluxes based on the proportion of vegetation in the study area.
2. **SUEWS** adopts a more biophysical approach to calculate the latent heat flux; the sensible heat flux is then calculated as the residual of the energy balance. The initial estimate of stability is based on the LUMPS calculations of sensible and latent heat flux. Future versions will have alternative sensible heat and storage heat flux options.

Sensible and latent heat fluxes from both LUMPS and SUEWS are provided in the *Output files*. Whether the turbulent heat fluxes are calculated using LUMPS or SUEWS can have a major impact on the results. For SUEWS, an appropriate surface conductance parameterisation is also critical [*J11*] [*W16*]. For more details see *Differences between SUEWS, LUMPS and FRAISE*.

4.5 Water balance

The running water balance at each time step is based on the urban water balance model of Grimmond et al. (1986) [*G86*] and urban evaporation-interception scheme of Grimmond and Oke (1991) [*G91*].

- Precipitation is a required variable in the meteorological forcing file.
- Irrigation can be modelled [*J11*] or observed values can be provided if data are available.
- Drainage equations and coefficients to use must be specified in the input files.
- Soil moisture can be calculated by the model (**Use of observed soil moisture is not possible in v2017b**).
- Runoff is permitted:
 - between surface types within each model grid
 - between model grids (**Not implemented in v2017b**)
 - to deep soil
 - to pipes.

4.6 Snowmelt

The snowmelt model within SUEWS is described in Järvi et al. (2014) [*Leena2014*]. Due to changes in the new model version (since v2016a) when compared to the older versions, the snow calculation has slightly changed. The main difference is that previously all surface state could freeze in 1-h time step but now the

amount of freezing surface state is calculated similar way as melt water can freeze within the snow pack. Also the snowmelt-related coefficients have slightly changed (see *SUEWS_Snow.txt*).

4.7 Convective boundary layer

A convective boundary layer (CBL) slab model (Cleugh and Grimmond 2001 [CG2001]) calculates the CBL height, temperature and humidity during daytime (Onomura et al. 2015 [Shiho2015]).

4.8 Thermal comfort

SOLWEIG (Solar and longwave environmental irradiance geometry model, Lindberg et al. 2008 [FL2008], Lindberg and Grimmond 2011 [FL2011]) is a 2D radiation model to estimate mean radiant temperature.

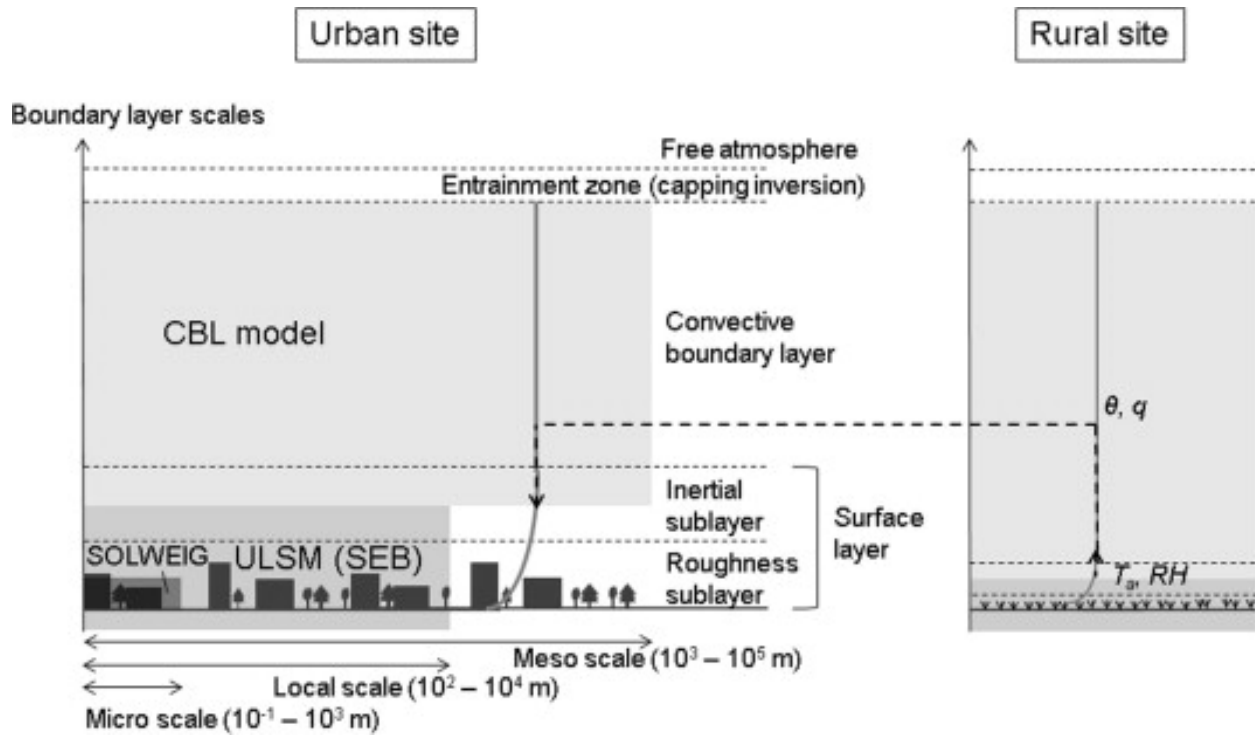


Fig. 4.1: Overview of scales. Source: Onomura et al. (2015) [Shiho2015]

PREPARING TO RUN THE MODEL

The following is to help with the model setup. Note that there is a version of SUEWS in [UMEP](#) and there are some starting [tutorials](#) for that. The version there is the same (i.e. the executable) as the standalone version so you can swap to that later once you have some familiarity.

5.1 Preparatory reading

Read the manual and relevant papers (and references therein):

- Järvi L, Grimmond CSB & Christen A (2011) The Surface Urban Energy and Water Balance Scheme (SUEWS): Evaluation in Los Angeles and Vancouver. *J. Hydrol.* 411, 219-237. doi:10.1016/j.jhydrol.2011.10.00
- Järvi L, Grimmond CSB, Taka M, Nordbo A, Setälä H & Strachan IB (2014) Development of the Surface Urban Energy and Water balance Scheme (SUEWS) for cold climate cities. *Geosci. Model Dev.* 7, 1691-1711. doi:10.5194/gmd-7-1691-2014
- Ward HC, Kotthaus S, Järvi L and Grimmond CSB (2016) Surface Urban Energy and Water Balance Scheme (SUEWS): development and evaluation at two UK sites. *Urban Climate* 18, 1-32. doi:10.1016/j.uclim.2016.05.001

See other publications with example applications

5.2 Decide what type of model run you are interested in

	Available in this release
LUMPS	Yes – not standalone
SUEWS at a point or for an individual area	Yes
SUEWS for multiple grids or areas	Yes
SUEWS with Boundary Layer (BL)	Yes
SUEWS with snow	Yes
SUEWS with SOLWEIG	No
SUEWS with SOLWEIG and BL	No

5.3 Download the program and example data files

Visit the website to receive a link to download the program and example data files. Select the appropriate compiled version of the model to download. For windows there is an installation version which will put the

programs and all the files into the appropriate place. There is also a version linked to QGIS: ****UMEP****.

Note, as the definition of long double precision varies between computers (e.g. Mac vs Windows) slightly different results may occur in the output files.

Test/example files are given for the London KCL site, 2011 data (denoted Kc11)

In the following SS is the site code (e.g. Kc), ss the grid ID, YYYY the year and tt the time interval.

Filename	Description	Input/output
SSss_data.txt	Meteorological input	Input file (60-min)
SSss_YYYY_data_5.txt	Meteorological input	Input file (5-min)
InitialConditionsSSss	Initial conditions	Input - _YYYY.nml(+) file
SUEWS_SiteInfo_SSss.x	Spreadsheet	Input lsm containing all other input information
RunControl.nml	Sets model run	Input (located in options main directory)
SS_Filechoices.txt	Summary of model run	Output options
SSss_YYYY_5.txt	(Optional) 5-min	Output resolution output file
SSss_YYYY_60.txt	60-min resolution	Output output file
SSss_DailyState.txt	Daily state variables	Output (all years in one file)

(+) There is a second file InitialConditionsSSss_YYYY_EndOfRun.nml or InitialConditionsSSss_YYYY+1.nml in the input directory. At the end of the run, and at the end of each year of the run, these files are written out so that this information could be used to initialize further model runs.

5.4 Run the model for example data

Before running the model for your own data it is good to make certain that you can run the test data and get the same results as in the example files provided. It is recommended that you make a copy of the example output files and put them somewhere else so you can compare the results. When you run the program it will write over the supplied files.

To run the model you can use **Command Prompt** (in the directory where the programme is located type the model name) or just double click the executable file.

Please see [Troubleshooting](#) if you have problems running the model.

5.5 Preparation of data

This section describes the information required to run SUEWS for your site. The input data can be summarised as follows:

1. Continuous *meteorological forcing data* for the entire period to be modelled. Note you can not have gaps in the meteorological data. If you need help with preparing the data you may want to use some of the tools in [UMEP](#).
2. Knowledge of the *surface and soil conditions immediately before the start of the run* (if these initial conditions are not known, it is usually possible to determine suitable values by running the model and using the output at the end of the run to infer the conditions at the start of the run).
3. The *location of the site* (latitude, longitude, altitude).

4. Information about the *characteristics of the surface*, including land cover, heights of buildings and trees, radiative characteristics (e.g. albedo, emissivity), drainage characteristics, soil characteristics, snow characteristics, phenological characteristics (e.g. seasonal cycle of LAI).
5. Information about *human behaviour*, including energy use and water use (e.g. for irrigation or street cleaning) and snow clearing (if applicable). The anthropogenic energy use and water use may be provided as a time series in the meteorological forcing file if these data are available or modelled based on parameters provided to the model, including population density, hourly and weekly profiles of energy and water use, information about the proportion of properties using irrigation and the type of irrigation (automatic or manual).

It is particularly important to ensure the following input information is appropriate and representative of the site:

- Fractions of different land cover types and (less so) heights of buildings [W16]
- Accurate meteorological forcing data, particularly precipitation and incoming shortwave radiation [Ko17]
- Initial soil moisture conditions [Best2014]
- Anthropogenic heat flux parameters, particularly if there are considerable energy emissions from transport, buildings, metabolism, etc [W16]
- External water use (if irrigation or street cleaning occurs)
- Snow clearing (if running the snow option)
- Surface conductance parameterisation [J11] [W16]

SUEWS can be run either for an individual area or for multiple areas. There is no requirement for the areas to be of any particular shape but here we refer to them as model ‘grids’.

5.5.1 Preparation of site characteristics and model parameters

The area to be modelled is described by a set of characteristics that are specified in the *SUEWS_SiteSelect.txt* file. Each row corresponds to one model grid for one year (i.e. running a single grid over three years would require three rows; running two grids over two years would require four rows). Characteristics are often selected by a code for a particular set of conditions. For example, a specific soil type (links to *SUEWS_Soil.txt*) or characteristics of deciduous trees in a particular region (links to *SUEWS_Veg.txt*). The intent is to build a library of characteristics for different types of urban areas. The codes are specified by the user, must be integer values and must be unique within the first column of each input file, otherwise the model will return an error. (Note in *SUEWS_SiteSelect.txt* the first column is labelled ‘Grid’ and can contain repeat values for different years.) See *Input files* for details. Note UMEP maybe helpful for components of this.

Land cover

For each grid, the land cover must be classified using the following surface types:

Classification	Surface type	File where characteristics are specified
Non-vegetated	Paved surfaces	<i>SUEWS_NonVeg.txt</i>
	Building	<i>SUEWS_NonVeg.txt</i>
	Bare soil	<i>SUEWS_NonVeg.txt</i>
Vegetation	Evergreen trees	<i>SUEWS_Veg.txt</i>
	Deciduous trees	<i>SUEWS_Veg.txt</i>
	Grass	<i>SUEWS_Veg.txt</i>
Water	Water	<i>SUEWS_Water.txt</i>
Snow	Snow	<i>SUEWS_Snow.txt</i>

The surface cover fractions (i.e. proportion of the grid taken up by each surface) must be specified in *SUEWS_SiteSelect.txt*. The surface cover fractions are **critical**, so make certain that the different surface cover fractions are appropriate for your site.

For some locations, land cover information may be already available (e.g. from various remote sensing resources). If not, websites like Bing Maps and Google Maps allow you to see aerial images of your site and can be used to estimate the relative proportion of each land cover type. If detailed spatial datasets are available, **UMEP** allows for a direct link to a GIS environment using QGIS.

Anthropogenic heat flux (Q_F)

You can either model Q_F within SUEWS or provide it as an input.

- To model it population density is needed as an input for LUMPS and SUEWS to calculate Q_F .
- If you have no information about the population of the site we recommend that you use the LUCY model [*lucy*] [*lucy2*] to estimate the anthropogenic heat flux which can then be provided as input SUEWS along with the meteorological forcing data. The LUCY model can be downloaded from [here](#).

Alternatively, you can use the updated version of LUCY called **LQF**, which is included in **UMEP**.

Other information

The surface cover fractions and population density can have a major impact on the model output. However, it is important to consider the suitability of all parameters for your site. Using inappropriate parameters may result in the model returning an error or, worse, generating output that is simply not representative of your site. Please read the section on *Input files*. Recommended or reasonable ranges of values are suggested for some parameters, along with important considerations for how to select appropriate values for your site.

Data Entry

To create the series of input text files describing the characteristics of your site, there are three options:

1. Data can be entered directly into the input text files. The example (.txt) files provide a template to create your own files which can be edited with a *text editor* directly.
2. Data can be entered into the spreadsheet **SUEWS_SiteInfo.xlsm** and the input text files generated by running the macro.
3. Use [<http://urban-climate.net/umep/UMEP>] **UMEP**].

To run the xlsm macro: Enter the data for your site into the xlsm spreadsheet **SUEWS_SiteInfo.xlsm** and then use the macro to create the text files which will appear the same directory.

If there is a problem

- Make sure none of the text files to be generated are open.
- It is recommended to close the spreadsheet before running the actual model code.

Note that in all txt files:

- The first two rows are headers. The first row is the column number; the second row is the column name.
- The names and order of the columns should not be altered from the templates, as these are checked by the model and errors will be returned if particular columns cannot be found.
- Since v2017a it is no longer necessary for the meteorological forcing data to have two rows with -9 in column 1 as their last two rows.
- “!” indicates a comment, so any text following “!” on the same line will not be read by the model.
- If data are unavailable or not required, enter the value -999 in the correct place in the input file.
- Ensure the units are correct for all input information. See *Input files* for a description of parameters.

In addition to these text files, the following files are also needed to run the model.

5.5.2 Preparation of the RunControl file

In the RunControl.nml file the site name (**SS__**) and directories for the model input and output are given. This means **before running** the model (even the with the example datasets) you must either

1. open the RunControl.nml file and edit the input and output file paths and the site name (with a *text editor*) so that they are correct for your setup, or
2. create the directories specified in the RunControl.nml file

From the given site identification the model identifies the input files and generates the output files. For example if you specify:

```
FileOutputPath = "C:\FolderName\SUEWSOutput\"
```

and use site code SS the model creates an output file:

```
C:\FolderName\SUEWSOutput\SSss_YYYY_TT.txt
```

Note: remember to add the last backslash in windows and slash in Linux/Mac

If the file paths are not correct the program will return an error when run and write the error to the *Error messages: problems.txt* file.

5.5.3 Preparation of the Meteorological forcing data

The model time-step is specified in *RunControl.nml* (5 min is highly recommended). If meteorological forcing data are not available at this resolution, SUEWS has the option to downscale (e.g. hourly) data to the time-step required. See details about the *SSss_YYYY_data_tt.txt* to learn more about choices of data input. Each grid can have its own meteorological forcing file, or a single file can be used for all grids. The forcing data should be representative of the local-scale, i.e. collected (or derived) above the height of the roughness elements (buildings and trees).

5.5.4 Preparation of the InitialConditions file

Information about the surface state and meteorological conditions just before the start of the run are provided in the Initial Conditions file. At the very start of the run, each grid can have its own Initial Conditions file, or a single file can be used for all grids. For details see *Initial Conditions file*.

5.6 Run the model for your site

To run the model you can use **Command Prompt** (in the directory where the programme is located type the model name) or just double click the executable file.

Please see *Troubleshooting* if you have problems running the model.

5.7 Analyse the output

It is a good idea to perform initial checks that the model output looks reasonable.

Characteristic	Things to check
Leaf area index	Does the phenology look appropriate? <ul style="list-style-type: none">• what does the seasonal cycle of leaf area index (LAI) look like?• Are the leaves on the trees at approximately the right time of the year?
Kdown	Is the timing of diurnal cycles correct for the incoming solar radiation? <ul style="list-style-type: none">• Although Kdown is a required input, it is also included in the output file. It is a good idea to check that the timing of Kdown in the output file is appropriate, as problems can indicate errors with the timestamp, incorrect time settings or problems with the disaggregation. In particular, make sure the sign of the longitude is specified correctly in <i>SUEWS_SiteSelect.txt</i>.• Checking solar angles (zenith and azimuth) can also be a useful check that the timing is correct.
Albedo	Is the bulk albedo correct? <ul style="list-style-type: none">• This is critical because a small error has an impact on all the fluxes (energy and hydrology).• If you have measurements of outgoing shortwave radiation compare these with the modelled values.• How do the values compare to literature values for your area?

5.8 Summary of files

The table below lists the files required to run SUEWS and the output files produced. SS is the two-letter code (specified in RunControl) representing the site name, ss is the grid identification (integer values between 0 and 2,147,483,647 (largest 4-byte integer)) and YYYY is the year. TT is the resolution of the input/output file and tt is the model time-step.

The last column indicates whether the files are needed/produced once per run (1/run), or once per day (1/day), for each year (1/year) or for each grid (1/grid):

[B] indicates files used **with** the CBL part of SUEWS (BLUEWS) **and** therefore are only needed/
↪produced **if** this option **is** selected

[E] indicates files associated **with** ESTM storage heat flux models **and** therefore are only needed/
↪produced **if** this option **is** selected

INPUT FILES

SUEWS allows you to input a large number of parameters to describe the characteristics of your site. You should not assume that the example values provided in files or in the tables below are appropriate. Values marked with ‘MD’ are examples of recommended values (see the suggested references to help decide how appropriate these are for your site/model domain); values marked with ‘MU’ need to be set (i.e. changed from the example) for your site/model domain.

6.1 RunControl.nml

The file **RunControl.nml** is a namelist that specifies the options for the model run. It must be located in the same directory as the executable file.

A sample file of **RunControl.nml** looks like

```
&RunControl
CBLUse=0
SnowUse=0
SOLWEIGUse=0
NetRadiationMethod=3
EmissionsMethod=2
StorageHeatMethod=3
OHMIncQF=0
StabilityMethod=2
RoughLenHeatMethod=2
RoughLenMomMethod=2
SMDMethod=0
WaterUseMethod=0
FileCode='Saeve'
FileInputPath='./Input/'
FileOutputPath='./Output/'
MultipleMetFiles=0
MultipleInitFiles=0
MultipleESTMFiles=1
KeepTstepFilesIn=1
KeepTstepFilesOut=1
WriteOutOption=2
ResolutionFilesOut=3600
Tstep=300
ResolutionFilesIn=3600
ResolutionFilesInESTM=3600 !NEW
DisaggMethod=1           !NEW  (1 = default value, so don't actually need here)
RainDisaggMethod=100     !NEW  (100 = default value, so don't actually need here)
DisaggMethodESTM=1       !NEW  (1 = default value, so don't actually need here)
```

(continues on next page)

(continued from previous page)

```
SuppressWarnings=1      !NEW
KdownZen=0
diagnose=0
/
```

Note:

- In *Linux* and *Mac*, please add an empty line after the end slash.
 - The file is not case-sensitive.
 - The parameters and variables can appear in any order.
-

The parameters and their setting instructions are provided through the links below:

- *Model run options*
 - *CBLuse*
 - *SnowUse*
 - *SOLWEIGUse*
 - *NetRadiationMethod*
 - *AnthropHeatMethod*
 - *AnthropCO2Method*
 - *StorageHeatMethod*
 - *OHMIncQF*
 - *StabilityMethod*
 - *RoughLenHeatMethod*
 - *RoughLenMomMethod*
 - *SMDMethod*
 - *WaterUseMethod*
- *File related options*
 - *FileCode*
 - *FileInputPath*
 - *FileOutputPath*
 - *MultipleMetFiles*
 - *MultipleInitFiles*
 - *MultipleESTMFiles*
 - *KeepTstepFilesIn*
 - *KeepTstepFilesOut*
 - *WriteOutOption*
 - *SuppressWarnings*
- *Time related options*
 - *Tstep*
 - *ResolutionFilesIn*
 - *ResolutionFilesInESTM*
 - *ResolutionFilesOut*
- *Options related to disaggregation of input data*
 - *DisaggMethod*
 - *KdownZen*
 - *RainDisaggMethod*
 - *RainAmongN*

- *MultRainAmongN*
- *MultRainAmongNUpperI*
- *DisaggMethodESTM*
- *netCDF* related options
 - *ncMode*
 - *nRow*
 - *nCol*

6.1.1 Model run options

CBLuse

Requirement Required

Description Determines whether a CBL slab model is used to calculate temperature and humidity.

Configuration

Value	Comments
0	CBL model not used. SUEWS and LUMPS use temperature and humidity provided in the meteorological forcing file.
1	CBL model is used to calculate temperature and humidity used in SUEWS and LUMPS.

SnowUse

Requirement Required

Description Determines whether the snow part of the model runs.

Configuration

Value	Comments
0	Snow calculations are not performed.
1	Snow calculations are performed.

SOLWEIGUse

Requirement Required

Description Determines whether a high resolution radiation model to calculate mean radiant temperature should be used (SOLWEIG). NOTE: this option will considerably slow down the model since SOLWEIG is a 2D model.

Configuration

Value	Comments
0	SOLWEIG calculations are not performed.
1	SOLWEIG calculations are performed. A grid of mean radiant temperature (Tmrt) is calculated based on high resolution digital surface models.

NetRadiationMethod

Requirement Required

Description Determines method for calculation of radiation fluxes.

Configuration

Value	Comments
0	Uses observed values of Q^* supplied in meteorological forcing file.
1	Q^* modelled with L_{\downarrow} observations supplied in meteorological forcing file. Zenith angle not accounted for in albedo calculation.
2	Q^* modelled with L_{\downarrow} modelled using cloud cover fraction supplied in meteorological forcing file (Loridan et al. 2011 [5]). Zenith angle not accounted for in albedo calculation.
3	Q^* modelled with L_{\downarrow} modelled using air temperature and relative humidity supplied in meteorological forcing file (Loridan et al. 2011 [5]). Zenith angle not accounted for in albedo calculation.
100	Q^* modelled with L_{\downarrow} observations supplied in meteorological forcing file. Zenith angle accounted for in albedo calculation. SSss_YYYY_NARPOut.txt file produced. Not recommended in this release
200	Q^* modelled with L_{\downarrow} modelled using cloud cover fraction supplied in meteorological forcing file (Loridan et al. 2011 [5]). Zenith angle accounted for in albedo calculation. SSss_YYYY_NARPOut.txt file produced. Not recommended in this release
300	Q^* modelled with L_{\downarrow} modelled using air temperature and relative humidity supplied in meteorological forcing file (Loridan et al. 2011 [5]). Zenith angle accounted for in albedo calculation. SSss_YYYY_NARPOut.txt file produced. Not recommended in this release

AnthropHeatMethod**Requirement** Required**Description** Determines method for QF calculation.**Configuration**

Value	Comments
0	Uses values provided in the meteorological forcing file (SSss_YYYY_data_tt.txt). If you do not want to include QF to the calculation of surface energy balance, you should set values in the meteorological forcing file to zero to prevent calculation of QF. UMEP provides two methods to calculate QF LQF which is simpler GQF which is more complete but requires more data inputs
1	Currently not recommended! Calculated according to Loridan et al. (2011) [5] using coefficients specified in SUEWS_AnthropogenicHeat.txt. Modelled values will be used even if QF is provided in the meteorological forcing file.
2	Recommended Calculated according to Järvi et al. (2011) [1] using coefficients specified in SUEWS_AnthropogenicHeat.txt and diurnal patterns specified in SUEWS_Profiles.txt. Modelled values will be used even if QF is provided in the meteorological forcing file.

AnthropCO2Method**Requirement** Required**Description** Determines method for CO2 calculation.**Configuration**

Value	Comments
1	Not used.
2	Under development - not recommended in v2017b Calculate CO2 emissions from traffic based on QF calculation.
3	Under development - not recommended in v2017b Calculate CO2 emissions from traffic from input data provided.

StorageHeatMethod**Requirement** Required**Description** Determines method for calculating storage heat flux ΔQ_S .**Configuration**

Value	Comments
1	ΔQ_S modelled using the objective hysteresis model (OHM) [9] [10] [11] using parameters specified for each surface type.
2	Uses observed values of ΔQ_S supplied in meteorological forcing file.
3	ΔQ_S modelled using AnOHM. Not available in v2017b
4	ΔQ_S modelled using the Element Surface Temperature Method (ESTM) (Offerle et al. 2005 [13]). Not recommended in v2017b

OHMIncQF**Requirement** Required**Description** Determines whether the storage heat flux calculation uses Q^* or (Q^*+QF) .

Configuration

Value	Comments
0	ΔQ_S modelled Q^* only.
1	ΔQ_S modelled using $Q^* + Q_F$.

StabilityMethod**Requirement** Required**Description** Defines which atmospheric stability functions are used.**Configuration**

Value	Comments
0	Not used.
1	Not used.
2	Recommended Momentum - unstable: Dyer (1974) [22] modified by Högstrom (1988) [23] ; stable: Van Ulden and Holt-slag (1985) [24] Heat - Dyer (1974) [22] modified by Högstrom (1988) [23]
3	Momentum: Campbell and Norman (Eq 7.27, Pg97) [25] Heat - unstable: Campbell and Norman [25] ; stable: Dyer (1974) [22] modified by Högstrom (1988) [23]
4	Momentum: Businger et al. (1971) [26] modified by Högstrom (1988) [23] Heat: Businger et al. (1971) [26] modified by Högstrom (1988) [23]

RoughLenHeatMethod**Requirement** Required**Description** Determines method for calculating roughness length for heat.**Configuration**

Value	Comments
1	Uses value of 0.1z0m.
2	Recommended Calculated according to Kawai et al. (2009) [27] .
3	Calculated according to Voogt and Grimmond (2000) [28] .
4	Calculated according to Kanda et al. (2007) [29] .

RoughLenMomMethod

Requirement Required

Description Determines how aerodynamic roughness length (z_0) and zero displacement height (z_{dm}) are calculated.

Configuration

Value	Comments
1	Values specified in SUEWS_SiteSelect.txt are used. Note that UMEP provides tools to calculate these]. See Kent et al. (2017a) for recommendations on methods. Kent et al. (2017b) have developed a method to include vegetation which is also available within UMEP. Kent CW, CSB Grimmond, J Barlow, D Gatey, S Kotthaus, F Lindberg, CH Halios 2017a: Evaluation of urban local-scale aerodynamic parameters: implications for the vertical profile of wind and source areas Boundary Layer Meteorology 164,183–213 doi: 10.1007/s10546-017-0248-z Kent CW, S Grimmond, D Gatey 2017b: Aerodynamic roughness parameters in cities: inclusion of vegetation Journal of Wind Engineering & Industrial Aerodynamics http://dx.doi.org/10.1016/j.jweia.2017.07.016
2	z_0 and z_d are calculated using ‘rule of thumb’ (Grimmond and Oke 1999 [30]) using mean building and tree height specified in SUEWS_SiteSelect.txt . z_0 and z_d are adjusted with time to account for seasonal variation in porosity of deciduous trees.
3	z_0 and z_d are calculated based on the MacDonald et al. (1998) [31] method using mean building and tree heights, plan area fraction and frontal areal index specified in SUEWS_SiteSelect.txt . z_0 and z_d are adjusted with time to account for seasonal variation in porosity of deciduous trees.

SMDMethod**Requirement** Required

Description Determines method for calculating soil moisture deficit (SMD).

Configuration

Value	Comments
0	Recommended SMD modelled using parameters specified in SUEWS_Soil.txt .
1	Not currently implemented - do not use! Observed SM provided in the meteorological forcing file is used. Data are provided as volumetric soil moisture content. Metadata must be provided in SUEWS_Soil.txt .
2	Not currently implemented - do not use! Observed SM provided in the meteorological forcing file is used. Data are provided as gravimetric soil moisture content. Metadata must be provided in SUEWS_Soil.txt .

WaterUseMethod**Requirement** Required

Description Defines how external water use is calculated.

Configuration

Value	Comments
0	External water use modelled using parameters specified in SUEWS_Irrigation.txt .
1	Observations of external water use provided in the meteorological forcing file are used.

6.1.2 Time related options

Tstep

Requirement Required

Description Specifies the model time step [s]. A value of 300 s (5 min) is strongly recommended. The time step cannot be less than 1 min or greater than 10 min, and must be a whole number of minutes that divide into an hour (i.e. options are 1, 2, 3, 4, 5, 6, 10 min or 60, 120, 180, 240, 300, 360, 600 s).

Configuration to fill

ResolutionFilesIn

Requirement Required

Description Specifies the resolution of the input files [s] which SUEWS will disaggregate to the model time step. 1800 s for 30 min or 3600 s for 60 min are recommended. (N.B. if ResolutionFilesIn is not provided, SUEWS assumes ResolutionFilesIn = Tstep.)

Configuration to fill

ResolutionFilesInESTM

Requirement Optional

Description Specifies the resolution of the ESTM input files [s] which SUEWS will disaggregate to the model time step.

Configuration to fill

ResolutionFilesOut

Requirement Required

Description Specifies the resolution of the output files [s]. 1800 s for 30 min or 3600 s for 60 min are recommended.

Configuration to fill

6.1.3 File related options

FileCode

Requirement Required

Description Two-letter site identification code (e.g. He, Sc, Kc).

Configuration to fill

FileInputPath

Requirement Required

Description Input directory.

Configuration to fill

FileOutputPath

Requirement Required

Description Output directory.

Configuration to fill

MultipleMetFiles

Requirement Required

Description Specifies whether one single meteorological forcing file is used for all grids or a separate met file is provided for each grid.

Configuration

Value	Comments
0	Single meteorological forcing file used for all grids. No grid number should appear in the file name.
1	Separate meteorological forcing files used for each grid. The grid number should appear in the file name.

MultipleInitFiles

Requirement Required

Description Specifies whether one single initial conditions file is used for all grids at the start of the run or a separate initial conditions file is provided for each grid.

Configuration

Value	Comments
0	Single initial conditions file used for all grids. No grid number should appear in the file name.
1	Separate initial conditions files used for each grid. The grid number should appear in the file name.

MultipleESTMFiles

Requirement Optional

Description Specifies whether one single ESTM forcing file is used for all grids or a separate file is provided for each grid.

Configuration

Value	Comments
0	Single ESTM forcing file used for all grids. No grid number should appear in the file name.
1	Separate ESTM forcing files used for each grid. The grid number should appear in the file name.

KeepTstepFilesIn**Requirement** Optional**Description** Specifies whether input meteorological forcing files at the resolution of the model time step should be saved.**Configuration**

Value	Comments
0	Meteorological forcing files at model time step are not written out. This is the default option Recommended to reduce processing time and save disk space as (e.g. 5-min) files can be large.
1	Meteorological forcing files at model time step are written out.

KeepTstepFilesOut**Requirement** Optional**Description** Specifies whether output meteorological forcing files at the resolution of the model time step should be saved.**Configuration**

Value	Comments
0	Output files at model time are not saved. This is the default option. Recommended to save disk space as (e.g. 5-min) files can be large.
1	Output files at model time step are written out.

WriteOutOption**Requirement** Optional**Description** Specifies which variables are written in the output files.**Configuration**

Value	Comments
0	All (except snow-related) output variables written. This is the default option.
1	All (including snow-related) output variables written.
2	Writes out a minimal set of output variables (use this to save space or if information about the different surfaces is not required).

SuppressWarnings**Requirement** Optional**Description** Controls whether the warnings.txt file is written or not.

Configuration

Value	Comments
0	The warnings.txt file is written. This is the default option.
1	No warnings.txt file is written. May be useful for large model runs as this file can grow large.

6.1.4 Options related to disaggregation of input data

DisaggMethod

Requirement Optional

Description Specifies how meteorological variables in the input file (except rain and snow) are disaggregated to the model time step. Wind direction is not currently downscaled so non -999 values will cause an error.

Configuration

Value	Comments
1	Linear downscaling of averages for all variables, additional zenith check is used for Kdown. This is the default option.
2	Linear downscaling of instantaneous values for all variables, additional zenith check is used for Kdown.
3	WFDEI setting: average Kdown (with additional zenith check); instantaneous for Tair, RH, pres and U. (N.B. WFDEI actually provides Q not RH)

KdownZen

Requirement Optional

Description Can be used to switch off zenith checking in Kdown disaggregation. Note that the zenith calculation requires location information obtained from SUEWS_SiteSelect.txt. If a single met file is used for all grids, the zenith is calculated for the first grid and the disaggregated data is then applied for all grids.

Configuration

Value	Comments
0	No zenith angle check is applied.
1	Disaggregated Kdown is set to zero when zenith angle exceeds 90 degrees (i.e. sun below horizon) and redistributed over the day. This is the default option.

RainDisaggMethod**Requirement** Optional

Description Specifies how rain in the meteorological forcing file are disaggregated to the model time step. If present in the original met forcing file, snow is currently disaggregated in the same way as rainfall.

Configuration

Value	Comments
100	Rainfall is evenly distributed among all subintervals in a rainy interval. This is the default option.
101	Rainfall is evenly distributed among among RainAmongN subintervals in a rainy interval – also requires RainAmongN to be set.
102	Rainfall is evenly distributed among among RainAmongN subintervals in a rainy interval for different intensity bins – also requires MultRainAmongN and MultRainAmongNUpperI to be set.

RainAmongN**Requirement** Optional

Description Specifies the number of subintervals (of length tt) over which to distribute rainfall in each interval (of length TT). Must be an integer value. Use with RainDisaggMethod = 101.

Configuration to fill

MultRainAmongN**Requirement** Optional

Description Specifies the number of subintervals (of length `tt`) over which to distribute rainfall in each interval (of length `TT`) for up to 5 intensity bins. Must take integer values. Use with `RainDisaggMethod = 102`. e.g. `MultRainAmongN(1) = 5`, `MultRainAmongN(2) = 8`, `MultRainAmongN(3) = 12`

Configuration to fill**MultRainAmongNUpperI****Requirement** Optional

Description Specifies upper limit for each intensity bin to apply `MultRainAmongN`. Any intensities above the highest specified intensity will use the last `MultRainAmongN` value and write a warning to `warnings.txt`. Use with `RainDisaggMethod = 102`. e.g. `MultRainAmongNUpperI(1) = 0.5`, `MultRainAmongNUpperI(2) = 2.0`, `MultRainAmongNUpperI(3) = 50.0`

Configuration to fill**DisaggMethodESTM****Requirement** Optional

Description Specifies how ESTM-related temperatures in the input file are disaggregated to the model time step.

Configuration

Value	Comments
1	Linear downscaling of averages.
2	Linear downscaling of instantaneous values.

6.1.5 netCDF related options

ncMode**Requirement** Optional

Description Determine if the output files should be written in netCDF format.

Configuration

Value	Comments
0	Output files are kept as plain text files (i.e., .txt).
1	Output files will be written in netCDF format (i.e., .nc).

nRow**Requirement** Optional

Description Number of rows (e.g., 36) in the output layout (only applicable when nc-Mode=1).

Configuration to fill

nCol

Requirement Optional

Description Number of columns (e.g., 47) in the output layout (only applicable when nc-Mode=1).

Configuration to fill

6.2 SUEWS_SiteInfo.xlsm

The following text files provide SUEWS with information about the study area.

6.2.1 SUEWS_AnthropogenicHeat.txt

SUEWS_AnthropogenicHeatFlux.txt provides the parameters needed to model the anthropogenic heat flux using either the method of Järvi et al. (2011) based on heating and cooling degree days (AnthropHeatMethod = 2 in 4.1 *RunControl.nml*) or the method of Loridan et al. (2011) based on air temperature (AnthropHeatMethod = 1 in *RunControl.nml*). The sub-daily variation in anthropogenic heat flux is modelled according to the daily cycles specified in SUEWS_Profiles.txt. Alternatively, if available, the anthropogenic heat flux can be provided in the met forcing file (and set AnthropHeatMethod = 0 in *RunControl.nml*), in which case all columns here except Code and BaseTHDD should be set to '-999'.

No.	Column Name	Use	Description
1	<i>Code</i>	<i>L</i>	Code linking to the AnthropogenicCode column in SUEWS_SiteSelect.txt . Value of integer is arbitrary but must match code specified in SUEWS_SiteSelect.txt.
2	<i>BaseTHDD</i>	<i>MU</i>	Base temperature for heating degree days [°C] e.g. Sailor and Vasireddy (2006) [39]
3	<i>QF_A_Weekday</i>	<i>MU</i> <i>O</i>	Use with AnthropHeatChoice = 2 Example values [W m ⁻² (Cap ha-1) -1] 0.3081 Järvi et al. (2011) [1] 0.1 Järvi et al. (2014) [15]
4	<i>QF_B_Weekday</i>	<i>MU</i> <i>O</i>	Use with AnthropHeatMethod = 2 Example values [W m ⁻² K ⁻¹ (Cap ha -1) -1] 0.0099 Järvi et al. (2011) [1] 0.0099 Järvi et al. (2014) [15]
5	<i>QF_C_Weekday</i>	<i>MU</i> <i>O</i>	Use with AnthropHeatMethod = 2 Example values [W m ⁻² K ⁻¹ (Cap ha -1) -1] 0.0102 Järvi et al. (2011) [1] 0.0102 Järvi et al. (2014) [15]
6	<i>QF_A_Weekend</i>	<i>MU</i> <i>O</i>	Use with AnthropHeatMethod = 2 Example values [W m ⁻² (Cap ha -1) -1] 0.3081 Järvi et al. (2011) [1] 0.1 Järvi et al. (2014) [15]
7	<i>QF_B_Weekend</i>	<i>MU</i> <i>O</i>	Use with AnthropHeatMethod = 2 Example values [W m ⁻² K ⁻¹ (Cap ha -1) -1] 0.0099 Järvi et al. (2011) [1] 0.0099 Järvi et al. (2014) [15]
8	<i>QF_C_Weekend</i>	<i>MU</i> <i>O</i>	Example values [W m ⁻² K ⁻¹ (Cap ha -1) -1] 0.0102 Järvi et al. (2011) [1] 0.0102 Järvi et al. (2014) [15]
9	<i>AHMin</i>	<i>MU</i> <i>O</i>	Use with AnthropHeatMethod = 1
10	<i>AHSlope</i>	<i>MU</i> <i>O</i>	Use with AnthropHeatMethod = 1
11	<i>TCritic</i>	<i>MU</i> <i>O</i>	Use with AnthropHeatMethod = 1

6.2.2 SUEWS_Conductance.txt

SUEWS_Conductance.txt contains the parameters needed for the Jarvis (1976) surface conductance model used in the modelling of evaporation in SUEWS. These values should **not** be changed independently of each other. The suggested values below have been derived using datasets for Los Angeles and Vancouver (see Järvi et al. (2011) [J11]) and should be used with *gsModel=1*. An alternative formulation (*gsModel=2*) uses slightly different functional forms and different coefficients (with different units).

No.	Column Name	Use	Description
1	<i>Code</i>	<i>L</i>	Code linking to the CondCode column in SUEWS_SiteSelect.txt . Value of integer is arbitrary but must match code specified in SUEWS_SiteSelect.txt.
2	<i>G1</i>	<i>MD</i>	Related to maximum surface conductance [mm s^{-1}]
3	<i>G2</i>	<i>MD</i>	Related to Kdown dependence [W m^{-2}]
4	<i>G3</i>	<i>MD</i>	Related to VPD dependence [units depend on gsChoice in RunControl.nml]
5	<i>G4</i>	<i>MD</i>	Related to VPD dependence [units depend on gsChoice in RunControl.nml]
6	<i>G5</i>	<i>MD</i>	Related to temperature dependence [$^{\circ}\text{C}$]
7	<i>G6</i>	<i>MD</i>	Related to soil moisture dependence [$\text{m} \text{m}^{-1} $]
8	<i>TH</i>	<i>MD</i>	Upper air temperature limit [$^{\circ}\text{C}$]
9	<i>TL</i>	<i>MD</i>	Lower air temperature limit [$^{\circ}\text{C}$]
10	<i>S1</i>	<i>MD</i>	Related to soil moisture dependence [-] These will change in the future to ensure consistency with soil behaviour
11	<i>S2</i>	<i>MD</i>	Related to soil moisture dependence [mm] These will change in the future to ensure consistency with soil behaviour
12	<i>Kmax</i>	<i>MD</i>	Maximum incoming shortwave radiation [W m^{-2}]
13	<i>gsModel</i>	<i>MD</i>	1 = Järvi et al. (2011) [1] 2 = Ward et al. (2016) [2] Recommended.

6.2.3 SUEWS_Irrigation.txt

SUEWS includes a simple model for external water use if observed data are not available. The model calculates daily water use from the mean daily air temperature, number of days since rain and fraction of irrigated area using automatic/manual irrigation. The sub-daily pattern of water use is modelled according to the daily cycles specified in *SUEWS_Profiles.txt*.

Alternatively, if available, the external water use can be provided in the met forcing file (and set WaterUseMethod = 1 in *RunControl.nml*), in which case all columns here except Code should be set to ‘-999’.

No.	Column Name	Use	Description
1	<i>Code</i>	<i>L</i>	Code linking to <i>SUEWS_SiteSelect.txt</i> for irrigation modelling (IrrigationCode). Value of integer is arbitrary but must match codes specified in <i>SUEWS_SiteSelect.txt</i> .
2	<i>Ie_start</i>	<i>MU</i>	Day when irrigation starts [DOY]
3	<i>Ie_end</i>	<i>MU</i>	Day when irrigation ends [DOY]
4	<i>InternalWaterUse</i>	<i>MU</i>	Internal water use [mm h ⁻¹]
5	<i>Faut</i>	<i>MU</i>	Fraction of irrigated area that is irrigated using automated systems (e.g. sprinklers).
6	<i>Ie_a1</i>	<i>MD</i>	Coefficient for automatic irrigation model [mm d -1]
7	<i>Ie_a2</i>	<i>MD</i>	Coefficient for automatic irrigation model [mm d -1 K ⁻¹]
8	<i>Ie_a3</i>	<i>MD</i>	Coefficient for automatic irrigation model [mm d -2]
9	<i>Ie_m1</i>	<i>MD</i>	Coefficient for manual irrigation model [mm d -1]
10	<i>Ie_m2</i>	<i>MD</i>	Coefficient for manual irrigation model [mm d -1 K ⁻¹]
11	<i>Ie_m3</i>	<i>MD</i>	Coefficient for manual irrigation model [mm d -2]
12	<i>DayWat(1)</i>	<i>MU</i>	Irrigation allowed on Sundays [1], if not [0]
13	<i>DayWat(2)</i>	<i>MU</i>	Irrigation allowed on Mondays [1], if not [0]
14	<i>DayWat(3)</i>	<i>MU</i>	Irrigation allowed on Tuesdays [1], if not [0]
15	<i>DayWat(4)</i>	<i>MU</i>	Irrigation allowed on Wednesdays [1], if not [0]
16	<i>DayWat(5)</i>	<i>MU</i>	Irrigation allowed on Thursdays [1], if not [0]
17	<i>DayWat(6)</i>	<i>MU</i>	Irrigation allowed on Fridays [1], if not [0]
18	<i>DayWat(7)</i>	<i>MU</i>	Irrigation allowed on Saturdays [1], if not [0]
19	<i>DayWatPer(1)</i>	<i>MU</i>	Fraction of properties using irrigation on Sundays [0-1]
20	<i>DayWatPer(2)</i>	<i>MU</i>	Fraction of properties using irrigation on Mondays [0-1]
21	<i>DayWatPer(3)</i>	<i>MU</i>	Fraction of properties using irrigation on Tuesdays [0-1]
22	<i>DayWatPer(4)</i>	<i>MU</i>	Fraction of properties using irrigation on Wednesdays [0-1]
23	<i>DayWatPer(5)</i>	<i>MU</i>	Fraction of properties using irrigation on Thursdays [0-1]
24	<i>DayWatPer(6)</i>	<i>MU</i>	Fraction of properties using irrigation on Fridays [0-1]
25	<i>DayWatPer(7)</i>	<i>MU</i>	Fraction of properties using irrigation on Saturdays [0-1]

6.2.4 SUEWS_NonVeg.txt

SUEWS_NonVeg.txt specifies the characteristics for the non-vegetated surface cover types (Paved, Bldgs, BSoil) by linking codes in column 1 of SUEWS_NonVeg.txt to the codes specified in SUEWS_SiteSelect.txt (Code_Paved, Code_Bldgs, Code_BSoil). Each row should correspond to a particular surface type. For suggestions on how to complete this table, see: [Typical Values](#).

No.	Column Name	Use	Description
1	<i>Code</i>	<i>L</i>	Code linking to SUEWS_SiteSelect.txt for paved surfaces (Code_Paved), buildings (Code_Bldgs) and bare soil surfaces (Code_BSoil). Value of integer is arbitrary but must match codes specified in SUEWS_SiteSelect.txt.
2	<i>AlbedoMin</i>	<i>MU</i>	Effective surface albedo (middle of the day value) for wintertime (not including snow). View factors should be taken into account. Not currently used for non-vegetated surfaces – set the same as AlbedoMax.
3	<i>AlbedoMax</i>	<i>MU</i>	Effective surface albedo (middle of the day value) for summertime. View factors should be taken into account.
4	<i>Emissivity</i>	<i>MU</i>	Effective surface emissivity. View factors should be taken into account.

Continued on next page

Table 6.1 – continued from previous page

No.	Column Name	Use	Description
5	<i>StorageMin</i>	<i>MD</i>	Minimum water storage capacity for upper surfaces (i.e. canopy). Min/max values are to account for seasonal variation (e.g. leaf-on/leaf-off differences for vegetated surfaces). Not currently used for non-vegetated surfaces - set the same as StorageMax. Example values [mm] 0.48 Paved 0.25 Bldgs 0.8 BSoil
6	<i>StorageMax</i>	<i>MD</i>	Maximum water storage capacity for upper surfaces (i.e. canopy). Min and max values are to account for seasonal variation (e.g. leaf-on/leaf-off differences for vegetated surfaces). Not currently used for non-vegetated surfaces - set the same as StorageMin. Example values [mm] 0.48 Paved 0.25 Bldgs 0.8 BSoil
7	<i>WetThreshold</i>	<i>MD</i>	Depth of water which determines whether evaporation occurs from a partially wet or completely wet surface. Example values [mm] 0.6 Paved 0.6 Bldgs 1. BSoil
8	<i>StateLimit</i>	<i>MD</i>	Currently only used for the water surface
9	<i>DrainageEq</i>	<i>MD</i>	Options 1 Falk and Niemczynowicz (1978) [32] 2 Halldin et al. (1979) [33] (Rutter eqn corrected for $c=0$, see Calder & Wright (1986) [34]) Recommended [3] for BSoil 3 Falk and Niemczynowicz (1978) [32] Recommended [3] for Paved and Bldgs Coefficients are specified in the following two columns.
10	<i>DrainageCoef1</i>	<i>MD</i>	Example values DrainageEq 10 Coefficient D0 [mm h ⁻¹] 3 Recommended [3] for Paved and Bldgs 0.013 Coefficient D0 [mm h ⁻¹] 2 Recommended [3] for BSoil
11	<i>DrainageCoef2</i>	<i>MD</i>	Example values DrainageEq 3 Coefficient b [-] 3 Recommended [3] for Paved and Bldgs 1.71 Coefficient b [m m ⁻¹] 2 Recommended [3] for BSoil
12	<i>SoilTypeCode</i>	<i>L</i>	Code for soil characteristics below this surface Provides the link to column 1 of SUEWS_Soil.txt , which contains the attributes describing sub-surface soil for this surface type. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_Soil.txt.
13	<i>SnowLimPatch</i>	<i>O</i>	Not needed if SnowUse = 0 in RunControl.nml . Example values [mm] 190 Paved Järvi et al. (2014) [15] 190 Bldgs Järvi et al. (2014) [15] 190 BSoil Järvi et al. (2014) [15]
14	<i>SnowLimRemove</i>	<i>O</i>	Not needed if SnowUse = 0 in RunControl.nml . Currently not implemented for BSoil surface Example values [mm] 40 Paved Järvi et al. (2014) [15] 100 Bldgs Järvi et al. (2014) [15]
15	<i>OHMCode_SummerWet</i>	<i>L</i>	Code for OHM coefficients to use for this surface during wet conditions in summer. Links to SUEWS_OHMCoefficients.txt . Value of integer is arbitrary but must match code specified in column 1 of SUEWS_OHMCoefficients.txt.
16	<i>OHMCode_SummerDry</i>	<i>L</i>	Code for OHM coefficients to use for this surface during dry conditions in summer. Links to SUEWS_OHMCoefficients.txt . Value of integer is arbitrary but must match code specified in column 1 of SUEWS_OHMCoefficients.txt.
17	<i>OHMCode_WinterWet</i>	<i>L</i>	Code for OHM coefficients to use for this surface during wet conditions in winter. Links to SUEWS_OHMCoefficients.txt . Value of integer is arbitrary but must match code specified in column 1 of SUEWS_OHMCoefficients.txt.

Continued on next page

Table 6.1 – continued from previous page

No.	Column Name	Use	Description
18	<i>OHMCode_WinterDry</i>	<i>L</i>	Code for OHM coefficients to use for this surface during dry conditions in winter. Links to SUEWS_OHMCoefficients.txt . Value of integer is arbitrary but must match code specified in column 1 of SUEWS_OHMCoefficients.txt.
19	<i>OHMThresh_SW</i>	<i>MD</i>	Temperature threshold determining whether summer/winter OHM coefficients are applied [°C] If 5-day running mean air temperature is greater than or equal to this threshold, OHM coefficients for summertime are applied; otherwise coefficients for wintertime are applied.
20	<i>OHMThresh_WD</i>	<i>MD</i>	Soil moisture threshold determining whether wet/dry OHM coefficients are applied [-] If soil moisture (as a proportion of maximum soil moisture capacity) exceeds this threshold for bare soil and vegetated surfaces, OHM coefficients for wet conditions are applied; otherwise coefficients for dry coefficients are applied. Note that OHM coefficients for wet conditions are applied if the surface is wet. Not actually used for building and paved surfaces (as impervious).
21	<i>ESTMCode</i>	<i>L</i>	For paved and building surfaces, it is possible to specify multiple codes per grid (3 for paved, 5 for buildings) using SUEWS_SiteSelect.txt . In this case, set ESTMCode here to zero.
22	<i>AnOHM_Cp</i>	<i>MU</i>	Volumetric heat capacity for this surface to use in AnOHM [J m ⁻³]
23	<i>AnOHM_Kk</i>	<i>MU</i>	Thermal conductivity for this surface to use in AnOHM [W m K ⁻¹]
24	<i>AnOHM_Ch</i>	<i>MU</i>	Bulk transfer coefficient for this surface to use in AnOHM [-]

6.2.5 SUEWS_OHMCoefficients.txt

OHM, the Objective Hysteresis Model (Grimmond et al. 1991) [*G91OHM*] calculates the storage heat flux as a function of net all-wave radiation and surface characteristics.

- For each surface, OHM requires three model coefficients (a1, a2, a3). The three should be selected as a set.
- The **SUEWS_OHMCoefficients.txt** file provides these coefficients for each surface type.
- A variety of values has been derived for different materials and can be found in the literature (see: [http://urban-climate.net/umep/TypicalValues#OHM_Coefficients] Typical Values]).
- Coefficients can be changed depending on:

:# surface wetness state (wet/dry) based on the calculated surface wetness state and soil moisture.

:# season (summer/winter) based on a 5-day running mean air temperature.

- To use the same coefficients irrespective of wet/dry and summer/winter conditions, use the same code for all four OHM columns (OHMCode_SummerWet, OHMCode_SummerDry, OHMCode_WinterWet and OHMCode_WinterDry).

Note, **AnOHM** does not use the coefficients specified in SUEWS_OHMCoefficients.txt but instead requires three parameters to be specified for each surface type (including snow): heat capacity, thermal conductivity and bulk transfer coefficient. These are specified in *SUEWS_NonVeg.txt*, *SUEWS_Veg.txt*, *SUEWS_Water.txt* and *SUEWS_Snow.txt*. No additional files are required for AnOHM.

Note AnOHM is under development in v2017a and should not be used!

No.	Column Name	Use	Description
1	<i>Code</i>	<i>L</i>	Code linking to the OHMCode_SummerWet, OHMCode_SummerDry, OHMCode_WinterWet and OHMCode_WinterDry columns in SUEWS_NonVeg.txt, SUEWS_Veg.txt, SUEWS_Water.txt and SUEWS_Snow.txt files. Value of integer is arbitrary but must match code specified in SUEWS_SiteSelect.txt.
2	<i>a1</i>	<i>MU</i>	Coefficient for Q^* term [-]
3	<i>a2</i>	<i>MU</i>	Coefficient for dQ^*/dt term [h]
4	<i>a3</i>	<i>MU</i>	Constant term [$W\ m^{-2}$]

6.2.6 SUEWS_Profiles.txt

SUEWS_Profiles.txt specifies the daily cycle of variables related to human behaviour (energy use, water use and snow clearing). Different profiles can be specified for weekdays and weekends. The profiles are provided at hourly resolution here; the model will then interpolate the hourly energy and water use profiles to the resolution of the model time step and normalize the values provided. Thus it does not matter whether columns 2-25 add up to, say 1, 24, or another number, because the model will handle this. Currently, the snow clearing profiles are not interpolated as these are effectively a switch (0 or 1).

If the anthropogenic heat flux and water use are specified in the met forcing file, the energy and water use profiles are not used.

Profiles are specified for the following

- Anthropogenic heat flux (weekday and weekend)
- Water use (weekday and weekend; manual and automatic irrigation)
- Snow removal (weekday and weekend)
- Human activity (weekday and weekend).

Note: Human activity is not used in v2017a

No.	Var	Use	Description
1	<i>Code</i>	<i>L</i>	Code linking to SUEWS_SiteSelect.txt for snow surfaces (Snow-Code). Value of integer is arbitrary but must match code specified in SUEWS_SiteSelect.txt.
2	2-25	<i>MU</i>	Multiplier for each hour of the day [-] for energy and water use. For SnowClearing, set those hours to 1 when snow removal from paved and roof surface is allowed (0 otherwise) if the snow removal limits set in the SUEWS_Non Veg.txt (SnowLimR emove column) are exceeded.

6.2.7 SUEWS_SiteSelect.txt

For each year and each grid, site specific surface cover information and other input parameters is provided to SUEWS by *SUEWS_SiteSelect.txt*. The model currently requires a new row for each year of the model run. All rows in this file (before the two rows of ‘-9’) will be read by the model and run. In this file the **column order is important**. ‘!’ can be used to indicate comments in the file. Comments are not read

by the programme so they can be used by the user to provide notes for their interpretation of the contents. This is strongly recommended.

No.	Column Name	Use	Description
1	<i>Grid</i>	<i>MU</i>	Grid numbers do not need to be consecutive and do not need to start at a particular value. Each grid must have a unique grid number. All grids must be present for all years. These grid numbers are referred to in GridConnections (columns 64-79) (N.B. GridConnections not currently implemented!)
2	<i>Year</i>	<i>MU</i>	Year [YYYY] Years must be continuous. If running multiple years, ensure the rows in SiteSelect.txt are arranged so that all grids for a particular year appear on consecutive lines (rather than grouping all years together for a particular grid).
3	<i>StartDLS</i>	<i>MU</i>	Start of the day light savings [DOY] See section on Day Light Savings .
4	<i>EndDLS</i>	<i>MU</i>	End of the day light savings [DOY] See section on Day Light Savings .
5	<i>lat</i>	<i>MU</i>	Use coordinate system WGS84. Positive values are northern hemisphere (negative southern hemisphere). Used in radiation calculations. Note, if the total modelled area is small the latitude and longitude could be the same for each grid but small differences in radiation will not be determined. If you are defining the latitude and longitude differently between grids make certain that you provide enough decimal places.
6	<i>lng</i>	<i>MU</i>	Use coordinate system WGS84. For compatibility with GIS, negative values are to the west, positive values are to the east (e.g. Vancouver = -123.12; Shanghai = 121.47) Note this is a change of sign convention between v2016a and v2017a See latitude for more details.
7	<i>Timezone</i>	<i>MU</i>	Time zone [h] for site relative to UTC (east is positive). This should be set according to the times given in the meteorological forcing file(s).
8	<i>SurfaceArea</i>	<i>MU</i>	Area of the grid [ha].
9	<i>Alt</i>	<i>MU</i>	Used for both the radiation and water flow between grids. (N.B. water flow between grids not currently implemented.)
10	<i>z</i>	<i>MU</i>	z must be greater than the displacement height. Forcing data should be representative of the local-scale, i.e. above the height of the roughness elements.
11	<i>id</i>	<i>MD</i>	Day [DOY] Not used: set to 1 in this version.
12	<i>ih</i>	<i>MD</i>	Hour [H] Not used: set to 0 in this version.
13	<i>imin</i>	<i>MD</i>	Minute [M] Not used: set to 0 in this version.
14	<i>Fr_Paved</i>	<i>MU</i>	Columns 14 to 20 must sum to 1 .
15	<i>Fr_Bldgs</i>	<i>MU</i>	Surface cover fraction of buildings [-]
16	<i>Fr_EveTr</i>	<i>MU</i>	Surface cover fraction of evergreen trees and shrubs [-]
17	<i>Fr_DecTr</i>	<i>MU</i>	Surface cover fraction of deciduous trees and shrubs [-]
18	<i>Fr_Grass</i>	<i>MU</i>	Surface cover fraction of grass [-]
19	<i>Fr_Bsoil</i>	<i>MU</i>	Surface cover fraction of bare soil or unmanaged land [-]
20	<i>Fr_Water</i>	<i>MU</i>	Surface cover fraction of open water [-] (e.g. river, lakes, ponds, swimming pools)
21	<i>IrrFr_EveTr</i>	<i>MU</i>	Fraction of evergreen trees that are irrigated [-] e.g. 50% of the evergreen trees/shrubs are irrigated
22	<i>IrrFr_DecTr</i>	<i>MU</i>	Fraction of deciduous trees that are irrigated [-]

Continued on next page

Table 6.2 – continued from previous page

No.	Column Name	Use	Description
23	<i>IrrFr_Grass</i>	<i>MU</i>	Fraction of grass that is irrigated [-]
24	<i>H_Bldgs</i>	<i>MU</i>	Mean building height [m]
25	<i>H_EveTr</i>	<i>MU</i>	Mean height of evergreen trees [m]
26	<i>H_DecTr</i>	<i>MU</i>	Mean height of deciduous trees [m]
27	<i>z0</i>	<i>O</i>	Roughness length for momentum [m] Value supplied here is used if RoughLenMomMethod = 1 in RunControl.nml ; otherwise set to '-999' and a value will be calculated by the model (RoughLenMomMethod = 2, 3).
28	<i>zd</i>	<i>O</i>	Zero-plane displacement [m] Value supplied here is used if RoughLenMomMethod = 1 in RunControl.nml ; otherwise set to '-999' and a value will be calculated by the model (RoughLenMomMethod = 2, 3).
29	<i>FAI_Bldgs</i>	<i>O</i>	Frontal area index for buildings [-] Required if RoughLenMomMethod = 3 in RunControl.nml .
30	<i>FAI_EveTr</i>	<i>O</i>	Frontal area index for evergreen trees [-] Required if RoughLenMomMethod = 3 in RunControl.nml .
31	<i>FAI_DecTr</i>	<i>O</i>	Frontal area index for deciduous trees [-] Required if RoughLenMomMethod = 3 in RunControl.nml .
32	<i>PopDensDay</i>	<i>O</i>	Daytime population density (i.e. workers, tourists) [people ha ⁻¹] Population density is required if AnthropHeatMethod = 2 in RunControl.nml . The model will use the average of daytime and night-time population densities, unless only one is provided. If daytime population density is unknown, set to -999.
33	<i>PopDensNight</i>	<i>O</i>	Night-time population density (i.e. residents) [people ha ⁻¹] Population density is required if AnthropHeatMethod = 2 in RunControl.nml . The model will use the average of daytime and night-time population densities, unless only one is provided. If night-time population density is unknown, set to -999.
34	<i>TrafficRate</i>	<i>O</i>	Traffic rate [veh km m ⁻² s ⁻¹] Can be used for CO2 flux calculation. Do not use in v2017a - set to -999
35	<i>BuildEnergyUse</i>	<i>O</i>	Building energy use [W m ⁻²] Can be used for CO2 flux calculation. Do not use in v2017a - set to -999
36	<i>Code_Paved</i>	<i>L</i>	Code for Paved surface characteristics Provides the link to column 1 of SUEWS_NonVeg.txt, which contains the attributes describing paved areas in this grid for this year. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_NonVeg.txt. e.g. 331 means use the characteristics specified in the row of input file SUEWS_NonVeg.txt which has 331 in column 1 (Code).
37	<i>Code_Bldgs</i>	<i>L</i>	Code for Bldgs surface characteristics Provides the link to column 1 of SUEWS_NonVeg.txt, which contains the attributes describing buildings in this grid for this year. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_NonVeg.txt.
38	<i>Code_EveTr</i>	<i>L</i>	Code for EveTr surface characteristics Provides the link to column 1 of SUEWS_Veg.txt, which contains the attributes describing evergreen trees and shrubs in this grid for this year. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_Veg.txt.

Continued on next page

Table 6.2 – continued from previous page

No.	Column Name	Use	Description
39	<i>Code_DecTr</i>	<i>L</i>	Code for DecTr surface characteristics Provides the link to column 1 of SUEWS_Veg.txt, which contains the attributes describing deciduous trees and shrubs in this grid for this year. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_Veg.txt.
40	<i>Code_Grass</i>	<i>L</i>	Code for Grass surface characteristics Provides the link to column 1 of SUEWS_Veg.txt, which contains the attributes describing grass surfaces in this grid for this year. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_Veg.txt.
41	<i>Code_Bsoil</i>	<i>L</i>	Code for BSoil surface characteristics Provides the link to column 1 of SUEWS_NonVeg.txt, which contains the attributes describing bare soil in this grid for this year. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_NonVeg.txt.
42	<i>Code_Water</i>	<i>L</i>	Code for Water surface characteristics Provides the link to column 1 of SUEWS_Water.txt, which contains the attributes describing open water in this grid for this year. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_Water.txt.
43	<i>LUMPS_DrRate</i>	<i>MD</i>	Drainage rate of bucket for LUMPS [mm h ⁻¹] Used for LUMPS surface wetness control. Default recommended value of 0.25 mm h ⁻¹ from Loridan et al. (2011) [5] .
44	<i>LUMPS_Cover</i>	<i>MD</i>	Limit when surface totally covered with water [mm] Used for LUMPS surface wetness control. Default recommended value of 1 mm from Loridan et al. (2011) [5] .
45	<i>LUMPS_MaxRes</i>	<i>MD</i>	Maximum water bucket reservoir [mm] Used for LUMPS surface wetness control. Default recommended value of 10 mm from Loridan et al. (2011) [5] .
46	<i>NARP_Trans</i>	<i>MD</i>	Atmospheric transmissivity for NARP [-] Value must in the range 0-1. Default recommended value of 1.
47	<i>CondCode</i>	<i>L</i>	Code for surface conductance parameters Provides the link to column 1 of SUEWS_Conductance.txt, which contains the parameters for the Jarvis (1976) parameterisation of surface conductance. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_Conductance.txt. e.g. 33 means use the characteristics specified in the row of input file SUEWS_Conductance.txt which has 33 in column 1 (Code).
48	<i>SnowCode</i>	<i>L</i>	Code for snow surface characteristics Provides the link to column 1 of SUEWS_Snow.txt, which contains the attributes describing snow surfaces in this grid for this year. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_Snow.txt.
49	<i>SnowClearingProfWD</i>	<i>L</i>	Code for snow clearing profile (weekdays) Provides the link to column 1 of SUEWS_Profiles.txt. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_Profiles.txt. e.g. 1 means use the characteristics specified in the row of input file SUEWS_Profiles.txt which has 1 in column 1 (Code).

Continued on next page

Table 6.2 – continued from previous page

No.	Column Name	Use	Description
50	<i>SnowClearingProfWE</i>	<i>L</i>	Code for snow clearing profile (weekends) Provides the link to column 1 of SUEWS_Profiles.txt. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_Profiles.txt. e.g. 1 means use the characteristics specified in the row of input file SUEWS_Profiles.txt which has 1 in column 1 (Code). Providing the same code for SnowClearingProfWD and SnowClearingProfWE would link to the same row in SUEWS_Profiles.txt, i.e. the same profile would be used for weekdays and weekends.
51	<i>AnthropogenicCode</i>	<i>L</i>	Code for modelling anthropogenic heat flux Provides the link to column 1 of SUEWS_AnthropogenicHeat.txt, which contains the model coefficients for estimation of the anthropogenic heat flux (used if AnthroHeatChoice = 1, 2 in RunControl.nml). Value of integer is arbitrary but must match code specified in column 1 of SUEWS_AnthropogenicHeat.txt.
52	<i>EnergyUseProfWD</i>	<i>L</i>	Code for energy use profile (weekdays) Provides the link to column 1 of SUEWS_Profiles.txt. Look the codes Value of integer is arbitrary but must match code specified in column 1 of SUEWS_Profiles.txt.
53	<i>EnergyUseProfWE</i>	<i>L</i>	Code for energy use profile (weekends) Provides the link to column 1 of SUEWS_Profiles.txt. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_Profiles.txt.
54	<i>ActivityProfWD</i>	<i>L</i>	Code for human activity profile (weekdays) Provides the link to column 1 of SUEWS_Profiles.txt. Look the codes Value of integer is arbitrary but must match code specified in column 1 of SUEWS_Profiles.txt. Used for CO2 flux calculation - not used in v2017a
55	<i>ActivityProfWE</i>	<i>L</i>	Code for human activity profile (weekends) Provides the link to column 1 of SUEWS_Profiles.txt. Look the codes Value of integer is arbitrary but must match code specified in column 1 of SUEWS_Profiles.txt. Used for CO2 flux calculation - not used in v2017a
56	<i>IrrigationCode</i>	<i>L</i>	Code for modelling irrigation Provides the link to column 1 of SUEWS_Irrigation.txt, which contains the model coefficients for estimation of the water use (used if WU_Choice = 0 in RunControl.nml). Value of integer is arbitrary but must match code specified in column 1 of SUEWS_Irrigation.txt.
57	<i>WaterUseProfManuWD</i>	<i>L</i>	Code for water use profile (manual irrigation, weekdays) Provides the link to column 1 of SUEWS_Profiles.txt. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_Profiles.txt.
58	<i>WaterUseProfManuWE</i>	<i>L</i>	Code for water use profile (manual irrigation, weekends) Provides the link to column 1 of SUEWS_Profiles.txt. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_Profiles.txt.
59	<i>WaterUseProfAutoWD</i>	<i>L</i>	Code for water use profile (automatic irrigation, weekdays) Provides the link to column 1 of SUEWS_Profiles.txt. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_Profiles.txt.
60	<i>WaterUseProfAutoWE</i>	<i>L</i>	Code for water use profile (automatic irrigation, weekends) Provides the link to column 1 of SUEWS_Profiles.txt. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_Profiles.txt.

Continued on next page

Table 6.2 – continued from previous page

No.	Column Name	Use	Description
61	<i>FlowChange</i>	<i>MD</i>	Difference in input and output flows for water surface [mm h^{-1}] Used to indicate river or stream flow through the grid. Currently not fully tested!
62	<i>RunoffToWater</i>	<i>MD</i> <i>MU</i>	Fraction of above-ground runoff flowing to water surface during flooding [-] Value must be in the range 0-1. Fraction of above-ground runoff that can flow to the water surface in the case of flooding.
63	<i>PipeCapacity</i>	<i>MD</i> <i>MU</i>	Storage capacity of pipes [mm] Runoff amounting to less than the value specified here is assumed to be removed by pipes.
64	<i>GridConnection1of8</i>	<i>MD</i> <i>MU</i>	The next 8 pairs of columns specify the water flow between grids. The first column of each pair specifies the grid that the water flows to (from the current grid, column 1); the second column of each pair specifies the fraction of water that flow to that grid. The fraction (i.e. amount) of water transferred may be estimated based on elevation, the length of connecting surface between grids, presence of walls, etc. Water cannot flow from the current grid to the same grid, so the grid number here must be different to the grid number in column 1. Water can flow to a maximum of 8 other grids. If there is no water flow between grids, or a single grid is run, set to 0. See section on Grid Connections
65	<i>Fraction1of8</i>	<i>MD</i> <i>MU</i>	Fraction of water that can flow to the grid specified in previous column [-]
66	<i>GridConnection2of8</i>	<i>MD</i> <i>MU</i>	Number of the grid where water can flow to
67	<i>Fraction2of8</i>	<i>MD</i> <i>MU</i>	Fraction of water that can flow to the grid specified in previous column [-]
68	<i>GridConnection3of8</i>	<i>MD</i> <i>MU</i>	Number of the grid where water can flow to
69	<i>Fraction3of8</i>	<i>MD</i> <i>MU</i>	Fraction of water that can flow to the grid specified in previous column [-]
70	<i>GridConnection4of8</i>	<i>MD</i> <i>MU</i>	Number of the grid where water can flow to
71	<i>Fraction4of8</i>	<i>MD</i> <i>MU</i>	Fraction of water that can flow to the grid specified in previous column [-]
72	<i>GridConnection5of8</i>	<i>MD</i> <i>MU</i>	Number of the grid where water can flow to
73	<i>Fraction5of8</i>	<i>MD</i> <i>MU</i>	Fraction of water that can flow to the grid specified in previous column [-]
74	<i>GridConnection6of8</i>	<i>MD</i> <i>MU</i>	Number of the grid where water can flow to
75	<i>Fraction6of8</i>	<i>MD</i> <i>MU</i>	Fraction of water that can flow to the grid specified in previous column [-]
76	<i>GridConnection7of8</i>	<i>MD</i> <i>MU</i>	Number of the grid where water can flow to
77	<i>Fraction7of8</i>	<i>MD</i> <i>MU</i>	Fraction of water that can flow to the grid specified in previous column [-]
78	<i>GridConnection8of8</i>	<i>MD</i> <i>MU</i>	Number of the grid where water can flow to
79	<i>Fraction8of8</i>	<i>MD</i> <i>MU</i>	Fraction of water that can flow to the grid specified in previous column [-]

Continued on next page

Table 6.2 – continued from previous page

No.	Column Name	Use	Description
80	<i>WithinGridPavedCode</i>	<i>L</i>	Code that links to the fraction of water that flows from Paved surfaces to surfaces in columns 2-10 of SUEWS_WithinGridWaterDist.txt. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_WithinGridWaterDist.txt.
81	<i>WithinGridBldgsCode</i>	<i>L</i>	Code that links to the fraction of water that flows from Bldgs surfaces to surfaces in columns 2-10 of SUEWS_WithinGridWaterDist.txt. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_WithinGridWaterDist.txt.
82	<i>WithinGridEveTrCode</i>	<i>L</i>	Code that links to the fraction of water that flows from EveTr surfaces to surfaces in columns 2-10 of SUEWS_WithinGridWaterDist.txt. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_WithinGridWaterDist.txt.
83	<i>WithinGridDecTrCode</i>	<i>L</i>	Code that links to the fraction of water that flows from DecTr surfaces to surfaces in columns 2-10 of SUEWS_WithinGridWaterDist.txt. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_WithinGridWaterDist.txt.
84	<i>WithinGridGrassCode</i>	<i>L</i>	Code that links to the fraction of water that flows from Grass surfaces to surfaces in columns 2-10 of SUEWS_WithinGridWaterDist.txt. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_WithinGridWaterDist.txt.
85	<i>WithinGridBSoilCode</i>	<i>L</i>	Code that links to the fraction of water that flows from BSoil surfaces to surfaces in columns 2-10 of SUEWS_WithinGridWaterDist.txt. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_WithinGridWaterDist.txt.
86	<i>WithinGridWaterCode</i>	<i>L</i>	Code that links to the fraction of water that flows from Water surfaces to surfaces in columns 2-10 of SUEWS_WithinGridWaterDist.txt. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_WithinGridWaterDist.txt.
87	<i>AreaWall</i>	<i>MU</i>	Area of wall within grid (needed for ESTM calculation).
88	<i>Fr_ESTMClass_Paved1</i>	<i>MU</i>	Columns 88-90 must add up to 1
89	<i>Fr_ESTMClass_Paved2</i>	<i>MU</i>	Columns 88-90 must add up to 1
90	<i>Fr_ESTMClass_Paved3</i>	<i>MU</i>	Columns 88-90 must add up to 1
91	<i>Code_ESTMClass_Paved1</i>	<i>L</i>	Code linking to SUEWS_ESTMCoefficients.txt
92	<i>Code_ESTMClass_Paved2</i>	<i>L</i>	Code linking to SUEWS_ESTMCoefficients.txt
93	<i>Code_ESTMClass_Paved3</i>	<i>L</i>	Code linking to SUEWS_ESTMCoefficients.txt
94	<i>Fr_ESTMClass_Bldgs1</i>	<i>MU</i>	Columns 94-98 must add up to 1
95	<i>Fr_ESTMClass_Bldgs2</i>	<i>MU</i>	Columns 94-98 must add up to 1
96	<i>Fr_ESTMClass_Bldgs3</i>	<i>MU</i>	Columns 94-98 must add up to 1
97	<i>Fr_ESTMClass_Bldgs4</i>	<i>MU</i>	Columns 94-98 must add up to 1
98	<i>Fr_ESTMClass_Bldgs5</i>	<i>MU</i>	Columns 94-98 must add up to 1
99	<i>Code_ESTMClass_Bldgs1</i>	<i>L</i>	Code linking to SUEWS_ESTMCoefficients.txt
100	<i>Code_ESTMClass_Bldgs2</i>	<i>L</i>	Code linking to SUEWS_ESTMCoefficients.txt
101	<i>Code_ESTMClass_Bldgs3</i>	<i>L</i>	Code linking to SUEWS_ESTMCoefficients.txt

Continued on next page

Table 6.2 – continued from previous page

No.	Column Name	Use	Description
102	<i>Code_ESTMClass_Bldgs4</i>	<i>L</i>	Code linking to SUEWS_ESTMCoefficients.txt
103	<i>Code_ESTMClass_Bldgs5</i>	<i>L</i>	Code linking to SUEWS_ESTMCoefficients.txt

Day Light Savings (DLS)

The dates for DLS normally vary each year and country as they are often associated with a specific set of Sunday mornings at the beginning of summer and autumn. Note it is important to remember leap years. You can check <http://www.timeanddate.com/time/dst/> for your city.

Tip: If DLS does not occur give a start and end day immediately after it. Make certain the dummy dates are correct for the hemisphere

- for northern hemisphere, use: 180 181
- for southern hemisphere, use: 365 1

Example when running multiple years (in this case 2008 and 2009 in Canada):

Year	start of daylight savings	end of daylight savings
2008	170	240
2009	172	242

Grid Connections (water flow between grids)

Caution:

- not currently implemented
- columns 64-79 of *SUEWS_SiteSelect.txt* can be set to zero.

This section gives an example of water flow between grids, calculated based on the relative elevation of the grids and length of the connecting surface between adjacent grids. For the square grids in the figure, water flow is assumed to be zero between diagonally adjacent grids, as the length of connecting surface linking the grids is very small. Model grids need not be square or the same size.

The table gives example values for the grid connections part of *SUEWS_SiteSelect.txt* for the grids shown in the figure. For each row, only water flowing out of the current grid is entered (e.g. water flows from 234 to 236 and 237, with a larger proportion of water flowing to 237 because of the greater length of connecting surface between 234 and 237 than between 234 and 236. No water is assumed to flow between 234 and 233 or 235 because there is no elevation difference between these grids. Grids 234 and 238 are at the same elevation and only connect at a point, so no water flows between them. Water enters grid 234 from grids 230, 231 and 232 as these are more elevated.

Note: Arrows indicate the water flow in to and out of grid 234, but note that only only water flowing out of each grid is entered in *SUEWS_SiteSelect.txt*

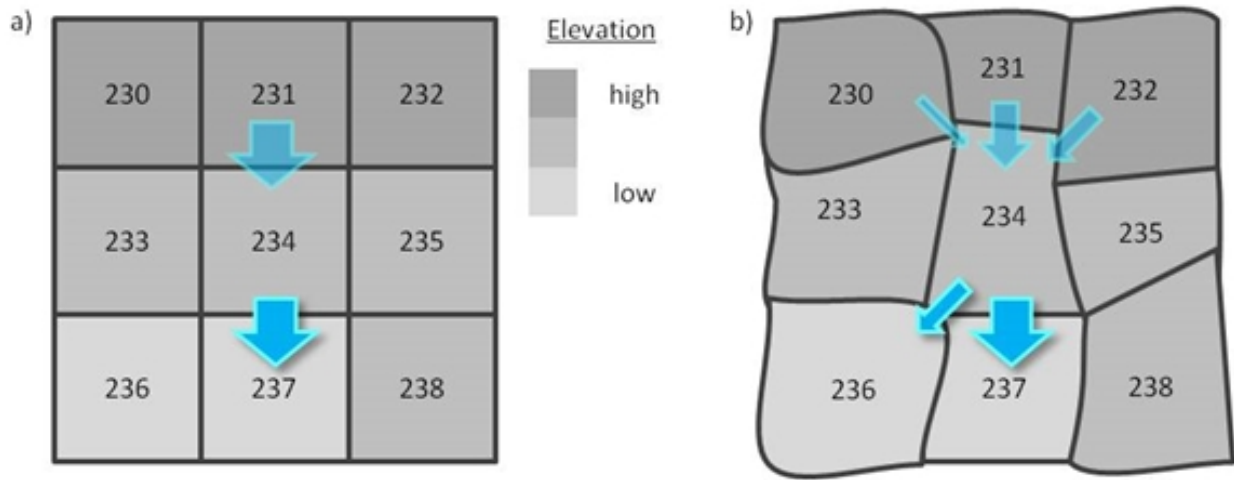


Fig. 6.1: Example grid connections showing water flow between grids.

Grid	GridConnection 1of8	Fraction1of8	GridConnection 2of8	Fraction2of8	GridConnection 3of8	Fraction3of8	GridConnection 4of8	Fraction4of8	GridConnection 5of8	Fraction5of8	GridConnection 6of8	Fraction6of8	GridConnection 7of8	Fraction7of8	GridConnection 8of8	Fraction8of8
230	233	0.90	234	0.10	0	0	0	0	0	0	0	0	0	0	0	0
231	234	1.00	0	0	0	0	0	0	0	0	0	0	0	0	0	0
232	234	0.20	235	0.80	0	0	0	0	0	0	0	0	0	0	0	0
233	236	1.00	0	0	0	0	0	0	0	0	0	0	0	0	0	0
234	236	0.10	237	0.90	0	0	0	0	0	0	0	0	0	0	0	0
235	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
236	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
237	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
238	237	1.0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fig. 6.2: Example values for the grid connections part of *SUEWS_SiteSelect.txt* for the grids.

6.2.8 SUEWS_Snow.txt

SUEWS_Snow.txt specifies the characteristics for snow surfaces when *SnowUse=1* in *RunControl.nml*. If the snow part of the model is not run, fill this table with ‘-999’ except for the first (Code) column and set *SnowUse=0* in *RunControl.nml*. For a detailed description of the variables, see Järvi et al. (2014) [Leena2014].

Warning: In the current release *SnowUse* should be set to 0.

No.	Column Name	Use	Description
1	<i>Code</i>	<i>L</i>	Code linking to SUEWS_SiteSelect.txt for snow surfaces (Snow-Code). Value of integer is arbitrary but must match code specified in SUEWS_SiteSelect.txt.
2	<i>RadMeltFactor</i>	<i>MU</i>	Hourly radiation melt factor of snow [$\text{mm W}^{-1} \text{h}^{-1}$]
3	<i>TempMeltFactor</i>	<i>MU</i>	Hourly temperature melt factor of snow [$\text{mm K}^{-1} \text{h}^{-1}$] (In previous model version, this parameter was 0.12)
4	<i>AlbedoMin</i>	<i>MU</i>	Example values [-] 0.18 Järvi et al. (2014) [15]
5	<i>AlbedoMax</i>	<i>MU</i>	Example values [-] 0.85 Järvi et al. (2014) [15]
6	<i>Emissivity</i>	<i>MU</i>	Effective surface emissivity. View factors should be taken into account Example values [-] 0.99 Järvi et al. (2014) [15]
7	<i>tau_a</i>	<i>MD</i>	Time constant for snow albedo aging in cold snow [-]
8	<i>tau_f</i>	<i>MD</i>	Time constant for snow albedo aging in melting snow [-]
9	<i>PrecipLimAlb</i>	<i>MD</i>	Limit for hourly precipitation when the ground is fully covered with snow. Then snow albedo is reset to AlbedoMax [mm]
10	<i>snowDensMin</i>	<i>MD</i>	Fresh snow density [kg m^{-3}]
11	<i>snowDensMax</i>	<i>MD</i>	Maximum snow density [kg m^{-3}]
12	<i>tau_r</i>	<i>MD</i>	Time constant for snow density ageing [-]
13	<i>CRWMin</i>	<i>MD</i>	Minimum water holding capacity of snow [mm]
14	<i>CRWMax</i>	<i>MD</i>	Maximum water holding capacity of snow [mm]
15	<i>PrecipLimSnow</i>	<i>MD</i>	Auer (1974) [38]
16	<i>OHMCode_SummerWet</i>	<i>L</i>	Code for OHM coefficients to use for this surface during wet conditions in summer. Links to SUEWS_OHMCoefficients.txt . Value of integer is arbitrary but must match code specified in column 1 of SUEWS_OHMCoefficients.txt.
17	<i>OHMCode_SummerDry</i>	<i>L</i>	Code for OHM coefficients to use for this surface during dry conditions in summer. Links to SUEWS_OHMCoefficients.txt . Value of integer is arbitrary but must match code specified in column 1 of SUEWS_OHMCoefficients.txt.
18	<i>OHMCode_WinterWet</i>	<i>L</i>	Code for OHM coefficients to use for this surface during wet conditions in winter. Links to SUEWS_OHMCoefficients.txt . Value of integer is arbitrary but must match code specified in column 1 of SUEWS_OHMCoefficients.txt.
19	<i>OHMCode_WinterDry</i>	<i>L</i>	Code for OHM coefficients to use for this surface during dry conditions in winter. Links to SUEWS_OHMCoefficients.txt . Value of integer is arbitrary but must match code specified in column 1 of SUEWS_OHMCoefficients.txt.

Continued on next page

Table 6.3 – continued from previous page

No.	Column Name	Use	Description
20	<i>OHMThresh_SW</i>	<i>MD</i>	Temperature threshold determining whether summer/winter OHM coefficients are applied [°C] If 5-day running mean air temperature is greater than or equal to this threshold, OHM coefficients for summertime are applied; otherwise coefficients for wintertime are applied. Not actually used for Snow surface as winter wet conditions always assumed.
21	<i>OHMThresh_WD</i>	<i>MD</i>	Soil moisture threshold determining whether wet/dry OHM coefficients are applied [-] If soil moisture (as a proportion of maximum soil moisture capacity) exceeds this threshold for bare soil and vegetated surfaces, OHM coefficients for wet conditions are applied; otherwise coefficients for dry coefficients are applied. Note that OHM coefficients for wet conditions are applied if the surface is wet. Not actually used for Snow surface as winter wet conditions always assumed.
22	<i>ESTMCode</i>	<i>L</i>	For paved and building surfaces, it is possible to specify multiple codes per grid (3 for paved, 5 for buildings) using <i>SUEWS_SiteSelect.txt</i> . In this case, set ESTM code here to zero.
23	<i>AnOHM_Cp</i>	<i>MU</i>	Volumetric heat capacity for this surface to use in AnOHM [J m^{-3}]
24	<i>AnOHM_Kk</i>	<i>MU</i>	Thermal conductivity for this surface to use in AnOHM [W m K^{-1}]
25	<i>AnOHM_Ch</i>	<i>MU</i>	Bulk transfer coefficient for this surface to use in AnOHM [-]

6.2.9 SUEWS_Soil.txt

SUEWS_Soil.txt specifies the characteristics of the sub-surface soil below each of the non-water surface types (Paved, Bldgs, EveTr, DecTr, Grass, BSoil). The model does not have a soil store below the water surfaces. Note that these sub-surface soil stores are different to the bare soil/unmanaged surface cover type. Each of the non-water surface types need to link to soil characteristics specified here. If the soil characteristics are assumed to be the same for all surface types, use a single code value to link the characteristics here with the SoilTypeCode columns in *SUEWS_NonVeg.txt* and *SUEWS_Veg.txt*.

Soil moisture can either be provided using observational data in the met forcing file (`smd_choice = 1` or `2` in *RunControl.nml*) and providing some metadata information here (OBS columns), or modelled by SUEWS (`smd_choice = 0` in *RunControl.nml*). - **Note, the option to use observational data is not operational in the current release!**

No.	Column Name	Use	Description
1	<i>Code</i>	<i>L</i>	Code linking to the SoilTypeCode column in SUEWS_NonVeg.txt (for Paved, Bldgs and BSoil surfaces) and SUEWS_Veg.txt (for EveTr, DecTr and Grass surfaces). Value of integer is arbitrary but must match code specified in SUEWS_SiteSelect.txt.
2	<i>SoilDepth</i>	<i>MD</i>	Depth of sub-surface soil store [mm] i.e. the depth of soil beneath the surface
3	<i>SoilStoreCap</i>	<i>MD</i>	SoilStoreCap must not be greater than SoilDepth.
4	<i>SatHydraulicCond</i>	<i>MD</i>	Hydraulic conductivity for saturated soil [mm s^{-1}]
5	<i>SoilDensity</i>	<i>MD</i>	Soil density [kg m^{-3}]
6	<i>InfiltrationRate</i>	<i>O</i>	Not currently used
7	<i>OBS_SMDepth</i>	<i>O</i>	Use only if soil moisture is observed and provided in the met forcing file and smd_choice = 1 or 2. Use of observed soil moisture not currently tested
8	<i>OBS_SMCap</i>	<i>O</i>	Use only if soil moisture is observed and provided in the met forcing file and smd_choice = 1 or 2. Use of observed soil moisture not currently tested
9	<i>OBS_SoilNotRocks</i>	<i>O</i>	Use only if soil moisture is observed and provided in the met forcing file and smd_choice = 1 or 2. Use of observed soil moisture not currently tested

6.2.10 SUEWS_Veg.txt

SUEWS_Veg.txt specifies the characteristics for the vegetated surface cover types (EveTr, DecTr, Grass) by linking codes in column 1 of SUEWS_Veg.txt to the codes specified in *SUEWS_SiteSelect.txt* (Code_EveTr, Code_DecTr, Code_Grass). Each row should correspond to a particular surface type. For suggestions on how to complete this table, see: [Typical Values](#).

No.	Column Name	Use	Description
1	<i>Code</i>	<i>L</i>	Code linking to SUEWS_SiteSelect.txt for evergreen trees and shrubs (Code_EveTr), deciduous trees and shrubs (Code_DecTr) and grass surfaces (Code_Grass). Value of integer is arbitrary but must match codes specified in SUEWS_SiteSelect.txt.
2	<i>AlbedoMin</i>	<i>MU</i>	Effective surface albedo (middle of the day value) for wintertime (not including snow), leaf-off. View factors should be taken into account. Example values [-] 0.1 EveTr Oke (1987) [35] 0.18 DecTr Oke (1987) [35] 0.21 Grass Oke (1987) [35]
3	<i>AlbedoMax</i>	<i>MU</i>	Effective surface albedo (middle of the day value) for summertime, full leaf-on. View factors should be taken into account. Example values [-] 0.1 EveTr Oke (1987) [35] 0.18 DecTr Oke (1987) [35] 0.21 Grass Oke (1987) [35]
4	<i>Emissivity</i>	<i>MU</i>	Effective surface emissivity. View factors should be taken into account. Example values [-] 0.98 EveTr Oke (1987) [35] 0.98 DecTr Oke (1987) [35] 0.93 Grass Oke (1987) [35]
5	<i>StorageMin</i>	<i>MD</i>	Minimum water storage capacity for upper surfaces (i.e. canopy). Min/max values are to account for seasonal variation (e.g. leaf-off/leaf-on differences for vegetated surfaces). Example values [mm] 1.3 EveTr Breuer et al. (2003) [36] 0.3 DecTr Breuer et al. (2003) [36] 1.9 Grass Breuer et al. (2003) [36]

Continued on next page

Table 6.4 – continued from previous page

No.	Column Name	Use	Description
6	<i>StorageMax</i>	<i>MD</i>	Maximum water storage capacity for upper surfaces (i.e. canopy) Min/max values are to account for seasonal variation (e.g. leaf-off/leaf-on differences for vegetated surfaces) Only used for DecTr surfaces - set EveTr and Grass values the same as StorageMin. Example values [mm] 1.3 EveTr Breuer et al. (2003) [36] 0.8 DecTr Breuer et al. (2003) [36] 1.9 Grass Breuer et al. (2003) [36]
7	<i>WetThreshold</i>	<i>MD</i>	Depth of water which determines whether evaporation occurs from a partially wet or completely wet surface. Example values [mm] 1.8 EveTr 1. DecTr 2. Grass
8	<i>StateLimit</i>	<i>MD</i>	Currently only used for the water surface
9	<i>DrainageEq</i>	<i>MD</i>	Options 1 Falk and Niemczynowicz (1978) [32] 2 Halldin et al. (1979) [33] (Rutter eqn corrected for $c=0$, see Calder & Wright (1986) [34]) Recommended [3] for EveTr, DecTr, Grass (unirrigated) 3 Falk and Niemczynowicz (1978) [32] Recommended [3] for Grass (irrigated) Coefficients are specified in the following two columns.
10	<i>DrainageCoef1</i>	<i>MD</i>	Example values DrainageEq 10 Coefficient D0 [mm h ⁻¹] 3 Recommended [3] for Grass (irrigated) 0.013 Coefficient D0 [mm h ⁻¹] 2 Recommended [3] for EveTr, DecTr, Grass (unirrigated)
11	<i>DrainageCoef2</i>	<i>MD</i>	Example values DrainageEq 3 Coefficient b [-] 3 Recommended [3] for Grass (irrigated) 1.71 Coefficient b [m m ⁻¹] 2 Recommended [3] for EveTr, DecTr, Grass (unirrigated)
12	<i>SoilTypeCode</i>	<i>L</i>	Code for soil characteristics below this surface Provides the link to column 1 of SUEWS_Soil.txt , which contains the attributes describing sub-surface soil for this surface type. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_Soil.txt.
13	<i>SnowLimPatch</i>	<i>O</i>	Limit of snow water equivalent when the surface surface is fully covered with snow. Not needed if SnowUse = 0 in RunControl.nml . Example values [mm] 190 EveTr Järvi et al. (2014) [15] 190 DecTr Järvi et al. (2014) [15] 190 Grass Järvi et al. (2014) [15]
14	<i>BaseT</i>	<i>MU</i>	See section 2.2 Järvi et al. (2011); Appendix A Järvi et al. (2014). Example values [°C] 5 EveTr Järvi et al. (2011) [1] 5 DecTr Järvi et al. (2011) [1] 5 Grass Järvi et al. (2011) [1]
15	<i>BaseTe</i>	<i>MU</i>	See section 2.2 Järvi et al. (2011) [1] ; Appendix A Järvi et al. (2014) [15] . Example values [°C] 10 EveTr Järvi et al. (2011) [1] 10 DecTr Järvi et al. (2011) [1] 10 Grass Järvi et al. (2011) [1]
16	<i>GDDFull</i>	<i>MU</i>	This should be checked carefully for your study area using modelled LAI from the DailyState output file compared to known behaviour in the study area. See section 2.2 Järvi et al. (2011) [1] ; Appendix A Järvi et al. (2014) [15] for more details. Example values [°C] 300 EveTr Järvi et al. (2011) [1] 300 DecTr Järvi et al. (2011) [1] 300 Grass Järvi et al. (2011) [1]
17	<i>SDDFull</i>	<i>MU</i>	This should be checked carefully for your study area using modelled LAI from the DailyState output file compared to known behaviour in the study area. See section 2.2 Järvi et al. (2011) [1] ; Appendix A Järvi et al. (2014) [15] for more details. Example values [°C] -450 EveTr Järvi et al. (2011) [1] -450 DecTr Järvi et al. (2011) [1] -450 Grass Järvi et al. (2011) [1]

Continued on next page

Table 6.4 – continued from previous page

No.	Column Name	Use	Description
18	<i>LAIMin</i>	<i>MD</i>	leaf-off wintertime value Example values [$\text{m}^{-2} \text{m}^{-2}$] 4. EveTr Järvi et al. (2011) [1] 1. DecTr Järvi et al. (2011) [1] 1.6 Grass Grimmond and Oke (1991) [3] and references therein
19	<i>LAIMax</i>	<i>MD</i>	full leaf-on summertime value Example values [$\text{m}^{-2} \text{m}^{-2}$] 5.1 EveTr Breuer et al. (2003) [36] 5.5 DecTr Breuer et al. (2003) [36] 5.9 Grass Breuer et al. (2003) [36]
20	<i>PorosityMin</i>	<i>MD</i>	leaf-off wintertime value Used only for DecTr (can affect roughness calculation)
21	<i>PorosityMax</i>	<i>MD</i>	full leaf-on summertime value Used only for DecTr (can affect roughness calculation)
22	<i>MaxConductance</i>	<i>MD</i>	Example values [mm s^{-1}] 7.4 EveTr Järvi et al. (2011) [1] 11.7 DecTr Järvi et al. (2011) [1] 33.1 Grass (unirrigated) Järvi et al. (2011) [1] 40. Grass (irrigated) Järvi et al. (2011) [1]
23	<i>LAIEq</i>	<i>MD</i>	Options 0 Järvi et al. (2011) [1] 1 Järvi et al. (2014) [15] Coefficients are specified in the following four columns. N.B. North and South hemispheres are treated slightly differently.
24	<i>LeafGrowthPower1</i>	<i>MD</i>	Example values LAIEq 0.03 Järvi et al. (2011) [1] 0 0.04 Järvi et al. (2014) [15] 1
25	<i>LeafGrowthPower2</i>	<i>MD</i>	Example values [K^{-1}] LAIEq 0.0005 Järvi et al. (2011) [1] 0 0.001 Järvi et al. (2014) [15] 1
26	<i>LeafOffPower1</i>	<i>MD</i>	Example values LAIEq 0.03 Järvi et al. (2011) [1] 0 -1.5 Järvi et al. (2014) [15] 1
27	<i>LeafOffPower2</i>	<i>MD</i>	Example values [K^{-1}] LAIEq 0.0005 Järvi et al. (2011) [1] 0 0.0015 Järvi et al. (2014) [15] 1
28	<i>OHMCode_SummerWet</i>	<i>L</i>	Code for OHM coefficients to use for this surface during wet conditions in summer. Links to SUEWS_OHMCoefficients.txt . Value of integer is arbitrary but must match code specified in column 1 of SUEWS_OHMCoefficients.txt.
29	<i>OHMCode_SummerDry</i>	<i>L</i>	Code for OHM coefficients to use for this surface during dry conditions in summer. Links to SUEWS_OHMCoefficients.txt . Value of integer is arbitrary but must match code specified in column 1 of SUEWS_OHMCoefficients.txt.
30	<i>OHMCode_WinterWet</i>	<i>L</i>	Code for OHM coefficients to use for this surface during wet conditions in winter. Links to SUEWS_OHMCoefficients.txt . Value of integer is arbitrary but must match code specified in column 1 of SUEWS_OHMCoefficients.txt.
31	<i>OHMCode_WinterDry</i>	<i>L</i>	Code for OHM coefficients to use for this surface during dry conditions in winter. Links to SUEWS_OHMCoefficients.txt . Value of integer is arbitrary but must match code specified in column 1 of SUEWS_OHMCoefficients.txt.
32	<i>OHMThresh_SW</i>	<i>MD</i>	Temperature threshold determining whether summer/winter OHM coefficients are applied [$^{\circ}\text{C}$] If 5-day running mean air temperature is greater than or equal to this threshold, OHM coefficients for summertime are applied; otherwise coefficients for wintertime are applied.

Continued on next page

Table 6.4 – continued from previous page

No.	Column Name	Use	Description
33	<i>OHMThresh_WD</i>	<i>MD</i>	Soil moisture threshold determining whether wet/dry OHM coefficients are applied [-] If soil moisture (as a proportion of maximum soil moisture capacity) exceeds this threshold for bare soil and vegetated surfaces, OHM coefficients for wet conditions are applied; otherwise coefficients for dry coefficients are applied. Note that OHM coefficients for wet conditions are applied if the surface is wet.
34	<i>ESTMCode</i>	<i>L</i>	Code for ESTM coefficients to use for this surface. Links to SUEWS_ESTMCoefficients.txt . Value of integer is arbitrary but must match code specified in column 1 of SUEWS_ESTMCoefficients.txt.
35	<i>AnOHM_Cp</i>	<i>MU</i>	Volumetric heat capacity for this surface to use in AnOHM [J m^{-3}]
36	<i>AnOHM_Kk</i>	<i>MU</i>	Thermal conductivity for this surface to use in AnOHM [W m K^{-1}]
37	<i>AnOHM_Ch</i>	<i>MU</i>	Bulk transfer coefficient for this surface to use in AnOHM [-]

6.2.11 SUEWS_Water.txt

SUEWS_Water.txt specifies the characteristics for the water surface cover type by linking codes in column 1 of SUEWS_Water.txt to the codes specified in SUEWS_SiteSelect.txt (Code_Water).

No.	Column Name	Use	Description
1	<i>Code</i>	<i>L</i>	Code linking to SUEWS_SiteSelect.txt for water surfaces (Code_Water). Value of integer is arbitrary but must match code specified in SUEWS_SiteSelect.txt.
2	<i>AlbedoMin</i>	<i>MU</i>	View factors should be taken into account. Not currently used for water surface - set same as AlbedoMax.
3	<i>AlbedoMax</i>	<i>MU</i>	Effective albedo of the water surface. View factors should be taken into account. Example values [-] 0.1 Water Oke (1987) [35]
4	<i>Emissivity</i>	<i>MU</i>	Effective surface emissivity. View factors should be taken into account. Example values [-] 0.95 Water Oke (1987) [35]
5	<i>StorageMin</i>	<i>MD</i>	Minimum water storage capacity for upper surfaces (i.e. canopy). Min/max values are to account for seasonal variation - not used for water surfaces. Example values [mm] 0.5 Water
6	<i>StorageMax</i>	<i>MD</i>	Maximum water storage capacity for upper surfaces (i.e. canopy). Min and max values are to account for seasonal variation - not used for water surfaces so set same as StorageMin.
7	<i>WetThreshold</i>	<i>MD</i>	Depth of water which determines whether evaporation occurs from a partially wet or completely wet surface. Example values [mm] 0.5 Water
8	<i>StateLimit</i>	<i>MU</i>	Surface state cannot exceed this value. Set to a large value (e.g. 20000 mm = 20 m) if the water body is substantial (lake, river, etc) or a small value (e.g. 10 mm) if water bodies are very shallow (e.g. fountains). WaterDepth (column 9) must not exceed this value.
9	<i>WaterDepth</i>	<i>MU</i>	Set to a large value (e.g. 20000 mm = 20 m) if the water body is substantial (lake, river, etc) or a small value (e.g. 10 mm) if water bodies are very shallow (e.g. fountains). This value must not exceed StateLimit (column 8).
10	<i>DrainageEq</i>	<i>MD</i>	Not currently used for water surface.
11	<i>DrainageCoef1</i>	<i>MD</i>	Not currently used for water surface
12	<i>DrainageCoef2</i>	<i>MD</i>	Not currently used for water surface

Continued on next page

Table 6.5 – continued from previous page

No.	Column Name	Use	Description
13	<i>OHMCode_SummerWet</i>	<i>L</i>	Code for OHM coefficients to use for this surface during wet conditions in summer. Links to SUEWS_OHMCoefficients.txt . Value of integer is arbitrary but must match code specified in column 1 of SUEWS_OHMCoefficients.txt.
14	<i>OHMCode_SummerDry</i>	<i>L</i>	Code for OHM coefficients to use for this surface during dry conditions in summer. Links to SUEWS_OHMCoefficients.txt . Value of integer is arbitrary but must match code specified in column 1 of SUEWS_OHMCoefficients.txt.
15	<i>OHMCode_WinterWet</i>	<i>L</i>	Code for OHM coefficients to use for this surface during wet conditions in winter. Links to SUEWS_OHMCoefficients.txt . Value of integer is arbitrary but must match code specified in column 1 of SUEWS_OHMCoefficients.txt.
16	<i>OHMCode_WinterDry</i>	<i>L</i>	Code for OHM coefficients to use for this surface during dry conditions in winter. Links to SUEWS_OHMCoefficients.txt . Value of integer is arbitrary but must match code specified in column 1 of SUEWS_OHMCoefficients.txt.
17	<i>OHMThresh_SW</i>	<i>MD</i>	Temperature threshold determining whether summer/winter OHM coefficients are applied [°C] If 5-day running mean air temperature is greater than or equal to this threshold, OHM coefficients for summertime are applied; otherwise coefficients for wintertime are applied.
18	<i>OHMThresh_WD</i>	<i>MD</i>	Soil moisture threshold determining whether wet/dry OHM coefficients are applied [-] If soil moisture (as a proportion of maximum soil moisture capacity) exceeds this threshold for bare soil and vegetated surfaces, OHM coefficients for wet conditions are applied; otherwise coefficients for dry coefficients are applied. Note that OHM coefficients for wet conditions are applied if the surface is wet. Not actually used for water surface (as no soil surface beneath).
19	<i>ESTMCode</i>	<i>L</i>	Code for ESTM coefficients to use for this surface. Links to SUEWS_ESTMCoefficients.txt . Value of integer is arbitrary but must match code specified in column 1 of SUEWS_ESTMCoefficients.txt.
20	<i>AnOHM_Cp</i>	<i>MU</i>	Volumetric heat capacity for this surface to use in AnOHM [J m ⁻³]
21	<i>AnOHM_Kk</i>	<i>MU</i>	Thermal conductivity for this surface to use in AnOHM [W m K ⁻¹]
22	<i>AnOHM_Ch</i>	<i>MU</i>	Bulk transfer coefficient for this surface to use in AnOHM [-]

6.2.12 SUEWS_WithinGridWaterDist.txt

SUEWS_WithinGridWaterDist.txt specifies the movement of water between surfaces within a grid/area. It allows impervious connectivity to be taken into account.

Each row corresponds to a surface type (linked by the Code in column 1 to the *SUEWS_SiteSelect.txt* columns: WithinGridPavedCode, WithinGridBldgsCode, ..., WithinGridWaterCode). Each column contains the fraction of water flowing from the surface type to each of the other surface types or to runoff or the sub-surface soil store.

Note:

- The sum of each row (excluding the Code) must equal 1.
- Water cannot flow from one surface to that same surface, so the diagonal elements should be zero.

- The row corresponding to the water surface should be zero, as there is currently no flow permitted from the water surface to other surfaces by the model.
- Currently water **cannot** go to both runoff and soil store (i.e. it must go to one or the other – runoff for impervious surfaces; soilstore for pervious surfaces).

In the table below, for example,

- all flow from paved surfaces goes to runoff;
- 90% of flow from buildings goes to runoff, with small amounts going to other surfaces (mostly paved surfaces as buildings are often surrounded by paved areas);
- all flow from vegetated and bare soil areas goes into the sub-surface soil store;
- the row corresponding to water contains zeros (as it is currently not used).

No.	Column Name	Use	Description
1	<i>ToPaved</i>	<i>MU</i>	Fraction of water going to <i>Paved</i>
2	<i>ToBldgs</i>	<i>MU</i>	Fraction of water going to <i>Bldgs</i>
3	<i>ToEveTr</i>	<i>MU</i>	Fraction of water going to <i>EveTr</i>
4	<i>ToDecTr</i>	<i>MU</i>	Fraction of water going to <i>DecTr</i>
5	<i>ToGrass</i>	<i>MU</i>	Fraction of water going to <i>Grass</i>
6	<i>ToBSoil</i>	<i>MU</i>	Fraction of water going to <i>BSoil</i>
7	<i>ToWater</i>	<i>MU</i>	Fraction of water going to <i>Water</i>
8	<i>ToRunoff</i>	<i>MU</i>	Fraction of water going to <i>Runoff</i>
9	<i>ToSoilStore</i>	<i>MU</i>	Fraction of water going to <i>SoilStore</i>

6.2.13 Input_Options

a1

Description Coefficient for Q^* term [-]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_OHMCoefficients.txt</i>	<i>MU</i>	Coefficient for Q^* term [-]

a2

Description Coefficient for dQ^*/dt term [h]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_OHMCoefficients.txt</i>	<i>MU</i>	Coefficient for dQ^*/dt term [h]

a3

Description Constant term [$W\ m^{-2}$]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_OHMCoefficients.txt</i>	<i>MU</i>	Constant term [W m ⁻²]

ActivityProfWD

Description Code for human activity profile (weekdays) Provides the link to column 1 of SUEWS_Profiles.txt. Look the codes Value of integer is arbitrary but must match code specified in column 1 of SUEWS_Profiles.txt. Used for CO2 flux calculation - not used in v2017a

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>L</i>	Code for human activity profile (weekdays) Provides the link to column 1 of SUEWS_Profiles.txt. Look the codes Value of integer is arbitrary but must match code specified in column 1 of SUEWS_Profiles.txt. Used for CO2 flux calculation - not used in v2017a

ActivityProfWE

Description Code for human activity profile (weekends) Provides the link to column 1 of SUEWS_Profiles.txt. Look the codes Value of integer is arbitrary but must match code specified in column 1 of SUEWS_Profiles.txt. Used for CO2 flux calculation - not used in v2017a

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>L</i>	Code for human activity profile (weekends) Provides the link to column 1 of SUEWS_Profiles.txt. Look the codes Value of integer is arbitrary but must match code specified in column 1 of SUEWS_Profiles.txt. Used for CO2 flux calculation - not used in v2017a

AHMin

Description Use with AnthroHeatMethod = 1

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_AnthropogenicHeat.txt</i>	<i>MU 0</i>	Use with AnthroHeatMethod = 1

AHSlope

Description Use with AnthropHeatMethod = 1

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_AnthropogenicHeat.txt</i>	<i>MU 0</i>	Use with AnthropHeatMethod = 1

AlbedoMax

Description Effective surface albedo (middle of the day value) for summertime. View factors should be taken into account. Effective surface albedo (middle of the day value) for summertime, full leaf-on. View factors should be taken into account. Example values [-] 0.1 EveTr Oke (1987) [35] 0.18 DecTr Oke (1987) [35] 0.21 Grass Oke (1987) [35] Effective albedo of the water surface. View factors should be taken into account. Example values [-] 0.1 Water Oke (1987) [35] Example values [-] 0.85 Järvi et al. (2014) [15]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_NonVeg.txt</i>	<i>MU</i>	Effective surface albedo (middle of the day value) for summertime. View factors should be taken into account.
<i>SUEWS_Veg.txt</i>	<i>MU</i>	Effective surface albedo (middle of the day value) for summertime, full leaf-on. View factors should be taken into account. Example values [-] 0.1 EveTr Oke (1987) [35] 0.18 DecTr Oke (1987) [35] 0.21 Grass Oke (1987) [35]
<i>SUEWS_Water.txt</i>	<i>MU</i>	Effective albedo of the water surface. View factors should be taken into account. Example values [-] 0.1 Water Oke (1987) [35]
<i>SUEWS_Snow.txt</i>	<i>MU</i>	Example values [-] 0.85 Järvi et al. (2014) [15]

AlbedoMin

Description Effective surface albedo (middle of the day value) for wintertime (not including snow). View factors should be taken into account. Not currently used for non-vegetated surfaces – set the same as AlbedoMax. Effective surface albedo (middle of the day value) for wintertime (not including snow), leaf-off. View factors should be taken into account. Example values [-] 0.1 EveTr Oke (1987) [35] 0.18 DecTr Oke (1987) [35] 0.21 Grass Oke (1987) [35] View factors should be taken into account. Not currently used for water surface - set same as AlbedoMax. Example values [-] 0.18 Järvi et al. (2014) [15]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_NonVeg.txt</i>	<i>MU</i>	Effective surface albedo (middle of the day value) for wintertime (not including snow). View factors should be taken into account. Not currently used for non-vegetated surfaces – set the same as AlbedoMax.
<i>SUEWS_Veg.txt</i>	<i>MU</i>	Effective surface albedo (middle of the day value) for wintertime (not including snow), leaf-off. View factors should be taken into account. Example values [-] 0.1 EveTr Oke (1987) [35] 0.18 DecTr Oke (1987) [35] 0.21 Grass Oke (1987) [35]
<i>SUEWS_Water.txt</i>	<i>MU</i>	View factors should be taken into account. Not currently used for water surface - set same as AlbedoMax.
<i>SUEWS_Snow.txt</i>	<i>MU</i>	Example values [-] 0.18 Järvi et al. (2014) [15]

Alt

Description Used for both the radiation and water flow between grids. (N.B. water flow between grids not currently implemented.)

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>MU</i>	Used for both the radiation and water flow between grids. (N.B. water flow between grids not currently implemented.)

AnOHM_Ch

Description Bulk transfer coefficient for this surface to use in AnOHM [-] Bulk transfer coefficient for this surface to use in AnOHM [-] Bulk transfer coefficient for this surface to use in AnOHM [-] Bulk transfer coefficient for this surface to use in AnOHM [-]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_NonVeg.txt</i>	<i>MU</i>	Bulk transfer coefficient for this surface to use in AnOHM [-]
<i>SUEWS_Veg.txt</i>	<i>MU</i>	Bulk transfer coefficient for this surface to use in AnOHM [-]

Continued on next page

Table 6.16 – continued from previous page

Referencing Table	Requirement	Comment
<i>SUEWS_Water.txt</i>	<i>MU</i>	Bulk transfer coefficient for this surface to use in AnOHM [-]
<i>SUEWS_Snow.txt</i>	<i>MU</i>	Bulk transfer coefficient for this surface to use in AnOHM [-]

AnOHM_Cp

Description Volumetric heat capacity for this surface to use in AnOHM [J m⁻³] Volumetric heat capacity for this surface to use in AnOHM [J m⁻³] Volumetric heat capacity for this surface to use in AnOHM [J m⁻³] Volumetric heat capacity for this surface to use in AnOHM [J m⁻³]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_NonVeg.txt</i>	<i>MU</i>	Volumetric heat capacity for this surface to use in AnOHM [J m ⁻³]
<i>SUEWS_Veg.txt</i>	<i>MU</i>	Volumetric heat capacity for this surface to use in AnOHM [J m ⁻³]
<i>SUEWS_Water.txt</i>	<i>MU</i>	Volumetric heat capacity for this surface to use in AnOHM [J m ⁻³]
<i>SUEWS_Snow.txt</i>	<i>MU</i>	Volumetric heat capacity for this surface to use in AnOHM [J m ⁻³]

AnOHM_Kk

Description Thermal conductivity for this surface to use in AnOHM [W m K⁻¹] Thermal conductivity for this surface to use in AnOHM [W m K⁻¹] Thermal conductivity for this surface to use in AnOHM [W m K⁻¹] Thermal conductivity for this surface to use in AnOHM [W m K⁻¹]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_NonVeg.txt</i>	<i>MU</i>	Thermal conductivity for this surface to use in AnOHM [W m K ⁻¹]
<i>SUEWS_Veg.txt</i>	<i>MU</i>	Thermal conductivity for this surface to use in AnOHM [W m K ⁻¹]
<i>SUEWS_Water.txt</i>	<i>MU</i>	Thermal conductivity for this surface to use in AnOHM [W m K ⁻¹]
<i>SUEWS_Snow.txt</i>	<i>MU</i>	Thermal conductivity for this surface to use in AnOHM [W m K ⁻¹]

AnthropogenicCode

Description Code for modelling anthropogenic heat flux Provides the link to column 1 of SUEWS_AnthropogenicHeat.txt, which contains the model coefficients for estimation of the anthropogenic heat flux (used if AnthroHeatChoice = 1, 2 in RunControl.nml). Value of integer is arbitrary but must match code specified in column 1 of SUEWS_AnthropogenicHeat.txt.

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>L</i>	Code for modelling anthropogenic heat flux Provides the link to column 1 of SUEWS_AnthropogenicHeat.txt, which contains the model coefficients for estimation of the anthropogenic heat flux (used if AnthroHeatChoice = 1, 2 in RunControl.nml). Value of integer is arbitrary but must match code specified in column 1 of SUEWS_AnthropogenicHeat.txt.

AreaWall

Description Area of wall within grid (needed for ESTM calculation).

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>MU</i>	Area of wall within grid (needed for ESTM calculation).

BaseT

Description See section 2.2 Järvi et al. (2011); Appendix A Järvi et al. (2014). Example values [°C] 5 EveTr Järvi et al. (2011) [1] 5 DecTr Järvi et al. (2011) [1] 5 Grass Järvi et al. (2011) [1]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Veg.txt</i>	<i>MU</i>	See section 2.2 Järvi et al. (2011); Appendix A Järvi et al. (2014). Example values [°C] 5 EveTr Järvi et al. (2011) [1] 5 DecTr Järvi et al. (2011) [1] 5 Grass Järvi et al. (2011) [1]

BaseTe

Description See section 2.2 Järvi et al. (2011) [1] ; Appendix A Järvi et al. (2014) [15] .

Example values [°C] 10 EveTr Järvi et al. (2011) [1] 10 DecTr Järvi et al. (2011) [1] 10 Grass Järvi et al. (2011) [1]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Veg.txt</i>	<i>MU</i>	See section 2.2 Järvi et al. (2011) [1] ; Appendix A Järvi et al. (2014) [15] . Example values [°C] 10 EveTr Järvi et al. (2011) [1] 10 DecTr Järvi et al. (2011) [1] 10 Grass Järvi et al. (2011) [1]

BaseTHDD

Description Base temperature for heating degree days [°C] e.g. Sailor and Vasireddy (2006) [39]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_AnthropogenicHeat.txt</i>	<i>MU</i>	Base temperature for heating degree days [°C] e.g. Sailor and Vasireddy (2006) [39]

BuildEnergyUse

Description Building energy use [W m⁻²] Can be used for CO₂ flux calculation. Do not use in v2017a - set to -999

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>0</i>	Building energy use [W m ⁻²] Can be used for CO ₂ flux calculation. Do not use in v2017a - set to -999

Code

Description Code linking to *SUEWS_SiteSelect.txt* for paved surfaces (Code_Paved), buildings (Code_Bldgs) and bare soil surfaces (Code_BSoil). Value of integer is arbitrary but must match codes specified in *SUEWS_SiteSelect.txt*. Code linking to *SUEWS_SiteSelect.txt* for evergreen trees and shrubs (Code_EveTr), deciduous trees and shrubs (Code_DecTr) and grass surfaces (Code_Grass). Value of integer is arbitrary but must match codes specified in *SUEWS_SiteSelect.txt*. Code linking to *SUEWS_SiteSelect.txt* for water surfaces (Code_Water). Value of integer is arbitrary but must match code specified in *SUEWS_SiteSelect.txt*. Code linking to *SUEWS_SiteSelect.txt* for snow surfaces (SnowCode). Value of integer is arbitrary but must match code specified in *SUEWS_SiteSelect.txt*. Code linking to the SoilTypeCode column in *SUEWS_NonVeg.txt* (for Paved, Bldgs and BSoil surfaces) and *SUEWS_Veg.txt* (for EveTr, DecTr and Grass surfaces). Value of integer is arbitrary but must match code specified in *SUEWS_SiteSelect.txt*. Code linking to the CondCode column in *SUEWS_SiteSelect.txt*. Value of integer is ar-

bitrary but must match code specified in *SUEWS_SiteSelect.txt*. Code linking to the AnthropogenicCode column in *SUEWS_SiteSelect.txt*. Value of integer is arbitrary but must match code specified in *SUEWS_SiteSelect.txt*. Code linking to *SUEWS_SiteSelect.txt* for irrigation modelling (IrrigationCode). Value of integer is arbitrary but must match codes specified in *SUEWS_SiteSelect.txt*. Code linking to the OHMCode_SummerWet, OHMCode_SummerDry, OHMCode_WinterWet and OHMCode_WinterDry columns in *SUEWS_NonVeg.txt*, *SUEWS_Veg.txt*, *SUEWS_Water.txt* and *SUEWS_Snow.txt* files. Value of integer is arbitrary but must match code specified in *SUEWS_SiteSelect.txt*. For buildings and paved surfaces, set to zero if there is more than one ESTM class per grid and the codes and surface fractions specified in *SUEWS_SiteSelect.txt* will be used instead.

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_NonVeg.txt</i>	<i>L</i>	Code linking to <i>SUEWS_SiteSelect.txt</i> for paved surfaces (Code_Paved), buildings (Code_Bldgs) and bare soil surfaces (Code_BSoil). Value of integer is arbitrary but must match codes specified in <i>SUEWS_SiteSelect.txt</i> .
<i>SUEWS_Veg.txt</i>	<i>L</i>	Code linking to <i>SUEWS_SiteSelect.txt</i> for evergreen trees and shrubs (Code_EveTr), deciduous trees and shrubs (Code_DecTr) and grass surfaces (Code_Grass). Value of integer is arbitrary but must match codes specified in <i>SUEWS_SiteSelect.txt</i> .
<i>SUEWS_Water.txt</i>	<i>L</i>	Code linking to <i>SUEWS_SiteSelect.txt</i> for water surfaces (Code_Water). Value of integer is arbitrary but must match code specified in <i>SUEWS_SiteSelect.txt</i> .
<i>SUEWS_Snow.txt</i>	<i>L</i>	Code linking to <i>SUEWS_SiteSelect.txt</i> for snow surfaces (SnowCode). Value of integer is arbitrary but must match code specified in <i>SUEWS_SiteSelect.txt</i> .

Continued on next page

Table 6.25 – continued from previous page

Referencing Table	Requirement	Comment
<i>SUEWS_Soil.txt</i>	<i>L</i>	Code linking to the SoilTypeCode column in SUEWS_NonVeg.txt (for Paved, Bldgs and BSoil surfaces) and SUEWS_Veg.txt (for EveTr, DecTr and Grass surfaces). Value of integer is arbitrary but must match code specified in <i>SUEWS_SiteSelect.txt</i> .
<i>SUEWS_Conductance.txt</i>	<i>L</i>	Code linking to the CondCode column in <i>SUEWS_SiteSelect.txt</i> . Value of integer is arbitrary but must match code specified in <i>SUEWS_SiteSelect.txt</i> .
<i>SUEWS_AnthropogenicHeat.txt</i>	<i>L</i>	Code linking to the AnthropogenicCode column in <i>SUEWS_SiteSelect.txt</i> . Value of integer is arbitrary but must match code specified in <i>SUEWS_SiteSelect.txt</i> .
<i>SUEWS_Irrigation.txt</i>	<i>L</i>	Code linking to <i>SUEWS_SiteSelect.txt</i> for irrigation modelling (IrrigationCode). Value of integer is arbitrary but must match codes specified in <i>SUEWS_SiteSelect.txt</i> .
<i>SUEWS_OHMCoefficients.txt</i>	<i>L</i>	Code linking to the OHM-Code_SummerWet, OHM-Code_SummerDry, OHM-Code_WinterWet and OHM-Code_WinterDry columns in SUEWS_NonVeg.txt, SUEWS_Veg.txt, SUEWS_Water.txt and SUEWS_Snow.txt files. Value of integer is arbitrary but must match code specified in <i>SUEWS_SiteSelect.txt</i> .
<i>SUEWS_ESTMCoefficients.txt</i>	<i>L</i>	For buildings and paved surfaces, set to zero if there is more than one ESTM class per grid and the codes and surface fractions specified in <i>SUEWS_SiteSelect.txt</i> will be used instead.

Code_Bldgs

Description Code for Bldgs surface characteristics Provides the link to column 1 of

SUEWS_NonVeg.txt, which contains the attributes describing buildings in this grid for this year. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_NonVeg.txt.

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>L</i>	Code for Bldgs surface characteristics Provides the link to column 1 of SUEWS_NonVeg.txt, which contains the attributes describing buildings in this grid for this year. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_NonVeg.txt.

Code_Bsoil

Description Code for BSoil surface characteristics Provides the link to column 1 of SUEWS_NonVeg.txt, which contains the attributes describing bare soil in this grid for this year. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_NonVeg.txt.

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>L</i>	Code for BSoil surface characteristics Provides the link to column 1 of SUEWS_NonVeg.txt, which contains the attributes describing bare soil in this grid for this year. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_NonVeg.txt.

Code_DecTr

Description Code for DecTr surface characteristics Provides the link to column 1 of SUEWS_Veg.txt, which contains the attributes describing deciduous trees and shrubs in this grid for this year. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_Veg.txt.

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>L</i>	Code for DecTr surface characteristics Provides the link to column 1 of SUEWS_Veg.txt, which contains the attributes describing deciduous trees and shrubs in this grid for this year. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_Veg.txt.

Code_ESTMClass_Bldgs1

Description Code linking to SUEWS_ESTMCoefficients.txt

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>L</i>	Code linking to SUEWS_ESTMCoefficients.txt

Code_ESTMClass_Bldgs2

Description Code linking to SUEWS_ESTMCoefficients.txt

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>L</i>	Code linking to SUEWS_ESTMCoefficients.txt

Code_ESTMClass_Bldgs3

Description Code linking to SUEWS_ESTMCoefficients.txt

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>L</i>	Code linking to SUEWS_ESTMCoefficients.txt

Code_ESTMClass_Bldgs4

Description Code linking to SUEWS_ESTMCoefficients.txt

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>L</i>	Code linking to SUEWS_ESTMCoefficients.txt

Code_ESTMClass_Bldgs5

Description Code linking to SUEWS_ESTMCoefficients.txt

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>L</i>	Code linking to SUEWS_ESTMCoefficients.txt

Code_ESTMClass_Paved1

Description Code linking to SUEWS_ESTMCoefficients.txt

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>L</i>	Code linking to SUEWS_ESTMCoefficients.txt

Code_ESTMClass_Paved2

Description Code linking to SUEWS_ESTMCoefficients.txt

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>L</i>	Code linking to SUEWS_ESTMCoefficients.txt

Code_ESTMClass_Paved3

Description Code linking to SUEWS_ESTMCoefficients.txt

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>L</i>	Code linking to SUEWS_ESTMCoefficients.txt

Code_EveTr

Description Code for EveTr surface characteristics Provides the link to column 1 of SUEWS_Veg.txt, which contains the attributes describing evergreen trees and shrubs in this grid for this year. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_Veg.txt.

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>L</i>	Code for EveTr surface characteristics Provides the link to column 1 of SUEWS_Veg.txt, which contains the attributes describing evergreen trees and shrubs in this grid for this year. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_Veg.txt.

Code_Grass

Description Code for Grass surface characteristics Provides the link to column 1 of SUEWS_Veg.txt, which contains the attributes describing grass surfaces in this grid for this year. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_Veg.txt.

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>L</i>	Code for Grass surface characteristics Provides the link to column 1 of SUEWS_Veg.txt, which contains the attributes describing grass surfaces in this grid for this year. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_Veg.txt.

Code_Paved

Description Code for Paved surface characteristics Provides the link to column 1 of SUEWS_NonVeg.txt, which contains the attributes describing paved areas in this grid for this year. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_NonVeg.txt. e.g. 331 means use the characteristics specified in the row of input file SUEWS_NonVeg.txt which has 331 in column 1 (Code).

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>L</i>	Code for Paved surface characteristics Provides the link to column 1 of SUEWS_NonVeg.txt, which contains the attributes describing paved areas in this grid for this year. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_NonVeg.txt. e.g. 331 means use the characteristics specified in the row of input file SUEWS_NonVeg.txt which has 331 in column 1 (Code).

Code_Water

Description Code for Water surface characteristics Provides the link to column 1 of SUEWS_Water.txt, which contains the attributes describing open water in this grid for this year. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_Water.txt.

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>L</i>	Code for Water surface characteristics Provides the link to column 1 of SUEWS_Water.txt, which contains the attributes describing open water in this grid for this year. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_Water.txt.

CondCode

Description Code for surface conductance parameters Provides the link to column 1 of SUEWS_Conductance.txt, which contains the parameters for the Jarvis (1976) parameterisation of surface conductance. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_Conductance.txt. e.g. 33 means use the characteristics specified in the row of input file SUEWS_Conductance.txt which has 33 in column 1 (Code).

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>L</i>	Code for surface conductance parameters Provides the link to column 1 of SUEWS_Conductance.txt, which contains the parameters for the Jarvis (1976) parameterisation of surface conductance. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_Conductance.txt. e.g. 33 means use the characteristics specified in the row of input file SUEWS_Conductance.txt which has 33 in column 1 (Code).

CRWMax

Description Maximum water holding capacity of snow [mm]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Snow.txt</i>	<i>MD</i>	Maximum water holding capacity of snow [mm]

CRWMin

Description Minimum water holding capacity of snow [mm]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Snow.txt</i>	<i>MD</i>	Minimum water holding capacity of snow [mm]

DayWat (1)

Description Irrigation allowed on Sundays [1], if not [0]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Irrigation.txt</i>	<i>MU</i>	Irrigation allowed on Sundays [1], if not [0]

DayWat (2)

Description Irrigation allowed on Mondays [1], if not [0]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Irrigation.txt</i>	<i>MU</i>	Irrigation allowed on Mondays [1], if not [0]

DayWat (3)

Description Irrigation allowed on Tuesdays [1], if not [0]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Irrigation.txt</i>	<i>MU</i>	Irrigation allowed on Tuesdays [1], if not [0]

DayWat (4)

Description Irrigation allowed on Wednesdays [1], if not [0]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Irrigation.txt</i>	<i>MU</i>	Irrigation allowed on Wednesdays [1], if not [0]

DayWat (5)

Description Irrigation allowed on Thursdays [1], if not [0]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Irrigation.txt</i>	<i>MU</i>	Irrigation allowed on Thursdays [1], if not [0]

DayWat (6)

Description Irrigation allowed on Fridays [1], if not [0]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Irrigation.txt</i>	<i>MU</i>	Irrigation allowed on Fridays [1], if not [0]

DayWat (7)

Description Irrigation allowed on Saturdays [1], if not [0]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Irrigation.txt</i>	<i>MU</i>	Irrigation allowed on Saturdays [1], if not [0]

DayWatPer (1)

Description Fraction of properties using irrigation on Sundays [0-1]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Irrigation.txt</i>	<i>MU</i>	Fraction of properties using irrigation on Sundays [0-1]

DayWatPer(2)

Description Fraction of properties using irrigation on Mondays [0-1]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Irrigation.txt</i>	<i>MU</i>	Fraction of properties using irrigation on Mondays [0-1]

DayWatPer(3)

Description Fraction of properties using irrigation on Tuesdays [0-1]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Irrigation.txt</i>	<i>MU</i>	Fraction of properties using irrigation on Tuesdays [0-1]

DayWatPer(4)

Description Fraction of properties using irrigation on Wednesdays [0-1]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Irrigation.txt</i>	<i>MU</i>	Fraction of properties using irrigation on Wednesdays [0-1]

DayWatPer(5)

Description Fraction of properties using irrigation on Thursdays [0-1]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Irrigation.txt</i>	<i>MU</i>	Fraction of properties using irrigation on Thursdays [0-1]

DayWatPer(6)

Description Fraction of properties using irrigation on Fridays [0-1]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Irrigation.txt</i>	<i>MU</i>	Fraction of properties using irrigation on Fridays [0-1]

DayWatPer (7)

Description Fraction of properties using irrigation on Saturdays [0-1]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Irrigation.txt</i>	<i>MU</i>	Fraction of properties using irrigation on Saturdays [0-1]

DrainageCoef1

Description Example values DrainageEq 10 Coefficient D0 [mm h⁻¹] 3 Recommended [3] for Paved and Bldgs 0.013 Coefficient D0 [mm h⁻¹] 2 Recommended [3] for BSoil Example values DrainageEq 10 Coefficient D0 [mm h⁻¹] 3 Recommended [3] for Grass (irrigated) 0.013 Coefficient D0 [mm h⁻¹] 2 Recommended [3] for EveTr, DecTr, Grass (unirrigated) Not currently used for water surface

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_NonVeg.txt</i>	<i>MD</i>	Example values DrainageEq 10 Coefficient D0 [mm h ⁻¹] 3 Recommended [3] for Paved and Bldgs 0.013 Coefficient D0 [mm h ⁻¹] 2 Recommended [3] for BSoil
<i>SUEWS_Veg.txt</i>	<i>MD</i>	Example values DrainageEq 10 Coefficient D0 [mm h ⁻¹] 3 Recommended [3] for Grass (irrigated) 0.013 Coefficient D0 [mm h ⁻¹] 2 Recommended [3] for EveTr, DecTr, Grass (unirrigated)
<i>SUEWS_Water.txt</i>	<i>MD</i>	Not currently used for water surface

DrainageCoef2

Description Example values DrainageEq 3 Coefficient b [-] 3 Recommended [3] for Paved and Bldgs 1.71 Coefficient b [mm⁻¹] 2 Recommended [3] for BSoil Example values DrainageEq 3 Coefficient b [-] 3 Recommended [3] for Grass (irrigated) 1.71 Coefficient b [mm⁻¹] 2 Recommended [3] for EveTr, DecTr, Grass (unirrigated) Not currently used for water surface

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_NonVeg.txt</i>	<i>MD</i>	Example values DrainageEq 3 Coefficient b [-] 3 Recommended [3] for Paved and Bldgs 1.71 Coefficient b [m m ⁻¹] 2 Recommended [3] for BSoil
<i>SUEWS_Veg.txt</i>	<i>MD</i>	Example values DrainageEq 3 Coefficient b [-] 3 Recommended [3] for Grass (irrigated) 1.71 Coefficient b [m m ⁻¹] 2 Recommended [3] for EveTr, DecTr, Grass (unirrigated)
<i>SUEWS_Water.txt</i>	<i>MD</i>	Not currently used for water surface

DrainageEq

Description Options 1 Falk and Niemczynowicz (1978) [32] 2 Halldin et al. (1979) [33] (Rutter eqn corrected for c=0, see Calder & Wright (1986) [34]) Recommended [3] for BSoil 3 Falk and Niemczynowicz (1978) [32] Recommended [3] for Paved and Bldgs Coefficients are specified in the following two columns. Options 1 Falk and Niemczynowicz (1978) [32] 2 Halldin et al. (1979) [33] (Rutter eqn corrected for c=0, see Calder & Wright (1986) [34]) Recommended [3] for EveTr, DecTr, Grass (unirrigated) 3 Falk and Niemczynowicz (1978) [32] Recommended [3] for Grass (irrigated) Coefficients are specified in the following two columns. Not currently used for water surface.

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_NonVeg.txt</i>	<i>MD</i>	Options 1 Falk and Niemczynowicz (1978) [32] 2 Halldin et al. (1979) [33] (Rutter eqn corrected for c=0, see Calder & Wright (1986) [34]) Recommended [3] for BSoil 3 Falk and Niemczynowicz (1978) [32] Recommended [3] for Paved and Bldgs Coefficients are specified in the following two columns.

Continued on next page

Table 6.60 – continued from previous page

Referencing Table	Requirement	Comment
<i>SUEWS_Veg.txt</i>	<i>MD</i>	Options 1 Falk and Niemczynowicz (1978) [32] 2 Halldin et al. (1979) [33] (Rutter eqn corrected for $c=0$, see Calder & Wright (1986) [34]) Recommended [3] for EveTr, DecTr, Grass (unirrigated) 3 Falk and Niemczynowicz (1978) [32] Recommended [3] for Grass (irrigated) Coefficients are specified in the following two columns.
<i>SUEWS_Water.txt</i>	<i>MD</i>	Not currently used for water surface.

Emissivity

Description Effective surface emissivity. View factors should be taken into account. Effective surface emissivity. View factors should be taken into account. Example values [-] 0.98 EveTr Oke (1987) [35] 0.98 DecTr Oke (1987) [35] 0.93 Grass Oke (1987) [35] Effective surface emissivity. View factors should be taken into account Example values [-] 0.95 Water Oke (1987) [35] Effective surface emissivity. View factors should be taken into account Example values [-] 0.99 Järvi et al. (2014) [15]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_NonVeg.txt</i>	<i>MU</i>	Effective surface emissivity. View factors should be taken into account.
<i>SUEWS_Veg.txt</i>	<i>MU</i>	Effective surface emissivity. View factors should be taken into account. Example values [-] 0.98 EveTr Oke (1987) [35] 0.98 DecTr Oke (1987) [35] 0.93 Grass Oke (1987) [35]
<i>SUEWS_Water.txt</i>	<i>MU</i>	Effective surface emissivity. View factors should be taken into account Example values [-] 0.95 Water Oke (1987) [35]
<i>SUEWS_Snow.txt</i>	<i>MU</i>	Effective surface emissivity. View factors should be taken into account Example values [-] 0.99 Järvi et al. (2014) [15]

EndDLS

Description End of the day light savings [DOY] See section on Day Light Savings .

Configuration

Referencing Table	Requirement	Comment
SUEWS_SiteSelect.txt	<i>MU</i>	End of the day light savings [DOY] See section on Day Light Savings .

EnergyUseProfWD

Description Code for energy use profile (weekdays) Provides the link to column 1 of SUEWS_Profiles.txt. Look the codes Value of integer is arbitrary but must match code specified in column 1 of SUEWS_Profiles.txt.

Configuration

Referencing Table	Requirement	Comment
SUEWS_SiteSelect.txt	<i>L</i>	Code for energy use profile (weekdays) Provides the link to column 1 of SUEWS_Profiles.txt. Look the codes Value of integer is arbitrary but must match code specified in column 1 of SUEWS_Profiles.txt.

EnergyUseProfWE

Description Code for energy use profile (weekends) Provides the link to column 1 of SUEWS_Profiles.txt. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_Profiles.txt.

Configuration

Referencing Table	Requirement	Comment
SUEWS_SiteSelect.txt	<i>L</i>	Code for energy use profile (weekends) Provides the link to column 1 of SUEWS_Profiles.txt. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_Profiles.txt.

ESTMCode

Description For paved and building surfaces, it is possible to specify multiple codes per grid (3 for paved, 5 for buildings) using [SUEWS_SiteSelect.txt](#) . In this case, set ESTMCode here to zero. Code for ESTM coefficients to use for this surface. Links to SUEWS_ESTMCoefficients.txt . Value of integer is arbitrary but must match code specified in column 1 of SUEWS_ESTMCoefficients.txt. Code for ESTM coefficients to use for this surface. Links to SUEWS_ESTMCoefficients.txt . Value of integer is arbitrary but must match code specified in column 1 of SUEWS_ESTMCoefficients.txt. For paved and building surfaces, it is possible to specify multiple codes per grid (3 for paved, 5 for buildings) using [SUEWS_SiteSelect.txt](#) . In this case, set ESTM code here to zero.

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_NonVeg.txt</i>	<i>L</i>	For paved and building surfaces, it is possible to specify multiple codes per grid (3 for paved, 5 for buildings) using <i>SUEWS_SiteSelect.txt</i> . In this case, set ESTMCode here to zero.
<i>SUEWS_Veg.txt</i>	<i>L</i>	Code for ESTM coefficients to use for this surface. Links to <i>SUEWS_ESTMCoefficients.txt</i> . Value of integer is arbitrary but must match code specified in column 1 of <i>SUEWS_ESTMCoefficients.txt</i> .
<i>SUEWS_Water.txt</i>	<i>L</i>	Code for ESTM coefficients to use for this surface. Links to <i>SUEWS_ESTMCoefficients.txt</i> . Value of integer is arbitrary but must match code specified in column 1 of <i>SUEWS_ESTMCoefficients.txt</i> .
<i>SUEWS_Snow.txt</i>	<i>L</i>	For paved and building surfaces, it is possible to specify multiple codes per grid (3 for paved, 5 for buildings) using <i>SUEWS_SiteSelect.txt</i> . In this case, set ESTM code here to zero.

FAI_Bldgs

Description Frontal area index for buildings [-] Required if RoughLenMomMethod = 3 in RunControl.nml .

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>O</i>	Frontal area index for buildings [-] Required if RoughLenMomMethod = 3 in RunControl.nml .

FAI_DecTr

Description Frontal area index for deciduous trees [-] Required if RoughLenMomMethod = 3 in RunControl.nml .

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>O</i>	Frontal area index for deciduous trees [-] Required if RoughLenMomMethod = 3 in RunControl.nml .

FAI_EveTr

Description Frontal area index for evergreen trees [-] Required if RoughLenMomMethod = 3 in RunControl.nml .

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>O</i>	Frontal area index for evergreen trees [-] Required if RoughLenMomMethod = 3 in RunControl.nml .

Faut

Description Fraction of irrigated area that is irrigated using automated systems (e.g. sprinklers).

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Irrigation.txt</i>	<i>MU</i>	Fraction of irrigated area that is irrigated using automated systems (e.g. sprinklers).

fcld

Description Cloud fraction [tenths]

Configuration

Referencing Table	Requirement	Comment
<i>SSss_YYYY_data_tt.txt</i>	<i>O</i>	Cloud fraction [tenths]

FlowChange

Description Difference in input and output flows for water surface [mm h⁻¹] Used to indicate river or stream flow through the grid. Currently not fully tested!

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>MD</i>	Difference in input and output flows for water surface [mm h ⁻¹] Used to indicate river or stream flow through the grid. Currently not fully tested!

Fraction1of8

Description Fraction of water that can flow to the grid specified in previous column [-]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>MD MU</i>	Fraction of water that can flow to the grid specified in previous column [-]

Fraction2of8

Description Fraction of water that can flow to the grid specified in previous column [-]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>MD MU</i>	Fraction of water that can flow to the grid specified in previous column [-]

Fraction3of8

Description Fraction of water that can flow to the grid specified in previous column [-]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>MD MU</i>	Fraction of water that can flow to the grid specified in previous column [-]

Fraction4of8

Description Fraction of water that can flow to the grid specified in previous column [-]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>MD MU</i>	Fraction of water that can flow to the grid specified in previous column [-]

Fraction5of8

Description Fraction of water that can flow to the grid specified in previous column [-]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>MD MU</i>	Fraction of water that can flow to the grid specified in previous column [-]

Fraction6of8

Description Fraction of water that can flow to the grid specified in previous column [-]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>MD MU</i>	Fraction of water that can flow to the grid specified in previous column [-]

Fraction7of8

Description Fraction of water that can flow to the grid specified in previous column [-]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>MD MU</i>	Fraction of water that can flow to the grid specified in previous column [-]

Fraction8of8

Description Fraction of water that can flow to the grid specified in previous column [-]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>MD MU</i>	Fraction of water that can flow to the grid specified in previous column [-]

Fr_Bldgs

Description Surface cover fraction of buildings [-]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>MU</i>	Surface cover fraction of buildings [-]

Fr_Bsoil

Description Surface cover fraction of bare soil or unmanaged land [-]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>MU</i>	Surface cover fraction of bare soil or unmanaged land [-]

Fr_DecTr

Description Surface cover fraction of deciduous trees and shrubs [-]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>MU</i>	Surface cover fraction of deciduous trees and shrubs [-]

Fr_ESTMClass_Bldgs1

Description Columns 94-98 must add up to 1

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>MU</i>	Columns 94-98 must add up to 1

Fr_ESTMClass_Bldgs2

Description Columns 94-98 must add up to 1

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>MU</i>	Columns 94-98 must add up to 1

Fr_ESTMClass_Bldgs3

Description Columns 94-98 must add up to 1

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>MU</i>	Columns 94-98 must add up to 1

Fr_ESTMClass_Bldgs4

Description Columns 94-98 must add up to 1

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>MU</i>	Columns 94-98 must add up to 1

Fr_ESTMClass_Bldgs5

Description Columns 94-98 must add up to 1

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>MU</i>	Columns 94-98 must add up to 1

Fr_ESTMClass_Paved1

Description Columns 88-90 must add up to 1

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>MU</i>	Columns 88-90 must add up to 1

Fr_ESTMClass_Paved2

Description Columns 88-90 must add up to 1

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>MU</i>	Columns 88-90 must add up to 1

Fr_ESTMClass_Paved3

Description Columns 88-90 must add up to 1

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>MU</i>	Columns 88-90 must add up to 1

Fr_EveTr

Description Surface cover fraction of evergreen trees and shrubs [-]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>MU</i>	Surface cover fraction of evergreen trees and shrubs [-]

Fr_Grass

Description Surface cover fraction of grass [-]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>MU</i>	Surface cover fraction of grass [-]

Fr_Paved

Description Columns 14 to 20 must sum to 1 .

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>MU</i>	Columns 14 to 20 must sum to 1 .

Fr_Water

Description Surface cover fraction of open water [-] (e.g. river, lakes, ponds, swimming pools)

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>MU</i>	Surface cover fraction of open water [-] (e.g. river, lakes, ponds, swimming pools)

G1

Description Related to maximum surface conductance [mm s^{-1}]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Conductance.txt</i>	<i>MD</i>	Related to maximum surface conductance [mm s^{-1}]

G2

Description Related to Kdown dependence [W m^{-2}]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Conductance.txt</i>	<i>MD</i>	Related to Kdown dependence [W m^{-2}]

G3

Description Related to VPD dependence [units depend on gsChoice in RunControl.nml]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Conductance.txt</i>	<i>MD</i>	Related to VPD dependence [units depend on gsChoice in RunControl.nml]

G4

Description Related to VPD dependence [units depend on gsChoice in RunControl.nml]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Conductance.txt</i>	<i>MD</i>	Related to VPD dependence [units depend on gsChoice in RunControl.nml]

G5

Description Related to temperature dependence [°C]**Configuration**

Referencing Table	Requirement	Comment
<i>SUEWS_Conductance.txt</i>	<i>MD</i>	Related to temperature dependence [°C]

G6

Description Related to soil moisture dependence [mm⁻¹]**Configuration**

Referencing Table	Requirement	Comment
<i>SUEWS_Conductance.txt</i>	<i>MD</i>	Related to soil moisture dependence [m m ⁻¹]

gamq_gkgm

Description vertical gradient of specific humidity (g kg⁻¹ m⁻¹)**Configuration**

Referencing Table	Requirement	Comment
<i>CBL_initial_data.txt</i>	<i>MU</i>	vertical gradient of specific humidity (g kg ⁻¹ m ⁻¹)

gamt_Km

Description vertical gradient of potential temperature (K m⁻¹) strength of the inversion**Configuration**

Referencing Table	Requirement	Comment
<i>CBL_initial_data.txt</i>	<i>MU</i>	vertical gradient of potential temperature (K m ⁻¹) strength of the inversion

GDDFull

Description This should be checked carefully for your study area using modelled LAI from the DailyState output file compared to known behaviour in the study area. See section 2.2 Järvi et al. (2011) [1] ; Appendix A Järvi et al. (2014) [15] for more details. Example values [°C] 300 EveTr Järvi et al. (2011) [1] 300 DecTr Järvi et al. (2011) [1] 300 Grass Järvi et al. (2011) [1]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Veg.txt</i>	<i>MU</i>	This should be checked carefully for your study area using modelled LAI from the DailyState output file compared to known behaviour in the study area. See section 2.2 Järvi et al. (2011) [1] ; Appendix A Järvi et al. (2014) [15] for more details. Example values [°C] 300 EveTr Järvi et al. (2011) [1] 300 DecTr Järvi et al. (2011) [1] 300 Grass Järvi et al. (2011) [1]

Grid

Description Grid numbers do not need to be consecutive and do not need to start at a particular value. Each grid must have a unique grid number. All grids must be present for all years. These grid numbers are referred to in GridConnections (columns 64-79) (N.B. GridConnections not currently implemented!)

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>MU</i>	Grid numbers do not need to be consecutive and do not need to start at a particular value. Each grid must have a unique grid number. All grids must be present for all years. These grid numbers are referred to in GridConnections (columns 64-79) (N.B. GridConnections not currently implemented!)

GridConnection1of8

Description The next 8 pairs of columns specify the water flow between grids. The first column of each pair specifies the grid that the water flows to (from the current grid, column 1); the second column of each pair specifies the fraction of water that flow to that grid. The fraction (i.e. amount) of water transferred may be estimated based on elevation, the length of connecting surface between grids, presence of walls, etc. Water cannot flow from the current grid to the same grid, so the grid number here must be different to the grid number in column 1. Water can flow to a maximum of 8 other grids. If there is no water flow between grids, or a single grid is run, set to 0. See section on Grid Connections

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>MD MU</i>	The next 8 pairs of columns specify the water flow between grids. The first column of each pair specifies the grid that the water flows to (from the current grid, column 1); the second column of each pair specifies the fraction of water that flow to that grid. The fraction (i.e. amount) of water transferred may be estimated based on elevation, the length of connecting surface between grids, presence of walls, etc. Water cannot flow from the current grid to the same grid, so the grid number here must be different to the grid number in column 1. Water can flow to a maximum of 8 other grids. If there is no water flow between grids, or a single grid is run, set to 0. See section on Grid Connections

GridConnection2of8

Description Number of the grid where water can flow to

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>MD MU</i>	Number of the grid where water can flow to

GridConnection3of8

Description Number of the grid where water can flow to

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>MD MU</i>	Number of the grid where water can flow to

GridConnection4of8

Description Number of the grid where water can flow to

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>MD MU</i>	Number of the grid where water can flow to

GridConnection5of8

Description Number of the grid where water can flow to

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>MD MU</i>	Number of the grid where water can flow to

GridConnection6of8

Description Number of the grid where water can flow to

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>MD MU</i>	Number of the grid where water can flow to

GridConnection7of8

Description Number of the grid where water can flow to

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>MD MU</i>	Number of the grid where water can flow to

GridConnection8of8

Description Number of the grid where water can flow to

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>MD MU</i>	Number of the grid where water can flow to

gsModel

Description 1 = Järvi et al. (2011) [1] 2 = Ward et al. (2016) [2] Recommended.

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Conductance.txt</i>	<i>MD</i>	1 = Järvi et al. (2011) [1] 2 = Ward et al. (2016) [2] Recommended.

H_Bldgs

Description Mean building height [m]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>MU</i>	Mean building height [m]

H_DecTr

Description Mean height of deciduous trees [m]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>MU</i>	Mean height of deciduous trees [m]

H_EveTr

Description Mean height of evergreen trees [m]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>MU</i>	Mean height of evergreen trees [m]

id

Description Day [DOY] Not used: set to 1 in this version. Day of year [DOY] Day of year [DOY] Day of year [DOY]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>MD</i>	Day [DOY] Not used: set to 1 in this version.
<i>SSss_YYYY_ESTM_Ts_data_tt.txt</i>	<i>MU</i>	Day of year [DOY]
<i>SSss_YYYY_data_tt.txt</i>	<i>MU</i>	Day of year [DOY]
<i>CBL_initial_data.txt</i>	<i>MU</i>	Day of year [DOY]

Ie_a1

Description Coefficient for automatic irrigation model [mm d⁻¹]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Irrigation.txt</i>	<i>MD</i>	Coefficient for automatic irrigation model [mm d ⁻¹]

Ie_a2

Description Coefficient for automatic irrigation model [mm d⁻¹ K⁻¹]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Irrigation.txt</i>	<i>MD</i>	Coefficient for automatic irrigation model [mm d -1 K ⁻¹]

Ie_a3

Description Coefficient for automatic irrigation model [mm d -2]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Irrigation.txt</i>	<i>MD</i>	Coefficient for automatic irrigation model [mm d -2]

Ie_end

Description Day when irrigation ends [DOY]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Irrigation.txt</i>	<i>MU</i>	Day when irrigation ends [DOY]

Ie_m1

Description Coefficient for manual irrigation model [mm d -1]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Irrigation.txt</i>	<i>MD</i>	Coefficient for manual irrigation model [mm d -1]

Ie_m2

Description Coefficient for manual irrigation model [mm d -1 K⁻¹]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Irrigation.txt</i>	<i>MD</i>	Coefficient for manual irrigation model [mm d -1 K ⁻¹]

Ie_m3

Description Coefficient for manual irrigation model [mm d -2]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Irrigation.txt</i>	<i>MD</i>	Coefficient for manual irrigation model [mm d -2]

Ie_start

Description Day when irrigation starts [DOY]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Irrigation.txt</i>	<i>MU</i>	Day when irrigation starts [DOY]

ih

Description Hour [H] Not used: set to 0 in this version.

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>MD</i>	Hour [H] Not used: set to 0 in this version.

imin

Description Minute [M] Not used: set to 0 in this version. Minute [M] Minute [M]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>MD</i>	Minute [M] Not used: set to 0 in this version.
<i>SSss_YYYY_ESTM_Ts_data_tt.txt</i>	<i>MU</i>	Minute [M]
<i>SSss_YYYY_data_tt.txt</i>	<i>MU</i>	Minute [M]

InfiltrationRate

Description Not currently used

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Soil.txt</i>	<i>O</i>	Not currently used

Internal_albedo

Description Albedo of all internal elements for building surfaces only

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_ESTMCoefficients.txt</i>	<i>MU</i>	Albedo of all internal elements for building surfaces only

Internal_CHbld

Description Bulk transfer coefficient of internal building elements [$\text{W m}^{-2} \text{K}^{-1}$] (for building surfaces only and if `IbldCHmod == 0` in `ESTMinput.nml`)

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_ESTMCoefficients.txt</i>	0	Bulk transfer coefficient of internal building elements [$\text{W m}^{-2} \text{K}^{-1}$] (for building surfaces only and if <code>IbldCHmod == 0</code> in <code>ESTMinput.nml</code>)

Internal_CHroof

Description Bulk transfer coefficient of internal roof [$\text{W m}^{-2} \text{K}^{-1}$] (for building surfaces only and if `IbldCHmod == 0` in `ESTMinput.nml`)

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_ESTMCoefficients.txt</i>	0	Bulk transfer coefficient of internal roof [$\text{W m}^{-2} \text{K}^{-1}$] (for building surfaces only and if <code>IbldCHmod == 0</code> in <code>ESTMinput.nml</code>)

Internal_CHwall

Description Bulk transfer coefficient of internal wall [$\text{W m}^{-2} \text{K}^{-1}$] (for building surfaces only and if `IbldCHmod == 0` in `ESTMinput.nml`)

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_ESTMCoefficients.txt</i>	0	Bulk transfer coefficient of internal wall [$\text{W m}^{-2} \text{K}^{-1}$] (for building surfaces only and if <code>IbldCHmod == 0</code> in <code>ESTMinput.nml</code>)

Internal_emissivity

Description Emissivity of all internal elements for building surfaces only

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_ESTMCoefficients.txt</i>	<i>MU</i>	Emissivity of all internal elements for building surfaces only

Internal_k1

Description Thermal conductivity of the first layer [$\text{W m}^{-1} \text{K}^{-1}$]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_ESTMCoefficients.txt</i>	<i>MU</i>	Thermal conductivity of the first layer [W m ⁻¹ K ⁻¹]

Internal_k2

Description Thermal conductivity of the second layer [W m⁻¹ K⁻¹]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_ESTMCoefficients.txt</i>	<i>0</i>	Thermal conductivity of the second layer [W m ⁻¹ K ⁻¹]

Internal_k3

Description Thermal conductivity of the third layer [W m⁻¹ K⁻¹]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_ESTMCoefficients.txt</i>	<i>0</i>	Thermal conductivity of the third layer [W m ⁻¹ K ⁻¹]

Internal_k4

Description Thermal conductivity of the fourth layer [W m⁻¹ K⁻¹]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_ESTMCoefficients.txt</i>	<i>0</i>	Thermal conductivity of the fourth layer [W m ⁻¹ K ⁻¹]

Internal_k5

Description Thermal conductivity of the fifth layer [W m⁻¹ K⁻¹]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_ESTMCoefficients.txt</i>	<i>0</i>	Thermal conductivity of the fifth layer [W m ⁻¹ K ⁻¹]

Internal_rhoCp1

Description Volumetric heat capacity of the first layer [J m⁻³ K⁻¹]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_ESTMCoefficients.txt</i>	<i>MU</i>	Volumetric heat capacity of the first layer [J m ⁻³ K ⁻¹]

Internal_rhoCp2

Description Volumetric heat capacity of the second layer [$\text{J m}^{-3} \text{K}^{-1}$]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_ESTMCoefficients.txt</i>	0	Volumetric heat capacity of the second layer [$\text{J m}^{-3} \text{K}^{-1}$]

Internal_rhoCp3

Description Volumetric heat capacity of the third layer [$\text{J m}^{-3} \text{K}^{-1}$]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_ESTMCoefficients.txt</i>	0	Volumetric heat capacity of the third layer [$\text{J m}^{-3} \text{K}^{-1}$]

Internal_rhoCp4

Description Volumetric heat capacity of the fourth layer [$\text{J m}^{-3} \text{K}^{-1}$]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_ESTMCoefficients.txt</i>	0	Volumetric heat capacity of the fourth layer [$\text{J m}^{-3} \text{K}^{-1}$]

Internal_rhoCp5

Description Volumetric heat capacity of the fifth layer [$\text{J m}^{-3} \text{K}^{-1}$]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_ESTMCoefficients.txt</i>	0	Volumetric heat capacity of the fifth layer [$\text{J m}^{-3} \text{K}^{-1}$]

Internal_thick1

Description Thickness of the first layer [m] for building surfaces only; set to -999 for all other surfaces

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_ESTMCoefficients.txt</i>	MU	Thickness of the first layer [m] for building surfaces only; set to -999 for all other surfaces

Internal_thick2

Description Thickness of the second layer [m] (if no second layer, set to -999.)

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_ESTMCoefficients.txt</i>	0	Thickness of the second layer [m] (if no second layer, set to -999.)

Internal_thick3

Description Thickness of the third layer [m] (if no third layer, set to -999.)

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_ESTMCoefficients.txt</i>	0	Thickness of the third layer [m] (if no third layer, set to -999.)

Internal_thick4

Description Thickness of the fourth layer [m] (if no fourth layer, set to -999.)

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_ESTMCoefficients.txt</i>	0	Thickness of the fourth layer [m] (if no fourth layer, set to -999.)

Internal_thick5

Description Thickness of the fifth layer [m] (if no fifth layer, set to -999.)

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_ESTMCoefficients.txt</i>	0	Thickness of the fifth layer [m] (if no fifth layer, set to -999.)

InternalWaterUse

Description Internal water use [mm h⁻¹]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Irrigation.txt</i>	MU	Internal water use [mm h ⁻¹]

IrrFr_DecTr

Description Fraction of deciduous trees that are irrigated [-]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	MU	Fraction of deciduous trees that are irrigated [-]

IrrFr_EveTr

Description Fraction of evergreen trees that are irrigated [-] e.g. 50% of the evergreen trees/shrubs are irrigated

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>MU</i>	Fraction of evergreen trees that are irrigated [-] e.g. 50% of the evergreen trees/shrubs are irrigated

IrrFr_Grass

Description Fraction of grass that is irrigated [-]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>MU</i>	Fraction of grass that is irrigated [-]

IrrigationCode

Description Code for modelling irrigation Provides the link to column 1 of SUEWS_Irrigation.txt, which contains the model coefficients for estimation of the water use (used if WU_Choice = 0 in RunControl.nml). Value of integer is arbitrary but must match code specified in column 1 of SUEWS_Irrigation.txt.

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>L</i>	Code for modelling irrigation Provides the link to column 1 of SUEWS_Irrigation.txt, which contains the model coefficients for estimation of the water use (used if WU_Choice = 0 in RunControl.nml). Value of integer is arbitrary but must match code specified in column 1 of SUEWS_Irrigation.txt.

it

Description Hour [H] Hour [H]

Configuration

Referencing Table	Requirement	Comment
<i>SSss_YYYY_ESTM_Ts_data_tt.txt</i>	<i>MU</i>	Hour [H]
<i>SSss_YYYY_data_tt.txt</i>	<i>MU</i>	Hour [H]

iy

Description Year [YYYY] Year [YYYY]

Configuration

Referencing Table	Requirement	Comment
<i>SSss_YYYY_ESTM_Ts_data_tt.txt</i>	<i>MU</i>	Year [YYYY]
<i>SSss_YYYY_data_tt.txt</i>	<i>MU</i>	Year [YYYY]

kdiff

Description Recommended if SOLWEIGUse = 1

Configuration

Referencing Table	Requirement	Comment
<i>SSss_YYYY_data_tt.txt</i>	<i>0</i>	Recommended if SOLWEIGUse = 1

kdir

Description Recommended if SOLWEIGUse = 1

Configuration

Referencing Table	Requirement	Comment
<i>SSss_YYYY_data_tt.txt</i>	<i>0</i>	Recommended if SOLWEIGUse = 1

kdown

Description Must be $> 0 \text{ W m}^{-2}$.

Configuration

Referencing Table	Requirement	Comment
<i>SSss_YYYY_data_tt.txt</i>	<i>MU</i>	Must be $> 0 \text{ W m}^{-2}$.

Kmax

Description Maximum incoming shortwave radiation [W m^{-2}]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Conductance.txt</i>	<i>MD</i>	Maximum incoming shortwave radiation [W m^{-2}]

lai

Description Observed leaf area index [$\text{m}^{-2} \text{ m}^{-2}$]

Configuration

Referencing Table	Requirement	Comment
<i>SSss_YYYY_data_tt.txt</i>	<i>0</i>	Observed leaf area index [m ⁻² m ⁻²]

LAIEq

Description Options 0 Järvi et al. (2011) [1] 1 Järvi et al. (2014) [15] Coefficients are specified in the following four columns. N.B. North and South hemispheres are treated slightly differently.

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Veg.txt</i>	<i>MD</i>	Options 0 Järvi et al. (2011) [1] 1 Järvi et al. (2014) [15] Coefficients are specified in the following four columns. N.B. North and South hemispheres are treated slightly differently.

LAIMax

Description full leaf-on summertime value Example values [m⁻² m⁻²] 5.1 EveTr Breuer et al. (2003) [36] 5.5 DecTr Breuer et al. (2003) [36] 5.9 Grass Breuer et al. (2003) [36]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Veg.txt</i>	<i>MD</i>	full leaf-on summertime value Example values [m ⁻² m ⁻²] 5.1 EveTr Breuer et al. (2003) [36] 5.5 DecTr Breuer et al. (2003) [36] 5.9 Grass Breuer et al. (2003) [36]

LAIMin

Description leaf-off wintertime value Example values [m⁻² m⁻²] 4. EveTr Järvi et al. (2011) [1] 1. DecTr Järvi et al. (2011) [1] 1.6 Grass Grimmond and Oke (1991) [3] and references therein

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Veg.txt</i>	<i>MD</i>	leaf-off wintertime value Example values [m ⁻² m ⁻²] 4. EveTr Järvi et al. (2011) [1] 1. DecTr Järvi et al. (2011) [1] 1.6 Grass Grimmond and Oke (1991) [3] and references therein

lat

Description Use coordinate system WGS84. Positive values are northern hemisphere (neg-

ative southern hemisphere). Used in radiation calculations. Note, if the total modelled area is small the latitude and longitude could be the same for each grid but small differences in radiation will not be determined. If you are defining the latitude and longitude differently between grids make certain that you provide enough decimal places.

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>MU</i>	Use coordinate system WGS84. Positive values are northern hemisphere (negative southern hemisphere). Used in radiation calculations. Note, if the total modelled area is small the latitude and longitude could be the same for each grid but small differences in radiation will not be determined. If you are defining the latitude and longitude differently between grids make certain that you provide enough decimal places.

ldown

Description Incoming longwave radiation [W m^{-2}]

Configuration

Referencing Table	Requirement	Comment
<i>SSss_YYYY_data_tt.txt</i>	<i>O</i>	Incoming longwave radiation [W m^{-2}]

LeafGrowthPower1

Description Example values LAIEq 0.03 Järvi et al. (2011) [1] 0 0.04 Järvi et al. (2014) [15] 1

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Veg.txt</i>	<i>MD</i>	Example values LAIEq 0.03 Järvi et al. (2011) [1] 0 0.04 Järvi et al. (2014) [15] 1

LeafGrowthPower2

Description Example values [K^{-1}] LAIEq 0.0005 Järvi et al. (2011) [1] 0 0.001 Järvi et al. (2014) [15] 1

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Veg.txt</i>	<i>MD</i>	Example values [K ⁻¹] LAIEq 0.0005 Järvi et al. (2011) [1] 0 0.001 Järvi et al. (2014) [15] 1

LeafOffPower1

Description Example values LAIEq 0.03 Järvi et al. (2011) [1] 0 -1.5 Järvi et al. (2014) [15] 1

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Veg.txt</i>	<i>MD</i>	Example values LAIEq 0.03 Järvi et al. (2011) [1] 0 -1.5 Järvi et al. (2014) [15] 1

LeafOffPower2

Description Example values [K⁻¹] LAIEq 0.0005 Järvi et al. (2011) [1] 0 0.0015 Järvi et al. (2014) [15] 1

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Veg.txt</i>	<i>MD</i>	Example values [K ⁻¹] LAIEq 0.0005 Järvi et al. (2011) [1] 0 0.0015 Järvi et al. (2014) [15] 1

lng

Description Use coordinate system WGS84. For compatibility with GIS, negative values are to the west, positive values are to the east (e.g. Vancouver = -123.12; Shanghai = 121.47) Note this is a change of sign convention between v2016a and v2017a See latitude for more details.

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>MU</i>	Use coordinate system WGS84. For compatibility with GIS, negative values are to the west, positive values are to the east (e.g. Vancouver = -123.12; Shanghai = 121.47) Note this is a change of sign convention between v2016a and v2017a See latitude for more details.

LUMPS_Cover

Description Limit when surface totally covered with water [mm] Used for LUMPS surface

wetness control. Default recommended value of 1 mm from Loridan et al. (2011) [5] .

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>MD</i>	Limit when surface totally covered with water [mm] Used for LUMPS surface wetness control. Default recommended value of 1 mm from Loridan et al. (2011) [5] .

LUMPS_DrRate

Description Drainage rate of bucket for LUMPS [mm h⁻¹] Used for LUMPS surface wetness control. Default recommended value of 0.25 mm h⁻¹ from Loridan et al. (2011) [5] .

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>MD</i>	Drainage rate of bucket for LUMPS [mm h ⁻¹] Used for LUMPS surface wetness control. Default recommended value of 0.25 mm h ⁻¹ from Loridan et al. (2011) [5] .

LUMPS_MaxRes

Description Maximum water bucket reservoir [mm] Used for LUMPS surface wetness control. Default recommended value of 10 mm from Loridan et al. (2011) [5] .

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>MD</i>	Maximum water bucket reservoir [mm] Used for LUMPS surface wetness control. Default recommended value of 10 mm from Loridan et al. (2011) [5] .

MaxConductance

Description Example values [mm s⁻¹] 7.4 EveTr Järvi et al. (2011) [1] 11.7 DecTr Järvi et al. (2011) [1] 33.1 Grass (unirrigated) Järvi et al. (2011) [1] 40. Grass (irrigated) Järvi et al. (2011) [1]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Veg.txt</i>	<i>MD</i>	Example values [mm s ⁻¹] 7.4 EveTr Järvi et al. (2011) [1] 11.7 DecTr Järvi et al. (2011) [1] 33.1 Grass (unirrigated) Järvi et al. (2011) [1] 40. Grass (irrigated) Järvi et al. (2011) [1]

NARP_Trans

Description Atmospheric transmissivity for NARP [-] Value must in the range 0-1. Default recommended value of 1.

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>MD</i>	Atmospheric transmissivity for NARP [-] Value must in the range 0-1. Default recommended value of 1.

nroom

Description Number of rooms per floor for building surfaces only

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_ESTMCoefficients.txt</i>	<i>MU</i>	Number of rooms per floor for building surfaces only

OBS_SMCap

Description Use only if soil moisture is observed and provided in the met forcing file and smd_choice = 1 or 2. Use of observed soil moisture not currently tested

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Soil.txt</i>	<i>O</i>	Use only if soil moisture is observed and provided in the met forcing file and smd_choice = 1 or 2. Use of observed soil moisture not currently tested

OBS_SMDepth

Description Use only if soil moisture is observed and provided in the met forcing file and smd_choice = 1 or 2. Use of observed soil moisture not currently tested

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Soil.txt</i>	<i>0</i>	Use only if soil moisture is observed and provided in the met forcing file and smd_choice = 1 or 2. Use of observed soil moisture not currently tested

OBS_SoilNotRocks

Description Use only if soil moisture is observed and provided in the met forcing file and smd_choice = 1 or 2. Use of observed soil moisture not currently tested

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Soil.txt</i>	<i>0</i>	Use only if soil moisture is observed and provided in the met forcing file and smd_choice = 1 or 2. Use of observed soil moisture not currently tested

OHMCode_SummerDry

Description Code for OHM coefficients to use for this surface during dry conditions in summer. Links to SUEWS_OHMCoefficients.txt . Value of integer is arbitrary but must match code specified in column 1 of SUEWS_OHMCoefficients.txt. Code for OHM coefficients to use for this surface during dry conditions in summer. Links to SUEWS_OHMCoefficients.txt . Value of integer is arbitrary but must match code specified in column 1 of SUEWS_OHMCoefficients.txt. Code for OHM coefficients to use for this surface during dry conditions in summer. Links to SUEWS_OHMCoefficients.txt . Value of integer is arbitrary but must match code specified in column 1 of SUEWS_OHMCoefficients.txt. Code for OHM coefficients to use for this surface during dry conditions in summer. Links to SUEWS_OHMCoefficients.txt . Value of integer is arbitrary but must match code specified in column 1 of SUEWS_OHMCoefficients.txt.

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_NonVeg.txt</i>	<i>L</i>	Code for OHM coefficients to use for this surface during dry conditions in summer. Links to SUEWS_OHMCoefficients.txt . Value of integer is arbitrary but must match code specified in column 1 of SUEWS_OHMCoefficients.txt.

Continued on next page

Table 6.180 – continued from previous page

Referencing Table	Requirement	Comment
<i>SUEWS_Veg.txt</i>	<i>L</i>	Code for OHM coefficients to use for this surface during dry conditions in summer. Links to SUEWS_OHMCoefficients.txt . Value of integer is arbitrary but must match code specified in column 1 of SUEWS_OHMCoefficients.txt.
<i>SUEWS_Water.txt</i>	<i>L</i>	Code for OHM coefficients to use for this surface during dry conditions in summer. Links to SUEWS_OHMCoefficients.txt . Value of integer is arbitrary but must match code specified in column 1 of SUEWS_OHMCoefficients.txt.
<i>SUEWS_Snow.txt</i>	<i>L</i>	Code for OHM coefficients to use for this surface during dry conditions in summer. Links to SUEWS_OHMCoefficients.txt . Value of integer is arbitrary but must match code specified in column 1 of SUEWS_OHMCoefficients.txt.

OHMCode_SummerWet

Description Code for OHM coefficients to use for this surface during wet conditions in summer. Links to SUEWS_OHMCoefficients.txt . Value of integer is arbitrary but must match code specified in column 1 of SUEWS_OHMCoefficients.txt. Code for OHM coefficients to use for this surface during wet conditions in summer. Links to SUEWS_OHMCoefficients.txt . Value of integer is arbitrary but must match code specified in column 1 of SUEWS_OHMCoefficients.txt. Code for OHM coefficients to use for this surface during wet conditions in summer. Links to SUEWS_OHMCoefficients.txt . Value of integer is arbitrary but must match code specified in column 1 of SUEWS_OHMCoefficients.txt. Code for OHM coefficients to use for this surface during wet conditions in summer. Links to SUEWS_OHMCoefficients.txt . Value of integer is arbitrary but must match code specified in column 1 of SUEWS_OHMCoefficients.txt.

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_NonVeg.txt</i>	<i>L</i>	Code for OHM coefficients to use for this surface during wet conditions in summer. Links to SUEWS_OHMCoefficients.txt . Value of integer is arbitrary but must match code specified in column 1 of SUEWS_OHMCoefficients.txt.
<i>SUEWS_Veg.txt</i>	<i>L</i>	Code for OHM coefficients to use for this surface during wet conditions in summer. Links to SUEWS_OHMCoefficients.txt . Value of integer is arbitrary but must match code specified in column 1 of SUEWS_OHMCoefficients.txt.
<i>SUEWS_Water.txt</i>	<i>L</i>	Code for OHM coefficients to use for this surface during wet conditions in summer. Links to SUEWS_OHMCoefficients.txt . Value of integer is arbitrary but must match code specified in column 1 of SUEWS_OHMCoefficients.txt.
<i>SUEWS_Snow.txt</i>	<i>L</i>	Code for OHM coefficients to use for this surface during wet conditions in summer. Links to SUEWS_OHMCoefficients.txt . Value of integer is arbitrary but must match code specified in column 1 of SUEWS_OHMCoefficients.txt.

OHMCode_WinterDry

Description Code for OHM coefficients to use for this surface during dry conditions in winter. Links to SUEWS_OHMCoefficients.txt . Value of integer is arbitrary but must match code specified in column 1 of SUEWS_OHMCoefficients.txt. Code for OHM coefficients to use for this surface during dry conditions in winter. Links to SUEWS_OHMCoefficients.txt . Value of integer is arbitrary but must match code specified in column 1 of SUEWS_OHMCoefficients.txt. Code for OHM coefficients to use for this surface during dry conditions in winter. Links to SUEWS_OHMCoefficients.txt . Value of integer is arbitrary but must match code specified in column 1 of SUEWS_OHMCoefficients.txt. Code for OHM coefficients to use for this surface during dry conditions in winter. Links to SUEWS_OHMCoefficients.txt . Value of integer is arbitrary but must match code specified in column 1 of SUEWS_OHMCoefficients.txt.

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_NonVeg.txt</i>	<i>L</i>	Code for OHM coefficients to use for this surface during dry conditions in winter. Links to SUEWS_OHMCoefficients.txt . Value of integer is arbitrary but must match code specified in column 1 of SUEWS_OHMCoefficients.txt.
<i>SUEWS_Veg.txt</i>	<i>L</i>	Code for OHM coefficients to use for this surface during dry conditions in winter. Links to SUEWS_OHMCoefficients.txt . Value of integer is arbitrary but must match code specified in column 1 of SUEWS_OHMCoefficients.txt.
<i>SUEWS_Water.txt</i>	<i>L</i>	Code for OHM coefficients to use for this surface during dry conditions in winter. Links to SUEWS_OHMCoefficients.txt . Value of integer is arbitrary but must match code specified in column 1 of SUEWS_OHMCoefficients.txt.
<i>SUEWS_Snow.txt</i>	<i>L</i>	Code for OHM coefficients to use for this surface during dry conditions in winter. Links to SUEWS_OHMCoefficients.txt . Value of integer is arbitrary but must match code specified in column 1 of SUEWS_OHMCoefficients.txt.

OHMCode_WinterWet

Description Code for OHM coefficients to use for this surface during wet conditions in winter. Links to SUEWS_OHMCoefficients.txt . Value of integer is arbitrary but must match code specified in column 1 of SUEWS_OHMCoefficients.txt. Code for OHM coefficients to use for this surface during wet conditions in winter. Links to SUEWS_OHMCoefficients.txt . Value of integer is arbitrary but must match code specified in column 1 of SUEWS_OHMCoefficients.txt. Code for OHM coefficients to use for this surface during wet conditions in winter. Links to SUEWS_OHMCoefficients.txt . Value of integer is arbitrary but must match code specified in column 1 of SUEWS_OHMCoefficients.txt. Code for OHM coefficients to use for this surface during wet conditions in winter. Links to SUEWS_OHMCoefficients.txt . Value of integer is arbitrary but must match code specified in column 1 of SUEWS_OHMCoefficients.txt.

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_NonVeg.txt</i>	<i>L</i>	Code for OHM coefficients to use for this surface during wet conditions in winter. Links to SUEWS_OHMCoefficients.txt. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_OHMCoefficients.txt.
<i>SUEWS_Veg.txt</i>	<i>L</i>	Code for OHM coefficients to use for this surface during wet conditions in winter. Links to SUEWS_OHMCoefficients.txt. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_OHMCoefficients.txt.
<i>SUEWS_Water.txt</i>	<i>L</i>	Code for OHM coefficients to use for this surface during wet conditions in winter. Links to SUEWS_OHMCoefficients.txt. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_OHMCoefficients.txt.
<i>SUEWS_Snow.txt</i>	<i>L</i>	Code for OHM coefficients to use for this surface during wet conditions in winter. Links to SUEWS_OHMCoefficients.txt. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_OHMCoefficients.txt.

OHMThresh_SW

Description Temperature threshold determining whether summer/winter OHM coefficients are applied [°C] If 5-day running mean air temperature is greater than or equal to this threshold, OHM coefficients for summertime are applied; otherwise coefficients for wintertime are applied. Temperature threshold determining whether summer/winter OHM coefficients are applied [°C] If 5-day running mean air temperature is greater than or equal to this threshold, OHM coefficients for summertime are applied; otherwise coefficients for wintertime are applied. Temperature threshold determining whether summer/winter OHM coefficients are applied [°C] If 5-day running mean air temperature is greater than or equal to this threshold, OHM coefficients for summertime are applied; otherwise coefficients for wintertime are applied. Temperature threshold determining whether summer/winter OHM coefficients are applied [°C] If 5-day running mean air temperature is greater than or equal to this threshold, OHM coefficients for summertime are applied; otherwise coefficients for wintertime are applied. Not actually used for Snow surface as winter wet conditions always assumed.

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_NonVeg.txt</i>	<i>MD</i>	Temperature threshold determining whether summer/winter OHM coefficients are applied [°C] If 5-day running mean air temperature is greater than or equal to this threshold, OHM coefficients for summertime are applied; otherwise coefficients for wintertime are applied.
<i>SUEWS_Veg.txt</i>	<i>MD</i>	Temperature threshold determining whether summer/winter OHM coefficients are applied [°C] If 5-day running mean air temperature is greater than or equal to this threshold, OHM coefficients for summertime are applied; otherwise coefficients for wintertime are applied.
<i>SUEWS_Water.txt</i>	<i>MD</i>	Temperature threshold determining whether summer/winter OHM coefficients are applied [°C] If 5-day running mean air temperature is greater than or equal to this threshold, OHM coefficients for summertime are applied; otherwise coefficients for wintertime are applied.
<i>SUEWS_Snow.txt</i>	<i>MD</i>	Temperature threshold determining whether summer/winter OHM coefficients are applied [°C] If 5-day running mean air temperature is greater than or equal to this threshold, OHM coefficients for summertime are applied; otherwise coefficients for wintertime are applied. Not actually used for Snow surface as winter wet conditions always assumed.

OHMThresh_WD

Description Soil moisture threshold determining whether wet/dry OHM coefficients are applied [-] If soil moisture (as a proportion of maximum soil moisture capacity) exceeds this threshold for bare soil and vegetated surfaces, OHM coefficients for wet conditions are applied; otherwise coefficients for dry coefficients are applied. Note that OHM coefficients for wet conditions are applied if the surface is wet. Not actually used for building and paved surfaces (as impervious). Soil moisture threshold determining whether wet/dry OHM coefficients are applied [-] If soil moisture (as a proportion of maximum

soil moisture capacity) exceeds this threshold for bare soil and vegetated surfaces, OHM coefficients for wet conditions are applied; otherwise coefficients for dry coefficients are applied. Note that OHM coefficients for wet conditions are applied if the surface is wet. Soil moisture threshold determining whether wet/dry OHM coefficients are applied [-] If soil moisture (as a proportion of maximum soil moisture capacity) exceeds this threshold for bare soil and vegetated surfaces, OHM coefficients for wet conditions are applied; otherwise coefficients for dry coefficients are applied. Note that OHM coefficients for wet conditions are applied if the surface is wet. Not actually used for water surface (as no soil surface beneath). Soil moisture threshold determining whether wet/dry OHM coefficients are applied [-] If soil moisture (as a proportion of maximum soil moisture capacity) exceeds this threshold for bare soil and vegetated surfaces, OHM coefficients for wet conditions are applied; otherwise coefficients for dry coefficients are applied. Note that OHM coefficients for wet conditions are applied if the surface is wet. Not actually used for Snow surface as winter wet conditions always assumed.

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_NonVeg.txt</i>	<i>MD</i>	Soil moisture threshold determining whether wet/dry OHM coefficients are applied [-] If soil moisture (as a proportion of maximum soil moisture capacity) exceeds this threshold for bare soil and vegetated surfaces, OHM coefficients for wet conditions are applied; otherwise coefficients for dry coefficients are applied. Note that OHM coefficients for wet conditions are applied if the surface is wet. Not actually used for building and paved surfaces (as impervious).
<i>SUEWS_Veg.txt</i>	<i>MD</i>	Soil moisture threshold determining whether wet/dry OHM coefficients are applied [-] If soil moisture (as a proportion of maximum soil moisture capacity) exceeds this threshold for bare soil and vegetated surfaces, OHM coefficients for wet conditions are applied; otherwise coefficients for dry coefficients are applied. Note that OHM coefficients for wet conditions are applied if the surface is wet.

Continued on next page

Table 6.185 – continued from previous page

Referencing Table	Requirement	Comment
<i>SUEWS_Water.txt</i>	<i>MD</i>	Soil moisture threshold determining whether wet/dry OHM coefficients are applied [-] If soil moisture (as a proportion of maximum soil moisture capacity) exceeds this threshold for bare soil and vegetated surfaces, OHM coefficients for wet conditions are applied; otherwise coefficients for dry coefficients are applied. Note that OHM coefficients for wet conditions are applied if the surface is wet. Not actually used for water surface (as no soil surface beneath).
<i>SUEWS_Snow.txt</i>	<i>MD</i>	Soil moisture threshold determining whether wet/dry OHM coefficients are applied [-] If soil moisture (as a proportion of maximum soil moisture capacity) exceeds this threshold for bare soil and vegetated surfaces, OHM coefficients for wet conditions are applied; otherwise coefficients for dry coefficients are applied. Note that OHM coefficients for wet conditions are applied if the surface is wet. Not actually used for Snow surface as winter wet conditions always assumed.

PipeCapacity

Description Storage capacity of pipes [mm] Runoff amounting to less than the value specified here is assumed to be removed by pipes.

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>MD MU</i>	Storage capacity of pipes [mm] Runoff amounting to less than the value specified here is assumed to be removed by pipes.

PopDensDay

Description Daytime population density (i.e. workers, tourists) [people ha⁻¹] Population density is required if AnthropHeatMethod = 2 in RunControl.nml . The model will use the average of daytime and night-time population densities, unless only one is provided. If daytime population density is unknown, set to -999.

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>0</i>	Daytime population density (i.e. workers, tourists) [people ha ⁻¹] Population density is required if AnthropHeatMethod = 2 in RunControl.nml . The model will use the average of daytime and night-time population densities, unless only one is provided. If daytime population density is unknown, set to -999.

PopDensNight

Description Night-time population density (i.e. residents) [people ha⁻¹] Population density is required if AnthropHeatMethod = 2 in RunControl.nml . The model will use the average of daytime and night-time population densities, unless only one is provided. If night-time population density is unknown, set to -999.

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>0</i>	Night-time population density (i.e. residents) [people ha ⁻¹] Population density is required if AnthropHeatMethod = 2 in RunControl.nml . The model will use the average of daytime and night-time population densities, unless only one is provided. If night-time population density is unknown, set to -999.

PorosityMax

Description full leaf-on summertime value Used only for DecTr (can affect roughness calculation)

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Veg.txt</i>	<i>MD</i>	full leaf-on summertime value Used only for DecTr (can affect roughness calculation)

PorosityMin

Description leaf-off wintertime value Used only for DecTr (can affect roughness calculation)

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Veg.txt</i>	<i>MD</i>	leaf-off wintertime value Used only for DecTr (can affect roughness calculation)

PrecipLimAlb

Description Limit for hourly precipitation when the ground is fully covered with snow. Then snow albedo is reset to AlbedoMax [mm]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Snow.txt</i>	<i>MD</i>	Limit for hourly precipitation when the ground is fully covered with snow. Then snow albedo is reset to AlbedoMax [mm]

PrecipLimSnow

Description Auer (1974) [38]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Snow.txt</i>	<i>MD</i>	Auer (1974) [38]

pres

Description Barometric pressure [kPa]

Configuration

Referencing Table	Requirement	Comment
<i>SSss_YYYY_data_tt.txt</i>	<i>MU</i>	Barometric pressure [kPa]

qe

Description Latent heat flux [W m^{-2}]

Configuration

Referencing Table	Requirement	Comment
<i>SSss_YYYY_data_tt.txt</i>	<i>O</i>	Latent heat flux [W m^{-2}]

qf

Description Anthropogenic heat flux [W m^{-2}]

Configuration

Referencing Table	Requirement	Comment
<i>SSss_YYYY_data_tt.txt</i>	<i>O</i>	Anthropogenic heat flux [W m^{-2}]

QF_A_Weekday

Description Use with AnthropHeatChoice = 2 Example values $[\text{W m}^{-2} (\text{Cap ha}^{-1})^{-1}]$ 0.3081 Järvi et al. (2011) [1] 0.1 Järvi et al. (2014) [15]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_AnthropogenicHeat.txt</i>	<i>MU 0</i>	Use with AnthropHeatChoice = 2 Example values $[\text{W m}^{-2} (\text{Cap ha}^{-1})^{-1}]$ 0.3081 Järvi et al. (2011) [1] 0.1 Järvi et al. (2014) [15]

QF_A_Weekend

Description Use with AnthropHeatMethod = 2 Example values $[\text{W m}^{-2} (\text{Cap ha}^{-1})^{-1}]$ 0.3081 Järvi et al. (2011) [1] 0.1 Järvi et al. (2014) [15]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_AnthropogenicHeat.txt</i>	<i>MU 0</i>	Use with AnthropHeatMethod = 2 Example values $[\text{W m}^{-2} (\text{Cap ha}^{-1})^{-1}]$ 0.3081 Järvi et al. (2011) [1] 0.1 Järvi et al. (2014) [15]

QF_B_Weekday

Description Use with AnthropHeatMethod = 2 Example values $[\text{W m}^{-2} \text{K}^{-1} (\text{Cap ha}^{-1})^{-1}]$ 0.0099 Järvi et al. (2011) [1] 0.0099 Järvi et al. (2014) [15]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_AnthropogenicHeat.txt</i>	<i>MU 0</i>	Use with AnthropHeatMethod = 2 Example values $[\text{W m}^{-2} \text{K}^{-1} (\text{Cap ha}^{-1})^{-1}]$ 0.0099 Järvi et al. (2011) [1] 0.0099 Järvi et al. (2014) [15]

QF_B_Weekend

Description Use with AnthropHeatMethod = 2 Example values $[\text{W m}^{-2} \text{K}^{-1} (\text{Cap ha}^{-1})^{-1}]$ 0.0099 Järvi et al. (2011) [1] 0.0099 Järvi et al. (2014) [15]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_AnthropogenicHeat.txt</i>	<i>MU 0</i>	Use with AnthropHeatMethod = 2 Example values [$\text{W m}^{-2} \text{K}^{-1} (\text{Cap ha}^{-1})^{-1}$] 0.0099 Järvi et al. (2011) [1] 0.0099 Järvi et al. (2014) [15]

QF_C_Weekday

Description Use with AnthropHeatMethod = 2 Example values [$\text{W m}^{-2} \text{K}^{-1} (\text{Cap ha}^{-1})^{-1}$] 0.0102 Järvi et al. (2011) [1] 0.0102 Järvi et al. (2014) [15]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_AnthropogenicHeat.txt</i>	<i>MU 0</i>	Use with AnthropHeatMethod = 2 Example values [$\text{W m}^{-2} \text{K}^{-1} (\text{Cap ha}^{-1})^{-1}$] 0.0102 Järvi et al. (2011) [1] 0.0102 Järvi et al. (2014) [15]

QF_C_Weekend

Description Example values [$\text{W m}^{-2} \text{K}^{-1} (\text{Cap ha}^{-1})^{-1}$] 0.0102 Järvi et al. (2011) [1] 0.0102 Järvi et al. (2014) [15]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_AnthropogenicHeat.txt</i>	<i>MU 0</i>	Example values [$\text{W m}^{-2} \text{K}^{-1} (\text{Cap ha}^{-1})^{-1}$] 0.0102 Järvi et al. (2011) [1] 0.0102 Järvi et al. (2014) [15]

q+_gkg

Description specific humidity at the top of CBL (g kg^{-1})

Configuration

Referencing Table	Requirement	Comment
<i>CBL_initial_data.txt</i>	<i>MU</i>	specific humidity at the top of CBL (g kg^{-1})

q_gkg

Description specific humidity in CBL (g kg^{-1})

Configuration

Referencing Table	Requirement	Comment
<i>CBL_initial_data.txt</i>	<i>MU</i>	specific humidity in CBL (g kg^{-1})

qh

Description Sensible heat flux [W m^{-2}]

Configuration

Referencing Table	Requirement	Comment
<i>SSss_YYYY_data_tt.txt</i>	<i>0</i>	Sensible heat flux [W m^{-2}]

qn

Description Required if NetRadiationMethod = 1.

Configuration

Referencing Table	Requirement	Comment
<i>SSss_YYYY_data_tt.txt</i>	<i>0</i>	Required if NetRadiation-Method = 1.

qs

Description Storage heat flux [W m^{-2}]

Configuration

Referencing Table	Requirement	Comment
<i>SSss_YYYY_data_tt.txt</i>	<i>0</i>	Storage heat flux [W m^{-2}]

RadMeltFactor

Description Hourly radiation melt factor of snow [$\text{mm W}^{-1} \text{h}^{-1}$]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Snow.txt</i>	<i>MU</i>	Hourly radiation melt factor of snow [$\text{mm W}^{-1} \text{h}^{-1}$]

rain

Description Rainfall [mm]

Configuration

Referencing Table	Requirement	Comment
<i>SSss_YYYY_data_tt.txt</i>	<i>MU</i>	Rainfall [mm]

RH

Description Relative Humidity [%]

Configuration

Referencing Table	Requirement	Comment
<i>SSss_YYYY_data_tt.txt</i>	<i>MU</i>	Relative Humidity [%]

RunoffToWater

Description Fraction of above-ground runoff flowing to water surface during flooding [-]
Value must be in the range 0-1. Fraction of above-ground runoff that can flow to the water surface in the case of flooding.

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>MD MU</i>	Fraction of above-ground runoff flowing to water surface during flooding [-] Value must be in the range 0-1. Fraction of above-ground runoff that can flow to the water surface in the case of flooding.

S1

Description Related to soil moisture dependence [-] These will change in the future to ensure consistency with soil behaviour

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Conductance.txt</i>	<i>MD</i>	Related to soil moisture dependence [-] These will change in the future to ensure consistency with soil behaviour

S2

Description Related to soil moisture dependence [mm] These will change in the future to ensure consistency with soil behaviour

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Conductance.txt</i>	<i>MD</i>	Related to soil moisture dependence [mm] These will change in the future to ensure consistency with soil behaviour

SatHydraulicCond

Description Hydraulic conductivity for saturated soil [mm s⁻¹]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Soil.txt</i>	<i>MD</i>	Hydraulic conductivity for saturated soil [mm s ⁻¹]

SDDFull

Description This should be checked carefully for your study area using modelled LAI from

the DailyState output file compared to known behaviour in the study area. See section 2.2 Järvi et al. (2011) [1] ; Appendix A Järvi et al. (2014) [15] for more details. Example values [°C] -450 EveTr Järvi et al. (2011) [1] -450 DecTr Järvi et al. (2011) [1] -450 Grass Järvi et al. (2011) [1]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Veg.txt</i>	<i>MU</i>	This should be checked carefully for your study area using modelled LAI from the DailyState output file compared to known behaviour in the study area. See section 2.2 Järvi et al. (2011) [1] ; Appendix A Järvi et al. (2014) [15] for more details. Example values [°C] -450 EveTr Järvi et al. (2011) [1] -450 DecTr Järvi et al. (2011) [1] -450 Grass Järvi et al. (2011) [1]

snow

Description Required if SnowUse = 1

Configuration

Referencing Table	Requirement	Comment
<i>SSss_YYYY_data_tt.txt</i>	<i>0</i>	Required if SnowUse = 1

SnowClearingProfWD

Description Code for snow clearing profile (weekdays) Provides the link to column 1 of SUEWS_Profiles.txt. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_Profiles.txt. e.g. 1 means use the characteristics specified in the row of input file SUEWS_Profiles.txt which has 1 in column 1 (Code).

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>L</i>	Code for snow clearing profile (weekdays) Provides the link to column 1 of SUEWS_Profiles.txt. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_Profiles.txt. e.g. 1 means use the characteristics specified in the row of input file SUEWS_Profiles.txt which has 1 in column 1 (Code).

SnowClearingProfWE

Description Code for snow clearing profile (weekends) Provides the link to column 1 of SUEWS_Profiles.txt. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_Profiles.txt. e.g. 1 means use the characteristics specified in the row of input file SUEWS_Profiles.txt which has 1 in column 1 (Code). Providing the same code for SnowClearingProfWD and SnowClearingProfWE would link to the same row in SUEWS_Profiles.txt, i.e. the same profile would be used for weekdays and weekends.

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>L</i>	Code for snow clearing profile (weekends) Provides the link to column 1 of SUEWS_Profiles.txt. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_Profiles.txt. e.g. 1 means use the characteristics specified in the row of input file SUEWS_Profiles.txt which has 1 in column 1 (Code). Providing the same code for SnowClearingProfWD and SnowClearingProfWE would link to the same row in SUEWS_Profiles.txt, i.e. the same profile would be used for weekdays and weekends.

SnowCode

Description Code for snow surface characteristics Provides the link to column 1 of SUEWS_Snow.txt, which contains the attributes describing snow surfaces in this grid for this year. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_Snow.txt.

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>L</i>	Code for snow surface characteristics Provides the link to column 1 of SUEWS_Snow.txt, which contains the attributes describing snow surfaces in this grid for this year. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_Snow.txt.

snowDensMax

Description Maximum snow density [kg m⁻³]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Snow.txt</i>	<i>MD</i>	Maximum snow density [kg m ⁻³]

snowDensMin

Description Fresh snow density [kg m⁻³]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Snow.txt</i>	<i>MD</i>	Fresh snow density [kg m ⁻³]

SnowLimPatch

Description Not needed if SnowUse = 0 in RunControl.nml . Example values [mm] 190 Paved Järvi et al. (2014) [15] 190 Bldgs Järvi et al. (2014) [15] 190 BSoil Järvi et al. (2014) [15] Limit of snow water equivalent when the surface surface is fully covered with snow. Not needed if SnowUse = 0 in RunControl.nml . Example values [mm] 190 EveTr Järvi et al. (2014) [15] 190 DecTr Järvi et al. (2014) [15] 190 Grass Järvi et al. (2014) [15]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_NonVeg.txt</i>	<i>0</i>	Not needed if SnowUse = 0 in RunControl.nml . Example values [mm] 190 Paved Järvi et al. (2014) [15] 190 Bldgs Järvi et al. (2014) [15] 190 BSoil Järvi et al. (2014) [15]
<i>SUEWS_Veg.txt</i>	<i>0</i>	Limit of snow water equivalent when the surface surface is fully covered with snow. Not needed if SnowUse = 0 in RunControl.nml . Example values [mm] 190 EveTr Järvi et al. (2014) [15] 190 DecTr Järvi et al. (2014) [15] 190 Grass Järvi et al. (2014) [15]

SnowLimRemove

Description Not needed if SnowUse = 0 in RunControl.nml . Currently not implemented for BSoil surface Example values [mm] 40 Paved Järvi et al. (2014) [15] 100 Bldgs Järvi et al. (2014) [15]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_NonVeg.txt</i>	<i>0</i>	Not needed if SnowUse = 0 in RunControl.nml . Currently not implemented for BSoil surface Example values [mm] 40 Paved Järvi et al. (2014) [15] 100 Bldgs Järvi et al. (2014) [15]

SoilDensity

Description Soil density [kg m⁻³]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Soil.txt</i>	<i>MD</i>	Soil density [kg m ⁻³]

SoilDepth

Description Depth of sub-surface soil store [mm] i.e. the depth of soil beneath the surface

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Soil.txt</i>	<i>MD</i>	Depth of sub-surface soil store [mm] i.e. the depth of soil beneath the surface

SoilStoreCap

Description SoilStoreCap must not be greater than SoilDepth.

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Soil.txt</i>	<i>MD</i>	SoilStoreCap must not be greater than SoilDepth.

SoilTypeCode

Description Code for soil characteristics below this surface Provides the link to column 1 of SUEWS_Soil.txt , which contains the attributes describing sub-surface soil for this surface type. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_Soil.txt. Code for soil characteristics below this surface Provides the link to column 1 of SUEWS_Soil.txt , which contains the attributes describing sub-surface soil for this surface type. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_Soil.txt.

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_NonVeg.txt</i>	<i>L</i>	Code for soil characteristics below this surface Provides the link to column 1 of SUEWS_Soil.txt , which contains the attributes describing sub-surface soil for this surface type. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_Soil.txt.
<i>SUEWS_Veg.txt</i>	<i>L</i>	Code for soil characteristics below this surface Provides the link to column 1 of SUEWS_Soil.txt , which contains the attributes describing sub-surface soil for this surface type. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_Soil.txt.

StartDLS

Description Start of the day light savings [DOY] See section on Day Light Savings .

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>MU</i>	Start of the day light savings [DOY] See section on Day Light Savings .

StateLimit

Description Currently only used for the water surface Currently only used for the water surface Surface state cannot exceed this value. Set to a large value (e.g. 20000 mm = 20 m) if the water body is substantial (lake, river, etc) or a small value (e.g. 10 mm) if water bodies are very shallow (e.g. fountains). WaterDepth (column 9) must not exceed this value.

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_NonVeg.txt</i>	<i>MD</i>	Currently only used for the water surface
<i>SUEWS_Veg.txt</i>	<i>MD</i>	Currently only used for the water surface

Continued on next page

Table 6.228 – continued from previous page

Referencing Table	Requirement	Comment
<i>SUEWS_Water.txt</i>	<i>MU</i>	Surface state cannot exceed this value. Set to a large value (e.g. 20000 mm = 20 m) if the water body is substantial (lake, river, etc) or a small value (e.g. 10 mm) if water bodies are very shallow (e.g. fountains). WaterDepth (column 9) must not exceed this value.

StorageMax

Description Maximum water storage capacity for upper surfaces (i.e. canopy) Min and max values are to account for seasonal variation (e.g. leaf-on/leaf-off differences for vegetated surfaces). Not currently used for non-vegetated surfaces - set the same as StorageMin. Example values [mm] 0.48 Paved 0.25 Bldgs 0.8 BSoil Maximum water storage capacity for upper surfaces (i.e. canopy) Min/max values are to account for seasonal variation (e.g. leaf-off/leaf-on differences for vegetated surfaces) Only used for DecTr surfaces - set EveTr and Grass values the same as StorageMin. Example values [mm] 1.3 EveTr Breuer et al. (2003) [36] 0.8 DecTr Breuer et al. (2003) [36] 1.9 Grass Breuer et al. (2003) [36] Maximum water storage capacity for upper surfaces (i.e. canopy) Min and max values are to account for seasonal variation - not used for water surfaces so set same as StorageMin.

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_NonVeg.txt</i>	<i>MD</i>	Maximum water storage capacity for upper surfaces (i.e. canopy) Min and max values are to account for seasonal variation (e.g. leaf-on/leaf-off differences for vegetated surfaces). Not currently used for non-vegetated surfaces - set the same as StorageMin. Example values [mm] 0.48 Paved 0.25 Bldgs 0.8 BSoil

Continued on next page

Table 6.229 – continued from previous page

Referencing Table	Requirement	Comment
<i>SUEWS_Veg.txt</i>	<i>MD</i>	Maximum water storage capacity for upper surfaces (i.e. canopy) Min/max values are to account for seasonal variation (e.g. leaf-off/leaf-on differences for vegetated surfaces) Only used for DecTr surfaces - set EveTr and Grass values the same as StorageMin. Example values [mm] 1.3 EveTr Breuer et al. (2003) [36] 0.8 DecTr Breuer et al. (2003) [36] 1.9 Grass Breuer et al. (2003) [36]
<i>SUEWS_Water.txt</i>	<i>MD</i>	Maximum water storage capacity for upper surfaces (i.e. canopy) Min and max values are to account for seasonal variation - not used for water surfaces so set same as StorageMin.

StorageMin

Description Minimum water storage capacity for upper surfaces (i.e. canopy). Min/max values are to account for seasonal variation (e.g. leaf-on/leaf-off differences for vegetated surfaces). Not currently used for non-vegetated surfaces - set the same as StorageMax. Example values [mm] 0.48 Paved 0.25 Bldgs 0.8 BSoil Minimum water storage capacity for upper surfaces (i.e. canopy). Min/max values are to account for seasonal variation (e.g. leaf-off/leaf-on differences for vegetated surfaces). Example values [mm] 1.3 EveTr Breuer et al. (2003) [36] 0.3 DecTr Breuer et al. (2003) [36] 1.9 Grass Breuer et al. (2003) [36] Minimum water storage capacity for upper surfaces (i.e. canopy). Min/max values are to account for seasonal variation - not used for water surfaces. Example values [mm] 0.5 Water

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_NonVeg.txt</i>	<i>MD</i>	Minimum water storage capacity for upper surfaces (i.e. canopy). Min/max values are to account for seasonal variation (e.g. leaf-on/leaf-off differences for vegetated surfaces). Not currently used for non-vegetated surfaces - set the same as StorageMax. Example values [mm] 0.48 Paved 0.25 Bldgs 0.8 BSoil

Continued on next page

Table 6.230 – continued from previous page

Referencing Table	Requirement	Comment
<i>SUEWS_Veg.txt</i>	<i>MD</i>	Minimum water storage capacity for upper surfaces (i.e. canopy). Min/max values are to account for seasonal variation (e.g. leaf-off/leaf-on differences for vegetated surfaces). Example values [mm] 1.3 EveTr Breuer et al. (2003) [36] 0.3 DecTr Breuer et al. (2003) [36] 1.9 Grass Breuer et al. (2003) [36]
<i>SUEWS_Water.txt</i>	<i>MD</i>	Minimum water storage capacity for upper surfaces (i.e. canopy). Min/max values are to account for seasonal variation - not used for water surfaces. Example values [mm] 0.5 Water

SurfaceArea

Description Area of the grid [ha].

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>MU</i>	Area of the grid [ha].

Surf_k1

Description Thermal conductivity of the first layer [$\text{W m}^{-1} \text{K}^{-1}$]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_ESTMCoefficients.txt</i>	<i>MU</i>	Thermal conductivity of the first layer [$\text{W m}^{-1} \text{K}^{-1}$]

Surf_k2

Description Thermal conductivity of the second layer [$\text{W m}^{-1} \text{K}^{-1}$]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_ESTMCoefficients.txt</i>	<i>0</i>	Thermal conductivity of the second layer [$\text{W m}^{-1} \text{K}^{-1}$]

Surf_k3

Description Thermal conductivity of the third layer [$\text{W m}^{-1} \text{K}^{-1}$]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_ESTMCoefficients.txt</i>	<i>0</i>	Thermal conductivity of the third layer[W m ⁻¹ K ⁻¹]

Surf_k4

Description Thermal conductivity of the fourth layer[W m⁻¹ K⁻¹]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_ESTMCoefficients.txt</i>	<i>0</i>	Thermal conductivity of the fourth layer[W m ⁻¹ K ⁻¹]

Surf_k5

Description Thermal conductivity of the fifth layer [W m⁻¹ K⁻¹]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_ESTMCoefficients.txt</i>	<i>0</i>	Thermal conductivity of the fifth layer [W m ⁻¹ K ⁻¹]

Surf_rhoCp1

Description Volumetric heat capacity of the first layer [J m⁻³ K⁻¹]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_ESTMCoefficients.txt</i>	<i>MU</i>	Volumetric heat capacity of the first layer [J m ⁻³ K ⁻¹]

Surf_rhoCp2

Description Volumetric heat capacity of the second layer [J m⁻³ K⁻¹]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_ESTMCoefficients.txt</i>	<i>0</i>	Volumetric heat capacity of the second layer [J m ⁻³ K ⁻¹]

Surf_rhoCp3

Description Volumetric heat capacity of the third layer[J m⁻³ K⁻¹]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_ESTMCoefficients.txt</i>	<i>0</i>	Volumetric heat capacity of the third layer[J m ⁻³ K ⁻¹]

Surf_rhoCp4

Description Volumetric heat capacity of the fourth layer [$\text{J m}^{-3} \text{K}^{-1}$]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_ESTMCoefficients.txt</i>	0	Volumetric heat capacity of the fourth layer [$\text{J m}^{-3} \text{K}^{-1}$]

Surf_rhoCp5

Description Volumetric heat capacity of the fifth layer [$\text{J m}^{-3} \text{K}^{-1}$]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_ESTMCoefficients.txt</i>	0	Volumetric heat capacity of the fifth layer [$\text{J m}^{-3} \text{K}^{-1}$]

Surf_thick1

Description Thickness of the first layer [m] for roofs (building surfaces) and ground (all other surfaces)

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_ESTMCoefficients.txt</i>	MU	Thickness of the first layer [m] for roofs (building surfaces) and ground (all other surfaces)

Surf_thick2

Description Thickness of the second layer [m] (if no second layer, set to -999.)

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_ESTMCoefficients.txt</i>	0	Thickness of the second layer [m] (if no second layer, set to -999.)

Surf_thick3

Description Thickness of the third layer [m] (if no third layer, set to -999.)

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_ESTMCoefficients.txt</i>	0	Thickness of the third layer [m] (if no third layer, set to -999.)

Surf_thick4

Description Thickness of the fourth layer [m] (if no fourth layer, set to -999.)

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_ESTMCoefficients.txt</i>	<i>0</i>	Thickness of the fourth layer [m] (if no fourth layer, set to -999.)

Surf_thick5

Description Thickness of the fifth layer [m] (if no fifth layer, set to -999.)

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_ESTMCoefficients.txt</i>	<i>0</i>	Thickness of the fifth layer [m] (if no fifth layer, set to -999.)

Tair

Description Air temperature [°C]

Configuration

Referencing Table	Requirement	Comment
<i>SSss_YYYY_data_tt.txt</i>	<i>MU</i>	Air temperature [°C]

tau_a

Description Time constant for snow albedo aging in cold snow [-]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Snow.txt</i>	<i>MD</i>	Time constant for snow albedo aging in cold snow [-]

tau_f

Description Time constant for snow albedo aging in melting snow [-]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Snow.txt</i>	<i>MD</i>	Time constant for snow albedo aging in melting snow [-]

tau_r

Description Time constant for snow density ageing [-]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Snow.txt</i>	<i>MD</i>	Time constant for snow density ageing [-]

TCritic

Description Use with AnthroHeatMethod = 1

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_AnthropogenicHeat.txt</i>	<i>MU 0</i>	Use with AnthroHeatMethod = 1

TempMeltFactor

Description Hourly temperature melt factor of snow [$\text{mm K}^{-1} \text{h}^{-1}$] (In previous model version, this parameter was 0.12)

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Snow.txt</i>	<i>MU</i>	Hourly temperature melt factor of snow [$\text{mm K}^{-1} \text{h}^{-1}$] (In previous model version, this parameter was 0.12)

TH

Description Upper air temperature limit [$^{\circ}\text{C}$]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Conductance.txt</i>	<i>MD</i>	Upper air temperature limit [$^{\circ}\text{C}$]

Theta+_K

Description potential temperature at the top of CBL (K)

Configuration

Referencing Table	Requirement	Comment
<i>CBL_initial_data.txt</i>	<i>MU</i>	potential temperature at the top of CBL (K)

Theta_K

Description potential temperature in CBL (K)

Configuration

Referencing Table	Requirement	Comment
<i>CBL_initial_data.txt</i>	<i>MU</i>	potential temperature in CBL (K)

Tiair

Description Indoor air temperature [$^{\circ}\text{C}$]

Configuration

Referencing Table	Requirement	Comment
<i>SSss_YYYY_ESTM_Ts_data_tt.txt</i>	<i>MU</i>	Indoor air temperature [°C]

Timezone

Description Time zone [h] for site relative to UTC (east is positive). This should be set according to the times given in the meteorological forcing file(s).

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>MU</i>	Time zone [h] for site relative to UTC (east is positive). This should be set according to the times given in the meteorological forcing file(s).

TL

Description Lower air temperature limit [°C]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Conductance.txt</i>	<i>MD</i>	Lower air temperature limit [°C]

ToBldgs

Description Fraction of water going to *Bldgs*

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_WithinGridWaterDist.txt</i>	<i>MU</i>	Fraction of water going to <i>Bldgs</i>

ToBSoil

Description Fraction of water going to *BSoil*

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_WithinGridWaterDist.txt</i>	<i>MU</i>	Fraction of water going to <i>BSoil</i>

ToDecTr

Description Fraction of water going to *DecTr*

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_WithinGridWaterDist.txt</i>	<i>MU</i>	Fraction of water going to <i>DecTr</i>

ToEveTr

Description Fraction of water going to *EveTr*

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_WithinGridWaterDist.txt</i>	<i>MU</i>	Fraction of water going to <i>EveTr</i>

ToGrass

Description Fraction of water going to *Grass*

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_WithinGridWaterDist.txt</i>	<i>MU</i>	Fraction of water going to <i>Grass</i>

ToPaved

Description Fraction of water going to *Paved*

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_WithinGridWaterDist.txt</i>	<i>MU</i>	Fraction of water going to <i>Paved</i>

ToRunoff

Description Fraction of water going to **Runoff**

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_WithinGridWaterDist.txt</i>	<i>MU</i>	Fraction of water going to Runoff

ToSoilStore

Description Fraction of water going to **SoilStore**

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_WithinGridWaterDist.txt</i>	<i>MU</i>	Fraction of water going to SoilStore

ToWater

Description Fraction of water going to *Water*

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_WithinGridWaterDist.txt</i>	<i>MU</i>	Fraction of water going to <i>Water</i>

TrafficRate

Description Traffic rate [veh km m-2 s-1] Can be used for CO2 flux calculation. Do not use in v2017a - set to -999

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>0</i>	Traffic rate [veh km m-2 s-1] Can be used for CO2 flux calculation. Do not use in v2017a - set to -999

Troad

Description Ground surface temperature [° C] (used when TsurfChoice = 1 or 2)

Configuration

Referencing Table	Requirement	Comment
<i>SSss_YYYY_ESTM_Ts_data_tt.txt</i>	<i>MU</i>	Ground surface temperature [° C] (used when TsurfChoice = 1 or 2)

Troof

Description Roof surface temperature [° C] (used when TsurfChoice = 1 or 2)

Configuration

Referencing Table	Requirement	Comment
<i>SSss_YYYY_ESTM_Ts_data_tt.txt</i>	<i>MU</i>	Roof surface temperature [° C] (used when TsurfChoice = 1 or 2)

Tsurf

Description Bulk surface temperature [° C] (used when TsurfCoice = 0)

Configuration

Referencing Table	Requirement	Comment
<i>SSss_YYYY_ESTM_Ts_data_tt.txt</i>	<i>MU</i>	Bulk surface temperature [° C] (used when TsurfCoice = 0)

Twall

Description Wall surface temperature [° C] (used when TsurfChoice = 1)

Configuration

Referencing Table	Requirement	Comment
<i>SSss_YYYY_ESTM_Ts_data_tt.txt</i>	<i>MU</i>	Wall surface temperature [° C] (used when TsurfChoice = 1)

Twall_e

Description East-facing wall surface temperature [° C] (used when TsurfChoice = 2)

Configuration

Referencing Table	Requirement	Comment
<i>SSss_YYYY_ESTM_Ts_data_tt.txt</i>	<i>MU</i>	East-facing wall surface temperature [° C] (used when TsurfChoice = 2)

Twall_n

Description North-facing wall surface temperature [° C] (used when TsurfChoice = 2)

Configuration

Referencing Table	Requirement	Comment
<i>SSss_YYYY_ESTM_Ts_data_tt.txt</i>	<i>MU</i>	North-facing wall surface temperature [° C] (used when TsurfChoice = 2)

Twall_s

Description South-facing wall surface temperature [° C] (used when TsurfChoice = 2)

Configuration

Referencing Table	Requirement	Comment
<i>SSss_YYYY_ESTM_Ts_data_tt.txt</i>	<i>MU</i>	South-facing wall surface temperature [° C] (used when TsurfChoice = 2)

Twall_w

Description West-facing wall surface temperature [° C] (used when TsurfChoice = 2)

Configuration

Referencing Table	Requirement	Comment
<i>SSss_YYYY_ESTM_Ts_data_tt.txt</i>	<i>MU</i>	West-facing wall surface temperature [° C] (used when TsurfChoice = 2)

U

Description Height of the wind speed measurement (z) is needed in *SUEWS_SiteSelect.txt*

Configuration

Referencing Table	Requirement	Comment
<i>SSss_YYYY_data_tt.txt</i>	<i>MU</i>	Height of the wind speed measurement (z) is needed in SUEWS_SiteSelect.txt .

Wall_k1

Description Thermal conductivity of the first layer [$\text{W m}^{-1} \text{K}^{-1}$]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_ESTMCoefficients.txt</i>	<i>MU</i>	Thermal conductivity of the first layer [$\text{W m}^{-1} \text{K}^{-1}$]

Wall_k2

Description Thermal conductivity of the second layer [$\text{W m}^{-1} \text{K}^{-1}$]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_ESTMCoefficients.txt</i>	<i>0</i>	Thermal conductivity of the second layer [$\text{W m}^{-1} \text{K}^{-1}$]

Wall_k3

Description Thermal conductivity of the third layer [$\text{W m}^{-1} \text{K}^{-1}$]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_ESTMCoefficients.txt</i>	<i>0</i>	Thermal conductivity of the third layer [$\text{W m}^{-1} \text{K}^{-1}$]

Wall_k4

Description Thermal conductivity of the fourth layer [$\text{W m}^{-1} \text{K}^{-1}$]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_ESTMCoefficients.txt</i>	<i>0</i>	Thermal conductivity of the fourth layer [$\text{W m}^{-1} \text{K}^{-1}$]

Wall_k5

Description Thermal conductivity of the fifth layer [$\text{W m}^{-1} \text{K}^{-1}$]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_ESTMCoefficients.txt</i>	<i>0</i>	Thermal conductivity of the fifth layer [$\text{W m}^{-1} \text{K}^{-1}$]

Wall_rhoCp1

Description Volumetric heat capacity of the first layer [$\text{J m}^{-3} \text{K}^{-1}$]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_ESTMCoefficients.txt</i>	<i>MU</i>	Volumetric heat capacity of the first layer [$\text{J m}^{-3} \text{K}^{-1}$]

Wall_rhoCp2

Description Volumetric heat capacity of the second layer [$\text{J m}^{-3} \text{K}^{-1}$]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_ESTMCoefficients.txt</i>	<i>0</i>	Volumetric heat capacity of the second layer [$\text{J m}^{-3} \text{K}^{-1}$]

Wall_rhoCp3

Description Volumetric heat capacity of the third layer [$\text{J m}^{-3} \text{K}^{-1}$]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_ESTMCoefficients.txt</i>	<i>0</i>	Volumetric heat capacity of the third layer [$\text{J m}^{-3} \text{K}^{-1}$]

Wall_rhoCp4

Description Volumetric heat capacity of the fourth layer [$\text{J m}^{-3} \text{K}^{-1}$]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_ESTMCoefficients.txt</i>	<i>0</i>	Volumetric heat capacity of the fourth layer [$\text{J m}^{-3} \text{K}^{-1}$]

Wall_rhoCp5

Description Volumetric heat capacity of the fifth layer [$\text{J m}^{-3} \text{K}^{-1}$]

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_ESTMCoefficients.txt</i>	<i>0</i>	Volumetric heat capacity of the fifth layer [$\text{J m}^{-3} \text{K}^{-1}$]

Wall_thick1

Description Thickness of the first layer [m] for building surfaces only; set to -999 for all other surfaces

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_ESTMCoefficients.txt</i>	<i>MU</i>	Thickness of the first layer [m] for building surfaces only; set to -999 for all other surfaces

Wall_thick2

Description Thickness of the second layer [m] (if no second layer, set to -999.)

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_ESTMCoefficients.txt</i>	<i>0</i>	Thickness of the second layer [m] (if no second layer, set to -999.)

Wall_thick3

Description Thickness of the third layer [m] (if no third layer, set to -999.)

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_ESTMCoefficients.txt</i>	<i>0</i>	Thickness of the third layer [m] (if no third layer, set to -999.)

Wall_thick4

Description Thickness of the fourth layer [m] (if no fourth layer, set to -999.)

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_ESTMCoefficients.txt</i>	<i>0</i>	Thickness of the fourth layer [m] (if no fourth layer, set to -999.)

Wall_thick5

Description Thickness of the fifth layer [m] (if no fifth layer, set to -999.)

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_ESTMCoefficients.txt</i>	<i>0</i>	Thickness of the fifth layer [m] (if no fifth layer, set to -999.)

WaterDepth

Description Set to a large value (e.g. 20000 mm = 20 m) if the water body is substantial (lake, river, etc) or a small value (e.g. 10 mm) if water bodies are very shallow (e.g. fountains). This value must not exceed StateLimit (column 8).

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_Water.txt</i>	<i>MU</i>	Set to a large value (e.g. 20000 mm = 20 m) if the water body is substantial (lake, river, etc) or a small value (e.g. 10 mm) if water bodies are very shallow (e.g. fountains). This value must not exceed State-Limit (column 8).

WaterUseProfAutoWD

Description Code for water use profile (automatic irrigation, weekdays) Provides the link to column 1 of SUEWS_Profiles.txt. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_Profiles.txt.

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>L</i>	Code for water use profile (automatic irrigation, weekdays) Provides the link to column 1 of SUEWS_Profiles.txt. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_Profiles.txt.

WaterUseProfAutoWE

Description Code for water use profile (automatic irrigation, weekends) Provides the link to column 1 of SUEWS_Profiles.txt. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_Profiles.txt.

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>L</i>	Code for water use profile (automatic irrigation, weekends) Provides the link to column 1 of SUEWS_Profiles.txt. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_Profiles.txt.

WaterUseProfManuWD

Description Code for water use profile (manual irrigation, weekdays) Provides the link to column 1 of SUEWS_Profiles.txt. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_Profiles.txt.

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>L</i>	Code for water use profile (manual irrigation, weekdays) Provides the link to column 1 of SUEWS_Profiles.txt. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_Profiles.txt.

WaterUseProfManuWE

Description Code for water use profile (manual irrigation, weekends) Provides the link to column 1 of SUEWS_Profiles.txt. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_Profiles.txt.

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>L</i>	Code for water use profile (manual irrigation, weekends) Provides the link to column 1 of SUEWS_Profiles.txt. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_Profiles.txt.

wdir

Description Currently not implemented

Configuration

Referencing Table	Requirement	Comment
<i>SSss_YYYY_data_tt.txt</i>	<i>O</i>	Currently not implemented

WetThreshold

Description Depth of water which determines whether evaporation occurs from a partially wet or completely wet surface. Example values [mm] 0.6 Paved 0.6 Bldgs 1. BSoil Depth of water which determines whether evaporation occurs from a partially wet or completely wet surface. Example values [mm] 1.8 EveTr 1. DecTr 2. Grass Depth of water which determines whether evaporation occurs from a partially wet or completely wet surface. Example values [mm] 0.5 Water

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_NonVeg.txt</i>	<i>MD</i>	Depth of water which determines whether evaporation occurs from a partially wet or completely wet surface. Example values [mm] 0.6 Paved 0.6 Bldgs 1. BSoil
<i>SUEWS_Veg.txt</i>	<i>MD</i>	Depth of water which determines whether evaporation occurs from a partially wet or completely wet surface. Example values [mm] 1.8 EveTr 1. DecTr 2. Grass
<i>SUEWS_Water.txt</i>	<i>MD</i>	Depth of water which determines whether evaporation occurs from a partially wet or completely wet surface. Example values [mm] 0.5 Water

WithinGridBldgsCode

Description Code that links to the fraction of water that flows from Bldgs surfaces to surfaces in columns 2-10 of SUEWS_WithinGridWaterDist.txt. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_WithinGridWaterDist.txt.

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>L</i>	Code that links to the fraction of water that flows from Bldgs surfaces to surfaces in columns 2-10 of SUEWS_WithinGridWaterDist.txt. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_WithinGridWaterDist.txt.

WithinGridBSoilCode

Description Code that links to the fraction of water that flows from BSoil surfaces to surfaces in columns 2-10 of SUEWS_WithinGridWaterDist.txt. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_WithinGridWaterDist.txt.

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>L</i>	Code that links to the fraction of water that flows from BSoil surfaces to surfaces in columns 2-10 of SUEWS_WithinGridWaterDist.txt. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_WithinGridWaterDist.txt.

WithinGridDecTrCode

Description Code that links to the fraction of water that flows from DecTr surfaces to surfaces in columns 2-10 of SUEWS_WithinGridWaterDist.txt. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_WithinGridWaterDist.txt.

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>L</i>	Code that links to the fraction of water that flows from DecTr surfaces to surfaces in columns 2-10 of SUEWS_WithinGridWaterDist.txt. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_WithinGridWaterDist.txt.

WithinGridEveTrCode

Description Code that links to the fraction of water that flows from EveTr surfaces to surfaces in columns 2-10 of SUEWS_WithinGridWaterDist.txt. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_WithinGridWaterDist.txt.

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>L</i>	Code that links to the fraction of water that flows from EveTr surfaces to surfaces in columns 2-10 of SUEWS_WithinGridWaterDist.txt. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_WithinGridWaterDist.txt.

WithinGridGrassCode

Description Code that links to the fraction of water that flows from Grass surfaces to surfaces in columns 2-10 of SUEWS_WithinGridWaterDist.txt. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_WithinGridWaterDist.txt.

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>L</i>	Code that links to the fraction of water that flows from Grass surfaces to surfaces in columns 2-10 of SUEWS_WithinGridWaterDist.txt. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_WithinGridWaterDist.txt.

WithinGridPavedCode

Description Code that links to the fraction of water that flows from Paved surfaces to surfaces in columns 2-10 of SUEWS_WithinGridWaterDist.txt . Value of integer is arbitrary but must match code specified in column 1 of SUEWS_WithinGridWaterDist.txt.

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>L</i>	Code that links to the fraction of water that flows from Paved surfaces to surfaces in columns 2-10 of SUEWS_WithinGridWaterDist.txt . Value of integer is arbitrary but must match code specified in column 1 of SUEWS_WithinGridWaterDist.txt.

WithinGridWaterCode

Description Code that links to the fraction of water that flows from Water surfaces to surfaces in columns 2-10 of SUEWS_WithinGridWaterDist.txt. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_WithinGridWaterDist.txt.

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>L</i>	Code that links to the fraction of water that flows from Water surfaces to surfaces in columns 2-10 of SUEWS_WithinGridWaterDist.txt. Value of integer is arbitrary but must match code specified in column 1 of SUEWS_WithinGridWaterDist.txt.

Wuh

Description External water use [m³]

Configuration

Referencing Table	Requirement	Comment
<i>SSss_YYYY_data_tt.txt</i>	<i>0</i>	External water use [m ³]

xsm

Description Observed soil moisture [m³ m⁻³ or kg kg⁻¹]

Configuration

Referencing Table	Requirement	Comment
<i>SSss_YYYY_data_tt.txt</i>	<i>0</i>	Observed soil moisture [m ³ m ⁻³ or kg kg ⁻¹]

Year

Description Year [YYYY] Years must be continuous. If running multiple years, ensure the rows in SiteSelect.txt are arranged so that all grids for a particular year appear on consecutive lines (rather than grouping all years together for a particular grid).

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>MU</i>	Year [YYYY] Years must be continuous. If running multiple years, ensure the rows in SiteSelect.txt are arranged so that all grids for a particular year appear on consecutive lines (rather than grouping all years together for a particular grid).

z

Description z must be greater than the displacement height. Forcing data should be representative of the local-scale, i.e. above the height of the roughness elements.

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>MU</i>	z must be greater than the displacement height. Forcing data should be representative of the local-scale, i.e. above the height of the roughness elements.

z0

Description Roughness length for momentum [m] Value supplied here is used if RoughLenMomMethod = 1 in RunControl.nml ; otherwise set to '-999' and a value will be calculated by the model (RoughLenMomMethod = 2, 3).

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>0</i>	Roughness length for momentum [m] Value supplied here is used if RoughLenMomMethod = 1 in RunControl.nml ; otherwise set to '-999' and a value will be calculated by the model (RoughLenMomMethod = 2, 3).

zd

Description Zero-plane displacement [m] Value supplied here is used if RoughLenMomMethod = 1 in RunControl.nml ; otherwise set to '-999' and a value will be calculated by the model (RoughLenMomMethod = 2, 3).

Configuration

Referencing Table	Requirement	Comment
<i>SUEWS_SiteSelect.txt</i>	<i>0</i>	Zero-plane displacement [m] Value supplied here is used if RoughLenMomMethod = 1 in RunControl.nml ; otherwise set to '-999' and a value will be calculated by the model (RoughLenMomMethod = 2, 3).

zi0

Description initial convective boundary layer height (m)

Configuration

Referencing Table	Requirement	Comment
<i>CBL_initial_data.txt</i>	<i>MU</i>	initial convective boundary layer height (m)

These text files are stored as worksheets in **SUEWS_SiteInfo.xlsm** and can be either edited using Excel and then generated using the macro, or edited directly (see *Data Entry*). Please note this file is subject to possible changes from version to version due to new features, modifications, etc. Please be aware of using the correct copy of this worksheet that are always shipped with the SUEWS public release.

Use	Column
MU	Parameters which must be supplied and must be specific for the site/grid being run.
MD	Parameters which must be supplied and must be specific for the site/grid being run (but default values may be ok if these values are not known specifically for the site).
O	Parameters that are optional, depending on the model settings in RunControl. Set any parameters that are not used/not known to '-999'.
L	Codes that are used to link between the input files. These codes are required but their values are completely arbitrary, providing that they link the input files in the correct way. The user should choose these codes, bearing in mind that the codes they match up with in column 1 of the corresponding input file must be unique within that file. Codes must be integers. Note that the codes must match up with column 1 of the corresponding input file, even if those parameters are not used (in which case set all columns except column 1 to '-999' in the corresponding input file), otherwise the model run will fail.

6.3 Initial Conditions file

To start the model, information about the conditions at the start of the run is required. This information is provided in initial conditions file. One file can be specified for each grid (*MultipleInitFiles=1* in *RunControl.nml*, filename includes grid number) or, alternatively, a single file can be specified for all grids (*MultipleInitFiles=0* in *RunControl.nml*, no grid number in the filename). After that, a new InitialConditionsSSss_YYYY.nml file will be written for each grid for the following years. It is recommended that you look at these files (written to the input directory) to check the status of various surfaces at the end or the run. This may help you get more realistic starting values if you are uncertain what they should be. Note this file will be created for each year for multiyear runs for each grid. If the run finishes before the end of the year the InitialConditions file is still written and the file name is appended with '_EndofRun'.

A sample file of **InitialConditionsSSss_YYYY.nml** looks like

```
&InitialConditions
LeavesOutInitially=0
SoilstorePavedState=150
SoilstoreBldgsState=150
SoilstoreEveTrstate=150
SoilstoreDecTrState=150
SoilstoreGrassState=150
SoilstoreBSoilState=150
BoInit=10
/
```

The two most important pieces of information in the initial conditions file is the soil moisture and state of vegetation at the start of the run. This is the minimal information required; other information can be provided if known, otherwise SUEWS will make an estimate of initial conditions.

The parameters and their setting instructions are provided through the links below:

Note: Variables can be in any order

- *Soil moisture states*
 - *SoilstorePavedState*
 - *SoilstoreBldgsState*
 - *SoilstoreEveTrState*
 - *SoilstoreDecTrState*

- *SoilstoreGrassState*
 - *SoilstoreBSoilState*
- *Vegetation parameters*
 - *LeavesOutIntially*
 - *GDD_1_0*
 - *GDD_2_0*
 - *LAIinitialEveTr*
 - *LAIinitialDecTr*
 - *LAIinitialGrass*
 - *albEveTr0*
 - *albDecTr0*
 - *albGrass0*
 - *decidCap0*
 - *porosity0*
- *Recent meteorology*
 - *DaysSinceRain*
 - *Temp_CO*
- *Above Ground State*
 - *PavedState*
 - *BldgsState*
 - *EveTrState*
 - *DecTrState*
 - *GrassState*
 - *BSoilState*
 - *WaterState*
- *Snow related parameters*
 - *SnowIntially*
 - *SnowWaterPavedState*
 - *SnowWaterBldgsState*
 - *SnowWaterEveTrState*
 - *SnowWaterDecTrState*
 - *SnowWaterGrassState*
 - *SnowWaterBSoilState*
 - *SnowWaterWaterState*
 - *SnowPackPaved*
 - *SnowPackBldgs*
 - *SnowPackEveTr*
 - *SnowPackDecTr*
 - *SnowPackGrass*
 - *SnowPackBSoil*
 - *SnowPackWater*
 - *SnowFracPaved*
 - *SnowFracBldgs*
 - *SnowFracEveTr*
 - *SnowFracDecTr*
 - *SnowFracGras*
 - *SnowFracBSoil*
 - *SnowFracWater*
 - *SnowDensPaved*
 - *SnowDensBldgs*

- *SnowDensEveTr*
- *SnowDensDecTr*
- *SnowDensGrass*
- *SnowDensBSoil*
- *SnowDensWater*

6.3.1 Soil moisture states

SoilstorePavedState

Requirement Required

Description For maximum values, see the used soil code in SUEWS_Soil.txt

Configuration to fill

SoilstoreBldgsState

Requirement Required

Description For maximum values, see the used soil code in SUEWS_Soil.txt

Configuration to fill

SoilstoreEveTrState

Requirement Required

Description For maximum values, see the used soil code in SUEWS_Soil.txt

Configuration to fill

SoilstoreDecTrState

Requirement Required

Description For maximum values, see the used soil code in SUEWS_Soil.txt

Configuration to fill

SoilstoreGrassState

Requirement Required

Description For maximum values, see the used soil code in SUEWS_Soil.txt

Configuration to fill

SoilstoreBSoilState

Requirement Required

Description For maximum values, see the used soil code in SUEWS_Soil.txt

Configuration to fill

6.3.2 Vegetation parameters

LeavesOutIntially

Requirement Optional

Description If the model run starts in winter when trees are bare, set LeavesOutInitially = 0 and the vegetation parameters will be set accordingly based on the values set in SUEWS_SiteInfo.xlsm. If the model run starts in summer when leaves are fully out, set LeavesOutInitially = 1 and the vegetation parameters will be set accordingly based on the values set in SUEWS_SiteInfo.xlsm. Not LeavesOutInitially can only be set to 0, 1 or -999 (fractional values cannot be used to indicate partial leaf-out). The value of LeavesOutInitially overrides any values provided for the individual vegetation parameters. To prevent LeavesOutInitially from setting the initial conditions, either omit it from the namelist or set to -999. If values are provided individually, they should be consistent the information provided in SUEWS_Veg.txt and the time of year. If values are provided individually, values for all required surfaces must be provided (i.e. specifying only albGrass0 but not albDecTr0 nor albEveTr0 is not permitted).

Configuration to fill

GDD_1_0

Requirement Optional

Description Cannot be negative. If leaves are already full, then this should be the same as GDDFull in SUEWS_Veg.txt. If winter, set to 0. It is important that the vegetation characteristics are set correctly (i.e. for the start of the run in summer/winter).

Configuration to fill

GDD_2_0

Requirement Optional

Description Cannot be positive If the leaves are full but in early/mid summer then set to 0. If late summer or autumn, this should be a negative value. If leaves are off, then use the values of SDDFull in SUEWS_Veg.txt to guide your minimum value. It is important that the vegetation characteristics are set correctly (i.e. for the start of the run in summer/winter).

Configuration to fill

LAIinitialEveTr

Requirement Optional

Description Initial LAI for evergreen trees. The recommended values can be found from SUEWS_Veg.txt

Configuration to fill

LAIinitialDecTr

Requirement Optional

Description Initial LAI for deciduous trees. The recommended values can be found from SUEWS_Veg.txt

Configuration to fill

LAIinitialGrass

Requirement Optional

Description Initial LAI for irrigated grass. The recommended values can be found from SUEWS_Veg.txt

Configuration to fill

albEveTr0

Requirement Optional

Description Albedo of evergreen surface on day 0 of run

Configuration to fill

albDecTr0

Requirement Optional

Description Albedo of deciduous surface on day 0 of run

Configuration to fill

albGrass0

Requirement Optional

Description Albedo of grass surface on day 0 of run

Configuration to fill

decidCap0

Requirement Optional

Description Deciduous storage capacity on day 0 of run.

Configuration to fill

porosity0

Requirement Optional

Description Porosity of deciduous vegetation on day 0 of run. This varies between 0.2 (leaf-on) and 0.6 (leaf-off).

Configuration to fill

6.3.3 Recent meteorology

DaysSinceRain

Requirement Optional

Description Important to use correct value if starting in summer season If starting when external water use is not occurring it will be reset with the first rain so can just be set to 0. If unknown, SUEWS sets to zero by default. Used to model irrigation.

Configuration to fill

Temp_C0

Requirement Optional

Description If unknown, SUEWS uses the mean temperature for the first day of the run.

Configuration to fill

6.3.4 Above Ground State

PavedState

Requirement Optional

Description If unknown, model assumes dry surfaces (acceptable as rainfall or irrigation will update these states quickly).

Configuration to fill

BldgsState

Requirement Optional

Description If unknown, model assumes dry surfaces (acceptable as rainfall or irrigation will update these states quickly).

Configuration to fill

EveTrState

Requirement Optional

Description If unknown, model assumes dry surfaces (acceptable as rainfall or irrigation will update these states quickly).

Configuration to fill

DecTrState

Requirement Optional

Description If unknown, model assumes dry surfaces (acceptable as rainfall or irrigation will update these states quickly).

Configuration to fill

GrassState

Requirement Optional

Description If unknown, model assumes dry surfaces (acceptable as rainfall or irrigation will update these states quickly).

Configuration to fill

BSoilState

Requirement Optional

Description If unknown, model assumes dry surfaces (acceptable as rainfall or irrigation will update these states quickly).

Configuration to fill

WaterState

Requirement Optional

Description For a large water body (e.g. river, sea, lake) set WaterState to a large value, e.g. 20000 mm; for small water bodies (e.g. ponds, fountains) set WaterState to smaller value, e.g. 1000 mm. This value must not exceed StateLimit specified in SUEWS_Water.txt . If unknown, model uses value of WaterDepth specified in SUEWS_Water.txt .

Configuration to fill

6.3.5 Snow related parameters

SnowInitially

Requirement Optional

Description If the model run starts when there is no snow on the ground, set SnowInitially = 0 and the snow-related parameters will be set accordingly. If the model run starts when there is snow on the ground, the following snow-related parameters must be set appropriately. The value of SnowInitially overrides any values provided for the individual snow-related parameters. To prevent SnowInitially from setting the initial conditions, either omit it from the namelist or set to -999. If values are provided individually, they should be consistent the information provided in SUEWS_Snow.txt .

Configuration to fill

SnowWaterPavedState

Requirement Optional

Description Initial amount of liquid water in the snow on paved surfaces.

Configuration to fill

SnowWaterBldgsState

Requirement Optional

Description Initial amount of liquid water in the snow on buildings

Configuration to fill

SnowWaterEveTrState

Requirement Optional

Description Initial amount of liquid water in the snow on evergreen trees

Configuration to fill

SnowWaterDecTrState

Requirement Optional

Description Initial amount of liquid water in the snow on deciduous trees

Configuration to fill

SnowWaterGrassState

Requirement Optional

Description Initial amount of liquid water in the snow on grass surfaces

Configuration to fill

SnowWaterBSoilState

Requirement Optional

Description Initial amount of liquid water in the snow on bare soil surfaces

Configuration to fill

SnowWaterWaterState

Requirement Optional

Description Initial amount of liquid water in the snow in water

Configuration to fill

SnowPackPaved

Requirement Optional

Description Initial snow water equivalent if the snow on paved surfaces

Configuration to fill

SnowPackBldgs

Requirement Optional

Description Initial snow water equivalent if the snow on buildings

Configuration to fill

SnowPackEveTr

Requirement Optional

Description Initial snow water equivalent if the snow on evergreen trees

Configuration to fill

SnowPackDecTr

Requirement Optional

Description Initial snow water equivalent if the snow on deciduous trees

Configuration to fill

SnowPackGrass

Requirement Optional

Description Initial snow water equivalent if the snow on grass surfaces

Configuration to fill

SnowPackBSoil

Requirement Optional

Description Initial snow water equivalent if the snow on bare soil surfaces

Configuration to fill

SnowPackWater

Requirement Optional

Description Initial snow water equivalent if the snow on water

Configuration to fill

SnowFracPaved

Requirement Optional

Description Initial plan area fraction of snow on paved surfaces

Configuration to fill

SnowFracBldgs

Requirement Optional

Description Initial plan area fraction of snow on buildings

Configuration to fill

SnowFracEveTr

Requirement Optional

Description Initial plan area fraction of snow on evergreen trees

Configuration to fill

SnowFracDecTr

Requirement Optional

Description Initial plan area fraction of snow on deciduous trees

Configuration to fill

SnowFracGras

Requirement Optional

Description Initial plan area fraction of snow on grass surfaces

Configuration to fill

SnowFracBSoil

Requirement Optional

Description Initial plan area fraction of snow on bare soil surfaces

Configuration to fill

SnowFracWater

Requirement Optional

Description Initial plan area fraction of snow on water

Configuration to fill

SnowDensPaved

Requirement Optional

Description Initial snow density on paved surfaces

Configuration to fill

SnowDensBldgs

Requirement Optional

Description Initial snow density on buildings

Configuration to fill

SnowDensEveTr

Requirement Optional

Description Initial snow density on evergreen trees

Configuration to fill

SnowDensDecTr

Requirement Optional

Description Initial snow density on deciduous trees

Configuration to fill

SnowDensGrass

Requirement Optional

Description Initial snow density on grass surfaces

Configuration to fill

SnowDensBSoil

Requirement Optional

Description Initial snow density on bare soil surfaces

Configuration to fill

SnowDensWater

Requirement Optional

Description Initial snow density on water

Configuration to fill

6.4 Meteorological Input File

SUEWS is designed to run using commonly measured meteorological variables.

- Required inputs must be continuous – i.e. **gap fill** any missing data.
- The table below gives the required (R) and optional (O) additional input variables.
- If an optional input variable is not available or will not be used by the model, enter ‘-999.0’ for this column.
- Since v2017a forcing files no longer need to end with two rows containing ‘-9’ in the first column.
- One single meteorological file can be used for all grids (**MultipleMetFiles=0** in *RunControl.nml*, no grid number in file name) if appropriate for the study area, or
- separate met files can be used for each grid if data are available (**MultipleMetFiles=1** in *RunControl.nml*, filename includes grid number).
- The meteorological forcing file names should be appended with the temporal resolution in minutes (SS_YYYY_data_tt.txt, or SSss_YYYY_data_tt.txt for multiple grids).
- Separate met forcing files should be provided for each year.
- Files do not need to start/end at the start/end of the year, but they must contain a whole number of days.
- The meteorological input file should match the information given in *SUEWS_SiteSelect.txt*.
- If a *partial year* is used that specific year must be given in *SUEWS_SiteSelect.txt*.
- If *multiple years* are used, all years should be included in *SUEWS_SiteSelect.txt*.
- If a *whole year* (e.g. 2011) is intended to be modelled using an hourly resolution dataset, the number of lines in the met data file should be 8760 and begin and end with:

iy	id	it	imin
2011	1	1	0 ...
...			
2012	1	0	0 ...

6.4.1 SSss_YYYY_data_tt.txt

Main meteorological data file.

No.	Use	Column name	Description
1	<i>MU</i>	iy	Year [YYYY]
2	<i>MU</i>	id	Day of year [DOY]
3	<i>MU</i>	it	Hour [H]
4	<i>MU</i>	imin	Minute [M]
5	<i>O</i>	qn	Net all-wave radiation [W m^{-2}] Required if <i>NetRadiationMethod</i> = 1.
6	<i>O</i>	qh	Sensible heat flux [W m^{-2}]
7	<i>O</i>	qe	Latent heat flux [W m^{-2}]
8	<i>O</i>	qs	Storage heat flux [W m^{-2}]
9	<i>O</i>	qf	Anthropogenic heat flux [W m^{-2}]
10	<i>MU</i>	U	Wind speed [m s^{-1}] Height of the wind speed measurement (z) is needed in <i>SUEWS_SiteSelect.txt</i> .
11	<i>MU</i>	RH	Relative Humidity [%]
12	<i>MU</i>	Tair	Air temperature [$^{\circ}\text{C}$]
13	<i>MU</i>	pres	Barometric pressure [kPa]
14	<i>MU</i>	rain	Rainfall [mm]
15	<i>MU</i>	kdown	Incoming shortwave radiation [W m^{-2}] Must be $> 0 \text{ W m}^{-2}$.
16	<i>O</i>	snow	Snow [mm] Required if <i>SnowUse</i> = 1
17	<i>O</i>	ldown	Incoming longwave radiation [W m^{-2}]
18	<i>O</i>	fcd	Cloud fraction [tenths]
19	<i>O</i>	Wuh	External water use [m^3]
20	<i>O</i>	xsmc	Observed soil moisture [$\text{m}^3 \text{ m}^{-3}$] or [kg kg^{-1}]
21	<i>O</i>	lai	Observed leaf area index [$\text{m}^{-2} \text{ m}^{-2}$]
22	<i>O</i>	kdiff	Diffuse radiation [W m^{-2}] Recommended if <i>SOLWEIGUse</i> = 1
23	<i>O</i>	kdir	Direct radiation [W m^{-2}] Recommended if <i>SOLWEIGUse</i> = 1
24	<i>O</i>	wdir	Wind direction [$^{\circ}$] Currently not implemented

6.5 CBL input files

Main references for this part of the model: Onomura et al. (2015) [*Shiho2015*] and Cleugh and Grimmond (2001) [*CG2001*].

If CBL slab model is used (*CBLuse* = 1 in *RunControl.nml*) the following files are needed.

Filename	Purpose
<i>CBL_initial_data.txt</i>	Gives initial data every morning * when CBL slab model starts running. * filename must match the InitialData_FileName in CBLInput.nml * fixed formats.
<i>CBLInput.nml</i>	Specifies run options, parameters and input file names. * Can be in any order

6.5.1 CBL_initial_data.txt

This file should give initial data every morning when CBL slab model starts running. The file name should match the InitialData_FileName in CBLInput.nml.

Definitions and example file of initial values prepared for Sacramento.

No.	Column name	Description
1	id	Day of year [DOY]
2	zi0	initial convective boundary layer height (m)
3	gamt_Km	vertical gradient of potential temperature (K m^{-1}) strength of the inversion
4	gamq_gkgm	vertical gradient of specific humidity ($\text{g kg}^{-1} \text{m}^{-1}$)
5	Theta+_K	potential temperature at the top of CBL (K)
6	q+_gkg	specific humidity at the top of CBL (g kg^{-1})
7	Theta_K	potential temperature in CBL (K)
8	q_gkg	specific humidity in CBL (g kg^{-1})

- gamt_Km and gamq_gkgm written to two significant figures are required for the model performance in appropriate ranges [Shiho2015].

id	zi0	gamt_Km	gamq_gkgm	Theta+_K	q+_gkg	theta_K	q_gkg
234	188	0.0032	0.00082	290.4	9.6	288.7	8.3
235	197	0.0089	0.089	290.2	8.4	288.3	8.7

6.5.2 CBLInput.nml

sample file of **CBLInput.nml** looks like

```
&CBLInput
EntrainmentType=1      ! 1.Tennekes and Driedonks(1981), 2.McNaughton and Springgs(1986), 3.
                        ! Rayner and Watson(1991),4.Tennekes(1973),
QH_choice=1           ! 1.suews 2.lumps 3.obs
CO2_included=0
cblday(236)=1
cblday(258)=1
cblday(259)=1
cblday(260)=1
cblday(285)=1
cblday(297)=1
wsb=-0.01
InitialData_use=1
InitialDataFileName='CBLinputfiles/CBL_initial_data.txt'
sondeflag=0
FileSonde(234)='CBLinputfiles\Sonde_Sc_1991_0822_0650.txt'
FileSonde(235)='CBLinputfiles\Sonde_Sc_1991_0823_0715.txt'
FileSonde(236)='CBLinputfiles\Sonde_Sc_1991_0824_0647.txt'
FileSonde(238)='CBLinputfiles\Sonde_Sc_1991_0826_0642.txt'
FileSonde(239)='CBLinputfiles\Sonde_Sc_1991_0827_0640.txt'
FileSonde(240)='CBLinputfiles\Sonde_Sc_1991_0828_0640.txt'
/
```

Note: The file contents can be in any order.

The parameters and their setting instructions are provided through *the links below*:

- *EntrainmentType*
- *QH_Choice*
- *InitialData_use*
- *Sondeflag*
- *CBLday(id)*
- *CO2_included*
- *FileSonde(id)*
- *InitialDataFileName*
- *Wsb*

CBLinput

EntrainmentType

Requirement Required

Description Determines entrainment scheme. See Cleugh and Grimmond 2000 [16] for details.

Configuration

Value	Comments
1	Tennekes and Driedonks (1981) - Recommended
2	McNaughton and Springs (1986)
3	Rayner and Watson (1991)
4	Tennekes (1973)

QH_Choice

Requirement Required

Description Determines QH used for CBL model.

Configuration

Value	Comments
1	QH modelled by SUEWS
2	QH modelled by LUMPS
3	Observed QH values are used from the meteorological input file

InitialData_use

Requirement Required

Description Determines initial values (see *CBL_initial_data.txt*)

Configuration

Value	Comments
0	All initial values are calculated. (Not available in current release.)
1	Take zi0, gamt_Km and gamq_gkgm from input data file. Theta+_K, q+_gkg, Theta_K and q_gkg are calculated using Temp_C, avrh and Pres_kPa in meteorological input file.
2	Take all initial values from input data file (see CBL_Initial_data.txt).

Sondeflag**Requirement** Required**Description** to fill**Configuration**

Value	Comments
0	Does not read radiosonde vertical profile data - recommended
1	Reads radiosonde vertical profile data

CBLday(id)**Requirement** Required**Description** Set CBLday(id) = 1 If CBL model is set to run for DOY 175–177, CBLday(175) = 1, CBLday(176) = 1, CBLday(177) = 1**Configuration** to fill**CO2_included****Requirement** Required**Description** Set to zero in current version**Configuration** to fill**FileSonde(id)****Requirement** Required**Description** If Sondeflag=1, write the file name including the path from site directory e.g. FileSonde(id)= 'CBLinputfilesXXX.txt', XXX is an arbitrary name.**Configuration** to fill**InitialDataFileName****Requirement** Required**Description** If InitialData_use 1, write the file name including the path from site directory e.g. InitialDataFileName='CBLinputfilesCBL_initial_data.txt'**Configuration** to fill**Wsb****Requirement** Required**Description** Subsidence velocity (m s^{-1}) in eq. 1 and 2 of Onomura et al. (2015) [17] . (-0.01 m s^{-1} recommended)**Configuration** to fill

6.6 ESTM-related files

6.6.1 SUEWS_ESTMCoefficients.txt

Note ESTM is under development in v2017a and should not be used!

The Element Surface Temperature Method (ESTM) (Offerle et al., 2005) calculates the net storage heat flux from surface temperatures. In the method the three-dimensional urban volume is reduced to four 1-d elements (i.e. building roofs, walls, and internal mass and ground (road, vegetation, etc)). The storage heat flux is calculated from the heat conduction through the different elements. For the inside surfaces of the roof and walls, and both surfaces for the internal mass (ceilings/floors, internal walls), the surface temperature of the element is determined by setting the conductive heat transfer out of (in to) the surface equal to the radiative and convective heat losses (gains). Each element (roof, wall, internal element and ground) can have maximum five layers and each layer has three parameters tied to it: thickness (x), thermal conductivity (k), volumetric heat capacity (rhoCp).

If ESTM is used (QSchoice=4), the files *SUEWS_ESTMCoefficients.txt*, *ESTMinput.nml* and *SSss_YYYY_ESTM_Ts_data_tt.txt* should be prepared.

SUEWS_ESTMCoefficients.txt contains the parameters for the layers of each of the elements (roofs, wall, ground, internal mass).

- If less than five layers are used, the parameters for unused layers should be set to -999.
- The ESTM coefficients with the prefix *Surf_* must be specified for each surface type (plus snow) but the *Wall_* and *Internal_* variables apply to the building surfaces only.
- For each grid, one set of ESTM coefficients must be specified for each surface type; for paved and building surfaces it is possible to specify up to three and five sets of coefficients per grid (e.g. to represent different building materials) using the relevant columns in *SUEWS_SiteSelect.txt*. For the model to use these columns in site select, the ESTMCode column in *SUEWS_NonVeg.txt* should be set to zero.

Note ESTM is under development in v2017a and should not be used!

The following input files are required if ESTM is used to calculate the storage heat flux.

6.6.2 ESTMinput.nml

ESTMinput.nml specifies the model settings and default values.

A sample file of **ESTMinput.nml** looks like

```
&ESTMinput
TsurfChoice= 0
evolveTibld= 0      ! !!!!!F0!!!! 0 originally
ibldCHmod  = 0
LBC_soil   = 13.00      !!F0!! 4, 8 or 17 degC - could be set as the annual mean air
↳temperature (12.8 degC for London)
THEAT_ON   = 18.
THEAT_OFF  = 22.
THEAT_FIX  = 19.
/
```

Note: The file contents can be in any order.

The parameters and their setting instructions are provided through *the links below*:

- [*TsurfChoice*](#)
- [*evolveTibld*](#)
- [*IbldCHmod*](#)
- [*LBC_soil*](#)
- [*Theat_fix*](#)
- [*Theat_off*](#)
- [*Theat_on*](#)

ESTMinput

TsurfChoice

Requirement Required

Description Source of surface temperature data used.

Configuration

Value	Comments
0	<i>Tsurf</i> in <i>SSss_YYYY_ESTM_Ts_data_tt.txt</i> used for all surface elements.
1	Input surface temperature are different for ground, roof and wall.
2	Wall surface temperature is different for four directions.

evolveTibld

Requirement Required

Description Source of internal building temperature (Tibld)

Configuration

Value	Comments
0	<i>Tiair</i> in <i>SSss_YYYY_ESTM_Ts_data_tt.txt</i> used.
1	Tibld calculated considering the effect of anthropogenic heat from HVAC
2	Tibld calculated without considering the influence of HVAC.

IbldCHmod

Requirement Required

Description Method to calculate internal convective heat exchange coefficients (CH) for internal building, wall and roof if evolveTibld is 1 or 2.

Configuration

Value	Comments
0	CHs are read from SUEWS_ESTMcoefficients.txt.
1	CHs are calculated based on ASHRAE (2001)
2	CHs are calculated based on Awbi (1998).

LBC_soil

Requirement Required

Description Soil temperature at lowest boundary condition [° C]

Configuration to fill

Theat_fix

Requirement Required

Description Ideal internal building temperature [° C]

Configuration to fill

Theat_off

Requirement Required

Description Temperature at which heat control is turned off (used when evolveTibld=1)
[° C]

Configuration to fill

Theat_on

Requirement Required

Description Temperature at which heat control is turned on (used when evolveTibld =1)
[° C]

Configuration to fill

6.6.3 SSss_YYYY_ESTM_Ts_data_tt.txt

SSss_YYYY_ESTM_Ts_data_tt.txt contains a time-series of input surface temperature for roof, wall, ground and internal elements.

No.	Column Name	Use	Description
1	<i>iy</i>	<i>MU</i>	Year [YYYY]
2	<i>id</i>	<i>MU</i>	Day of year [DOY]
3	<i>it</i>	<i>MU</i>	Hour [H]
4	<i>imin</i>	<i>MU</i>	Minute [M]
5	<i>Tiair</i>	<i>MU</i>	Indoor air temperature [° C]
6	<i>Tsurf</i>	<i>MU</i>	Bulk surface temperature [° C] (used when TsurfChoice = 0)
7	<i>Troof</i>	<i>MU</i>	Roof surface temperature [° C] (used when TsurfChoice = 1 or 2)
8	<i>Troad</i>	<i>MU</i>	Ground surface temperature [° C] (used when TsurfChoice = 1 or 2)
9	<i>Twall</i>	<i>MU</i>	Wall surface temperature [° C] (used when TsurfChoice = 1)
10	<i>Twall_n</i>	<i>MU</i>	North-facing wall surface temperature [° C] (used when TsurfChoice = 2)
11	<i>Twall_e</i>	<i>MU</i>	East-facing wall surface temperature [° C] (used when TsurfChoice = 2)
12	<i>Twall_s</i>	<i>MU</i>	South-facing wall surface temperature [° C] (used when TsurfChoice = 2)
13	<i>Twall_w</i>	<i>MU</i>	West-facing wall surface temperature [° C] (used when TsurfChoice = 2)

6.7 SOLWEIG input files

If the SOLWEIG model option is used (SOLWEIGout=1), spatial data and a SOLWEIGInput.nml file need to be prepared. The Digital Surface Models (DSMs) as well as derivatives originating from DSMs, e.g. Sky View Factors (SVF) must have the same spatial resolution and extent. Since SOLWEIG is a 2D model it will considerably increase computation time and should be used with care.

Description of choices in SOLWEIGinput_file.nml file. The file can be in any order.

- *SOLWEIGinput*
 - *Posture*
 - *usevegdem*
 - *onlyglobal*
 - *SOLWEIGpoi_out*
 - *Tmrt_out*
 - *Lup2d_out*
 - *Ldown2d_out*
 - *Kup2d_out*
 - *Kdown2d_out*
 - *GVF_out*
 - *SOLWEIG_ldown*
 - *RunForGrid*
 - *absK*
 - *absL*
 - *BuildingName*
 - *CDSMname*
 - *col*
 - *DSMname*
 - *DSMPath*
 - *heightgravity*
 - *OutInterval*
 - *row*
 - *SVFPath*
 - *SVFSuffix*
 - *TDSMname*
 - *TransMax*
 - *TransMin*

6.7.1 SOLWEIGinput

Posture

Requirement Required

Description Determines the posture of a human for which the radiant fluxes should be considered

Configuration

Value	Comments
1	Standing (default)
2	Sitting

usevegdem

Requirement Required

Description Vegetation scheme

Configuration

Value	Comments
1	Vegetation scheme is active (Lindberg and Grimmond 2011 [19])
2	No vegetation scheme used

onlyglobal

Requirement Required

Description Global radiation

Configuration

Value	Comments
0	Diffuse and direct shortwave radiation taken from met forcing file.
1	Diffuse and direct shortwave radiation calculated from Reindl et al. (1990) [41]

SOLWEIGpoi_out

Requirement Required

Description Write output variables at point of interest (see below)

Configuration

Value	Comments
0	No POI output

Tmrt_out

Requirement Required

Description

•

Configuration

Value	Comments
0	No grid output
1	Write grid to file (saves as ERSI Ascii grid)

Lup2d_out

Requirement Required

Description

•

Configuration

Value	Comments
0	No grid output
1	Write grid to file (saves as ERSI Ascii grid)

Ldown2d_out

Requirement Required

Description

-

Configuration

Value	Comments
0	No grid output
1	Write grid to file (saves as ERSI Ascii grid)

Kup2d_out

Requirement Required

Description

-

Configuration

Value	Comments
0	No grid output
1	Write grid to file (saves as ERSI Ascii grid)

Kdown2d_out

Requirement Required

Description

-

Configuration

Value	Comments
0	No grid output
1	Write grid to file (saves as ERSI Ascii grid)

GVF_out

Requirement Required

Description

-

Configuration

Value	Comments
0	No grid output
1	Write grid to file (saves as ERSI Ascii grid)

SOLWEIG_1down

Requirement Required

Description

-

Configuration

Value	Comments
0	Not active (use SUEWS to estimate Ldown above canyon)
1	Use SOLWEIG to estimate Ldown above canyon

RunForGrid

Requirement Required

Description Grid for which SOLWEIG should be run.

Configuration

Value	Comments
-999	All grids (use with care)

absK

Requirement Required

Description Recommended value: 0.70

Configuration to fill

absL

Requirement Required

Description Recommended value: 0.97

Configuration to fill

BuildingName

Requirement Required

Description Boolean matrix for locations of building pixels

Configuration to fill

CDSMname

Requirement Required

Description Vegetation canopy DSM

Configuration to fill

col

Requirement Required

Description Y coordinate for point of interest. Here all variables from the model will
written to SOLWEIGpoiOUT.txt

Configuration to fill

DSMname

Requirement Required

Description Ground and Building DSM

Configuration to fill

DSMPath

Requirement Required

Description Path to Digital Surface Models (DSM).

Configuration to fill

heightgravity

Requirement Required

Description Recommended value for a standing man: 1.1 m

Configuration to fill

OutInterval

Requirement Required

Description Output interval. Set to 60 in current version.

Configuration to fill

row

Requirement Required

Description X coordinate for point of interest. Here all variables from the model will
written to SOLWEIGpoiOUT.txt

Configuration to fill

SVFPath

Requirement Required

Description Path to SVFs matrices (See Lindberg and Grimmond (2011) [19] for details)

Configuration to fill

SVFSuffix

Requirement Required

Description Suffix used (if any)

Configuration to fill

TDSMname

Requirement Required

Description Vegetation trunk zone DSM

Configuration to fill

TransMax

Requirement Required

Description Recommended value: 0.50 (Konarska et al. 2014 [40])

Configuration to fill

TransMin

Requirement Required

Description Recommended value: 0.02 (Konarska et al. 2014 [40])

Configuration to fill

OUTPUT FILES

7.1 Runtime diagnostic information

7.1.1 Error messages: problems.txt

see this *Output files*

If there are problems running the program serious error messages will be written to problems.txt.

- Serious problems will usually cause the program to stop after writing the error message. If this is the case, the last line of problems.txt will contain a non-zero number (the error code).
- If the program runs successfully, problems.txt file ends with:

```
Run completed.  
0
```

SUEWS has a large number of error messages included to try to capture common errors to help the user determine what the problem is. If you encounter an error that does not provide an error message please capture the details so we can hopefully provide better error messages in future.

See *Troubleshooting* section for help solving problems. If the file paths are not correct the program will return an error when run (see *Preparing to run the model*).

7.1.2 Warning messages: warnings.txt

- If the program encounters a more minor issue it will not stop but a warning may be written to warnings.txt. It is advisable to check the warnings to ensure there is not a more serious problem.
- The warnings.txt file can be large (over several GBs) given warning messages are written out during a large scale simulation, you can use `tail/head` to view the ending/starting part without opening the whole file on Unix-like systems (Linux/mac OS), which may slow down your system.
- To prevent warnings.txt from being written, set **SuppressWarnings** to 1 in *RunControl.nml*.
- Warning messages are usually written with a grid number, timestamp and error count. If the problem occurs in the initial stages (i.e. before grid numbers and timestamps are assigned, these are printed as 00000).

7.1.3 Summary of model parameters: SS_FileChoices.txt

For each run, the model parameters specified in the input files are written out to the file SS_FileChoices.txt.

7.2 Model output files

7.2.1 SSss_YYYY_TT.txt

SUEWS produces the main output file (SSss_YYYY_tt.txt) with time resolution (TT min) set by **ResolutionFilesOut** in *RunControl.nml*.

Before these main data files are written out, SUEWS provides a summary of the column names, units and variables included in the file Ss_YYYY_TT_OutputFormat.txt (one file per run).

The variables included in the main output file are determined according to *WriteOutOption* set in *RunControl.nml*.

Column	Name	WriteOutOption	Description
1	Year	0,1,2	Year [YYYY]
2	DOY	0,1,2	Day of year [DOY]
3	Hour	0,1,2	Hour [H]
4	Min	0,1,2	Minute [M]
5	Dectime	0,1,2	Decimal time [-]
6	Kdown	0,1,2	Incoming shortwave radiation [W m^{-2}]
7	Kup	0,1,2	Outgoing shortwave radiation [W m^{-2}]
8	Ldown	0,1,2	Incoming longwave radiation [W m^{-2}]
9	Lup	0,1,2	Outgoing longwave radiation [W m^{-2}]
10	Tsurf	0,1,2	Bulk surface temperature [$^{\circ}\text{C}$]
11	QN	0,1,2	Net all-wave radiation [W m^{-2}]
12	QF	0,1,2	Anthropogenic heat flux [W m^{-2}]
13	QS	0,1,2	Storage heat flux [W m^{-2}]
14	QH	0,1,2	Sensible heat flux (calculated using SUEWS) [W m^{-2}]
15	QE	0,1,2	Latent heat flux (calculated using SUEWS) [W m^{-2}]
16	QHlumps	0,1	Sensible heat flux (calculated using LUMPS) [W m^{-2}]
17	QElumps	0,1	Latent heat flux (calculated using LUMPS) [W m^{-2}]
18	QHresis	0,1	Sensible heat flux (calculated using resistance method) [W m^{-2}]
19	Rain	0,1,2	Rain [mm]
20	Irr	0,1,2	Irrigation [mm]
21	Evap	0,1,2	Evaporation [mm]
22	RO	0,1,2	Runoff [mm]
23	TotCh	0,1,2	Change in surface and soil moisture stores [mm]
24	SurfCh	0,1,2	Change in surface moisture store [mm]
25	State	0,1,2	Surface wetness state [mm]
26	NWtrState	0,1,2	Surface wetness state (for non-water surfaces) [mm]
27	Drainage	0,1,2	Drainage [mm]
28	SMD	0,1,2	Soil moisture deficit [mm]
29	FlowCh	0,1	Additional flow into water body [mm]
30	AddWater	0,1	Additional water flow received from other grids [mm]
31	ROSoil	0,1	Runoff to soil (sub-surface) [mm]
32	ROPipe	0,1	Runoff to pipes [mm]
33	ROImp	0,1	Above ground runoff over impervious surfaces [mm]
34	ROVeg	0,1	Above ground runoff over vegetated surfaces [mm]
35	ROWater	0,1	Runoff for water body [mm]
36	WUInt	0,1	Internal water use [mm]
37	WUEveTr	0,1	Water use for irrigation of evergreen trees [mm]

Continued on next page

Table 7.1 – continued from previous page

Column	Name	WriteOutOption	Description
38	WUDecTr	0,1	Water use for irrigation of deciduous trees [mm]
39	WUGrass	0,1	Water use for irrigation of grass [mm]
40	SMDPaved	0,1	Soil moisture deficit for paved surface [mm]
41	SMDBldgs	0,1	Soil moisture deficit for building surface [mm]
42	SMDEveTr	0,1	Soil moisture deficit for evergreen surface [mm]
43	SMDDecTr	0,1	Soil moisture deficit for deciduous surface [mm]
44	SMDGrass	0,1	Soil moisture deficit for grass surface [mm]
45	SMDBSoil	0,1	Soil moisture deficit for bare soil surface [mm]
46	StPaved	0,1	Surface wetness state for paved surface [mm]
47	StBldgs	0,1	Surface wetness state for building surface [mm]
48	StEveTr	0,1	Surface wetness state for evergreen tree surface [mm]
49	StDecTr	0,1	Surface wetness state for deciduous tree surface [mm]
50	StGrass	0,1	Surface wetness state for grass surface [mm]
51	StBSoil	0,1	Surface wetness state for bare soil surface [mm]
52	StWater	0,1	Surface wetness state for water surface [mm]
53	Zenith	0,1,2	Solar zenith angle [°]
54	Azimuth	0,1,2	Solar azimuth angle [°]
55	AlbBulk	0,1,2	Bulk albedo [-]
56	Fcld	0,1,2	Cloud fraction [-]
57	LAI	0,1,2	Leaf area index [$\text{m}^2 \text{m}^{-2}$]
58	z0m	0,1	Roughness length for momentum [m]
59	zdm	0,1	Zero-plane displacement height [m]
60	ustar	0,1,2	Friction velocity [m s^{-1}]
61	Lob	0,1,2	Obukhov length [m]
62	ra	0,1	Aerodynamic resistance [s m^{-1}]
63	rs	0,1	Surface resistance [s m^{-1}]
64	Fc	0,1,2	CO ₂ flux [$\text{umol m}^{-2} \text{s}^{-1}$] Do not use in v2017b!
65	FcPhoto	0,1	CO ₂ flux from photosynthesis [$\text{umol m}^{-2} \text{s}^{-1}$] Do not use in v2017b!
66	FcRespi	0,1	CO ₂ flux from respiration [$\text{umol m}^{-2} \text{s}^{-1}$] Do not use in v2017b!
67	FcMetab	0,1	CO ₂ flux from metabolism [$\text{umol m}^{-2} \text{s}^{-1}$] Do not use in v2017b!
68	FcTraff	0,1	CO ₂ flux from traffic [$\text{umol m}^{-2} \text{s}^{-1}$] Do not use in v2017b!
69	FcBuild	0,1	CO ₂ flux from buildings [$\text{umol m}^{-2} \text{s}^{-1}$] Do not use in v2017b!
70	QNSnowFr	1	Net all-wave radiation for snow-free area [W m^{-2}]
71	QNSnow	1	Net all-wave radiation for snow area [W m^{-2}]
72	AlbSnow	1	Snow albedo [-]
73	QM	1	Snow-related heat exchange [W m^{-2}]
74	QMFreeze	1	Internal energy change [W m^{-2}]
75	QMRain	1	Heat released by rain on snow [W m^{-2}]
76	SWE	1	Snow water equivalent [mm]
77	MeltWater	1	Meltwater [mm]
78	MeltWStore	1	Meltwater store [mm]
79	SnowCh	1	Change in snow pack [mm]
80	SnowRPaved	1	Snow removed from paved surface [mm]
81	SnowRBldgs	1	Snow removed from building surface [mm]
82	T2	0,1,2	Air temperature at 2 m agl [°C]
83	Q2	0,1,2	Air specific humidity at 2 m agl [g kg^{-1}]
84	U10	0,1,2	Wind speed at 10 m agl [m s^{-1}]

7.2.2 SSss_YYYY_nn_TT.nc

UEWS can also produce the main output file in netCDF format by setting ncMode=1 (set in *RunControl*).

As the date and time information is incorporated in the netCDF output as separate dimension, the first five variables in the normal text output file (in .txt) are not included in the netCDF output but other variables are all kept.

N.B., considering the file size limit by the classic netCDF format, the output frequency is determined automatically by the internal SUEWS program setting to avoid the oversize problem in the netCDF files.

7.2.3 SSss_DailyState.txt

Contains information about the state of the surface and soil and vegetation parameters at a time resolution of one day. One file is written for each grid so it may contain multiple years.

Column	Name	Description
1	iy	Year [YYYY]
2	id	Day of year [DOY]
3	HDD1_h	Heating degree days [°C]
4	HDD2_c	Cooling degree days [°C]
5	HDD3_Tmean	Average daily air temperature [°C]
6	HDT4_T5d	5-day running-mean air temperature [°C]
7	P/day	Daily total precipitation [mm]
8	DaysSR	Days since rain [days]
9	GDD1_g	Growing degree days for leaf growth [°C]
10	GDD2_s	Growing degree days for senescence [°C]
11	GDD3_Tmin	Daily minimum temperature [°C]
12	GDD4_Tmax	Daily maximum temperature [°C]
13	GDD5_DayLHrs	Day length [h]
14	LAI_EveTr	Leaf area index of evergreen trees [m ⁻² m ⁻²]
15	LAI_DecTr	Leaf area index of deciduous trees [m ⁻² m ⁻²]
16	LAI_Grass	Leaf area index of grass [m ⁻² m ⁻²]
17	DecidCap	Moisture storage capacity of deciduous trees [mm]
18	Porosity	Porosity of deciduous trees [-]
19	AlbEveTr	Albedo of evergreen trees [-]
20	AlbDecTr	Albedo of deciduous trees [-]
21	AlbGrass	Albedo of grass [-]
22	WU_EveTr(1)	Total water use for evergreen trees [mm]
23	WU_EveTr(2)	Automatic water use for evergreen trees [mm]
24	WU_EveTr(3)	Manual water use for evergreen trees [mm]
25	WU_DecTr(1)	Total water use for deciduous trees [mm]
26	WU_DecTr(2)	Automatic water use for deciduous trees [mm]
27	WU_DecTr(3)	Manual water use for deciduous trees [mm]
28	WU_Grass(1)	Total water use for grass [mm]
29	WU_Grass(2)	Automatic water use for grass [mm]
30	WU_Grass(3)	Manual water use for grass [mm]
31	deltaLAI	Change in leaf area index (normalised 0-1) [-]
32	LAIlumps	Leaf area index used in LUMPS (normalised 0-1) [-]
33	AlbSnow	Snow albedo [-]
34	DensSnow_Paved	Snow density - paved surface [kg m ⁻³]
35	DensSnow_Bldgs	Snow density - building surface [kg m ⁻³]

Continued on next page

Table 7.2 – continued from previous page

Column	Name	Description
36	DensSnow_EveTr	Snow density - evergreen surface [kg m^{-3}]
37	DensSnow_DecTr	Snow density - deciduous surface [kg m^{-3}]
38	DensSnow_Grass	Snow density - grass surface [kg m^{-3}]
39	DensSnow_BSoil	Snow density - bare soil surface [kg m^{-3}]
40	DensSnow_Water	Snow density - water surface [kg m^{-3}]

7.2.4 InitialConditionsSSss_YYYY.nml

At the end of the model run (or the end of each year in the model run) a new InitialConditions file is written out (to the input folder) for each grid, see *Initial Conditions file*

7.2.5 SSss_YYYY_snow_TT.txt

SUEWS produces a separate output file for snow (when snowUse = 1 in RunControl.nml) with details for each surface type.

File format of SSss_YYYY_snow_60.txt

Column	Name	Description
1	iy	Year [YYYY]
2	id	Day of year [DOY]
3	it	Hour [H]
4	imin	Minute [M]
5	dectime	Decimal time [-]
6	SWE_Paved	Snow water equivalent – paved surface [mm]
7	SWE_Bldgs	Snow water equivalent – building surface [mm]
8	SWE_EveTr	Snow water equivalent – evergreen surface [mm]
9	SWE_DecTr	Snow water equivalent – deciduous surface [mm]
10	SWE_Grass	Snow water equivalent – grass surface [mm]
11	SWE_BSoil	Snow water equivalent – bare soil surface [mm]
12	SWE_Water	Snow water equivalent – water surface [mm]
13	Mw_Paved	Meltwater – paved surface [mm h^{-1}]
14	Mw_Bldgs	Meltwater – building surface [mm h^{-1}]
15	Mw_EveTr	Meltwater – evergreen surface [mm h^{-1}]
16	Mw_DecTr	Meltwater – deciduous surface [mm h^{-1}]
17	Mw_Grass	Meltwater – grass surface [mm h^{-1}]
18	Mw_BSoil	Meltwater – bare soil surface [mm h^{-1}]
19	Mw_Water	Meltwater – water surface [mm h^{-1}]
20	Qm_Paved	Snowmelt-related heat – paved surface [W m^{-2}]
21	Qm_Bldgs	Snowmelt-related heat – building surface [W m^{-2}]
22	Qm_EveTr	Snowmelt-related heat – evergreen surface [W m^{-2}]
23	Qm_DecTr	Snowmelt-related heat – deciduous surface [W m^{-2}]
24	Qm_Grass	Snowmelt-related heat – grass surface [W m^{-2}]
25	Qm_BSoil	Snowmelt-related heat – bare soil surface [W m^{-2}]
26	Qm_Water	Snowmelt-related heat – water surface [W m^{-2}]
27	Qa_Paved	Advective heat – paved surface [W m^{-2}]
28	Qa_Bldgs	Advective heat – building surface [W m^{-2}]
29	Qa_EveTr	Advective heat – evergreen surface [W m^{-2}]

Continued on next page

Table 7.3 – continued from previous page

Column	Name	Description
30	Qa_DecTr	Advective heat – deciduous surface [W m^{-2}]
31	Qa_Grass	Advective heat – grass surface [W m^{-2}]
32	Qa_BSoil	Advective heat – bare soil surface [W m^{-2}]
33	Qa_Water	Advective heat – water surface [W m^{-2}]
34	QmFr_Paved	Heat related to freezing of surface store – paved surface [W m^{-2}]
35	QmFr_Bldgs	Heat related to freezing of surface store – building surface [W m^{-2}]
36	QmFr_EveTr	Heat related to freezing of surface store – evergreen surface [W m^{-2}]
37	QmFr_DecTr	Heat related to freezing of surface store – deciduous surface [W m^{-2}]
38	QmFr_Grass	Heat related to freezing of surface store – grass surface [W m^{-2}]
39	QmFr_BSoil	Heat related to freezing of surface store – bare soil surface [W m^{-2}]
40	QmFr_Water	Heat related to freezing of surface store – water [W m^{-2}]
41	fr_Paved	Fraction of snow – paved surface [-]
42	fr_Bldgs	Fraction of snow – building surface [-]
43	fr_EveTr	Fraction of snow – evergreen surface [-]
44	fr_DecTr	Fraction of snow – deciduous surface [-]
45	fr_Grass	Fraction of snow – grass surface [-]
46	fr_BSoil	Fraction of snow – bare soil surface [-]
47	RainSn_Paved	Rain on snow – paved surface [mm]
48	RainSn_Bdgs	Rain on snow – building surface [mm]
49	RainSn_EveTr	Rain on snow – evergreen surface [mm]
50	RainSn_DecTr	Rain on snow – deciduous surface [mm]
51	RainSn_Grass	Rain on snow – grass surface [mm]
52	RainSn_BSoil	Rain on snow – bare soil surface [mm]
53	RainSn_Water	Rain on snow – water surface [mm]
54	qn_PavedSnow	Net all-wave radiation – paved surface [W m^{-2}]
55	qn_BldgsSnow	Net all-wave radiation – building surface [W m^{-2}]
56	qn_EveTrSnow	Net all-wave radiation – evergreen surface [W m^{-2}]
57	qn_DecTrSnow	Net all-wave radiation – deciduous surface [W m^{-2}]
58	qn_GrassSnow	Net all-wave radiation – grass surface [W m^{-2}]
59	qn_BSoilSnow	Net all-wave radiation – bare soil surface [W m^{-2}]
60	qn_WaterSnow	Net all-wave radiation – water surface [W m^{-2}]
61	kup_PavedSnow	Reflected shortwave radiation – paved surface [W m^{-2}]
62	kup_BldgsSnow	Reflected shortwave radiation – building surface [W m^{-2}]
63	kup_EveTrSnow	Reflected shortwave radiation – evergreen surface [W m^{-2}]
64	kup_DecTrSnow	Reflected shortwave radiation – deciduous surface [W m^{-2}]
65	kup_GrassSnow	Reflected shortwave radiation – grass surface [W m^{-2}]
66	kup_BSoilSnow	Reflected shortwave radiation – bare soil surface [W m^{-2}]
67	kup_WaterSnow	Reflected shortwave radiation – water surface [W m^{-2}]
68	frMelt_Paved	Amount of freezing melt water – paved surface [mm]
69	frMelt_Bldgs	Amount of freezing melt water – building surface [mm]
70	frMelt_EveTr	Amount of freezing melt water – evergreen surface [mm]
71	frMelt_DecTr	Amount of freezing melt water – deciduous surface [mm]
72	frMelt_Grass	Amount of freezing melt water – grass surface [mm]
73	frMelt_BSoil	Amount of freezing melt water – bare soil surface [mm]
74	frMelt_Water	Amount of freezing melt water – water surface [mm]
75	MwStore_Paved	Melt water store – paved surface [mm]
76	MwStore_Bldgs	Melt water store – building surface [mm]
77	MwStore_EveTt	Melt water store – evergreen surface [mm]
78	MwStore_DecTr	Melt water store – deciduous surface [mm]

Continued on next page

Table 7.3 – continued from previous page

Column	Name	Description
79	MwStore_Grass	Melt water store – grass surface [mm]
80	MwStore_BSoil	Melt water store – bare soil surface [mm]
81	MwStore_Water	Melt water store – water surface [mm]
82	DensSnow_Paved	Snow density – paved surface [kg m^{-3}]
83	DensSnow_Bldgs	Snow density – building surface [kg m^{-3}]
84	DensSnow_EveTr	Snow density – evergreen surface [kg m^{-3}]
85	DensSnow_DecTr	Snow density – deciduous surface [kg m^{-3}]
86	DensSnow_Grass	Snow density – grass surface [kg m^{-3}]
87	DensSnow_BSoil	Snow density – bare soil surface [kg m^{-3}]
88	DensSnow_Water	Snow density – water surface [kg m^{-3}]
89	Sd_Paved	Snow depth – paved surface [mm]
90	Sd_Bldgs	Snow depth – building surface [mm]
91	Sd_EveTr	Snow depth – evergreen surface [mm]
92	Sd_DecTr	Snow depth – deciduous surface [mm]
93	Sd_Grass	Snow depth – grass surface [mm]
94	Sd_BSoil	Snow depth – bare soil surface [mm]
95	Sd_Water	Snow depth – water surface [mm]
96	Tsnow_Paved	Snow surface temperature – paved surface [$^{\circ}\text{C}$]
97	Tsnow_Bldgs	Snow surface temperature – building surface [$^{\circ}\text{C}$]
98	Tsnow_EveTr	Snow surface temperature – evergreen surface [$^{\circ}\text{C}$]
99	Tsnow_DecTr	Snow surface temperature – deciduous surface [$^{\circ}\text{C}$]
100	Tsnow_Grass	Snow surface temperature – grass surface [$^{\circ}\text{C}$]
101	Tsnow_BSoil	Snow surface temperature – bare soil surface [$^{\circ}\text{C}$]
102	Tsnow_Water	Snow surface temperature – water surface [$^{\circ}\text{C}$]

7.2.6 SSss_YYYY_BL.txt

Meteorological variables modelled by CBL portion of the model are output in to this file created for each day with time step (see section CBL Input).

Column	Name	Description	Units
1	iy	Year [YYYY]	
2	id	Day of year [DoY]	
3	it	Hour [H]	
4	imin	Minute [M]	
5	dectime	Decimal time [-]	
6	zi	Convective boundary layer height	m
7	Theta	Potential temperature in the inertial sublayer	K
8	Q	Specific humidity in the inertial sublayer	g kg ⁻¹
9	theta+	Potential temperature just above the CBL	K
10	q+	Specific humidity just above the CBL	g kg ⁻¹
11	Temp_C	Air temperature	°C
12	RH	Relative humidity	%
13	QH_use	Sensible heat flux used for calculation	W m ⁻²
14	QE_use	Latent heat flux used for calculation	W m ⁻²
15	Press_hPa	Pressure used for calculation	hPa
16	avul	Wind speed used for calculation	m s ⁻¹
17	ustar	Friction velocity used for calculation	m s ⁻¹
18	avdens	Air density used for calculation	kg m ⁻³
19	lv_J_kg	Latent heat of vaporization used for calculation	J kg ⁻¹
20	avcp	Specific heat capacity used for calculation	J kg ⁻¹ K ⁻¹
21	gamt	Vertical gradient of potential temperature	K m ⁻¹
22	gamq	Vertical gradient of specific humidity	kg kg ⁻¹ m ⁻¹

7.2.7 SOLWEIGpoiOut.txt

Calculated variables from POI, point of interest (row, col) stated in SOLWEIGinput.nml.

SOLWEIG model output file format: SOLWEIGpoiOUT.txt

Column	Name	Description	Units
1	id	Day of year	
2	dectime	Decimal time	
3	azimuth	Azimuth angle of the Sun	°
4	altitude	Altitude angle of the Sun	°
5	GlobalRad	Input Kdn	W m ⁻²
6	DiffuseRad	Diffuse shortwave radiation	W m ⁻²
7	DirectRad	Direct shortwave radiation	W m ⁻²
8	Kdown2d	Incoming shortwave radiation at POI	W m ⁻²
9	Kup2d	Outgoing shortwave radiation at POI	W m ⁻²
10	Ksouth	Shortwave radiation from south at POI	W m ⁻²
11	Kwest	Shortwave radiation from west at POI	W m ⁻²
12	Knorth	Shortwave radiation from north at POI	W m ⁻²
13	Keast	Shortwave radiation from east at POI	W m ⁻²
14	Ldown2d	Incoming longwave radiation at POI	W m ⁻²
15	Lup2d	Outgoing longwave radiation at POI	W m ⁻²
16	Lsouth	Longwave radiation from south at POI	W m ⁻²
17	Lwest	Longwave radiation from west at POI	W m ⁻²
18	Lnorth	Longwave radiation from north at POI	W m ⁻²
19	Least	Longwave radiation from east at POI	W m ⁻²
20	Tmrt	Mean Radiant Temperature	°C
21	I0	theoretical value of maximum incoming solar radiation	W m ⁻²
22	CI	clearness index for Ldown (Lindberg et al. 2008)	
23	gvf	Ground view factor (Lindberg and Grimmond 2011)	
24	shadow	Shadow value (0= shadow, 1 = sun)	
25	svf	Sky View Factor from ground and buildings	
26	svfbuveg	Sky View Factor from ground, buildings and vegetation	
27	Ta	Air temperature	°C
28	Tg	Surface temperature	°C

7.2.8 SSss_YYYY_ESTM_TT.txt

If the ESTM model option is run, the following output file is created. **Note: First time steps of storage output could give NaN values during the initial converging phase.**

ESTM output file format

Column	Name	Description	Units
1	iy	Year	
2	id	Day of year	
3	it	Hour	
4	imin	Minute	
5	dectime	Decimal time	
6	QSnet	Net storage heat flux (QSwall+QSGround+QS)	W m ⁻²
7	QSair	Storage heat flux into air	W m ⁻²
8	QSwall	Storage heat flux into wall	W m ⁻²
9	QSroof	Storage heat flux into roof	W m ⁻²
10	QSGround	Storage heat flux into ground	W m ⁻²
11	QSibld	Storage heat flux into internal elements in building	W m ⁻²
12	Twall1	Temperature in the first layer of wall (outer-most)	K

Continued on next page

Table 7.4 – continued from previous page

Column	Name	Description	Units
13	Twall2	Temperature in the first layer of wall	K
14	Twall3	Temperature in the first layer of wall	K
15	Twall4	Temperature in the first layer of wall	K
16	Twall5	Temperature in the first layer of wall (inner-most)	K
17	Troof1	Temperature in the first layer of roof (outer-most)	K
18	Troof2	Temperature in the first layer of roof	K
19	Troof3	Temperature in the first layer of roof	K
20	Troof4	Temperature in the first layer of roof	K
21	Troof5	Temperature in the first layer of ground (inner-most)	K
22	Tground1	Temperature in the first layer of ground (outer-most)	K
23	Tground2	Temperature in the first layer of ground	K
24	Tground3	Temperature in the first layer of ground	K
25	Tground4	Temperature in the first layer of ground	K
26	Tground5	Temperature in the first layer of ground (inner-most)	K
27	Tibld1	Temperature in the first layer of internal elements	K
28	Tibld2	Temperature in the first layer of internal elements	K
29	Tibld3	Temperature in the first layer of internal elements	K
30	Tibld4	Temperature in the first layer of internal elements	K
31	Tibld5	Temperature in the first layer of internal elements	K
32	Tabld	Air temperature in buildings	K

TROUBLESHOOTING

8.1 How to create a directory?

please search the web using this phrase if you do not know how to create a folder or directory

8.2 How to unzip a file

please search the web using this phrase if you do not know how to unzip a file

8.3 A text editor

is a program to edit plain text files. If you search on the web using the phrase ‘text editor’ you will find numerous programs. These include for example, NotePad, EditPad, Text Pad etc

8.4 Command prompt

From Start select run –type cmd – this will open a window. Change directory to the location of where you stored your files. The following website may be helpful if you do not know what a command prompt is: <http://dosprompt.info/>

8.5 Day of year [DOY]

January 1st is day 1, February 1st is day 32. If you search on the web using the phrase ‘day of year calendar’ you will find tables that allow rapid conversions. Remember that after February 28th DOY will be different between leap years and non-leap years.

8.6 ESTM output

First time steps of storage output could give NaN values during the initial converging phase.

8.7 First things to Check if the program seems to have problems

- Check the problems.txt file.
- Check file options – in RunControl.nml.
- Look in the output directory for the SS_FileChoices.txt. This allows you to check all options that were used in the run. You may want to compare it with the original version supplied with the model.
- Note there can not be missing time steps in the data. If you need help with this you may want to checkout UMEP

8.7.1 A pop-up saying “file path not found”

This means the program cannot find the file paths defined in RunControl.nml file. Possible solutions:

- Check that you have created the folder that you specified in RunControl.nml.
- Check does the output directory exist?
- Check that you have a single or double quotes around the FileInputPath, FileOutputPath and FileCode

====“%sat_vap_press.f temp=0.0000 pressure dectime”==== Temperature is zero in the calculation of water vapour pressure parameterization.

- You don’t need to worry if the temperature should be (is) 0°C.
- If it should not be 0°C this suggests that there is a problem with the data.

8.7.2 %T changed to fit limits

- [TL =0.1]/ [TL =39.9] You may want to change the coefficients for surface resistance. If you have data from these temperatures, we would happily determine them.

8.7.3 %Iteration loop stopped for too stable conditions.

- [zL]/[USTAR] This warning indicates that the atmospheric stability gets above 2. In these conditions MO theory is not necessarily valid. The iteration loop to calculate the Obukhov length and friction velocity is stopped so that stability does not get too high values. This is something you do not need to worry as it does not mean wrong input data.

8.7.4 “Reference to undefined variable, array element or function result”

- Parameter(s) missing from input files.

See also the error messages provided in problems.txt and warnings.txt

8.7.5 Email list

- SUEWS email list

<https://www.lists.reading.ac.uk/mailman/listinfo/met-suews>

- UMEP email list

<https://www.lists.reading.ac.uk/mailman/listinfo/met-umep>

ACKNOWLEDGEMENTS

- People who have contributed to the development of SUEWS (plus co-authors of papers):
- Current contributors:
 - Prof C.S.B. Grimmond (University of Reading; previously Indiana University, King’s College London, UK); Dr Leena Järvi (University of Helsinki, Finland); Dr Helen Ward (University of Reading), Dr Fredrik Lindberg (Göteborg University, Sweden), Dr Andy Gabey (Reading), Dr Ting SUN (Reading), Dr Jie PENG (SIMS), Dr Natalie Theeuwes (Reading),
- Past Contributors:
 - Dr Brian Offerle (Indiana University), Dr Thomas Loridan (King’s College London), Dr Shiho Onomura (Göteborg University, Sweden)
- Users who have brought things to our attention to improve this manual and the model:
 - Dr Andy Coutts (Monash University, Australia), Kerry Nice (Monash University, Australia), Shiho Onomura (Göteborg University, Sweden), Dr Stefan Smith (University of Reading, UK), Dr Helen Ward (King’s College London, UK; University of Reading, UK); Duick Young (King’s College London), Dr Ning Zhang (Nanjing University, China)
- Funding to support development:
 - National Science Foundation (USA, BCS-0095284, ATM-0710631), EU Framework 7 BRIDGE (211345), EUf7 emBRACE; UK Met Office; NERC ClearfLo, NERC/Belmont TRUC, Newton/Met Office CSSP-China, H2020 UrbanFluxes, EPSRC LoHCool

NOTATION

λF frontal area index

ΔQS^* storage heat flux

BLUEWS Boundary Layer part of SUEWS

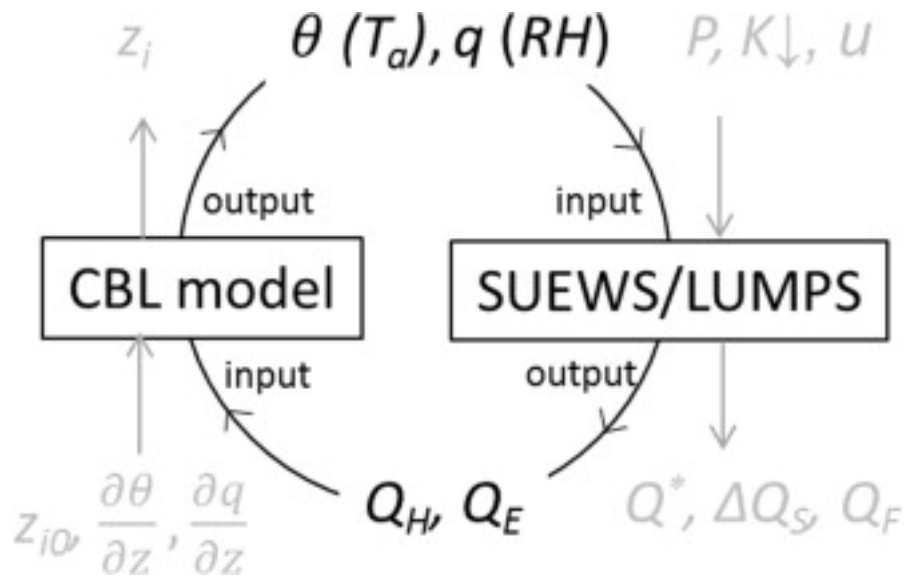


Fig. 10.1: Relation between BLUEWS and SUEWS

Bldgs Building surface

CBL Convective boundary layer

DEM Digital Elevation Model

DSM Digital surface model

DTM Digital Terrain Model

DecTr deciduous trees and shrubs

EveTr Evergreen trees and shrubs

ESTM Element Surface Temperature Method (Offerle et al.,2005 [*Oaf2005*])

Grass Grass surface

BSoil Unmanaged land and/or bare soil

L↓ incoming longwave radiation

LAI Leaf area index

LUMPS Local-scale Urban Meteorological Parameterization Scheme (Loridan et al. 2011 [[L2011](#)])

MU Parameters which must be supplied and must be specific for the site/grid being run.

MD Parameters which must be supplied and must be specific for the site/grid being run (but default values may be ok if these values are not known specifically for the site).

O Parameters that are optional, depending on the model settings in RunControl. Set any parameters that are not used/not known to ‘-999’.

L Codes that are used to link between the input files. These codes are required but their values are completely arbitrary, providing that they link the input files in the correct way. The user should choose these codes, bearing in mind that the codes they match up with in column 1 of the corresponding input file must be unique within that file. Codes must be integers. Note that the codes must match up with column 1 of the corresponding input file, even if those parameters are not used (in which case set all columns except column 1 to ‘-999’ in the corresponding input file), otherwise the model run will fail.

NARP Net All-wave Radiation Parameterization (Offerle et al. 2003 [[O2003](#)], Loridan et al. 2011 [[L2011](#)])

OHM Objective Hysteresis Model (Grimmond et al. 1991 [[G91OHM](#)], Grimmond & Oke 1999a [[GO99QS](#)], 2002 [[GO2002](#)])

Paved Paved surface

Q* net all-wave radiation

QE latent heat flux

QF anthropogenic heat flux

QH sensible heat flux

SOLWEIG The solar and longwave environmental irradiance geometry model (Lindberg et al. 2008 [[FL2008](#)], Lindberg and Grimmond 2011 [[FL2011](#)])

SVF Sky view factor

theta potential temperature

tt time step of data

UMEP Urban Multi-scale Environmental Predictor

Water Water surface

WATCH The WATCH project has produced a large number of data sets which should be of considerable use in regional and global studies of climate and water. see [WATCH webpage](#)

zi Convective boundary layer height

DEVELOPMENT, SUGGESTIONS AND SUPPORT

1. [http://urban-climate.net/umep/DevelopmentGuidelines#Coding_Guidelines| Coding Guidelines]
2. Recommendations, Errors, Help/Updates - please join our email list
 - (a) www.lists.reading.ac.uk/mailman/listinfo/met-suews
 - (b) As UMEP has a number of tools to support SUEWS you may want to join that list also www.lists.reading.ac.uk/mailman/listinfo/met-umep

VERSION HISTORY

12.1 New in SUEWS Version 2018a

see *Version History*.

12.2 New in SUEWS Version 2017b (released 2 August 2017)

PDF Manual for v2017b

1. Surface-level diagnostics: T2 (air temperature at 2 m agl), Q2 (air specific humidity at 2 m agl) and U10 (wind speed at 10 m agl) added as default output.
2. Output in netCDF format. Please note this feature is **NOT** enabled in the public release due to the dependency of netCDF library. Assistance in enabling this feature may be requested to the development team via [SUEWS mail list](#).
3. Edits to the manual.
4. New capabilities being developed, including two new options for calculating storage heat flux (AnOHM, ESTM) and modelling of carbon dioxide fluxes. These are currently under development and **should not be used** in v2017b.
5. Known issues
 - (a) BLUEWS parameters need to be checked
 - (b) Observed soil moisture can not be used as an input
 - (c) Wind direction is not currently downscaled so non -999 values will cause an error.

12.3 New in SUEWS Version 2017a (Feb 2017)

1. Changes to input file formats (including RunControl.nml and InitialConditions files) to facilitate setting up and running the model. Met forcing files no longer need two rows of -9 at the end to indicate the end of the file.
2. Changes to output file formats (now option to write out only a subset of variables, rather than all variables).
3. SUEWS can now disaggregate forcing files to the model time-step and aggregate output at the model time-step to lower resolution. This removes the need for the python wrapper used with previous versions.

4. InitialConditions format and requirements changed. A single file can now be provided for multiple grids. SUEWS will approximate most (but not all) of the required initial conditions if values are unknown. (However, if detailed information about the initial conditions is known, this can still be provided to and used by SUEWS.)
5. Leaf area index calculations now use parameters provided for each vegetated surface (previously only the deciduous tree LAI development parameters were applied to all vegetated surfaces).
6. For compatibility with GIS, **the sign convention for longitude has been changed**. Now negative values are to the west, positive values are to the east. Note this appears to have been incorrectly coded in previous versions (but may not necessarily have been problematic).
7. Storage heat flux calculation adapted for shorter (sub-hourly) model time-step: hysteresis calculation now based on running means over the previous hour.
8. Improved error handling, including separate files for serious errors (problems.txt) and less critical issues (warnings.txt).
9. Edits to the manual.
10. New capabilities being developed, including two new options for calculating storage heat flux (AnOHM, ESTM) and modelling of carbon dioxide fluxes. These are currently under development and **should not be used** in v2017a.

12.4 New in SUEWS Version 2016a (released 21 June 2016)

PDF Manual for v2016a

1. Major changes to the input file formats to facilitate the running of multiple grids and multiple years. Surface characteristics are provided in SiteSelect.txt and other input files are cross-referenced via codes or profile types.
2. The surface types have been altered:
 - Previously, grass surfaces were entered separately as irrigated grass and unirrigated grass surfaces, whilst the ‘unmanaged’ land cover fraction was assumed by the model to behave as unirrigated grass. There is now a single surface type for grass (total for irrigated plus unirrigated) and a new bare soil surface type.
 - The proportion of irrigated vegetation must now be specified for grass, evergreen trees and deciduous trees individually.
3. The entire model now runs at a time step specified by the user. Note that 5 min is strongly recommended. (Previously only the water balance calculations were done at 5 min with the energy balance calculations at 60 min).
4. Surface conductance now depends on the soil moisture under the vegetated surfaces only (rather than the total soil moisture for the whole study area as previously).
5. Albedo of evergreen trees and grass surfaces can now change with leaf area index as was previously possible for deciduous trees only.
6. New suggestions in Troubleshooting section.
7. Edits to the manual.
8. CBL model included.
9. SUEWS has been incorporated into [UMEP](#)

12.5 New in SUEWS Version 2014b (released 8 October 2014)

V2014 manual These affect the run configuration if previously run with older versions of the model:

1. New input of three additional columns in the Meteorological input file (diffusive and direct solar radiation, and wind direction)
2. Change of input variables in InitialConditions.nml file. Note we now refer to CT as ET (ie. Evergreen trees rather than coniferous trees)
3. In GridConnectionsYYYY.txt, the site names should now be without the underscore (e.g “Sm” and not “**Sm_**”)

Other issues:

1. Number of grid areas that can be modelled (for one grid, one year 120; for one grid two years 80)
2. Comment about Time interval of input data
3. Bug fix: Column headers corrected in 5 min file
4. Bug fix: Surface state 60 min file - corrected to give the last 5 min of the hour (rather than cumulating through the hour)
5. Bug fix: units in the Horizontal soil water transfer
6. ErrorHints: More have been added to the problems.txt file.
7. Manual: new section on running the model appropriately
8. Manual: notation table updated
9. Possibility to add snow accumulation and melt: new paper

Järvi L, Grimmond CSB, Taka M, Nordbo A, Setälä H, and Strachan IB 2014: Development of the Surface Urban Energy and Water balance Scheme (SUEWS) for cold climate cities, Geosci. Model Dev. 7, 1691-1711, doi:10.5194/gmd-7-1691-2014.

12.6 New in SUEWS Version 2014a.1 (released 26 February 2014)

1. Please see the large number of changes made in the 2014a release.
2. This is a minor change to address installing the software.
3. Minor updates to the manual

12.7 New in SUEWS Version 2014a (released 21 February 2014)

1. Bug fix: External irrigation is calculated as combined from automatic and manual irrigation and during precipitation events the manual irrigation is reduced to 60% of the calculated values. In previous version of the model, the irrigation was in all cases taken 60% of the calculated value, but now this has been fixed.
2. In previous versions of the model, irrigation was only allowed on the irrigated grass surface type. Now, irrigation is also allowed on evergreen and deciduous trees/shrubs surfaces. These are not however treated as separate surfaces, but the amount of irrigation is evenly distributed to the whole surface type in the modelled area. The amount of water is calculated using same equation as for grass surface

(equation 5 in Järvi et al. 2011), and the fraction of irrigated trees/shrubs (relative to the area of tree/shrubs surface) is set in the gis file (See Table 4.11: SSss_YYYY.gis)

3. In the current version of the model, the user is able to adjust the leaf-on and leaf-off lengths in the FunctionalTypes. nml file. In addition, user can choose whether to use temperature dependent functions or combination of temperature and day length (advised to be used at high-latitudes)
4. In the gis-file, there is a new variable Alt that is the area altitude above sea level. If not known exactly use an approximate value.
5. Snow removal profile has been added to the HourlyProfileSSss_YYYY.txt. Not yet used!
6. Model time interval has been changed from minutes to seconds. Preferred interval is 3600 seconds (1 hour)
7. Manual correction: input variable Soil moisture said soil moisture deficit in the manual – word removed
8. Multiple compiled versions of SUEWS released. There are now users in Apple, Linux and Windows environments. So we will now release compiled versions for more operating systems (section 3).
9. There are some changes in the output file columns so please, check the respective table of each used output file.
10. Bug fix: with very small amount of vegetation in an area – impacted Phenology for LUMPS

12.8 New in SUEWS Version 2013a

1. Radiation selection bug fixed
2. Aerodynamic resistance – when very low - no longer reverts to neutral (which caused a large jump) – but stays low
3. Irrigation day of week fixed
4. New error messages
5. min file – now includes a decimal time column – see Section 5.4 – Table 5.3

12.9 New in SUEWS Version 2012b

1. Error message generated if all the data are not available for the surface resistance calculations
2. Error message generated if wind data are below zero plane displacement height.
3. All error messages now written to ‘Problem.txt’ rather than embedded in an ErrorFile. Note some errors will be written and the program will continue others will stop the program.
4. Default variables removed (see below). Model will stop if any data are problematic. File should be checked to ensure that reasonable data are being used. If an error occurs when there should not be one let us know as it may mean we have made the limits too restrictive.

Contents no longer used File defaultFcd=0.1 defaultPres=1013 defaultRH=50 defaultT=10 defaultU=3 RunControl.nml

- Just delete lines from file
- Values you had were likely different from these example value shown here

12.10 New in SUEWS Version 2012a

1. Improved error messages when an error is encountered. Error message will generally be written to the screen and to the file 'problems.txt'
2. Format of all input files have changed.
3. New excel spreadsheet and R programme to help prepare required data files. (Not required)
4. Format of coef flux (OHM) input files have changed.
 - This allows for clearer identification for users of the coefficients that are actually to be used
 - This requires an additional file with coefficients. These do not need to be adjusted but new coefficients can be added. We would appreciate receiving additional coefficients so they can be included in future releases – Please email Sue.
5. Storage heat flux (OHM) coefficients can be changed by
 - time of year (summer, winter)
 - surface wetness state
6. New files are written: DailyState.txt
 - Provides the status of variables that are updated on a daily or basis or a snapshot at the end of each day.
7. Surface Types
 - Clarification of surface types has been made. See GIS and OHM related files

12.11 New in SUEWS Version2011b

1. Storage heat flux (ΔQ_s) and anthropogenic heat flux (QF) can be set to be 0 W m^{-2}
2. Calculation of hydraulic conductivity in soil has been improved and HydraulicConduct in SUEWSInput.nml is replaced with name SatHydraulicConduct
3. Following removed from HeaderInput.nml
 - HydraulicConduct
 - GrassFractionIrrigated
 - PavedFractionIrrigated
 - TreeFractionIrrigated

The lower three are now determined from the water use behaviour used in SUEWS

1. Following added to HeaderInput.nml
 - SatHydraulicConduct
 - defaultQf
 - defaultQs
2. If ΔQ_s and QF are not calculated in the model but are given as an input, the missing data is replaced with the default values.
3. Added to SAHP input file

- AHDIUPRF – diurnal profile used if AnthropHeatChoice = 1

V2012a this became obsolete OHM file (SSss_YYYY.ohm)

DIFFERENCES BETWEEN SUEWS, LUMPS AND FRAISE

The largest difference between LUMPS and SUEWS is that the latter simulates the urban water balance in detail while LUMPS takes a simpler approach for the sensible and latent heat fluxes and the water balance (“water bucket”). The calculation of evaporation/latent heat in SUEWS is more biophysically based. Due to its simplicity, LUMPS requires less parameters in order to run. SUEWS gives turbulent heat fluxes calculated with both models as an output. **The model can run LUMPS alone without running SUEWS (Table 4.1 – SuewsStatus).**

Similarities and differences between LUMPS and SUEWS.

	LUMPS	SUEWS
Net all-wave radiation (Q^*)	Input or NARP	Input or NARP
Storage heat flux (ΔQ_S)	Input or from OHM	Input or from OHM
Anthropogenic heat flux (Q_F)	Input or calculated	Input or calculated
Latent heat (Q_E)	DeBruin and Holtslag (1982)	Penman-Monteith equation ²
Sensible heat flux (Q_H)	DeBruin and Holtslag (1982)	Residual from available energy minus Q_E
Water balance	No water balance included	Running water balance of canopy and water balance of soil
Soil moisture	Not considered	Modelled
Surface wetness	Simple water bucket model	Running water balance
Irrigation	Only fraction of surface area that is irrigated	Input or calculated with a simple model
Surface cover	buildings, paved, vegetation	buildings, paved, coniferous and deciduous trees/shrubs, irrigated and unirrigated grass

13.1 FRAISE Flux Ratio – Active Index Surface Exchange

FRAISE provides an estimate of mean midday (± 3 h around solar noon) energy partitioning from information on the surface characteristics and estimates of the mean midday incoming radiative energy and anthropogenic heat release. Please refer to Loridan and Grimmond (2012) [*LG2012*] for further details.

Topic	FRAISE	LUMPS	SUEWS
Complexity	Simplest: FRAISE		More complex: SUEWS
Software provided:	R code	Windows exe (written in Fortran)	Windows exe (written in Fortran) - other versions available
Applicable period:	Midday (within 3 h of solar noon)	hourly	5 min-hourly-annual
Unique features:	calculates active surface – and fluxes	radiation and energy balances	radiation, energy and water balance (includes LUMPS)

REFERENCES

- [J11] Järvi L, Grimmond CSB & Christen A (2011) The Surface Urban Energy and Water Balance Scheme (SUEWS): Evaluation in Los Angeles and Vancouver. *J. Hydrol.* 411, 219-237.
- [W16] Ward HC, Kotthaus S, Järvi L and Grimmond CSB 2016: Surface Urban Energy and Water Balance Scheme (SUEWS): development and evaluation at two UK sites. *Urban Climate.* 18, 1-32 doi: [10.1016/j.uclim.2016.05.001](https://doi.org/10.1016/j.uclim.2016.05.001)
- [G91] Grimmond CSB & Oke TR (1991) An Evaporation-Interception Model for Urban Areas. *Water Resour. Res.* 27, 1739-1755.
- [O2003] Offerle B, Grimmond CSB & Oke TR (2003) Parameterization of Net All-Wave Radiation for Urban Areas. *J. Appl. Meteorol.* 42, 1157-1173.
- [L2011] Loridan T, CSB Grimmond, BD Offerle, DT Young, T Smith, L Järvi, F Lindberg (2011) Local-Scale Urban Meteorological Parameterization Scheme (LUMPS): longwave radiation parameterization & seasonality related developments. *Journal of Applied Meteorology & Climatology* 50, 185-202, doi: [10.1175/2010JAMC2474.1](https://doi.org/10.1175/2010JAMC2474.1)
- [lucy] Allen L, F Lindberg, CSB Grimmond (2011) Global to city scale model for anthropogenic heat flux, *International Journal of Climatology*, 31, 1990-2005.
- [lucy2] Lindberg F, Grimmond CSB, Nithiandamdan Y, Kotthaus S, Allen L (2013) Impact of city changes and weather on anthropogenic heat flux in Europe 1995–2015, *Urban Climate*, 4, 1-13 [paper](#)
- [I11] Iamarino M, Beevers S & Grimmond CSB (2011) High-resolution (space, time) anthropogenic heat emissions: London 1970-2025. *International J. of Climatology.* 32, 1754-1767.
- [G91OHM] Grimmond CSB, Cleugh HA & Oke TR (1991) An objective urban heat storage model and its comparison with other schemes. *Atmos. Env.* 25B, 311-174.
- [GO99QS] Grimmond CSB & Oke TR (1999a) Heat storage in urban areas: Local-scale observations and evaluation of a simple model. *J. Appl. Meteorol.* 38, 922-940.
- [GO2002] Grimmond CSB & Oke TR (2002) Turbulent Heat Fluxes in Urban Areas: Observations and a Local-Scale Urban Meteorological Parameterization Scheme (LUMPS) *J. Appl. Meteorol.* 41, 792-810.
- [AnOHM17] Sun T, Wang ZH, Oechel W & Grimmond CSB (2017) The Analytical Objective Hysteresis Model (AnOHM v1.0): Methodology to Determine Bulk Storage Heat Flux Coefficients. *Geosci. Model Dev. Discuss.* doi: [10.5194/gmd-2016-300](https://doi.org/10.5194/gmd-2016-300).
- [Oaf2005] Offerle B, CSB Grimmond, K Fortuniak (2005) Heat storage & anthropogenic heat flux in relation to the energy balance of a central European city center. *International J. of Climatology.* 25: 1405–1419 doi: [10.1002/joc.1198](https://doi.org/10.1002/joc.1198)
- [G86] Grimmond CSB, Oke TR and Steyn DG (1986) Urban water-balance 1. A model for daily totals. *Water Resour Res* 22: 1397-1403.

- [Leena2014] Järvi L, Grimmond CSB, Taka M, Nordbo A, Setälä H & Strachan IB (2014) Development of the Surface Urban Energy and Water balance Scheme (SUEWS) for cold climate cities, *Geosci. Model Dev.* 7, 1691-1711, doi:10.5194/gmd-7-1691-2014.
- [CG2001] Cleugh HA & Grimmond CSB (2001) Modelling regional scale surface energy exchanges and CBL growth in a heterogeneous, urban-rural landscape. *Bound.-Layer Meteor.* 98, 1-31.
- [Shiho2015] Onomura S, Grimmond CSB, Lindberg F, Holmer B & Thorsson S (2015) Meteorological forcing data for urban outdoor thermal comfort models from a coupled convective boundary layer and surface energy balance scheme *Urban Climate*, 11, 1-23 doi:10.1016/j.uclim.2014.11.001
- [FL2008] Lindberg F, Holmer B & Thorsson S (2008) SOLWEIG 1.0 – Modelling spatial variations of 3D radiant fluxes and mean radiant temperature in complex urban settings. *International Journal of Biometeorology* 52, 697–713.
- [FL2011] Lindberg F & Grimmond C (2011) The influence of vegetation and building morphology on shadow patterns and mean radiant temperature in urban areas: model development and evaluation. *Theoretical and Applied Climatology* 105:3, 311-323.
- [Ko17] Kokkonen TV, Grimmond CSB, Rätty O, Ward HC, Christen A, Oke TR, Kotthaus S & Järvi L (in review) Sensitivity of Surface Urban Energy and Water Balance Scheme (SUEWS) to downscaling of reanalysis forcing data.
- [Best2014] Best MJ & Grimmond CSB (2014) Importance of initial state and atmospheric conditions for urban land surface models' performance. *Urban Climate* 10: 387-406. doi: 10.1016/j.uclim.2013.10.006.
- [D74] Dyer AJ (1974) A review of flux-profile relationships. *Boundary-Layer Meteorol.* 7, 363-372.
- [H88] Högström U (1988) Non-dimensional wind and temperature profiles in the atmospheric surface layer: A re-evaluation. *Boundary-Layer Meteorol.* 42, 55–78.
- [VUH85] Van Ulden AP & Holtslag AAM (1985) Estimation of atmospheric boundary layer parameters for boundary layer applications. *J. Clim. Appl. Meteorol.* 24, 1196-1207.
- [CNstab] Campbell GS & Norman JM (1998) *Introduction to Environmental Biophysics*. Springer Science, US.
- [B71] Businger JA, Wyngaard JC, Izumi Y & Bradley EF (1971) Flux-Profile Relationships in the Atmospheric Surface Layer. *J. Atmos. Sci.*, 28, 181–189.
- [Ka09] Kawai T, Ridwan MK & Kanda M (2009) Evaluation of the simple urban energy balance model using selected data from 1-yr flux observations at two cities. *J. Appl. Meteorol. Clim.* 48, 693-715.
- [VG00] Voogt JA & Grimmond CSB (2000) Modeling surface sensible heat flux using surface radiative temperatures in a simple urban terrain. *J. Appl. Meteorol.* 39, 1679-1699.
- [Ka07] Kanda M, Kanega M, Kawai T, Moriwaki R & Sugawara H (2007). Roughness lengths for momentum and heat derived from outdoor urban scale models. *J. Appl. Meteorol. Clim.* 46, 1067-1079.
- [GO99] Grimmond CSB & Oke TR (1999) Aerodynamic properties of urban areas derived from analysis of surface form. *J. Appl. Meteorol.* 38, 1262-1292.
- [Mc98] MacDonald RW, Griffiths RF & Hall DJ (1998) An improved method for estimation of surface roughness of obstacle arrays. *Atmos. Env.* 32, 1857-1864.
- [FN78] Falk J & Niemczynowicz J, (1978) Characteristics of the above ground runoff in sewered catchments, in *Urban Storm Drainage*, edited by Helliwell PR, Pentech, London
- [Ha79] Halldin S, Grip H & Perttu K. (1979) Model for energy exchange of a pine forest canopy. In: Halldin S (Ed.), *Comparison of Forest Water and Energy Exchange Models*. International Society of Ecological Modeling

- [CW86] Calder IR and Wright IR (1986) Gamma Ray Attenuation Studies of Interception From Sitka Spruce: Some Evidence for an Additional Transport Mechanism. *Water Resour. Res.*, 22(3), 409–417.
- [Ok87] Oke TR (1987) *Boundary Layer Climates*. Routledge, London, UK
- [Br03] Breuer L, Eckhardt K and Frede H-G (2003) Plant parameter values for models in temperate climates. *Ecol. Model.* 169, 237-293.
- [Ja76] Jarvis PG (1976) The interpretation of the variations in leaf water potential and stomatal conductance found in canopies in the field. *Philos. Trans. R. Soc. London, Ser. B.*, 273, 593-610.
- [Au74] Auer AH (1974) The rain versus snow threshold temperatures. *Weatherwise*, 27, 67.
- [SV06] Sailor DJ and Vasireddy C (2006) Correcting aggregate energy consumption data account for variability in local weather. *Environ. Modell. Softw.* 21, 733-738.
- [Ko14] Konarska J, Lindberg F, Larsson A, Thorsson S and Holmer B (2014) Transmissivity of solar radiation through crowns of single urban trees—application for outdoor thermal comfort modelling. *Theor Appl Climatol* 117:363–376.
- [Re90] Reindl DT, Beckman WA and Duffie JA (1990) Diffuse fraction correlation. *Sol Energy* 45:1–7.
- [LG2012] Loridan T and Grimmond CSB (2012) Characterization of energy flux partitioning in urban environments: links with surface seasonal properties. *J. of Applied Meteorology and Climatology* 51,219-241
doi: 10.1175/JAMC-D-11-038.1

Symbols

$\Delta Q S^*$, [181](#)

λF , [181](#)

A

a1
command line option, [57](#)

a2
command line option, [57](#)

a3
command line option, [57](#)

absK
command line option, [163](#)

absL
command line option, [163](#)

ActivityProfWD
command line option, [58](#)

ActivityProfWE
command line option, [58](#)

AHMin
command line option, [58](#)

AHSlope
command line option, [58](#)

albDecTr0
command line option, [147](#)

AlbedoMax
command line option, [59](#)

AlbedoMin
command line option, [59](#)

albEveTr0
command line option, [146](#)

albGrass0
command line option, [147](#)

Alt
command line option, [60](#)

AnOHM_Ch
command line option, [60](#)

AnOHM_Cp
command line option, [61](#)

AnOHM_Kk
command line option, [61](#)

AnthropCO2Method

command line option, [26](#)

AnthropHeatMethod
command line option, [25](#)

AnthropogenicCode
command line option, [61](#)

AreaWall
command line option, [62](#)

B

BaseT
command line option, [62](#)

BaseTe
command line option, [62](#)

BaseTHDD
command line option, [63](#)

Bldgs, [181](#)

BldgsState
command line option, [148](#)

BLUEWS, [181](#)

BSoil, [182](#)

BSoilState
command line option, [148](#)

BuildEnergyUse
command line option, [63](#)

BuildingName
command line option, [163](#)

C

CBL, [181](#)

CBLday(id)
command line option, [156](#)

CBLuse
command line option, [23](#)

CDSMname
command line option, [163](#)

CO2_included
command line option, [156](#)

Code
command line option, [63](#)

Code_Bldgs
command line option, [65](#)

Code_Bsoil

- command line option, 66
- Code_DecTr
 - command line option, 66
- Code_ESTMClass_Bldgs1
 - command line option, 67
- Code_ESTMClass_Bldgs2
 - command line option, 67
- Code_ESTMClass_Bldgs3
 - command line option, 67
- Code_ESTMClass_Bldgs4
 - command line option, 67
- Code_ESTMClass_Bldgs5
 - command line option, 67
- Code_ESTMClass_Paved1
 - command line option, 68
- Code_ESTMClass_Paved2
 - command line option, 68
- Code_ESTMClass_Paved3
 - command line option, 68
- Code_EveTr
 - command line option, 68
- Code_Grass
 - command line option, 69
- Code_Paved
 - command line option, 69
- Code_Water
 - command line option, 70
- col
 - command line option, 163
- command line option
 - a1, 57
 - a2, 57
 - a3, 57
 - absK, 163
 - absL, 163
 - ActivityProfWD, 58
 - ActivityProfWE, 58
 - AHMin, 58
 - AHSlope, 58
 - albDecTr0, 147
 - AlbedoMax, 59
 - AlbedoMin, 59
 - albEveTr0, 146
 - albGrass0, 147
 - Alt, 60
 - AnOHM_Ch, 60
 - AnOHM_Cp, 61
 - AnOHM_Kk, 61
 - AnthropCO2Method, 26
 - AnthropHeatMethod, 25
 - AnthropogenicCode, 61
 - AreaWall, 62
 - BaseT, 62
 - BaseTe, 62
 - BaseTHDD, 63
 - BldgsState, 148
 - BSoilState, 148
 - BuildEnergyUse, 63
 - BuildingName, 163
 - CBLday(id), 156
 - CBLuse, 23
 - CDSMname, 163
 - CO2_included, 156
 - Code, 63
 - Code_Bldgs, 65
 - Code_Bsoil, 66
 - Code_DecTr, 66
 - Code_ESTMClass_Bldgs1, 67
 - Code_ESTMClass_Bldgs2, 67
 - Code_ESTMClass_Bldgs3, 67
 - Code_ESTMClass_Bldgs4, 67
 - Code_ESTMClass_Bldgs5, 67
 - Code_ESTMClass_Paved1, 68
 - Code_ESTMClass_Paved2, 68
 - Code_ESTMClass_Paved3, 68
 - Code_EveTr, 68
 - Code_Grass, 69
 - Code_Paved, 69
 - Code_Water, 70
 - col, 163
 - CondCode, 70
 - CRWMax, 71
 - CRWMin, 71
 - DaysSinceRain, 147
 - DayWat(1), 71
 - DayWat(2), 71
 - DayWat(3), 72
 - DayWat(4), 72
 - DayWat(5), 72
 - DayWat(6), 72
 - DayWat(7), 72
 - DayWatPer(1), 72
 - DayWatPer(2), 73
 - DayWatPer(3), 73
 - DayWatPer(4), 73
 - DayWatPer(5), 73
 - DayWatPer(6), 73
 - DayWatPer(7), 74
 - decidCap0, 147
 - DecTrState, 148
 - DisaggMethod, 32
 - DisaggMethodESTM, 34
 - DrainageCoef1, 74
 - DrainageCoef2, 74
 - DrainageEq, 75
 - DSMname, 163
 - DSMPATH, 163
 - Emissivity, 76

EndDLS, 76
 EnergyUseProfWD, 77
 EnergyUseProfWE, 77
 EntrainmentType, 155
 ESTMCode, 77
 EveTrState, 148
 evolveTibld, 158
 FAI_Bldgs, 78
 FAI_DecTr, 78
 FAI_EveTr, 79
 Faut, 79
 feld, 79
 FileCode, 29
 FileInputPath, 30
 FileOutputPath, 30
 FileSonde(id), 156
 FlowChange, 79
 Fr_Bldgs, 81
 Fr_Bsoil, 81
 Fr_DecTr, 81
 Fr_ESTMClass_Bldgs1, 82
 Fr_ESTMClass_Bldgs2, 82
 Fr_ESTMClass_Bldgs3, 82
 Fr_ESTMClass_Bldgs4, 82
 Fr_ESTMClass_Bldgs5, 82
 Fr_ESTMClass_Paved1, 82
 Fr_ESTMClass_Paved2, 83
 Fr_ESTMClass_Paved3, 83
 Fr_EveTr, 83
 Fr_Grass, 83
 Fr_Paved, 83
 Fr_Water, 84
 Fraction1of8, 79
 Fraction2of8, 80
 Fraction3of8, 80
 Fraction4of8, 80
 Fraction5of8, 80
 Fraction6of8, 80
 Fraction7of8, 81
 Fraction8of8, 81
 G1, 84
 G2, 84
 G3, 84
 G4, 84
 G5, 85
 G6, 85
 gamq_gkgm, 85
 gamt_Km, 85
 GDD_1_0, 146
 GDD_2_0, 146
 GDDFull, 85
 GrassState, 148
 Grid, 86
 GridConnection1of8, 86
 GridConnection2of8, 87
 GridConnection3of8, 87
 GridConnection4of8, 87
 GridConnection5of8, 88
 GridConnection6of8, 88
 GridConnection7of8, 88
 GridConnection8of8, 88
 gsModel, 88
 GVF_out, 162
 H_Bldgs, 88
 H_DecTr, 89
 H_EveTr, 89
 heightgravity, 164
 IbldCHmod, 158
 id, 89
 Ie_a1, 89
 Ie_a2, 89
 Ie_a3, 90
 Ie_end, 90
 Ie_m1, 90
 Ie_m2, 90
 Ie_m3, 90
 Ie_start, 90
 ih, 91
 imin, 91
 InfiltrationRate, 91
 InitialData_use, 155
 InitialDataFileName, 156
 Internal_albedo, 91
 Internal_CHbld, 91
 Internal_CHroof, 92
 Internal_CHwall, 92
 Internal_emissivity, 92
 Internal_k1, 92
 Internal_k2, 93
 Internal_k3, 93
 Internal_k4, 93
 Internal_k5, 93
 Internal_rhoCp1, 93
 Internal_rhoCp2, 93
 Internal_rhoCp3, 94
 Internal_rhoCp4, 94
 Internal_rhoCp5, 94
 Internal_thick1, 94
 Internal_thick2, 94
 Internal_thick3, 95
 Internal_thick4, 95
 Internal_thick5, 95
 InternalWaterUse, 95
 IrrFr_DecTr, 95
 IrrFr_EveTr, 95
 IrrFr_Grass, 96
 IrrigationCode, 96
 it, 96

iy, 96
kdiff, 97
kdir, 97
kdown, 97
Kdown2d_out, 162
KdownZen, 32
KeepTstepFilesIn, 31
KeepTstepFilesOut, 31
Kmax, 97
Kup2d_out, 162
lai, 97
LAIEq, 98
LAinitialDecTr, 146
LAinitialEveTr, 146
LAinitialGrass, 146
LAIMax, 98
LAIMin, 98
lat, 98
LBC_soil, 158
ldown, 99
Ldown2d_out, 161
LeafGrowthPower1, 99
LeafGrowthPower2, 99
LeafOffPower1, 100
LeafOffPower2, 100
LeavesOutInitially, 145
lng, 100
LUMPS_Cover, 100
LUMPS_DrRate, 101
LUMPS_MaxRes, 101
Lup2d_out, 161
MaxConductance, 101
MultipleESTMFiles, 30
MultipleInitFiles, 30
MultipleMetFiles, 30
MultRainAmongN, 33
MultRainAmongNUpperI, 34
NARP_Trans, 102
ncMode, 34
nCol, 35
NetRadiationMethod, 24
nroom, 102
nRow, 34
OBS_SMCap, 102
OBS_SMDepth, 102
OBS_SoilNotRocks, 103
OHMCode_SummerDry, 103
OHMCode_SummerWet, 104
OHMCode_WinterDry, 105
OHMCode_WinterWet, 106
OHMIncQF, 26
OHMThresh_SW, 107
OHMThresh_WD, 108
onlyglobal, 161
OutInterval, 164
PavedState, 147
PipeCapacity, 110
PopDensDay, 110
PopDensNight, 111
porosity0, 147
PorosityMax, 111
PorosityMin, 111
Posture, 160
PrecipiLimAlb, 112
PrecipLimSnow, 112
pres, 112
q+_gkg, 114
q_gkg, 114
qe, 112
qf, 112
QF_A_Weekday, 112
QF_A_Weekend, 113
QF_B_Weekday, 113
QF_B_Weekend, 113
QF_C_Weekday, 114
QF_C_Weekend, 114
qh, 114
QH_Choice, 155
qn, 115
qs, 115
RadMeltFactor, 115
rain, 115
RainAmongN, 33
RainDisaggMethod, 33
ResolutionFilesIn, 29
ResolutionFilesInESTM, 29
ResolutionFilesOut, 29
RH, 115
RoughLenHeatMethod, 27
RoughLenMomMethod, 27
row, 164
RunForGrid, 163
RunoffToWater, 115
S1, 116
S2, 116
SatHydraulicCond, 116
SDDFull, 116
SMDMethod, 28
snow, 117
SnowClearingProfWD, 117
SnowClearingProfWE, 117
SnowCode, 118
SnowDensBldgs, 151
SnowDensBSoil, 152
SnowDensDecTr, 151
SnowDensEveTr, 151
SnowDensGrass, 151
snowDensMax, 118

snowDensMin, 119
 SnowDensPaved, 151
 SnowDensWater, 152
 SnowFracBldgs, 150
 SnowFracBSoil, 151
 SnowFracDecTr, 151
 SnowFracEveTr, 150
 SnowFracGrass, 151
 SnowFracPaved, 150
 SnowFracWater, 151
 SnowIntially, 148
 SnowLimPatch, 119
 SnowLimRemove, 119
 SnowPackBldgs, 150
 SnowPackBSoil, 150
 SnowPackDecTr, 150
 SnowPackEveTr, 150
 SnowPackGrass, 150
 SnowPackPaved, 149
 SnowPackWater, 150
 SnowUse, 23
 SnowWaterBldgsState, 149
 SnowWaterBSoilState, 149
 SnowWaterDecTrState, 149
 SnowWaterEveTrState, 149
 SnowWaterGrassState, 149
 SnowWaterPavedState, 149
 SnowWaterWaterState, 149
 SoilDensity, 120
 SoilDepth, 120
 SoilstoreBldgsState, 145
 SoilstoreBSoilState, 145
 SoilStoreCap, 120
 SoilstoreDecTrState, 145
 SoilstoreEveTrState, 145
 SoilstoreGrassState, 145
 SoilstorePavedState, 145
 SoilTypeCode, 120
 SOLWEIG_ldown, 162
 SOLWEIGpoi_out, 161
 SOLWEIGUse, 23
 Sondeflag, 156
 StabilityMethod, 27
 StartDLS, 121
 StateLimit, 121
 StorageHeatMethod, 26
 StorageMax, 122
 StorageMin, 123
 SuppressWarnings, 31
 Surf_k1, 124
 Surf_k2, 124
 Surf_k3, 124
 Surf_k4, 125
 Surf_k5, 125
 Surf_rhoCp1, 125
 Surf_rhoCp2, 125
 Surf_rhoCp3, 125
 Surf_rhoCp4, 125
 Surf_rhoCp5, 126
 Surf_thick1, 126
 Surf_thick2, 126
 Surf_thick3, 126
 Surf_thick4, 126
 Surf_thick5, 127
 SurfaceArea, 124
 SVFPath, 164
 SVFSuffix, 164
 Tair, 127
 tau_a, 127
 tau_f, 127
 tau_r, 127
 TCritic, 127
 TDSMname, 164
 Temp_C0, 147
 TempMeltFactor, 128
 TH, 128
 Theat_fix, 159
 Theat_off, 159
 Theat_on, 159
 Theta+_K, 128
 Theta_K, 128
 Tiair, 128
 Timezone, 129
 TL, 129
 Tmrt_out, 161
 ToBldgs, 129
 ToBSoil, 129
 ToDecTr, 129
 ToEveTr, 130
 ToGrass, 130
 ToPaved, 130
 ToRunoff, 130
 ToSoilStore, 130
 ToWater, 130
 TrafficRate, 131
 TransMax, 164
 TransMin, 164
 Troad, 131
 Troof, 131
 Tstep, 29
 Tsurf, 131
 TsurfChoice, 158
 Twall, 131
 Twall_e, 132
 Twall_n, 132
 Twall_s, 132
 Twall_w, 132
 U, 132

- usevegdem, 160
- Wall_k1, 133
- Wall_k2, 133
- Wall_k3, 133
- Wall_k4, 133
- Wall_k5, 133
- Wall_rhoCp1, 133
- Wall_rhoCp2, 134
- Wall_rhoCp3, 134
- Wall_rhoCp4, 134
- Wall_rhoCp5, 134
- Wall_thick1, 134
- Wall_thick2, 135
- Wall_thick3, 135
- Wall_thick4, 135
- Wall_thick5, 135
- WaterDepth, 135
- WaterState, 148
- WaterUseMethod, 28
- WaterUseProfAutoWD, 136
- WaterUseProfAutoWE, 136
- WaterUseProfManuWD, 136
- WaterUseProfManuWE, 137
- wdir, 137
- WetThreshold, 137
- WithinGridBldgsCode, 138
- WithinGridBSoilCode, 138
- WithinGridDecTrCode, 139
- WithinGridEveTrCode, 139
- WithinGridGrassCode, 139
- WithinGridPavedCode, 140
- WithinGridWaterCode, 140
- WriteOutOption, 31
- Wsb, 156
- Wuh, 140
- xsmd, 141
- Year, 141
- z, 141
- z0, 141
- zd, 142
- zi0, 142
- CondCode
 - command line option, 70
- CRWMax
 - command line option, 71
- CRWMin
 - command line option, 71
- D**
- DaysSinceRain
 - command line option, 147
- DayWat(1)
 - command line option, 71
- DayWat(2)
 - command line option, 71
- DayWat(3)
 - command line option, 72
- DayWat(4)
 - command line option, 72
- DayWat(5)
 - command line option, 72
- DayWat(6)
 - command line option, 72
- DayWat(7)
 - command line option, 72
- DayWatPer(1)
 - command line option, 72
- DayWatPer(2)
 - command line option, 73
- DayWatPer(3)
 - command line option, 73
- DayWatPer(4)
 - command line option, 73
- DayWatPer(5)
 - command line option, 73
- DayWatPer(6)
 - command line option, 73
- DayWatPer(7)
 - command line option, 74
- decidCap0
 - command line option, 147
- DecTr, **181**
- DecTrState
 - command line option, 148
- DEM, **181**
- DisaggMethod
 - command line option, 32
- DisaggMethodESTM
 - command line option, 34
- DrainageCoef1
 - command line option, 74
- DrainageCoef2
 - command line option, 74
- DrainageEq
 - command line option, 75
- DSM, **181**
- DSMname
 - command line option, 163
- DSMPath
 - command line option, 163
- DTM, **181**
- E**
- Emissivity
 - command line option, 76
- EndDLS
 - command line option, 76
- EnergyUseProfWD

command line option, 77
 EnergyUseProfWE
 command line option, 77
 EntrainmentType
 command line option, 155
 ESTM, **181**
 ESTMCode
 command line option, 77
 EveTr, **181**
 EveTrState
 command line option, 148
 evolveTibld
 command line option, 158

F

FAI_Bldgs
 command line option, 78
 FAI_DecTr
 command line option, 78
 FAI_EveTr
 command line option, 79
 Faut
 command line option, 79
 feld
 command line option, 79
 FileCode
 command line option, 29
 FileInputPath
 command line option, 30
 FileOutputPath
 command line option, 30
 FileSonde(id)
 command line option, 156
 FlowChange
 command line option, 79
 Fr_Bldgs
 command line option, 81
 Fr_Bsoil
 command line option, 81
 Fr_DecTr
 command line option, 81
 Fr_ESTMClass_Bldgs1
 command line option, 82
 Fr_ESTMClass_Bldgs2
 command line option, 82
 Fr_ESTMClass_Bldgs3
 command line option, 82
 Fr_ESTMClass_Bldgs4
 command line option, 82
 Fr_ESTMClass_Bldgs5
 command line option, 82
 Fr_ESTMClass_Paved1
 command line option, 82
 Fr_ESTMClass_Paved2

command line option, 83
 Fr_ESTMClass_Paved3
 command line option, 83
 Fr_EveTr
 command line option, 83
 Fr_Grass
 command line option, 83
 Fr_Paved
 command line option, 83
 Fr_Water
 command line option, 84
 Fraction1of8
 command line option, 79
 Fraction2of8
 command line option, 80
 Fraction3of8
 command line option, 80
 Fraction4of8
 command line option, 80
 Fraction5of8
 command line option, 80
 Fraction6of8
 command line option, 80
 Fraction7of8
 command line option, 81
 Fraction8of8
 command line option, 81

G

G1
 command line option, 84
 G2
 command line option, 84
 G3
 command line option, 84
 G4
 command line option, 84
 G5
 command line option, 85
 G6
 command line option, 85
 gamq_gkgm
 command line option, 85
 gamt_Km
 command line option, 85
 GDD_1_0
 command line option, 146
 GDD_2_0
 command line option, 146
 GDDFull
 command line option, 85
 Grass, **181**
 GrassState
 command line option, 148

Grid
 command line option, 86
GridConnection1of8
 command line option, 86
GridConnection2of8
 command line option, 87
GridConnection3of8
 command line option, 87
GridConnection4of8
 command line option, 87
GridConnection5of8
 command line option, 88
GridConnection6of8
 command line option, 88
GridConnection7of8
 command line option, 88
GridConnection8of8
 command line option, 88
gsModel
 command line option, 88
GVF_out
 command line option, 162

H

H_Bldgs
 command line option, 88
H_DecTr
 command line option, 89
H_EveTr
 command line option, 89
heightgravity
 command line option, 164

I

IbldCHmod
 command line option, 158
id
 command line option, 89
Ie_a1
 command line option, 89
Ie_a2
 command line option, 89
Ie_a3
 command line option, 90
Ie_end
 command line option, 90
Ie_m1
 command line option, 90
Ie_m2
 command line option, 90
Ie_m3
 command line option, 90
Ie_start
 command line option, 90

ih
 command line option, 91
imin
 command line option, 91
InfiltrationRate
 command line option, 91
InitialData_use
 command line option, 155
InitialDataFileName
 command line option, 156
Internal_albedo
 command line option, 91
Internal_CHbld
 command line option, 91
Internal_CHroof
 command line option, 92
Internal_CHwall
 command line option, 92
Internal_emissivity
 command line option, 92
Internal_k1
 command line option, 92
Internal_k2
 command line option, 93
Internal_k3
 command line option, 93
Internal_k4
 command line option, 93
Internal_k5
 command line option, 93
Internal_rhoCp1
 command line option, 93
Internal_rhoCp2
 command line option, 93
Internal_rhoCp3
 command line option, 94
Internal_rhoCp4
 command line option, 94
Internal_rhoCp5
 command line option, 94
Internal_thick1
 command line option, 94
Internal_thick2
 command line option, 94
Internal_thick3
 command line option, 95
Internal_thick4
 command line option, 95
Internal_thick5
 command line option, 95
InternalWaterUse
 command line option, 95
IrrFr_DecTr
 command line option, 95

IrrFr_EveTr
 command line option, 95

IrrFr_Grass
 command line option, 96

IrrigationCode
 command line option, 96

it
 command line option, 96

iy
 command line option, 96

K

kdiff
 command line option, 97

kdir
 command line option, 97

kdown
 command line option, 97

Kdown2d_out
 command line option, 162

KdownZen
 command line option, 32

KeepTstepFilesIn
 command line option, 31

KeepTstepFilesOut
 command line option, 31

Kmax
 command line option, 97

Kup2d_out
 command line option, 162

L

L, [182](#)

LAI, [182](#)

lai
 command line option, 97

LAIEq
 command line option, 98

LAInitialDecTr
 command line option, 146

LAInitialEveTr
 command line option, 146

LAInitialGrass
 command line option, 146

LAIMax
 command line option, 98

LAIMin
 command line option, 98

lat
 command line option, 98

LBC_soil
 command line option, 158

ldown
 command line option, 99

Ldown2d_out
 command line option, 161

LeafGrowthPower1
 command line option, 99

LeafGrowthPower2
 command line option, 99

LeafOffPower1
 command line option, 100

LeafOffPower2
 command line option, 100

LeavesOutIntially
 command line option, 145

lng
 command line option, 100

LUMPS, [182](#)

LUMPS_Cover
 command line option, 100

LUMPS_DrRate
 command line option, 101

LUMPS_MaxRes
 command line option, 101

Lup2d_out
 command line option, 161

L↓, [182](#)

M

MaxConductance
 command line option, 101

MD, [182](#)

MU, [182](#)

MultipleESTMFiles
 command line option, 30

MultipleInitFiles
 command line option, 30

MultipleMetFiles
 command line option, 30

MultRainAmongN
 command line option, 33

MultRainAmongNUpperI
 command line option, 34

N

NARP, [182](#)

NARP_Trans
 command line option, 102

ncMode
 command line option, 34

nCol
 command line option, 35

NetRadiationMethod
 command line option, 24

nroom
 command line option, 102

nRow

command line option, [34](#)

O

O, [182](#)

OBS_SMCap

command line option, [102](#)

OBS_SMDepth

command line option, [102](#)

OBS_SoilNotRocks

command line option, [103](#)

OHM, [182](#)

OHMCode_SummerDry

command line option, [103](#)

OHMCode_SummerWet

command line option, [104](#)

OHMCode_WinterDry

command line option, [105](#)

OHMCode_WinterWet

command line option, [106](#)

OHMIncQF

command line option, [26](#)

OHMThresh_SW

command line option, [107](#)

OHMThresh_WD

command line option, [108](#)

onlyglobal

command line option, [161](#)

OutInterval

command line option, [164](#)

P

Paved, [182](#)

PavedState

command line option, [147](#)

PipeCapacity

command line option, [110](#)

PopDensDay

command line option, [110](#)

PopDensNight

command line option, [111](#)

porosity0

command line option, [147](#)

PorosityMax

command line option, [111](#)

PorosityMin

command line option, [111](#)

Posture

command line option, [160](#)

PrecipLimAlb

command line option, [112](#)

PrecipLimSnow

command line option, [112](#)

pres

command line option, [112](#)

Q

q+_gkg

command line option, [114](#)

q_gkg

command line option, [114](#)

QE, [182](#)

qe

command line option, [112](#)

QF, [182](#)

qf

command line option, [112](#)

QF_A_Weekday

command line option, [112](#)

QF_A_Weekend

command line option, [113](#)

QF_B_Weekday

command line option, [113](#)

QF_B_Weekend

command line option, [113](#)

QF_C_Weekday

command line option, [114](#)

QF_C_Weekend

command line option, [114](#)

QH, [182](#)

qh

command line option, [114](#)

QH_Choice

command line option, [155](#)

qn

command line option, [115](#)

qs

command line option, [115](#)

Qstar, [182](#)

R

RadMeltFactor

command line option, [115](#)

rain

command line option, [115](#)

RainAmongN

command line option, [33](#)

RainDisaggMethod

command line option, [33](#)

ResolutionFilesIn

command line option, [29](#)

ResolutionFilesInESTM

command line option, [29](#)

ResolutionFilesOut

command line option, [29](#)

RH

command line option, [115](#)

RoughLenHeatMethod

command line option, [27](#)

RoughLenMomMethod

- command line option, 27
- row
 - command line option, 164
- RunForGrid
 - command line option, 163
- RunoffToWater
 - command line option, 115
- S**
- S1
 - command line option, 116
- S2
 - command line option, 116
- SatHydraulicCond
 - command line option, 116
- SDDFull
 - command line option, 116
- SMDMethod
 - command line option, 28
- snow
 - command line option, 117
- SnowClearingProfWD
 - command line option, 117
- SnowClearingProfWE
 - command line option, 117
- SnowCode
 - command line option, 118
- SnowDensBldgs
 - command line option, 151
- SnowDensBSoil
 - command line option, 152
- SnowDensDecTr
 - command line option, 151
- SnowDensEveTr
 - command line option, 151
- SnowDensGrass
 - command line option, 151
- snowDensMax
 - command line option, 118
- snowDensMin
 - command line option, 119
- SnowDensPaved
 - command line option, 151
- SnowDensWater
 - command line option, 152
- SnowFracBldgs
 - command line option, 150
- SnowFracBSoil
 - command line option, 151
- SnowFracDecTr
 - command line option, 151
- SnowFracEveTr
 - command line option, 150
- SnowFracGras

- command line option, 151
- SnowFracPaved
 - command line option, 150
- SnowFracWater
 - command line option, 151
- SnowIntially
 - command line option, 148
- SnowLimPatch
 - command line option, 119
- SnowLimRemove
 - command line option, 119
- SnowPackBldgs
 - command line option, 150
- SnowPackBSoil
 - command line option, 150
- SnowPackDecTr
 - command line option, 150
- SnowPackEveTr
 - command line option, 150
- SnowPackGrass
 - command line option, 150
- SnowPackPaved
 - command line option, 149
- SnowPackWater
 - command line option, 150
- SnowUse
 - command line option, 23
- SnowWaterBldgsState
 - command line option, 149
- SnowWaterBSoilState
 - command line option, 149
- SnowWaterDecTrState
 - command line option, 149
- SnowWaterEveTrState
 - command line option, 149
- SnowWaterGrassState
 - command line option, 149
- SnowWaterPavedState
 - command line option, 149
- SnowWaterWaterState
 - command line option, 149
- SoilDensity
 - command line option, 120
- SoilDepth
 - command line option, 120
- SoilstoreBldgsState
 - command line option, 145
- SoilstoreBSoilState
 - command line option, 145
- SoilStoreCap
 - command line option, 120
- SoilstoreDecTrState
 - command line option, 145
- SoilstoreEveTrState

command line option, 145
SoilstoreGrassState
command line option, 145
SoilstorePavedState
command line option, 145
SoilTypeCode
command line option, 120
SOLWEIG, **182**
SOLWEIG_ldown
command line option, 162
SOLWEIGpoi_out
command line option, 161
SOLWEIGUse
command line option, 23
Sondeflag
command line option, 156
StabilityMethod
command line option, 27
StartDLS
command line option, 121
StateLimit
command line option, 121
StorageHeatMethod
command line option, 26
StorageMax
command line option, 122
StorageMin
command line option, 123
SuppressWarnings
command line option, 31
Surf_k1
command line option, 124
Surf_k2
command line option, 124
Surf_k3
command line option, 124
Surf_k4
command line option, 125
Surf_k5
command line option, 125
Surf_rhoCp1
command line option, 125
Surf_rhoCp2
command line option, 125
Surf_rhoCp3
command line option, 125
Surf_rhoCp4
command line option, 125
Surf_rhoCp5
command line option, 126
Surf_thick1
command line option, 126
Surf_thick2
command line option, 126

Surf_thick3
command line option, 126
Surf_thick4
command line option, 126
Surf_thick5
command line option, 127
SurfaceArea
command line option, 124
SVF, **182**
SVFPath
command line option, 164
SVFSuffix
command line option, 164

T

Tair
command line option, 127
tau_a
command line option, 127
tau_f
command line option, 127
tau_r
command line option, 127
TCritic
command line option, 127
TDSMname
command line option, 164
Temp_C0
command line option, 147
TempMeltFactor
command line option, 128
TH
command line option, 128
Theat_fix
command line option, 159
Theat_off
command line option, 159
Theat_on
command line option, 159
theta, **182**
Theta+_K
command line option, 128
Theta_K
command line option, 128
Tiair
command line option, 128
Timezone
command line option, 129
TL
command line option, 129
Tmrt_out
command line option, 161
ToBldgs
command line option, 129

ToBSoil
 command line option, 129
ToDecTr
 command line option, 129
ToEveTr
 command line option, 130
ToGrass
 command line option, 130
ToPaved
 command line option, 130
ToRunoff
 command line option, 130
ToSoilStore
 command line option, 130
ToWater
 command line option, 130
TrafficRate
 command line option, 131
TransMax
 command line option, 164
TransMin
 command line option, 164
Troad
 command line option, 131
Troof
 command line option, 131
Tstep
 command line option, 29
Tsurf
 command line option, 131
TsurfChoice
 command line option, 158
tt, [182](#)
Twall
 command line option, 131
Twall_e
 command line option, 132
Twall_n
 command line option, 132
Twall_s
 command line option, 132
Twall_w
 command line option, 132

U

U
 command line option, 132
UMEP, [182](#)
usevegdem
 command line option, 160

W

Wall_k1
 command line option, 133

Wall_k2
 command line option, 133
Wall_k3
 command line option, 133
Wall_k4
 command line option, 133
Wall_k5
 command line option, 133
Wall_rhoCp1
 command line option, 133
Wall_rhoCp2
 command line option, 134
Wall_rhoCp3
 command line option, 134
Wall_rhoCp4
 command line option, 134
Wall_rhoCp5
 command line option, 134
Wall_thick1
 command line option, 134
Wall_thick2
 command line option, 135
Wall_thick3
 command line option, 135
Wall_thick4
 command line option, 135
Wall_thick5
 command line option, 135
WATCH, [182](#)
Water, [182](#)
WaterDepth
 command line option, 135
WaterState
 command line option, 148
WaterUseMethod
 command line option, 28
WaterUseProfAutoWD
 command line option, 136
WaterUseProfAutoWE
 command line option, 136
WaterUseProfManuWD
 command line option, 136
WaterUseProfManuWE
 command line option, 137
wdir
 command line option, 137
WetThreshold
 command line option, 137
WithinGridBldgsCode
 command line option, 138
WithinGridBSoilCode
 command line option, 138
WithinGridDecTrCode
 command line option, 139

WithinGridEveTrCode
 command line option, [139](#)
WithinGridGrassCode
 command line option, [139](#)
WithinGridPavedCode
 command line option, [140](#)
WithinGridWaterCode
 command line option, [140](#)
WriteOutOption
 command line option, [31](#)
Wsb
 command line option, [156](#)
Wuh
 command line option, [140](#)

X

xsmc
 command line option, [141](#)

Y

Year
 command line option, [141](#)

Z

z
 command line option, [141](#)
z0
 command line option, [141](#)
zd
 command line option, [142](#)
zi, [182](#)
zi0
 command line option, [142](#)