

S T A N D A R D



Temperature Device Family Specification

HCF_SPEC-160.4, Revision 2.0

Release Date: 12 May, 2011

Release Date: 12 May, 2011

Document Distribution / Maintenance Control / Document Approval

To obtain information concerning document distribution control, maintenance control and document approval, please contact the HART Communication Foundation at the address shown below.

Copyright © 2011 (2001) HART® Communication Foundation

This document contains copyrighted material and may not be reproduced in any fashion without the written permission of the HART Communication Foundation.

Trademark Information

HART® is a registered trademark of the HART Communication Foundation, Austin, Texas, USA. Any use of the term HART hereafter in this document, or in any document referenced by this document, implies the registered trademark. WirelessHART® is a trademark of the HART Communication Foundation. All other trademarks used in this or referenced documents are trademarks of their respective companies. For more information contact the HCF Staff at the address below.



Attention: Foundation Director
HART Communication Foundation
9390 Research Boulevard
Suite I-350
Austin, TX 78759, USA
Voice: (512) 794-0369
FAX: (512) 794-3904

<http://www.hartcomm.org>

Intellectual Property Rights

The HCF does not knowingly use or incorporate any information or data into the HART Protocol Standards which the HCF does not own or have lawful rights to use. Should the HCF receive any notification regarding the existence of any conflicting Private IPR, the HCF will review the disclosure and either (a) determine there is no conflict; (b) resolve the conflict with the IPR owner; or (c) modify the standard to remove the conflicting requirement. In no case does the HCF encourage implementers to infringe on any individual's or organization's IPR.

Table of Contents

1. Scope.....	5
2. References	5
2.1 HART Field Communications Protocol Specifications	5
2.2 Related HART Documents	5
2.3 Related Documents.....	6
3. Definitions, Symbols and Acronyms.....	6
4. Overview	6
5. Commands	8
5.1 Command 1024 Read Temperature Status (Mandatory)	8
5.2 Command 1025 Read Temperature Configuration (Mandatory)	10
5.3 Command 1026 Read Thermocouple Configuration (Mandatory if thermocouples are supported).....	12
5.4 Command 1027 Read Callendar-Van Dusen Coefficients (Mandatory if Calibrated RTDs are supported)	14
5.5 Command 1152 Write Temperature Probe Type (Mandatory)	16
5.6 Command 1153 Write Temperature Standard (Optional).....	18
5.7 Command 1154 Write Temperature Probe Connection (Optional).....	20
5.8 Command 1155 Select Cold Junction Compensation Type (Optional)	22
5.9 Command 1556 Write Manual Cold Junction Temperature (Optional).....	24
5.10 Command 1157 Write Temperature Callendar Van Dusen Coefficients (Mandatory if Calibrated RTDs are supported).....	26
6. Temperature Device Family Tables	28
6.1 Table 1. Temperature Family Device Variable Status	28
6.2 Table 2. Temperature Family Status 0	28
6.3 Table 3. Temperature Probe Types	28
6.4 Table 4. Temperature Probe Connections	31
6.5 Table 5. Thermocouple Cold Junction Compensation.....	31
6.6 Table 6. Temperature Standards	32
Annex A. Revision History	33

Table of Figures

Figure 1. Temperature Family Properties7

1. SCOPE

This Device Family defines the properties of a temperature measurement Device Variable. This Device Family is applicable to any temperature measurement that includes a user selectable sensing element. This includes classical temperature transmitters, flow meters, pH meters, and hydrostatic tank gauges, to name a few.

The Temperature Device Family supports milli-volt and resistance measurements in addition to temperature sensors like RTDs and thermocouples.

2. REFERENCES

2.1 HART Field Communications Protocol Specifications

These documents published by the HART Communication Foundation are referenced throughout this specification:

HART Field Communications Protocol Specification. HCF_SPEC-12

Command Summary Specification. HCF_SPEC-99

Device Families Command Specification. HCF_SPEC-160

Common Tables Specification. HCF_SPEC-183

Command Response Code Specification. HCF_SPEC-307

2.2 Related HART Documents

The HART Protocol Specifications frequently reference the manufacturers' device-specific document. Device-specific documents are developed and controlled by the respective manufacturer and should follow the requirements of the following HART Communication Foundation document:

Requirements for Device Specific Documentation. HCF_LIT-18

2.3 Related Documents

The following documents provide background information relevant to temperature measurement and this device family:

International Practical Temperature Scale of 1968 (IPTS-68) U.S. Dept. of Commerce, National Bureau of Standards, 1968.

"International Temperature Scale of 1990 (ITS-90)" *Metrologia*. Springer-Verlag. 1990

"OMEGA ENGINEERING – Technical Reference Section."
<http://www.omega.com/techref>

"Honeywell Hvac - Temperature Tutorial".
http://content.honeywell.com/building/components/Hycal_Html/temp.asp

3. DEFINITIONS, SYMBOLS AND ACRONYMS

Terms used in this document and defined in *HART Field Communications Protocol Specification* include: Delayed Response, Delayed Response Mechanism, Device Variable, Busy, DR_CONFLICT, DR_DEAD, DR_INITIATE, DR_RUNNING, Floating Point, Request Data Bytes, Response Data Bytes, Response Message, Units Code

Device Family, or Device Family Specification	The definition of the properties, diagnostics and commands required to manage a Device Variable. The Device Family specification includes all the mandatory and optional properties necessary to configure the corresponding class of process connections.
--	--

4. OVERVIEW

Figure 1 shows a diagram of a typical temperature device and some of properties associated to be characterized and configured with this Device Family

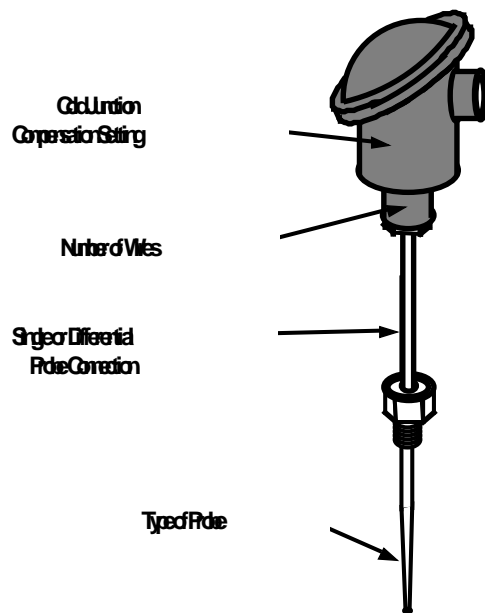


Figure 1. Temperature Family Properties

In addition to the properties shown in Figure 1 this Device Family allows for connecting calibrated RTDs using their Callendar-Van Dusen coefficients; and specifying the temperature scale standard (e.g., IPTS-68 or ITS-90).

5. COMMANDS

5.1 Command 1024 Read Temperature Status (Mandatory)

All Device Families allow additional status information to be provided to host applications. This Device Family Status is in addition to the Device Variable Status information provided with all Device Variables and Dynamic Variables.

Request Data Bytes

Byte	Format	Description
0	Unsigned-8	Device Variable Code (see Device Variable Codes Table in appropriate device-specific document)

Response Data Bytes

Byte	Format	Description
0	Unsigned-8	Device Variable Code
1	Bits	Temperature Family Device Variable Status (See Section 6.1)
2	Bits	Temperature Family Status 0 (See Section 6.2)

Command-Specific Response Codes

Code	Class	Description
0	Success	No Command-Specific Errors
1		Undefined
2	Error	Invalid Selection
3 - 4		Undefined
5	Error	Too Few Data Bytes Received
6	Error	Device-Specific Command Error
7 - 15		Undefined
16	Error	Access Restricted
8-15		Undefined
16	Error	Access Restricted
17	Error	Invalid Device Variable Index. The Device Variable does not exist in this field device.
18		Undefined
19	Error	Device Variable index not allowed for this command.
20-127		Undefined

5.2 Command 1025 Read Temperature Configuration (Mandatory)

This command reads the temperature configuration including: the type of probe (thermocouple, RTD, milli-volt, resistance); the number of wires used by the probe; and the temperature standard used for this measurement.

There are two widely used temperature standards: ITS-90 and IPTS-68. There is a difference of 0.01 to 0.1Kelvin between the two standards over the range from 10K to 700K. Please see relevant standards for details.

Request Data Bytes

Byte	Format	Description
0	Unsigned-8	Device Variable Code (see Device Variable Codes Table in appropriate device-specific document)

Response Data Bytes

Byte	Format	Description
0	Unsigned-8	Device Variable Code
1	Enum	Probe Type (see Section 6.1)
2	Unsigned-8	Number Of Wires
3	Enum	Temperature Standard (see Section 6.6)
4	Enum	Probe Connection (see Section 6.4)

Command-Specific Response Codes

Code	Class	Description
0	Success	No Command-Specific Errors
1		Undefined
2	Error	Invalid Selection
3 - 4		Undefined
5	Error	Too Few Data Bytes Received
6	Error	Device-Specific Command Error
7 - 15		Undefined
16	Error	Access Restricted
8-15		Undefined
16	Error	Access Restricted
17	Error	Invalid Device Variable Index. The Device Variable does not exist in this field device.
18		Undefined
19	Error	Device Variable index not allowed for this command.
20-127		Undefined

5.3 Command 1026 Read Thermocouple Configuration (Mandatory if thermocouples are supported)

This command reads the additional installation and configuration information necessary when the connected temperature probe is a thermocouple. Most of the properties read by this command relate to Cold Junction Compensation. Cold-Junction Compensation is used to eliminate parasitic thermocouple effects. This is accomplished by using the reference-junction temperature to estimate the parasitic thermocouple thermoelectric voltage contributions.

Request Data Bytes

Byte	Format	Description
0	Unsigned-8	Device Variable Code (see Device Variable Codes Table in appropriate device-specific document)

Response Data Bytes

Byte	Format	Description
0	Unsigned-8	Device Variable Code
1	Enum	Probe Connection (see Section 6.4)
2	Enum	Cold Junction Compensation Type (see Section 6.5)
3	Enum	Manual Cold Junction Compensation Temperature Units (refer to <i>Common Tables Specification</i>)
4-7	Float	Manual Cold Junction Compensation Temperature

Command-Specific Response Codes

Code	Class	Description
0	Success	No Command-Specific Errors
1		Undefined
2	Error	Invalid Selection
3 - 4		Undefined
5	Error	Too Few Data Bytes Received
6	Error	Device-Specific Command Error
7 - 15		Undefined
16	Error	Access Restricted
8-15		Undefined
16	Error	Access Restricted
17	Error	Invalid Device Variable Index. The Device Variable does not exist in this field device.
18		Undefined
19	Error	Device Variable index not allowed for this command.
20-127		Undefined

5.4 Command 1027 Read Callendar-Van Dusen Coefficients (Mandatory if Calibrated RTDs are supported)

Callendar-Van Dusen Coefficients allows an RTDs temperature response to be precisely described. If calibrated RTDs are supported, then this command must be supported. The Callendar-Van Dusen equation is:

$$R_T = R_0 (1 + AT + BT^2 - 100CT^3 + CT^4)$$

Where R_0 is the resistance at 0°C; T is the temperature (in degrees C); and R_T is the resistance at temperature T.

Request Data Bytes

Byte	Format	Description
0	Unsigned-8	Device Variable Code (see Device Variable Codes Table in appropriate device-specific document)

Response Data Bytes

Byte	Format	Description
0	Unsigned-8	Device Variable Code
1-4	Float	CVD A
5-8	Float	CVD B
9-12	Float	CVD C
13-16	Float	CVD R0

Command-Specific Response Codes

Code	Class	Description
0	Success	No Command-Specific Errors
1		Undefined
2	Error	Invalid Selection
3 - 4		Undefined
5	Error	Too Few Data Bytes Received
6	Error	Device-Specific Command Error
7 - 15		Undefined
16	Error	Access Restricted
8-15		Undefined
16	Error	Access Restricted
17	Error	Invalid Device Variable Index. The Device Variable does not exist in this field device.
18		Undefined
19	Error	Device Variable index not allowed for this command.
20-127		Undefined

5.5 Command 1152 Write Temperature Probe Type (Mandatory)

Writes the temperature probe type and number of wires connecting the probe to the field device.

Request Data Bytes

Byte	Format	Description
0	Unsigned-8	Device Variable Code (see Device Variable Codes Table in appropriate device-specific document)
1	Enum	Probe Type (see Section 6.1)
2	Unsigned-8	Number Of Wires

Response Data Bytes

Byte	Format	Description
0	Unsigned-8	Device Variable Code
1	Enum	Probe Type (see Section 6.1)
2	Unsigned-8	Number Of Wires

Command-Specific Response Codes

Code	Class	Description
0	Success	No Command-Specific Errors
1		Undefined
2	Error	Invalid Selection
3 - 4		Undefined
5	Error	Too Few Data Bytes Received
6	Error	Device-Specific Command Error
7	Error	In Write Protect Mode
8		Undefined
9	Error	Unsupported Probe Type
10	Error	Invalid Number of Wires
11-15		Undefined
16	Error	Access Restricted
17	Error	Invalid Device Variable Index. The Device Variable does not exist in this field device.
18		Undefined
19	Error	Device Variable index not allowed for this command.
20-31		Undefined
32	Error	Busy (A DR Could Not Be Started)
33	Error	DR Initiated
34	Error	DR Running
35	Error	DR Dead
36	Error	DR Conflict
37 - 127		Undefined

5.6 Command 1153 Write Temperature Standard (Optional)

Allows the temperature standard to be selected. There are two widely used temperature standards: ITS-90 and IPTS-68. These two standards differ by about 0.01 to 0.1Kelvin between 10K to 700K. Please see relevant standards for details.

Request Data Bytes

Byte	Format	Description
0	Unsigned-8	Device Variable Code (see Device Variable Codes Table in appropriate device-specific document)
1	Enum	Temperature Standard (see Section 6.6)

Response Data Bytes

Byte	Format	Description
0	Unsigned-8	Device Variable Code
1	Enum	Temperature Standard (see Section 6.6)

Command-Specific Response Codes

Code	Class	Description
0	Success	No Command-Specific Errors
1		Undefined
2	Error	Invalid Selection
3 - 4		Undefined
5	Error	Too Few Data Bytes Received
6	Error	Device-Specific Command Error
7	Error	In Write Protect Mode
8		Undefined
9	Error	Invalid Temperature Standard Code
10-15		Undefined
16	Error	Access Restricted
17	Error	Invalid Device Variable Index. The Device Variable does not exist in this field device.
18		Undefined
19	Error	Device Variable index not allowed for this command.
20-31		Undefined
32	Error	Busy (A DR Could Not Be Started)
33	Error	DR Initiated
34	Error	DR Running
35	Error	DR Dead
36	Error	DR Conflict
37 - 127		Undefined

5.7 Command 1154 Write Temperature Probe Connection (Optional)

Allows the thermocouple probe connection style to be entered (e.g. single or differential).

Request Data Bytes

Byte	Format	Description
0	Unsigned-8	Device Variable Code (see Device Variable Codes Table in appropriate device-specific document)
1	Enum	Probe Connection (see Section 6.4))

Response Data Bytes

Byte	Format	Description
0	Unsigned-8	Device Variable Code
1	Enum	Probe Connection (see Section 6.4)

Command-Specific Response Codes

Code	Class	Description
0	Success	No Command-Specific Errors
1		Undefined
2	Error	Invalid Selection
3 - 4		Undefined
5	Error	Too Few Data Bytes Received
6	Error	Device-Specific Command Error
7	Error	In Write Protect Mode
8		Undefined
9	Error	Invalid Probe Connection Code
10-15		Undefined
16	Error	Access Restricted
17	Error	Invalid Device Variable Index. The Device Variable does not exist in this field device.
18		Undefined
19	Error	Device Variable index not allowed for this command.
20-31		Undefined
32	Error	Busy (A DR Could Not Be Started)
33	Error	DR Initiated
34	Error	DR Running
35	Error	DR Dead
36	Error	DR Conflict
37 - 127		Undefined

5.8 Command 1155 Select Cold Junction Compensation Type (Optional)

Allows the method of Cold Junction Compensation to be selected.

Request Data Bytes

Byte	Format	Description
0	Unsigned-8	Device Variable Code (see Device Variable Codes Table in appropriate device-specific document)
1	Enum	Cold Junction Compensation Type (see Section 6.5)

Response Data Bytes

Byte	Format	Description
0	Unsigned-8	Device Variable Code
1	Enum	Cold Junction Compensation Type (see Section 6.5)

Command-Specific Response Codes

Code	Class	Description
0	Success	No Command-Specific Errors
1		Undefined
2	Error	Invalid Selection
3 - 4		Undefined
5	Error	Too Few Data Bytes Received
6	Error	Device-Specific Command Error
7	Error	In Write Protect Mode
8		Undefined
9	Error	Invalid Cold Junction Compensation Code
10-15		Undefined
16	Error	Access Restricted
17	Error	Invalid Device Variable Index. The Device Variable does not exist in this field device.
18		Undefined
19	Error	Device Variable index not allowed for this command.
20-31		Undefined
32	Error	Busy (A DR Could Not Be Started)
33	Error	DR Initiated
34	Error	DR Running
35	Error	DR Dead
36	Error	DR Conflict
37 - 127		Undefined

5.9 Command 1556 Write Manual Cold Junction Temperature (Optional)

Allows a manual CJC temperature to be written to the device.

Request Data Bytes

Byte	Format	Description
0	Unsigned-8	Device Variable Code (see Device Variable Codes Table in appropriate device-specific document)
1	Enum	Manual Cold Junction Compensation Temperature Units (refer to <i>Common Tables Specification</i>)
2-5	Float	Manual Cold Junction Compensation Temperature

Response Data Bytes

Byte	Format	Description
0	Unsigned-8	Device Variable Code
1	Enum	Manual Cold Junction Compensation Temperature Units (refer to <i>Common Tables Specification</i>)
2-5	Float	Manual Cold Junction Compensation Temperature

Command-Specific Response Codes

Code	Class	Description
0	Success	No Command-Specific Errors
1		Undefined
2	Error	Invalid Selection
3 - 4		Undefined
5	Error	Too Few Data Bytes Received
6	Error	Device-Specific Command Error
7	Error	In Write Protect Mode
8		Undefined
9	Error	CJC Temperature too High
10	Error	CJC Temperature too Low
11-15		Undefined
16	Error	Access Restricted
17	Error	Invalid Device Variable Index. The Device Variable does not exist in this field device.
18		Invalid Units Code
19	Error	Device Variable index not allowed for this command.
20-31		Undefined
32	Error	Busy (A DR Could Not Be Started)
33	Error	DR Initiated
34	Error	DR Running
35	Error	DR Dead
36	Error	DR Conflict
37 - 127		Undefined

5.10 Command 1157 Write Temperature Callendar Van Dusen Coefficients (Mandatory if Calibrated RTDs are supported)

This command allows the Callendar-Van Dusen Coefficients for a calibrated RTD to be written to the field device. This command must be supported if the device supports Callendar-Van Dusen Coefficients. (See Section 5.4 for more information).

Request Data Bytes

Byte	Format	Description
0	Unsigned-8	Device Variable Code (see Device Variable Codes Table in appropriate device-specific document)
1-4	Float	CVD A
5-8	Float	CVD B
9-12	Float	CVD C
13-16	Float	CVD R0

Response Data Bytes

Byte	Format	Description
0	Unsigned-8	Device Variable Code
1-4	Float	CVD A
5-8	Float	CVD B
9-12	Float	CVD C
13-16	Float	CVD R0

Command-Specific Response Codes

Code	Class	Description
0	Success	No Command-Specific Errors
1		Undefined
2	Error	Invalid Selection
3 - 4		Undefined
5	Error	Too Few Data Bytes Received
6	Error	Device-Specific Command Error
7	Error	In Write Protect Mode
8		Undefined
9	Error	Coefficient A Invalid
10	Error	Coefficient B Invalid
11	Error	Coefficient C Invalid
12	Error	Coefficient R0 Invalid
13-15		Undefined
16	Error	Access Restricted
17	Error	Invalid Device Variable Index. The Device Variable does not exist in this field device.
18		Undefined
19	Error	Device Variable index not allowed for this command.
20-31		Undefined
32	Error	Busy (A DR Could Not Be Started)
33	Error	DR Initiated
34	Error	DR Running
35	Error	DR Dead
36	Error	DR Conflict
37 - 127		Undefined

6. TEMPERATURE DEVICE FAMILY TABLES

6.1 Table 1. Temperature Family Device Variable Status

Code	Measurement
0xC0	Data Quality
0x40	More Device Family Status Available
0x01	Probe Break Detected

6.2 Table 2. Temperature Family Status 0

Code	Measurement
	<i>Reserved</i>

6.3 Table 3. Temperature Probe Types

Note: Unless otherwise indicated, thermocouple references are: IEC 584, NIST MN 175, DIN 43710, BS 4937, ANSI MC96.1, JIS C1602 and NF C42-321.

Code	Probe Type/Measurement
1	Ohms
2	KiloOhms
3	Calibrated RTD (The Write Calendar-Van Dusen Coefficients Device Family Command must be supported to use this enumeration.)
11	RTD Pt 50 a=0.003850 (IEC751)
12	RTD Pt 100 a=0.003850
13	RTD Pt 200 a=0.003850
14	RTD Pt 500 a=0.003850
15	RTD Pt 1000 a=0.003850
21	RTD Pt 50 a=0.003916 (JIS C1604-81)

Code	Probe Type/Measurement		
22	RTD Pt 100	a=0.003916	
23	RTD Pt 200	a=0.003916	
31	RTD Pt 50	a=0.003920	(MIL-T-24388)
32	RTD Pt 100	a=0.003920	
33	RTD Pt 200	a=0.003920	
34	RTD Pt 500	a=0.003920	
35	RTD Pt 1000	a=0.003920	
41	RTD Pt 10	a=0.003923	(SAMA RC21-4-1966)
42	RTD Pt 100	a=0.003923	
43	RTD Pt 200	a=0.003923	
51	RTD Pt 100	a=0.003926	(IPTS-68)
61	RTD Ni 50	a=0.006720	(Edison curve #7)
62	RTD Ni 100	a=0.006720	
63	RTD Ni 120	a=0.006720	
64	RTD Ni 1000	a=0.006720	
71	RTD Ni 50	a=0.006180	(DIN 43760)
72	RTD Ni 100	a=0.006180	
73	RTD Ni 120	a=0.006180	
74	RTD Ni 1000	a=0.006180	
81	RTD Cu 10	a=0.004270	
82	RTD Cu 100	a=0.004270	
91	RTD Cu 10	a=0.004260	(SAMA RC21-4-1966)
92	RTD Cu 100	a=0.004260	
101	RTD Cu 10	a=0.004250	(JEM 1252-1991)
102	RTD Cu 100	a=0.004250	
103	RTD Cu 50	a=0.004260	
104	RTD Cu 50	a=0.004280	
105	RTD Cu 100	a=0.004280	

Code	Probe Type/Measurement
-------------	-------------------------------

106	RTD Pt 50 a=0.003910
-----	----------------------

107	RTD Pt 100 a=0.003910
-----	-----------------------

128	Micro-Volts
-----	-------------

129	Milli-Volts
-----	-------------

130	Volts
-----	-------

131	TC Type B (Pt30Rh-Pt6Rh) (IEC 584 etc.)
-----	---

132	TC Type W5, Omega type C (W5-W26Rh)(ASTM E 988)
-----	---

133	TC Type W3, Omega type D (W3-W25Rh)(ASTM E 988)
-----	--

134	TC Type E (Ni10Cr-Cu45Ni) (IEC 584 etc.)
-----	--

135	TC Type W, Omega type G (W-W26Rh)(ASTM E 988)
-----	---

136	TC Type J (Fe-Cu45Ni) (IEC 584 etc.)
-----	--------------------------------------

137	TC Type K (Ni10Cr-Ni5) (IEC 584 etc.)
-----	---------------------------------------

138	TC Type N (Ni14CrSi-NiSi) (IEC 584 etc.)
-----	--

139	TC Type R (Pt13Rh-Pt) (IEC 584 etc.)
-----	--------------------------------------

140	TC Type S (Pt10Rh-Pt) (IEC 584 etc.)
-----	--------------------------------------

141	TC Type T (Cu-Cu45Ni) (IEC 584 etc.)
-----	--------------------------------------

142	TC Type L (Fe-CuNi) (DIN 43710)
-----	---------------------------------

143	TC Type U (Cu-CuNi) (DIN 43710)
-----	---------------------------------

144	TC Pt20Rh-Pt40Rh (ASTM E 1751)
-----	--------------------------------

145	TC Ir-Ir40Rh (ASTM E 1751)
-----	----------------------------

146	TC Platinel II
-----	----------------

147	TC Ni-NiMo
-----	------------

148	GOST L T/C
-----	------------

221	Bi-metallic strip
-----	-------------------

222	Vapor pressure bulb
-----	---------------------

223	Liquid expansion
-----	------------------

224	Mercury bulb
-----	--------------

240 - 249	For Manufacturer Specific Temperature Probes Types
--------------	--

251	None
-----	------

252	Unknown
-----	---------

253	Special
-----	---------

6.4 Table 4. Temperature Probe Connections

Code	Probe Connection Type
1	Single. One probe is used to measure temperature.
2	Differential Thermocouple. Two probes are connected in series to read differential temperature
3	Differential RTD. Two probes are connected so as to read differential temperature.
240 - 249	For Manufacturer Specific Probe Connections
250	Not Used
251	None
252	Unknown
253	Special

6.5 Table 5. Thermocouple Cold Junction Compensation

Code	CJC Temperature Source
1	Internal CJC Temperature Measurement
2	External CJC Temperature Measurement
3	A Fixed CJC temperature value is supplied
240 - 249	For Manufacturer Specific CJC Types
250	Not Used
251	None
252	Unknown
253	Special

6.6 Table 6. Temperature Standards

Code	Temperature Standard
1	International Practical Temperature Scale of 1968 (IPTS-68)
2	International Temperature Scale of 1990 (ITS-90)
240 - 249	For Manufacturer Specific Temperature Standards
250	Not Used
251	None
252	Unknown
253	Special

ANNEX A. REVISION HISTORY

A1. Changes from Revision 1.0 to 2.0

Changes made to Tables 3, Table 4, Command 1025 and Command 1154.

A2. Revision 1.0

Initial Revision.