



Siemens
Industry
Online
Support

APPLICATION EXAMPLE

EtherNet/IP Scanner for SIMATIC

S7-1200/ S7-1500/ EtherNet/IP

SIEMENS

Legal information

Use of application examples

Application examples illustrate the solution of automation tasks through an interaction of several components in the form of text, graphics and/or software modules. The application examples are a free service by Siemens AG and/or a subsidiary of Siemens AG ("Siemens"). They are non-binding and make no claim to completeness or functionality regarding configuration and equipment. The application examples merely offer help with typical tasks; they do not constitute customer-specific solutions. **The application examples are not subject to standard tests and quality inspections of a chargeable product and may contain functional and performance defects or other faults and security vulnerabilities. You are responsible for the proper and safe operation of the products in accordance with all applicable regulations, including checking and customizing the application example for your system, and ensuring that only trained personnel use it in a way that prevents property damage or injury to persons. You are solely responsible for any productive use.**

Siemens grants you the non-exclusive, non-sublicensable and non-transferable right to have the application examples used by technically trained personnel. Any change to the application examples is your responsibility. Sharing the application examples with third parties or copying the application examples or excerpts thereof is permitted only in combination with your own products. Any further use of the application examples is explicitly not permitted and further rights are not granted. You are not allowed to use application examples in any other way, including, without limitation, for any direct or indirect training or enhancements of AI models.

Disclaimer of liability

Siemens shall not assume any liability, for any legal reason whatsoever, including, without limitation, liability for the usability, availability, completeness and freedom from defects of the application examples as well as for related information, configuration and performance data and any damage caused thereby. This shall not apply in cases of mandatory liability, for example under the German Product Liability Act, or in cases of intent, gross negligence, or culpable loss of life, bodily injury or damage to health, non-compliance with a guarantee, fraudulent non-disclosure of a defect, or culpable breach of material contractual obligations. Claims for damages arising from a breach of material contractual obligations shall however be limited to the foreseeable damage typical of the type of agreement, unless liability arises from intent or gross negligence or is based on loss of life, bodily injury or damage to health. The foregoing provisions do not imply any change in the burden of proof to your detriment. You shall indemnify Siemens against existing or future claims of third parties in this connection except where Siemens is mandatorily liable.

By using the application examples you acknowledge that Siemens cannot be held liable for any damage beyond the liability provisions described.

Other information

Siemens reserves the right to make changes to the application examples at any time without notice and to terminate your use of the application examples at any time. In case of discrepancies between the suggestions in the application examples and other Siemens publications such as catalogs, the content of the other documentation shall have precedence.

The Siemens terms of use (<https://www.siemens.com/global/en/general/terms-of-use.html>) shall also apply.

Cybersecurity information

Siemens provides products and solutions with industrial cybersecurity functions that support the secure operation of plants, systems, machines and networks.

In order to protect plants, systems, machines and networks against cyber threats, it is necessary to implement – and continuously maintain – a holistic, state-of-the-art industrial cybersecurity concept. Siemens' products and solutions constitute one element of such a concept.

Customers are responsible for preventing unauthorized access to their plants, systems, machines and networks. Such systems, machines and components should only be connected to an enterprise network or the internet if and to the extent such a connection is necessary and only when appropriate security measures (e.g. firewalls and/or network segmentation) are in place.

For additional information on industrial cybersecurity measures that may be implemented, please visit www.siemens.com/cybersecurity-industry.

Siemens' products and solutions undergo continuous development to make them more secure. Siemens strongly recommends that product updates are applied as soon as they are available and that the latest product versions are used. Use of product versions that are no longer supported, and failure to apply the latest updates may increase customer's exposure to cyber threats.

To stay informed about product updates, subscribe to the Siemens Industrial Cybersecurity RSS Feed under <https://www.siemens.com/cert>.

Table of contents

1.	Preface.....	4
2.	Introduction	6
2.1.	Description	6
2.2.	EtherNet/IP	7
2.3.	Function principle	8
2.4.	Scope of delivery	8
3.	Commissioning	9
3.1.	Preparation	9
3.2.	Connecting the hardware components.....	9
4.	Configuration/Engineering	11
4.1.	Creating and managing projects	11
4.2.	Creating the EtherNet/IP IO system.....	13
4.2.1.	Creating an Adapter description.....	14
4.2.2.	EDS files.....	15
5.	Operating	25
5.1.	Start the application	25
5.2.	Troubleshooting.....	26
5.2.1.	Physical check	26
5.2.2.	Network Settings.....	27
5.2.3.	SIMATIC Program	29
6.	LCCF_EnetScanner block	30
6.1.	Parameters	30
6.1.1.	Block status messages	32
6.1.2.	Technical data.....	34
6.2.	What's next?.....	37
7.	Appendix.....	38
7.1.	Service and support.....	38
7.2.	Links and literature.....	39
7.3.	Change documentation	39

1. Preface

Purpose

This document contains information about the LCCF_EnetScanner function block for SIMATIC S7-1200 and S7-1500. It will explain its usage and parameterization as well as provide some basic background information about the implemented services defined by the ODVA®.

Core content

The following core issues are covered in this document:

- Purpose of the function block
- Parameterization
- Data exchange with EtherNet/IP adapters

Required basic knowledge

General knowledge in communications over Ethernet, programming and configuring the S7-1200 or S7-1500 with the TIA Portal is assumed and will not be part of this document. It is also assumed that the terms Server and Client and their meaning are familiar to the reader. Furthermore, the reader shall be proficient in the technology of PROFINET as several concepts will be referred to.

Delimitation

The document does not describe:

- How to setup Ethernet networks
- How to assign IP addresses and the split into subnets
- How to configure the controllers in this example
- How to configure the LCCF_EnetAdapter function block for SIMATIC S7
- How to take network traces and/ or analyze network traffic

Basic knowledge about the above topics is assumed.

Validity

This document is valid for the following components

- TIA Portal
- SIMATIC S7 Controller

The following hardware and software are used throughout this document.

Table 1-1: used components

Name	Part number	Version
SIMATIC S7-1215C	6ES7 215-1AG40-0XB0	V4.2 (or above)
SIMATIC S7-1512C	6ES7 512-1CK00-0AB0	V2.6 (or above)
ET200SP MF	6ES7155-6MU00-0CN0	V5.0 (or above)
TIA Portal STEP7 Prof.		V15.1 Update 4
MFCT		V1.0

In this application example the S7-1500 is operated as EtherNet/IP Scanner, while the S7-1200 is operated as EtherNet/IP adapter.

The application example for the LCCF_EnetAdapter function block can be downloaded using the SIOS ID: 109782315

<https://support.industry.siemens.com/cs/ww/en/view/109782315>

2. Introduction

2.1. Description

Although, according to the number of installed nodes PROFINET is the largest Ethernet based fieldbus in the world, EtherNet/IP is at number 3. Especially in several regions of the world EtherNet/IP has a dominating role. SIMATIC controller inherently don't have support for field devices using EtherNet/IP.


In this application example a possible solution is demonstrated and explained, how such EtherNet/IP field devices can still be used with SIMATIC controller. Here SIMATIC controller applies to both S7-1500 and S7-1200.

In this example the S7-1200 will be operated as such EtherNet/IP field device together with the ET200SP MF interface module. The S7-1500 shown in the below schematic is operated as the device controlling the field devices.

NOTE

The roles of the S7-1200 and S7-1500 can be exchanged without changes in the description as the LCCF_EnetScanner function block exists for both systems.

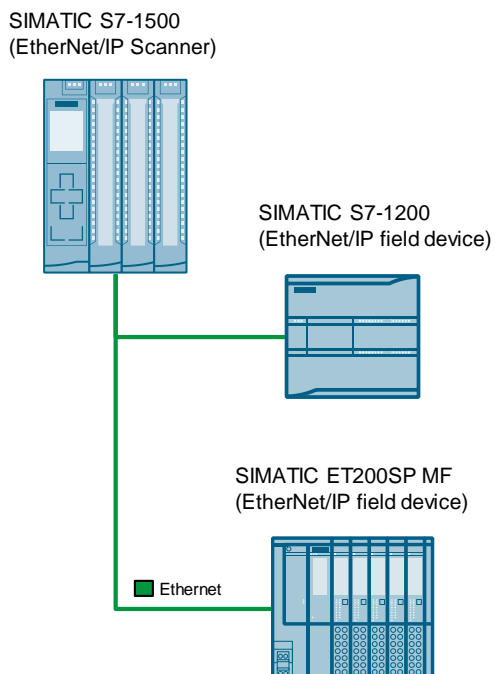Figure 2-1: simplified setup



As mentioned above the ET200SP MF and the S7-1200 controller are operated as field devices providing sensor signals to the S7-1500 controller and accepting control signals from the S7-1500.

The real setup also contains a SCALANCE X208 switch for easier connectivity. However, the switch is not necessary as a line topology (as shown above) is also possible.

2.2. EtherNet/IP

Even though in the above schematic setup the cables are named with PROFINET/ IE, any other Ethernet based protocol can co-exist on the same network. Especially if such protocol uses IP as networking protocol and either TCP or UDP as transport protocol.

EtherNet/IP is such a protocol. It is Ethernet based (IEEE 802.3) and uses IPv4 as networking protocol as well as TCP and UDP as its transport protocol. EtherNet/IP is an open standard maintained by the ODVA® (Open DeviceNet Vendor Association). Yet it should not be mixed up with so called TCP native/ socket communications.

EtherNet/IP is a best effort approach to achieve higher performance and lower jitter compared to regular TCP communications while maintaining maximum interoperability to the other TCP or UDP based communication protocols.

The IP in the name EtherNet/IP is not to be mixed up with IPv4. It is an abbreviation for CIP (Common Industrial Protocol). This CIP is embedded into the payload of the TCP or UDP packets used to exchange data between two or more devices.

The devices creating an EtherNet/IP network are called:

- Scanner, which are scanning the network. They are collecting the information, such as sensor data, from the other field devices. In PROFINET terms this would be equivalent to a Controller or a Master on other networks
- Adapter, which are providing such sensor data to the Scanner. The adapters translate the EtherNet/IP protocol into a proprietary intra device protocol. The adapt the protocols. The PROFINET equivalent term is Device or Slave on other networks.

As the Open User Communication allows a SIMATIC programmer to create the payload for packets send via UDP or TCP, the SIMATIC can implement the necessary features and functions to provide EtherNet/IP as loadable function block. This functionality can be used with any Open User Communication capable interface of the SIMATIC, such as integrated PROFINET ports as well as Industrial Ethernet CMs and CPs.


2.3. Function principle

The application example demonstrates the necessary steps to configure the SIMATIC S7-1500 to operate as EtherNet/IP Scanner with the help of the LCCF_EnetScanner function block.

The communication will use both transport protocols mentioned above. The Scanner is configured to exchange data with two Adapters. One adapter is the ET200SP MF in EtherNet/IP fieldbus mode. The second adapter is represented by the S7-1200 using the also available LCCF_EnetAdapter function block.

This is schematically shown on the next page's figure.

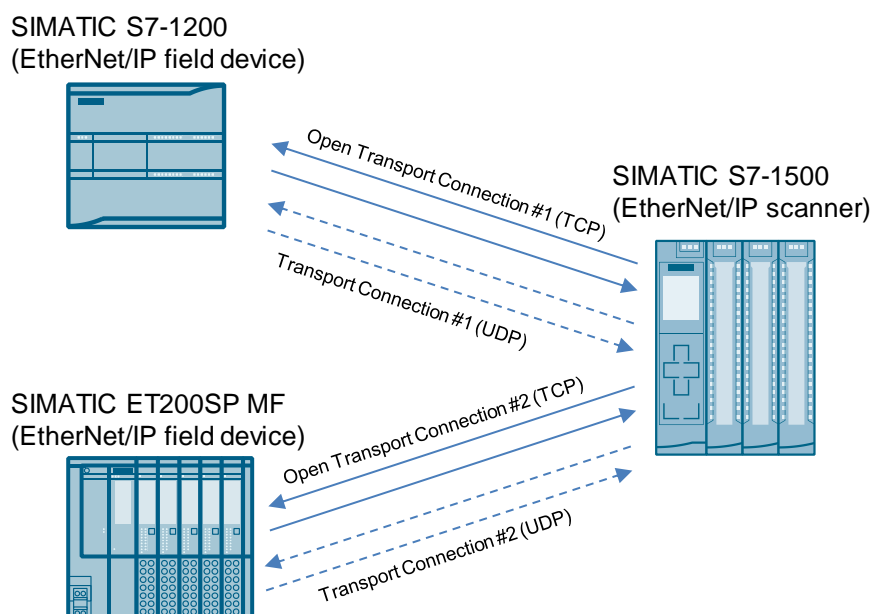Figure 2-2: schematic functional principle



The communication is established by the Scanner using a TCP connection. After registering the Scanner with the Adapters, a transport connection is negotiated with each of the Adapters. Once this is successfully done, the transport connection is opened, and the data exchange takes place using UDP datagrams.

There are two more terms associated with EtherNet/IP.

- Originator: is the device, which initiates the transport connection. This is typically the Scanner.
- Target: is the device, which accepts the transport connection. This is typically the Adapter.

In this application example the transport connection uses UDP transport and unicast communications. With EtherNet/IP the target may also vote for a multicast connection. The target would then send the sensor data to many devices (incl. the originator) instead of only to the originator.

NOTE

In this application example the terms Adapter and Target as well as Originator and Scanner are used as synonyms. This is correct for this application example. In other scenarios this might not hold true anymore.

2.4. Scope of delivery

The application example consists of the document and a TIA Portal project. It also contains the MFCT project for an exemplary configuration of the ET200SP MF as well as an EDS file for each of the field devices.

The program in the TIA Portal project can be easily adopted into a "S7-1200 as Scanner" scenario, as the LCCF_EnetScanner function block uses the identical parameterization.

The parameterization for the Scanner will consist of the two adapters. It will be explained which settings from the EDS files are mapped into the configuration of the LCCF_EnetScanner block.

3. Commissioning

3.1. Preparation

As preparation for the application example to function, the above-mentioned hardware components should be placed into a rack or on a solid table to prevent slip or fall.



Risk of electric shock

To operate this application example the connection of the above hardware to electrical power is required. Disregarding local regulations and common sense may cause an electric shock and because of that injury or death.

Always follow the rules for working with electrical equipment. If in doubt, have someone familiar with these rules and regulations set up the hardware for you.

Further download the TIA Portal project and make sure you have the MFCT installed and properly functioning. Another good idea is to have a text editor, such as Notepad on your computer, as several values will be taken from the EDS files, which are in turn text files.


3.2. Connecting the hardware components

As mentioned above please observe electrical guidelines and rules when connecting power to the components, which is the first step to take.

Secondly setup the Ethernet cables. There are two options to do that.

The first option is the Line topology as shown below:

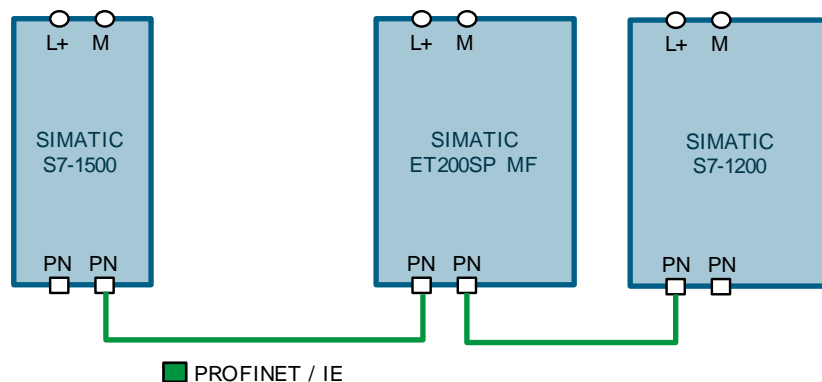Figure 3-1: Line topology setup




NOTE

The line topology is an easy to setup topology. Although it does not allow network debugging as easy on a protocol level.

Another topology is the star topology, which in the application example is used. It is shown in the next schematic.

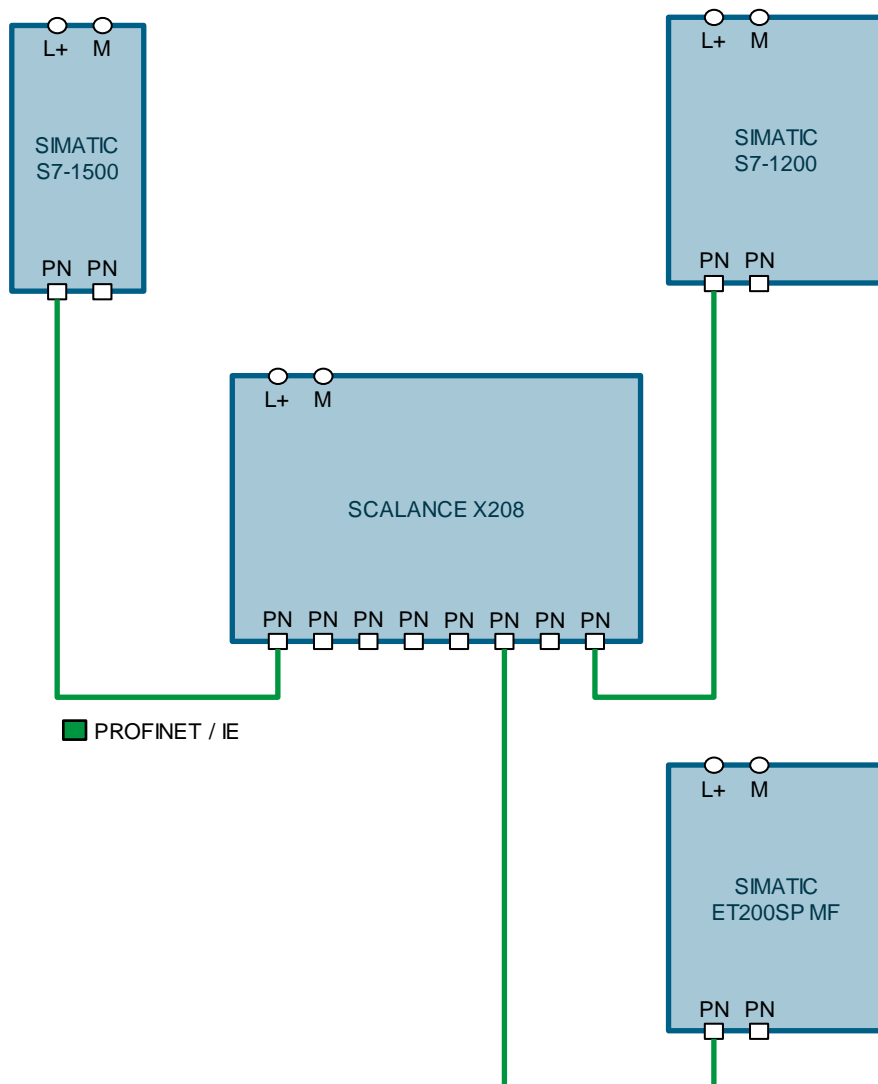Figure 3-2: Star topology setup



NOTE

The star topology is using a network switch as the center point. If the used switch allows port mirroring/ port spawning network protocol analysis is much easier.

In this document some network traces will be shown to illustrate the explained mechanisms.

Network traces are taken used the application Wireshark®.

4. Configuration/Engineering





4.1. Creating and managing projects





To follow along with this application example the TIA Portal project should have been downloaded from SIOS.

NOTE

A new TIA Portal project may also be created as it allows to adopt the hardware platform accordingly. However, it is not part of this document to explain the setup of the hardware being used as EtherNet/IP Scanner.

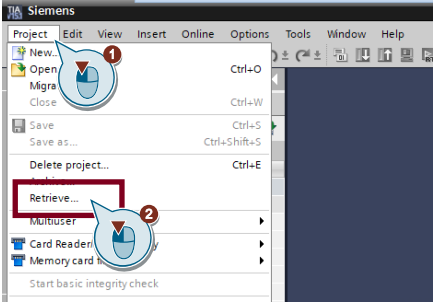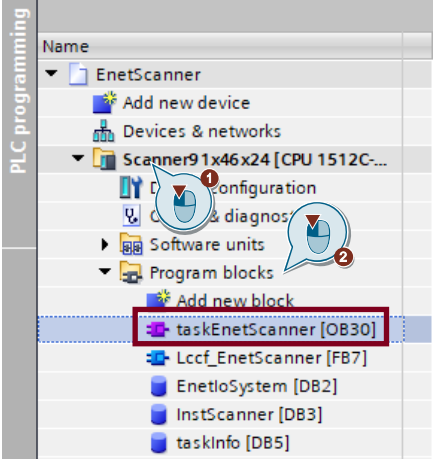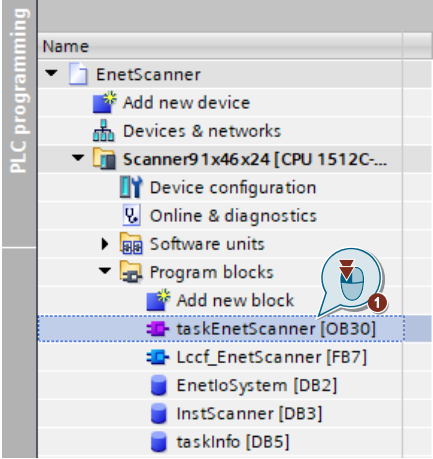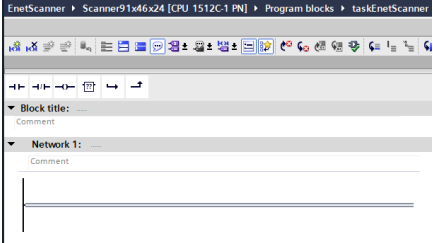Table 4-1: Configuration instructions

Step	Instruction	Result
1.	Start TIA Portal	
2.	Retrieve the downloaded TIA Portal project (EnetScanner.zap15_1) 	This will extract the compressed TIA Portal archive into a folder of your selection.
3.	Open the contained SIMATIC S7-1500 controller 	You will see the function block LCCF_EnetScanner in the program folder as well as two data blocks. EnetIoSystem InstScanner You will also see a Cyclic Interrupt OB.
4.	Open the existing OB "taskEnetScanner" with a double-click on it. 	The block opens in the editor. 

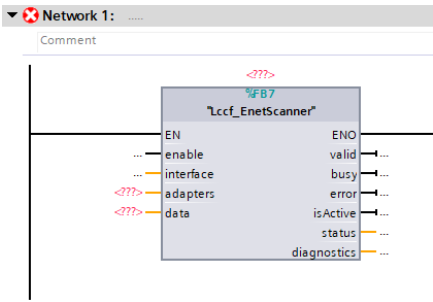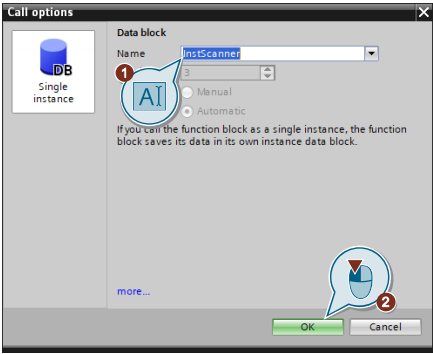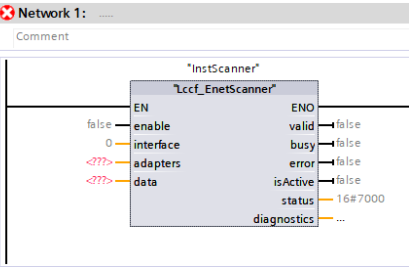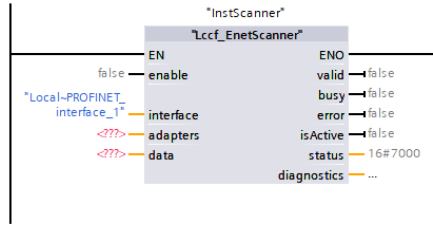Step	Instruction	Result
5.	<div>Place a call to the LCCF_EnetScanner onto the network.</div> <div></div> <div>TIA Portal will request an instance DB. Type in the name of the existing instance DB or select it from the drop-down list.</div> <div></div>	<div>As the result the block call is placed with the instance DB.</div> <div>In this example the instance DB is named "InstScanner"</div> <div></div>
6.	<div>Assign the interface you want to use to the actual parameter of the block call</div> <div></div>	
NOTE	<div>It is recommended to use the TIA Portal maintained global constants for the interface identifier. Otherwise the function block may not work properly.</div> <div>However, any Open User Communication (OUC) capable interface may be used, including Industrial Ethernet CM or CP extension cards.</div>	

At this point the LCCF_EnetScanner function block is not operable. The configuration of the EtherNet/IP field devices needs to be done and an area to for the sensor and control data needs to be declared.

4.2. Creating the EtherNet/IP IO system

Similar to PROFINET or PROFIBUS there is a managing device in an EtherNet/IP network. In this application example it is realized by the S7-1500. The managing system is called the Scanner.

For the Scanner to know, which managed devices, called Adapters, are in the scope, it requires some information. This information is describing the parameters of the data exchange. They contain as minimum:

- Addressing information of the Adapter
- Update rates for both Inputs and Outputs
- Amount of data to be exchanged

As for EtherNet/IP there is no graphical way to configure the EtherNet/IP IO system in TIA Portal the LCCF_EnetScanner function block accepts the configuration in the form of an array of Adapter descriptions. The descriptions are best stored in a global DB. In this application example the DB is called "EnetIoSystem", which stores the array with the adapter descriptions in it.

Figure 4-1: Datablock "EnetIoSystem"

Name	Data type
1 Static	
2 adapters	Array[0..0] of "LCCF_typeEnetAdaptConfig"
3 adapters[0]	"LCCF_typeEnetAdaptConfig"
4 address	IP_V4
5 vendorIdentifier	UInt
6 productType	UInt
7 productCode	UInt
8 revisionMajor	USInt
9 revisionMinor	USInt
10 assemblyInstance	UInt
11 packetInterval	Time
12 conPointOutputIdentifier	UInt
13 conPointOutputSize	UInt
14 conPointInputIdentifier	UInt
15 conPointInputSize	UInt
16 configData Size	UInt
17 datas	Array[0..1] of "LCCF_typeEnetAdaptData"

In this chapter the application example explains how this configuration is created and where to get the information from.

4.2.1. Creating an Adapter description

The above shown data block contains an array of type LCCF_typeEnetAdaptConfig. This type contains all the relevant information the LCCF_EnetScanner function block needs to operate the herein described Adapters.

As mentioned before, it contains addressing information, which are most important. One of these addresses is the IPv4 address the Adapter can be reached at.

Figure 4-2: IP address of an adapter

EnetIoSystem			
	Name	Data type	Start value
1	Static		
2	adapters	Array[0..0] of "LCCF_typeEnetAdaptConfig"	
3	adapters[0]	"LCCF_typeEnetAdaptConfig"	
4	address	IP_V4	
5	ADDR	Array[1..4] of Byte	
6	ADDR[1]	Byte	192
7	ADDR[2]	Byte	168
8	ADDR[3]	Byte	74
9	ADDR[4]	Byte	46
10	vendoridentifier	UInt	1251

The address is stored using the system provided datatype IP_V4. The Adapter configuration shown above is the configuration of the ET200SP MF. It has the IP address 192.168.74.46, which is also shown in the below IP address overview.

Table 4-2: IP addresses


Role	System	IP address
EtherNet/IP Scanner	S7-1500	192.168.74.12
EtherNet/IP Adapter	ET200SP MF	192.168.74.46
	S7-1200	192.168.74.45

Further addressing information are necessary. They will be retrieved from an electronic data sheet (EDS), which is like a GSD file known from PROFINET and PROFIBUS systems.

4.2.2. EDS files

The EDS file format is standardized by the ODVA® and is text based and human readable. It contains several clusters of information. These clusters are called segments. They are identified by their name and marked by '[' and ']' characters (squared brackets)

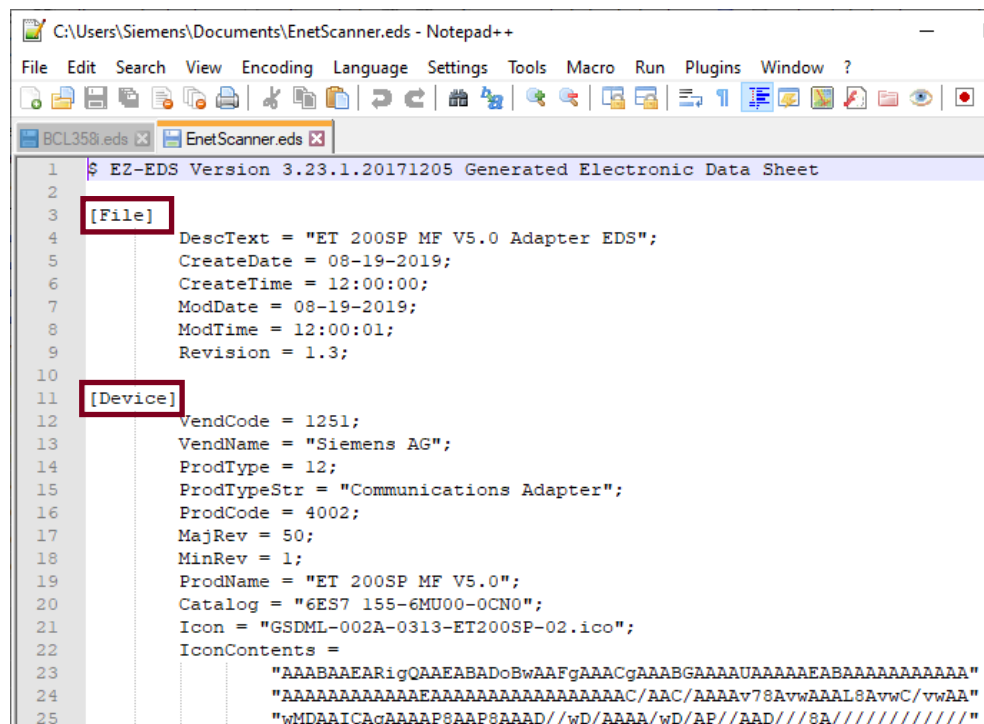Figure 4-3: EDS file for ET200SP MF



```

1  $ EZ-EDS Version 3.23.1.20171205 Generated Electronic Data Sheet
2
3  [File]
4      DescText = "ET 200SP MF V5.0 Adapter EDS";
5      CreateDate = 08-19-2019;
6      CreateTime = 12:00:00;
7      ModDate = 08-19-2019;
8      ModTime = 12:00:01;
9      Revision = 1.3;
10
11 [Device]
12     VendCode = 1251;
13     VendName = "Siemens AG";
14     ProdType = 12;
15     ProdTypeStr = "Communications Adapter";
16     ProdCode = 4002;
17     MajRev = 50;
18     MinRev = 1;
19     ProdName = "ET 200SP MF V5.0";
20     Catalog = "6ES7 155-6MU00-0CN0";
21     Icon = "GSDML-002A-0313-ET200SP-02.ico";
22     IconContents =
23         "AAAAAEARigQAAEABADoBwAAAFgAAACgAAABGAAAAUAAAAEABAAAAAAAAAAAA"
24         "AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAC/AAC/AAAAv78AvwAAAL8AvwC/vwAA"
25         "wMDAAICAgAAAP8AAP8AAAD//wD/AAAA/wD/AP//AAD///8A/////////"

```

Throughout this document the marked areas will be called sections. The sections contain assignments to items.

The Adapter description required for the LCCF_EnetScanner function block, is mostly taken from such EDS files. In the following this document explains, which sections and items are relevant to LCCF_EnetScanner and therefore, necessary to enter into the adapter description.

After that the procedure is repeated for the second adapter

Device parameters

The device describing parameters are relevant for the Scanner, as it uses this information to verify the real existing device against the configured device. In case there is a mismatch the operation of this device is not started.

Such information is:

- vendorIdentifier, in the EDS file called "VendCode" is an ODVA® assigned number to the manufacturer of this device
- productType, in the EDS file called "ProdType" is a standardized number identifying the type of the device
- productCode, the "ProdCode" called number identifies this product together with its type and vendor ID.
- revisionMajor, the major revision number, together with the minor revision number serves the purpose of compatibility check
- revisionMinor, as above serves the minor revision number the purpose of a compatibility check.

They can be found at the section [Device] as shown in the below figure.

Figure 4-4: EDS file [Device] section

```
11 [Device]
12     VendCode = 1251;
13     VendName = "Siemens AG";
14     ProdType = 12;
15     ProdTypeStr = "Communications Adapter";
16     ProdCode = 4002;
17     MajRev = 50;
18     MinRev = 1;
19     ProdName = "ET 200SP MF V5.0";
20     Catalog = "6ES7 155-6MU00-0CN0";
21     Icon = "GSDML-002A-0313-ET200SP-02.ico";
22     IconContents =
```

For the application example the transfer into the configuration inside the EnetIoSystem data block looks like this:

Figure 4-5: [Device] section parameters

		adapters	Array[0..0] of "Lccf_typeEnetAdaptConfig"	
		adapters[0]	"Lccf_typeEnetAdaptConfig"	
		address	IP_V4	
		vendorIdentifier	UInt	1251
		productType	UInt	12
		productCode	UInt	4002
		revisionMajor	USInt	50
		revisionMinor	USInt	1

Further parameters are taken from different other sections of the EDS file.

Data sizes and update times

In the [Params] section, several parameter sets are defined, which are used later in the EDS file.

The relevant information for the configuration of the EnetIoSystem are here

- Update interval
- Size of Inputs and Outputs

Figure 4-6 [Params] section RPI and Output Data size

```

75 [Params]
76     Param9 =
77         0,                $ reserved, shall equal 0
78         ,,                $ Link Path Size, Link Path
79         0x0020,           $ Descriptor
80         0xC8,             $ Data Type
81         4,                $ Data Size in bytes
82         "RPI",            $ name
83         "",               $ units
84         "RPI",            $ help string
85         2000,20000000,10000, $ min, max, default data sizes
86         ,,,,              $ mult, div, base, offset scaling
87         ,,,,              $ mult, div, base, offset links
88         ;                 $ decimal places
89     Param768 =
90         0,                $ reserved, shall equal 0
91         ,,                $ Link Path Size, Link Path
92         0x0000,           $ Descriptor
93         0xC7,             $ Data Type
94         2,                $ Data Size in bytes
95         "Output Data",    $ name
96         "Bytes",          $ units
97         "",               $ help string
98         0,496,496,        $ min, max, default data values
99         ,,,,              $ mult, div, base, offset scaling
100        ,,,,              $ mult, div, base, offset links
101        0;                 $ decimal places
102     Param769 =
103         0,                $ reserved, shall equal 0
104         ,,                $ Link Path Size, Link Path
105         0x0000,           $ Descriptor
106         0xC7,             $ Data Type
107         2,                $ Data Size in bytes
108         "Input Data",     $ name

```

In the above shown figure the parameter, marked with 1 describes the RPI called "Requested Packet Interval" or update rate in μs .

The update rates in the range between $2.000\mu\text{s}$ (2ms) and $20.000.000\mu\text{s}$ (20s) are valid for this device. The default setting is $10.000\mu\text{s}$ (10ms).

The parameter marked with 2, describes the size of the Output data in Bytes. The valid range is in between 0 Bytes and 496 Bytes, where the default is equal to the maximum size.

NOTE

The maximum size of 496 Bytes is a limitation given by the ODVA® specification for EtherNet/IP. It is introduced for compatibility reasons to ControlNet, which is another network using the same communication mechanisms defined in CIP as EtherNet/IP.

Further down in the [Params] section you will find the other relevant information for the Input data size and the configuration data size. They are shown in the below figure.

Figure 4-7: [Params] section Input Data and Configuration Data size

```

102 Param769 =
103     0,                $ reserved, shall equal 0
104     ,,                $ Link Path Size, Link Path
105     0x0000,           $ Descriptor
106     0xC7,             $ Data Type
107     2,                $ Data Size in bytes
108     "Input Data",     $ name
109     "Bytes",          $ units
110     "",               $ help string
111     0,500,500,        $ min, max, default data values
112     ,,,,              $ mult, div, base, offset scaling
113     ,,,,              $ mult, div, base, offset links
114     0;                $ decimal places
115 Param775 =
116     0,                $ reserved, shall equal 0
117     ,,                $ Link Path Size, Link Path
118     0x0000,           $ Descriptor
119     0xC6,             $ Data Type
120     1,                $ Data Size in bytes
121     "Configuration data", $ name
122     "",               $ units
123     "Configuration data", $ help string
124     ,1,1,             $ min, max, default data sizes
125     ,,,,              $ mult, div, base, offset scaling
126     ,,,,              $ mult, div, base, offset links
127     ;                $ decimal places
128

```

Figure 4-7 shows the [Params] section of the configuration file. It contains two parameter blocks: Param769 and Param775. Param769 is for 'Input Data' and Param775 is for 'Configuration data'. Both blocks have a red box highlighting the 'min, max, default data values' field. In Param769, the values are 0, 500, and 500. In Param775, the values are 1, 1, and 1. A circled '1' points to the 'Data Size in bytes' field of Param769, and a circled '2' points to the 'Data Size in bytes' field of Param775.

Same as in the previous figure the with 1 marked area shows a relevant parameter. In here the size of the Input Data is defined. The valid range is between 0 and 500 Bytes.

The second marked area contains the size of the configuration data. The configuration may not exist. Therefore, the minimum size is not provided. The configuration data may not exceed 1 Byte in maximum.

NOTE

The values for RPI and I/O sizes from the EDS file provide a valid range. The user can choose any value in between the minimum and maximum possible value.

The above retrieved values are to be entered into the appropriate positions of the adapter description as shown on the next page.

This application example will use the values in the below table

Table 4-3: Configured values for ET200SP MF

Parameter name	valid range	chosen value
RPI	2ms – 20s	50ms
Output Size	0 – 496 Bytes	20 Bytes
Input Size	0 – 500 Bytes	20 Bytes
Configuration Size	None – 1	None

NOTE

The Output direction is also called the "Originator To Target" direction (short OT direction), while the Input direction is called the "Target To Originator" direction (short TO direction).

Figure 4-8: EnetloSystem configuration for RPI and data sizes

EnetloSystem			
	Name	Data type	Start value
1	Static		
2	adapters	Array[0..0] of "LCCF_typeEnetAdaptConfig"	
3	adapters[0]	"LCCF_typeEnetAdaptConfig"	
4	address	IP_V4	
5	vendorIdentifier	UInt	1251
6	productType	UInt	12
7	productCode	UInt	4002
8	revisionMajor	USInt	50
9	revisionMinor	USInt	3
10	assemblyInstance	UInt	775
11	packetInterval	Time	T#10ms
12	conPointOutputIdentifier	UInt	768
13	conPointOutputSize	UInt	20
14	conPointInputIdentifier	UInt	769
15	conPointInputSize	UInt	20
16	configDataSize	UInt	0

In the above shown figure the settings are made for the three connection points, which are:

- conPointOutput → Originator to Target direction
- conPointInput → Target to Originator direction
- configData

Three more settings are of relevance before the LCCF_EnetScanner function block can communicate with the ET200SP MF module.

AssemblyID and Connection Point IDs

They are called the Assembly instances, AssemblyIDs, or pointIdentifier. The EDS file contains them in a somewhat cryptic way in the [Connection Manager] section.

In the below shown figure the with "Path" commented line (line 202) is of particular interest as it contains the access path to the assembly objects.

Figure 4-9 [Connection Manager] section AssemblyIDs

```

154 [Connection Manager]
155     Object_Name = "Connection Manager Object";
156     Object_Class_Code = 0x06;
157
158     Connection1 =
159         0x04010002,          $ 0-15   = supported transport classes
160                             $ 16     = trigger: cyclic
161                             $ 17     = trigger: change of state
162
163
164
165
166
167
168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196     Param9,Param768,Assem768,          $ 31   = T->O priority: reserved
197     Param9,Param769,Assem769,          $ O->T RPI, size, format
198     Param9,Param769,Assem769,          $ T->O RPI, size, format
199     Param9,Param769,Assem769,          $ proxy config size, format
200     Param9,Param769,Assem769,          $ target config size, format
201     "Connection00 Exclusive",          $ Connection Name
202     "Connection00 Exclusive Owner",     $ help string
203     "20 04 25 00 07 03 2D 00 00 03 2D 00 01 03";    $ Path
204
205
206
207
208
209
210
211
212
213
214
215
216
217
218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240
241
242
243
244
245
246
247
248
249
250
251
252
253
254
255
256
257
258
259
260
261
262
263
264
265
266
267
268
269
270
271
272
273
274
275
276
277
278
279
280
281
282
283
284
285
286
287
288
289
290
291
292
293
294
295
296
297
298
299
300
301
302
303
304
305
306
307
308
309
310
311
312
313
314
315
316
317
318
319
320
321
322
323
324
325
326
327
328
329
330
331
332
333
334
335
336
337
338
339
340
341
342
343
344
345
346
347
348
349
350
351
352
353
354
355
356
357
358
359
360
361
362
363
364
365
366
367
368
369
370
371
372
373
374
375
376
377
378
379
380
381
382
383
384
385
386
387
388
389
390
391
392
393
394
395
396
397
398
399
400
401
402
403
404
405
406
407
408
409
410
411
412
413
414
415
416
417
418
419
420
421
422
423
424
425
426
427
428
429
430
431
432
433
434
435
436
437
438
439
440
441
442
443
444
445
446
447
448
449
450
451
452
453
454
455
456
457
458
459
460
461
462
463
464
465
466
467
468
469
470
471
472
473
474
475
476
477
478
479
480
481
482
483
484
485
486
487
488
489
490
491
492
493
494
495
496
497
498
499
500
501
502
503
504
505
506
507
508
509
510
511
512
513
514
515
516
517
518
519
520
521
522
523
524
525
526
527
528
529
530
531
532
533
534
535
536
537
538
539
540
541
542
543
544
545
546
547
548
549
550
551
552
553
554
555
556
557
558
559
560
561
562
563
564
565
566
567
568
569
570
571
572
573
574
575
576
577
578
579
580
581
582
583
584
585
586
587
588
589
590
591
592
593
594
595
596
597
598
599
600
601
602
603
604
605
606
607
608
609
610
611
612
613
614
615
616
617
618
619
620
621
622
623
624
625
626
627
628
629
630
631
632
633
634
635
636
637
638
639
640
641
642
643
644
645
646
647
648
649
650
651
652
653
654
655
656
657
658
659
660
661
662
663
664
665
666
667
668
669
670
671
672
673
674
675
676
677
678
679
680
681
682
683
684
685
686
687
688
689
690
691
692
693
694
695
696
697
698
699
700
701
702
703
704
705
706
707
708
709
710
711
712
713
714
715
716
717
718
719
720
721
722
723
724
725
726
727
728
729
730
731
732
733
734
735
736
737
738
739
740
741
742
743
744
745
746
747
748
749
750
751
752
753
754
755
756
757
758
759
760
761
762
763
764
765
766
767
768
769
770
771
772
773
774
775
776
777
778
779
780
781
782
783
784
785
786
787
788
789
790
791
792
793
794
795
796
797
798
799
800
801
802
803
804
805
806
807
808
809
810
811
812
813
814
815
816
817
818
819
820
821
822
823
824
825
826
827
828
829
830
831
832
833
834
835
836
837
838
839
840
841
842
843
844
845
846
847
848
849
850
851
852
853
854
855
856
857
858
859
860
861
862
863
864
865
866
867
868
869
870
871
872
873
874
875
876
877
878
879
880
881
882
883
884
885
886
887
888
889
890
891
892
893
894
895
896
897
898
899
900
901
902
903
904
905
906
907
908
909
910
911
912
913
914
915
916
917
918
919
920
921
922
923
924
925
926
927
928
929
930
931
932
933
934
935
936
937
938
939
940
941
942
943
944
945
946
947
948
949
950
951
952
953
954
955
956
957
958
959
960
961
962
963
964
965
966
967
968
969
970
971
972
973
974
975
976
977
978
979
980
981
982
983
984
985
986
987
988
989
990
991
992
993
994
995
996
997
998
999

```

The access path is a series of hexadecimal numbers, which follows a specified format.

This series is split into segments which are in the order of:

1. Class Segment (ID: 20hex) addressing the Assembly class (ClassID = 04hex)

```
"20 04 25 00 07 03 2D 00 00 03 2D 00 01 03";    $ Path
```

2. Instance Segment (ID 24hex or 25hex) addressing the Configuration Assembly (0307hex = 775dec)

```
"20 04 25 00 07 03 2D 00 00 03 2D 00 01 03";    $ Path
```

3. Connection Point Segment (ID 2Chex or 2Dhex) addressing a Connection Point (300hex = 768dec)

```
"20 04 25 00 07 03 2D 00 00 03 2D 00 01 03";    $ Path
```

4. Connection Point Segment (ID 2Chex or 2Dhex) addressing a Connection Point (301hex = 769dec)

```
"20 04 25 00 07 03 2D 00 00 03 2D 00 01 03";    $ Path
```

The order of the connection points is also predefined and is always in the same order. First the OT direction (Originator to Target), which is, from the point of view of the Scanner, the Output direction.

Followed by the TO direction (Target to Originator), which is the Input direction for the Scanner.

NOTICE

Wrong decoding of the Connection Point or Instance IDs can occur.

As the byte ordering is "big endian" in the EDS file, the numbers may be mistakenly ordered in "little endian" and therefore decoded wrong. This may end up addressing the wrong connection points causing non-functional behavior of the LCCF_EnetScanner block.

Make sure the byte ordering is adjusted.

```
"20 04 25 00 07 03 2D 00 00 03 2D 00 01 03";    $ Path
```

As example the instance segment's value is 25 00 07 03, where

25 00 is the segment identifier for the instance segment.

07 03 is the value for the instance. Here the bytes must be swapped otherwise the decimal representation of 07 03hex is 1795dec.

This would address a different instance instead of the correct instance 775.

NOTE

The direction can also be derived from the EDS file as it is described there in the correct order.

```
195      Param9,Param768,Assem768,      $ 31      = T->O priority: reserved
196      Param9,Param768,Assem768,      $ O->T RPI, size, format
197      Param9,Param769,Assem769,      $ T->O RPI, size, format
198      ,,                               $ proxy config size, format
199      ,,                               $ target config size, format
200      "Connection00 Exclusive",        $ Connection Name
201      "Connection00 Exclusive Owner",  $ help string
202      "20 04 25 00 07 03 2D 00 00 03 2D 00 01 03";  $ Path
```

The O->T direction is listed before the T->O direction.

Do not assume, that the numbers in the Paramxxx or Assemxxx name always indicate the Connection Point identifier. Here this is the case, however this is not always like this, as these numbers are arbitrary numbers.

Now that the connection point identifier and the assembly identifier are known, they can be transferred into the EnetloSystem data block for the adapter as shown below.

NOTE

The AssemblyIDs or connection point identifiers are specific for each device type. They may be different for different devices. This means ET200SP MF always use, 775, 768 and 769 for their identifiers. A F6Nano motion controller uses the identifiers 1, 100 (64hex) and 101 (65hex).

Figure 4-10: EnetloSystem configuration for RPI and data sizes






EnetloSystem			
	Name	Data type	Start value
1	Static		
2	adapters	Array[0..0] of "LCCF_typeEnetAdaptConfig"	
3	adapters[0]	"LCCF_typeEnetAdaptConfig"	
4	address	IP_V4	
5	vendorIdentifier	UInt	1251
6	productType	UInt	12
7	productCode	UInt	4002
8	revisionMajor	USInt	50
9	revisionMinor	USInt	3
10	assemblyInstance	UInt	775
11	packetInterval	Time	T#10ms
12	conPointOutputIdentifier	UInt	768
13	conPointOutputSize	UInt	20
14	conPointInputIdentifier	UInt	769
15	conPointInputSize	UInt	20
16	configDataSize	UInt	0

This finishes the configuration of the ET200SP MF as EtherNet/IP adapter for the LCCF_EnetScanner function block.

Finalizing the parameterization

As the LCCF_EnetScanner block has not been completely parameterized, the document will now show the next necessary steps to achieve this.

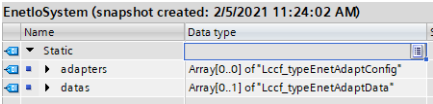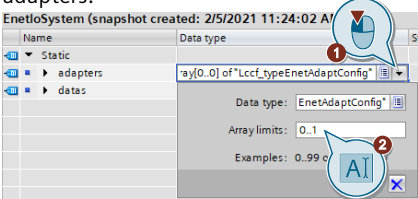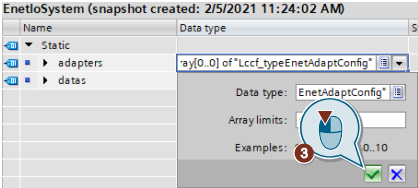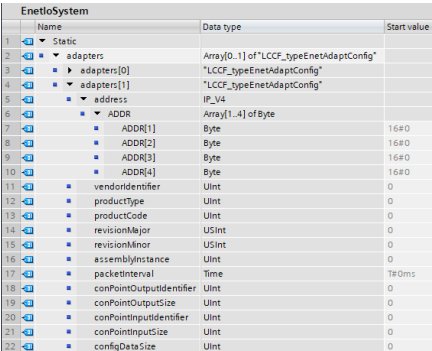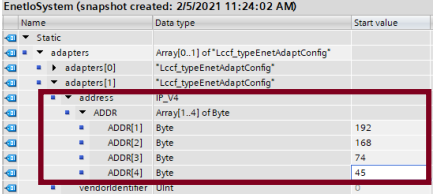Table 4-4: LCCF_EnetScanner block parameterization

Step	Instruction	Result
1.	<div>Verify that the EnetIoSystem data block contains at least two variables.</div> <div></div>	<div>The variable “adapters” contains the just prepared description for the ET200SP MF.</div> <div>The second variable contains the data areas to exchange the data with the adapters.</div>
2.	<div>Extend the “adapters” array to accommodate 2 adapters.</div> <div></div> <div>Confirm your entry</div> <div></div>	<div>You will get a new entry for the second adapter.</div> <div></div>
3.	<div>Enter the IP address of the second adapter.</div> <div></div>	<div>In this document it is the S7-1200 with 192.168.74.45</div>

Step	Instruction	Result
------	-------------	--------

4. Open the EDS file of the second adapter with you text editor program (e.g. Notepad).

The following data are used in this application example

Note the relevant data from the different sections

From sections

```
1 $ EDS-EDS Version 3.27.1.20191219 Generated Electronic Data Sheet
2
3 [File]
4 DescText = "SIMATIC S7-1200 Controller";
5 CreateDate = 01-14-2020;
6 CreateTime = 09:08:28;
7 ModDate = 07-21-2020;
8 ModTime = 16:02:57;
9 Revision = 1.04;
10
11 [Device]
12 VendCode = 1251;
13 VendName = "Siemens AG";
14 ProdType = 12;
15 ProdTypeStr = "Communications Adapter";
16 ProdCode = 1200;
17 MajRev = 1;
18 MinRev = 4;
19
20 Catalog = "6ES7 21X-1XX40-0XB0";
21
135 [Params]
136 Param3 =
137 0, $ reserved,
138 $ Link Path
139 0x0020, $ Descripto
140 0xC8, $ Data Type
141 4, $ Data Size
142 "RPI", $ name
143 "microseconds", $ units
144 "Requested Parameter", $ h
145 10000,2000000,25000, $ min, max,
146 $ mult, div
147 $ mult, div
148 $ decimal p
149
150 Param101 =
151 0, $ reserved,
152 $ Link Path
153 0x0000, $ Descripto
154 0xC7, $ Data Type
155 2, $ Data Size
156 "InputDataSize", $ name
157 "USInt", $ units
158 "Input data size in USInt", $ h
159 0,50,64, $ min, max,
160 $ mult, div
161 $ mult, div
162 $ decimal p
163
164 Param102 =
165 0, $ reserved,
166 $ Link Path
167 0x0000, $ Descripto
168 0xC7, $ Data Type
169 2, $ Data Size
170 "OutputDataSize", $ name
171 "USInt", $ units
172 "Output data size in USInt", $ h
173 0,50,64, $ min, max,
174 $ mult, div
175 $ mult, div
176 $ decimal p
177
214 [Connection Manager]
215 Revision = 1;
216 Object Name = "Connection Manager Object";
217 Object Class Code = 0x06;
218
219 Param3,Param102,Assem102, $ O->T F
220 Param3,Param101,Assem101, $ T->O F
221
222 $ proxy confi
223 Param104,Assem104, $ target confi
224 "Exclusive Owner", $ Connection
225 "Exclusive Owner", $ help string
226 "20 04 24 68 2C 66 2C 65" $ Path
```

[Device]

- VendorCode = 1251
- ProductType = 12
- ProductCode = 1200
- Revision = 1.004
- [Params]
- Output Size = 64 Bytes
- Input Size = 64 Bytes
- RPI = 25 ms (25.000µs)
- [Connection Manager]
- Instance ID = 104 (68hex)
- OT Assembly ID = 102 (66hex)
- TO Assembly ID = 101 (65hex)


5. Transfer the noted data to the EnetIOSystem data block

as a result, the EnetIOSystem should look like the below:


EnetIOSystem		
Name	Data type	Start value
Static		
adapters	Array[0..1] of "LCCF_typeEnetAdaptConfig"	
adapters[0]	"LCCF_typeEnetAdaptConfig"	
adapters[1]	"LCCF_typeEnetAdaptConfig"	
address	IP_V4	
ADDR[1]	Array[1..4] of Byte	
ADDR[1]	Byte	192
ADDR[2]	Byte	168
ADDR[3]	Byte	74
ADDR[4]	Byte	45
vendorIdentifier	UInt	1251
productType	UInt	12
productCode	UInt	1200
revisionMajor	USInt	1
revisionMinor	USInt	4
assemblyInstance	UInt	104
packetInterval	Time	T#25MS
conPointOutputIdentifier	UInt	102
conPointOutputSize	UInt	64
conPointInputIdentifier	UInt	101
conPointInputSize	UInt	64
configDataSize	UInt	0

6. Assign the variables to the corresponding parameters of the LCCF_EnetScanner.

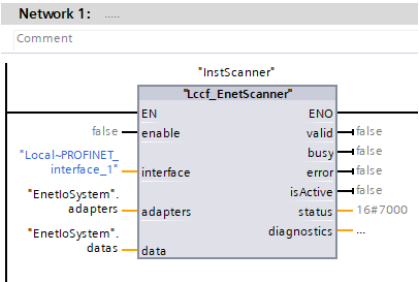
The LCCF_EnetScanner is now parameterized with its minimum set of parameters.



Step	Instruction	Result
7.	Compile and download the program to the PLC.	

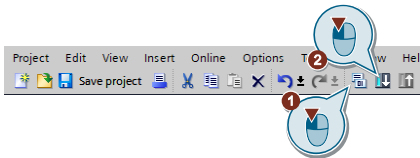

If it hasn't been already, put the PLC into RUN Mode.



After this procedure the PLC should be running and executing the LCCF_EnetScanner function block in a cyclic interrupt. The use of a cyclic interrupt helps maintaining an execution in a more stable interval. With this the update rates do not differ too much, and the jitter is kept to a minimum.

NOTE

When operating the S7-1200 as EtherNet/IP adapter the configuration data can be used to transfer additional data, such as parameter sets. This will be done once on startup and acyclic at a fixed rate of every 5s. The configuration data size is set to 64 bytes fixed in the EDS file.

```
Param104 =
    0,                $ reserved, shall equal 0
    ,,                $ Link Path Size, Link Path
    0x0000,            $ Descriptor
    0xC7,              $ Data Type
    2,                 $ Data Size in bytes
    "configDataSize", $ name
    "USint",           $ units
    "Configuration Data Size in USint", $ help string
    64,64,64,          $ min, max, default data values
    ,,,,              $ mult, div, base, offset scaling
    ,,,,              $ mult, div, base, offset links
    ;                  $ decimal places
```

The entry to be made in the EnetIoSystem data block for adapters[1] looks like below:

EnetIoSystem			
	Name	Data type	Start value
1	Static		
2	adapters	Array[0..1] of "LCCF_typeEnetAdaptConfig"	
3	adapters[0]	"LCCF_typeEnetAdaptConfig"	
4	adapters[1]	"LCCF_typeEnetAdaptConfig"	
5	address	IP_V4	
6	ADDR	Array[1..4] of Byte	
7	ADDR[1]	Byte	192
8	ADDR[2]	Byte	168
9	ADDR[3]	Byte	74
10	ADDR[4]	Byte	45
11	vendorIdentifier	UInt	1251
12	productType	UInt	12
13	productCode	UInt	1200
14	revisionMajor	USInt	1
15	revisionMinor	USInt	4
16	assemblyInstance	UInt	104
17	packetInterval	Time	T#25MS
18	conPointOutputIdentifier	UInt	102
19	conPointOutputSize	UInt	64
20	conPointInputIdentifier	UInt	101
21	conPointInputSize	UInt	64
22	configDataSize	UInt	64

As the configuration data are targeting the adapter instance the same as for the assemblyInstance.








5. Operating


5.1. Start the application

The application will be operated by simply toggle the “enable” input parameter of the LCCF_EnetScanner function block to “TRUE” and monitor the exchanged data.

For this follow the below instructions as a watch table has been prepared in the application examples TIA Portal project.

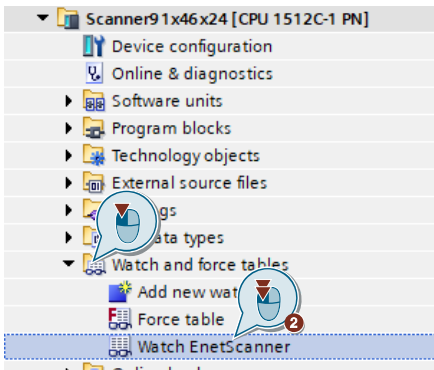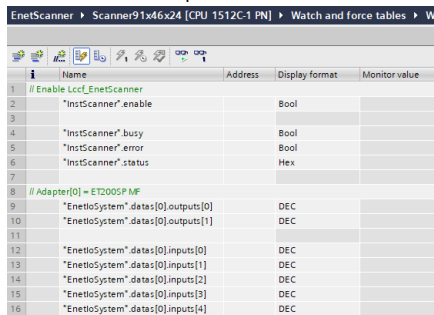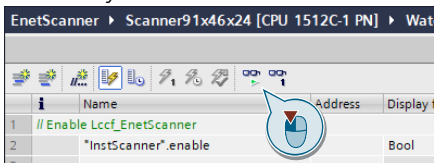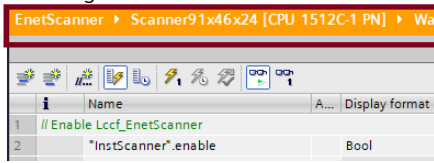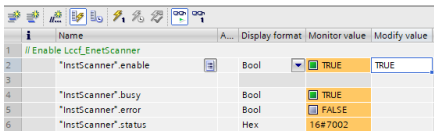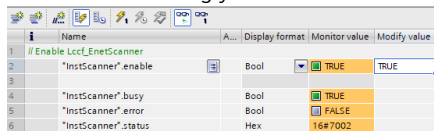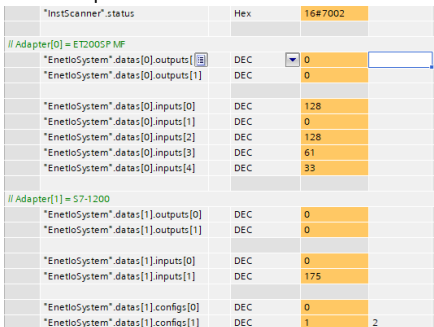Table 5-1:

Step	Instruction	Result
1.	Open the prepared watch table “Watch EnetScanner”	<p>The watch table opens</p>  
2.	Switch the watch table online to be able to monitor and modify values	<p>The watch table switches online. This is indicated with an orange title bar.</p>  
3.	<p>Modify the “enable” variable to “TRUE”</p> <p>This can be done either by typing the value “1” or “TRUE” into the “Modify value” column</p>	<p>as a result, the LCCF_EnetScanner establishes connections to the configured adapters and starts the data exchange.</p> <p>The status of the LCCF_EnetScanner is reported as 16#7002, which means busy. The appropriate flags are set as well accordingly.</p>  
4.	<p>Modify the output data and monitor the input data for each adapter</p>	

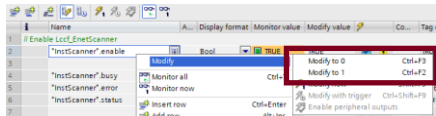Step	Instruction	Result
5.	To stop the LCCF_EnetScanner toggle the "enable" parameter to "FALSE". 	As a result of that, the input values are frozen, the update stops. The LCCF_EnetScanner shuts down the connections to all configured adapters.

NOTE

When the second adapter has the configuration data configured, you may also change the configuration data during operation. The configuration data will be updated in 5s. intervals.

5.2. Troubleshooting

In case the result is not as expected the cause could be found on both sides of the communication path.

Before you try to change any of the program or configuration, check the physical installation first.

5.2.1. Physical check

Verify the following causes for malfunctions or not functioning at all.

1. Is the SIMATIC powered up?
2. If used, is the SCALANCE switch powered up?
3. Are the network cables properly inserted into the LAN sockets of the devices?
This can be determined by evaluating the port LEDs of the devices. At least the Link LED should be illuminated.

Table 5-2: physical checks

observation	possible cause	remedy
SIMATIC is not reachable from TIA Portal	SIMATIC is not powered up.	<ul style="list-style-type: none"> • Check power supply and wiring with the installation manual. • Correct wiring
	SIMATIC doesn't have network connection	Power the Power Supply up <ul style="list-style-type: none"> • Check network cable to be inserted properly into the network socket (P1.X1 or P1.X2) Check and correct network settings of your PC
	Network switch is not powered up	Check and correct power supply to the network switch.
SIMATIC cannot communicate with SIMATIC EtherNet/IP adapters	network cables are not properly inserted into the Adapter	<ul style="list-style-type: none"> • Check all network cable sockets to have their "link" lights illuminated. • If necessary, remove the network cable from the LAN socket and reinsert until you hear a click. • Replace the network cable


If you checked everything and there is no communication at all, then perform the checks recommended in the next chapter.

5.2.2. Network Settings

Missing communication can be caused by any partner along the line of communication. Therefore, make sure the network settings for the devices are compatible to each other.

In this application example the Ethernet settings for the scanner as well as for the two configured adapters are shown below.

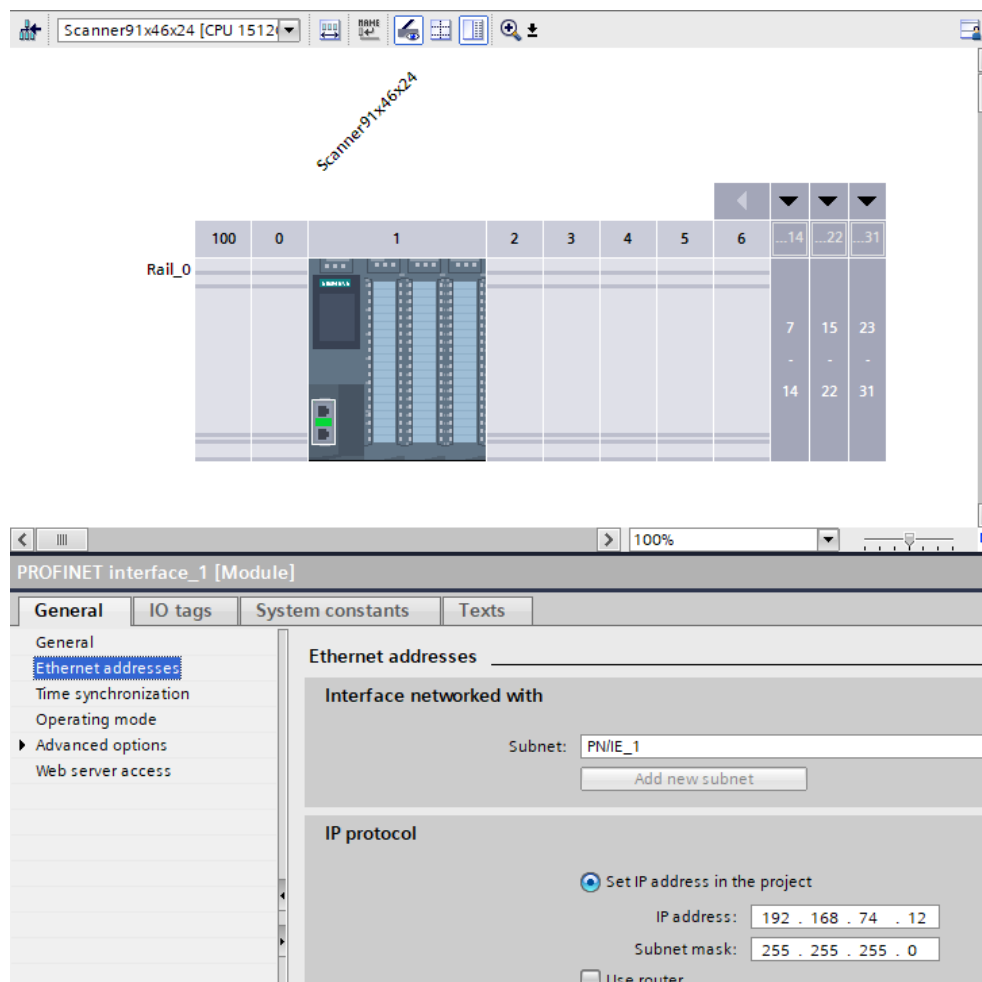Figure 5-1: Network settings – Scanner PLC




Important settings are the IP address and the subnet mask. As shown above the are:

- IP: 192.168.74.12
- Mask: 255.255.255.0

Compatible IP addresses differ on a network with subnet mask 255.255.255.0 only in the last octet. Otherwise, a communication without network router is not possible.

For the ET200SP MF adapter the MFCT (MultiFieldbus Configuration Tool) is used. The settings are shown below

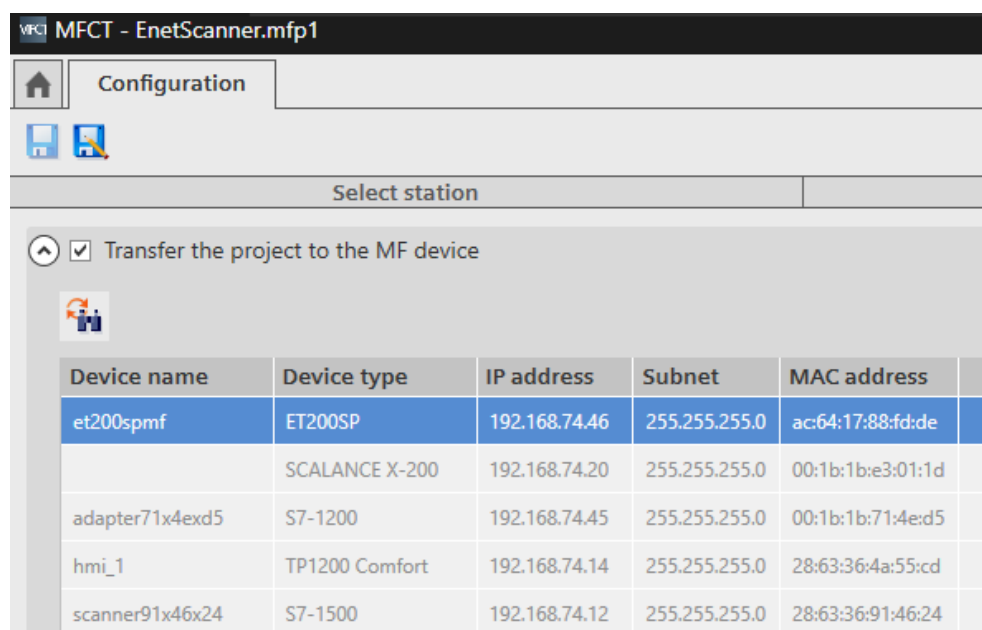
Figure 5-2: Network Settings for Adapter[0]/ ET200SP MF



Make sure the IP address settings are compatible to the settings of your scanner device. In this application example the ET200SP MF has compatible settings with:

- IP: 192.168.74.46
- Mask: 255.255.255.0

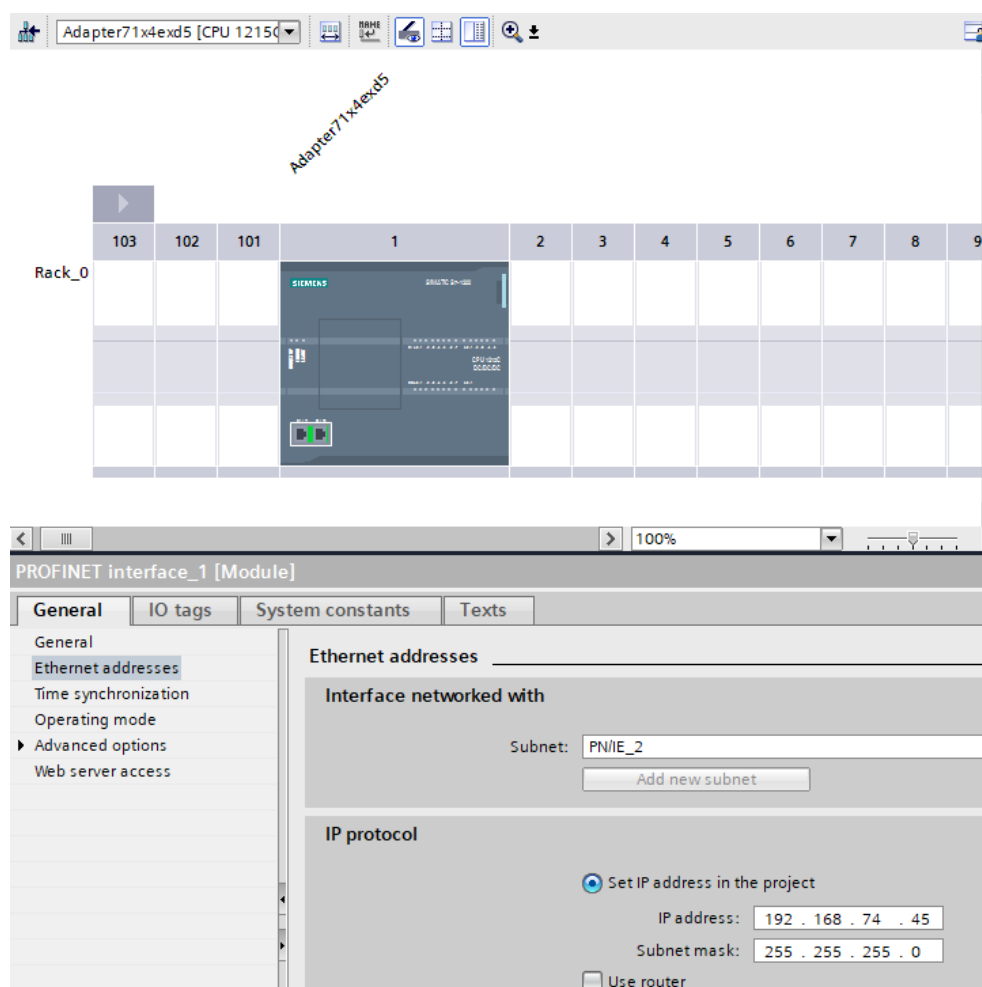Figure 5-3: Network Settings for Adapter[1]/ S7-1200



Here the settings are shown above to be:

- IP: 192.168.74.45
- Mask: 255.255.255.0

5.2.3. SIMATIC Program

Answering the following questions may give you a hint on what needs to be corrected.

Table 5-3: LCCF_EnetScanner checks

observation	possible cause	remedy
status information doesn't change their values, when enable is set to true	The block is not executed	place an unconditional call to the block in cyclic interrupt program
error is true, the moment enable is set to true	Parameterization error	check the status code and correct the parameterization
valid becomes false after a certain time	Connection problems	check the status code and follow the specific recommendations further down in the document.

The LCCF_EnetScanner block reports certain error codes to inform the user about issues in the execution. This document describes the status codes the LCCF_EnetScanner block reports in the chapter "Parameters"

6. LCCF_EnetScanner block

6.1. Parameters

The LCCF_EnetScanner has been designed to require a minimum of parameters to make its use as easy as possible. Still a minimum external configuration is necessary, which is explained in the following chapter.

A call to the LCCF_EnetScanner block requires an instance DB to store operation relevant data internally as shown in the below figure.

Table 6-1: block call to "LCCF_EnetScanner"

LAD	SCL
	<pre> 95 "InstScanner" enable:=false, 96 interface := "Local-PROFINET_interface_1", 97 valid=>bool_out_, 98 busy=>bool_out_, 99 error=>bool_out_, 100 isActive=>bool_out_, 101 status=>word_out_, 102 diagnostics=>lccf_typediagnostics_out_, 103 adapters := "EnetIoSystem".adapters, 104 data := "EnetIoSystem".data; 105 </pre>

The instance DB is generated automatically by the TIA Portal, when you place the call to the block. In this application example the instance DB is named "InstScanner".

Besides the instance DB the other shown parameters are necessary and are explained in the below table.

Table 6-2: Parameter of the LCCF_EnetScanner block

Name	Direction	Data Type	Description
enable	Input	BOOL	Rising edge enables the functionality of the block. Any previously reported fault will be cleared, and conditions re-evaluated. Falling edge shuts the block down and stops any communications.
interface	Input	HW_ANY	Hardware Identifier of the interface to use for the communication. This typically uses a system defined constant. It is possible to use any "Open User Communication" supporting interface. This includes Industrial Ethernet CMs and CPs
adapters	InOut	Array[*] of LCCF_typeEnetAdaptConfig	List of configured adapters to exchange data with. Each array element represents one EtherNet/IP adapter and is of type LCCF_typeEnetAdaptConfig. Refer to the chapter 4.2.1 "Creating an Adapter description" for details
data	InOut	Array[*] of LCCF_typeEnetAdaptData	List of data areas for each configured EtherNet/IP adapter to exchange data with.
valid	Output	BOOL	TRUE indicates that the values in the mapping variables are valid. FALSE some or all values are invalid and should NOT be used for process control.
busy	Output	BOOL	TRUE indicates the CIP Client block is actively processing requests. FALSE indicates the block is not processing requests.
error	Output	BOOL	TRUE indicates that an error occurred during the operation of the block. Depending on the type of the error indicated by status (see below) cycling of the enable flag may clear the error. FALSE indicates no error.

Name	Direction	Data Type	Description
isActive	Output	BOOL	TRUE indicates the active data exchange with all configured devices FALSE indicates, that at least one device is not communicating with the Scanner.
status	Output	WORD	Status information about the operational state of this block. For details see the chapter Block status messages below
diagnostics ¹	Output	LCCF_typeDiagnostic	A structure containing additional information in case of an error, which are relevant for debugging the CIP server block. The content is of value for the developer.

¹ The parameter „diagnostics“ may be hidden in the block call.

6.1.1. Block status messages

The LCCF_EnetScanner block reports a status information to the user, which follows a standardized pattern.

The status code is split into the error flag and a status information value.

Table 6-3: Error and status message format

15	14	12	11	8	7	0
Error	Info/ Warning	Class Code		Specific Status Codes		
16#7 = Information		0 = Information				
16#8 = Error		2 = Parameter related				
		4 = Internal Cause				
		6 = External Cause				

The LCCF_EnetScanner reports specific status codes. They are listed and explained in the following table.

Table 6-4: status messages

Valid	Busy	Error	Status Code (in hex)	Cause	Remedy
TRUE	TRUE	FALSE	16#0000	Success/ OK	--
FALSE	FALSE	FALSE	16#7000	No Call/ Idle	Block is called with enable = FALSE. Create rising edge on enable to start execution
FALSE	TRUE	FALSE	16#7001	Initial call	Block starts initialization and performs parameter check
TRUE	TRUE	FALSE	16#7002	Follow Up call	Block continues operation
TRUE	TRUE	FALSE	16#7202	More data areas have been parameterized, than adapter have been configured	Adjust the array boundaries for the data area to be the same as the adapter definitions. When keep operating, the excessive data areas are not touched and remain unchanged.
TRUE	TRUE	FALSE	16#72x7	Parameterized RPI was at least once exceeded by the adapter[x].	This warning indicates an overload and should be avoided by increasing the RPI.
TRUE	TRUE	FALSE	16#72x8	Scanner cannot realize the desired update rate for adapter[x]	This warning indicates an overload situation on the scanner side and should be avoided. This can be achieved by increasing the RPI.
TRUE	TRUE	FALSE	16#76x1	Unable to make TCP connection with an adapter.	See the Subfunction Status for the index of adapter. The connection on the adapter side must be checked.
TRUE	TRUE	FALSE	16#76x2	Overload situation, updates for adapters may have been lost	This warning indicates an overload situation on the scanner side. This can be avoided by increasing the "Communication load" setting in the CPU properties or increasing the call up interval of the used cyclic interrupt.
FALSE	FALSE	TRUE	16#8006	Cannot setup I/O socket.	It appears that the required UDP connection resource cannot be acquired from the system. Check and make sure, there are at least one unused UDP resource available. Consult the technical data for the used CPU model to learn how many such resources the CPU has.


Valid	Busy	Error	Status Code (in hex)	Cause	Remedy
FALSE	FALSE	TRUE	16#8201	Invalid interface specified	The specified interface doesn't support the acquisition of operation relevant information. This interface cannot be used to be operated as scanner. Specify a different interface.
FALSE	FALSE	TRUE	16#8202	Number of configured adapters exceed maximum possible adapters	Reduce the number of adapters in this system to the maximum allowed number.
FALSE	FALSE	TRUE	16#8203	Number of configured data areas is lower than number of configured adapters.	Adjust the array boundaries to be identical for both number of configured adapters and available data areas.
FALSE	FALSE	TRUE	16#82x7	Parameterized input buffer is smaller than configured for adapter[x]	Adjust the configured T→O direction data size.
FALSE	FALSE	TRUE	16#82x8	Parameterized output buffer is smaller than configured for adapter[x]	Adjust the configured O→T direction data size.
FALSE	FALSE	TRUE	16#82x9	Parameterized configuration data buffer is smaller than configured for adapter[x]	Adjust the configured configuration data size.
FALSE	FALSE	TRUE	16#86xA	Incompatible buffer types for adapter [x]	The configured T→O buffer type is incompatible to the parameterized Input buffer type. Adjust both the size and type either of the configuration or for the parameterized buffer.
FALSE	FALSE	TRUE	16#86xB	Incompatible buffer types for adapter [x]	The configured O→T buffer type is incompatible to the parameterized Output buffer type. Adjust both the size and type either of the configuration or for the parameterized buffer.
FALSE	FALSE	TRUE	16#86xC	Incompatible buffer types for adapter [x]	The configured configuration data buffer type is incompatible to the parameterized configuration data buffer type. Adjust both the size and type either of the configuration or for the parameterized buffer.

6.1.2. Technical data

For better planning of the automation program the user must be aware, that the operation of the LCCF_EnetScanner block has impacts on both memory loading and cycle time of the remaining automation program.

As all the protocol handling is done as part of the user program, the cycle time will be extended by the time the selected CPU model requires to execute the protocol stack. As one could imagine the more adapters are configured the more time is necessary to compute the communications. Another performance influencing factor is the RPI. The shorter the RPI is, the more often communication to the adapters need to be done.

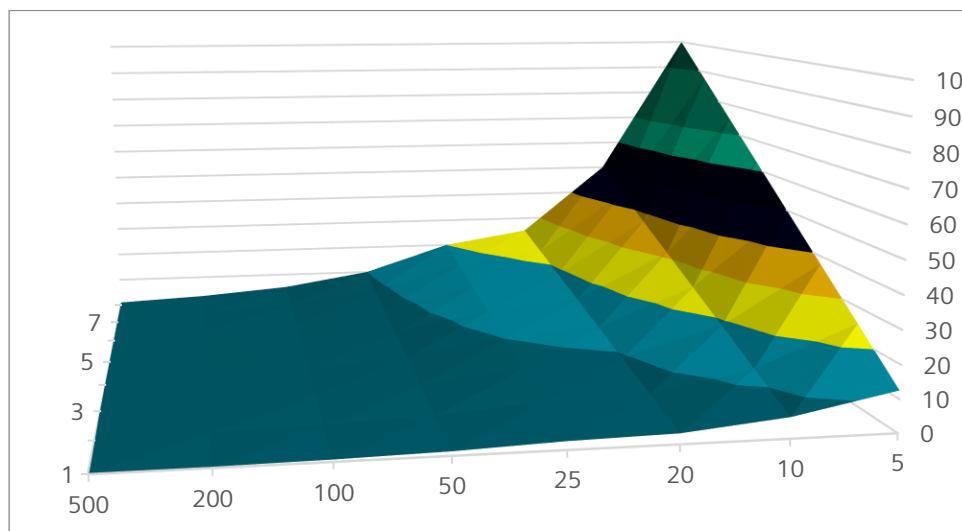Figure 6-1: PLC load depending on RPI and number of adapters



NOTE

The above diagram doesn't show real loadings nor do the values are based on real measurements for a specific CPU.

The diagram only illustrates the loading dependencies.

As shown in the above diagram, lower RPI cause more updates per time unit. This in turn causes a higher load on the PLC. The number of configured adapters also has an influence on the PLC load in the way, that the higher the number is, the higher the load will be (proportional).

SIMATIC S7-1500

The average load shown in the below table are based on measurements taken on a CPU 1512C used throughout the application example loaded with the two adapters.

Table 6-5: Execution times for LCCF_EnetScanner

adapters	min. load	average load	max. load
ET200SP MF	0,6 ms	1,5 ms	3,2 ms
ET200SP MF S7-1200	1 ms	2 ms	5 ms

The measured load is based on a 10ms cyclic interrupt and the data exchange configured in the application example.

Table 6-6: configured data exchange sizes

Adapter	Outputs	Inputs	Configuration
ET200SP MF	20 Bytes @50ms	20 Bytes @50ms	None
S7-1200	64 Bytes @25ms	64 Bytes @25ms	64 Bytes @5s

Besides program execution time memory consumption should be taken into consideration, when selecting the CPU model for a specific automation task. The LCCF_EnetScanner block contributes to the memory loading a certain amount of memory plus the data required per configured adapter. The following tables will provide the detailed information.

Table 6-7: Memory consumption S7-1500

Block	Load Memory	Work Memory
LCCF_EnetScanner	474.426 Bytes	23.395 Bytes
instance DB	36.927 Bytes	25.044 Bytes

Memory is also consumed for each adapter configured and data areas to be provided for it.

Table 6-8: Memory consumption for EtherNet/IP IO system

Adapter	Load Memory	Work Memory
1	4.453 Bytes	1.348 Bytes
2	5.635 Bytes	2.532 Bytes
3	6.816 Bytes	3.708 Bytes

NOTE

With the SIMATIC S7-1500 up to 16 EtherNet/IP adapters can be controlled. This limitation is a compromise between many factors such as update rates, CPU load, memory consumption and others. If a specific application requires more the S7-1500 allows for more OUC connection resources, which can be used.

SIMATIC S7-1200

For the S7-1200 controller the technical data are listed below

Table 6-9: Memory consumption S7-1200

Block	Load Memory	Work Memory
LCCF_EnetScanner	478.544Bytes	23.922 Bytes
instance DB	25.176 Bytes	13.260 Bytes

The Configuration of the EtherNet/IP IO system also requires some memory. When configured with the description and the data organized as array in the same data block, the required memory is listed below.

Table 6-10: Memory consumption for the EtherNet/IP IO system

Adapters	Load Memory	Work Memory
1	4.330 Bytes	1.284 Bytes
2	5.511 Bytes	2.468 Bytes
3	6.694 Bytes	3.644 Bytes

NOTE

With the LCCF_EnetScanner block the S7-1200 controller can control up to 8 EtherNet/IP adapters. This is a compromise between many factors, such as update rates, CPU load and memory consumption.

The S7-1200 controllers allow for more than 8 OUC resources, which can be used in specific applications.

NOTICE**Risk of overloading the controller**

Configuring too many EtherNet/IP adapters can overload the controller and cause the loss of control over the process, as the time required to retrieve sensor signals may be larger than allowed for safe process control.

Evaluate the requirements of the process and select an appropriate, if in doubt the larger, CPU model.

6.2. What's next?

The current implementation leaves some room for further developments. Such implementations include:

- Support for modular adapters
- Identification of available adapters (read in network)
- Improved status display for configured adapters
- Inhibit individual adapters

7. Appendix

7.1. Service and support

SiePortal

The integrated platform for product selection, purchasing and support - and connection of Industry Mall and Online support. The SiePortal home page replaces the previous home pages of the Industry Mall and the Online Support Portal (SIOS) and combines them.

- **Products & Services**
In Products & Services, you can find all our offerings as previously available in Mall Catalog.
- **Support**
In Support, you can find all information helpful for resolving technical issues with our products.
- **mySieportal**
mySiePortal collects all your personal data and processes, from your account to current orders, service requests and more. You can only see the full range of functions here after you have logged in.

You can access SiePortal via this address: sieportal.siemens.com

Technical Support

The Technical Support of Siemens Industry provides you fast and competent support regarding all technical queries with numerous tailor-made offers – ranging from basic support to individual support contracts.

Please send queries to Technical Support via Web form: support.industry.siemens.com/cs/my/src

SITRAIN – Digital Industry Academy

We support you with our globally available training courses for industry with practical experience, innovative learning methods and a concept that's tailored to the customer's specific needs.

For more information on our offered trainings and courses, as well as their locations and dates, refer to our web page: siemens.com/sitrain

Industry Online Support app

You will receive optimum support wherever you are with the "Industry Online Support" app. The app is available for iOS and Android:



7.2. Links and literature

Table 7-1

	Topic
\1\	Siemens Industry Online Support https://support.industry.siemens.com
\2\	Download page of this entry https://support.industry.siemens.com/cs/ww/en/view/109782314
\3\	

7.3. Change documentation

Table 7-2

Version	Date	Modifications
V1.0	03/2021	First version
V1.1	04/2021	Corrected/ Updated screenshots
V1.2	07/2022	Updated screenshots due to error correction in the blocks Updated technical data
V1.3	12/2024	Update Block status messages error codes