





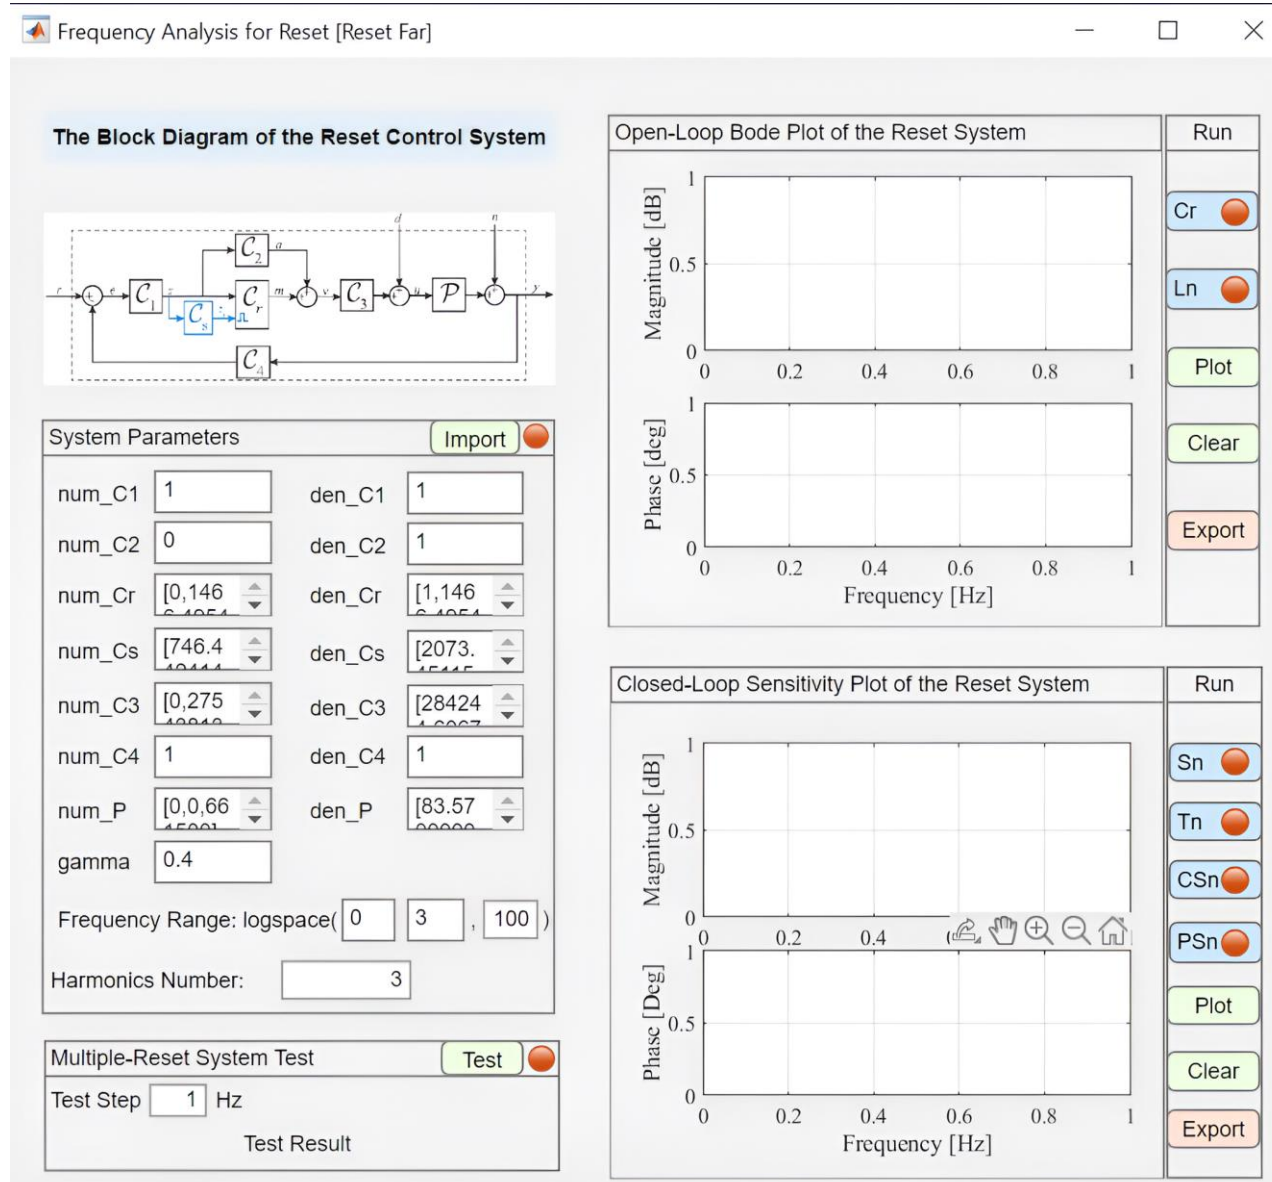






Frequency Response Analysis App for Open-Loop and Closed-Loop Single-Reset-State Reset Control Systems: “Reset Far”

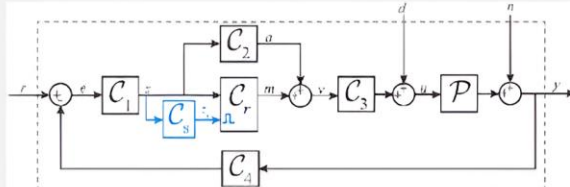

 Frequency Analysis for Reset [Reset Far]



System Parameters		Import 
num_C1	<input type="text" value="1"/>	den_C1 <input type="text" value="1"/>
num_C2	<input type="text" value="0"/>	den_C2 <input type="text" value="1"/>
num_Cr	<input type="text" value="[0,146"/> 	den_Cr <input type="text" value="[1,146"/> 
num-Cs	<input type="text" value="[746.4"/> 	den-Cs <input type="text" value="[2073."/> 
num_C3	<input type="text" value="[0,275"/> 	den_C3 <input type="text" value="[28424"/> 
num_C4	<input type="text" value="1"/>	den_C4 <input type="text" value="1"/>
num_P	<input type="text" value="[0,0,66"/> 	den_P <input type="text" value="[83.57"/> 
gamma	<input type="text" value="0.4"/>	


Frequency Range: logspace(,)

Harmonics Number:

Multiple-Reset System Test Test

Test Step Hz

There is No Multiple-Reset Region.

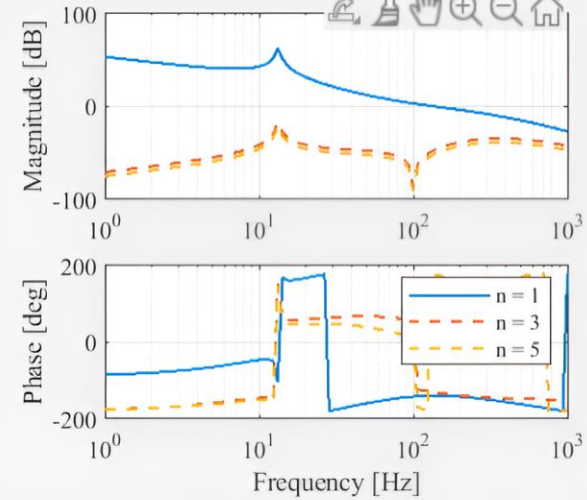

Run


Cr 

Ln 

Plot

Clear

Export

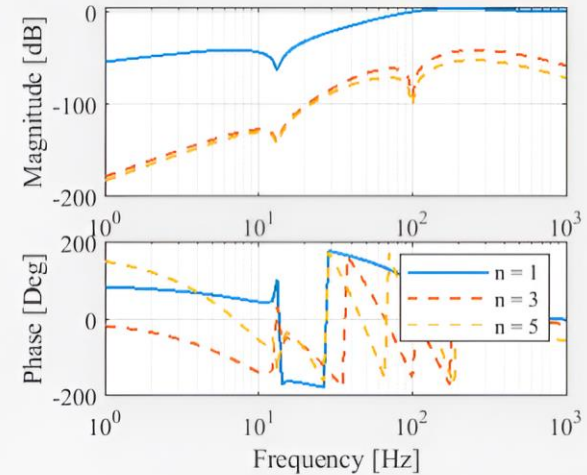

Run

Sn ☒

Tn ☐

CSn ☐

PSn ☐


Plot

Clear

Export

Instructions for the “Reset Far” App:

1. System Design: Design a reset control system within the below block diagram of the reset feedback control system.

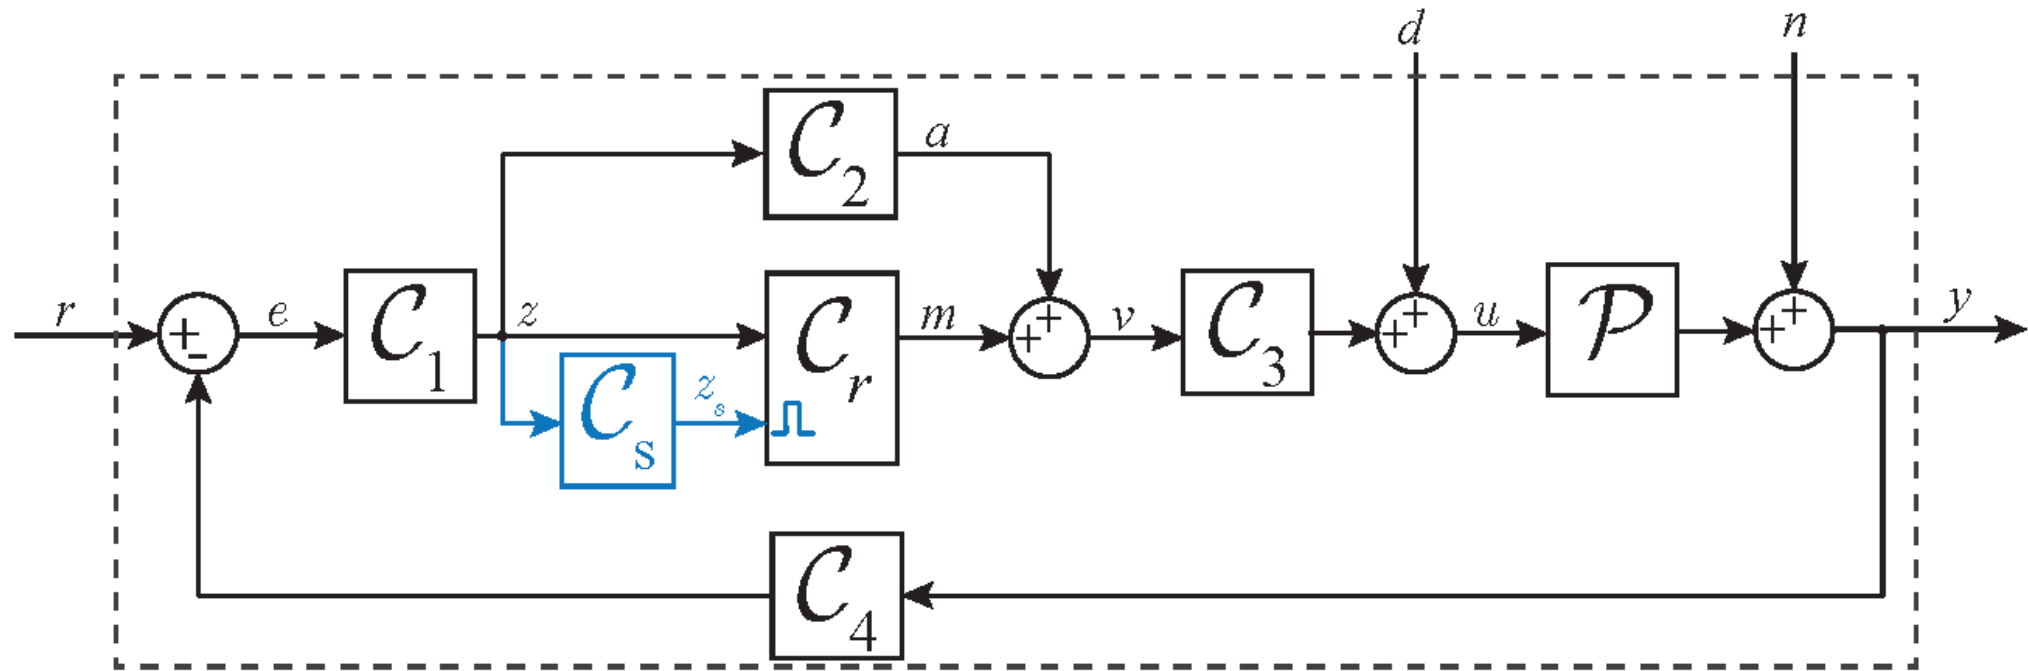

Instructions for the “Reset Far” App:

2. Input the system parameters to the Panel “**System Parameters**”, including:

- 1) The numerators and denominators of $C_1, C_2, C_3, C_4, P, C_s, C_r$ (entered as the parameters of its base-linear counterpart) with a reset value $\gamma \in (-1,1]$.
- 2) The working frequency range (using logarithmic spacing): $\text{logspace}(a, b, n)$.
- 3) The number of harmonics $N_h \in \mathbb{Z}^+$ included in the calculation.
- 4) Click the “**Import**” button until the lamp turns **green**, indicating that the parameters have been successfully entered.

The screenshot shows the 'System Parameters' panel with the following fields and values:

Parameter	Value
num_C1	1
den_C1	1
num_C2	1
den_C2	1
num_Cr	[0,1.88]
den_Cr	[1,1.88]
num_Cs	[1.884]
den_Cs	[9.424]
num_C3	[0,5.95]
den_C3	[3.947]
num_C4	1
den_C4	1
num_P	[0,0.66]
den_P	[83.57]
gamma	0

Frequency Range: $\text{logspace}(0, 3, 100)$


Harmonics Number: 3

The 'Import' button is highlighted in green, indicating successful parameter entry.

Instructions for the “Reset Far” App:

3. Open-Loop Bode Plot of the Reset System:

- 1) Select either “**Cr**” or “**Ln**” until the indicator turns **green**.
- 2) Click the “**Plot**” to generate the Bode plot of the Higher-Order Sinusoidal Input Describing Function (HOSIDF) for the reset controller C_r or the open-loop system L_n , as outlined in Theorem 1 of the attached paper.
- 3) To clear the plot in the axis, click the “**Clear**” button.
- 4) To export the HOSIDF data, click the “**Export**” button, and the data will be sent to the workspace.

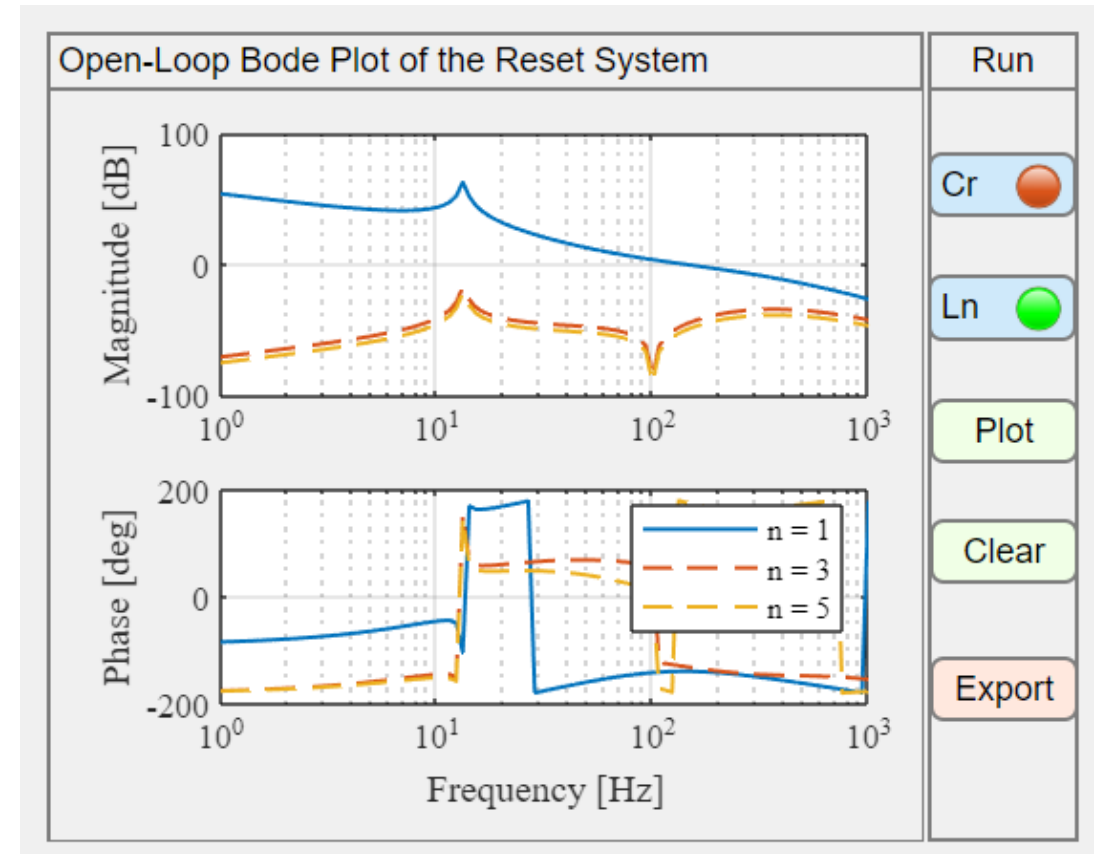


4. Multiple-Reset System Test before Closed-Loop Analysis:

This panel identifies the frequency range where the sinusoidal-input closed-loop reset control system exhibits multiple (more than two) reset instants per steady-state cycle based on the method in \textcolor{red}{J2}. To use it, click the “**Test**” button, which turns **green** when active, and select the sweeping step size, defaulting to 1 Hz.

The output will indicate two possible scenarios:

- 1) *There is No Multiple-Reset Region*, meaning the system operates with only two reset instants per cycle across the tested frequency range.
- 2) *Multiple-Reset Regions: f_α to f_β [Hz]*, showing the frequency range(s) where multiple resets occur, with (f_α, f_β) as the boundaries.


If multiple-reset regions are detected, subsequent closed-loop HOSIDF analysis may yield inaccuracies, and adjusting system design parameters is recommended until *There is No Multiple-Reset Region* is achieved.

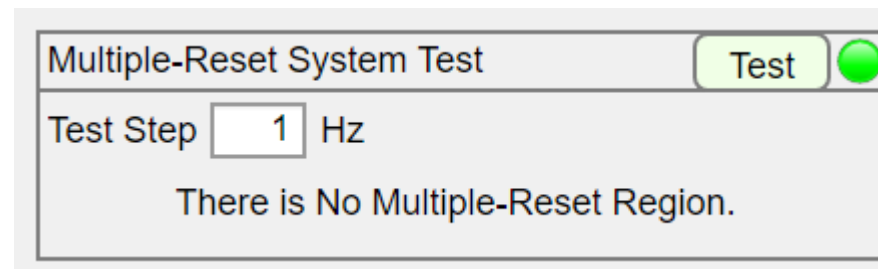

Instructions for the “Reset Far” App:


5. Closed-Loop Bode Plot of the Reset System:

- 1) Select either S_n or T_n , CS_n , or PS_n until the indicator turns **green**.
- 2) Click the “**Plot**” to generate the Bode plot of the sensitivity functions, complementary sensitivity functions, control sensitivity functions, and process sensitivity functions of the closed-loop reset systems, as outlined in Theorem 2 and Corollary 1 of the attached paper.
- 3) To clear the plot in the axis, click the “**Clear**” button.
- 4) To export the HOSIDF data, click the “**Export**” button, and the data will be sent to the workspace.

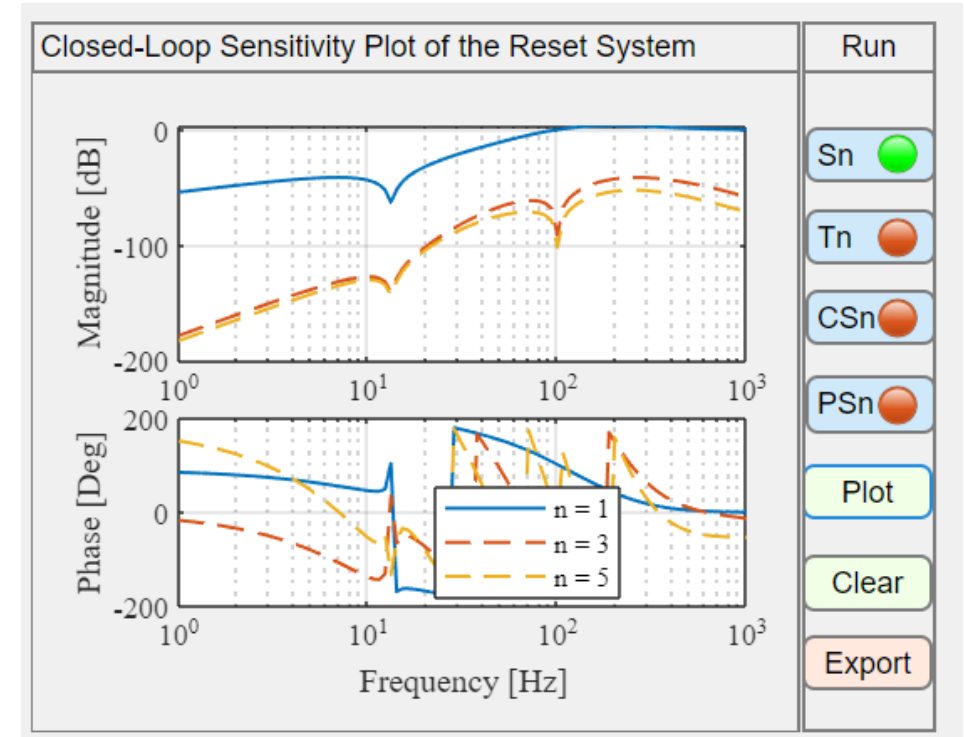

Case Study: Utilizing the MATLAB App “Reset Far” for Frequency-Domain Analysis of Reset Control Systems (in Section 6 in the attached paper)

The open-loop block diagram of a shaped CgLp-PID control system is shown as below.

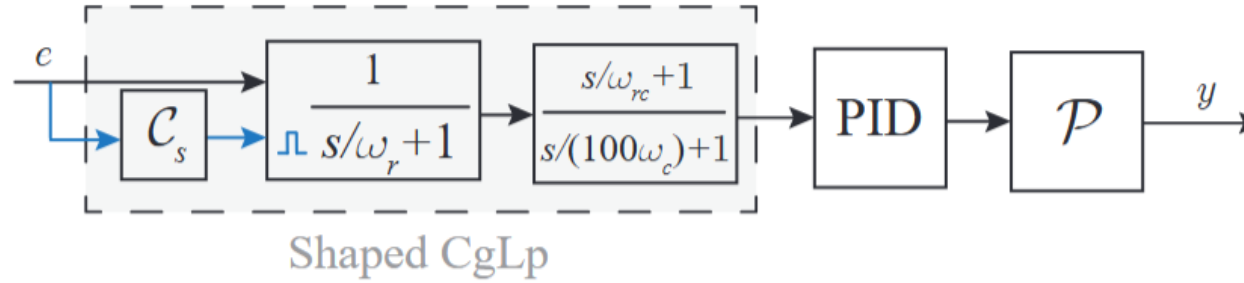

The designed system parameters are given by:

$$C_s = \frac{s/660\pi + 1}{s/237.6\pi + 1} \quad P = \frac{6.615 \times 10^5}{83.57s^2 + 279.4s + 5.837 \times 10^5}$$

$$\text{PID} = k_p \left(1 + \frac{\omega_i}{s} \right) \left(\frac{s/\omega_d + 1}{s/\omega_t + 1} \right) \left(\frac{1}{s/\omega_f + 1} \right)$$

$$\omega_r = 466.8\pi \quad \omega_d = 120\pi \quad k_p = 35.7$$

$$\omega_{rc} = 216\pi \quad \omega_t = 480\pi$$

$$\omega_c = 240\pi \quad \omega_f = 2400\pi$$

1. Input the following information to System Parameters Panel and Click Import:

[num_C1, den_C1] = [1,1];

[num_C4, den_C4] = [1,1];

[num_C2, den_C2] = [0,1];

[num_Cr, den_Cr] = [[0,1466.49545069572], [1,1466.49545069572]];

[num_Cs, den_Cs] = [[746.442414492935,1547711.88376123],[2073.45115136926,1547711.88376123]];

[num_C3, den_C3] =

[[0,27543813204917.1,3.55355785262087e+16,1.12218251724398e+19,6.55895879471736e+20],[284244.606751373,24003323054.3940,197139791380073,2.43671968654372e+17,0]];

[num_P, den_P] = [[0,0,661500], [83.5700000000000,279.400000000000,583700]];



gamma = 0.4;

Frequency Range: logspace (0,3,1000);

Harmonics Number: 3.

2. Open-Loop Analysis:

- 1) Select C_r or L_n to generate the Bode plot of the Higher-Order Sinusoidal Input Describing Function (HOSIDF) for the reset controller C_r or open-loop system, as outlined in Theorem 1 of the attached paper.
- 2) Click the “Plot” button, the Bode plot for C_r or L_n will be displayed.
- 3) To export the HOSIDF data, click the “Export” button, and the data will be sent to the workspace.
- 4) Using the data in the workspace, the figures of C_r or L_n are plotted as shown below.

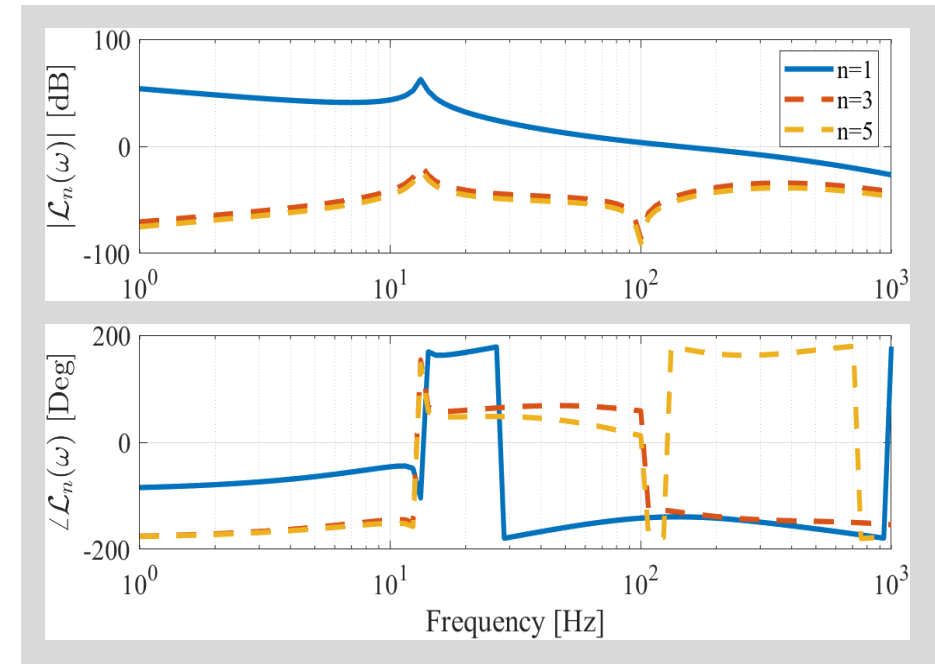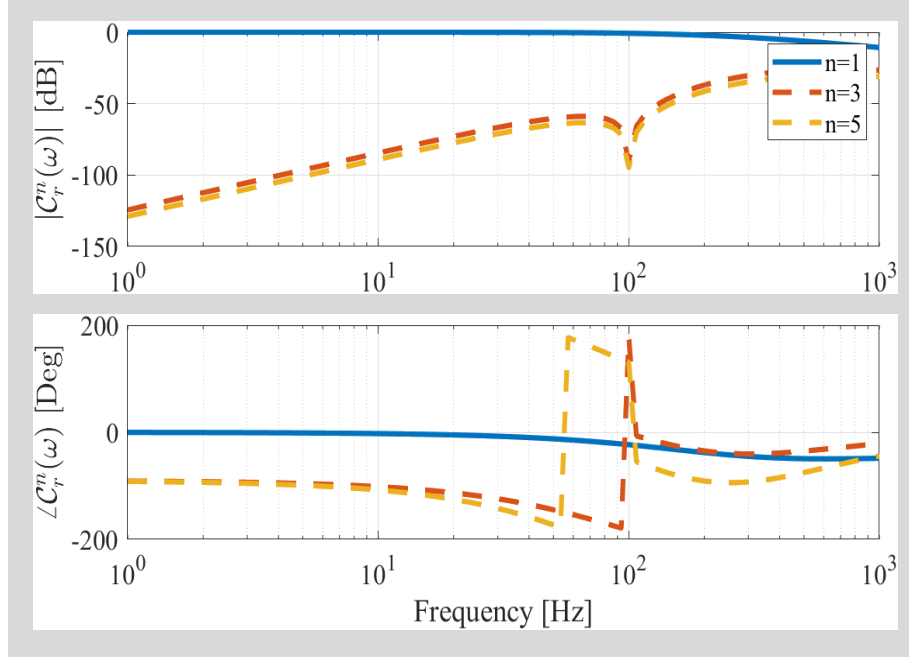

3. Click the “Test” button on the “Multiple-Reset System Region ” panel, and wait the lamp turns green. The block shows “There is No Multiple-Reset Region”.

Multiple-Reset System Test

Test

Test Step

1

Hz

There is No Multiple-Reset Region.

4. Closed-Loop Analysis:

- 1) Select either S_n and CS_n to generate the Bode plot of the sensitivity functions, and control sensitivity functions of the closed-loop reset systems, as outlined in Theorem 2 of the attached paper.
- 2) Click the “Plot” button, the Bode plot will be displayed.
- 3) To export the HOSIDF data, click the “Export” button, and the data will be sent to the workspace.
- 4) Using the data in the workspace, the figures of S_n and $CS_n are plotted as shown below.$

