

Burn EMMC boot


一、 Jetson Nano Connect Virtual Machine

1. Prepare the Jetson nano motherboard, jumper cap, display screen, mouse and keyboard, etc.
2. Put Jetson Nano into the system REC flash mode.


Connect the jumper cap to the FC REC and GND pins, that is, to the second and third pins of the carrier board below the core board, as shown in the following figure:



Connect the line and connect the HDMI display screen, mouse, and keyboard to JetsonOn the Nano, connect the power supply again, and finally plug in the microUSB data cable. Due to the previous step of connecting the jumper cap to FCREC and GND pins, so after powering on and starting up, it will automatically enter the REC flash mode.

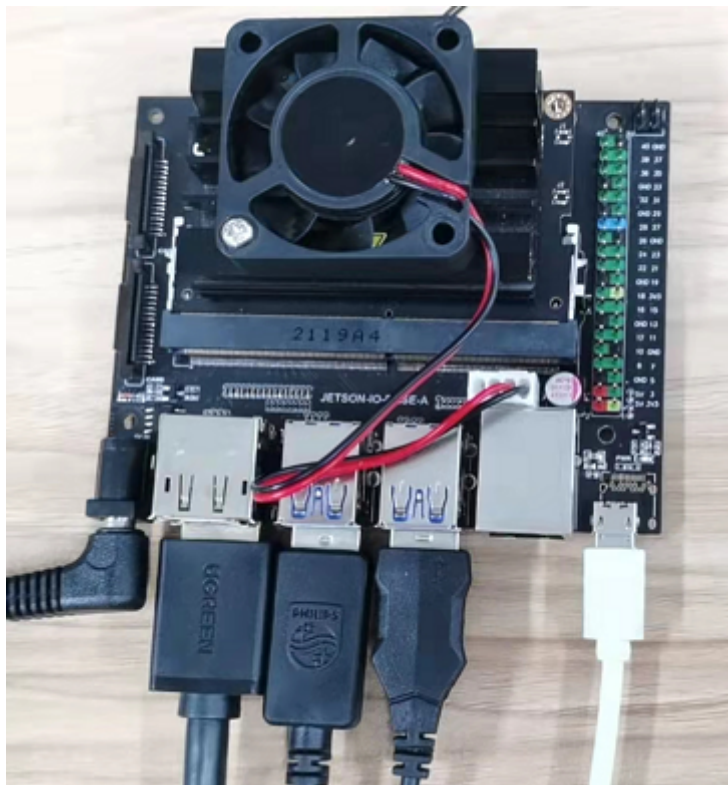

Under normal circumstances, after inserting the microUSB data cable, the following window will pop up. Please note that when using a virtual machine, the device needs to be set to connect to the virtual machine.

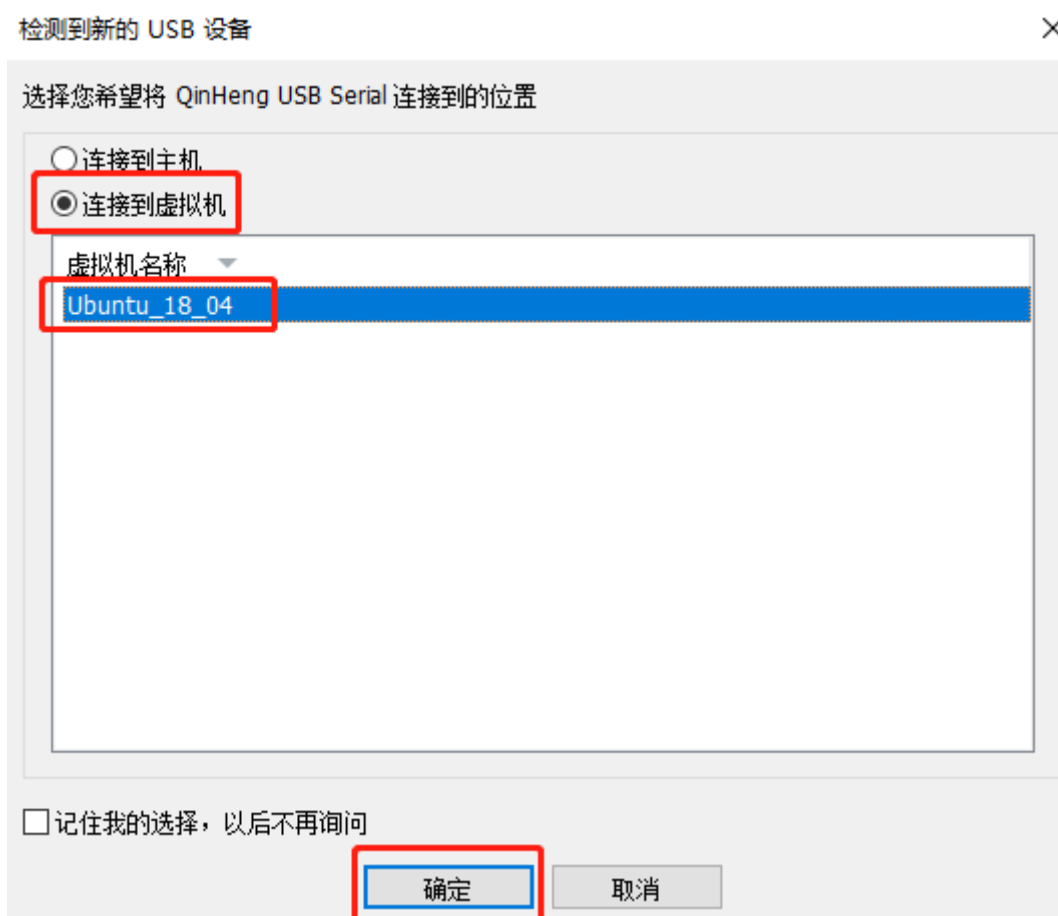

二、Start burning

1. Please include Jetson in the information_Boot_ Transferring the USB.tar.gz file to Ubuntu18.04 system, and open the terminal to run the decompression command.

```
tar xzvf Jetson_Boot_USB.tar.gz
```

```
yahboom@YAB:~$ tar xzvf Jetson_Boot_USB.tar.gz
./Jetson_Boot_USB/
./Jetson_Boot_USB/jetson-nano-devkit.conf
./Jetson_Boot_USB/jetson-nano-devkit-emmc.conf
./Jetson_Boot_USB/jetson-tx1-devkit.conf
./Jetson_Boot_USB/nv_tools/
./Jetson_Boot_USB/nv_tools/scripts/
```

2. After decompression, enter Jetson from_Boot_USB folder, and then

```
cd Jetson_Boot_USB/
```

```
ls
```

```
yahboom@YAB:~$ cd Jetson_Boot_USB/
yahboom@YAB:~/Jetson_Boot_USB$ ls
apply_binaries.sh          p2597-0000+p2180-1000-24x7.conf
bootloader                 p2597-0000+p2180-1000.conf
build_l4t_bup.sh           p3448-0000.conf.common
flash.sh                   p3448-0000-max-spi.conf
hybrid-qspi.conf           p3448-0000-max-spi-sd.conf
jetson-nano-2gb-devkit.conf p3449-0000+p3448-0000-qspi.conf
jetson-nano-devkit.conf    p3449-0000+p3448-0000-qspi-sd.conf
jetson-nano-devkit-emmc.conf p3449-0000+p3448-0002.conf
jetson-nano-emmc.conf      p3450.conf
jetson-nano-qspi.conf       p3542-0000+p3448-0003-qspi.conf
jetson-nano-qspi-sd.conf    p3542-0000+p3448-0003-qspi-sd.conf
jetson-tx1.conf            p3542.conf
jetson-tx1-devkit.conf     README_Autoflash.txt
kernel                     README_Massflash.txt
l4t_generate_soc_bup.sh    rootfs
nvautoflash.sh             source
nvmassflashgen.sh          source_sync.sh
nv_tegra                   tools
nv_tools                   TX1_boot-firmware-redundancy.txt
p2371.conf
```

3. Run the command to burn the EMMC boot file.

```
sudo ./flash.sh -r jetson-nano-devkit-emmc mmcblk0p1
```

```
yahboom@YAB:~/Jetson_Boot_USB$ sudo ./flash.sh -r jetson-nano-devkit-emmc mmcblk0p1
[sudo] password for yahboom:
#####
# L4T BSP Information:
# R32 , REVISION: 5.2
#####
# Target Board Information:
# Name: jetson-nano-devkit-emmc, Board Family: t210ref, SoC: Tegra 210,
# OpMode: production, Boot Authentication: ,
# Disk encryption: disabled ,
```

4. Finally, wait for the file to be burned and enter the EMMC. If successful, a prompt will appear

"The target t210ref has been flashed successfully. Reset the board to boot from internal eMMC."

```
[ 8.3892 ]  
*** The target t210ref has been flashed successfully. ***  
Reset the board to boot from internal eMMC.
```

If an error message appears, please confirm if the Jetson Nano is connected properly and enter the flash mode. Follow the first step to reconnect.

After the burning is completed, please remove the jumper cap from the Jetson Nnao, insert the USB flash drive, and then power on and turn on the computer again.

Note: If using the virtual machine provided in the Yabo Intelligent Materials, it already includes Jetson_Boot_USB files do not need to be passed back into the system. Virtual machine username: yahroom Password: yahboom