

11. APP mapping

1. Program function description

After the program is started, you can use the APP to remotely implement gmapping and cartographer mapping.

2. Program code reference path

After entering the docker container, the source code of this function is located at


```
/root/yahboomcar_ros2_ws/yahboomcar_ws/src/yahboomcar_nav/launch
/root/yahboomcar_ros2_ws/yahboomcar_ws/src/robot_pose_publisher_ros2
/root/yahboomcar_ros2_ws/yahboomcar_ws/src/laserscan_to_point_publisher
```

3. Configuration before use

Note: Since the Muto series robots are equipped with multiple radar devices, the factory system has been configured with routines for multiple devices. However, since the product cannot be automatically recognized, the radar model needs to be manually set.

After entering the container: Make the following modifications according to the lidar type:

```
root@ubuntu:/# cd
root@ubuntu:~# vim .bashrc
```

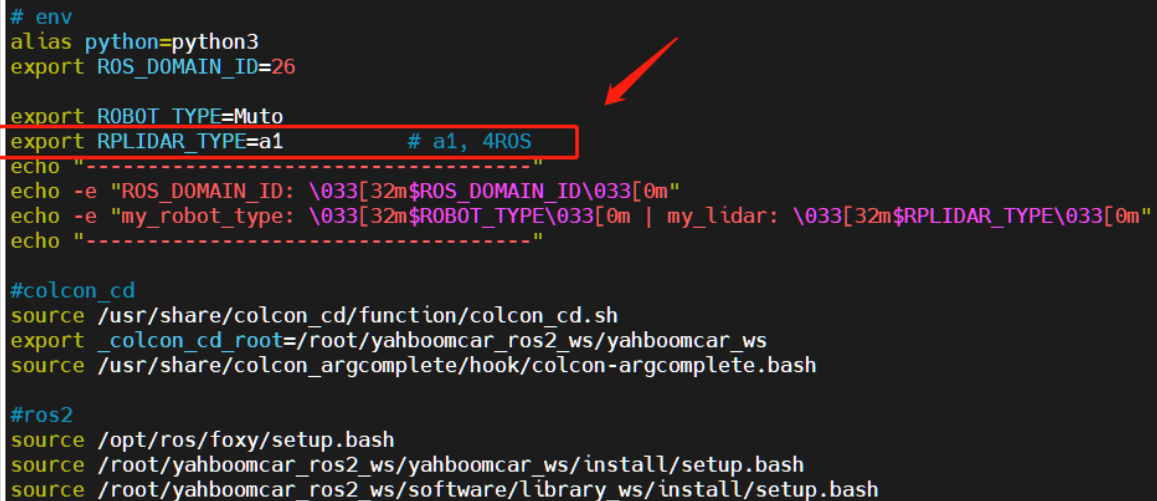

```
# env
alias python=python3
export ROS_DOMAIN_ID=26

export ROBOT_TYPE=Muto
export RPLIDAR_TYPE=a1          # a1, 4ROS
echo "-----"
echo -e "ROS_DOMAIN_ID: \033[32m$ROS_DOMAIN_ID\033[0m"
echo -e "my_robot_type: \033[32m$ROBOT_TYPE\033[0m | my_lidar: \033[32m$RPLIDAR_TYPE\033[0m"
echo "-----"

#colcon_cd
source /usr/share/colcon_cd/function/colcon_cd.sh
export _colcon_cd_root=/root/yahboomcar_ros2_ws/yahboomcar_ws
source /usr/share/colcon_argcomplete/hook/colcon_argcomplete.bash

#ros2
source /opt/ros/foxy/setup.bash
source /root/yahboomcar_ros2_ws/yahboomcar_ws/install/setup.bash
source /root/yahboomcar_ros2_ws/software/library_ws/install/setup.bash
```

After the modification is completed, save and exit vim, and then execute:

```
root@jetson-desktop:~# source .bashrc
-----
ROS_DOMAIN_ID: 26
my_robot_type: Muto | my_lidar: a1
-----
root@jetson-desktop:~#
```

You can see the current modified lidar type.

4. Program startup

4.1. Start command

After entering the docker container, start the following nodes from the terminal:

```
#Start ROSBridge and web service
ros2 launch rosbridge_server rosbridge_websocket_launch.xml
#-----Choose one of the following mapping algorithms-----
-----
ros2 launch yahboomcar_nav map_cartographer_launch.py #Start cartographer
mapping
#Or
ros2 launch yahboomcar_nav map_gmapping_launch.py #Start gmapping mapping
-----
#Start publishing robot location node
ros2 launch robot_pose_publisher_ros2 robot_pose_publisher_launch.py
#Start the node that publishes laser data transfer points
ros2 run laserscan_to_point_publisher laserscan_to_point_publisher
#Start saving map service node
ros2 launch yahboom_app_save_map yahboom_app_save_map_launch.py
#Start the camera node to view the camera screen
ros2 run usb_cam usb_cam_node_exe --ros-args --remap
/image_raw/compressed:=usb_cam/image_raw/compressed
```

4.2. Open the APP and start the mapping mode


For Android users, open the mobile browser and scan following QR code to download and install Yahboom ROS Robot APP.

For iOS users, please search [Yahboom ROS Robot] on App store, or open camera or browser, scan following QR code to download and install Yahboom ROS Robot APP.




Install the APP on your phone and open the APP. The picture below shows the APP opening interface:

Enter the IP address in the input box. The IP address here is the IP address of the car, such as 192.168.2.102. This address is the actual IP address of the car. Please enter it according to the actual situation during actual operation. After completing the input, click the Next button.

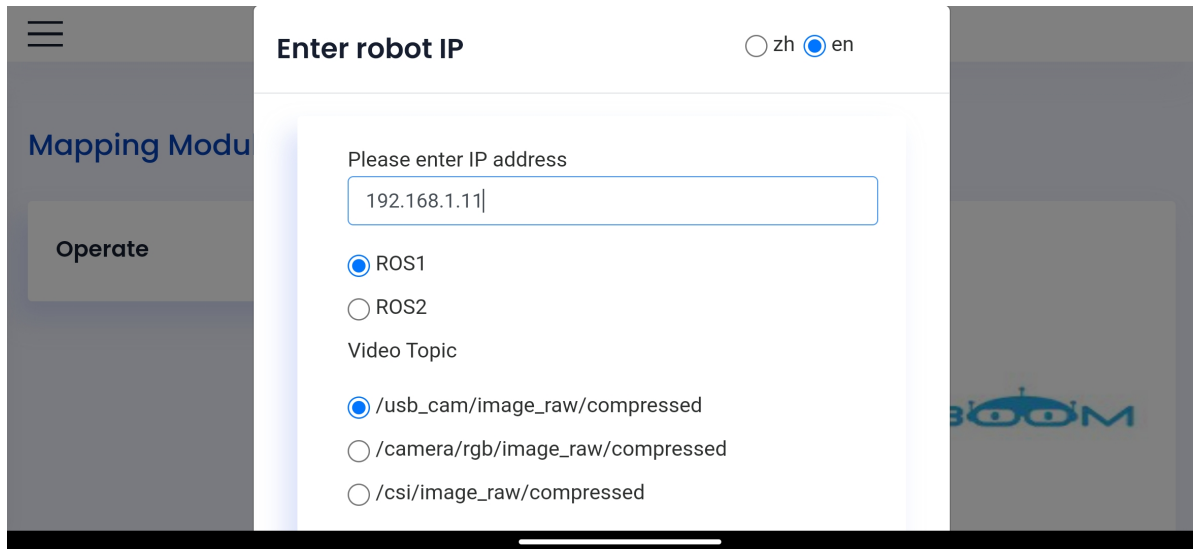

The screenshot shows a mobile application interface titled "Enter robot IP". On the left is a sidebar with a hamburger menu icon, the text "Mapping Modu", and a button labeled "Operate". The main content area has a language selector at the top right with "zh" and "en" (selected) options. Below this is a text input field labeled "Please enter IP address" containing "192.168.1.11". Underneath the input field are two radio button options: "ROS1" (selected) and "ROS2". Below these is a section titled "Video Topic" with three radio button options: "/usb_cam/image_raw/compressed" (selected), "/camera/rgb/image_raw/compressed", and "/csi/image_raw/compressed". A "BOOM" logo is visible on the right side of the screen.


After the mapping mode is started, you can see the current laser point cloud and the laser-scanned map.

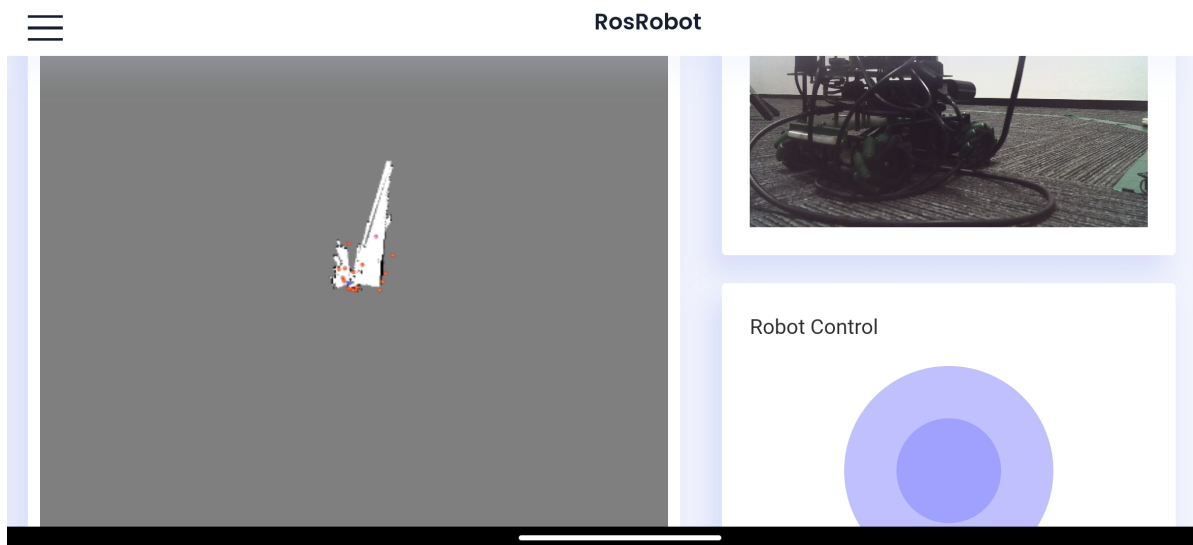

The robot control area on the right side can control the robot to move forward, backward, turn left, and turn right.

After we control the robot to complete the map construction, click the Save Map button.

Then enter the saved name in the pop-up box and click Submit.

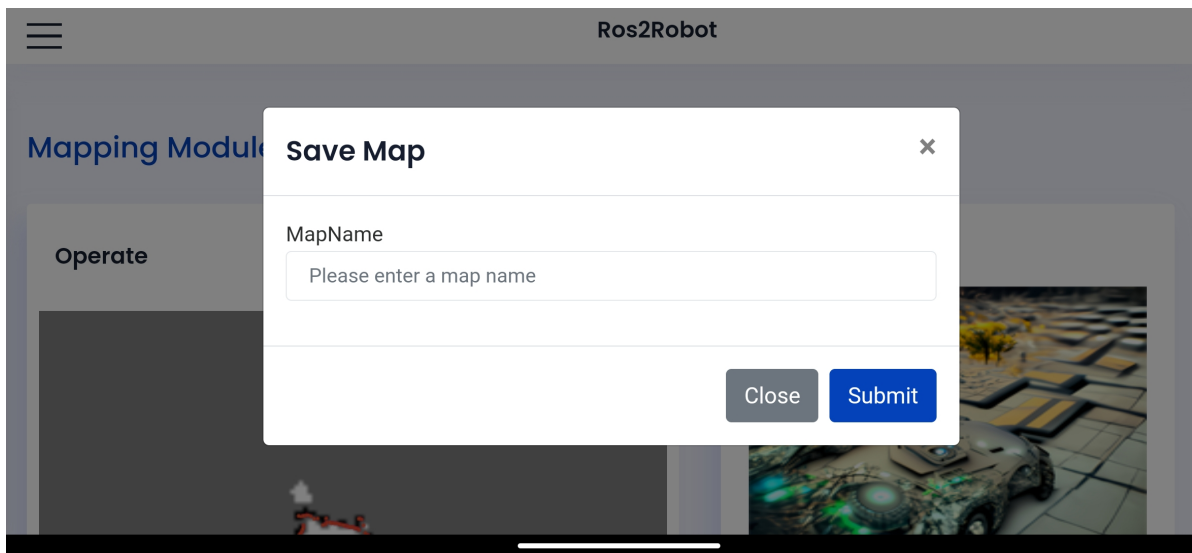

After submission is completed, the map will be saved in the following path:

```
/root/yahboomcar_ros2_ws/yahboomcar_ws/src/yahboomcar_nav/maps
```