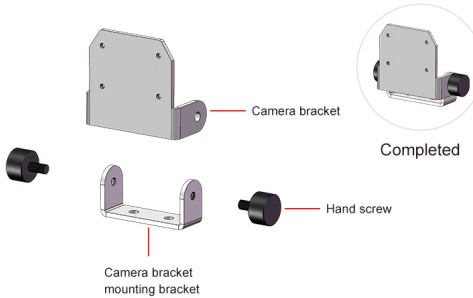


# Install case antenna

## Install case antenna

- 1.Assembly steps
2. Wiring
- 3.Completed

## 1.Assembly steps

Installation steps	Camera bracket installation
<p><b>Step 1: Install the cooling fan</b></p>  <p>Step 1: Install the cooling fan</p> <p>M3*14mm Flat head screw</p> <p>Cooling fan</p> <p>M3 nut</p> <p>Completed</p>	<p><b>Step 5: 77 ° IMX219 (RDK) camera bracket installation</b></p>  <p>Step 5: 77 ° IMX219 (RDK) camera bracket installation</p> <p>Camera bracket</p> <p>Hand screw</p> <p>Camera bracket mounting bracket</p> <p>Completed</p>
<p><b>Step 2: Antenna installation</b></p> <p>* Skip this step if antenna is not purchased</p>  <p>Antenna</p> <p>WiFi antenna interface</p> <p>installation is complete</p> <p>Completed</p>	<p><b>Step 6: 77 ° IMX219 (RDK) camera installation</b></p>  <p>77 ° IMX219 (RDK) camera</p> <p>M2 * 5mm nylon screw</p> <p>M2*6+5mm Nylon column</p> <p>Completed</p>
<p><b>Step 3: RDK X3 Installation</b></p>  <p>RDK X3</p> <p>M2.5 * 4mm round head screw</p> <p>Completed</p>	<p><b>Step 7: Installation of camera assembly</b></p>  <p>M3*5mm Round head screw</p> <p>Completed</p>
<p><b>Step 4: Top shell installation</b></p> <p>Countersunk head cross 304 screw</p>  <p>Completed</p>	

## 2. Wiring

The fan is connected to the outermost pin of the RDK X3 board.

The second pin connected to fan VCC (red line).

The third pin connected to fan GND (black line).

RDX X3 Board 40Pin Table															
Reuse function 2	Reuse function 1	Reuse function 0	Function Description	X3 Pin Number	BCM Encoding	CVM Function	Physical Pin Board Encoding		CVM Function	BCM Encoding	X3 Pin Number	Function Description	Reuse function 0	Reuse function 1	Reuse function 2
			3.3V power signal			VDD_3V3	1	2	VDD_5V			5V power signal			
		I2C0_SDA	I2C0 data signal	9	2	I2C0_SDA	3	4	VDD_5V			5V power signal			
		I2C0_CLK	I2C0 clock signal	8	3	I2C0_SDC	5	6	GND			GND signal			
		I2S0_MCLK	I2S0 MCLK clock signal	101	4	I2S0_MCLK	7	8	UART_TXD	14	111	UART3 send signal		UART3_TXD	
			GND signal			GND	9	10	UART_RXD	15	112	UART3 receive signal		UART3_RXD	
PWM7	SPI2_MOSI	I2C2_CLK	GPIO17 signal	12	17	GPIO17	11	12	I2S0_BCLK	18	102	I2S0 BCLK clock signal	I2S0_BCLK		
PWM8	SPI2_MISO	I2C2_SDA	GPIO27 signal	13	27	GPIO27	13	14	GND			GND signal			
			GPIO22 signal	30	22	GPIO22	15	16	GPIO23	23	27	GPIO23 signal			
			3.3V power signal			VDD_3V3	17	18	GPIO24	24	22	GPIO24 signal		PWM1	
	SPI1_MOSI		SPI1 MOSI signal	6	10	SPI1_MOSI	19	20	GND			GND signal			
	SPI1_MISO		SPI1 MISO signal	7	9	SPI1_MOSO	21	22	GPIO25	25	29	GPIO25 signal			
	SPI1_SCLK		SPI1 CLK signal	3	11	SPI1_SCLK	23	24	SPI1_CSN	8	5	SPI1 CS signal		SPI1_CSN	
			GND signal			GND	25	26	GPIO7	7	28	GPIO7 signal			
	SPI2_CSN	I2C3_SDA	I2C3 clock signal	15	0	I2C3_SDA	27	28	I2C3_SCL	1	14	I2C3 signal	I2C3_SCL	SPI2_SCLK	
	LPWM3		GPIO5 signal	119	5	GPIO5	29	30	GND			GND signal			
	LPWM2		GPIO6 signal	118	6	GPIO6	31	32	PWM4	12	25	PWM4 signal		PWM4	
PWM0			PWM0 signal	4	13	PWM0	33	34	GND			GND signal			
		I2S0_LRCK	I2S0 LRCK signal	103	19	I2S0_LRCK	35	36	GPIO16	16	20	GPIO16 signal			
	LPWM1		GPIO26 signal	117	26	GPIO26	37	38	I2S1_SDIO	20	108	I2S1_SDIO signal	I2S1_SDIO		
			GND signal			GND	39	40	I2S0_SDIO	21	104	I2S0_SDIO signal	I2S0_SDIO		

Antenna connection, as shown below.