

RDKX5 serial communication


Note: The voice interaction module needs to be burned with factory firmware. If the voice chip has not been flashed with firmware after receiving it, it does not need to be burned

1. Experimental preparation

- RDK X5
- Voice interaction module
- Type-C data cable

2. Wiring diagram

- Use type-c wiring to connect to the motherboard

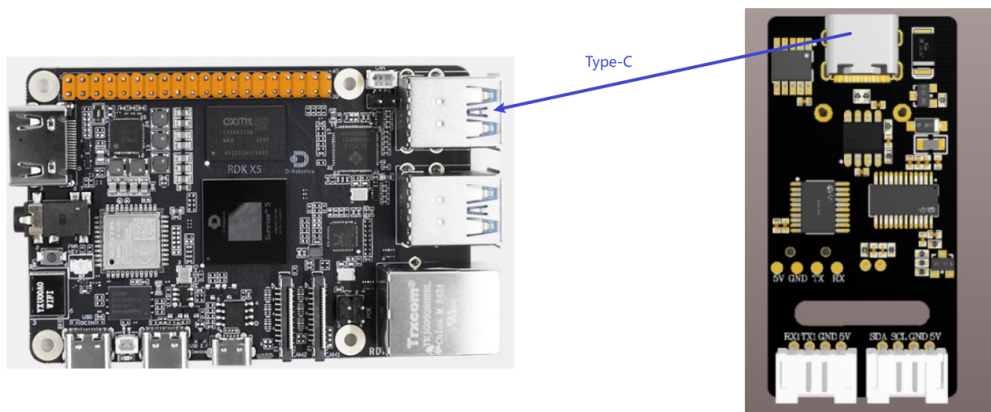

- Slide the module to the right, use the serial port of the stc firmware,



- Input in the terminal, the ttyUSB0 device appears, indicating that it has been recognized normally (normally it is ttyUSB0, and it may also be other device numbers)

```
ls /dev/ttyUSB*
```

```
sunrise@ubuntu:~/Downloads$ ls /dev/ttyUSB*
/dev/ttyUSB0
sunrise@ubuntu:~/Downloads$
```

3.Achievement effect

- You can select the broadcast content by modifying the code in the program as shown below

```
ser = serial.Serial("/dev/ttyUSB0", 115200)
#播报词 Active broadcast content
This_red=0x60
This_green=0x61
This_yellow=0x62
Recognize_yellow=0x63
Recognize_green=0x64
Recognize_blue=0x65
Recognize_red=0x66
init=0x67
```

```

void_write(init)
time.sleep(0.005)
while 1:
    speech_read()

```

- The broadcast content can be viewed according to the **Command Word Broadcast Word Protocol List V3_EN** file provided in the attachment.

The first and second bytes AA FF represent the frame header of the protocol, the third byte FF represents the broadcast function, and the fourth is the ID of the broadcast content. Here you can see "I am ready" is hexadecimal 67, so the program sends 0x67 to register 0x03 to broadcast the corresponding content. The fifth byte is the end frame.

84	THIS-IS-RED	命令词	this is red	被	AA 55 FF 5F FB	AA 55 FF 5F FB
85	THIS-IS-BLUE	命令词	this is blue	被	AA 55 FF 60 FB	AA 55 FF 60 FB
86	THIS-IS-GREEN	命令词	this is green	被	AA 55 FF 61 FB	AA 55 FF 61 FB
87	THIS-IS-YELLOW	命令词	this is yellow	被	AA 55 FF 62 FB	AA 55 FF 62 FB
88	THERE-IS-YELLOW	命令词	there is yellow	被	AA 55 FF 63 FB	AA 55 FF 63 FB
89	THERE-IS-GREEN	命令词	there is green	被	AA 55 FF 64 FB	AA 55 FF 64 FB
90	THERE-IS-BLUE	命令词	there is blue	被	AA 55 FF 65 FB	AA 55 FF 65 FB
91	THERE-IS-RED	命令词	there is red	被	AA 55 FF 66 FB	AA 55 FF 66 FB
92	I-AM-READY	命令词	i am ready	被	AA 55 FF 67 FB	AA 55 FF 67 FB

- Enter the following command in the terminal to run the program. When you hear **I am ready**, it means the program is running

```
python3 uart_test.py
```

```

sunrise@ubuntu:~/Downloads$ python3 uart_test.py
Speech Serial Opened! Baudrate=115200

```

- After I say the wake-up word to wake up, I say "Close light" and the debugging assistant will reply to receive 10

```

sunrise@ubuntu:~/Downloads$ python3 uart_test.py
Speech Serial Opened! Baudrate=115200
Read_ID: 10

```

- At this time, you can open the attached **Command Word Broadcast Word Protocol List V3_EN** file to view the "Turn off the light" protocol

20	CLOSE-LIGHT	命令词	ok light is closed.	主	AA 55 00 0A FB	AA 55 00 0A FB
21	RED-LIGHT-UP	命令词	ok red light is on	主	AA 55 00 0B FB	AA 55 00 0B FB

The first and second bytes AA FF represent the frame header of the protocol, the third byte represents the ID of the ten function words of the chip, and the fourth is the command word ID. Here you can see "Close light" is hexadecimal 0A, decimal 10. The fifth byte is the end frame.

- Say other command words, the serial port debugging assistant will also print the corresponding command word ID, you can try it yourself